

Dear Customers

C120-E389-08ENZ0(A)
FUJITSU Ltd
24/February/2010

Notes and Installation of Enhanced Support Facility 3.1

Thank you very much for purchasing the Enhanced Support Facility software.
The Enhanced Support Facility is software that improves operationability and manageability and maintainability of Solaris OS. A combination of Solaris OS and the Enhanced Support Facility enables steady running of a system and quick recovery from system problems and strong system expansion which you can operate/maintain safely. Please be sure to install Enhanced Support Facility 3.1 and Manuals & Patches 3.1A10 after installing Solaris OS.

1. Product Configuration


The following shows the configuration of this product.

Items	Numbers
Notes and Installation of Enhanced Support Facility 3.1 (This document)	C120-E389-08ENZ0(A)
Enhanced Support Facility 3.1 DVD-ROM	C120-E389-06C2
Manuals & Patches 3.1A10 CD-ROM	C120-E451-05C2

2. Installation of Enhanced Support Facility 3.1 and Manuals & Patches 3.1A10

2.1 Installation Procedure

Please follow the steps below to apply patches and install Enhanced Support Facility 3.1.
For more information, please refer to Enhanced Support Facility 3.1 Installation Guide.
You should read the Installation Guide before installing the software because it has useful information such as some cautions for your installation.

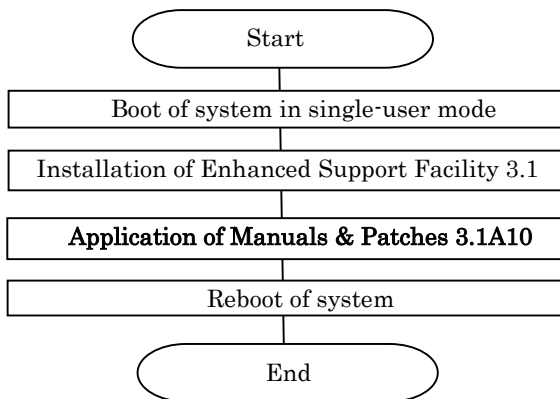

2.2 Instructions for opening the Installation Guide file on a PC

- 1) Set the Manuals & Patches 3.1A10 CD-ROM in the CD-ROM drive.
- 2) Use the latest version of Adobe® Reader™ to open the following file.

Drive letter of CD-ROM: ¥MANUAL.PDF¥ENGLISH¥INSTALL_GUIDE_OME.PDF

3. Online Manuals

Manuals & Patches 3.1A10 CD-ROM contains the following manuals besides the Installation Guide. Please also refer to them.

The following manuals are stored in the same location as the Installation Guide.

Manual name	File name
Enhanced Support Facility 3.1 Installation Guide	INSTALL_GUIDE_OME.PDF
Enhanced Support Facility Update Information	UPDATE_OME.PDF
Enhanced Support Facility Security System Building Guide	SECURITY_GUIDE_OME.PDF
Enhanced Support Facility User's Guide	ESFUG_OME.PDF
Enhanced Support Facility User's Guide for Machine Administration	MADM_OME.PDF
Enhanced Support Facility User's Guide for REMCS	REMCS_OME.PDF
Enhanced Support Facility User's Guide for FJVTS (PRIMEPOWER)	FJVTS_OME.PDF
Enhanced Support Facility User's Guide for Dynamic Reconfiguration	DR_OME.PDF
Enhanced Support Facility User's Guide Dynamic Reconfiguration I/O device	DRIO_OME.PDF
System Parameter Diagnosis 1.1 User's Guide	PARAM_OME.PDF
Tape driver configuration tool 1.2 Update2 User's Guide	DCNF_OME.PDF
Enhanced Support Facility User's Guide for Redundant Console Path Features (PRIMEPOWER)	CONSPATH_OME.PDF
Enhanced Support Facility for System Control Facility (SCF) Driver (PRIMEPOWER)	SCFDRV_OME.PDF
Enhanced Support Facility User's Guide for System Data Output Tool Features	FJSNAP_OME.PDF
Enhanced Support Facility User's Guide for eXtended System Control Facility (PRIMEPOWER)	XSCF_OME.PDF
Enhanced Support Facility User's Guide for PCI Hot Plug (PRIMEPOWER)	PHPUG_OME.PDF
Enhanced Support Facility User's Guide for PCI Hot Plug I/O device (PRIMEPOWER)	PHPUGIO_OME.PDF
Enhanced Support Facility User's Guide for Machine Administration Automatic power control function (Supplement edition)	APCS_OME.PDF

4. List of Patches classified by Models

You need to apply the following patches included in Manuals & Patches 3.1A10 because there are some problems with running the system.

Regarding the detailed information about applicable patches, please refer to “Chapter 2 Patch Information Table 2.3” in “Enhanced Support Facility Update Information”.

Machine model names in the following table are abbreviated names.

LE:SPARC Enterprise T1000/T2000/T5120/T5140/T5220/T5240/T5440

CW:SPARC Enterprise M3000/M4000/M5000/M8000/M9000

P:PRIMEPOWER250/450

CL:PRIMEPOWER900/1500/2500

CM:PRIMEPOWER650/850

Patch-ID	Package Name	Solaris OS			Abbreviation				
		10	9	8	LE	CW	P	CL	CM
124599-01	SUNWcar.us	○	-	-	-	-	○	○	○
913372-03	FJSVdrcmd	-	-	○	-	-	-	○	-
913732-06	FJSVdr	○	○	-	-	-	-	○	-
914587-02	FJSVdropl	○	-	-	-	○	-	-	-
914575-01	FJSVscu3	○	○	○	-	-	-	○	○
914590-02	FJSVscfsc	○	-	-	-	○	-	-	-
110041-01	SUNWvts/SUNWvtsx	-	-	○	-	-	○	○	○
110046-02	SUNWvts/SUNWodu	-	-	○	-	-	○	○	○
110047-01	SUNWvts	-	-	○	-	-	○	○	○
114479-11	SUNWvts/SUNWvtsx	-	○	-	-	-	○	○	○
912707-01	SUNWvts/SUNWvtsx	-	-	○	-	-	○	○	○
914449-01	SUNWvts/SUNWvtsx	○	-	-	-	-	○	○	○
914490-02	FJSVcmnd	○	○	○	-	-	-	○	○
914529-05	FJSVpmnd	○	○	○	-	-	○	-	-
914701-02	FJSVrlib	○	-	-	○	-	-	-	-
914603-06	FJSVlrm	○	-	-	○	-	-	-	-
915009-02	FJSVmadm	○	○	○	○	-	○	○	○
914601-04	FJSVmadm	○	○	○	○	-	○	○	○
914604-06	FJSVamle/FJSVmadm	○	○	○	○	-	○	○	○
914527-11	FJSVamadm	○	-	-	-	○	-	-	-
914588-01	FJSVamrm	○	-	-	-	○	-	-	-
914585-02	FJSVsirms	○	○	○	○	○	○	○	○
914429-01	FJSVdef	○	-	-	○	○	○	○	○
914679-03	FJSVsnap	○	○	○	○	○	○	○	○
915001-02	FJSVsec	-	-	○	-	-	-	○	-
914609-04	FJSVsec	-	○	-	-	-	-	○	-
914610-03	FJSVsec	○	-	-	-	-	-	○	-
914192-03	FJSVparam	○	○	○	○	○	○	○	○
914644-03	FJSVdenf	○	○	○	○	○	○	○	○
914568-06	FJSVgid.v/FJSVgid.u	○	-	-	○	○	-	-	-
914572-08	FJSVulsa.v/FJSVulsa.u	○	-	-	○	○	-	-	-