

ServerView Resource Orchestrator Virtual Edition V3.0.0



User's Guide

Windows/Linux

J2X1-7606-01ENZ0(05)
April 2012

Preface

Purpose

This manual provides an outline of ServerView Resource Orchestrator (hereinafter Resource Orchestrator) and the operations and settings required for setup.

Target Readers

This manual is written for people who will install Resource Orchestrator.

When setting up systems, it is assumed that readers have the basic knowledge required to configure the servers, storage, and network devices to be installed.

Organization

This manual is composed as follows:

Title	Description
Chapter 1 Screen Layout	Provides an overview of the ROR console.
Chapter 2 Register Resources	Explains how to register, change, and delete resources used by Resource Orchestrator.
Chapter 3 Changing Resources	Explains how to change settings for the admin server or resources registered on the admin server.
Chapter 4 Configuring the Operating Environment of Managed Servers	Explains how to install software to the registered managed servers and set up their operating environment.
Chapter 5 Deleting Resources	Explains how to delete resources.
Chapter 6 Pre-configuration	Provides an overview of the pre-configuration function and explains how to use system configuration files.
Chapter 7 Cloning [Windows/Linux]	Explains how to use the server cloning function.
Chapter 8 Server Switchover Settings	Explains how to use server switchover settings and automatically recover from server failures.
Appendix A Format of CSV System Configuration Files	Explains the format of the CSV system configuration files used by Resource Orchestrator's pre-configuration function.
Appendix B Maintenance Mode	Explains the maintenance mode available in Resource Orchestrator and how to use it.
Glossary	Explains the terms used in this manual. Please refer to it when necessary.

Notational Conventions

The notation in this manual conforms to the following conventions.

- When using Resource Orchestrator and the functions necessary differ due to the necessary basic software (OS), it is indicated as follows:

[Windows]	Sections related to Windows (When not using Hyper-V)
[Linux]	Sections related to Linux
[Red Hat Enterprise Linux]	Sections related to Red Hat Enterprise Linux
[Solaris]	Sections related to Solaris

[VMware]	Sections related to VMware
[Hyper-V]	Sections related to Hyper-V
[Xen]	Sections related to Xen
[KVM]	Sections related to RHEL-KVM
[Solaris Containers]	Sections related to Solaris containers
[Windows/Hyper-V]	Sections related to Windows and Hyper-V
[Windows/Linux]	Sections related to Windows and Linux
[Linux/VMware]	Sections related to Linux and VMware
[Linux/Xen]	Sections related to Linux and Xen
[Xen/KVM]	Sections related to Xen and RHEL-KVM
[Linux/Solaris/VMware]	Sections related to Linux, Solaris, and VMware
[Linux/VMware/Xen]	Sections related to Linux, VMware, and Xen
[Linux/Xen/KVM]	Sections related to Linux, Xen, and RHEL-KVM
[VMware/Hyper-V/Xen]	Sections related to VMware, Hyper-V, and Xen
[Linux/Solaris/VMware/Xen]	Sections related to Linux, Solaris, VMware, and Xen
[Linux/VMware/Xen/KVM]	Sections related to Linux, VMware, Xen, and RHEL-KVM
[VMware/Hyper-V/Xen/KVM]	Sections related to VMware, Hyper-V, Xen, and RHEL-KVM
[Linux/Solaris/VMware/Xen/ KVM]	Sections related to Linux, Solaris, VMware, Xen, and RHEL-KVM
[VM host]	Sections related to VMware, Windows Server 2008 with Hyper-V enabled, Xen, RHEL-KVM, and Solaris containers

- Unless specified otherwise, the blade servers mentioned in this manual refer to PRIMERGY BX servers.
- Oracle Solaris may also be indicated as Solaris, Solaris Operating System, or Solaris OS.
- References and character strings or values requiring emphasis are indicated using double quotes (").
- Window names, dialog names, menu names, and tab names are shown enclosed by brackets ([]).
- Button names are shown enclosed by angle brackets (< >) or square brackets ([]).
- The order of selecting menus is indicated using []-[] .
- Text to be entered by the user is indicated using bold text.
- Variables are indicated using italic text and underscores.
- The ellipses ("...") in menu names, indicating settings and operation window startup, are not shown.

Menus in the ROR console

Operations on the ROR console can be performed using either the menu bar or pop-up menus. By convention, procedures described in this manual only refer to pop-up menus.

Documentation Road Map

The following manuals are provided with Resource Orchestrator. Please refer to them when necessary:

Manual Name	Abbreviated Form	Purpose
ServerView Resource Orchestrator Virtual Edition V3.0.0 Setup Guide	Setup Guide VE	Please read this first.

Manual Name	Abbreviated Form	Purpose
		Read this when you want information about the purposes and uses of basic functions, and how to install Resource Orchestrator.
ServerView Resource Orchestrator Virtual Edition V3.0.0 Installation Guide	Installation Guide VE	Read this when you want information about how to install Resource Orchestrator.
ServerView Resource Orchestrator Virtual Edition V3.0.0 Operation Guide	Operation Guide VE	Read this when you want information about how to operate systems that you have configured.
ServerView Resource Orchestrator Virtual Edition V3.0.0 User's Guide	User's Guide VE	Read this when you want information about how to operate the GUI.
ServerView Resource Orchestrator Virtual Edition V3.0.0 Command Reference	Command Reference	Read this when you want information about how to use commands.
ServerView Resource Orchestrator Virtual Edition V3.0.0 Messages	Messages VE	Read this when you want detailed information about the corrective actions for displayed messages.

Related Documentation

Please refer to these manuals when necessary.

- ETERNUS SF Storage Cruiser Event Guide
- Administration Manual

Abbreviations

The following abbreviations are used in this manual:

Abbreviation	Products
Windows	Microsoft(R) Windows Server(R) 2008 Standard Microsoft(R) Windows Server(R) 2008 Enterprise Microsoft(R) Windows Server(R) 2008 R2 Standard Microsoft(R) Windows Server(R) 2008 R2 Enterprise Microsoft(R) Windows Server(R) 2008 R2 Datacenter Microsoft(R) Windows Server(R) 2003 R2, Standard Edition Microsoft(R) Windows Server(R) 2003 R2, Enterprise Edition Microsoft(R) Windows Server(R) 2003 R2, Standard x64 Edition Microsoft(R) Windows Server(R) 2003 R2, Enterprise x64 Edition Windows(R) 7 Professional Windows(R) 7 Ultimate Windows Vista(R) Business Windows Vista(R) Enterprise Windows Vista(R) Ultimate Microsoft(R) Windows(R) XP Professional operating system
Windows Server 2008	Microsoft(R) Windows Server(R) 2008 Standard Microsoft(R) Windows Server(R) 2008 Enterprise Microsoft(R) Windows Server(R) 2008 R2 Standard Microsoft(R) Windows Server(R) 2008 R2 Enterprise Microsoft(R) Windows Server(R) 2008 R2 Datacenter
Windows 2008 x86 Edition	Microsoft(R) Windows Server(R) 2008 Standard (x86) Microsoft(R) Windows Server(R) 2008 Enterprise (x86)
Windows 2008 x64 Edition	Microsoft(R) Windows Server(R) 2008 Standard (x64) Microsoft(R) Windows Server(R) 2008 Enterprise (x64)

Abbreviation	Products
Windows Server 2003	Microsoft(R) Windows Server(R) 2003 R2, Standard Edition Microsoft(R) Windows Server(R) 2003 R2, Enterprise Edition Microsoft(R) Windows Server(R) 2003 R2, Standard x64 Edition Microsoft(R) Windows Server(R) 2003 R2, Enterprise x64 Edition
Windows 2003 x64 Edition	Microsoft(R) Windows Server(R) 2003 R2, Standard x64 Edition Microsoft(R) Windows Server(R) 2003 R2, Enterprise x64 Edition
Windows 7	Windows(R) 7 Professional Windows(R) 7 Ultimate
Windows Vista	Windows Vista(R) Business Windows Vista(R) Enterprise Windows Vista(R) Ultimate
Windows XP	Microsoft(R) Windows(R) XP Professional operating system
Windows PE	Microsoft(R) Windows(R) Preinstallation Environment
Linux	Red Hat(R) Enterprise Linux(R) AS (v.4 for x86) Red Hat(R) Enterprise Linux(R) ES (v.4 for x86) Red Hat(R) Enterprise Linux(R) AS (v.4 for EM64T) Red Hat(R) Enterprise Linux(R) ES (v.4 for EM64T) Red Hat(R) Enterprise Linux(R) AS (4.5 for x86) Red Hat(R) Enterprise Linux(R) ES (4.5 for x86) Red Hat(R) Enterprise Linux(R) AS (4.5 for EM64T) Red Hat(R) Enterprise Linux(R) ES (4.5 for EM64T) Red Hat(R) Enterprise Linux(R) AS (4.6 for x86) Red Hat(R) Enterprise Linux(R) ES (4.6 for x86) Red Hat(R) Enterprise Linux(R) AS (4.6 for EM64T) Red Hat(R) Enterprise Linux(R) ES (4.6 for EM64T) Red Hat(R) Enterprise Linux(R) AS (4.7 for x86) Red Hat(R) Enterprise Linux(R) ES (4.7 for x86) Red Hat(R) Enterprise Linux(R) AS (4.7 for EM64T) Red Hat(R) Enterprise Linux(R) ES (4.7 for EM64T) Red Hat(R) Enterprise Linux(R) AS (4.8 for x86) Red Hat(R) Enterprise Linux(R) ES (4.8 for x86) Red Hat(R) Enterprise Linux(R) AS (4.8 for EM64T) Red Hat(R) Enterprise Linux(R) ES (4.8 for EM64T) Red Hat(R) Enterprise Linux(R) 5 (for x86) Red Hat(R) Enterprise Linux(R) 5 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.1 (for x86) Red Hat(R) Enterprise Linux(R) 5.1 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.2 (for x86) Red Hat(R) Enterprise Linux(R) 5.2 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.3 (for x86) Red Hat(R) Enterprise Linux(R) 5.3 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.4 (for x86) Red Hat(R) Enterprise Linux(R) 5.4 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.5 (for x86) Red Hat(R) Enterprise Linux(R) 5.5 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.6 (for x86) Red Hat(R) Enterprise Linux(R) 5.6 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.7 (for x86) Red Hat(R) Enterprise Linux(R) 5.7 (for Intel64) Red Hat(R) Enterprise Linux(R) 6 (for x86) Red Hat(R) Enterprise Linux(R) 6 (for Intel64) Red Hat(R) Enterprise Linux(R) 6.1 (for x86) Red Hat(R) Enterprise Linux(R) 6.1 (for Intel64) Red Hat(R) Enterprise Linux(R) 6.2 (for x86)

Abbreviation	Products
	Red Hat(R) Enterprise Linux(R) 6.2 (for Intel64) SUSE(R) Linux Enterprise Server 10 Service Pack2 for x86 SUSE(R) Linux Enterprise Server 10 Service Pack2 for EM64T SUSE(R) Linux Enterprise Server 10 Service Pack3 for x86 SUSE(R) Linux Enterprise Server 10 Service Pack3 for EM64T SUSE(R) Linux Enterprise Server 11 for x86 SUSE(R) Linux Enterprise Server 11 for EM64T SUSE(R) Linux Enterprise Server 11 Service Pack1 for x86 SUSE(R) Linux Enterprise Server 11 Service Pack1 for EM64T Oracle Enterprise Linux Release 5 Update 4 for x86 (32 Bit) Oracle Enterprise Linux Release 5 Update 4 for x86_64 (64 Bit) Oracle Enterprise Linux Release 5 Update 5 for x86 (32 Bit) Oracle Enterprise Linux Release 5 Update 5 for x86_64 (64 Bit)
Red Hat Enterprise Linux	Red Hat(R) Enterprise Linux(R) AS (v.4 for x86) Red Hat(R) Enterprise Linux(R) ES (v.4 for x86) Red Hat(R) Enterprise Linux(R) AS (v.4 for EM64T) Red Hat(R) Enterprise Linux(R) ES (v.4 for EM64T) Red Hat(R) Enterprise Linux(R) AS (4.5 for x86) Red Hat(R) Enterprise Linux(R) ES (4.5 for x86) Red Hat(R) Enterprise Linux(R) AS (4.5 for EM64T) Red Hat(R) Enterprise Linux(R) ES (4.5 for EM64T) Red Hat(R) Enterprise Linux(R) AS (4.6 for x86) Red Hat(R) Enterprise Linux(R) ES (4.6 for x86) Red Hat(R) Enterprise Linux(R) AS (4.6 for EM64T) Red Hat(R) Enterprise Linux(R) ES (4.6 for EM64T) Red Hat(R) Enterprise Linux(R) AS (4.7 for x86) Red Hat(R) Enterprise Linux(R) ES (4.7 for x86) Red Hat(R) Enterprise Linux(R) AS (4.7 for EM64T) Red Hat(R) Enterprise Linux(R) ES (4.7 for EM64T) Red Hat(R) Enterprise Linux(R) AS (4.8 for x86) Red Hat(R) Enterprise Linux(R) ES (4.8 for x86) Red Hat(R) Enterprise Linux(R) AS (4.8 for EM64T) Red Hat(R) Enterprise Linux(R) ES (4.8 for EM64T) Red Hat(R) Enterprise Linux(R) 5 (for x86) Red Hat(R) Enterprise Linux(R) 5 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.1 (for x86) Red Hat(R) Enterprise Linux(R) 5.1 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.2 (for x86) Red Hat(R) Enterprise Linux(R) 5.2 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.3 (for x86) Red Hat(R) Enterprise Linux(R) 5.3 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.4 (for x86) Red Hat(R) Enterprise Linux(R) 5.4 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.5 (for x86) Red Hat(R) Enterprise Linux(R) 5.5 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.6 (for x86) Red Hat(R) Enterprise Linux(R) 5.6 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.7 (for x86) Red Hat(R) Enterprise Linux(R) 5.7 (for Intel64) Red Hat(R) Enterprise Linux(R) 6 (for x86) Red Hat(R) Enterprise Linux(R) 6 (for Intel64) Red Hat(R) Enterprise Linux(R) 6.1 (for x86) Red Hat(R) Enterprise Linux(R) 6.1 (for Intel64) Red Hat(R) Enterprise Linux(R) 6.2 (for x86) Red Hat(R) Enterprise Linux(R) 6.2 (for Intel64)

Abbreviation	Products
Red Hat Enterprise Linux 5	Red Hat(R) Enterprise Linux(R) 5 (for x86) Red Hat(R) Enterprise Linux(R) 5 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.1 (for x86) Red Hat(R) Enterprise Linux(R) 5.1 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.2 (for x86) Red Hat(R) Enterprise Linux(R) 5.2 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.3 (for x86) Red Hat(R) Enterprise Linux(R) 5.3 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.4 (for x86) Red Hat(R) Enterprise Linux(R) 5.4 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.5 (for x86) Red Hat(R) Enterprise Linux(R) 5.5 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.6 (for x86) Red Hat(R) Enterprise Linux(R) 5.6 (for Intel64) Red Hat(R) Enterprise Linux(R) 5.7 (for x86) Red Hat(R) Enterprise Linux(R) 5.7 (for Intel64)
Red Hat Enterprise Linux 6	Red Hat(R) Enterprise Linux(R) 6 (for x86) Red Hat(R) Enterprise Linux(R) 6 (for Intel64) Red Hat(R) Enterprise Linux(R) 6.1 (for x86) Red Hat(R) Enterprise Linux(R) 6.1 (for Intel64) Red Hat(R) Enterprise Linux(R) 6.2 (for x86) Red Hat(R) Enterprise Linux(R) 6.2 (for Intel64)
RHEL-KVM	Red Hat(R) Enterprise Linux(R) 6.1 (for x86) Virtual Machine Function Red Hat(R) Enterprise Linux(R) 6.1 (for Intel64) Virtual Machine Function Red Hat(R) Enterprise Linux(R) 6.2 (for x86) Virtual Machine Function Red Hat(R) Enterprise Linux(R) 6.2 (for Intel64) Virtual Machine Function
Xen	Citrix XenServer(TM) 5.5 Citrix Essentials(TM) for XenServer 5.5, Enterprise Edition Red Hat(R) Enterprise Linux(R) 5.3 (for x86) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.3 (for Intel64) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.4 (for x86) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.4 (for Intel64) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.5 (for x86) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.5 (for Intel64) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.6 (for x86) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.6 (for Intel64) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.7 (for x86) Linux Virtual Machine Function Red Hat(R) Enterprise Linux(R) 5.7 (for Intel64) Linux Virtual Machine Function
DOS	Microsoft(R) MS-DOS(R) operating system, DR DOS(R)
SUSE Linux Enterprise Server	SUSE(R) Linux Enterprise Server 10 Service Pack2 for x86 SUSE(R) Linux Enterprise Server 10 Service Pack2 for EM64T SUSE(R) Linux Enterprise Server 10 Service Pack3 for x86 SUSE(R) Linux Enterprise Server 10 Service Pack3 for EM64T SUSE(R) Linux Enterprise Server 11 for x86 SUSE(R) Linux Enterprise Server 11 for EM64T SUSE(R) Linux Enterprise Server 11 Service Pack1 for x86 SUSE(R) Linux Enterprise Server 11 Service Pack1 for EM64T
Oracle Enterprise Linux	Oracle Enterprise Linux Release 5 Update 4 for x86 (32 Bit) Oracle Enterprise Linux Release 5 Update 4 for x86_64 (64 Bit) Oracle Enterprise Linux Release 5 Update 5 for x86 (32 Bit) Oracle Enterprise Linux Release 5 Update 5 for x86_64 (64 Bit)
Solaris	Solaris(TM) 10 Operating System

Abbreviation	Products
SCVMM	System Center Virtual Machine Manager 2008 R2 System Center 2012 Virtual Machine Manager
VMware	VMware(R) Infrastructure 3 VMware vSphere(R) 4 VMware vSphere(R) 4.1 VMware vSphere(R) 5
VIOM	ServerView Virtual-IO Manager
ServerView Agent	ServerView SNMP Agents for MS Windows (32bit-64bit) ServerView Agents Linux ServerView Agents VMware for VMware ESX Server
Excel	Microsoft(R) Office Excel(R) 2010 Microsoft(R) Office Excel(R) 2007 Microsoft(R) Office Excel(R) 2003
Excel 2010	Microsoft(R) Office Excel(R) 2010
Excel 2007	Microsoft(R) Office Excel(R) 2007
Excel 2003	Microsoft(R) Office Excel(R) 2003
ROR VE	ServerView Resource Orchestrator Virtual Edition
ROR CE	ServerView Resource Orchestrator Cloud Edition
Resource Coordinator	Systemwalker Resource Coordinator
Resource Coordinator VE	ServerView Resource Coordinator VE Systemwalker Resource Coordinator Virtual server Edition
Resource Orchestrator	ServerView Resource Orchestrator

Export Administration Regulation Declaration

Documents produced by FUJITSU may contain technology controlled under the Foreign Exchange and Foreign Trade Control Law of Japan. Documents which contain such technology should not be exported from Japan or transferred to non-residents of Japan without first obtaining authorization from the Ministry of Economy, Trade and Industry of Japan in accordance with the above law.

Trademark Information

- BMC, BMC Software, and the BMC Software logo are trademarks or registered trademarks of BMC Software, Inc. in the United States and other countries.
- Citrix(R), Citrix XenServer(TM), Citrix Essentials(TM), and Citrix StorageLink(TM) are trademarks of Citrix Systems, Inc. and/or one of its subsidiaries, and may be registered in the United States Patent and Trademark Office and in other countries.
- Dell is a registered trademark of Dell Computer Corp.
- HP is a registered trademark of Hewlett-Packard Company.
- IBM is a registered trademark or trademark of International Business Machines Corporation in the U.S.
- Linux is a trademark or registered trademark of Linus Torvalds in the United States and other countries.
- Microsoft, Windows, MS, MS-DOS, Windows XP, Windows Server, Windows Vista, Windows 7, Excel, and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates in the United States and other countries.
- Oracle is a registered trademark of Oracle Corporation and/or its affiliates.
- Red Hat, RPM and all Red Hat-based trademarks and logos are trademarks or registered trademarks of Red Hat, Inc. in the United States and other countries.

- Spectrum is a trademark or registered trademark of Computer Associates International, Inc. and/or its subsidiaries.
- SUSE is a registered trademark of SUSE LINUX AG, a Novell business.
- VMware, the VMware "boxes" logo and design, Virtual SMP, and VMotion are registered trademarks or trademarks of VMware, Inc. in the United States and/or other jurisdictions.
- ServerView and Systemwalker are registered trademarks of FUJITSU LIMITED.
- All other brand and product names are trademarks or registered trademarks of their respective owners.

Notices

- The contents of this manual shall not be reproduced without express written permission from FUJITSU LIMITED.
- The contents of this manual are subject to change without notice.

Month/Year Issued, Edition	Manual Code
November 2011, First Edition	J2X1-7606-01ENZ0(00)
December 2011, 1.1	J2X1-7606-01ENZ0(01)
December 2011, 1.2	J2X1-7606-01ENZ0(02)
February 2012, 1.3	J2X1-7606-01ENZ0(03)
March 2012, 1.4	J2X1-7606-01ENZ0(04)
April 2012, 1.5	J2X1-7606-01ENZ0(05)

Copyright FUJITSU LIMITED 2010-2012

Contents

Chapter 1 User Interface.....	1
1.1 ROR Console Layout.....	1
1.2 Menus.....	4
1.2.1 List of Menus.....	4
1.2.2 Popup Menus.....	7
1.3 Status Panel.....	13
1.4 Tree Panel.....	14
1.5 Main Panel.....	16
1.5.1 [Resource List] Tab.....	16
1.5.2 [Resource Details] Tab.....	17
1.5.2.1 Chassis Attributes.....	18
1.5.2.2 Server Attributes.....	19
1.5.2.3 Physical OS, VM Host and VM Guest Attributes.....	22
1.5.2.4 Network Device Attributes.....	26
1.5.2.5 Power Monitoring Devices (PDU or UPS) Attributes.....	28
1.5.2.6 Management Software Attributes.....	28
1.5.3 [Recovery Settings] Tab.....	29
1.5.4 [Image List] Tab.....	29
1.5.5 [Network Map] Tab.....	30
1.6 Recent Operations.....	30
1.7 Event Log.....	31
Chapter 2 Registering Resources.....	33
2.1 Registering VIOM Coordination.....	33
2.1.1 Registering VIOM Server Profiles.....	33
2.2 Registering VM Management Software.....	34
2.3 When using Blade Servers.....	35
2.3.1 Registering Chassis.....	35
2.3.2 Registering Blade Servers.....	36
2.3.3 Registering LAN Switch Blades.....	39
2.3.4 Configuring VLANs on LAN Switches.....	40
2.3.5 Configuring VLANs on External Ports.....	41
2.3.6 Configuring VLANs on Internal Ports.....	41
2.4 When using Rack Mount and Tower Servers.....	42
2.4.1 Registering Rack Mount or Tower Servers.....	42
2.4.2 Registering LAN Switches.....	46
2.5 When using PRIMEQUEST Servers.....	48
2.5.1 Registering Chassis (For PRIMEQUEST Servers).....	48
2.5.2 Registering PRIMEQUEST Servers.....	49
2.6 When using SPARC Enterprise Servers.....	49
2.6.1 Registering SPARC Enterprise M4000/M5000/M8000/M9000 Servers.....	49
2.6.2 Registering SPARC Enterprise (M3000/T Series) Servers.....	50
2.7 Registering Power Monitoring Devices.....	52
2.8 Registering Admin LAN Subnets [Windows].....	53
2.9 Registering ETERNUS SF Storage Cruiser.....	57
Chapter 3 Changing Resources.....	58
3.1 Changing Admin Server Settings.....	58
3.1.1 Changing Admin IP Addresses.....	58
3.1.2 Changing Port Numbers.....	62
3.1.3 Changing the Maximum Number of System Image Versions.....	65
3.1.4 Changing the Maximum Number of Cloning Image Versions.....	65
3.1.5 Changing the Image Folder Location.....	65
3.1.6 Changing Admin LAN Subnets [Windows].....	67
3.1.7 Changing the Password for the Resource Orchestrator Database.....	68

3.2 Changing Chassis and Managed Servers Settings.....	68
3.2.1 Changing Chassis Names.....	69
3.2.2 Changing Server Names.....	69
3.2.3 Changing Admin IP Addresses.....	69
3.2.4 Changing SNMP Communities.....	70
3.2.5 Changing Server Management Unit Configuration Settings.....	71
3.2.6 Changing Port Numbers.....	72
3.2.7 Changing VM Host Login Account Information.....	73
3.2.8 Changing the VLAN Settings of LAN Switch Blades.....	73
3.2.9 Changing HBA address rename Settings.....	73
3.2.10 Changing Boot Options.....	74
3.2.11 Changing WWN Settings for ETERNUS SF Storage Cruiser Integration.....	74
3.3 Changing Settings for the HBA address rename Setup Service.....	74
3.3.1 Changing the IP Address of the Admin Server.....	74
3.3.2 Changing the Port Number Used to Communicate with the Admin Server.....	74
3.3.3 Changing the IP Address of the HBA address rename Server.....	75
3.4 Changing VIOM Registration Settings.....	75
3.5 Changing LAN Switch Settings.....	75
3.5.1 Changing LAN Switch Basic Settings.....	75
3.5.2 Changing VLANs Set for External Ports of LAN Switch Blades.....	76
3.5.3 Re-discovering LAN Switches.....	78
3.6 Changing VM Management Software Settings.....	78
3.7 Changing Power Monitoring Environment Settings.....	79
3.7.1 Changing Environmental Data Settings.....	79
3.7.2 Cancelling Collection Settings for Power Monitoring Environments.....	80
3.7.3 Changing Power Monitoring Devices.....	80
3.8 Changing Monitoring Information Settings.....	81
3.8.1 Changing Monitoring Information Settings.....	81
3.8.2 Canceling Monitoring Information Settings.....	81
3.9 Changing Storage.....	81
3.9.1 Changing Storage Management Software Basic Information.....	81
3.9.2 Changing Storage Unit Basic Information.....	82
3.9.3 Changing Virtual Storage Resource Basic Settings.....	82
3.9.4 Changing Basic Information for Disk Resources.....	83
Chapter 4 Configuring the Operating Environment of Managed Servers.....	84
4.1 Configuring WWN Settings for ETERNUS SF Storage Cruiser Integration.....	84
4.2 Cloning Image Deployment.....	85
Chapter 5 Deleting Resources.....	87
5.1 Deleting Chassis.....	87
5.2 Deleting Managed Servers.....	87
5.3 Cancelling VIOM Integration.....	88
5.4 Deleting LAN Switches.....	89
5.4.1 Deleting LAN Switch Blades.....	89
5.4.2 Deleting LAN Switches.....	89
5.5 Deleting VM Management Software.....	89
5.6 Clearing the Power Monitoring Environment.....	89
5.6.1 Deleting Power Monitoring Devices.....	89
5.7 Deleting Admin LAN Subnets [Windows].....	90
5.8 Unregistering ETERNUS SF Storage Cruiser.....	90
Chapter 6 Pre-configuration.....	91
6.1 Overview.....	91
6.2 Importing the System Configuration File.....	93
6.3 Exporting the System Configuration File.....	96
Chapter 7 Cloning [Windows/Linux].....	97

7.1 Overview.....	97
7.2 Collecting a Cloning Image.....	99
7.3 Deploying a Cloning Image.....	104
7.4 Viewing a Cloning Image.....	109
7.5 Deleting a Cloning Image.....	109
7.6 Network Parameter Auto-Configuration for Cloning Images.....	109
7.6.1 Operation Checks and Preparations.....	114
7.6.2 Maintenance.....	115
7.6.3 Clearing Settings.....	116
7.6.4 Modifying the Operating Environment.....	116
Chapter 8 Server Switchover Settings.....	118
8.1 Overview.....	118
8.2 Configuration.....	120
8.3 Server Switchover Conditions.....	123
8.4 Conditions Required for Auto-Recovery.....	124
8.5 Status Display.....	125
8.6 Server Switchover Settings.....	126
8.7 Changing Server Switchover Settings.....	128
8.8 Cancelling Server Switchover Settings.....	128
Appendix A sFormat of CSV System Configuration Files.....	129
A.1 Obtaining the System Configuration File (CSV Format).....	129
A.2 File Format.....	130
A.3 Resource Definitions.....	133
A.4 Examples of CSV format.....	151
Appendix B Maintenance Mode.....	154
Glossary.....	155

Chapter 1 User Interface

Resource Orchestrator includes two graphical user interfaces: the ROR console and BladeViewer.
This chapter provides an overview of the ROR console.


For details on how to open and close the ROR console, refer to "7.1 Login" of the "Setup Guide VE".
For details on BladeViewer, refer to "Chapter 3 BladeViewer" of the "Operation Guide VE".

1.1 ROR Console Layout

This section explains how the [Resource] tab of the ROR console is organized.

The [Resource] tab of the ROR console is sometimes referred to as the ROR console.

Figure 1.1 ROR Console

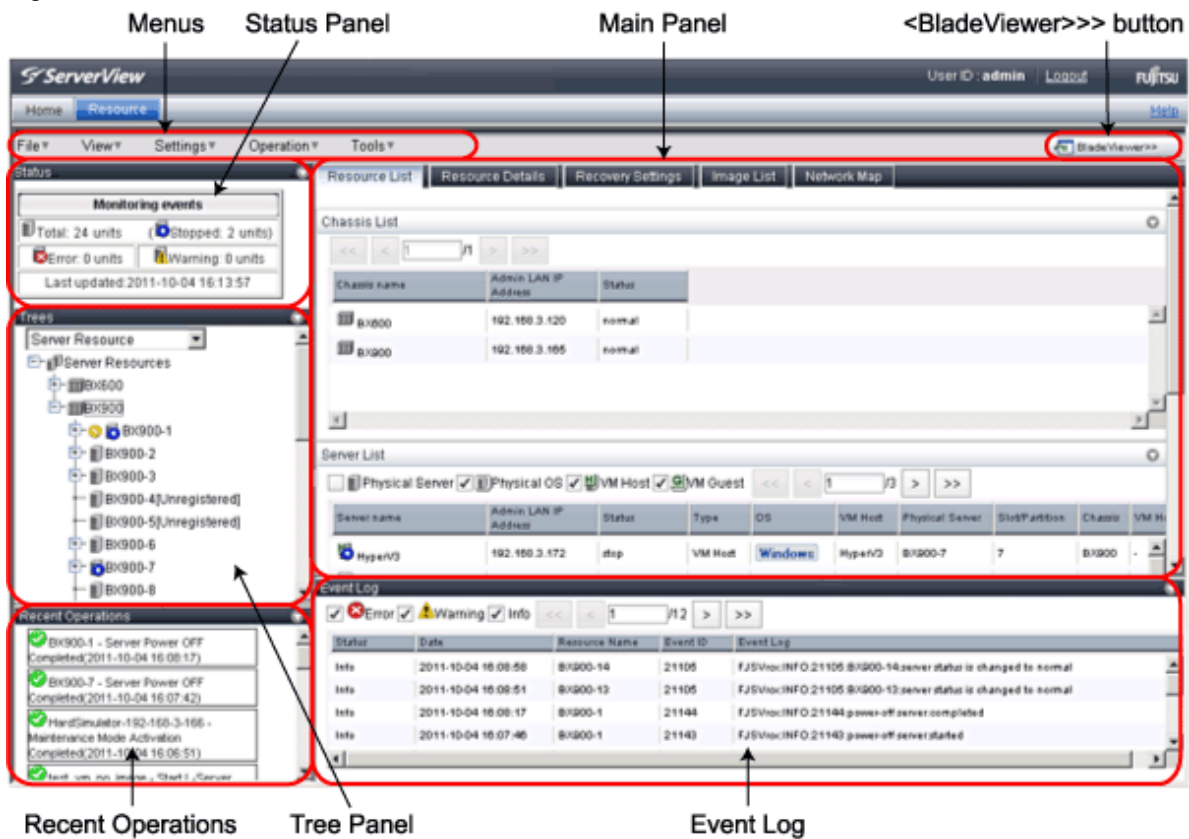

Menus

Operations can be performed either from the menu bar or popup menus.

Status Panel

The Status Panel displays the status of managed servers.

If a warning or error event occurs on a managed server, the status monitoring area starts to blink.

Tree Panel

By switching between tree types, it is possible to select from the following 5 types of trees.

Server Resources

The resources below are shown in a tree view. A status icon is displayed over each resource's icon.

- Chassis
- Server

- Physical OS
- VM Host
- VM Guest
- LAN Switch (LAN Switch Blades)

Network Devices

The resources below are shown in a tree view. A status icon is displayed over each resource's icon.

- Network Devices (Firewalls and L2 Switches)

Network Resources

The resources below are shown in a tree view. A status icon is displayed over each resource's icon.

- LAN switch (excluding LAN switch blades)

Power Monitoring Devices

The following power monitoring devices are shown in a tree view.

- PDU
- UPS

Management Software

The following management software which can be used in coordination with Resource Orchestrator are shown in a tree view. A status icon is displayed over each resource's icon.

- Management Software (vCenter Server)
- Management Software (SCVMM)
- Management Software (VIOM)

VLAN

Selecting a VLAN ID shows a list of resources on which this ID has been applied to.

- Chassis
- Server
- VM Host
- VM Guest
- LAN Switch
- NIC
- LAN Switch Port

Main Panel

The Main Panel displays information on resources selected in the tree.

- [Resource List] Tab

Displays information on resources related to the resource selected in the resource tree.

- [Resource Details] Tab

Displays more detailed information on the resource selected in the tree, or on a resource that was double-clicked in the [Resource List] tab.

- [Recovery Settings] Tab

Displays information on the spare servers assigned to the resource selected in the resource tree.

- [Image List] Tab

Displays system and cloning image information.

- [Network Map] Tab

Displays a network diagram of registered resources.

Recent Operations

Displays the progress statuses and results of operations performed in Resource Orchestrator.

Event Log

The Event Log displays information on events that have occurred.

It displays a log of events that have occurred on managed resources.

<BladeViewer>>> Button

Opens the BladeViewer interface.

BladeViewer is a management interface specially designed for blade servers. It can only be used in conjunction with PRIMERGY BX servers registered as managed servers.

Editing the Home Messages

This section explains how to edit the messages that are shown in the lower section of the home window of the ROR console.

Messages are displayed for all users.

Storage Location of the Messages

[Windows]

C:\Fujitsu\ROR\SVROR\Manager\rails\public\man\en\VirtualEdition

C:\Fujitsu\ROR\SVROR\Manager\rails\public\man\ja\VirtualEdition

C:\Fujitsu\ROR\SVROR\Manager\rails\public\man\en\CloudEdition

C:\Fujitsu\ROR\SVROR\Manager\rails\public\man\ja\CloudEdition

[Linux]

/opt/FJSVrcvmr/rails/public/man/en/VirtualEdition

/opt/FJSVrcvmr/rails/public/man/ja/VirtualEdition

/opt/FJSVrcvmr/rails/public/man/en/CloudEdition

/opt/FJSVrcvmr/rails/public/man/ja/CloudEdition

File name

home.html

Character Code

UTF-8

Initial Value

YYYY-MM-DD,Message Number 1

Setting Items

Date

There is no specified format.

When not displaying the date, use the definition "<th></th>".

Messages

Messages should be included between "<td>" and "</td>".

Note

When editing messages, make a backup of the HTML file after editing it.

Example

home.html

```
<!-- Information Area -->
<table class="text_left_span" border="0">
  <tr>
    <th>
      YYYY-MM-DD
    </th>
    <td>
      Message Number 2
    </td>
  </tr>
  <tr>
    <th>
      YYYY-MM-DD
    </th>
    <td>
      Message Number 1
    </td>
  </tr>
</table>
<!-- Information Area -->
```

Point

These messages can be used to inform all users of contact and enquiry information.

1.2 Menus

This section describes the menus available in the ROR console.

Figure 1.2 Menu



1.2.1 List of Menus

The menus provided on the menu bar of the ROR console are listed in the table below. Options available vary according to the authority level of the user account.

Table 1.1 Menu Items

Menu	Submenu		Privileged User	General User	Function
File	Import	-	Yes	No	Imports the system configuration file for pre-configuration.
	Export	-	Yes	No	Exports the system configuration file for pre-configuration.

Menu	Submenu		Privileged User	General User	Function
	Download Template	CSV Format	Yes	Yes	Downloads a sample of the system configuration file (CSV format) for pre-configuration.
	Export Environmental Data	Chassis	Yes	Yes	Exports environmental data collected from chassis.
		Server	Yes	Yes	Exports environmental data collected from servers.
		Power Monitoring Devices	Yes	Yes	Exports environmental data collected from power monitoring devices.
	Logout	-	Yes	Yes	Logs out of the ROR console. (*1)
View	Reset Layout	-	Yes	Yes	Returns the layout of the ROR console to its initial state.
Settings	Register	Chassis	Yes	No	Registers a chassis.
		Server	Yes	No	Registers a server.
		SPARC Enterprise (M3000/T Series)	Yes	No	Registers a SPARC Enterprise (M3000/T series) server.
		SPARC Enterprise (Partition Model)	Yes	No	Registers SPARC Enterprise M4000/M5000/M8000/M9000 servers.
		PRIMEQUEST	Yes	No	Registers a PRIMEQUEST.
		LAN Switch	Yes	No	Registers a LAN switch.
		Agent	Yes	No	Registers an agent.
		Power Monitoring Device	Yes	No	Registers a power monitoring device.
		Management Software (vCenter Server)	Yes	No	Registers VM management software (VMware vCenter Server).
		Management Software (SCVMM)	Yes	No	Registers VM management software (System Center Virtual Machine Manager).
		Management Software (VIOM)	Yes	No	Registers VM management software (VIOM).
		Delete	-	Yes	No
	Modify (*2)	Registration Settings	Yes	No	Modifies a resource's registration settings.
		HBA address rename settings (*3)	Yes	No	Modifies the HBA address rename settings of a server.
		Network Settings (*4, *5)	Yes	No	Modifies the network settings of a LAN switch.
		Spare Server Settings (*6)	Yes	No	Modifies a server's recovery settings.
		Monitoring Settings	Yes	No	Modifies the monitoring information for a server.
		WWN Settings (*7)	Yes	No	Modifies the WWN settings for a server.

Menu	Submenu		Privileged User	General User	Function
		VM Host Login Account	Yes	No	Modifies the registered login account used to communicate with the VM host.
	User Accounts	-	Yes	Yes	Adds, changes, and deletes user accounts.
	Admin LAN Subnet	-	Yes	Yes (*8)	Performs viewing, registration, changing or deletion of the admin LAN subnet information.
Operation	Update	-	Yes	Yes	Updates a resource.
	Power	ON	Yes	No	Powers on a server.
		OFF	Yes	No	Powers off a server after shutting down its operating system.
		OFF (Forced)	Yes	No	Powers off a server without shutting down its operating system.
		Reboot	Yes	No	Reboots a server after shutting down its operating system.
		Reboot (Forced)	Yes	No	Reboots a server without shutting down its operating system.
	LED (*4)	ON	Yes	No	Turns the maintenance LED on.
		OFF	Yes	No	Turns the maintenance LED off.
	Spare Server (*2, *6)	Switchover	Yes	No	Switches over a server with one of its spare servers.
		Failback	Yes	No	Switches back a server to its pre-switchover state.
		Takeover	Yes	No	Accepts a switched over configuration as final (without switching back to the original configuration).
	Hardware Maintenance	Re-configure	Yes	No	Detects and re-configures the properties of a replaced server.
		Restore LAN Switch (*9)	Yes	No	Restores a LAN switch configuration.
	Maintenance Mode (*2)	Set	Yes	No	Places a server into maintenance mode.
		Release	Yes	No	Sets a server to active mode.
	Backup/Restore (*2)	Backup	Yes	No	Backs up a system image from a server.
		Restore	Yes	No	Restores a system image to a server.
	Cloning (*2, *10)	Collect	Yes	No	Collects a cloning image from a server.
		Deploy	Yes	No	Deploys a cloning image to a server.
	Migrate VM Guest	-	Yes	No	Migrates a VM guest to a different VM host.
	VM Home Position	Settings	Yes	No	Sets VM Home Position.
		Clear	Yes	No	Clears VM Home Position.
		Back to Home	Yes	No	Migrates a VM guest to VM Home Position.

Menu	Submenu		Privileged User	General User	Function
Tools	Topology	Discover LAN switches	Yes	No	Discovers LAN switches within the admin LAN.
		Detect physical links	Yes	No	Acquires physical link data from registered LAN switches.
	Licenses	-	Yes	No	Displays license settings and registered licenses.
	Options	-	Yes	Yes (*11)	Modifies client and environmental data settings.
	Environmental Data Graph	-	Yes	Yes	Displays environmental data graphs.

*1: If multiple ROR consoles or BladeViewer sessions exist, the login sessions may be terminated.

*2: Cannot be selected for a VM guest.

*3: Cannot be selected for PRIMEQUEST and SPARC Enterprise Partition Models.

*4: Available only for PRIMERGY BX servers.

*5: Cannot be set for PRIMERGY BX900/BX400 LAN switch blades operating in IBP mode.

*6: Cannot be selected for PRIMEQUEST.

*7: Can only be selected for SPARC Enterprise servers.

*8: Only the admin LAN subnet information can be displayed with general user privileges.

*9: Not available for PRIMERGY BX900/BX400 LAN switch blades operating in IBP mode.

*10: Cannot be selected for a VM host.

*11: General users cannot change environmental data settings.

1.2.2 Popup Menus

Right-clicking an object displayed in the resource tree or in the [Image List] tab displays a popup menu with a list of options available for that object.

The tables below detail the popup menus provided for each object.

Available menus vary according to user account privileges.

Table 1.2 Popup Menus Available for the "Server Resources" Tree Node

Popup Menu		Function
Menu	Submenu	
Register	Chassis	Registers a chassis.
	Server	Registers a server.
	SPARC Enterprise (M3000/T Series)	Registers a SPARC Enterprise (M3000/T series) server.
	SPARC Enterprise (Partition Model)	Registers the chassis of a SPARC Enterprise M4000/M5000/M8000/M9000 server.
	PRIMEQUEST	Registers the chassis of a PRIMEQUEST.
Export	Environmental Data (Chassis)	Exports environmental data collected from chassis.
	Environmental Data (Servers)	Exports environmental data collected from servers.

Table 1.3 Popup Menus Available for Chassis

Popup Menu		Function
Menu	Submenu	
Delete	-	Deletes a chassis.
Update	-	Updates a chassis.
Modify	Registration Settings	Modifies a chassis' registration settings.

Popup Menu		Function
Menu	Submenu	
External Management Software	-	Opens a Management Blade's Web interface.
Export (*1)	Environmental Data	Exports environmental data collected from chassis.

*1: This option is only available for chassis equipped with power monitoring capabilities.

Table 1.4 Popup Menus Available for Servers

Popup Menu		Function
Menu	Submenu	
Register	Server (*1)	Registers a server.
	Agent	Registers an agent.
Delete	-	Deletes a server.
Update	-	Updates a server.
Modify	Registration Settings	Modifies a server's registration settings.
	HBA address rename settings (*2)	Modifies the HBA address rename settings of a server.
	Network Settings (*3, *4)	Modifies the network settings of a server.
	Spare Server Settings (*2)	Modifies a server's recovery settings.
Maintenance Mode	Set	Places a server into maintenance mode.
	Release	Sets a server to active mode.
Power	ON	Powers on a server.
	OFF	Powers off a server after shutting down its operating system.
	OFF (Forced)	Powers off a server without shutting down its operating system.
	Reboot	Reboots a server after shutting down its operating system.
	Reboot (Forced)	Reboots a server without shutting down its operating system.
LED (*3)	ON	Turns the maintenance LED on.
	OFF	Turns the maintenance LED off.
Hardware Maintenance	Re-configure	Detects and re-configures the properties of a replaced server.
Backup/Restore	Restore	Restores a system image to a server.
Cloning	Deploy	Deploys a cloning image to a server.
Console Screen (*5)	-	Opens the server console.
External Management Software (*6)	-	Opens external server management software.
Export (*7)	Environmental Data	Exports environmental data collected from servers.

*1: Available only for PRIMERGY BX series and PPRIMEQUEST servers.

*2: Available only for VM hosts when using PRIMEQUEST.

*3: Available only for PRIMERGY BX servers.

*4: Can only be selected for VM guests.

*5: When opening the L-Server console screen at the second time or later, a window for iRMC management may be opened instead of

the console screen. If an iRMC management screen is displayed, close that screen and then start the console screen again.

*6: Available only for PRIMERGY series, PRIMEQUEST, and SPARC Enterprise M series servers.

*7: This option is only available for chassis equipped with power monitoring capabilities.

Table 1.5 Popup Menus Available for SPARC Enterprise Servers

Popup Menu		Function
Menu	Submenu	
Register	Server (*1)	Registers a server.
	Agent	Registers an agent.
Delete	-	Deletes a SPARC Enterprise server.
Update	-	Updates a SPARC Enterprise server.
Modify	Registration Settings	Modifies a SPARC Enterprise server's registration settings.
	WWN Settings	Modifies the WWN settings for a server.
	Spare Server Settings	Modifies a server's recovery settings.
Maintenance Mode	Set	Places a server into maintenance mode.
	Release	Sets a server to active mode.
Power	ON	Powers on a SPARC Enterprise server.
	OFF	Powers off a SPARC Enterprise server after shutting down its operating system.
	OFF (Forced)	Powers off a SPARC Enterprise server without shutting down its operating system.
	Reboot	Reboots a SPARC Enterprise server after shutting down its operating system.
	Reboot (Forced)	Reboots a SPARC Enterprise server without shutting down its operating system.
External Management Software	-	Opens external server management software for SPARC Enterprise servers.
Export (*2)	Environmental Data	Exports environmental data collected from servers.

*1: Can only be selected for SPARC Enterprise M4000/M5000/M8000/M9000 servers.

*2: This option is only available for chassis equipped with power monitoring capabilities.

Table 1.6 Popup Menus Available for Physical OS's [Windows/Linux], VM Hosts, and VM Guests

Popup Menu		Function
Menu	Submenu	
Delete (*1)	-	Deletes a physical OS or VM host.
Update	-	Updates a physical OS, VM host, or VM guest.
Modify (*1, *2)	HBA address rename settings (*3, *4)	Modifies the HBA address rename settings of a server.
	Network Settings (*4, *5, *6)	Modifies the network settings of a server.
	Spare Server Settings (*3, *4)	Modifies a server's recovery settings.
	Monitoring Settings	Modifies the monitoring information for a server.
	VM Host Login Account (*7)	Modifies the registered login account used to communicate with the VM host.
Power	ON	Powers on a server.

Popup Menu		Function
Menu	Submenu	
	OFF	Powers off a server after shutting down its operating system.
	OFF (Forced)	Powers off a server without shutting down its operating system.
	Reboot	Reboots a server after shutting down its operating system.
	Reboot (Forced)	Reboots a server without shutting down its operating system.
Spare Server (*1, *3, *4)	Switchover	Switches over a server with one of its spare servers.
	Failback	Switches back a server to its pre-switchover state.
	Takeover	Accepts a switched over configuration as final (without switching back to the original configuration).
Maintenance Mode (*1, *4)	Configuration	Places a server into maintenance mode.
	Release	Sets a server to active mode.
Backup/Restore (*1, *4)	Backup	Backs up a system image from a server.
	Restore	Restores a system image to a server.
Cloning (*1, *8)	Collect	Collects a cloning image from a server.
	Deploy	Deploys a cloning image to a server.
VM Home Position (*1, *7)	Settings	Sets VM Home Position.
	Clear	Clears VM Home Position.
	Back to Home	Migrates a VM guest to VM Home Position.
External Management Software (*1, *9)	-	Opens external server management software.
VM Management Console (*4, *7, *10)	-	Opens the VM management console installed on the client machine.
Migrate VM Guest (*11)	-	Migrates a VM guest to a different VM host.

*1: Cannot be selected for a VM guest.

*2: Available only for VM hosts when using PRIMEQUEST.

*3: Cannot be selected for PRIMEQUEST.

*4: This option may or may not be available according to the server virtualization software used. For details, refer to "E.1 Common Functions of Server Virtualization Software" of the "Setup Guide VE".

*5: Available only for PRIMERGY BX servers.

*6: Cannot be set for PRIMERGY BX900/BX400 LAN switch blades operating in IBP mode.

*7: This menu is not available for a physical OS.

*8: Cannot be selected for a VM host.

*9: Available only for PRIMERGY series, PRIMEQUEST, and SPARC Enterprise M series servers.

*10: To use this feature, a VM management console must be installed and the admin client must be configured properly.

After installing the VM management console, select this menu item and follow the instructions shown in the displayed dialog.

*11: Can only be selected for VM guests.

Table 1.7 Popup Menus Available for Physical OS's [Solaris]

Popup Menu		Function
Menu	Submenu	
Delete	-	Deletes a SPARC Enterprise server.

Popup Menu		Function
Menu	Submenu	
Update	-	Updates a SPARC Enterprise server.
Modify	Spare Server Settings	Modifies a server's recovery settings.
	Monitoring Settings	Modifies a SPARC Enterprise server's monitoring settings.
Power	ON	Powers on a SPARC Enterprise server.
	OFF	Powers off a SPARC Enterprise server after shutting down its operating system.
	OFF (Forced)	Powers off a SPARC Enterprise server without shutting down its operating system.
	Reboot	Reboots a SPARC Enterprise server after shutting down its operating system.
	Reboot (Forced)	Reboots a SPARC Enterprise server without shutting down its operating system.
Spare Server	Switchover	Switches over a server with one of its spare servers.
	Failback	Switches back a server to its pre-switchover state.
	Takeover	Accepts a switched over configuration as final (without switching back to the original configuration).
Maintenance Mode	Set	Places a server into maintenance mode.
	Release	Sets a server to active mode.
External Management Software	-	Opens external server management software for SPARC Enterprise servers.

Table 1.8 Popup Menus Available for LAN Switches

Popup Menu		Function
Menu	Submenu	
Register	LAN Switch	Registers a LAN switch.
Delete	-	Deletes a LAN switch.
Update	-	Updates a LAN switch.
Modify	Registration Settings	Modifies a LAN switch's registration settings.
	Network Settings (*1)	Modifies the VLAN settings of a LAN switch's external ports.
Restore (*1)	-	Restores a LAN switch configuration.
External Management Software	-	Opens a LAN switch's Web interface.

*1: Not available for PRIMERGY BX900/BX400 LAN switch blades operating in IBP mode.

Table 1.9 Popup Menus Available for System Images

Popup Menu		Function
Menu	Submenu	
Restore	-	Restores a system image to a server.
Delete	-	Deletes a system image.

Table 1.10 Popup Menus Available for Cloning Images

Popup Menu		Function
Menu	Submenu	
Deploy	-	Deploys a cloning image to a server.
Delete	-	Deletes a cloning image.



Note

If ServerView Deployment Manager is used on the admin LAN, the popup menu for cloning images cannot be used.

Table 1.11 Popup Menus Available for Network Devices

Popup Menu		Function
Menu	Submenu	
Topology	Discover LAN switches	Discovers LAN switches within the admin LAN.
	Detect physical links	Acquires physical link data from registered LAN switches.

Table 1.12 Popup Menus Available for the "Power Monitoring Devices" Tree Node

Popup Menu		Function
Menu	Submenu	
Register	Power Monitoring Device	Registers a power monitoring device.
Export	Environmental Data	Exports environmental data.

Table 1.13 Popup Menus Available for Power Monitoring Devices

Popup Menu		Function
Menu	Submenu	
Delete	-	Deletes a power monitoring device (PDU or UPS).
Update (*1)	-	Updates a power monitoring device (PDU or UPS).
Modify	Registration Settings	Modifies a power monitoring device's registration settings.
Hardware Maintenance	Re-configure	Detects and re-configures the properties of a replaced power monitoring device (PDU or UPS).
Export	Environmental Data	Exports environmental data.

*1: Unlike other resources, the properties of a power monitoring devices are not automatically updated. Use this option to update them manually when necessary.

Table 1.14 Popup Menus Available for Management Software

Popup Menu		Function
Menu	Submenu	
Register	Management Software (vCenter Server)	Registers VM management software (VMware vCenter Server).
	Management Software (SCVMM)	Registers VM management software (System Center Virtual Machine Manager).

Popup Menu		Function
Menu	Submenu	
	Management Software (OVM Manager)	Registers management software (OVM Manager).
	Management Software (VIOM)	Registers VM management software (VIOM).


Table 1.15 Popup Menus Available for Management Software (vCenter Server/SCVMM/VIOM)

Popup Menu		Function
Menu	Submenu	
Delete	-	Deletes management software.
Update	-	Updates management software information.
Modify	Registration Settings	Modifies registration settings for management software.

1.3 Status Panel

This section explains the different statuses that are displayed in the ROR console.

Figure 1.3 Status Panel

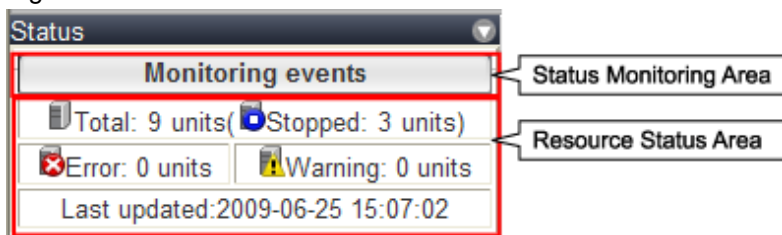

Status Monitoring Area

The Event Log monitors a history of events that have occurred on managed resources.

Based on detected events, the status monitoring area will change color and blink. Clicking the status monitoring area will stop the blinking.

The following table details the different statuses and their associated corrective actions.

Table 1.16 Monitor Status List

Monitoring Status	Background Color	Details	Corrective Action
Monitoring events	Grey	This indicates a normal state. No warning or error-level events have occurred on the displayed resources.	No action is necessary.
Warning event detected	Yellow	This indicates a warning state. A warning-level event has occurred on one or more of the displayed resources.	Click the status monitoring area to stop the blinking and fix the cause of the problem.
Error event detected	Red	This indicates an error state. An error-level event has occurred on one or more of the displayed resources.	Click the status monitoring area to stop the blinking and fix the cause of the problem.

Resource Status Area

This area displays the number of registered servers experiencing each status.


The resource status area lights up when there is at least one server in either "Error" or "Warning" status.

Clicking a lit up status area will display a list of resources with that status in the [Resource List] tab. Double-click a displayed resource to switch to its [Resource Details] tab and open either its external management software or the Management Blade's Web interface to investigate the problem.

1.4 Tree Panel

This section describes the trees used in the ROR console.

Figure 1.4 Tree Panel

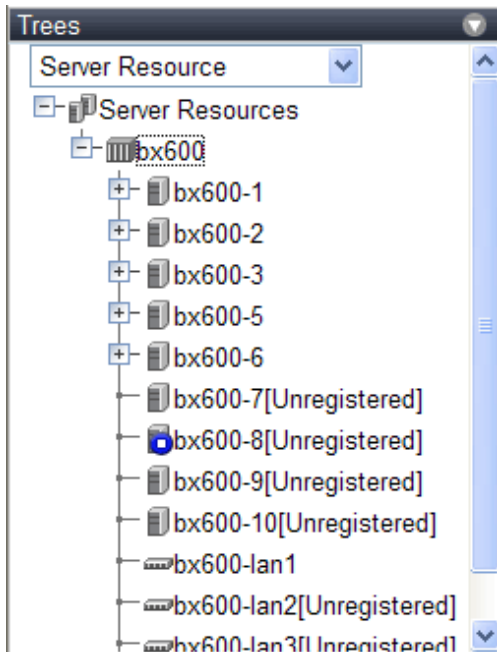

In the tree panel, clicking the area on the upper-left enables selection and display of the following 5 types of tree: server resources, network devices, power monitoring devices, management software, and VLAN.

Server Resources

Chassis, servers, physical OS's, VM hosts, VM guests, and LAN switches managed in Resource Orchestrator are displayed in a tree view. Resources are primarily displayed in registration order. However, for blade servers within a common chassis, the order by which Resource Orchestrator detects server blades takes precedence.

Resources displayed in the resource tree are represented by an icon and their resource name. For details on the icons used to indicate different resources, refer to "5.2 Resource Status" of the "Operation Guide VE".

For a non-registered resource, one of the following registration states is displayed at the end of the resource's name.

Table 1.17 Resource Registration States

[Unregistered]	The resource was automatically detected, but has not been registered yet
[Registering]	The resource is being registered
[Admin Server]	This server is the admin server itself

If a label was set for a resource (in BladeViewer), that label is displayed after the resource name.

Display Format

`resource_name(label)`

Clicking a resource in the resource tree displays information related to that resource in the Main Panel. Right-clicking a resource displays a list of available operations in a popup menu.

For details on popup menus, refer to "1.2.2 Popup Menus".

When a problem occurs on a resource, it is represented by an icon shown on top of the resource icon.

For details on status icons, refer to "5.2 Resource Status" of the "Operation Guide VE".

Clicking a resource icon will show information related to that resource in the Main Panel. Use this information to investigate the problem.

For details on the information displayed in the Main Panel, refer to "1.5 Main Panel".

Information

For a VM host coordinated with VMware vCenter Server, the name (IP address or host name) entered when registering with VMware vCenter Server will be displayed.

Network Devices

External LAN switches (those other than LAN switch blades) managed in Resource Orchestrator are shown in a tree view. Resources are sorted and displayed by name in alphabetical order.

Network resources displayed in the resource tree are represented by an icon and their resource name.

For details on the icons used to indicate different resources, refer to "5.2 Resource Status" of the "Operation Guide VE".

For a non-registered resource, one of the following registration states is displayed at the end of the resource's name.

Table 1.18 Resource Registration States

[Unregistered]	The resource was automatically detected, but has not been registered yet
[Registering]	The resource is being registered

When a problem occurs on a resource, it is represented by an icon shown on top of the resource icon.

For details on status icons, refer to "5.2 Resource Status" of the "Operation Guide VE".

Clicking a resource icon will show information related to that resource in the Main Panel. Use this information to investigate the problem.

Power Monitoring Devices

The power monitoring devices (PDU or UPS) used by Resource Orchestrator to monitor power consumption are displayed in a tree view.

For details on icons used to represent power monitoring devices, refer to "5.2 Resource Status" of the "Operation Guide VE".

Clicking a power monitoring device displayed in the resource tree will display its attributes in the Main Panel. Right-clicking a power monitoring device will display a list of available operations in a popup menu.

For details on the information displayed in the Main Panel, refer to "[1.2.2 Popup Menus](#)" for details on popup menus, and "[1.5 Main Panel](#)".

Management Software

Management software (vCenter Server, SCVMM, and VIOM) used in coordination with Resource Orchestrator is displayed in a tree view.

For details on the icons used to indicate different management software, refer to "5.2 Resource Status" of the "Operation Guide VE".

Clicking a management software on the tree displays information related to it in the Main Panel. Right-clicking a management software will display a list of available operations in a popup menu.

For details on the information displayed in the Main Panel, refer to "[1.2.2 Popup Menus](#)" for details on popup menus, and "[1.5 Main Panel](#)".

VLAN

Resources for which VLAN IDs have been applied are displayed in a tree view. The following resource types are displayed.


- Server
- LAN Switches

For details on the icons used to indicate different resources, refer to "5.2 Resource Status" of the "Operation Guide VE".

1.5 Main Panel

This section describes the Main Panel of the ROR console.

Figure 1.5 Main Panel

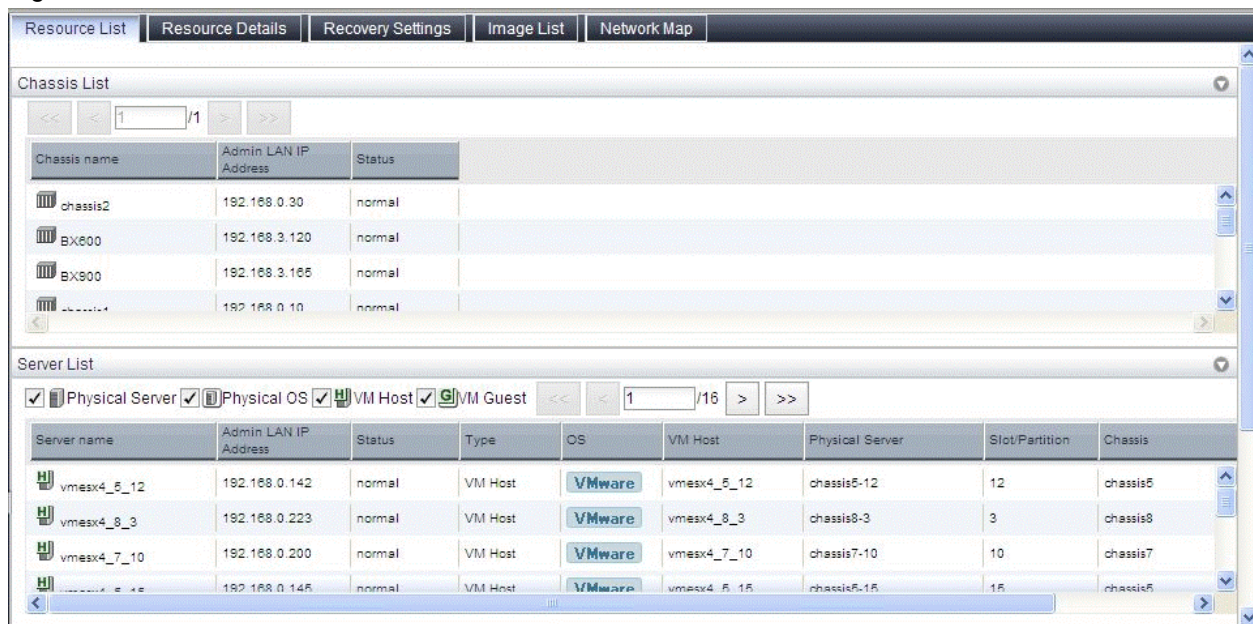

1.5.1 [Resource List] Tab

The [Resource List] tab in the Main Panel displays a list of resources related to the resource that was selected in the resource tree. For details on the icons used to indicate different resources, refer to "5.2 Resource Status" of the "Operation Guide VE".

The table below shows the information displayed in the Resource List for each selectable resource.

Server Resources

Information on all registered chassis, servers, and LAN switches.

Chassis

Information on registered servers and LAN switch blades mounted in the selected chassis is displayed.

For PRIMEQUEST or SPARC Enterprise M4000/M5000/M8000/M9000 servers, information on the partitions configured on the chassis is displayed.

Server

Information on the physical OS's, VM hosts, and VM guests running on the selected server.

Physical OS

Information on the selected physical OS.

VM Host

Information on the VM guests running on the selected VM host.

VM Guest

Information on the selected VM guest.

Network Devices

Information on the selected network device is displayed.

Unregistered Server

Information on the selected unregistered server.

Network Resources

Information on all registered network resources is displayed.

Power Monitoring Devices

Information on all registered power monitoring devices.

Management Software

Information on all registered management software.

Management Software (vCenter Server, SCVMM, or VIOM)

Information on the selected management software.

Double-clicking a resource in the [Resource List] tab displays its [Resource Details] tab in the Main Panel. This tab shows detailed information on the selected resource.

In the [Resource List] tab, resources experiencing problems are shown with a status icon displayed on top of their resource icon. Switch to the [Resource Details] tab to check the faulty component or open external management software to investigate the problem.

For details, refer to "Chapter 5 Monitoring" of the "Operation Guide VE".

The initial display is not sorted.

Clicking a column heading in the [Resource List] tab will sort the displayed resources in ascending or descending order.

In each page of the list, 10 items can be displayed. It is possible to move forwards and backwards by single pages, and to the first or last page.

Physical servers, physical OS's, VM hosts, and VM guests are displayed under the "Server List".

Resources displayed in the "Server List" can be filtered by selecting or deselecting their corresponding checkboxes.

1.5.2 [Resource Details] Tab

The [Resource Details] tab displays detailed information on registered resources.

This information is displayed by double-clicking any of the following resources in the resource tree:


- Chassis
- Server
- Physical OS
- VM Host
- VM Guest
- Network Devices
- PDU or UPS
- Management Software (vCenter Server, SCVMM, or VIOM)



For the item which there is no content to display the details for, a hyphen ("-") is displayed.

Selecting a blade server displays the following chassis image in the [Resource Details] tab. This image shows the slot positions of all server blades installed in the chassis.

Figure 1.6 Chassis

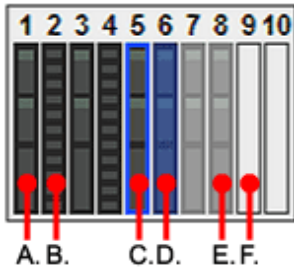

The resource images shown in the above chassis image are explained in the table below.

Table 1.19 Meaning of the Resources Shown in the Chassis Image

Image	Meaning
A.	Registered server blade.
B.	Detected storage blade.
C.	Currently displayed server blade.
D.	Server blade selected within the chassis image.
E.	Server blade that has not been registered yet.
F.	Empty slot.

Attributes of Displayed Resources

The [Resource Details] tab displays different attributes for each resource, as described below.

1.5.2.1 Chassis Attributes

General Area

Chassis name

The name used to identify a chassis is displayed.

Model name

The model name of the chassis is displayed.

Admin LAN (IP address)

The chassis admin IP address is displayed.

Status

The status of the chassis is displayed.

Server blades

The number of server blades mounted in the chassis is displayed.

Displayed only when the chassis of a blade server is selected.

Partition count

The number of mounted partitions is displayed.

Displayed only when the chassis of a PRIMEQUEST or SPARC Enterprise M4000/M5000/M8000/M9000 server is selected.

LAN Switch blades

The number of LAN switches mounted in the chassis is displayed.

Displayed only when the chassis of a blade server is selected.



Refer to "5.2 Resource Status" of the "Operation Guide VE" for details on resource status.

Hardware Details Area

Launch Management Blade Web UI

The link to the management blade's Web interface is displayed.

Not displayed for SPARC Enterprise M4000/M5000/M8000/M9000 servers.

Launch XSCF Web UI

The link to the remote management controller (XSCF) Web UI is displayed.

Only displayed for SPARC Enterprise M4000/M5000/M8000/M9000 servers.

Partition Configuration

The following information is displayed only when the chassis of a PRIMEQUEST or SPARC Enterprise M4000/M5000/M8000/M9000 server is selected.

Partition ID

The partition number is displayed.

Partition name

The name used to identify a partition is displayed.

SB

The ID of the system board used to configure a partition is displayed.

IOB

The ID of the IO board used to configure a partition is displayed.

GSPB

The ID of the GSPB used to configure a partition is displayed.

Reserved SB

The ID of the Reserved SB assigned to a partition is displayed.

LSB

The partition logical system board (LSB) number is displayed.

Only displayed for SPARC Enterprise M4000/M5000/M8000/M9000 servers.

XSB

The partition eXtended System Board (XSB) number is displayed.

Only displayed for SPARC Enterprise M4000/M5000/M8000/M9000 servers.

1.5.2.2 Server Attributes

General Area

Physical Server Name

The name used to identify a server is displayed.

Model name

The model name of the server is displayed.

When the server has been registered as a managed server and powered on, the server model name obtained from ServerView Operations Manager is displayed. For other servers, no model name is displayed.

Product name

The product name of the server is displayed.

For PRIMERGY BX servers, the product name obtained from the management blade is displayed. For other servers, the model name is displayed.

Status

Server status is displayed.

Slot

A slot number representing the mounted location is displayed.

Displayed only for PRIMERGY BX servers.

Partition ID

The partition number is displayed.

Displayed only when a PRIMEQUEST or SPARC Enterprise M4000/M5000/M8000/M9000 server is selected.

Maintenance Mode

The operational status of the server is displayed.

One of the following is displayed:

- active
- maintenance

Not displayed when SPARC Enterprise servers are selected.

LED status

The illumination status of the maintenance LED is displayed.

Displayed only for PRIMERGY BX servers.

Admin LAN (MAC address 1)

The MAC address of the NIC used for the admin LAN is displayed.

Not displayed when SPARC Enterprise servers are selected.

CPU type

The type of CPU is displayed.

This attribute is displayed as "-" for servers other than PRIMERGY BX servers or SPARC Enterprise M servers.

CPU clock speed

CPU clock speed (frequency) is displayed.

This attribute is displayed as "-" for servers other than PRIMERGY BX servers or SPARC Enterprise M servers.

Memory Size

The total capacity of server memory is displayed.

This attribute is displayed as "-" for servers other than PRIMERGY BX servers or SPARC Enterprise M servers.

For SPARC Enterprise M4000/M5000/M8000/M9000 servers, this is displayed only when the server is powered on.

Admin LAN (MAC address 2)

The MAC address of the network interface used for the HBA address rename setup service or for admin LAN redundancy is displayed.

Not displayed when SPARC Enterprise servers are selected.

Displayed only for servers other than PRIMERGY BX servers.

Hardware Maintenance Mode

The hardware maintenance mode of the server is displayed.
Displayed only for PRIMEQUEST servers.

Boot option

The boot option setting specified when registering servers is displayed.



See

- Refer to the Management Blade's manual for details on management blades' product names.
- Refer to the ServerView Operation Manager manual for details on the server models displayed and obtained from ServerView Operation Manager.
- Refer to "5.2 Resource Status" of the "Operation Guide VE" for details on resource status.

Hardware Details Area

Server management software

The link to the web interface of a server management software is displayed.
Displayed only when PRIMERGY servers, PRIMEQUEST servers, or SPARC Enterprise servers are selected.

Remote Management Controller IP address

IP address of the remote management controller is displayed.
Displayed only for servers other than PRIMERGY BX servers.

I/O Virtualization Management Software

The link to the web interface of external I/O virtualization management software is displayed.
Displayed only if coordinated up with external I/O virtualization management software.

VIOM server profile

The assigned VIOM server profile name is displayed.
Displayed only if managed by VIOM and a server profile has been set.

Network Properties Area

Physical Connections

The list of physical connections between the server's network interfaces and LAN switch ports is displayed.
When a column heading in the list is clicked, the color of the selected column will change and the resources can be sorted in either ascending or descending order.

Hardware Maintenance Area

NIC Summary

The MAC addresses and IP addresses of each server are displayed.
For servers other than PRIMERGY BX servers and PRIMEQUEST servers, only admin LAN information is displayed.
For SPARC Enterprise servers, only the IP address is displayed.



Information

The IP address displayed is the one set within the server's operating system.
For network interfaces that were made redundant using BACS software, the information set in BACS (within the operating system) is displayed.

Partition Configuration

The following information is displayed only when a PRIMEQUEST or SPARC Enterprise M4000/M5000/M8000/M9000 server is selected.

Partition name

The name used to identify a partition is displayed.

SB

The ID of the system board used to configure a partition is displayed.

IOB

The ID of the IO board used to configure a partition is displayed.

GSPB

The ID of the GSPB used to configure a partition is displayed.

Reserved SB

The ID of the Reserved SB assigned to a partition is displayed.

LSB

The partition logical system board (LSB) number is displayed.

Only displayed for SPARC Enterprise M4000/M5000/M8000/M9000 servers.

XSB

The partition eXtended System Board (XSB) number is displayed.

Only displayed for SPARC Enterprise M4000/M5000/M8000/M9000 servers.

1.5.2.3 Physical OS, VM Host and VM Guest Attributes

General Area

Server name

The name used to identify a physical OS, VM host, or VM guest is displayed.

Admin LAN (IP Address)

The IP address on the admin LAN is displayed.

Not displayed for VM guests.

Status

The status of the physical OS, VM host, or VM guest is displayed.

Type

The type of the OS running on the server is displayed.

One of the following is displayed:

- Physical OS
- VM Host
- VM Guest

OS

The type of the OS running on the server is displayed.

Physical server name

The name of the server on which the physical OS, VM host, or VM guest is operating is displayed.

Not displayed for VM guests.



See

Refer to "5.2 Resource Status" of the "Operation Guide VE" for details on resource status.

VM Host Information Area

The following information is displayed only for VM Hosts.

VM type

The type of the VM is displayed.

VM software name

The name of the VM software used is displayed.

VM software VL

The version and level of the VM software used is displayed.

Number of VM guests

The number of VM guests is displayed.

VM management software

The link to the web interface of a server virtualization software is displayed.

VM Guest List

A list of hosted VM guests is displayed.

VM Home Positions (VM Guests)

A list of the VM guests with the selected VM host set as their VM Home Position is displayed.

VM Guest Information Area

The following information is displayed only for VM guests.

VM type

The type of the VM is displayed.

VM host name

The name of the VM host on which the VM guest is stored is displayed.

VM name

The name of the VM is displayed.

VM management software

The link to the web interface of a server virtualization software is displayed.

Hardware Details Area

The following information is not displayed for VM guests.

Server management software

The link to the web interface of a server management software is displayed.

Displayed only when PRIMERGY servers, PRIMEQUEST servers, or SPARC Enterprise servers are selected.

Remote Management Controller IP address

IP address of the remote management controller is displayed.

Displayed only for servers other than PRIMERGY BX servers.

Latest System Image Area

The following information is not displayed for VM guests or SPARC Enterprise servers.

Version

The latest version of the system image is displayed.

Backup date

The date and time of the most recent system image backup is displayed.

Comments

Comments describing the system image are displayed.

Spare Server Settings Area

The following information is not displayed for VM guests.

Primary server

Displays the name of the physical server that will be replaced when server switchover occurs.

Active server

Displays the name of the physical server that is currently running.

Server switchover method

The method used to perform server switchover is displayed.

Server boot method

The boot type of the system disk is displayed.

Automatic server recovery

Shows whether automatic server recovery is enabled or not.

Network switchover

Shows whether network settings will be automatically adjusted during server switchover.

Force spare server to power off during switchover

The setting whether the spare server is turned off forcibly when switching over to the spare server is displayed.

Switch over to spare server running VM guests

The setting whether the server is switched to a VM host on which a VM guest exists is displayed.

Spare server

Displays the name of the physical server that will replace the current active server when server switchover occurs.

HBA Address Rename Settings Area

The following information is not displayed for VM guests or SPARC Enterprise servers.

WWNN

The WWNN set on the HBA is displayed.

WWPN 1

The first WWPN set on the HBA is displayed.

The WWPN should be set to the I/O address of each HBA (in descending order).

Therefore, for rack mount or tower servers, the order may not correspond with port number order described for the HBA.

WWPN 2

The second WWPN set on the HBA is displayed.

The WWPN should be set to the I/O address of each HBA (in descending order).

Therefore, for rack mount or tower servers, the order may not correspond with port number order described for the HBA.

Network Properties Area (VLAN)

The following information is not displayed for VM guests.

Index

The mounted position (index) of each network interface on the server is displayed.

Port VLAN

The port VLAN IDs set on the LAN switch ports connected to each network interface are displayed.

When connected to a PRIMERGY BX900/BX400 LAN switch blade operating in IBP mode, "(IBP)" is displayed.

Tagged VLAN

The tagged VLAN IDs set on the LAN switch ports connected to each network interface are displayed.

When connected to a PRIMERGY BX900/BX400 LAN switch blade operating in IBP mode, "(IBP)" is displayed.

Port Groups Area (IBP)

NIC Index

The mounted position (index) of each network interface on the server is displayed.

Group

The names of the port groups set on the LAN switch ports connected to each network interface (for LAN switch blades operating in IBP mode) are displayed.

Only "-" is displayed under the following conditions.

- The corresponding LAN switch is not registered
- The corresponding LAN switch is not operating in IBP mode
- The corresponding LAN switch port has not been assigned to a port group

Monitoring Information

Timeout (sec)

The time-out value (in seconds) for ping monitoring is displayed.

Recovery method

The recovery performed when an error is detected is displayed.

Number of reboots

The number of times reboot is performed during recovery is displayed.

WWN Settings Area

The following information is not displayed for VM guests or servers other than SPARC Enterprise servers.

WWPN of port n ($n:1-8$)

The WWPN value of the port n is displayed.

Values set by users are reflected on WWPN.

Target CA WWPN

The WWPN for the CA connected to the port n is displayed.

Target CA AffinityGroup

The AffinityGroup for the CA connected to the port *n* is displayed.

1.5.2.4 Network Device Attributes

General Area

Network device name

The name used to identify a network device is displayed.

System Name (sysName)

The name of the device specified as a network device is displayed.

IP address

The IP address on the admin LAN is displayed.

Device name (Product name)

The product name of the network device is displayed.

Model

The model name of a network device is displayed.

Vendor

The vendor name of a network device is displayed.

Serial number

The serial number of a network device is displayed.

Firmware version

The firmware version of a network device is displayed.

Slot

A slot number representing the mounted location is displayed.

This is only displayed for LAN switch blades. A hyphen ("-") is displayed in other cases.

Port Properties Area

Port Number

The number of the port of the selected network device is displayed.

Port Name

The name assigned to the port of the selected network device is displayed.

Member Port

When the name of a port with link aggregation is displayed for the port name, the port names of the physical port with link aggregation are displayed separated by commas (",").

When the physical port name is displayed as the port name, a hyphen ("-") is displayed.

Link Status

The operational status of the port is displayed.

One of the following is displayed:

- up
- down
- unknown

Speed/DuplexMode

The speed and duplex mode of the operating port are displayed.

Link Aggregation Group

The name of the link aggregation group to which the port of the selected LAN switch belongs.
If it does not belong to link aggregation, a hyphen ("-") is displayed.

Link aggregation information

The following information is displayed only when the PY CB Eth Switch/IBP 10Gbps 18/8 LAN switch blade is selected.

Link aggregation group name

The name of the link aggregation group to which the port of the selected LAN switch blade belongs is displayed.

Port Name

The link aggregation port name is displayed.

Member port:Link status

The physical port names and the link status (up or down) of the physical ports is displayed for the ports in the link aggregation.

VLAN Area

VLAN ID

A list of VLAN IDs set in the selected LAN switch is displayed.

Untagged Port(s)

A list of ports set with a port VLAN ID is displayed.

The logical port for link aggregation is only displayed for PY CB Eth Switch/IBP 10Gb 18/8 LAN switch blades.

Tagged Port(s)

A list of ports set with tagged VLAN ID(s) is displayed.

The logical port for link aggregation is only displayed for PY CB Eth Switch/IBP 10Gb 18/8 LAN switch blades.

Link Data Area

The following information is only displayed for LAN switch blades.

Resource Name (left side)

The name of the selected network device is displayed.

I/F (left side)

The port name of the network device is displayed.

I/F (right side)

The interface name of the resource connected to the network device is displayed.

Resource Name (right side)

The name of the resource connected to the network device is displayed.



Note

Information about connections with network devices is not displayed.

1.5.2.5 Power Monitoring Devices (PDU or UPS) Attributes

Registration Settings

Device name

The name used to identify a PDU or UPS is displayed.

Admin LAN (IP address)

The IP address on the admin LAN is displayed.

Device type

The device type (PDU or UPS) is displayed.

Model

The model name of the PDU or UPS is displayed.

Comments

Comments entered when registering a PDU or UPS are displayed.

Hardware Details Area

Serial number

The serial number of the PDU or UPS is displayed.

Voltage

The voltage supplied to the PDU or UPS is displayed.

Hardware version

The hardware version of the PDU is displayed.

This is not displayed for UPSs.

Firmware version

The firmware version of the device (PDU or UPS) is displayed.

Date of manufacture

The date of manufacture of the PDU or UPS is displayed.

Outlets

The number of outlets provided by the PDU is displayed.

This is not displayed for UPSs.

Intended orientation

The intended orientation (horizontal or vertical) of the PDU is displayed.

This is not displayed for UPSs.

1.5.2.6 Management Software Attributes

General Area

Management software name

The name used to identify the management software is displayed.

Type

The type of the management software is displayed.

One of the following is displayed:

- vCenter Server

- SCVMM
- VIOM

IP address

The IP address used to connect to the management software is displayed.

Status

The status of the management software is displayed.

Management software

A link to the web interface of the management software is displayed.

1.5.3 [Recovery Settings] Tab

The [Recovery Settings] tab displays a list of spare servers assigned to the resource selected in the server resource tree. The table below shows the information displayed in the [Recovery Settings] tab.

[Recovery Settings] Tab

Server Name

The name used to identify a physical OS or VM host is displayed.

Admin LAN IP Address

The IP address on the admin LAN is displayed.

Primary Server

The name of the server on which the physical OS or VM host is operating is displayed.

Switchover State

The current switchover state is displayed.

Spare Server

The configured spare server is displayed.

The switchover state is indicated by an arrow shown next to the currently active Primary Server. The messages "Switchover in progress", "Failback in progress", or "Takeover in progress" are displayed respectively during a server switchover, failback, or takeover process. If more than one spare server has been set, the first server listed is the one that is currently running.

Clicking a column heading in this list will change the color of the selected column and sort the displayed recovery settings in either ascending or descending order.

In each page of the list, 10 items can be displayed. It is possible to move forwards and backwards by single pages, and to the first or last page.

1.5.4 [Image List] Tab

The [Image List] tab displays information regarding available images. Those lists can be used to manage both system images and cloning images.

The following two tables list the items that are displayed in System Image List and Cloning Image List.

System Image List Area

Server Name

The name used to identify a physical OS or VM host is displayed.

Version

The latest version of the system image is displayed.

Backup Date

The date and time of the most recent system image backup is displayed.

Comments

Comments describing the system image are displayed.

Cloning Image List Area

Cloning Image Name

The name used to identify a cloning image is displayed.

Version

The version of the cloning image is displayed.

Collection Date

The name used to identify a cloning image is displayed.

OS

The name of the operating system stored in the cloning image is displayed.

Comments

Comments describing the cloning image are displayed.

Right-clicking a resource in the list displays a list of available operations in a popup menu.

Refer to "[1.2.2 Popup Menus](#)" for details on the operations available from popup menus.

Clicking a column heading in this list will change the color of the selected column and sort images in either ascending or descending order.

In each page of the list, 10 items can be displayed. It is possible to move forwards and backwards by single pages, and to the first or last page.

1.5.5 [Network Map] Tab

Resource Orchestrator displays the following information.

- Network configuration of physical and virtual servers (virtual switches and VM guests)
- Link state of each resource connection
- VLAN settings applied to physical and virtual servers




See

For details on the Network Map, refer to "Chapter 12 Network Map" of the "Operation Guide VE".

1.6 Recent Operations

This section describes the recent operations area of the ROR console.

Figure 1.7 Recent Operations

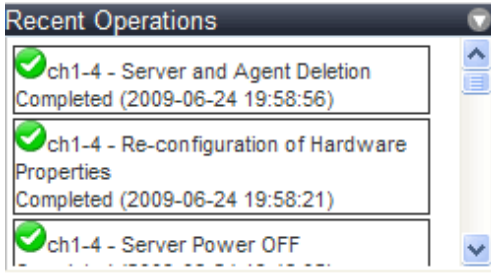


The recent operations area shows the status of operations that were recently performed. The result of a completed operation shows the operation's completion time and the related resource name. For operations that are still running, a progress bar is shown to indicate the current progress state.

1.7 Event Log

This section describes the event log displayed in the ROR console.

Figure 1.8 Event Log

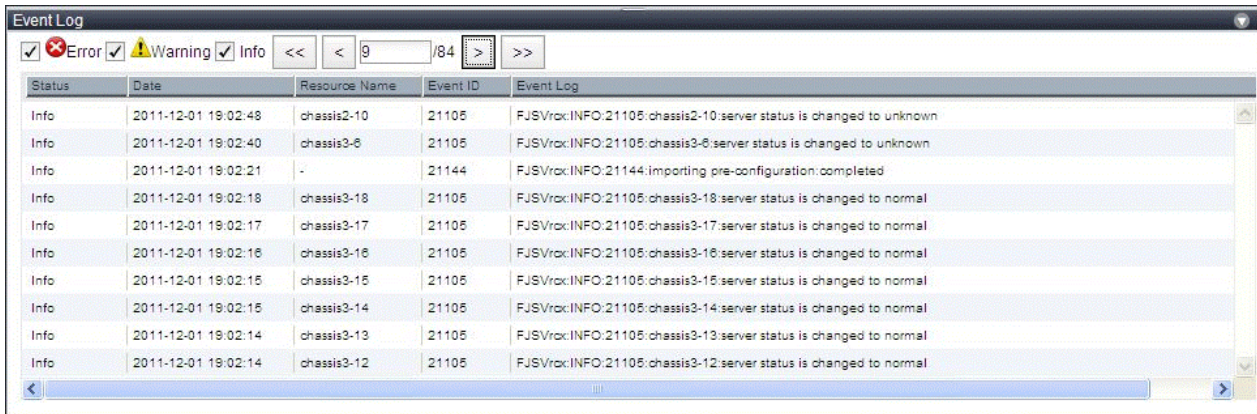

The event log displays a history of events that have occurred on managed resources. These events are added to the log automatically. Each event displayed in the event log provides the following information.

Information Displayed in the Event Log

Status

Displays the level of the event.
There are three levels: "Error", "Warning", or "Info".

Date

Date and time at which the event occurred.

Resource Name

Name of the resource associated with the event.

Event ID

Identifier related to the event.
No event ID is displayed for network resources.

Event Log

Content of the event.

The event log can be filtered using the event log checkboxes.

Selecting a checkbox will show the events whose status corresponds to that of the selected checkbox. Clearing a checkbox will hide such

events.

Clicking a column heading will change the color of the selected column and sort events in either ascending or descending order.

In each page of the list, 10 items can be displayed. It is possible to specify the page number to display, move forwards and backwards by single pages, and move to the first or last page.

Note

When a resource's status becomes "fatal", its related event shows an "Error" status in the event log. For this reason, the actual status of a resource should be confirmed from either the resource tree or the [Resource List] tab.

Information

For the SPARC Enterprise T series, the following levels are displayed for SEVERITY values of hardware SNMP Trap MIBs (SUN-HW-TRAP-MIB.mib).

- When SEVERITY is Critical or Major:
"Error" is displayed.
- When SEVERITY is Minor:
"Warning" is displayed.
- When SEVERITY is Informational:
"Info" is displayed.

Chapter 2 Registering Resources

This chapter explains how to register, change, and delete resources used by Resource Orchestrator. The Resource Orchestrator manager must be completely installed beforehand.

In addition to the usual way of registering each resource individually, it is also possible to register or change registration settings of multiple resources together using the pre-configuration function.

- Registering or modifying resources individually

This method is used when the number of servers to be installed is small (from one to four), or when adding a similar number of servers to an existing environment.

- Registering or modifying multiple resources collectively

This method is used when there are many (five or more) servers to be installed.

For information on registering multiple resources together, refer to "[Chapter 6 Pre-configuration](#)".



Information

- **User Accounts**

When creating new user accounts, changing passwords, or modifying permission levels during setup, refer to "Chapter 4 User Accounts" of the "Operation Guide VE".

- **Backing up the Admin Server**

The admin server should be backed up after the entire system has been completely set up, or after registering, changing, or deleting resources.

For information about backing up the admin server, refer to "B.2 Backing Up the Admin Server" of the "Operation Guide VE".

2.1 Registering VIOM Coordination

Use the following procedure to configure management software settings:

1. From the ROR console menu, select [Settings]-[Register]-[Management Software (VIOM)].

The [Register Management Software(VIOM)] dialog is displayed.

2. To use this feature, the following settings must first be defined:

User name

Enter the name of a VIOM user account.

Password

Enter the password of the above VIOM user account.

3. Click <OK>.

2.1.1 Registering VIOM Server Profiles

Use the following procedure to configure VIOM server profiles:

1. Select Management Software(VIOM) from the ROR console, then select the [Resource Details] tab.
2. In General of the [Resource Details] tab, click the link for the Management software.
The Web interface of ServerView Virtual-IO Manager starts up.
3. Refer to the ServerView Virtual-IO Manager manual to configure server profiles.

Note

HBA address rename and VIOM cannot be used together within the same chassis.

When using backup and restore or cloning, prioritize the following two boot operations:

1. Booting from the Network Interface Used by the Admin LAN (NIC1(Index1))
2. Booting from the Network Interface Used by the Admin LAN (NIC2(Index2))

2.2 Registering VM Management Software

This section explains how to register VM management software.

Registration of VM management software (such as VMware vCenter Server) is necessary to enable VM guest migrations.

For details on the required VM management software settings, refer to "E.2 Configuration Requirements" in the "Setup Guide VE".

Use the following procedure to register VM management software:

1. From the ROR console menu, select [Settings]-[Register], and then select the type of the VM management software to use.

The [Register Management Software(*name*)] dialog is displayed.

In *name*, the type of the VM management software is displayed.

2. To use this feature, the following settings must first be defined:

Management software name

Enter a VM management software name for the managed servers.

Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

Location

Select the location where the VM management software to register is operating.

- If VM management software is installed on the admin server

Select "Admin Server".

- In other cases

Select "Other Server".

Selecting this option activates the IP address field. Enter the IP address of the server on which VM management software is installed.

By default, "Admin Server" is selected.

IP address

Enter the IP address of VM management software. If "Admin Server" was selected, this field is disabled and shows the IP address of the admin server.

Use standard period notation.

Note

When receiving SNMP traps from VM management software (VMware vCenter Server), the configured IP address and the SNMP trap source IP address of the VM management software (VMware vCenter Server) should be the same. The SNMP trap source IP address is the IP address of the protocol with the highest priority of protocol binding. When changing the SNMP trap source IP address, change the order of protocol binding.

User name

Enter the name of a VM management software user account with administrative authority.

Enter up to 84 characters, including alphanumeric characters and symbols (ASCII characters 0x20 to 0x7e).

Password

Enter the password of the above VM management software user account.

Enter up to 128 characters, including alphanumeric characters and symbols (ASCII characters 0x20 to 0x7e).

3. Click <OK>.

VM management software is registered with the entered information.

Information

Registration and management of multiple VM management softwares (VMware vCenter Server) are possible.

2.3 When using Blade Servers

This section explains how to register resources when using blade servers.

When using blade servers, use the following procedure to register resources:

- Register chassis
- Register blade servers
- Register LAN switch blades
- Configure VLANs on LAN switch blades

2.3.1 Registering Chassis

This section explains how to register a chassis.

Registering chassis makes it possible to use the optional power monitoring settings.

When collecting power data, perform the power data collection settings according to "[3.7.1 Changing Environmental Data Settings](#)".

For details on devices supporting power monitoring, refer to "1.5 Hardware Environment" of the "Setup Guide VE".

By registering a chassis, every server blade mounted in the chassis will be automatically detected and displayed as an unregistered server in the server resource tree. Register these managed servers individually.

For details on registering servers to manage, refer to "[2.3.2 Registering Blade Servers](#)".

Use the following procedure to register a chassis:

1. In the ROR console server resource tree, right-click "Server Resources", and select [Register]-[Chassis] from the popup menu.

The [Register Chassis] dialog is displayed.

2. To use this feature, the following settings must first be defined:

Admin LAN (IP address)

Enter the IP address that was set on the chassis management blade.

Use standard period notation.

Chassis name

Enter a name to assign to this chassis.

Enter up to 10 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

SNMP Community

Enter the SNMP community that was set on the chassis management blade.

Either select "public" or enter an arbitrary string.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

3. Click <OK>.

The mounted chassis will be displayed under the server resource tree.

Any server blade mounted within this chassis will be detected automatically and shown as: "*chassis_name*-

Slot_number[Unregistered]".

The only operation available for those unregistered server blades is server registration, while the ROR console can only display their hardware statuses and properties.

If the manager is installed on one of those server blades, this blade will be shown as: "*chassis_name-Slot_number*[Admin Server]".

In that case, server registration will not be available for the admin server, but its hardware status and properties will be displayed in the ROR console.


2.3.2 Registering Blade Servers

To register a blade server (PRIMERGY BX series), a PRIMEQUEST server or a SPARC Enterprise M4000/M5000/M8000/M9000 server, its enclosing chassis must be registered first.

When using VIOM for I/O virtualization, VIOM server profiles should be registered in advance according to the procedure described in "2.1.1 Registering VIOM Server Profiles".

To register blade servers other than PRIMERGY BX servers, refer to "2.4 When using Rack Mount and Tower Servers".

Figure 2.1 Status Transition Diagram for Managed Servers

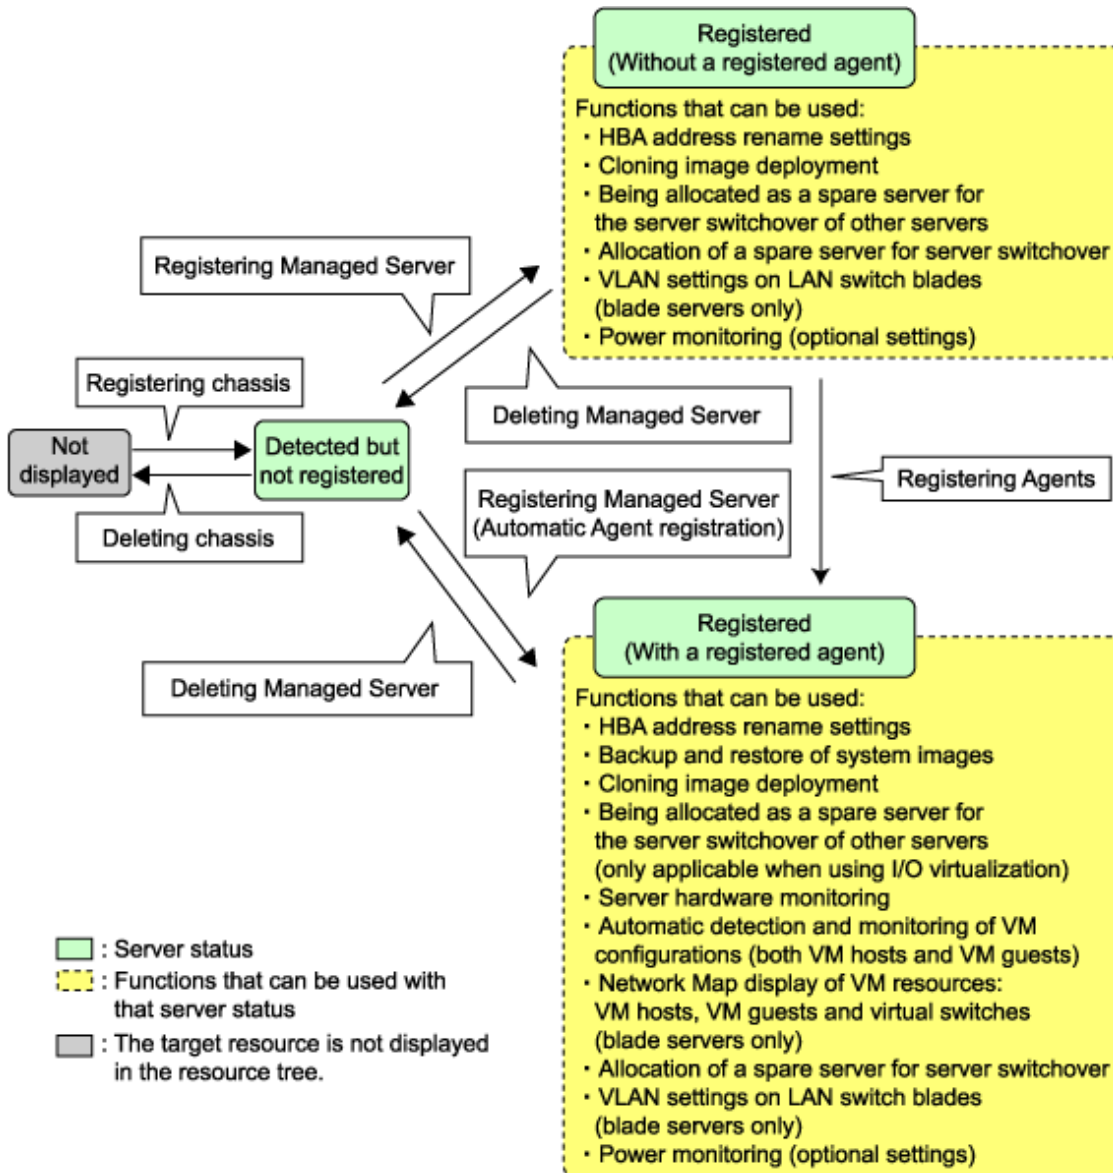

Use the following procedure to register blade servers.

1. In the ROR console server resource tree, right-click an unregistered server blade or partition in the target chassis, and select [Register]-[Server] from the popup menu.

The [Register Server] dialog is displayed.

2. To use this feature, the following settings must first be defined:

Physical Server Name

Enter a name to assign to this physical server.

Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

"Register agent" checkbox

Only displayed for SPARC Enterprise M4000/M5000/M8000/M9000 servers.

- Without Agent Registration

Automatic registration of agents is not performed after server registration.

After registering servers, register agents as required.

- With Agent Registration

Agents are automatically registered after server registration is completed.

Admin LAN (IP address)

Enter the IP address used by this server on the admin LAN.

When IP address is displayed

Entering an admin LAN (IP address) is not required.

Agents are automatically registered.

Note

- If ServerView Agents (mandatory software) is not running, "Message number 67231" will be displayed. In this case, server registration succeeds but the agent is not registered.

For details on the appropriate corrective action, refer to "Message number 67231" in the "Messages VE".

- If the admin LAN (IP address) of servers not running a physical OS or a VM host are displayed, old information may have been being displayed. After cancelling registration of the server, right-click the chassis on the server resource tree and select [Update] from the popup menu to request an update of hardware properties. The IP address is updated to the correct value (it takes several seconds to obtain the information and to update).

When IP address is not displayed

Enter the IP address of this server's admin LAN network interface.

The Agent will not be registered automatically, but can be manually registered after server registration if necessary. After registering servers, register agents as required.

Information

- When a physical OS and VM host are running on this server, the admin LAN (IP address) may be obtained automatically. After cancelling registration of the server, right-click the chassis on the server resource tree and select [Update] from the popup menu to request an update of hardware properties.

If the IP address is not shown after going through the above procedure, set it by manually entering the IP address and registering the server.

- IP addresses cannot be collected automatically, when the server is a SPARC Enterprise M4000/M5000/M8000/M9000 server. After entering the IP addresses manually, register the servers.

Server OS category

This option is displayed if the target server runs a physical OS or VM host.

Select the appropriate server OS category (Physical OS or VM host).

Selecting "VM Host" activates the user name and password input fields. Those refer to the user name and password entered during installation of this VM host.

- For a Physical OS

Select "Windows/Linux" or "Solaris"(only SPARC Enterprise M4000/M5000/M8000/M9000 servers).

- For a VM host

Select "VM Host", and enter the VM host login account information.

This login account information will be used by Resource Orchestrator to control and communicate with the registered VM host.

User name

Enter the user name to log in to the VM host. Specify a user name that has VM host administrator authority.

Password

Enter the password of the user to log in to the VM host.

Boot option

Only set this when the manager is Windows and the targets of operations are PRIMEQUEST servers. Specify the boot option configured from BIOS when installing the OS.

- For UEFI

Select "UEFI".

- For Legacy Boot

Select "Legacy boot".

By default, "UEFI" is selected.

These settings can be changed after server registration.

For details on how to modify these settings, refer to "[3.2.10 Changing Boot Options](#)".

"Apply Admin LAN NIC settings" checkbox

The checkbox is displayed only for blade servers (PRIMERGY BX servers).

- When not changing the Admin LAN NIC settings

NIC1 (Index1) and NIC2 (Index2) are used, without changing the NICs used for the admin LAN, the HBA address rename setup service, or for redundancy of the admin LAN.

- When changing the Admin LAN NIC settings

NIC1 (Index1) and NIC2 (Index2) are used as the NICs for the admin LAN, the HBA address rename setup service, and redundancy of the admin LAN.

Select the NICs to use from Admin LAN (MAC address1) and Admin LAN (MAC address2).

Admin LAN (MAC address 1)

Displayed when the "Apply Admin LAN NIC settings" checkbox is selected.

Select the NIC to use for the admin LAN. The IP address allocated to the selected NIC is displayed in "Admin LAN (IP address)".

When an IP address is not allocated, specify the admin LAN (IP address) of the server to register.

Admin LAN (MAC address 2)

Displayed when the "Apply Admin LAN NIC settings" checkbox is selected.

Select the NICs used for the HBA address rename setup service or for admin LAN redundancy.

For the following cases, select the "Disable MAC address 2".

- When not using the HBA address rename setup service
- When not performing admin LAN redundancy

Note

- For details about the network interface(s) used on the admin LAN, refer to "4.2.1 Network Configuration" of the "Setup Guide VE".
If an incorrect network interface is used, Resource Orchestrator will not be able to detect the correct admin LAN IP address from the operating system running on the target server.
An admin LAN IP address is required even when registering a spare server.
Enter an IP address that does not conflict with the IP address of any other managed server on the admin LAN.
- When registering a newly-mounted PRIMERGY BX900 server, as recognition of this server's admin LAN MAC address will take time, the error message "Message number 61142" may be displayed.
In this case, after registration has been canceled, right-click the chassis on the server resource tree and select [Update] from the popup menu to request an update of hardware properties. This will update the MAC address to the correct value. This may also take a few minutes to obtain hardware information and update internal properties.
Confirm that the correct MAC address is displayed correctly before registering the server again.
For details on the appropriate corrective action, refer to "Message number 61142" in the "Messages VE".
- A server running a VM host can still be registered as a physical OS if its "Server OS category" is set to "Windows/Linux". A VM host server that was mistakenly registered as a physical OS should be deleted and re-registered as a VM host.
- The same NIC cannot be selected for "Admin LAN (MAC address 1)" and "Admin LAN (MAC address 2)".
- For the following cases, after selecting "Disable MAC address 2" for "Admin LAN (MAC address 2)", the lowest numbered NIC which is not used for "Admin LAN (MAC address 1)" is used for Admin LAN2.
 - When using the HBA address rename setup service
 - When performing admin LAN redundancy

3. Click <OK>.

The registered server will be displayed in the server resource tree.

Note

- When an agent is registered on a VM host, all VM guests running on that VM host are also registered automatically. Whenever a VM guest is created, modified, deleted, or moved on a registered VM host, the changes are automatically updated in the server resource tree.
- The VM guest name displayed in the ROR console is either the VM name defined in its server virtualization software or the host name defined in the guest OS.
The timing at which the host name of a guest OS is detected and displayed varies according to its server virtualization software. For details, refer to "E.3 Functional Differences between Products" of the "Setup Guide VE".
- It is recommended not to use duplicate names for physical OS's, VM hosts and VM guests. If duplicated names are used, those resources cannot be managed from the command-line.
- When registering a server on which the agent was installed, it is necessary to either reboot the server or restart its related services (explained in the "7.3 Starting and Stopping the Agent" of the "Setup Guide VE") after server registration. This step has to be done before running any image operation (system image backup or cloning image collection).
For details on how to restart the agent, refer to "7.3 Starting and Stopping the Agent" of the "Setup Guide VE".

2.3.3 Registering LAN Switch Blades

To register a LAN switch blade, its enclosing chassis must be registered first.

Use the following procedure to register a LAN switch blade.

1. In the ROR console server resource tree, right-click an unregistered LAN switch blade from the target chassis, and select [Register]-[LAN Switch] from the popup menu.
The [Register LAN Switch] dialog is displayed.

2. To use this feature, the following settings must first be defined:

LAN switch name

Enter the name to assign to this LAN switch blade.

Enter up to 15 characters, including alphanumeric characters (upper or lower case), underscores ("_"), and hyphens ("-").

Admin LAN (IP address)

Enter the admin LAN IP address that was set on this LAN switch blade.

Use standard period notation.

User name

Enter the name of a telnet user account that can log in to this LAN switch blade.

Password

Enter the password of the above telnet user account.

Administrative password

Enter the password of this LAN switch blade's telnet administrator account.

If the user name and the password of the administrator account for the LAN switch blade were set in "User name" and "Password", simply re-enter the same password in this field. In this case, Resource Orchestrator does not check whether the password entered here matches the password set on the LAN switch blade.

SNMP Community

Enter the SNMP community that was set on this LAN switch blade.

Either select "public" or enter an arbitrary string.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

3. Click <OK>.

The registered LAN switch blade will be displayed in the server resource tree.



A telnet connection is made when registering a LAN switch blade.

When telnet connection is disabled, enable it.

Refer to the manual of the relevant product.

Some models may have restrictions regarding the number of simultaneous connections. In this case, log out from other telnet connections.

If telnet is unavailable, the following features are also unavailable.

- Registration of LAN switch blades
- Changing of LAN switch blade settings
- Changing and setting the VLAN for LAN switch blades (internal and external connection ports)
- Restoration of LAN switch blades
- Server switchover (changing network settings while a server is switched over)

2.3.4 Configuring VLANs on LAN Switches

On managed LAN switch blades, VLANs should be set on both internal ports (those connected to network interfaces on managed servers) and external ports (those connected to external, adjacent LAN switches).



VLANs cannot be configured on PRIMERGY BX 900 and BX 400 LAN switch blades operating in IBP mode.

2.3.5 Configuring VLANs on External Ports

Use the following procedure to configure VLANs on a LAN switch blade's external ports.

1. In the ROR console server resource tree, right-click the target LAN switch blade and select [Modify]-[Network Settings] from the popup menu.

The [VLAN Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

VLAN

Specify the VLAN ID to assign to a LAN switch blade port.

Adding a new VLAN ID

- a. Under VLAN, select "Create new".
- b. Enter a VLAN ID number.
For details on VLAN IDs, refer to the manual of the LAN switch blade to be used.

Modifying an existing VLAN ID

- a. Under VLAN, select "Change".
- b. Select a VLAN ID.

Physical Port and Link Aggregation

Select port numbers to configure or VLAN types of link aggregation group names ("Untagged" or "Tagged").

3. Click <OK>.

Check that the VLAN has been set.

4. Select the LAN switch blade in the server resource tree of the ROR console and display the "Resource Details Tab" window. Check in "VLAN Area" in the "Resource Details Tab" window that it displays the VLAN information.

2.3.6 Configuring VLANs on Internal Ports

Use the following procedure to configure VLANs on a LAN switch blade's internal ports.

1. In the ROR console server resource tree, right-click the target server (or the physical OS or VM host on the server), and select [Modify]-[Network Settings] from the popup menu.

The [Network Settings] dialog is displayed.

2. Select the index of the network interface for which to assign a VLAN ID, and click <Setting>.

The [VLAN Configuration] dialog is displayed.

3. To use this feature, the following settings must first be defined:

Port VLAN

VLAN ID

Enter the VLAN ID to assign to the LAN switch blade port that is connected to the network interface selected in step 2.

Tagged VLAN

VLAN ID

Enter the tagged VLAN ID(s) to assign to the LAN switch blade port that is connected to the network interface selected in step 2.

Multiple VLAN IDs can be entered by separating them with commas (",").

4. Click <OK>

Note that the VLAN settings are not applied onto the LAN switch blade at this stage. To configure VLANs for multiple network interfaces, repeat 2 through 4.

5. Confirm the configuration set in the [Network Settings] dialog.
6. Click <OK>.

VLAN settings are applied to the related LAN switch blade.

Note

The VLAN configuration of a registered LAN switch blade should be set from the ROR console instead of the LAN switch's own Web-based and command-based interfaces.

If the Port VLAN ID field is left blank and a value is entered for Tagged VLAN ID in the [VLAN Configuration] dialog, the tagged LAN only will be enabled. To enable a port VLAN, enter a value for Port VLAN ID.

When only a tagged VLAN is configured, the value for the port VLAN is not displayed on the ROR console even if it has been configured on the switch. For the devices for which port VLANs cannot be deleted, it is necessary to limit the frames that let ports pass through to the tagged frames only.

If the port VLAN ID is unspecified or 1, a tagged VLAN ID cannot be set to 1.

2.4 When using Rack Mount and Tower Servers

This section explains how to register resources when using rack mount or tower servers.


When using rack mount or tower servers, use the following procedure to register resources:

- Register Rack Mount or Tower Servers
- Register LAN switches

2.4.1 Registering Rack Mount or Tower Servers

This section explains how to register a rack mount or tower server.

Figure 2.2 Status Transition Diagram for Managed Servers

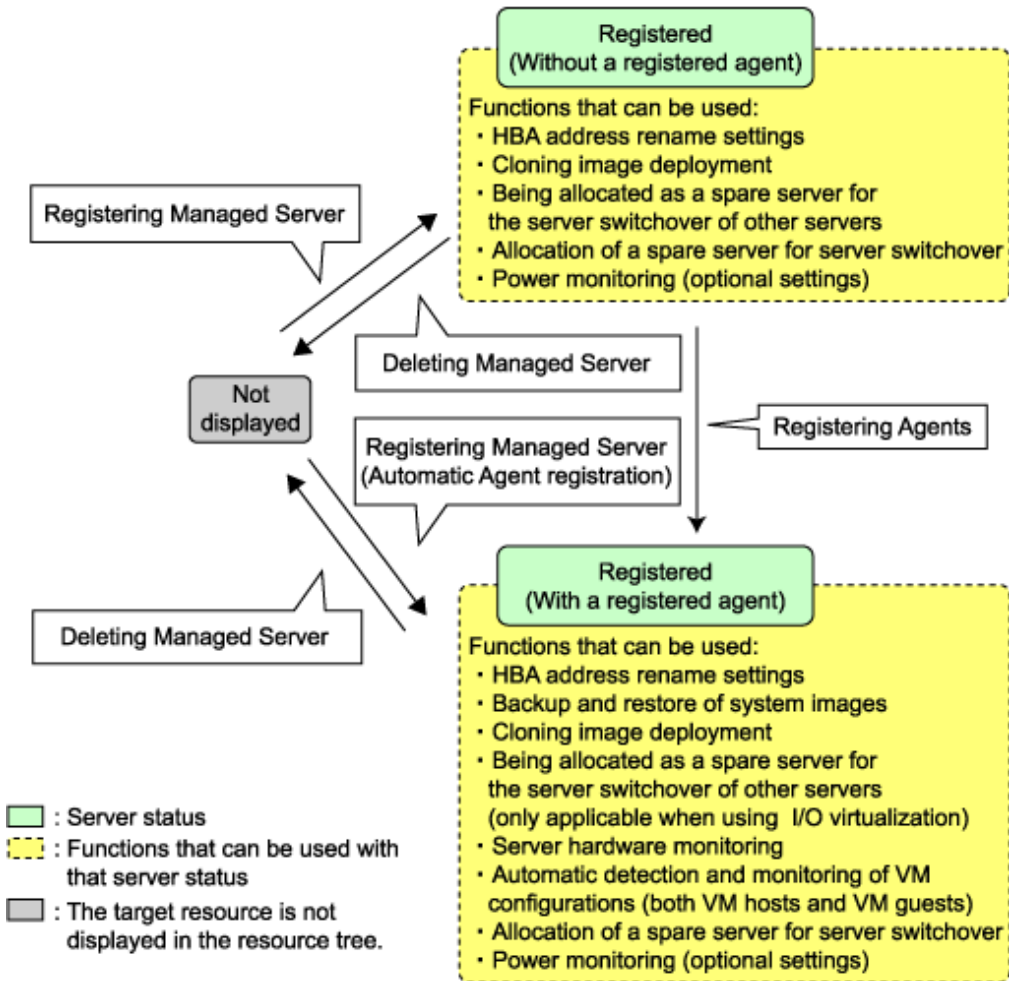

Use the following procedure to register rack mount or tower servers:

1. In the ROR console server resource tree, right-click "Server Resources", and select [Register]-[Server] from the popup menu. The [Register Server] dialog is displayed.
2. To use this feature, the following settings must first be defined:
 Enter items differ depending on whether the "Register agent" checkbox is selected, as described below.
 If this checkbox is checked, agents will be registered after server registration.
 If this checkbox is not checked, registration of agents will not be performed, so register agents after server registration when necessary.

Without Agent Registration

- Physical server name
- Remote management controller
 - IP address
 - User name
 - Password
- Association with server management software (ServerView)
 - Enable/Disable
 - SNMP Community

- Admin LAN
 - IP address
 - MAC address (NIC1)
- SAN Boot/Admin LAN Redundancy
 - MAC address (NIC2)

Automatic registration of agents is not performed after server registration. After registering servers, register agents as required.

With Agent Registration

- Physical server name
- Remote management controller
 - IP address
 - User name
 - Password
- Association with server management software (ServerView)
 - Enable/Disable
 - SNMP Community
- Admin LAN
 - IP address
- Admin LAN Redundancy
 - MAC address (NIC2)
- Server OS
 - Category

Agents are automatically registered after server registration is completed.

Physical Server Name

Enter a name to assign to this physical server.

Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

Remote management controller

IP address

Enter the IP address of this server's remote management controller.

User name

Enter the name of a remote management controller user account with administrative authority over this server.

Enter up to 16 characters, including alphanumeric characters and symbols (ASCII characters 0x20 to 0x7e).

Password

Enter the password of the above remote management controller user account.

Enter up to 16 characters, including alphanumeric characters and symbols (ASCII characters 0x20 to 0x7e).

This field can be omitted if no password has been set for this user account.

Association with server management software (ServerView)

Enable/Disable

For PRIMERGY BX servers

Select "Enable" and enter an "SNMP Community".

For servers other than PRIMERGY servers

Select "Disable".

By default, "Enable" is selected.

SNMP Community

Enter the SNMP community that was set on this server.

Either select "public" or enter an arbitrary string.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

Admin LAN

IP address

Enter the IP address used by this server on the admin LAN.

MAC address (NIC1)

Enter the MAC address of this server's admin LAN network interface.

Enter a MAC address in either one of the following two formats: hyphen-delimited ("xx-xx-xx-xx-xx-xx"), or colon-delimited ("xx:xx:xx:xx:xx:xx").

MAC addresses will be automatically detected when the "Register agent" checkbox is selected.

SAN Boot/Admin LAN Redundancy

MAC address (NIC2)

Enter the MAC address of the second admin LAN network interface. This network interface is to be used by the HBA address rename setup service, or to enable admin LAN redundancy on the registered server.

Enter a MAC address in either one of the following two formats: hyphen-delimited ("xx-xx-xx-xx-xx-xx"), or colon-delimited ("xx:xx:xx:xx:xx:xx").

This field can be omitted in the following cases.

- When not using the HBA address rename setup service
- When not using GLS for admin LAN redundancy on the managed server
- For a spare server whose primary servers are not using admin LAN redundancy

Admin LAN Redundancy

MAC address (NIC2)

Enter the MAC address of the second admin LAN network interface. This network interface will be used to enable admin LAN redundancy on the registered server.

Enter a MAC address in either one of the following two formats: hyphen-delimited ("xx-xx-xx-xx-xx-xx"), or colon-delimited ("xx:xx:xx:xx:xx:xx").

This field can be omitted in the following cases.

- When not using GLS for admin LAN redundancy on the managed server
- For a spare server whose primary servers are not using admin LAN redundancy

Server OS

Category

This option is displayed if the target server runs a physical OS or VM host.

Select the appropriate server OS category (Physical OS or VM host).

Selecting "VM Host" activates the user name and password input fields. Those refer to the user name and password entered during installation of this VM host.

For a Physical OS

Select "Windows/Linux".

For a VM host

Select "VM Host", and enter the VM host login account information.

This login account information will be used by Resource Orchestrator to control and communicate with the registered VM host.

User name

Enter the user name to log in to the VM host. Specify a user name that has VM host administrator authority.

Password

Enter the password of the user to log in to the VM host.

Note

- For details about the network interface(s) used on the admin LAN, refer to "4.2.1 Network Configuration" of the "Setup Guide VE".
If an incorrect network interface is used, Resource Orchestrator will use a wrong MAC address for the admin LAN.
An admin LAN IP address is required even when registering a spare server.
Enter an IP address that does not conflict with the IP address of any other managed server on the admin LAN.
- A server running a VM host can still be registered as a physical OS if its "Category" of "Server OS" is set to "Windows/Linux".
A VM host server that was mistakenly registered as a physical OS should be deleted and re-registered as a VM host.
- When registering rack mount servers on which VMware ESXi is operating, select "Disable" for "Association with server management software (ServerView)" even when using PRIMERGY servers, and do not select "Register agent" checkbox.
After registering servers, register agents as required.

3. Click <OK>.

The registered server will be displayed in the server resource tree.

Note

- After registering the server, please verify that the information registered for the remote management controller is correct. This can be verified by trying out power operations (from Resource Orchestrator) against that server. Refer to "Chapter 6 Power Control" in the "Operation Guide VE" for details on power operations.
- When using HBA address rename setup service, please confirm that the registered server can boot properly using the HBA address rename setup service.
If the server cannot be booted properly, ensure that the specified MAC address (NIC2) is correct.
- When an agent is registered on a VM host, all VM guests running on that VM host are also registered automatically. Whenever a VM guest is created, modified, deleted, or moved on a registered VM host, the changes are automatically updated in the server resource tree.
- The VM guest name displayed in the ROR console is either the VM name defined in its server virtualization software or the host name defined in the guest OS.
The timing at which the host name of a guest OS is detected and displayed varies according to its server virtualization software. For details, refer to "E.3 Functional Differences between Products" of the "Setup Guide VE".
- It is recommended not to use duplicate names for physical OS's, VM hosts and VM guests. If duplicated names are used, those resources cannot be managed from the command-line.
- When registering a server on which the agent was installed, it is necessary to either reboot the server or restart its related services (explained in the "7.3 Starting and Stopping the Agent" of the "Setup Guide VE") after server registration. This step has to be done before running any image operation (system image backup or cloning image collection).
For details on how to restart the agent, refer to "7.3 Starting and Stopping the Agent" of the "Setup Guide VE".

2.4.2 Registering LAN Switches

Use the following procedure to register LAN switches:

1. Discover LAN switches. For instructions, refer to "[Discovery](#)".
2. Register LAN switches displayed in the network device tree. For instructions, refer to "[Registration](#)".

Discovery

1. From the ROR console menu, select [Tools]-[Topology]-[Discover LAN switches].
The [Discover LAN Switches] dialog is displayed.

2. To use this feature, the following settings must first be defined:

Start address

Enter the start IP address of the network where to discover LAN switches.
Use standard period notation.

Subnet mask

Enter the subnet mask of the network where to discover LAN switches.
Use standard period notation.

Addresses in range

Enter the number of addresses to scan for LAN switches.
Enter a number greater than 1.
The maximum number of addresses is determined by the number of hosts allowed by the subnet mask.



Example

.....
If subnet mask is "255.255.255.0", the number of addresses in the specified range could be any value between 1 and 256.
.....

SNMP Community

Enter the SNMP community that was set on this LAN switch.
Either select "public" or enter an arbitrary string.
Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

3. Click <OK>.

Resource Orchestrator starts scanning for LAN switches within the specified network range.
Discovered LAN switches will be displayed under the network device tree with the status "[Unregistered]".

Registration

1. In the ROR console network device tree, right-click a discovered LAN switch, and select [Register]-[LAN Switch] from the popup menu.

The [Register LAN Switch] dialog is displayed.

2. To use this feature, the following settings must first be defined:

LAN switch name

Enter the name to assign to this LAN switch blade.
Enter up to 32 characters, including alphanumeric characters (upper or lower case), underscores ("_"), hyphens ("-"), or periods (".").
By default, the name of a discovered LAN switch will be set to its system name or to its IP address if the system name could not be detected.

SNMP Community

Enter the SNMP community that was set on this LAN switch.
Either select "public" or enter an arbitrary string.
Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

3. Click <OK>.

The registered LAN switch will be displayed in the network device tree.



Note

It is possible to set an automatically detected IP address to another unregistered LAN switch. However, this will result in the Resource Orchestrator configuration being inconsistent with the actual network configuration.

If a LAN switch was registered with the IP address of another network device, delete the registered LAN switch following the instructions given in "[5.4.2 Deleting LAN Switches](#)", then perform Discover and Register again.

2.5 When using PRIMEQUEST Servers

This section explains how to register resources when using PRIMEQUEST servers.

- Registering Chassis (For PRIMEQUEST Servers)
- Registering PRIMEQUEST Servers

2.5.1 Registering Chassis (For PRIMEQUEST Servers)

By registering a chassis, every partition mounted in the chassis will be automatically detected and displayed as an unregistered server in the server resource tree. Register these managed servers individually.

For details on registering servers, refer to "[2.5.2 Registering PRIMEQUEST Servers](#)".

Use the following procedure to register a chassis:

1. In the ROR console server resource tree, right-click "Server Resources", and select [Register]-[PRIMEQUEST] from the popup menu.

The [Register Chassis] dialog is displayed.

2. To use this feature, the following settings must first be defined:

Admin LAN (IP address)

Enter the virtual IP address that was set on the chassis management board.

Use standard period notation.

Chassis name

Enter a name to assign to this chassis.

Enter up to 10 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

SNMP Community

Enter the SNMP community that was set on the chassis management board.

Either select "public" or enter an arbitrary string.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

Remote server management

User name

Enter the name of a remote server management user account with administrative authority over this managed server.

This user name must be between 8 and 16 alphanumeric characters long.

A user name with at least administrator privileges within the remote server management must be specified.

Password

Enter the password of the above remote server management user account.

This password must be between 8 and 16 alphanumeric characters long.



Note

The "User name" and "Password" of "Remote server management" are different from the user name and password used to log in on the Web-UI for management board.

3. Click <OK>.

The mounted chassis will be displayed under the server resource tree.

Any partition mounted within this chassis will be detected automatically and shown as: "*chassis_name-partition_number*[Unregistered]".

The only operation available for those unregistered partitions is server registration, while the ROR console can only display their hardware statuses and properties.

If the manager is installed on one of those partitions, this partition will be shown as: "*chassis_name-partition_number*[Admin Server]".

In that case, server registration will not be available for the admin server, but its hardware status and properties will be displayed in the ROR console.

2.5.2 Registering PRIMEQUEST Servers

For details on PRIMEQUEST server registration, refer to "[2.3.2 Registering Blade Servers](#)".

2.6 When using SPARC Enterprise Servers

This section explains how to register resources when using SPARC Enterprise servers.

- Registering SPARC Enterprise M4000/M5000/M8000/M9000 Servers
- Registering SPARC Enterprise (M3000/T Series) Servers

2.6.1 Registering SPARC Enterprise M4000/M5000/M8000/M9000 Servers

By registering a chassis, every partition mounted in the chassis will be automatically detected and displayed as an unregistered server in the server resource tree. Register these managed servers individually.

For details on registering managed servers, refer to "[2.6.2 Registering SPARC Enterprise \(M3000/T Series\) Servers](#)".

Use the following procedure to register a chassis:

1. In the ROR console server resource tree, right-click "Server Resources", and select [Register]-[SPARC Enterprise (Partition Model)] from the popup menu.

The [Register Chassis] dialog is displayed.

2. To use this feature, the following settings must first be defined:

Admin LAN (IP address)

Enter the IP address of the XSCF of the target chassis.

Use standard period notation.

Chassis name

Enter a name to assign to this chassis.

Enter up to 10 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

SNMP Community

Enter the SNMP community of the XSCF used to manage the target chassis.

Either select "public" or enter an arbitrary string.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

Remote management controller (XSCF)

User name

Enter the name of an XSCF user account with administrative authority over the target chassis.

Enter a string of up to 31 alphanumeric characters, hyphens ("-"), and underscores ("_"). This name must start with an alphabet character.

This user should have "platadm" privileges for XSCF.

Password

Enter the password of an XSCF user account with administrative authority over the target chassis.

Enter up to 32 characters, including alphanumeric characters, blank spaces (" "), and any of the following symbols.
"! ", "@ ", "# ", "\$ ", "% ", "^ ", "& ", "* ", "[", "]" ", "{ ", "}" ", "(", ")" ", "-" ", "+" ", "=" ", "~ ", "_" ", "> ", "< ", "/" ", "" ", "?" ", ";" ", ":" "

3. Click <OK>.

The mounted chassis will be displayed under the server resource tree.

Any partition mounted within this chassis will be detected automatically and shown as: "*chassis_name-partition_number*[Unregistered]".

The only operation available for those unregistered partitions is server registration, while the ROR console can only display their hardware statuses and properties.

2.6.2 Registering SPARC Enterprise (M3000/T Series) Servers

This section explains the method for registering SPARC Enterprise (M3000/T series) servers.

Use the following procedure to register SPARC Enterprise (M3000/T series) servers:

1. In the ROR console server resource tree, right-click "Server Resources", and select [Register]-[SPARC Enterprise (M3000/T series)] from the popup menu.

The [Register SPARC Enterprise] dialog is displayed.

2. To use this feature, the following settings must first be defined:

- Physical Server Name
- "Register agent" checkbox
- Remote management controller (ILOM/XSCF)
 - Controller Type
 - IP address
 - User name
 - Password
 - SNMP Community
- Admin LAN
 - IP address

With Agent Registration

- Server OS
 - Category
 - User name
 - Password

Physical Server Name

Enter a name to assign to this physical server.

Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

"Register agent" checkbox

- Without Agent Registration

Automatic registration of agents is not performed after server registration.
After registering servers, register agents as required.
- With Agent Registration

Agents are automatically registered after server registration is completed.

Remote management controller (ILOM/XSCF)

For SPARC Enterprise M3000 servers

Controller Type

Select "XSCF".

IP address

Enter the IP address of this server's remote management controller (XSCF).

User name

Enter the name of a XSCF user account with administrative authority over this server.

Enter up to 31 characters, including alphanumeric characters, underscores ("_"), or hyphens ("-"). This name should start with an alphabet character.

This user should have "platadm" privileges for XSCF.

Password

Enter the password of the above XSCF user account.

Enter up to 32 characters, including alphanumeric characters, blank spaces (" "), and any of the following symbols.

"! ", "@ ", "# ", "\$ ", "% ", "^ ", "& ", "* ", "[", "]" ", "{" ", "}" ", "(" ", ")" ", "-" ", "+" ", "=" ", "~ ", " ", "> ", "< ", "/" ", "" ", "?" ", ";" ", ":" "

SNMP Community

Enter the SNMP community that was set on this server's remote management controller (XSCF).

Either select "public" or enter an arbitrary string.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

For SPARC Enterprise T servers

Controller Type

Select "ILOM".

IP address

Enter the IP address of this server's remote management controller (ILOM).

User name

Enter the name of an ILOM user account with administrative authority over this server.

Enter between 4 and 16 characters, including alphanumeric characters, underscores ("_"), or hyphens ("-"). This name should start with an alphabet character.

This user should have "Admin" privileges for ILOM.

Password

Enter the password of the above ILOM user account.

Enter between 8 and 16 characters, including alphanumeric characters, blank spaces (" "), and any of the following symbols.

"! ", "@ ", "# ", "\$ ", "% ", "^ ", "& ", "* ", "[", "]" ", "{" ", "}" ", "(" ", ")" ", "-" ", "+" ", "=" ", "~ ", " ", "> ", "< ", "/" ", "" ", "?" ", ";" ", ":" "

SNMP Community

Enter the SNMP community name of this server's remote management controller (ILOM).

Either select "public" or enter an arbitrary string.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

Admin LAN

IP address

Enter the IP address used by this server on the admin LAN.

Server OS

Category

Select the appropriate server OS category (Physical OS or VM host).
Selecting "Solaris Containers" activates the user name and password input fields.
Those refer to the user name and password entered during installation of this VM host.

For a Physical OS

Select "Solaris".

For a VM host

Select "Solaris Containers", and enter the VM host login account information.
This login account information will be used by Resource Orchestrator to control and communicate with the registered VM host.

User name

Enter the user name to log in to the VM host.
Specify a user name that has VM host administrator authority.
Enter up to 466 characters, including alphanumeric characters, underscores ("_"), periods ("."), or hyphens ("-"). This name should start with an alphabet character.

Password

Enter the password of the user to log in to the VM host.
Enter up to 256 characters, including alphanumeric characters, blank spaces (" "), and symbols.

3. Click <OK>.

The registered server will be displayed in the server resource tree.



After registering the server, please verify that the information registered for the remote management controller is correct. This can be verified by trying out power operations (from Resource Orchestrator) against that server. Refer to "Chapter 6 Power Control" in the "Operation Guide VE" for details on power operations.

2.7 Registering Power Monitoring Devices

This section explains how to register power monitoring devices.

Registering power monitoring devices (PDU or UPS) enables monitoring of power consumption.

Use the following procedure to register power monitoring devices.

1. In the ROR console power monitoring device tree, right-click "Power Monitoring Devices" and select [Register]-[Power Monitoring Device] from the popup menu.

The [Register Power Monitoring Device] dialog is displayed.

2. To use this feature, the following settings must first be defined:

Device name

Enter a name to assign to this power monitoring device. When exporting power consumption data, use this name to select power monitoring devices for which to export data.

Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

Admin LAN (IP address)

Enter the IP address that was set on this power monitoring device. This IP address will be used to collect power consumption data from this power monitoring device.

SNMP Community

Enter the SNMP community that was set on this power monitoring device.

Either select "public" or enter an arbitrary string.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").
This SNMP community will be used to collect power consumption data from this power monitoring device (via SNMP protocol).

Voltage

Enter the voltage (V) supplied to this power monitoring device. Enter a number between 10 and 999. Power consumption data is calculated using the electrical current value obtained from this power monitoring device and its specified voltage.

Comments

Enter a comment that describes this power monitoring device.
Enter up to 128 alphanumeric characters or symbols (ASCII characters 0x20 to 0x7e).



Note

A line break is counted as one character.

3. Click <OK>.

The registered power monitoring device will be displayed under the power monitoring devices tree.

If collection of power data is disabled in the option settings, data will not be collected even if power monitoring devices are registered. Change power data collection settings according to "[3.7.1 Changing Environmental Data Settings](#)".



Note

Resource Orchestrator is not aware of the relationship between power monitoring devices and actual server resources. Make sure to register the power monitoring devices that are connected to the server resources for which you want to monitor power consumption.

2.8 Registering Admin LAN Subnets [Windows]

This section explains how to perform admin LAN subnet registration.

Registering admin LAN subnets enables management of managed servers belonging to subnets other than that of the admin LAN.

Use the following procedure to register an admin LAN subnet.

1. From the ROR console menu, select [Settings]-[Admin LAN Subnet].

The [Admin LAN Subnet] dialog is displayed.

2. Click <Add>.

The [Add Admin LAN Subnet] dialog is displayed.

3. To use this feature, the following settings must first be defined:

Subnet name

Set the subnet name for registration.

Enter a character string beginning with an alphabetic character and containing up to 16 alphanumeric characters, underscores ("_"), hyphens ("-"), and periods (".").

Network address

Configure the network address of the subnet used as the admin LAN.

Enter valid values for the network address.

Subnet mask

Enter valid values for the subnet mask.

Gateway

Enter the settings for the gateway used for communication with the admin server on the admin LAN.

4. Click <OK>.

Information

When registering an admin LAN subnet for the first time, change the simplified DHCP service for Resource Orchestrator to the Windows standard DHCP Server.

Resource Orchestrator takes exclusive possession of the Windows standard DHCP Server.

Note

- It is necessary to perform network settings for each admin LAN subnet so that managed servers belonging to subnets other than the admin LAN can communicate with the admin server.

For details on how to configure the network settings, refer to "4.2.6 Configuring the Network Environment" of the "Setup Guide VE".

- In a clustered manager configuration, when registering an admin LAN subnet for the first time, perform "[Settings for Clustered Manager Configurations](#)".

Settings for Clustered Manager Configurations

The following configuration is necessary only when registering an admin LAN subnet for the first time.

Information

When configuring a cluster system in an environment that already has an admin LAN registered, perform steps 5. to 10. and 13.

1. Allocate the shared disk to the primary node.

In the Failover Cluster Management tree, right-click [Services and Applications]-[RC-manager], and select [Move this service or application to another node]-[1 - Move to node *node_name*].

The name of the primary node is displayed in *node_name*.

2. Delete the registry replication settings from the following "Services and Applications" of the manager.

Based on the following table, delete registry replication for the resources.

- For x64 Architectures

Resources for Deletion	Registry Key
Deployment Service	[HKEY_LOCAL_MACHINE]\SOFTWARE\Wow6432Node\Fujitsu\SystemcastWizard\ResourceDepot
	[HKEY_LOCAL_MACHINE]\SOFTWARE\Wow6432Node\Fujitsu\SystemcastWizard\DatabaseBroker\Default
PXE Services	[HKEY_LOCAL_MACHINE]\SOFTWARE\Wow6432Node\Fujitsu\SystemcastWizard\DHCP
	[HKEY_LOCAL_MACHINE]\SOFTWARE\Wow6432Node\Fujitsu\SystemcastWizard\PXE\ClientBoot\

- For x86 Architectures

Resources for Deletion	Registry Key
Deployment Service	[HKEY_LOCAL_MACHINE]\SOFTWARE\Fujitsu\SystemcastWizard\ResourceDepot

Resources for Deletion	Registry Key
	[HKEY_LOCAL_MACHINE]\SOFTWARE\Fujitsu\SystemcastWizard\ \DatabaseBroker\Default
PXE Services	[HKEY_LOCAL_MACHINE]\SOFTWARE\Fujitsu\SystemcastWizard\DHCP
	[HKEY_LOCAL_MACHINE]\SOFTWARE\Fujitsu\SystemcastWizard\PXE\ \ClientBoot\

Perform the above settings for each resource.

- a. In the [Failover Cluster Management] window, right-click the target resource in "Summary of RC-manager"- "Other Resources", and select [Properties] from the popup menu.
The [*Target_resource* Properties] window is displayed.
 - b. From the "Root Registry Key" displayed on the [Registry Replication] tab, select the above registry keys and click <Remove>.
The selected key is removed from "Root Registry Key".
When deleting the second registry key, repeat step b.
 - c. Click <Apply>.
The settings are applied.
 - d. Click <OK> to close the dialog.
3. Take the following services of the "Services and Applications" for the manager offline.
 - Deployment Service
 - TFTP Service
 - PXE Services
 4. Register an admin LAN subnet.
 5. On the primary node, bring the shared disk of the manger online, and take all other cluster resources offline.
 6. From the Windows Control Panel, open "Administrative Tools". Then, open the [Services] window and set the startup type of the DHCP Server to "Manual".
 7. From the [Services] window, stop the DHCP Server service.
 8. Using Explorer, copy the following folder from the local disk of the primary node to the folder on the shared disk.

Local Disk (Source)	Shared Disk (Destination)
%SystemRoot%\System32\dhcp	<i>Drive_name</i> :Fujitsu\ROR\SVROR\dhcp

Example

When the OS has been installed on the C drive, it is %SystemRoot% C:\Windows.

9. Configure access rights for the folder for the DHCP Server that was copied to the shared disk. Run the following command from the command prompt on the primary node.

```
>cacls Drive_name:Fujitsu\ROR\SVROR\dhcp /T /P "NT AUTHORITY\SYSTEM:F" "BUILTIN\Administrators:F" "NT SERVICE\DHCPServer:F" <RETURN>
```

10. Add the DHCP Server to "Services and Applications" for the manager.
 - a. Right-click [Services and Applications]-[RC-manager], and select [Add a resource]-[Other Resources]-[1 - Add a DHCP Service] from the displayed menu.
A "New DHCP Service" will be created in the "DHCP Service" in "Summary of RC-manager".

- b. Right-click the "New DHCP Service", and select [Properties] from the popup menu.

The [New DHCP Service Properties] window is displayed.

- c. Change the "Resource Name" on the [General] tab, and set the paths given in the following table.

Item	Values to Set in the Dialog
Database path	<i>Drive_name:</i> \Fujitsu\ROR\SVROR\dhcp\
Monitoring file path	<i>Drive_name:</i> \Fujitsu\ROR\SVROR\dhcp\
Backup path	<i>Drive_name:</i> \Fujitsu\ROR\SVROR\dhcp\backup\

After making the settings, click <Apply>.

From here, the explanation is made assuming that "Resource Name" was set as "DHCP Server".

- d. On the "Resource" of the [Dependencies] tab, select the following name, and select AND from "AND/OR".

- Shared Disk
- Network Name
- Admin LAN (IP Address)

- e. Click <Apply>.

- f. Click <OK>.

11. Configure the registry replication settings from the following "Services and Applications" of the manager.

Following the table in step 2., set replication of the registry of the resource.

Perform the following procedure for each resource.

- a. In the [Failover Cluster Management] window, right-click the target resource in "Summary of RC-manager"- "Other Resources", and select [Properties] from the popup menu.

The [*Target_resource* Properties] window is displayed.

- b. In the [Registry Replication] tab, click <Add>.

The [Registry Key] dialog is displayed.

- c. Configure the above registry key in "Root registry key".

- d. Click <OK>.

When configuring the second registry key as well, repeat steps b. - d.

- e. After completing registry key settings, click <Apply>.

- f. Click <OK> to close the dialog.

12. Configure the dependencies of the resources under the "Services and Applications".

Configure the resource dependency based on the following table.

If some resources have been configured, select AND from "AND/OR" and add the dependent resource.

Resource for Configuration	Dependent Resource
PXE Services	DHCP Server

13. Restart the manager.

In the Failover Cluster Management tree, right-click [Services and Applications]-[RC-manager], and select [Bring this service or application online] from the displayed menu.

2.9 Registering ETERNUS SF Storage Cruiser

This section explains how to register ETERNUS SF Storage Cruiser.

Registering ETERNUS SF Storage Cruiser enables server switchover integrated with Fibre Channel switch zoning using ESC and host affinity reconfiguration on storage devices.

This operation is necessary when using server switchover (storage affinity switchover method) functions on managed servers (for Solaris) in SAN boot environments.

ETERNUS SF Storage Cruiser can be registered using the `rcxadm storagemgr register` command.

For details on the `rcxadm storagemgr register` command, refer to "5.9 `rcxadm storagemgr`" of the "Command Reference".

Chapter 3 Changing Resources

This section explains how to change settings for the admin server or resources registered on the admin server.

3.1 Changing Admin Server Settings

This section explains how to change the settings for the admin server.

3.1.1 Changing Admin IP Addresses

Use the following procedure to change the IP address used on the admin LAN by the admin server.

1. Log on to the admin server as the administrator.
2. Stop manager services.
Stop the manager, referring to "7.2 Starting and Stopping the Manager" in the "Setup Guide VE".
3. Change the SNMP trap destination set for the management blade and LAN switch blades.
Set the SNMP trap destination to the new IP address of the admin server.



Note

Depending on the LAN switch blade used, setting an SNMP trap destination may restrict SNMP access to that switch blade. In a clustered manager configuration, set the physical IP addresses of both the primary and secondary nodes as SNMP trap destinations.

If the LAN switch blade is set to only grant access from known IP addresses, be sure to give permissions to the physical IP addresses of both the primary and secondary cluster nodes, as is done with trap destination settings.

For details, refer to the manual of the LAN switch blade to be used.

4. Change the IP address set within the operating system.

Change the IP address following the instructions given in the operating system's manual.

If the admin LAN has been made redundant, change the admin IP address set in the following tools or products.

- PRIMECLUSTER GLS
- BACS
- Intel PROSet

Refer to the manual of each product for usage details.

In a clustered manager configuration, change the cluster IP address according to the instructions given in "[Changing the IP Address of a Clustered Manager](#)".

5. Change the IP address registered as the manager's admin IP address.

Use the `rcxadm mgrctl modify` command to set a new IP address.

[Windows]

```
>"Installation_folde\Manager\bin\rcxadm" mgrctl modify -ip IP_address <RETURN>
```

[Linux]

```
# /opt/FJSVrcvmr/bin/rcxadm mgrctl modify -ip IP_address <RETURN>
```

In a clustered manager configuration, for details on how to change the admin IP address registered for the manager, refer to "[Settings for Clustered Manager Configurations](#)".

6. Log in to the managed server with an OS administrator account.

7. Change ServerView Agents settings on the managed server.

Change the SNMP trap destination of the ServerView Agents. Refer to the ServerView Agent manual for details on changing SNMP trap settings.

8. Stop the agents on managed servers. [Windows/Hyper-V] [Linux/Xen/KVM]

Stop the agent referring to "7.3 Starting and Stopping the Agent" in the "Setup Guide VE".

9. Change Agent settings. [Windows/Hyper-V] [Linux/Xen/KVM]

Use the rcxadm agtctl modify command to set the new manager IP address.

[Windows/Hyper-V]

```
>"Installation_folder\Agent\bin\rcxadm" agtctl modify -manager IP_address <RETURN>
```

[Linux/Xen/KVM]

```
# /opt/FJSVrcxat/bin/rcxadm agtctl modify -manager IP_address <RETURN>
```

10. Restart the agents on managed servers. [Windows/Hyper-V] [Linux/Xen/KVM]

Start the agent referring to "7.3 Starting and Stopping the Agent" in the "Setup Guide VE".

11. Restart the manager.

Start the manager referring to "7.2 Starting and Stopping the Manager" in the "Setup Guide VE".

Repeat steps 6 to 11 for each managed server on which an agent is running.

12. Re-configure the HBA address rename setup service.

When using the HBA address rename function, change the IP address of the admin server that is set for the HBA address rename setup service according to "8.2.1 Settings for the HBA address rename Setup Service" of the "Setup Guide VE".

13. Back up managed servers.

If system image backups have already been collected from managed servers, it is recommended to update those images in order to reflect the changes made above. For details on system image backup, refer to "8.2 Backup" in the "Operation Guide VE".

System images backed up before changing the admin IP address of the admin server cannot be restored anymore after the change. It is recommended to delete all system images collected before change, unless those images are specifically needed.

14. Collect a cloning image. [Windows/Linux]

If cloning images have already been collected from managed servers, it is recommended to update those images to reflect the changed made above. For details on cloning image collection, refer to "7.2 Collecting a Cloning Image" of the "User's Guide VE".

Cloning images collected before changing the admin IP address of the admin server cannot be deployed anymore after the change. It is recommended to delete all cloning images collected before change, unless those images are specifically needed.

Note

- IP addresses belonging to registered admin LAN subnets cannot be changed.
- When a managed server belongs to the same subnet as the admin server, either delete the managed server or manually change the admin IP address of the managed server. Without changing the IP address of the managed server, it is not possible to register the information of the subnet the managed server belongs to, or change the information of the subnet.

Changing the IP Address of a Clustered Manager

In a clustered manager configuration, use the following procedure to change the IP address set within the operating system.

[Windows]

Change the IP address using the [Failover Cluster Management] window.

[Linux]

1. Stop the manager's cluster service.

Stop the manager's cluster service from the cluster administration view (Cluster Admin).

2. Log in to the admin server's primary node.

Log in to the operating system of the admin server's primary node with administration privileges.

3. Mount the shared disk on the primary node.

Mount the admin server's shared disk on the primary node.

4. Change takeover the logical IP address.

Release PRIMECLUSTER GLS virtual interface settings from the PRIMECLUSTER resource, then change the PRIMECLUSTER GLS configuration.

For details, refer to the PRIMECLUSTER Global Link Services manual.

5. Activate the takeover logical IP address.

Use the PRIMECLUSTER GLS command-line to activate the takeover logical IP address.

For details, refer to the PRIMECLUSTER Global Link Services manual.

Settings for Clustered Manager Configurations

In a clustered manager configuration, use the following procedure to register an IP address as the manager's admin LAN IP address.

[Windows]

1. Cancel registry replication settings.

On the primary node, bring online the shared disk and IP address, and take all other resources offline.

Next, remove the following registry key from the registry replication settings set for the "PXE Services" cluster resource.

- For x64 Architectures

SOFTWARE\Wow6432Node\Fujitsu\SystemcastWizard\DHCP

- For x86 Architectures

SOFTWARE\Fujitsu\SystemcastWizard\DHCP

Use the following procedure to remove the registry key.

- a. In the [Failover Cluster Management] window, right-click the "PXE Services" resource in "Summary of RC-manager"-"Other Resources", and select [Properties] from the popup menu.

The [PXE Services Properties] window is displayed.

- b. In the [Registry Replication] tab, select the above registry key.

- c. Click <Remove>.

The selected key is removed from the "Root registry key" list.

- d. After removing the registry key, click <Apply>.

- e. Click <OK> to close the dialog.

2. Change the manager IP address on the primary node.

On the primary node, use the rcxadm mgrctl modify command to set the new IP address.

```
>"Installation_folde\Manager\bin\rcxadm" mgrctl modify -ip IP_address <RETURN>
```


3. Restore registry replication settings.

Restore the registry key deleted in step 1. to the registry replication settings of the "PXE Services" resource.
Use the following procedure to restore the registry key.

- a. In the [Failover Cluster Management] window, right-click the "PXE Services" resource in "Summary of RC-manager"- "Other Resources", and select [Properties] from the popup menu.

The [PXE Services Properties] window is displayed.

- b. In the [Registry Replication] tab, click <Add>.

The [Registry Key] dialog is displayed.

- c. Configure the above registry key in "Root registry key".

- d. Click <OK>.

- e. After completing registry key settings, click <Apply>.

- f. Click <OK> to close the dialog.

4. Assign the manager's shared disk and IP address to the secondary node.

In the Failover Cluster Management tree, right-click [Services and Applications]-[RC-manager], and select [Move this service or application to another node]-[1 - Move to node *node_name*].

The name of the secondary node is displayed in *node_name*.

5. Change the manager IP address on the secondary node.

On the secondary node, use the `rcxadm mgrctl modify` command to set the new IP address.

Use the same IP address as the one set in step 2.

6. Assign the manager's shared disk and IP address to the primary node.

In the Failover Cluster Management tree, right-click [Services and Applications]-[RC-manager], and select [Move this service or application to another node]-[1 - Move to node *node_name*].

The name of the primary node is displayed in *node_name*.

7. On the primary node, take the manager's shared disk and IP address offline.

[Linux]

1. Change the IP address set for the admin LAN.

Set a new IP address on the primary node using the following command.

```
# /opt/FJSVrcvnr/bin/rcxadm mgrctl modify -ip IP_address <RETURN>
```

2. De-activate the admin server's takeover logical IP address.

Use the PRIMECLUSTER GLS command-line interface to de-activate the takeover logical IP address.

For details, refer to the PRIMECLUSTER Global Link Services manual.

3. Register the takeover logical IP address as a PRIMECLUSTER resource.

Use the PRIMECLUSTER GLS command-line interface to register the virtual interface as a PRIMECLUSTER resource.

For details, refer to the PRIMECLUSTER Global Link Services manual.

4. Un-mount the shared disk.

Un-mount the shared disk from the primary node.

5. Log in to the admin server's secondary node.

Log in to the operating system of the admin server's secondary node with administration privileges.

6. Change takeover the logical IP address.

Use the PRIMECLUSTER GLS command-line interface to remove virtual interface settings from the PRIMECLUSTER resource, register the resource, and change the PRIMECLUSTER GLS configuration.

For details, refer to the PRIMECLUSTER Global Link Services manual.

7. Change the cluster configuration.

Use the cluster RMS Wizard to change the GLS resource set in the cluster service of either one of the cluster nodes.

After completing the configuration, save it and execute the following operations.

- Configuration-Generate
- Configuration-Activate

8. Start the Manager's cluster service.

Use the cluster administration view (Cluster Admin) to start the Manager's cluster service.

3.1.2 Changing Port Numbers

This section explains how to change the ports used by the Manager services and related services of Resource Orchestrator.

Resource Orchestrator requires the following services to be running. When starting these services, ensure that the ports they are using do not conflict with the ports used by other applications or services. If necessary, change the ports used by Resource Orchestrator services.

[Windows]

- Manager Services
 - Resource Coordinator Manager
 - Resource Coordinator Task Manager
 - Resource Coordinator Web Server (Apache)
 - Resource Coordinator Sub Web Server (Mongrel)
 - Resource Coordinator Sub Web Server (Mongrel2)
 - Resource Coordinator DB Server (PostgreSQL)
- Related Services
 - Deployment Service
 - TFTP Service
 - PXE Services
 - DHCP Server

[Linux]

- Manager Services
 - rcxmanager
 - rcxtaskmgr
 - rcxmongrel1
 - rcxmongrel2
 - rcxhttpd
 - rcxdb
- Related Services
 - scwdepsvd
 - scwpxesvd
 - scwtftpd

Change the ports used by the above services if there is a possibility that they will conflict with other applications or services. For Windows operating systems, an ephemeral port may conflict with a Resource Orchestrator service if the maximum value allowed for ephemeral ports (5000 by default) was changed. In this case, change the port numbers used by Resource Orchestrator services to values greater than the maximum ephemeral port value.

For information on how to change the ports used by ServerView Operations Manager, refer to the ServerView Operations Manager manual. The ports used for SNMP communication and server power control are defined by standard protocols and fixed at the hardware level, and thus cannot be changed.

For the port numbers used by Resource Orchestrator, refer to "Appendix A Port List" of the "Setup Guide VE". When using a firewall on the network, firewall settings should be updated to match the new port definitions and allow communications for any modified port.

Manager Services

Use the following procedure to change the admin server ports used by manager services:

1. Stop manager services.

Stop the manager, referring to "7.2 Starting and Stopping the Manager" in the "Setup Guide VE".

2. Change the port numbers.

Use the rcxadm mgrctl modify command to set a new port number for a given service name.

[Windows]

```
>"Installation_folder\Manager\bin\rcxadm" mgrctl modify -port name=number <RETURN>
```

[Linux]

```
# /opt/FJSVrcvmr/bin/rcxadm mgrctl modify -port name=number <RETURN>
```

In a clustered manager configuration, bring offline all cluster resources except for the manager's shared disk and IP address, move all cluster resources from the primary node to the secondary node, then execute the rcxadm mgrctl modify command on all the nodes that are hosting cluster resources.

3. Restart manager services.

Start the manager referring to "7.2 Starting and Stopping the Manager" in the "Setup Guide VE".



Note

- When changing the "rcxweb" port, the following ports should be set to the same value.
 - Admin client
Enter the "rcxweb" port in the Web browser URL used to log into Resource Orchestrator. If this URL is bookmarked in the Web browser "Favorites", change the port set in the bookmark's URL.
 - HBA address rename setup service
If the HBA address rename setup service is running, change the port number used to communicate with the admin server to the "rcxweb" port according to ["3.3.2 Changing the Port Number Used to Communicate with the Admin Server"](#).

[Windows]

- Change the ROR console shortcut on the manager
 1. Open the following folder on the admin server.
Installation_folder\Manager
 2. Right-click the "ROR Console" icon, and select [Properties] from the popup menu.
 3. In the [Web Document] tab, change the port number set in the "URL" field (as shown below).

URL: https://localhost:23461/

4. Click <OK>.

- When changing the "nfagent" port, the following ports on managed servers should be set to the same value.

Set the "nfagent" port set on each managed server to the same value, according to the instructions given in "[3.2.6 Changing Port Numbers](#)".

The system image and cloning images collected before the change can no longer be used, and should be deleted.

If necessary, re-collect system images and cloning images.

Related Services

Use the following procedure to change the port numbers used for the related services:

[Windows]

1. Change the port numbers.

a. Open the Windows Registry Editor, and search for the following subkey:

- When using a 32-bit version of Windows:

Key name: HKEY_LOCAL_MACHINE\SOFTWARE\Fujitsu\SystemcastWizard\CLONE

- When using a 64-bit version of Windows:

Key name: HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Fujitsu\SystemcastWizard\CLONE

b. Select "PortBase" from the registry entries under this subkey.

c. From the menu, select [Edit]-[Modify].

The [Edit DWORD Value] dialog is displayed.

d. Select "Decimal" and click <OK>.

This port value will define the first port of the range used by deployment services.

However, because the related services can use up to 16 port numbers, ensure that all ports included between "PortBase" (defined here) and "PortBase+15" do not conflict with any other applications or services. Moreover, be sure to set a value lower than 65519 for "PortBase" so that the highest port number ("PortBase+15") does not exceed the largest valid port number (65534).

In a clustered manager configuration, change port numbers on both the primary and secondary node.

2. Restart the server on which the port number has been changed.

[Linux]

1. Change the port numbers.

Edit the following file: /etc/opt/FJVS/scw-common/scwconf.reg.

In PortBase (under HKEY_LOCAL_MACHINE\SOFTWARE\Fujitsu\SystemcastWizard\CLONE), set the first value of the port number to be used by deployment services. This value should be entered in hexadecimal format. To avoid conflicts with ephemeral ports, use a value not included in the ephemeral port range defined by "net.ipv4_local_port_range".

However, as a maximum of 16 port numbers are used for image file creation and deployment, ensure that the port numbers for PortBase to PortBase +15 do not conflict with ephemeral or well-known ports.

This ensures that deployment services will use ports outside of the range defined by net.ipv4.ip_local_port_range for image operations.

Moreover, be sure to set a value lower than 65519 for "PortBase" so that the highest port number ("PortBase+15") does not exceed the largest valid port number (65534).

In a clustered manager configuration, change port numbers on both the primary and secondary node.

2. Restart the server on which the port number has been changed.

Information

The related services allow managed servers to boot from the network using a dedicated module stored on the admin server during backup, restore or cloning.

Note that changing port numbers on the admin server alone is enough to support communication during the above image operations. Therefore, no additional configuration is required on the managed servers.

3.1.3 Changing the Maximum Number of System Image Versions

Use the following procedure to change the maximum number of system image versions.

1. Change the maximum number of system image versions.
2. Confirm the maximum number of system image versions.

For details of the methods for changing and checking the generations of system images, refer to "5.5 rcxadm imagemgr" of the "Command Reference".

Note

If the specified limit is smaller than the number of existing system image versions, older versions will not be deleted automatically. In this case, backing up a new system image, will only delete the oldest version.

Delete unused versions of system images manually if they are no longer necessary. For details, refer to "8.5 Deleting System Images" in the "Operation Guide VE".

If the ROR console has been already opened, refresh the Web browser after changing the maximum number of system image versions.

3.1.4 Changing the Maximum Number of Cloning Image Versions

Use the following procedure to change the maximum number of cloning image versions.

1. Change the maximum number of cloning image versions.
2. Check the maximum number of cloning image versions.

For details of the methods for changing and checking the generations of cloning images, refer to "5.5 rcxadm imagemgr" of the "Command Reference".

Note

If the specified limit is smaller than the number of existing cloning image versions, older versions will not be deleted automatically. In this case, collecting a new cloning image version will require selecting a previous image version for deletion.

Delete unused image versions manually if they are no longer necessary. For details, refer to "7.5 Deleting a Cloning Image".

If the ROR console has been already opened, refresh the Web browser after changing the maximum number of system image versions.

3.1.5 Changing the Image Folder Location

Use the following procedure to change the location (path) of the image files folder.

1. Select the [Image List] tab in the ROR console and confirm the current image list.
2. Log on to the admin server as the administrator.
3. Stop manager services.

Stop the manager, referring to "7.2 Starting and Stopping the Manager" in the "Setup Guide VE".

4. Change the location of the image file storage folder.

Change the location of the image file storage folder according to the instructions given in "5.5 rcxadm imagemgr" of the "Command Reference".

Because image files are actually copied over to the new location, this step may take some time to complete.

In a clustered manager configuration, for details on how to change the image file storage folder location, refer to "[Settings for Clustered Manager Configurations](#)".

5. Restart the manager.

Start the manager referring to "7.2 Starting and Stopping the Manager" in the "Setup Guide VE".

6. Select the [Image List] tab in the ROR console and confirm the image list is same as before.

Settings for Clustered Manager Configurations

Settings differ depending on the operating system used for the manager.

[Windows]

1. Cancel registry replication settings.

Bring the manager's shared disk online, and take all other resources offline.

Next, remove the following registry key from the registry replication settings set for the "Deployment Service" cluster resource.

- For x64 Architectures

SOFTWARE\Wow6432Node\Fujitsu\SystemcastWizard\ResourceDepot

- For x86 Architectures

SOFTWARE\Fujitsu\SystemcastWizard\ResourceDepot

Use the following procedure to remove the registry key.

- a. In the [Failover Cluster Management] window, right-click the "Deployment Service" resource in "Summary of RC-manager"->"Other Resources", and select [Properties] from the popup menu.

The [Deployment Service Properties] window is displayed.

- b. In the [Registry Replication] tab, select the above registry key.

- c. Click <Remove>.

The selected key is removed from the "Root registry key" list.

- d. After removing the registry key, click <Apply>.

- e. Click <OK> to close the dialog.

2. Change the location of the image file storage folder.

Change the location of the image file storage folder according to the instructions given in "5.5 rcxadm imagemgr" of the "Command Reference".

Because image files are actually copied over to the new location, this step may take some time to complete.

Run the rcxadm imagemgr command from either node of the cluster resource.

The new location should be a folder on the shared disk.

3. Restore registry replication settings.

Restore the registry key deleted in step 1 to the registry replication settings of the "Deployment Service" resource.

Use the following procedure to restore the registry key.

- a. In the [Failover Cluster Management] window, right-click the "Deployment Service" resource in "Summary of RC-manager"->"Other Resources", and select [Properties] from the popup menu.

The [Deployment Service Properties] window is displayed.

- b. In the [Registry Replication] tab, click <Add>.

The [Registry Key] dialog is displayed.
- c. Configure the above registry key in "Root registry key".
- d. Click <OK>.
- e. After completing registry key settings, click <Apply>.
- f. Click <OK> to close the dialog.

[Linux]

1. Mount the shared disk on the primary node.

Log in to the primary node with OS administrator privileges and mount the admin server's shared disk.
2. Change the location of the image file storage directory.

Change the location of the image file storage directory according to the instructions given in "5.5 rcxadm imagemgr" of the "Command Reference".

Because image files are actually copied over to the new location, this step may take some time to complete.

Run the rcxadm imagemgr command on the primary node.

The new location should be a directory on the shared disk.
3. Un-mount the shared disk from the primary node.

Un-mount the shared disk (for which settings were performed in step 1) from the primary node.

3.1.6 Changing Admin LAN Subnets [Windows]

Use the following procedure to change an admin LAN subnet.

1. From the ROR console menu, select [Settings]-[Admin LAN Subnet].

The [Admin LAN Subnet] dialog is displayed.
2. Select the subnet to change.

The [Change Admin LAN Subnet] dialog is displayed.
3. In the [Change Admin LAN Subnet] dialog, set the following items.

Subnet name

Enter a character string beginning with an alphabetic character and containing up to 16 alphanumeric characters, underscores ("_"), hyphens ("-"), and periods (".").

Network address

Enter valid values for the network address.

Subnet mask

Enter valid values for the subnet mask.

Gateway

Enter the settings for the gateway used for communication with the admin server on the admin LAN.
4. Click <Change>.
5. Click <OK>.



When changing the information for a subnet other than the one the admin server belongs to, if there is even 1 managed server belonging to the target subnet, the "Network address" and "Subnet mask" cannot be changed.

When changing the "Network address" or "Subnet mask", refer to the "[Modification Procedure when there are Managed Servers Belonging to Different Subnets](#)".

Modification Procedure when there are Managed Servers Belonging to Different Subnets

When there are managed servers in the target subnet, change the network address or the subnet mask using the following procedure.

1. Register the subnet information using the new network address or subnet mask.
2. Use the following procedure to change the admin LAN IP addresses of all managed servers belonging to the subnet before modification.
For details on how to configure these settings, refer to "[3.2.3 Changing Admin IP Addresses](#)".
3. Delete the subnet used before modification.

3.1.7 Changing the Password for the Resource Orchestrator Database

Use the following procedure to change the password for the Resource Orchestrator database:

1. Log on to the admin server as the administrator.
2. Stop manager services.
Stop the manager, referring to "7.2 Starting and Stopping the Manager" in the "Setup Guide VE".
3. Change the password for the Resource Orchestrator database.

Execute the rcxadm dbctl modify command.
Enter the new password interactively.

[Windows]

```
>"Installation_folder\Manager\bin\rcxadm" dbctl modify -passwd <RETURN>
```

[Linux]

```
# /opt/FJSVrcvmr/bin/rcxadm dbctl modify -passwd <RETURN>
```

In a clustered manager configuration, bring offline all manager resources except for the shared disk, move all cluster resources from the primary node to the secondary node, then execute the rcxadm dbctl modify command on all the nodes that are hosting cluster resources.

4. Restart the manager.
Start the manager referring to "7.2 Starting and Stopping the Manager" in the "Setup Guide VE".

3.2 Changing Chassis and Managed Servers Settings

This section explains how to change the settings for the chassis and managed servers.

If collecting the system images and cloning images of the managed server, collect system images and cloning images after completing changes to the managed server settings.

For details on backing up system images, refer to "8.2 Backup" in the "Operation Guide VE".

For details on how to collect cloning images, refer to "[7.2 Collecting a Cloning Image](#)".



- To change VM guest settings, use the management console of the server virtualization software used.
 - A managed server that has already been registered cannot be moved to a different slot.
To move a managed server to a different slot, first delete the managed server, then move it to the new slot and register it again.
-

3.2.1 Changing Chassis Names

This section explains how to change chassis names.

Use the following procedure to change the name of a registered chassis.

1. In the ROR console server resource tree, right-click the target chassis and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Chassis Settings] dialog is displayed.

2. Modify the values for the following items:

Chassis name

Enter up to 10 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

3. Click <OK>.

The chassis name is changed.

3.2.2 Changing Server Names

This section explains how to change physical server names.

Names of physical OS's, VM hosts, and VM guests can be changed by a user with administrative authority. Once changed, new names are automatically reflected in the ROR console.

Use the following procedure to change the name of a physical server.

1. In the ROR console server resource tree, right-click the target server, and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Server Settings] dialog is displayed.

2. Modify the values for the following items:

Physical Server Name

Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

3. Click <OK>.

The server name is changed.

4. If the network parameter auto-configuration function is used in the deployment of the cloning images, the "Physical Server Name" set in the definition file must also be changed.

For details on the network parameter auto-configuration function, refer to "[7.6 Network Parameter Auto-Configuration for Cloning Images](#)".

3.2.3 Changing Admin IP Addresses

This section explains how to change admin IP addresses.

To change the IP addresses of remote management controllers, refer to "[3.2.5 Changing Server Management Unit Configuration Settings](#)".

Chassis

Use the following procedure to change the IP address of a chassis.

1. Change the IP address of the management blade.
2. In the ROR console server resource tree, right-click the target chassis and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Chassis Settings] dialog is displayed.

3. Change "Admin LAN (IP address)".

4. Click <OK>.

The chassis admin IP address is changed.

Managed Servers

Use the following procedure to change the IP address of a managed server.

However, it is still required when using the same address for both the admin and public IP address. This procedure is not required when changing only the public IP address of a server.

1. Log in to the managed server with an OS administrator account.
2. Change the IP address set within the operating system.

Change the IP address according to the OS manual.

If the admin LAN has been made redundant, change the admin IP address set in the following tools or products.

Refer to the manual of each product for usage details.

[Windows]

PRIMECLUSTER GLS

BACS

Intel PROSet

[Linux/Solaris]

PRIMECLUSTER GLS: "NIC switching mode (Physical IP address takeover function)"

3. Restart the managed server.
4. In the ROR console server resource tree, right-click the target server, and select [Modify]-[Registration Settings] from the popup menu.
The [Modify Server Settings] dialog is displayed.
5. Change "Admin LAN (IP address)".
6. Click <OK>.

The admin IP address of the managed server is changed.



Note

It is not possible to change IP address settings of a managed server (primary server) with a spare server configured to a different subnet from the spare server.

3.2.4 Changing SNMP Communities

This section explains how to change SNMP community settings.

- For blade servers, PRIMEQUEST servers, or SPARC Enterprise M4000/M5000/M8000/M9000 servers

Use the following procedure to change SNMP community used by chassis and managed servers.

1. Change the SNMP community set on the management blade, management board, or XSCF.

The new SNMP community should have Read-Write permission.

For details on changing SNMP communities, refer to the manual of the management blade, management board, or XSCF.

2. Change the SNMP community set on the managed server.

Use the same name for the SNMP community of the managed server on the management blade, the management board, and the XSCF.

Follow the instructions in the ServerView Agents manual to change the SNMP community used by a managed server.

The new SNMP community should have Read-Write permission.

3. In the ROR console server resource tree, right-click the target chassis and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Chassis Settings] dialog is displayed.

4. Change "SNMP Community".

5. Click <OK>.

The SNMP community is changed.

- For rack mount or tower servers

Use the following procedure to change the SNMP community used by PRIMERGY servers.

For servers other than PRIMERGY servers, changing SNMP communities does not require any configuration change in Resource Orchestrator.

1. Change the SNMP community set on the managed server.

Follow the instructions in the ServerView Agents manual to change the SNMP community used by a managed server.

2. In the ROR console server resource tree, right-click the target server, and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Server Settings] dialog is displayed.

3. Change "SNMP Community".

4. Click <OK>.

The SNMP community is changed.

- For SPARC Enterprise servers

Use the following procedure to change SNMP community used by the Remote Management Controller.

1. Change the SNMP community set on the remote management controller (XSCF).

For details on changing SNMP communities, refer to the XSCF manuals.

2. In the ROR console server resource tree, right-click the target chassis and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Chassis Settings] dialog is displayed.

3. Change "SNMP Community".

4. Click <OK>.

The SNMP community is changed.

3.2.5 Changing Server Management Unit Configuration Settings

This section explains how to modify server management unit settings.

- For rack mount or tower servers

Use the following procedure to change remote management controller settings.

1. Change settings on the remote management controller.

If the user account is changed, it should still have administrator authority.

2. In the ROR console server resource tree, right-click the target server, and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Server Settings] dialog is displayed.

3. Change "Remote Management Controller IP address". To modify user account information, select the "Modify remote management controller login account" checkbox, and change the "User name" and "Password" of the "Remote management controller".

- For SPARC Enterprise M3000 servers

Use the following procedure to change remote management controller (XSCF) settings.

1. Change settings on the remote management controller (XSCF).
If the user account is changed, it should still have administrator authority ("platadm" privileges).
2. In the ROR console server resource tree, right-click the target server, and select [Modify]-[Registration Settings] from the popup menu.
The [Modify Server Settings] dialog is displayed.
3. Change "Remote Management Controller IP address (ILOM/XSCF)".
To modify user account settings, select the "Modify remote management controller login account" checkbox, and change the "User name" and "Password" fields under "Remote management controller (ILOM/XSCF)".

- For SPARC Enterprise T servers

Use the following procedure to change remote management controller settings (ILOM).

1. Change settings on the remote management controller (ILOM).
If the user account is changed, it should still have administrator authority ("Admin" privileges).
2. In the ROR console server resource tree, right-click the target server, and select [Modify]-[Registration Settings] from the popup menu.
The [Modify Server Settings] dialog is displayed.
3. Change "Remote Management Controller IP address (ILOM/XSCF)".
To modify user account settings, select the "Modify remote management controller login account" checkbox, and change the "User name" and "Password" fields under "Remote management controller (ILOM/XSCF)".

- For PRIMEQUEST servers

Use the following procedure to change remote server management settings.

1. Change the remote server management settings.
If the user account is changed, it should still have administrator authority.
2. In the ROR console server resource tree, right-click the target chassis and select [Modify]-[Registration Settings] from the popup menu.
The [Modify Chassis Settings] dialog is displayed.
3. Select the "Modify remote server management login account" checkbox. Then, change the "User name" and "Password" of "Remote Server Management".

- For SPARC Enterprise M4000/M5000/M8000/M9000 servers

Use the following procedure to change remote management controller (XSCF) settings.

1. Change settings on the remote management controller (XSCF).
If the user account is changed, it should still have administrator authority ("platadm" privileges).
2. In the ROR console server resource tree, right-click the target chassis and select [Modify]-[Registration Settings] from the popup menu.
The [Modify Chassis Settings] dialog is displayed.
3. Select the "Modify remote server management login account" checkbox. Then, change the "User name" and "Password" of "Remote server management (XSCF)".

3.2.6 Changing Port Numbers

This section explains how to change port numbers.

When changing port numbers of the agent, the "nfagent" port of the manager must also be changed. Change this according to information in ["3.1.2 Changing Port Numbers"](#).

For details on port numbers, refer to "Appendix A Port List" of the "Setup Guide VE".

Use the following procedure to change the port numbers for managed servers:

1. Change the port numbers.

[Windows/Hyper-V]

Use a text editor (such as Notepad) to change the following line in the *Windows_system_folder\system32\drivers\etc\services* file.

```
# service name port number/protocol name
nfagent      23458/tcp
```

[Linux/VMware/Xen/KVM]

Use a command such as vi to change the following line in the */etc/services* file.

```
# service name port number/protocol name
nfagent      23458/tcp
```

[Solaris]

Use a command such as vi to change the following line in the */etc/services* file.

```
# service name port number/protocol name
rcvat       23458/tcp
```

2. Restart the server on which the port number has been changed.

3.2.7 Changing VM Host Login Account Information

This section explains how to change VM host login account information.

If the login account information (user name and password) of the VM host entered when the VM host was registered is changed, change the login account information of the VM host that was registered in Resource Orchestrator.

The method for changing the VM host login account is shown below.

1. In the ROR console server resource tree, right-click the target VM host, and select [Modify]-[VM Host Login Account] from the popup menu.

The [Change Login Information] dialog is displayed.

2. Enter the new login account information that was changed on the VM host.

User name

Enter the user name to log in to the VM host. Specify a user name that has VM host administrator authority.

Password

Enter the password of the user to log in to the VM host.

3. Click <OK>.

VM host login information is changed.

3.2.8 Changing the VLAN Settings of LAN Switch Blades

This section explains how to change LAN switch VLAN settings.

The VLAN settings of the LAN switch blade ports connected to the physical servers can be reconfigured normally within Resource Orchestrator.

Refer to "[2.3.6 Configuring VLANs on Internal Ports](#)" for details on how to configure these settings.

3.2.9 Changing HBA address rename Settings

This section explains how to change the HBA address rename settings.

The WWNs and HBA ports that are set by HBA address rename can be reconfigured normally within Resource Orchestrator. For details on how to configure these settings, refer to "8.2 HBA address rename Settings" in the "Setup Guide VE".

3.2.10 Changing Boot Options

This section explains how to change boot option settings.

The boot options configured for PRIMEQUEST servers can be changed by re-configuring them. Use the following procedure to configure the boot option settings.

1. In the ROR console server resource tree, right-click the target server, and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Server Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

Boot option

- For UEFI
Select "UEFI".
- For Legacy Boot
Select "Legacy boot".



Changing the boot option changes the information registered with Resource Orchestrator. As the actual boot option will not be changed, it is necessary to change the BIOS settings when performing the change.

3.2.11 Changing WWN Settings for ETERNUS SF Storage Cruiser Integration

This section explains how to change WWN settings for integration with ETERNUS SF Storage Cruiser.

The WWN settings for ETERNUS SF Storage Cruiser integration can be changed by re-configuring them.

Refer to "[4.1 Configuring WWN Settings for ETERNUS SF Storage Cruiser Integration](#)" for details on how to configure these settings.

3.3 Changing Settings for the HBA address rename Setup Service

This section explains how to change settings for the HBA address rename setup service. Such settings include the admin server IP address, the port used to communicate with the admin server, and the IP address of the HBA address rename server.

3.3.1 Changing the IP Address of the Admin Server

This section explains how to change the IP address of the admin server.

When this setting is changed, the HBA address rename setup service automatically checks whether it can communicate with the new admin server IP address.

Changing this setting also requires changing the port on the admin server side beforehand.

Change the IP address of the admin server according to "[3.1.1 Changing Admin IP Addresses](#)", and change the admin IP address for the HBA address rename setup service according to step 12.

3.3.2 Changing the Port Number Used to Communicate with the Admin Server

This section explains how to change the port used between the HBA address rename setup service and the admin server.

The HBA address rename setup service uses the "rcxweb" port to communicate with the admin server.

When this setting is changed, the HBA address rename setup service automatically checks whether it can communicate with the new admin

server IP address.

Changing this setting also requires changing the port on the admin server side beforehand.

Use the following procedure to change the port numbers used to communicate with the admin server:

1. Change the port number of the manager.

Change the "rcxweb" port number according to the instructions given in "[3.1.2 Changing Port Numbers](#)".

2. Change the port number of the HBA address rename setup service.

Refer to "8.2.1 Settings for the HBA address rename Setup Service" in the "Setup Guide VE", and change the port to the same port number.

3.3.3 Changing the IP Address of the HBA address rename Server

This section explains how to change the IP address of the HBA address rename server.

Use the following procedure to change the IP address of the HBA address rename server.

1. Log in to the HBA address rename server with administrator authority.

2. Stop the HBA address rename setup service.

Stop the HBA address rename setup service according to "8.2.1 Settings for the HBA address rename Setup Service" in the "Setup Guide VE".

3. Change the IP address set within the operating system.

Change the IP address according to the OS manual.

4. Restart the HBA address rename setup service.

Start the HBA address rename setup service according to "8.2.1 Settings for the HBA address rename Setup Service" in the "Setup Guide VE".

3.4 Changing VIOM Registration Settings

Use the following procedure to perform setting changes for management software (VIOM).

1. In the ROR console management software tree, right-click the management software (VIOM), and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Management Software(VIOM) Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

User name

Enter the name of a VIOM user account.

Password

Enter the password of the above VIOM user account.

3. Click <OK>.

To change registered VIOM server profiles, follow the procedure described in "[2.1.1 Registering VIOM Server Profiles](#)" to open the Web interface of ServerView Virtual-IO Manager and change the settings. Changes made inside Virtual-IO Manager are automatically reflected in Resource Orchestrator.

3.5 Changing LAN Switch Settings

This section explains how to change LAN switch settings.

3.5.1 Changing LAN Switch Basic Settings

This section explains how to change LAN switch basic settings.

The following settings can be changed.

- LAN switch name (node name for management purposes)
- Admin LAN (IP address)
- User name (LAN switch blade only)
- Password (LAN switch blade only)
- Privileged password (LAN switch blade only)
- SNMP community

Complete the changes to the settings on the target LAN switch before performing this procedure.

Use the following procedure to change LAN switch settings:

1. In the ROR console server resource tree or network resource device tree, right-click the target LAN switch name and select [Modify]-[Registration Settings] from the popup menu.

The [Modify LAN Switch] dialog is displayed.

2. Make changes to the values as needed.
3. Click <OK>.

The settings for the LAN switch are changed with the entered information.



Note

It is possible to set the IP address of the target switch to another unregistered LAN switch. However, this will result in the Resource Orchestrator configuration being inconsistent with the actual network configuration.

If the IP address of the target switch is set to the same address as that of another unregistered LAN switch unintentionally, change back the target LAN switch IP address to its original value according to the instructions given in this section.

If there are more than one LAN switch with inconsistent IP address configurations, delete all registered LAN switches according to "[5.4.2 Deleting LAN Switches](#)" first, then perform Discover and Register according to "[2.4.2 Registering LAN Switches](#)".

3.5.2 Changing VLANs Set for External Ports of LAN Switch Blades

VLAN IDs and types (Port/Tagged VLAN) set on the external ports of a managed LAN switch blade can be changed.



Note

VLANs cannot be changed on PRIMERGY BX900/BX400 LAN switch blades operating in IBP mode.

If the port VLAN ID is unspecified or 1, a tagged VLAN ID cannot be set to 1.

Changing VLAN IDs

This section explains how to change VLAN IDs set on the external ports of a LAN switch.

- With Port VLANs

Use the following procedure to change VLAN IDs:

1. In the ROR console server resource tree, right-click the target LAN switch blade and select [Modify]-[Network Settings] from the popup menu.

The [VLAN Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

VLAN

Select "Change" and select the VLAN ID that has been changed.

Physical Port and Link Aggregation

Select "Untagged" from the VLAN type of the port number to configure or link aggregation group name.

3. Click <OK>.

The VLAN ID is changed.

- With Tagged VLANs

First delete the VLAN ID was set on the desired LAN switch blade port before setting the new VLAN ID.

Use the following procedure to change VLAN IDs:

1. In the ROR console server resource tree, right-click the target LAN switch blade and select [Modify]-[Network Settings] from the popup menu.

The [VLAN Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

VLAN

Select "Change" and select the VLAN ID that has been changed.

Physical Port and Link Aggregation

Select "None" from the VLAN type of the port number to configure or link aggregation group name.

3. Click <OK>.

The VLAN ID set for the selected LAN switch blade port is released.

4. Repeat step 1 and set the new VLAN ID in the [VLAN Settings] dialog.

VLAN

Select "Create new" or "Change" in the VLAN information and select the VLAN ID to be changed.

Physical Port and Link Aggregation

Select "Tagged" from the VLAN type of the port number to configure or link aggregation group name.

5. Click <OK>.

The VLAN ID is changed.

Changing VLAN Types

This section explains how to change the types of VLAN (port or tagged VLAN) set on the external ports of a LAN switch.

Use the following procedure to change VLAN types:

1. In the ROR console server resource tree, right-click the target LAN switch blade and select [Modify]-[Network Settings] from the popup menu.

The [VLAN Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

VLAN

Select "Change" and select the VLAN ID that has been changed.

Physical Port and Link Aggregation

Change the VLAN type ("Untagged" or "Tagged") of the port number to configure or link aggregation group name.

3. Click <OK>.

The VLAN type is changed.

Deleting VLAN IDs

This section explains how to delete VLAN IDs.

- Deleting VLAN IDs from LAN switch blades

Use the following procedure to delete VLAN IDs:

1. In the ROR console server resource tree, right-click the target LAN switch blade and select [Modify]-[Network Settings] from the popup menu.

The [VLAN Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

VLAN

Select "Change" and select the VLAN ID that has been changed.

3. Click <Delete>.

The VLAN ID is deleted.

- Deleting VLAN IDs from LAN switch ports

Use the following procedure to delete VLAN IDs:

1. In the ROR console server resource tree, right-click the target LAN switch blade and select [Modify]-[Network Settings] from the popup menu.

The [VLAN Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

VLAN

Select "Change" and select the VLAN ID that has been changed.

Physical Port and Link Aggregation

Select "None" from the VLAN type of the port number to delete VLANs or link aggregation group name.

3. Click <OK>.

The VLAN ID is deleted.

3.5.3 Re-discovering LAN Switches

Newly added LAN switches can be discovered by re-executing LAN switch discovery.

For details on LAN switch discovery, refer to "[Discovery](#)" in "[2.4.2 Registering LAN Switches](#)".

3.6 Changing VM Management Software Settings

This section explains how to change VM management software settings.

The following settings can be changed.

- Location
- IP address
- User name
- Password

Here the method for changing settings registered with Resource Orchestrator is explained.

Complete re-configuration within the VM management software admin console before performing this procedure.

Use the following procedure to change VM management software settings:

1. In the ROR console management software tree, right-click the target management software, and select [Modify]-[Registration Settings] from the popup menu.

The [Modify Management Software(*name*) Settings] dialog is displayed.
The name of the selected VM management software is displayed in *name*.

2. Enter the following items:

Location

Select the location of the VM management software registration to change.

- If VM management software is installed on the admin server
Select "Admin Server".
- In other cases
Select "Other Server".

IP address

If "Other Server" was selected, enter the IP address of the server on which VM management software is installed.

User name

Enter the user name to use to control VM management software.

Password

Enter the password of the above VM management software user account.

3. Click <OK>.

VM management software settings are changed.

3.7 Changing Power Monitoring Environment Settings

This section explains how to change power monitoring environment settings.

Power environment settings include environmental data settings, collection cancel settings, and power monitoring device settings.

3.7.1 Changing Environmental Data Settings

Use the following procedure to change environmental data settings:

1. From the ROR console menu, select [Tools]-[Options].
The [Options] dialog is displayed.
2. Click the "Environmental Data" category title, and input the following items in the displayed area.

Data to collect

Select the "Power" checkbox to start collecting power consumption data.

Polling interval (in minutes)

Enter the time interval of the data collection (1-6 or 10).

The number of devices that can be monitored simultaneously depends on the value of this polling interval and the load put on the admin server. The following values are guidelines.

Table 3.1 Polling Interval

Polling Interval	Number of Devices that can be Monitored Simultaneously
5 minutes	Up to 40 devices
10 minutes	Up to 60 devices

Use a polling interval of 5 minutes or longer when monitoring chassis and servers. Use a polling interval of 10 minutes if monitoring more than 40 devices.

Data storage period

Enter storage periods for each collection rate. Data older than the configured storage period will be deleted everyday. Enlarging data storage periods reduces the number of devices that can be monitored simultaneously. Use the default storage period values when monitoring chassis and servers.

3. Click <Apply>.

The modified settings are reflected.



Note

If the "Power" checkbox under "Data to collect" is cleared, the collection of power consumption data (including the calculation of hourly, daily, and other summarized data) will not be performed anymore.

3.7.2 Cancelling Collection Settings for Power Monitoring Environments

This section explains how to cancel the collection of power consumption data.

Use the following procedure to cancel the collection of power consumption data.

1. From the ROR console menu, select [Tools]-[Options].

The [Options] dialog is displayed.

2. Click the "Environmental Data" category title, and modify the values for the following items in the displayed area.

Data to collect

Clear the "Power" checkbox.

3. Click <Apply>.

Collection of environmental data is canceled.

3.7.3 Changing Power Monitoring Devices

This section explains how to change power monitoring device settings.

The following settings can be changed.

- Device Name
- Admin LAN (IP Address)
- SNMP Community
- Voltage
- Comments

Complete setting modifications on the actual power monitoring device before performing this procedure.

Use the following procedure to change power monitoring device settings:

1. From the ROR console, right-click the power monitoring device tree, then select [Modify]-[Registration Settings] from the popup menu.

The [Modify Power Monitoring Device] dialog is displayed.

2. Make changes to the values as needed.
3. Click <OK>.

The power monitoring device settings will be changed with the entered information.

3.8 Changing Monitoring Information Settings

This section explains how to change and cancel monitoring information settings.

3.8.1 Changing Monitoring Information Settings

This section explains how to change monitoring information settings.

The following settings can be changed.

- Enabling or disabling of ping monitoring
- Time-out
- Recovery method
- Number of reboots

Use the following procedure to change settings:

1. In the ROR console server resource tree, right-click the target physical OS and the VM host, and select [Modify]-[Monitoring Settings] from the popup menu.

The [Configuring monitoring settings] dialog is displayed.

2. Make changes to the values as needed.
3. Click <OK>.

The settings for the monitoring information are changed to the entered settings.

3.8.2 Canceling Monitoring Information Settings

This section explains how to cancel monitoring information settings.

Use the following procedure to cancel the monitoring information settings:

1. In the ROR console server resource tree, right-click the target physical OS and the VM host, and select [Modify]-[Monitoring Settings] from the popup menu.

The [Configuring monitoring settings] dialog is displayed.

2. Uncheck the "Enable ping monitoring" checkbox.
3. Click <OK>.

The settings for the monitoring information are cancelled.

3.9 Changing Storage

This section explains how to change storage settings.

3.9.1 Changing Storage Management Software Basic Information

This section explains how to change the basic settings of storage management software.

The following settings can be changed.

- Label
- Comments

Use the following procedure to change the basic settings of storage management software:

1. In the ROR console storage tree, right-click the target storage management software, and select [Modify]-[Registration Settings] from the displayed menu.

The [Resource Change Setting] dialog is displayed.

2. Modify the values for the following items:

Label

Enter up to 32 alphanumeric characters or symbols.

Comment

Enter up to 256 alphanumeric characters or symbols.

3. Click <OK>.

Basic information for the storage management software is modified.

3.9.2 Changing Storage Unit Basic Information

This section explains how to change the basic information of storage units.

The following settings can be changed.

- Label
- Comments

Use the following procedure to change the basic information of storage units:

1. In the ROR console storage tree, right-click the target storage unit, and select [Modify]-[Registration Settings] from the displayed menu.

The [Resource Change Setting] dialog is displayed.

2. Modify the values for the following items:

Label

Enter up to 32 alphanumeric characters or symbols.

Comment

Enter up to 256 alphanumeric characters or symbols.

3. Click <OK>.

Basic information for the storage unit is modified.

3.9.3 Changing Virtual Storage Resource Basic Settings

This section explains how to change the basic settings of virtual storage resources.

The following settings can be changed.

- Label
- Comments

Use the following procedure to modify the basic information for virtual storage resources:

1. In the ROR console storage tree, right-click the target virtual storage resource, and select [Modify]-[Registration Settings] from the popup menu.

The [Resource Change Setting] dialog is displayed.

2. Modify the values for the following items:

Label

Enter up to 32 alphanumeric characters or symbols.

Comment

Enter up to 256 alphanumeric characters or symbols.

3. Click <OK>.

The basic information of the virtual storage resource is modified.

3.9.4 Changing Basic Information for Disk Resources

This section explains how to modify the basic information for disk resources.

The following settings can be changed.

- Label
- Comments

Use the following procedure to modify the basic information for disk resources

1. Select the target virtual storage in the ROR console storage tree.

The disk resource list is displayed in the [Resource List] tab.

2. From the disk resource list, right-click the target disk resource, and select [Modify]-[Registration Settings] from the displayed menu.

The [Resource Change Setting] dialog is displayed.

3. Modify the values for the following items:

Label

Enter up to 32 alphanumeric characters or symbols.

Comment

Enter up to 256 alphanumeric characters or symbols.


4. Click <OK>.

The basic information for disk resources is modified.

Chapter 4 Configuring the Operating Environment of Managed Servers

This section explains how to install software to the registered managed servers and set up their operating environment.

Figure 4.1 Procedure for Setting up Operating Environments

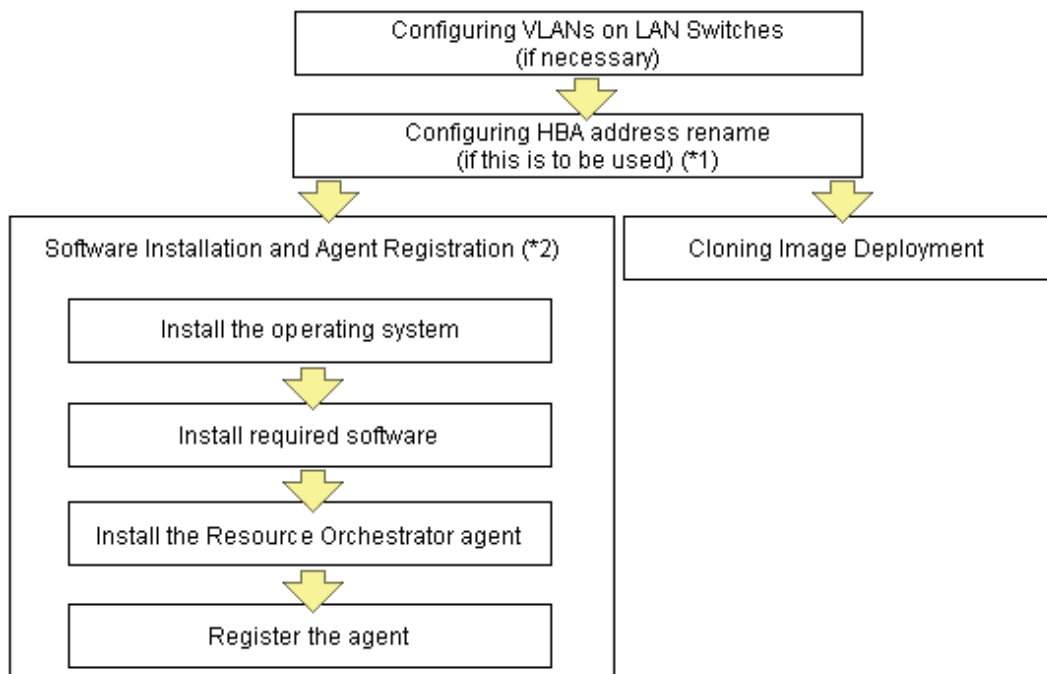

*1: HBA address rename and VIOM cannot be used together within the same chassis. I/O virtualization settings for all the servers mounted in one chassis must be made using either HBA address rename or VIOM.

*2: These settings can be omitted for resources that have already been installed or registered.

4.1 Configuring WWN Settings for ETERNUS SF Storage Cruiser Integration

This section explains how to configure WWN settings for integration with ETERNUS SF Storage Cruiser.

Specifying HBA WWNs, storage WWNs, and AffinityGroup for ETERNUS SE Storage Cruiser enables configuration of the zoning settings of Fibre Channel switches and storage unit host affinity. When performing switchover on managed servers, using the WWN settings enables the admin server to automatically change settings of storage devices.

Use of this function requires registration of specific settings for ETERNUS SF Storage Cruiser in advance. Fibre Channel Switches and storage units connected to managed servers must be registered on ESC.

Note

- WWN settings for servers and HBAs are not performed by this function.
- Configuration cannot be performed for managed servers which are configured as spare servers or are used as spare servers.

Use the following procedure to configure the WWN settings.

When changing the current WWN information, configure the new WWN information after deleting Fibre Channel Switch zoning and storage unit host affinity in the currently configured WWN information.

1. In the ROR console server resource tree, right-click the target physical server, and select [Modify]-[WWN Settings] from the popup menu.
The [WWN Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

HBA ports

Select the following values according to the system configuration.

- Procedures for Single-path Configurations

Specify "1" for HBA ports.

- Procedures for Multi-path Configurations

Select the number of multi-paths for HBA ports.

However, it is necessary to select "1" during installation of the operating system. Select the number of paths and reconfigure HBA address rename settings after setting up the multi-path driver.

Portn WWPN

Enter or select the WWPN of an HBA collected from physical servers.

When using a multi-path configuration, enter the values to match the order of the HBAs and the corresponding CAs of servers, based on the values in "4.1.1.6 Settings for ETERNUS SF Storage Cruiser Integration" in the "Setup Guide VE".

Target CA

Select WWPNs of storage CA and AffinityGroup.

Select hyphens ("-") to keep spare servers inactive.

Also, select a hyphen ("-") when deleting Fibre Channel Switch zoning and storage unit host affinity in the configured WWN information.

3. Click <OK>.

Perform configuration or deletion of Fibre Channel Switch zoning and storage unit host affinity based on the configured WWN information. When the target operation server is registered on ESC, the status should be as below:

- Configuration

The server should be turned on

- Deletion

The server should be turned off

When configuration and deletion of Fibre Channel Switch zoning and storage unit host affinity have been already executed, no operations will be performed on the devices.



Note

- For WWPN value specification, check that the value does not overlap with the WWPN used for HBA address rename or VIOM. If the same WWPN is used, there is a chance data on storage units will be damaged.
- When configuration or deletion of Fibre Channel switches or storage units performed, a warning dialog is displayed. Make sure that there are no problems in the settings, then click <OK>.
- If the target CA is not displayed, confirm the status of the following settings:
 - ESC is correctly registered on Resource Orchestrator.
 - Fibre Channel switches and storage units are correctly registered.
 - Only one access path is configured on ESC for each CA of an HBA.

4.2 Cloning Image Deployment

For the second and subsequent servers, operating systems are created using the cloning image collected from the first server.

Refer to "[Chapter 7 Cloning \[Windows/Linux\]](#)".

Chapter 5 Deleting Resources

This section explains how to delete resources.

The managed server and the LAN switch can be registered and deleted for one resource in the same chassis.

Note that operation of a server cannot be performed while the LAN switch is being registered and removed.

If the operation is performed simultaneously for multiple resources, one of the following messages is displayed.

In this case, wait until the current operation is completed before executing the desired operation again.

```
FJSVrcx:ERROR:67210: LAN_switch_name(LAN switch):is busy
```

or

```
FJSVrcx:ERROR:67210: Managed_server_name (physical server):is busy
```

5.1 Deleting Chassis

This section explains how to delete chassis.

Use the following procedure to delete the chassis.

1. In the ROR console server resource tree, right-click the target chassis, and select [Delete] from the popup menu.

The [Delete Resource] dialog is displayed.

2. Click <OK>.

The target chassis is deleted from the server resource tree.



Note

If server blades and partitions within the chassis were already registered, delete these server blades and partitions before deleting the chassis. If LAN switches have been registered, delete all LAN switches before deleting the chassis.

5.2 Deleting Managed Servers

This section explains how to delete managed servers.

Use the following procedure to delete managed servers.

1. In the ROR console server resource tree, right-click the target server (or the physical OS or the VM host on the server) and select [Delete] from the popup menu.

The [Delete Resource] dialog is displayed.

If a VM host is running on the server to be deleted, any VM guests running on that host are also deleted from the server resource tree at the same time. The VM guests to be deleted appear in the [Delete Resource] dialog, so check that it is safe to delete them.

2. Click <OK>.

- If a physical OS or VM host exists on the target server and HBA address rename is set

The server will be powered off and the target server will be unregistered when the resource is deleted. Resource Orchestrator does not delete the host affinity settings of storage units or the zoning settings of Fibre Channel switches.

- If WWN information is set for the target server


The host affinity settings of storage units and the zoning settings of Fibre Channel switches will be deleted when the SPARC server is deleted.

- If the deleted server is a PRIMERGY BX series server, a PRIMEQUEST server, or SPARC Enterprise M4000/M5000/M8000/M9000 server

The target server will be unregistered and remain in the server resource tree.

Information

- If HBA address rename has already been set up on the managed server, the HBA WWN is reset to the factory default. When this occurs, the managed server is turned on temporarily, after the power is forcibly turned off once. When the operating system is running on a managed server, it is recommended to shut it down before deleting the server.

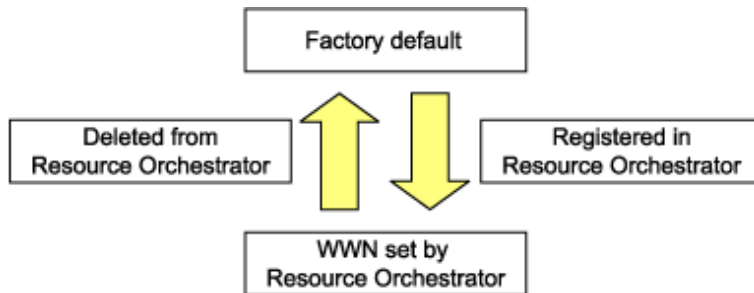

- VM guests can be deleted using the management console of the server virtualization software used. Doing so will automatically delete those VM guests from Resource Orchestrator as well.
- If the same storage device volume is to be used to operate the target server after the server has been deleted, use storage management software such as ETERNUS SF Storage Cruiser to reset the storage host affinity and fibre channel switch zoning with the factory default WWN.
- Any system images backed up from the target server are also deleted automatically.
- After the server has been deleted, the maintenance LED is switched OFF automatically.
- Deleting a server on which both the HBA address rename function and a VM high-availability feature (provided by the server virtualization software used) are enabled will produce the following behavior. The server will be powered off, causing the high-availability feature to trigger its VM recovery process. To avoid interruption of hosted applications during server deletion, it is recommended to move VM guests to another server beforehand. For more details on the high-availability features available for each server virtualization software, refer to "E.2 Configuration Requirements" in the "Setup Guide VE".

5.3 Cancelling VIOM Integration

This section explains how to cancel VIOM integration.

Use the following procedure to cancel VIOM integration:

1. In the ROR console management software tree, right-click the target management software (VIOM), and select [Delete] from the popup menu.
The [Delete Resource] dialog is displayed.
2. Click <OK>.
The target management software (VIOM) is deleted.

To delete registered VIOM server profiles, follow the procedure described in "[2.1.1 Registering VIOM Server Profiles](#)" to open the Web interface of ServerView Virtual-IO Manager and delete the desired profiles from there.

Note

Integration with VIOM cannot be cancelled in the following cases.

- When there are spare server settings involving the VIOM server profile exchange method
- When there are servers using the VIOM server profile exchange method that are in the following states
 - Being switched over
 - Have been switched over (prior to failback)
 - Being failed back

- Server blades that are managed using VIOM, and are currently the target of operations by Resource Orchestrator (power control, image-related processes, etc.)
-

5.4 Deleting LAN Switches

This section explains how to delete LAN switches.

There are two methods for LAN switch deletion, based on the LAN switch registration method used.

- Deleting LAN Switch Blades
- Deleting LAN Switches

5.4.1 Deleting LAN Switch Blades

This section explains how to delete LAN switch blades.

Use the following procedure to delete LAN switch blades.

1. In the ROR console server resource tree, right-click the target LAN switch blade and select [Delete] from the popup menu.

The [Delete Resource] dialog is displayed.

2. Click <OK>.

The target LAN switch blade is un-registered.

5.4.2 Deleting LAN Switches

This section explains how to delete LAN switches.

Use the following procedure to delete LAN switches.

1. In the ROR console network resource tree, right-click the target LAN switch and select [Delete] from the popup menu.

The [Delete Resource] dialog is displayed.

2. Click <OK>.

The target LAN switch is deleted from the network resource tree.

5.5 Deleting VM Management Software

This section explains how to delete VM management software.

Use the following procedure to delete VM management software.

1. In the ROR console management software tree, right-click the target management software, and select [Delete] from the popup menu.

The [Delete Resource] dialog is displayed.

2. Click <OK>.

The target management software is deleted.

5.6 Clearing the Power Monitoring Environment

This section explains how to clear the power monitoring environment.

Clearing the power monitoring environment is done by deleting power monitoring targets.

For details on how to release collection settings, refer to "[3.7.2 Cancelling Collection Settings for Power Monitoring Environments](#)".

5.6.1 Deleting Power Monitoring Devices

This section explains how to delete power monitoring devices.

Use the following procedure to delete power monitoring devices:

1. In the ROR console power monitoring devices tree, right-click the target power monitoring device and select [Delete] from the popup menu.
The [Delete Resource] dialog is displayed.
2. Click <OK>.
The target power monitoring devices are deleted from the tree view.

5.7 Deleting Admin LAN Subnets [Windows]

This section explains how to delete admin LAN subnets.

Use the following procedure to delete an admin LAN subnet.

1. From the ROR console menu, select [Settings]-[Admin LAN Subnet].
The [Admin LAN Subnet] dialog is displayed.
2. Select the subnet to delete.
3. Click <Delete>.
The [Delete Admin LAN Subnet] dialog is displayed.
4. Click <OK>.
The target subnet information is deleted.



Note

It is not possible to delete the information of subnets which have managed servers registered.

Before deleting subnet information, delete all managed servers that have been registered on the relevant subnet.

5.8 Unregistering ETERNUS SF Storage Cruiser

This section explains how to unregister ETERNUS SF Storage Cruiser.

ETERNUS SF Storage Cruiser can be unregistered using the `rcxadm storagemgr unregister` command.

For details on the `rcxadm storagemgr unregister` command, refer to "5.9 rcxadm storagemgr" of the "Command Reference".

Chapter 6 Pre-configuration

This chapter provides an overview of the pre-configuration function and explains how to use system configuration files.

6.1 Overview

Using the Pre-configuration function, it is possible to create system definition files that can be later used to setup a Resource Orchestrator environment. Importing system configuration files makes it easy to perform various registration settings in one operation. This prevents the operating mistakes induced by sequences of individual, manual configuration steps.

The pre-configuration function can be used in the following situations.

- New Installation

From a traditional work office (or another off-site location), define the various parameters required for Resource Orchestrator and record them in a system configuration file. Next, send this definition file to your actual system location (machine room), and import the file into Resource Orchestrator using the import functionality of the ROR console. This single operation automates the registration of all the servers defined in the system configuration file.

- Backing up a System Configuration

Using the export function of the ROR console, the current Resource Orchestrator configuration can be exported to a system configuration file.


- Batch Re-configuration

The registration settings of already registered resources can be modified easily by exporting the current configuration to a system configuration file and editing the desired configuration items before re-importing that configuration file. The actual re-configuration is then performed as a single import operation.

- Re-use of Existing Configurations

Once a system has been fully setup, its configuration can be exported and re-used as a basis for the design of other systems. This makes it easy to design various systems located in different sites.

Figure 6.1 Examples of Use

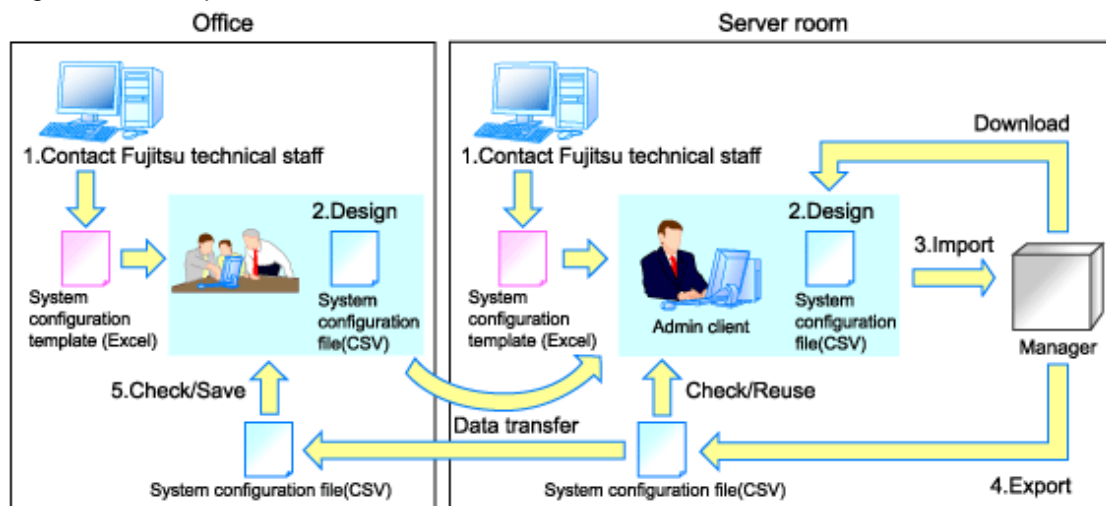

Only system configuration files in CSV format can be imported or exported. For details on the system configuration file's format, refer to "[Appendix A sFormat of CSV System Configuration Files](#)".

Resource Orchestrator provides a sample in CSV format. To obtain a copy of the Excel template (hereafter system configuration template), please contact Fujitsu technical staff. This system configuration template makes it easy to create system configuration files in CSV format.

- When loading a system configuration template from a CSV file, or importing a system configuration file from the ROR console

Use the format described in "[A.2 File Format](#)" for the system configuration file.

- When saving a file in CSV format from the system configuration template, or exporting a system configuration file from the ROR console

Export will be performed using the latest file format given in "A.2 File Format".

The following operations, usually performed from the ROR console, can be equally performed using the pre-configuration function.

- Registration
 - "2.1 Registering VIOM Coordination"
 - "2.3 When using Blade Servers"
 - "2.4.2 Registering LAN Switches"
 - "2.2 Registering VM Management Software"
 - "2.7 Registering Power Monitoring Devices" (*1)
 - "2.8 Registering Admin LAN Subnets [Windows]"
 - "2.3.4 Configuring VLANs on LAN Switches"
 - "8.2 HBA address rename Settings" of the "Setup Guide VE" (*2)
 - "8.4 Configuring the Monitoring Information" of the "Setup Guide VE"
 - "8.6 Server Switchover Settings"
- Modifying
 - "3.1.1 Changing Admin IP Addresses" (*3)
 - "3.1.6 Changing Admin LAN Subnets [Windows]"
 - "3.2.2 Changing Server Names"
 - "3.2.3 Changing Admin IP Addresses" (*3)
 - "3.2.4 Changing SNMP Communities"
 - "3.2.5 Changing Server Management Unit Configuration Settings"
 - "3.2.7 Changing VM Host Login Account Information"
 - "3.2.8 Changing the VLAN Settings of LAN Switch Blades"
 - "3.2.9 Changing HBA address rename Settings" (*2)
 - "3.2.10 Changing Boot Options"
 - "3.4 Changing VIOM Registration Settings"
 - "3.5 Changing LAN Switch Settings"
 - "3.6 Changing VM Management Software Settings"
 - "3.7 Changing Power Monitoring Environment Settings"
 - "3.8 Changing Monitoring Information Settings"
 - "8.7 Changing Server Switchover Settings"

*1: To start collecting environment data, the collection settings should be manually set from the ROR console's option dialog.

*2: Restart all the managed servers that were either registered or modified following an import operation.

*3: The pre-configuration's scope of configuration is the same as that of the ROR console.

Moreover, the pre-configuration function can perform the same labels and comments settings as those available in BladeViewer. Those settings are described in "3.6.1 Listing and Editing of Labels and Comments" and "Chapter 3 BladeViewer" of the "Operation Guide VE".

Note

- The following operations cannot be performed by the pre-configuration function, and should be performed from the ROR console.
 - Deleting registered resources from Resource Orchestrator
 - Changing the name of a registered chassis, physical server (only for servers other than PRIMERGY BX servers) or a power monitoring device
 - Deleting registered admin LAN subnets
 - Discovering, registering, or changing registration settings of a LAN switch
 - Detecting physical link information from a LAN switch
 - Cancelling VIOM Integration
 - Registration and deletion of SNMP trap destinations
 - Configuration and change of WWN information using ETERNUS SF Storage Cruiser integration
- The following operations cannot be performed by the pre-configuration function, and should be performed using commands.
 - Registration and deletion of ETERNUS SF Storage Cruiser integration
- Make sure that less than 200 resources are specified for registration or changing in the system configuration file specified for import.
If it is necessary to specify more than 200 resources for registration or changing, do by importing multiple system configuration files.
- When using ServerView Deployment Manager on the admin LAN, the following settings cannot be defined using the pre-configuration function. For details on co-existence with ServerView Deployment Manager, refer to "Appendix F Co-Existence with ServerView Deployment Manager" of the "Setup Guide VE".
 - Spare server settings (using the backup and restore or HBA address rename method)
 - HBA address rename settings

6.2 Importing the System Configuration File

This section explains how to import a system configuration definition file (saved in CSV format) from the ROR console.

Use the following procedure to import a system configuration definition file.

1. Prepare a system configuration file in CSV format.

Point

- System configuration templates in Excel format cannot be directly imported into Resource Orchestrator. Use the template's save to CSV function to produce a system configuration file in CSV format before importing.
 - Only system configuration files conforming to the format described in "[A.2 File Format](#)" can be imported. For details on the file format, refer to "[Appendix A sFormat of CSV System Configuration Files](#)".
 - Make sure that less than 200 resources are specified for registration or changing in the system configuration file.
If it is necessary to specify more than 200 resources for registration or changing, do by importing multiple system configuration files.
 - When importing system configuration files which begins with "RCXCSV,V1.0" in the first line, the agent cannot automatically be registered. Moreover, the registration fails in cases where a spare server is defined to a VM host in the system configuration file.
2. Open and log in to the ROR console according to "7.1 Login" of the "Setup Guide VE".
 3. In the ROR console, select [File]-[Import] from the menu.
The [Import System Configuration File] dialog is displayed.

4. Specify a configuration file prepared in 1.
5. Click <OK>.

The import process starts. The system configuration file is verified first, and then resources are imported one by one, following the order defined by the system configuration file.

The processing of resource registration or change is executed after the verification.

The process status can be checked in the Recent Operations area of the ROR console.

Clicking <Cancel> in the Recent Operations area displays a confirmation dialog and stops the import process. The <Cancel> button interrupts the import process after completing the current process. Note that the processing performed up to the error point is effective in the system.

Point

- The "SpareServer", "ServerAgent" and "ServerVMHost" sections must meet the conditions below when performing pre-configuration.

- a. Spare server section ("SpareServer")

In cases where the specified spare server has no operating system installed

The physical server which is defined as a spare server must not be defined in "ServerWWNN", "ServerAgent", or "ServerVMHost" sections.

When configuring a server using I/O virtualization as a spare server

The server must meet one of the following conditions:

- HBA address rename information must already be configured on the physical server in which a spare server is defined
- A VIOM server profile must already be configured on the physical server in which a spare server is defined

In cases where the specified spare server is a VM host

The physical server which is defined as a spare server must already be registered for the Resource Orchestrator agent.

When configuring a server using WWN information coordinating with ESC as a spare server

WWN information must already be configured on the primary server and the spare server.

If the above conditions are not meet, divide the section as different CSV files, and import them one by one.

- b. Agent section ("ServerAgent" or "ServerVMHost")

To register an agent, it must fulfill all of the following conditions. Please import agents only if they meet all these conditions.

The agent of Resource Orchestrator must already be installed on the managed server.

An OS must be running on the managed server.

The agent of the target physical server must be registered, or the agent registration section defined in the system configuration file.

- In the "Server" section, when registering or changing managed servers in different subnets than the admin server, one of the following conditions must be fulfilled:
 - The target subnet information is registered.
 - The target subnet's information is defined in the "Subnet" section of the CSV format system configuration file.
-

Note

- When registering a new server with the registered primary server, and configuring it as a spare server, import the "Server" section and "SpareServer" section separately.
 - When changing physical server names during pre-configuration, it cannot be performed at the same time as other pre-configuration operations. Import the "Server" section separately from other sections.
-

6. When the import is completed successfully, a message is displayed in the Recent Operations area.

Point

- Error handling

The processing of resource registration or change is executed after the verification of the system configuration file during import.

If an error occurs during the verification process, which means an invalid value exists in the system configuration file, an error message is displayed only in the event log. Correct the system configuration file, and import it again.

Invalid content also includes invalid section headers.

If there is an error message displayed, but the values in the specified line are all correct, check whether the section header is correct or not.

If an error occurs during registration and change process, an error message is displayed in both the recent operations area and the event log. In this case, the process is finished up to the previous line setting, that is, before the system configuration file line number which message is displayed. Correct the system configuration file and rectify the problem, then import it again. The process will resume from the position where it stopped.

- Import log file

The import log is saved in the following location on the manager.

In cases where an error occurs in the verification step, which means the processing of registration or changing the resource has not started yet, no log file is created.

[Windows]

Installation_folder\Manager\var\log\config.log

[Linux]

/var/opt/FJSVrcvmr/log/config.log

- Backing up the manager prior to import automatically

When importing is performed by a user, exporting is also automatically executed. The export file is saved as the backup of the manager configuration. Use this file to return to the previous values if there is an input error in the system configuration file. Note that the backup can store the latest five versions.

The system configuration file backup can be stored in the following folder on the manager.

[Windows]

Folder

Installation_folder\Manager\var\config_backup

File name

rcxconf-*YYYYMMDDHHMMSS*.csv (the date and time are shown in *YYYYMMDDHHMMSS*)

[Linux]

Directory

/opt/FJSVrcvmr/var/config_backup

File name

rcxconf-*YYYYMMDDHHMMSS*.csv (the date and time are shown in *YYYYMMDDHHMMSS*)

7. Perform post-setting operations.

If the import is completed successfully, perform the following procedures if required.

- If HBA address rename is set, then restart the relevant managed server.
- If the agent is registered, perform either one of the following to enable further backup or cloning operations.
 - Restart the managed server.
 - Restart the Related Service described in "7.3 Starting and Stopping the Agent" of the "Setup Guide VE".

6.3 Exporting the System Configuration File

This section explains the method for exporting a system configuration file containing the current system settings.

Use the following procedure to export the system configuration file in CSV format from the ROR console.

1. Open and log in to the ROR console according to "7.1 Login" of the "Setup Guide VE".
2. In the ROR console, select the [File]-[Export] menu item.
3. The export process starts automatically.
4. When the process complete successfully, the [File Download] dialog is displayed.

Click one of the following.

- When clicking <Save>

As the [Save As] dialog is displayed, specify the destination folder and file name, and then save the file. Note that the system configuration file can be exported only in the CSV format.

- When clicking <Open>

Open the file using an application (such as Excel) associated to CSV files.

- When clicking <Cancel>

Export operations will be cancelled.

Note

- If any server is in switchover state, the server name is enclosed in parentheses, such as "(name)".
- The admin server subnet information is not output in the "Subnet" section.

Point

Error handling

If an error occurs during the export, an error message is displayed. Follow the message diagnostic to resolve the problem.

Chapter 7 Cloning [Windows/Linux]

This chapter explains how to use the server cloning function.

7.1 Overview

Cloning is a function used to deploy a cloning image collected from a single managed server (source server) to other managed servers (destination servers).

This function shortens the time required for an initial installation as it can be used to install the same operating system and software on multiple servers.

Software maintenance can also be performed quickly and easily by deploying a cloning image collected from a server on which patch application or software addition or modification has been performed.

The information below is not copied when the cloning image is collected from the managed server; and will be automatically reconfigured when the cloning image is deployed. This enables a single cloning image to be deployed to different servers.

- Hostname
- IP address and subnet mask for the admin LAN
- Default gateway for the admin LAN

Settings other than the above (such as those for applications and middleware) are not automatically reconfigured, please set them manually before and after the cloning operation when necessary.

The public LAN settings (IP address and redundancy settings) for servers to which the cloning image is deployed can be configured easily by using the network parameter auto-configuration function.

For details on the network parameter auto-configuration function, refer to "[7.6 Network Parameter Auto-Configuration for Cloning Images](#)".

Cloning cannot be performed for Linux managed servers on which iSCSI disks have been configured.

Note

- When using ServerView Deployment Manager on the admin LAN, this function is disabled. Use the ServerView Deployment Manager cloning function. For details, refer to "Appendix F Co-Existence with ServerView Deployment Manager" of the "Setup Guide VE".
- When using server cloning, regardless of the boot environment (local/SAN/iSCSI) or RAID configurations, only content from the boot disk (first disk recognized by the BIOS on managed servers) is actually cloned. Data disk content (second disk onwards) cannot be cloned. It is recommended to use other backup software, or copy features available in storage systems for such purposes. Note that all partitions (Windows drives or Linux partitions) included in the boot disk will be cloned.

Table 7.1 Cloning Target Examples

Disk	Windows Drive	Cloning Target
First disk	C:	Yes
	E:	Yes
Second disk	D:	No
	F:	No

- Because managed servers are restarted during the cloning process, it is necessary to stop all applications running on those servers beforehand.
- The first partition must be a primary partition.

When multiple partitions exist within the disk of the cloning target, the drive letters for the drives other than the system drive may be changed after cloning images are deployed. Change the drive letter back to the original letter, after deploying cloning images.

- The cloning function only supports the following file systems on managed servers. Note that LVM partitions are not supported.

When the admin server is Windows

- NTFS
- EXT3
- EXT4
- LinuxSwap

When the admin server is Linux

- NTFS
- EXT3
- LinuxSwap

- Source and destination servers must meet the following conditions:
 - All server models must be identical.
 - The hardware configuration of each server must be identical, including optional cards, expansion boards, and the slots they are mounted in.
 - The same BIOS settings must have been made for all servers according to the procedure in "BIOS Settings of Managed Servers" in "4.1 2 Configuring the Server Environment" of the "Setup Guide VE".
 - All servers must use the same redundancy configuration (if any) and the same number of redundant paths for LAN and SAN connections. All servers must also be able to access the same network and storage devices.
Note that LAN or fibre channel switches connected in a cascade configuration are viewed as a single device.
- Some applications may require manual adjustments to function properly after cloning.
If necessary, manually perform such adjustments before or after the cloning process.
- No more than four image processes can be executed simultaneously (image processes include backup and restore of system images, as well as collection and deployment of cloning images). If five or more processes are requested, the fifth and subsequent processes are placed on standby.
Restore operations executed during a server switchover or failback process are also placed on standby if four image processes are already running. It is therefore recommended to restrict the number of simultaneous image processes to no more than three and keep slot(s) open for high-priority requests, such as automatic (Auto-Recovery) or manual switchovers.
- Software that needs to connect to an external server upon OS startup may not run properly after the collection or deployment of a cloning image.
In this case, restart the operating system after collecting or deploying the cloning image.
- For managed servers on which the Watchdog function is enabled, cloning operations on that server may be aborted by an automatic restart or shutdown. The Watchdog is a function which automatically restarts or shuts down non-responsive servers when their operating system does not respond for a given period.
It is therefore highly recommended to disable the Watchdog function before a cloning operation.
For details on the Watchdog function, refer to the manual of the managed server.
- When using MAK license activation with Windows Server 2008, Sysprep can be executed a maximum of three times.
Because this activation utility (sysprep) is run each time a cloning image is deployed, such images (ones collected from a MAK-activated server) cannot be (re-)collected and deployed more than three times (this count increases each time an image is updated or re-collected as a new image).
It is therefore not recommended to re-collect cloning images from image-deployed servers, but rather to collect a new image from a dedicated (freshly installed) master server.
- When a software initiator is used for iSCSI connection, do not deploy a cloning image back to its source server as there is a chance that data will be damaged.
When using data disks, use a hardware initiator.



7.2 Collecting a Cloning Image

When installing servers using the cloning function, first collect a cloning image from a source server. Collected cloning images can later be used for the deployment of other servers.

A cloning image can be collected only from a managed server on which an agent has been registered.

For details on registering agents, refer to "8.3 Software Installation and Agent Registration" of the "Setup Guide VE".

Cloning images cannot be collected from VM hosts or VM guests.

Preparations

- Install the desired operating system and necessary applications on the managed server from which a cloning image will be collected. Additionally, apply any required patches and other necessary settings. Make sure that the source server operates properly after those steps.
- When using Windows managers, and the configurations of managed servers are as below, execute the following commands before collecting cloning images.

- In a SAN data environment using a built-in disk boot, and a physical WWN or VIOM

```
>Installation_folder\Manager\bin\rxadm server set -name physical server -attr bootagt=dos <RETURN>
```

- When using the Red Hat Enterprise Linux 6 ext4 file system or on a server using UEFI, and one of the following conditions is met
 - In a SAN boot environment using HBA address rename
 - When using a rack or tower type server and the server is registered with "Disable" of "Association with server management software(ServerView)" is selected

```
>Installation_folder\Manager\bin\rxadm server set -name physical server -attr bootagt=winpe <RETURN>
```

- Make sure that the DHCP client has been enabled on the source server.
- For cloning images with the same name, the number that can be retained is the number of cloning image versions. When collecting a new cloning image while this limit has already been reached, select the version to be deleted. By default, the maximum number of stored cloning image versions is set to 3. This setting can be changed by following the instructions given in "[3.1.4 Changing the Maximum Number of Cloning Image Versions](#)".
- When deploying cloning images, the destination server temporarily starts up with its hostname set to either the physical server name or the source server's hostname. Some programs may experience problems when started with a different hostname. If such programs have been installed, configure their services not to start automatically. This has to be configured before collecting the cloning image. Some programs may experience problems when the same server name exists. If such programs have been installed, configure their services not to start automatically. This has to be configured before collecting cloning images.
- When using the network parameter auto-configuration function, check the operation before performing collection. For details, refer to "[7.6.1 Operation Checks and Preparations](#)".
- When the target of operation is a PRIMEQUEST server, confirm that boot option settings on the target server and the boot option set in BIOS are set to Legacy boot. If either setting is UEFI, change the settings to Legacy boot. For details on how to change boot options, refer to "[3.2.10 Changing Boot Options](#)".
- When using local disks as system disks, and iSCSI storage as data disks, refer to the advisory notes described in the "Table 4.1 Supported Storage Device Configurations" in "4.3.1.1 Storage Configuration" of the "Setup Guide VE".

[Windows]

- Enable NetBIOS over TCP/IP

- A volume license is required for cloning, and must be entered during the installation of Resource Orchestrator Agent. Refer to "2.2.1.2 Collecting and Checking Required Information" and "2.2.2 Installation [Windows/Hyper-V]" in the "Installation Guide VE" for details.

If no volume license is entered during the agent installation, or if this information is changed after installation, edit the following license configuration file on the source server. Note that the structure and location of this file depend on the version of Windows that is being used.

- In Windows Server 2003

Installation_folder\Agent\scw\SeparateSetting\sysprep\sysprep.inf

Edit the following line to enter a valid product ID.

ProductID= *Windows product key* (*1)

*1: 5-digit values separated by hyphens

Example

ProductID=11111-22222-33333-44444-55555

Note

An invalid product ID (invalid format or invalid value) will cause an error the next time a cloning image (collected from this server) will be deployed. Make sure to enter a valid product ID when editing the definition file.

- In Windows Server 2008

Installation_folder\Agent\scw\SeparateSetting\ipadj\activation.dat

In the [ActivationInfo] section, set the following parameters using a "parameter=value" syntax.

Refer to the following table for details on each parameter.

Table 7.2 Structure of the Definition File

Format	Parameter	Value
KMS	.cmd.remotescript. 1.params.kmscheck (Mandatory)	The KMS host search type. Select one of the following. - AUTO Automatic search. - MANUAL Specify the KMS host. If "MANUAL" is selected, ensure that .cmd.remotescript. 1.params.kmsname is set.
	.cmd.remotescript. 1.params.kmsname	The host name (FQDN), computer name, or IP address of the KMS host.
	.cmd.remotescript. 1.params.kmsport	The KMS host port number. The default is 1688.
MAK	.cmd.remotescript. 1.params.makkey (Mandatory)	The MAK key.
Comm on	.cmd.remotescript. 1.params.ieproxy	Host name (FQDN) and the port number of the proxy server. The host name and port number are separated by a colon (":").

Format	Parameter	Value
	.cmd.remotescript.1.params.password	The Administrator password. An existing password setting will be displayed as an encrypted character string. To change this password, rewrite it in plain text, delete the following "encrypted=yes" line, and follow the encryption procedure described below. If this parameter is not set, the password will be re-initialized.
	encrypted	The encryption status of the Administrator password. "yes" means that the password is encrypted. If this line exists, the rcxadm deployctl command does not operate.

Example

- With KMS (Automatic Search)

```
[ActivationInfo]
.cmd.remotescript.1.params.kmscheck=AUTO
.cmd.remotescript.1.params.ieproxy=proxy.activation.com:8080
.cmd.remotescript.1.params.password=PASSWORD
```

- With KMS (Manual Settings)

```
[ActivationInfo]
.cmd.remotescript.1.params.kmscheck=MANUAL
.cmd.remotescript.1.params.kmsname=fujitsu.activation.com
.cmd.remotescript.1.params.kmsport=4971
.cmd.remotescript.1.params.ieproxy=proxy.activation.com:8080
.cmd.remotescript.1.params.password=PASSWORD
```

- With MAK

```
[ActivationInfo]
.cmd.remotescript.1.params.makkey=11111-22222-33333-44444-55555
.cmd.remotescript.1.params.ieproxy=proxy.activation.com:8080
.cmd.remotescript.1.params.password=PASSWORD
```

If the Administrator password has been changed, execute the following command. This command will encrypt the .cmd.remotescript.1.params.password parameter and add an "encrypted=yes" line to show that it is encrypted. For details, refer to "5.4 rcxadm deployctl" in the "Command Reference".

```
> "Installation_folder\Agent\bin\rcxadm" deployctl passwd -encrypt <RETURN>
```

- With MAK (Already Encrypted Password)

```
[ActivationInfo]
.cmd.remotescript.1.params.makkey=11111-22222-33333-44444-55555
.cmd.remotescript.1.params.ieproxy=proxy.activation.com:8080
.cmd.remotescript.1.params.password=xyz123456
encrypted=yes
```

Collecting Cloning Images

Use the following procedure to collect a cloning image from a source server:

1. Place the source server into maintenance mode.
 - a. In the ROR console server resource tree, right-click the desired server (or its physical OS), and select [Maintenance Mode]-[Set] from the popup menu.

The [Set Maintenance Mode] dialog is displayed.
 - b. Click <OK>.

The selected source server is placed into maintenance mode.

2. Stop all operations running on the source server.

When a cloning image is collected, the source server is automatically restarted. Therefore, all operations running on the source server should be stopped before collecting the image.

Cancel the settings in the following cases:

- NIC redundancy has been configured for admin LANs and public LANs (*1)
- Tagged VLANs have been configured on NICs

*1: However, there is no need to cancel public LAN redundancy settings made via the network parameter auto-configuration function.

The following settings are disabled during cloning image collection, which may result in services failing to start on server startup. To avoid this, automatic startup should be disabled for any service that depends on the following settings.

- Hostname
- IP address and subnet mask for the admin LAN
- Default gateway for the admin LAN

Note

When using SUSE Linux Enterprise Server, it is necessary to configure the managed server so that only the NIC used for the admin LAN is active when the server is started. For details on how to modify the configuration, refer to the operating system manual. If this procedure is not performed, start up of network interfaces will take time, and errors may occur during the process.

3. Collect a cloning image.
 - a. In the ROR console server resource tree, right-click the physical OS of the source server and select [Cloning]-[Collect] from the popup menu.

The [Collect a Cloning Image] dialog is displayed.
 - b. To use this feature, the following settings must first be defined:

Cloning Image Name

Enter a name to identify the collected cloning image.

New

When creating a new cloning image, select "New" and enter a new cloning image name.

For a cloning image name, enter a character string beginning with an alphabetic character and containing up to 32 alphanumeric characters and underscores ("_").

Update

When updating an existing cloning image, select "Update" and select a cloning image from the list.

For cloning images with the same name, the number that can be retained is the number of cloning image versions.

If the selected cloning image has already reached this limit, it is necessary to delete one of its existing versions in order to create a new cloning image. This can be done directly in this dialog by selecting the version to be deleted from the displayed list.

The selected version will be automatically deleted when collection of the new cloning image completes.

By default, the maximum number of stored cloning image versions is set to 3.

This setting can be changed by following the instructions given in "[3.1.4 Changing the Maximum Number of Cloning Image Versions](#)".

Comments (Optional)

Enter a comment that identifies the cloning image.

Up to 128 characters other than percent signs ("%"), back slashes ("\ cant="), double quotes (" cant="), and line feed characters can be specified.

If [Update] was selected for the "Cloning Image Name" option, the comment of the most recent image version is displayed. If no comment is specified, a hyphen ("-") will be displayed in the ROR console.

It is recommended to enter comments with information such as hardware configuration (server model, disk size, and number of network interfaces), software configuration (names of installed software and applied patches), and the status of network parameter auto-configuration function.

"Release Maintenance Mode after collection" checkbox

Enable this option to automatically release the source server from maintenance mode after image collection and maintenance work.

If this option disabled, maintenance mode should be released manually after collecting the cloning image.

c. Click <OK>.

The process of collecting the cloning image starts.

The process status can be checked in the Recent Operations area of the ROR console.

Clicking <Cancel> in the Recent Operations area displays a confirmation dialog and stops the process.

4. Restart applications on the source server.

Restore the settings of any service whose startup settings were changed in 2. and start these services.

Restore the settings for the following cases:

- NIC redundancy for admin LANs and public LANs has been released
- The settings of tagged VLANs for NICs have been released

Check that applications are running properly on the source server.

5. Release the source server from maintenance mode.

This step is not required if the "Release Maintenance Mode after collection" checkbox was enabled in the [Collect a Cloning Image] dialog.

a. In the ROR console server resource tree, right-click the source server (or its physical OS) and select [Maintenance Mode]-[Release] from the popup menu.

The [Release Maintenance Mode] dialog is displayed.

b. Click <OK>.

The managed server is released from maintenance mode.

- While a cloning image is being collected, no other operations can be performed on that image or other versions of that image (images sharing the same image name).
- Communication errors between the admin and source servers (resulting in an image collection failure or an "unknown" status on the source server) may be caused by improper use of the network parameter auto-configuration function (described in "[7.6 Network Parameter Auto-Configuration for Cloning Images](#)").
 - Auto-configuration settings were made for the admin LAN
 - Auto-configuration settings were made for the public LAN using IP addresses contained within the admin LAN subnet range

Log in to the source server and check for the presence of such settings in the definition file for the network parameter auto-configuration function.

If incorrect settings were made, perform the following operations to fix communication errors.

- Fix network settings on destination servers

Run the `rcxadm lanctl unset` command described in "[7.6.3 Clearing Settings](#)" to reset network settings to their original values.

If the admin LAN IP address is not set on the source server, set it manually to restore communications between the admin server and the source server.

- Re-collect the cloning image

Correct any errors found in the source server's network parameter auto-configuration function definition file and re-collect the cloning image from the source server.

Delete any cloning image that was collected with incorrect network parameters.

7.3 Deploying a Cloning Image

Once collected, cloning images can be deployed to one or more destination servers.

Cloning images collected from the source server can only be deployed to destination servers which satisfy the following conditions:

- Destination servers should be in either "normal", "warning", "unknown", or "stop" status.
- Destination servers should have been placed into maintenance mode.
- Destination servers should be of the same model as the source server.
- I/O virtualization should be used, when destination servers are spare servers.

Cloning images cannot be deployed to managed servers where VM hosts or VM guests are running.

Preparations

- When using Windows managers, and the configurations of managed servers are as below, execute the following commands before deploying cloning images.

- In a SAN data environment using a built-in disk boot, and a physical WWN or VIOM

```
> Installation_folder\Manager\bin\rxadm server set -name physical server -attr bootagt=dos <RETURN>
```

- When using the Red Hat Enterprise Linux 6 ext4 file system or on a server using UEFI, and one of the following conditions is met

- In a SAN boot environment using HBA address rename

- When using a rack or tower type server and the server is registered with "Disable" of "Association with server management software(ServerView)" is selected

```
> Installation_folder\Manager\bin\rxadm server set -name physical server -attr bootagt=winpe <RETURN>
```

If the above command has not been executed on the server from which the cloning image is being collected, the cloning image may not be collected correctly. Delete that cloning image and then redo the cloning image collection.

- It is recommended to back up destination servers before deploying cloning images, as this will simplify the recovery procedure in case of the deployed cloning image is faulty.

For details on backing up servers, refer to "8.2 Backup" of the "Operation Guide VE".



Note

- Cloning images cannot be deployed to servers that have been set up as spare servers for other managed servers, when not using I/O virtualization. Cancel any such settings before deploying a cloning image.
- VLAN settings (on adjacent LAN switch ports) cannot be deployed during server cloning. LAN switch VLAN settings should be set up before deploying a cloning image.
For details on how to configure VLAN settings on LAN switches, refer to "2.3.4 Configuring VLANs on LAN Switches".
- When deploying a cloning image back to its source server, the source server should be backed up before deployment.
For details on backing up servers, refer to "8.2 Backup" of the "Operation Guide VE".

If the deployed cloning image is faulty and causes deployment errors, use the following procedure to collect a new cloning image.

1. Restore the system image that was backed up before cloning image deployment.
 2. Fix any incorrect settings on the source server
 3. Collect a new cloning image
 4. Delete the faulty cloning image
- When deploying cloning images to multiple managed servers, if the managed servers belong to different subnets, cloning images cannot be deployed.
 - On PRIMEQUEST, cloning images cannot be deployed to partitions with UEFI configured.
To collect/deploy cloning images it is necessary to change BIOS settings and configure boot option to Legacy boot.
For details on how to change boot options, refer to "[3.2.10 Changing Boot Options](#)".
 - When using local disks as system disks, and iSCSI storage as data disks, refer to the advisory notes described in the "Table 4.1 Supported Storage Device Configurations" in "4.3.1.1 Storage Configuration" of the "Setup Guide VE".

Deploying a Cloning Image

Use the following procedure to deploy a cloning image to one or more destination servers:

1. Place the destination server(s) into maintenance mode (only for agent-registered servers).
 - a. In the ROR console server resource tree, right-click the desired server (or its physical OS), and select [Maintenance Mode]-[Set] from the popup menu.
The [Set Maintenance Mode] dialog is displayed.
 - b. Click <OK>.
The selected source server is placed into maintenance mode.
2. Deploy a cloning image.
 - Deploying a cloning image to a single destination server
 - a. In the ROR console server resource tree, right-click the destination server (or its physical OS) and select [Cloning]-[Deploy] from the popup menu.
The [Deploy a Cloning Image] dialog is displayed.
The available cloning images are displayed.
Only cloning images that have been collected from a server of the same model as the destination server are available for deployment.
 - b. Select the cloning image to deploy, and set the following items.

Server name after deployment

Enter the name of the server to which the cloning image is to be deployed.

By default, the physical OS name is entered if the physical OS is registered. If the physical OS is not registered, the physical server name is entered.

[Windows]

A string composed of up to 63 alphanumeric characters, underscores, (" _"), and hyphens, ("-").
The string cannot be composed solely of numbers.

[Linux]

A string composed of up to 64 alphanumeric characters, and the following symbols:

"%", "+", ",", "-", ".", "/", ":", "=", "@", "_", "~"



When using SUSE Linux Enterprise Server, it is not possible to configure server names that include periods (".") for the post-deployment server names of cloning images.

Information

Since the entered server name is also used as the hostname of its corresponding destination server, it is recommended to use only characters defined in RFC (Request For Comments) 952:

- Alphanumeric characters
- Hyphens, ("-")
- Periods, (".") [Linux]

"Release from Maintenance Mode after deployment" checkbox

Enable this option to automatically release the destination server from maintenance mode after cloning image deployment. If this option disabled, maintenance mode should be released manually after collecting the cloning image.

- c. Click <OK>.

The cloning image deployment process starts.

The process status can be checked in the Recent Operations area of the ROR console.

Clicking <Cancel> in the Recent Operations area displays a confirmation dialog and stops the process.

Note

Please note that canceling the deployment of a cloning image does not restore the destination server to the state before the deployment took place.

- Deploying a cloning image to multiple destination servers

- a. Select the [Image List] tab in the ROR console.

A list of cloning images is displayed under the cloning image list.

- b. Right-click the cloning image to deploy and select [Deploy] from the popup menu.

The [Deploy a Cloning Image] dialog is displayed.

A server that can be deployed is displayed.

- c. Check the checkbox of the server to deploy a cloning image to, and set the following items:

"Release from Maintenance Mode after deployment" checkbox

Enable this option to automatically release the destination server from maintenance mode after cloning image deployment. If this option disabled, maintenance mode should be released manually after collecting the cloning image.

The "Server Name" column displays the names of each destination servers.

By default, server names (computer name or hostname) or physical server names are displayed.

The names specified in this column will be assigned to destination servers as their computer names (for Windows systems) or system node names (for Linux systems).

Those names can be changed using the following procedure.

1. Double-click the "Server name after deployment" cell of a server.

The "Server name after deployment" cell becomes editable.

2. Enter a new server name.

[Windows]

A string composed of up to 63 alphanumeric characters, underscores, ("_"), and hyphens, ("-").

The string cannot be composed solely of numbers.

[Linux]

A string composed of up to 64 alphanumeric characters, and the following symbols:

"%", "+", ",", "-", ".", "/", ":", "=", "@", "_", "~"

Information

Since the entered server name is also used as the hostname of its corresponding destination server, it is recommended to use only characters defined in RFC (Request For Comments) 952:

- Alphanumeric characters
- Hyphens, ("-")
- Periods, (".") [Linux]

d. Click <OK>.

The cloning image deployment process starts.

The process status can be checked in the Recent Operations area of the ROR console.

Clicking <Cancel> in the Recent Operations area displays a confirmation dialog and stops the process.

Note

When this process is cancelled, cloning image deployment to all destination servers is cancelled.

Please note that canceling the deployment of a cloning image does not restore the destination server to the state before the deployment took place.

3. Restart applications on the destination server(s).

Perform the following settings if necessary:

- The settings of NIC redundancy for admin LANs and public LANs
- The settings of tagged VLANs for NICs

After deployment, destination servers are set to use the admin server as their default gateway.

Re-configure such network settings if necessary. Check that applications are running properly on destination servers.

At this point, if an application is still using the source server's hostname or IP address (e.g. within application-specific settings or configuration file), manually update such settings with the destination server values.

Note

When a managed server is a PRIMEQUEST, set the PSA-MMB IP address after deployment. For details, refer to the manual of the relevant hardware.

4. Release maintenance mode.

This step is not required if the "Release from Maintenance Mode after deployment" checkbox was enabled in the [Deploy a Cloning Image] dialog.

- In the ROR console server resource tree, right-click the source server (or its physical OS) and select [Maintenance Mode]-[Release] from the popup menu.

The [Release Maintenance Mode] dialog is displayed.

- Click <OK>.

The source server is released from maintenance mode.

Note

- When deploying a cloning image that was collected from a Windows server, the following information is reset on each destination server. This is a result of the execution of Microsoft's System Preparation (Sysprep) tool.

If necessary, restore the following settings to their original values after the cloning image has been deployed:

- Desktop icons and shortcuts

- Drive mappings
- The "Startup and Recovery" settings accessed from the [Advanced] tab of the [System Properties] window
- Virtual memory settings
- TCP/IP-related settings
- The "What country/region are you in now?" settings in the locations defined in the [Location Information] window
- Disk quota settings
- Storage Provider settings
- Microsoft Internet Explorer settings (RSS feeds subscription information, information stored by the Autocomplete function, saved passwords)
- Microsoft Outlook Express settings (mail/directory server passwords)
- Network card driver settings (drivers without a digital signature should be replaced by the latest updated drivers with a digital signature)
- Access rights to the '\Documents and Settings\Default User' folder
- While a cloning image is being deployed, collection, deployment, and deletion cannot be performed simultaneously on the cloning images with the same name.
- If a cloning image is deployed to a system with a larger disk capacity than the disk space required for the cloning image, any excessive disk space becomes unused disk space. This unused disk space can be used for other purposes.
- Destination servers are rebooted several times during cloning image deployment. Make sure that deployment has completed before restarting operations and making further settings.
- The number of reboots during deployment increases when using the HBA address rename function.
- Communication errors between the admin and destination servers (resulting in an image deployment failure or an "unknown" status on the destination server) may be caused by improper use of the network parameter auto-configuration function (described in "[7.6 Network Parameter Auto-Configuration for Cloning Images](#)"). Examples of improper use are given below.

- Auto-configuration settings were made for the admin LAN
- Auto-configuration settings were made for the public LAN using IP addresses contained within the admin LAN subnet range

Log in to the destination servers on which errors occurred and check for the presence of such settings in the definition file for the network parameter auto-configuration function.

If incorrect settings were made, perform the following operations to fix communication errors.

- Fix network settings on destination servers
 - If the source and destination servers are the same
 - Restore the system images backed up before cloning image deployment.
 - If the destination server is different from the source server
 - Run the `rxadm lanctl unset` command described in "[7.6.3 Clearing Settings](#)" to reset network settings to their original values.

If the admin LAN IP address is not set on the source server, set it manually to restore communications between the admin server and the source server.

- Re-collect the cloning image
 - Correct any errors found in the definition file for the network parameter auto-configuration function and re-collect the cloning image.
 - Re-deploy the cloning image to the destination servers for which deployment failed.
 - Delete any cloning image that failed to deploy.
- If Windows Server 2008 activation failed during deployment, "Message number 47233" is displayed. This message indicates that deployment of Windows Server 2008 completed but that activation failed. For details on the appropriate corrective action, refer to "Message number 47233" in the "Messages VE".

- When a cloning image is deployed to multiple servers, it may be necessary to enable IGMP snooping on admin LAN switches. If IGMP snooping is not enabled, transfer performance may deteriorate when ports with different speeds co-exist in the same network, or multiple image operations are run simultaneously.

7.4 Viewing a Cloning Image


This section explains how to display collected cloning images.

Select the [Image List] tab in the ROR console.

A list of cloning images is displayed under the cloning image list.

Use this list to manage the cloning images used by Resource Orchestrator.

Figure 7.1 Cloning Image List

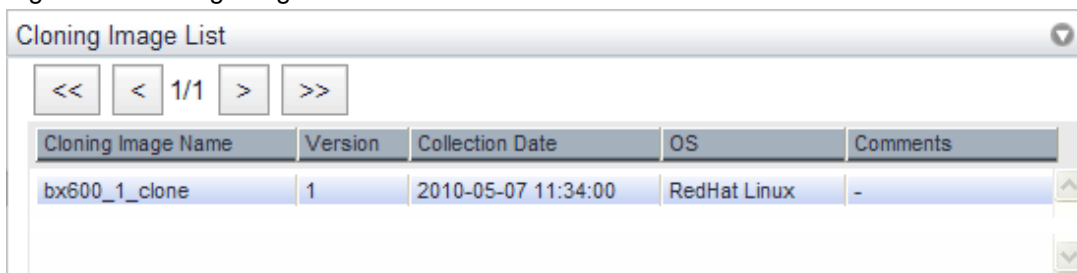

Cloning Image Name	Version	Collection Date	OS	Comments
bx600_1_clone	1	2010-05-07 11:34:00	RedHat Linux	-

For details on the "Cloning Image List", refer to "[1.5.4 \[Image List\] Tab](#)".

7.5 Deleting a Cloning Image

This section explains how to delete a cloning image.

Use the following procedure to delete a cloning image:

1. Select the [Image List] tab in the ROR console.
A list of cloning images is displayed under the cloning image list.
2. In this list, right-click the name of the cloning image to delete and select [Delete] from the popup menu.
A confirmation dialog is displayed.
3. Click <OK>.
The selected cloning image is deleted.



While the cloning image is being deleted, no operations can be performed on other versions of the same cloning image (images that share the same image name).

7.6 Network Parameter Auto-Configuration for Cloning Images

This section explains the network parameter auto-configuration function for cloning images.

Defining public LAN network parameters for each managed server before collecting cloning images enables automatic configuration of the cloned servers' public LAN network interfaces when later deploying those cloning images.


This speeds up the deployment of multiple managed servers, as public LAN IP addresses no longer need to be manually and separately configured on each cloned server.

To use this feature, the following settings must first be defined:

- When not Using LAN Redundancy
 - IP address

- Subnet mask
- When Using LAN Redundancy [Linux]
 - The "NIC switching mode (Physical IP address takeover function)" of PRIMECLUSTER Global Link Services

Figure 7.2 Setup Procedure When Using the Network Parameter Auto-configuration Function

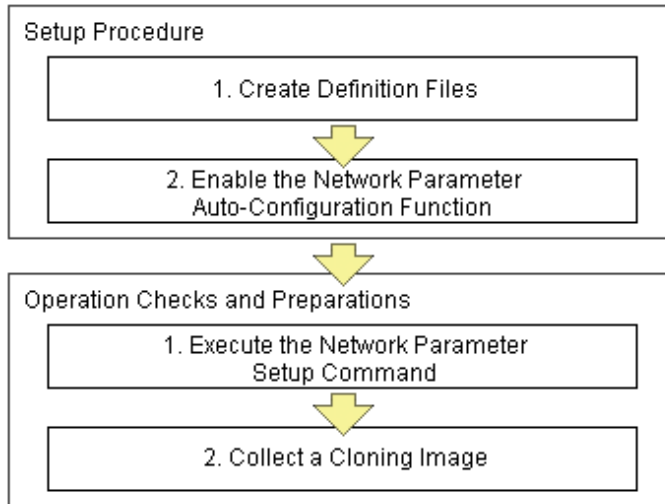

Note

[Windows/Linux]

The network parameter auto-configuration function cannot be used on the admin LAN. If it is used, deployment commands may fail when deploying new servers may fail, or communication issues may occur during collection or deployment of cloning images.

[Linux]

When using LAN redundancy, cancel any network redundancy settings that were made on managed servers using PRIMECLUSTER Global Link Services before deploying new servers.

If not cancelled, deployment commands may fail when deploying new servers.

Once the deployment of new servers has completed, redundancy network configurations (for the admin LAN or other networks) that are not handled by the network parameter auto-configuration feature should be set up manually.

PRIMECLUSTER Global Link Services cannot be used to enable admin LAN redundancy on servers running SUSE Linux Enterprise Server or Oracle Enterprise Linux operating systems.

Setup Procedure

Use the following procedure to set up network parameters for a public LAN:

Point

Using a specific managed server (reference server) to collect and update cloning images is recommended in order to centrally manage the network parameters definition files.

1. Create Definition Files

This section explains how to setup the following definition files.

- FJSVrcx.conf
- ipaddr.conf

Create those definition files under the following folder on the reference server:

[Windows]

Installation_folder\Agent\etc\FJSVrcx.conf

Installation_folder\Agent\etc\ipaddr.conf

[Linux]

/etc/FJSVrcx.conf

/etc/opt/FJSVnrmp/lan/ipaddr.conf

Sample configuration of the definition file (FJSVrcx.conf)

```
admin_LAN=192.168.1.11
hostname=node-A
```

- admin_LAN
Enter the IP address used by the reference server on the admin LAN.
- hostname
Enter the physical server name of the reference server.

Format of the definition file (ipaddr.conf)

The definition file is made up of the following entries:

- One or more node entries
- One or more interface entries (with or without redundancy) under each node entry

Figure 7.3 Sample configuration of the definition file (ipaddr.conf)

```
NODE_NAME="node-A"
IF_NAME0="eth1"
IF_IPAD0="192.168.10.11"
IF_MASK0="255.255.255.0"
NODE_NAME="node-B"
VIF_NAME0="sha0"
VIF_IPAD0="192.168.20.11"
VIF_MASK0="255.255.255.0"
PRI_NAME0="eth2"
SCD_NAME0="eth3"
POL_ADDR0="192.168.20.100,192.168.20.200"
PAT_NAME0="sha1"
POL_HUBS0="ON"
```

Refer to the following sample file for details of how to set the definition file (ipaddr.conf).

[Windows]

Installation_folder\Agent\etc\ipaddr.sample

[Linux]

/etc/opt/FJSVnrmp/lan/ipaddr.sample



Blank spaces and comment lines (lines starting with a comment symbol (#) are ignored.

The expected content of each entry is explained below.

- Node Entries
The following table explains how to define each node entry.

Table 7.3 Node Entry Settings

Setting	Keyword	Expected Value	Description
Managed server name	NODE_NAME	Physical Server Name	Physical server name that was set when registering the managed server.

 **Note**

Specify additional entries for any node (server) that may be added in the future (one entry per server).

- Interface Entries (without Redundancy)

The following table explains how to define each interface entry.

Keywords for interface entries should be appended with a number between 0 and 99.

 **Note**

The number appended to each entry's keyword should start with 0 and increase incrementally.

Table 7.4 Interface Entry Settings (without Redundancy)

Setting	Keyword	Expected Value	Description
Interface name	IF_NAME	Interface name	Specify the interface name as displayed by the operating system. (*1) Example [Windows] Local area connection 2 [Linux] ethX (where X is an integer equal to or greater than 0)
IP address	IF_IPAD	IP address in xxx.xxx.xxx.xxx format	-
Subnet mask	IF_MASK	Subnet mask in xxx.xxx.xxx.xxx format	-

*1: As Windows allows interface names to be changed, ensure that the names defined here match those displayed in Windows.

- Interface Entries (with Redundancy) [Linux]

The following table explains how to define each interface entry.

Keywords for interface entries should be appended with a number between 0 and 99.

This setting uses the "NIC switching mode (Physical IP address takeover function)" of the PRIMECLUSTER Global Link Services product, which requires a virtual interface set with its own IP address.

Within a same node entry, it is possible to define interface entries both with and without redundancy settings as long as interface names differ.

 **Note**

The number appended to each entry's keyword (including both entries with and without redundancy settings) should start with 0 and increase incrementally.

When there is a mixture of interfaces with and without redundancy, assign values in ascending order to the interfaces without redundancy as well.

Interface entries with redundancy settings are only activated with Linux. With Windows, these interface entries will be ignored.

Table 7.5 Interface Entry Settings (with Redundancy)

Setting	Keyword	Expected Value	Description
PRIMECLUSTER GLS virtual interface name	VIF_NAME	sha X	X is an integer between 0 and 255.
IP address specified for virtual interface	VIF_IPAD	IP address in xxx.xxx.xxx.xxx format	-
Subnet mask	VIF_MASK	Subnet mask in xxx.xxx.xxx.xxx format	-
Name of primary interface	PRI_NAME	Interface name (eth X)	X is an integer equal to or greater than 0. This setting specifies the primary interface name when a pair of interface names exists. <Example> eth2
Name of secondary interface	SCD_NAME	Interface name (eth Y)	Y is an integer equal to or greater than 0. This setting specifies the secondary interface name when a pair of interface names exists. <Example> eth3
IP address of monitored destination	POL_ADDR	IP address in xxx.xxx.xxx.xxx format	Up to two IP addresses can be specified, separated by a comma. When hub-to-hub monitoring is to be performed, specify two monitored destinations. Hub-to-hub monitoring will not be performed if only one destination is specified. In this case, the value specified in POL_HUBS (whether to perform hub-to-hub monitoring) will not be referenced.
Virtual interface name for standby patrol	PAT_NAME	sha Y	Y is an integer between 0 and 255. Specify a name that is different from the virtual interface name. Do not set anything unless standby patrolling is set.
Hub-to-hub monitoring ON/OFF	POL_HUBS	ON/OFF	Specify "ON" to enable hub-to-hub monitoring, or "OFF" otherwise. This setting is valid only if two monitoring destinations are specified. If only one monitoring destination is specified, this setting is disabled (set to "OFF").

Refer to the PRIMECLUSTER Global Link Services manual for details on each setting.

2. Enable the Network Parameter Auto-Configuration Function

Enable the network parameter auto-configuration function by executing the following command. Execute this command from a managed server.

[Windows]

```
>"Installation_folder\Agent\bin\rxadm" lanctl enable <RETURN>
```

[Linux]

```
# /opt/FJSVrcxat/bin/rxadm lanctl enable <RETURN>
```

For details on this command, refer to "5.6 rxadm lanctl" of the "Command Reference".

7.6.1 Operation Checks and Preparations

Use the following procedure to actually apply the definition file's settings on the reference server and prepare a cloning image to be used for further server deployments. The definition file's settings applied from the definition file should be validated before image collection by checking the reference server's behavior and configuration.

1. Manually Execute the Network Parameter Setup Command

Execute the network parameter configuration command on the reference server holding the prepared definition file and check that the defined settings are applied correctly.

Executing the Command

Before collecting the cloning image, run the following command to apply the definition file and verify that the defined settings are actually reflected on the reference server. This command also activates network parameter auto-configuration for any cloning image subsequently collected. Once this command has been executed, the network configuration that was described in the definition file will be performed automatically.

[Windows]

```
>"Installation_folder\Agent\bin\rxadm" lanctl set <RETURN>
```

[Linux]

```
# /opt/FJSVrcxat/bin/rxadm lanctl set<RETURN>
```

For details on this command, refer to "5.6 rxadm lanctl" of the "Command Reference".

Validating Settings (without LAN redundancy)

Use a command provided by the operating system (ipconfig for Windows and ifconfig for Linux) to confirm that network interface settings (without redundancy) were correctly applied.

Validating settings (with LAN redundancy) [Linux]

Use the following commands to confirm that network interface settings (with redundancy) were correctly applied.

- Using the /opt/FJSVhanet/usr/sbin/dsphanet Command

```
# /opt/FJSVhanet/usr/sbin/dsphanet <RETURN>
[IPv4,Patrol]
Name          Status   Mode CL  Device
+-----+-----+-----+-----+-----+
+
sha0          Active  e   OFF  eth0(ON),eth1(OFF)
sha2          Active  p   OFF  sha0(ON)
sha1          Active  e   OFF  eth2(ON),eth3(OFF)
[IPv6]
Name          Status   Mode CL  Device
+-----+-----+-----+-----+-----+
```

Items to confirm

- The status of the virtual interface must be "Active".
- When the standby patrol function is used ("p" mode), the status of the virtual interface set in standby patrol ("sha2" in the output example above) must be "Active".
- Using the `/opt/FJSVhanet/usr/sbin/dsppoll` Command

```
# /opt/FJSVhanet/usr/sbin/dsppoll <RETURN>

Polling Status      = ON
interval(idle)     = 5( 60)
times               = 5
repair_time         = 5
link detection      = NO
FAILOVER Status     = YES

Status  Name  Mode Primary Target/Secondary Target          HUB-HUB
+-----+-----+-----+-----+-----+-----+-----+
ON      sha0  e   192.168.1.101(ON)/192.168.1.102(WAIT)  ACTIVE
ON      sha1  e   192.168.1.101(ON)/192.168.1.102(WAIT)  ACTIVE
```

Items to confirm

- The monitoring status (Polling Status) must be "ON" (monitoring in progress)
- If one monitoring destination is specified, the status of that destination (Primary Target) must be "ON" (monitoring in progress)
- If two monitoring destinations are specified, the status of the primary destination (Primary Target) must be "ON" (monitoring in progress) and the status of the secondary destination (Secondary Target) must be "WAIT" (on standby)
- When HUB-HUB monitoring is set to "ON", the status (HUB-HUB) must be "ACTIVE" (monitoring in progress)

If the interface settings have not been configured correctly, clear the settings using the `rcxadm lanctl unset` command, and then correct the definition file before executing the `rcxadm lanctl set` command again.

If anything (including user-defined checks) does not turn out as expected even though the settings were applied correctly, check the network connections and the monitoring target, and take appropriate action.

Another test is to either deactivate the port on the LAN switch blade corresponding to the network interface where communications are actually being performed, or disconnect the cable from an external port on the LAN switch blade, to check whether the spare network interface automatically takes over communication. If the standby patrol function is enabled, check the port status or check that the status of the standby network interface changes to "WAIT" after reconnecting the cable.

2. Collect a Cloning Image

Collect a cloning image from the managed server checked in step 1.

For details on how to collect cloning images, refer to ["7.2 Collecting a Cloning Image"](#).

Note

[Linux]

When a cloning image is collected, any LAN redundancy settings on managed servers are canceled, and only network parameters for the defined public LAN are set up again when collection completes.

If LAN redundancy has been manually set up, set the LAN redundancy settings again manually.

7.6.2 Maintenance

If the network parameter auto-configuration function fails, an error message is output together with error details to the following file:

[Windows]

`Installation_folder\Agent\var\log\error_lan.log`

[Linux]

/var/opt/FJSVnrmpl/logs/error_lan.log

For details on message meanings and appropriate corrective actions, refer to "Messages VE".

The file size limit is 32 KB and only one version is maintained. Old logs will have the extension ".old" appended to the file name and remain in the same directory.

7.6.3 Clearing Settings

This section explains how to disable the network parameter auto-configuration function and clear the settings that were applied.

Disabling the Network Parameter Auto-Configuration Function

The network parameter auto-configuration function of the cloning image being collected can be disabled by executing the following command.

After disabling it, collect a new cloning image to update the existing image.

[Windows]

```
>"Installation_folder\Agent\bin\rxadm" lanctl disable <RETURN>
```

[Linux]

```
# /opt/FJSVrcxat/bin/rxadm lanctl disable <RETURN>
```

Clearing Network Parameter Settings

If network settings must be added or changed due to the addition of a new server, first clear the existing settings. Clear the network parameter settings of managed server by executing the following command:

[Windows]

```
>"Installation_folder\Agent\bin\rxadm" lanctl unset <RETURN>
```

[Linux]

```
# /opt/FJSVrcxat/bin/rxadm lanctl unset <RETURN>
```

For details on this command, refer to "5.6 rxadm lanctl" of the "Command Reference".



Note

[Windows/Linux]

Network parameter settings for interfaces not designated in the definition file cannot be released.

[Linux]

When this command is executed, any LAN redundancy settings for managed servers are unset. If LAN redundancy has been set up for the admin LAN, set the LAN redundancy settings again manually.

7.6.4 Modifying the Operating Environment

Use the following procedures to modify the operating environment.

Deploying New Managed Servers with Automated Public LAN Configuration

Use the following procedure to add new managed servers and automate their public LAN settings using the network parameter auto-configuration function:

1. Register the newly added servers.
2. Perform the following procedure on a reference server chosen between already running servers:
 - a. Clearing Network Parameter Settings
Execute the `rcxadm lanctl unset` command to clear the network parameters configuration.
 - b. Editing the definition file
Set up a node entry in the definition file (`ipaddr.conf`) with the server name, interface entries, and other information for the server to be added.
 - c. Manually execute network parameter settings
Execute the `rcxadm lanctl set` command to apply the network parameters and ensure that the resulted configuration (induced from the definition file) is correct.
 - d. Collect the cloning image again.
3. Deploy the collected cloning image to the newly added servers.

Modifying Managed Server Settings

If network settings must be modified due to the addition or removal a public LAN, or a change of IP address; perform the following on an arbitrary reference server (chosen between already running servers).

1. Execute the `rcxadm lanctl unset` command to clear the network parameters configuration.
2. Edit the definition file to add, modify, or delete network parameters.
3. Execute the `rcxadm lanctl set` command to apply the network parameters and ensure that the resulted configuration (induced from the definition file) is correct.
4. Collect a new cloning image from the reference server.

Chapter 8 Server Switchover Settings

This chapter explains how to use server switchover settings and automatically recover from server failures.

8.1 Overview

Server switchover is a feature that allows the user to switch over applications from a primary server to a predefined spare server when the primary server fails or is stopped for maintenance.

It can also perform Auto-Recovery, which automatically switches applications over to a spare server when a hardware failure is detected on the primary server.

Server switchover can be realized through four different methods, as described below. The switchover method used by a given server is automatically selected when configuring its recovery settings. If HBA address rename settings were already made when applying recovery settings, the HBA address rename method will be automatically selected. Similarly, the VIOM server profile exchange method is automatically selected if a server profile was already assigned to the server in VIOM.

However, each method has its own restrictions regarding the supported hardware environment.

For details, refer to the corresponding "Note" in "1.5 Hardware Environment" of the "Setup Guide VE".

- Backup and Restore Method

In a local boot environment, this method restores a system image backup to a spare server, which is then automatically started up. This is selected under the following cases.

- When a virtual WWN or boot configuration have not been set via the HBA address rename or VIOM server profile assigned to the primary server.
- Select the "Local-boot with SAN data (Backup and restore method)" checkbox when setting the spare server.

When HBA address rename or VIOM has been used to set a server profile for a server, the WWN and server profile also can be switched at server switchover.

After switchover, the operating system and its applications will resume on the spare server from the status they were in at the last system image backup.

Note that only the content of the first local disk (or boot disk) as seen by the BIOS of the managed server is subject to a backup or restore operation, including all partitions (Windows drives or Linux partitions) present on the boot disk.

However, since additional disks (disks used as data disks), are not subject to backup and restore, their content cannot be made accessible to the spare server with a server switchover.

When using more than one local disk, backup and restore of such additional data disks should be performed using external backup software.

However, when there are multiple sections on the first disk (Windows drives or Linux partitions), all sections become the target of backup and restore.

- HBA address rename Method

In a SAN boot environment, this method sets the WWN of a spare server's HBA to the same value as that originally set on the primary server. This allows the spare server to connect to and boot from the same boot disk that was used by the primary server. This method is used when HBA address rename settings have been made on the primary server. Because this method automatically starts the spare server from the primary server's boot disk, applications can be resumed without users being aware of the hardware replacement that occurred.

- VIOM Server Profile Exchange Method

This method is used in SAN boot environments where servers start from boot disks located in storage arrays. If the primary server fails, the WWN, MAC address, boot configuration, and network configuration set in its server profile are inherited by the spare server, which then automatically starts up from the same SAN disk. This method is used when a virtual WWN has been set via the VIOM server profile assigned to the primary server. Because this method automatically starts the spare server from the primary server's boot disk, applications can be resumed without users being aware of the hardware replacement that occurred.

- Storage Affinity Switchover Method

When a primary server fails in a SAN boot environment, changing the following configuration using storage management software enables access and startup from the same boot disk. When HBA WWNs are fixed, reconfiguring storage devices enables continuation of operations.

- Zoning settings for the Fibre Channel switches connected to servers

- Host affinity settings for storage CAs

The HBA address rename and VIOM profile exchange methods are also referred to as I/O virtualization methods.

For PRIMERGY BX servers, the network configuration (VLAN IDs of adjacent LAN switch ports or port groups) of the primary server will be inherited by the spare server when using the backup and restore method, HBA address rename method, or the VIOM server profile exchange method.

When using the VIOM server profile exchange or the backup and restore method, if a MAC address, boot configuration, or network configuration were assigned to the server (in its VIOM server profile), these settings will also be inherited by the spare server. Therefore, it is no longer necessary to re-configure applications or network devices that depend on MAC address values.

After two servers have been switched over, a failback operation can switch them back to their original configuration using the same switchover method. Conversely, server takeover is the operation that appoints the activated spare server as the new primary server instead of switching back servers to their original configuration.



Note

- When using ServerView Deployment Manager on the admin LAN, the backup and restore method and HBA address rename are disabled. For details, refer to "Appendix F Co-Existence with ServerView Deployment Manager" of the "Setup Guide VE".
- Auto-Recovery occurs when a hardware failure is detected. However, it does not occur when the operating system has stopped as a result of a software error or when the operating system is automatically rebooted.
Refer to "8.4 Conditions Required for Auto-Recovery" for details.
Furthermore, since the Auto-Recovery is driven by a hardware failure, it prioritizes a fast recovery to a spare server instead of collecting an OS memory dump (which would be used to troubleshoot an OS failure).
Thus, even if a memory dump was set to be collected in the event of an OS failure, server recovery will take precedence and the memory dump will not be collected.
- Server switchover can be realized using one of the following methods.
 - Backup and Restore Method
 - HBA address rename Method
 - VIOM Server Profile Exchange Method
 - Storage Affinity Switchover Method
- When configuring the HBA address rename function as the switchover method, first confirm that the HBA address rename settings have been configured properly before configuring the server switchover settings.
- When server switchover is conducted using a Hyper-V VM host, prepare more than two physical NICs.
The network which VM hosts, such as the admin LAN for VM hosts, use to communicate with external servers should be dedicated only to physical servers, and not be configured for virtual networks.
In a network environment that has external virtual networks configured, disable all virtual networks for VM hosts. For details, refer to "E.2 Configuration Requirements" of the "Setup Guide VE".
- It is not possible to specify spare servers for individual VM guests. It is either possible to store VM guests on a SAN or NAS shared disk and assign a spare server to the VM host, or use the VM high-availability feature provided by the server virtualization software used.
For more details on the high-availability features available for each server virtualization software, refer to "E.3 Functional Differences between Products" of the "Setup Guide VE".
Switchover using Resource Orchestrator, and the high-availability of server virtualization software can be used together.
When using a high-availability feature of server virtualization software, do not include spare servers of Resource Orchestrator in VM hosts as spare servers.
[VMware]
When using a high-availability feature (VMware HA) of server virtualization software, perform high-availability configuration again when performing server switchover or failback of Resource Orchestrator.
- When primary and spare servers are placed in different chassis, and both servers are connected to LAN switch blades operating in IBP mode, server switchover only works if the following conditions are met.
 - LAN switch blades are PRIMERGY BX900/BX400

- The same port group name is set for both LAN switch blades
- When using Intel PROSet for LAN redundancy, the switchover destination server may inherit the same MAC address as that of the source server, as Intel PROSet keeps an internal definition of MAC addresses. When using Intel PROSet for LAN redundancy, the switchover destination server may inherit the same MAC address as that of the source server, as Intel PROSet keeps an internal definition of MAC addresses. To avoid communication issues caused by MAC address conflicts, please be sure to re-configure MAC addresses on the destination server following a server switchover.
- For servers other than blade servers, configuration is not possible when there are managed servers belonging to different subnets from the admin server.
- Configuration is not possible when there are managed servers whose admin LAN NIC configurations are different from the primary server.
- Server switchover can be performed, even if the NIC configurations used for HBA address rename setup service on the primary server and spare server are different. After server switchover is performed, the HBA address rename setup service may not operate depending on the network configuration. Therefore, the NIC configurations used for the HBA address rename setup service should be the same on both the primary server and the spare server.

In environments where there are servers running physical OS's and servers with VM hosts and VM guests, if they both use HBA address rename or VIOM, by combining the following settings it is possible for a physical OS and a VM guest to share a spare server.

For details, refer to "[Figure 8.3 Sharing a Spare Server Between Physical OS's and VM Guests \(High-availability Function of Server Virtualization Software\)](#)" in "[8.2 Configuration](#)".

- a. Specify a VM host as the spare server used to recover VM guests within the high-availability feature (VMware HA) of the server virtualization software used.
- b. Once the above settings have been made on a physical OS, a server failure will trigger the following recovery operations.

If the failed server was running a physical OS, Resource Orchestrator will shut down the VM host on the spare server and switch the failed physical OS over to the spare server. If the failed server was a VM host running VM guests, the high-availability feature provided with the server virtualization software will recover the VM guests on the spare VM host server. Since physical OS's and VM guests share a common spare server, the two types of recovery described above can perform together: once one type of recovery occurs on a spare server, another type of recovery can no longer be performed on that same spare server.

Information

- Server switchover based on backup and restore takes approximately 3 minutes, plus the time required to restore the system image. Image restoration time depends on different factors such as disk space and network usage, but as an estimate, a disk of 73GB will take 30 to 40 minutes (the transfer of the system images takes between 10 to 20 minutes, while system restarts and other configuration changes take another 20 minutes).
- Server switchover based on HBA address rename takes approximately 5 minutes, plus the time required to start up the original operating system and services on the spare server. If a server OS was running on the spare server, the time required to shutdown the spare server must also be included.

8.2 Configuration

This section provides examples of switchover configurations for each different switchover method.

Each method has its own restrictions regarding the supported hardware environment.

For details, refer to the corresponding "Note" in "1.5 Hardware Environment" of the "Setup Guide VE".


- Spare server configuration for local boot servers

A spare server should be set aside for servers in local boot environments.

When a primary server fails, a system image (that must be backed up beforehand) will be restored to the spare server, and the spare server will be started up. A spare server can be shared by multiple primary servers.

If a local boot server is using SAN storage for data storing purposes, I/O virtualization can make this SAN storage space accessible to the spare server.

Figure 8.1 Spare Server Configuration for Local Boot Servers

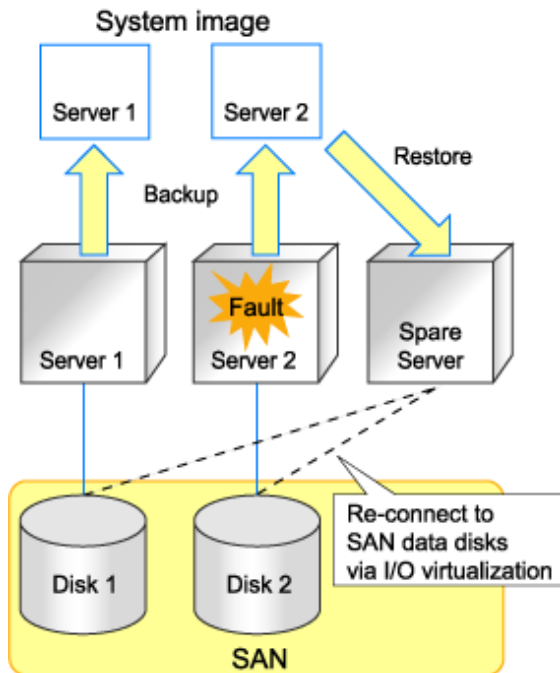


- Spare server configuration for booting from SAN/iSCSI storage servers (using virtual I/O)

At least one spare server using virtual I/O should be set aside for servers in a SAN/iSCSI boot environment.

When a primary server fails, the WWN set on its HBA or MAC address, boot configuration, and network configuration set on its NIC is inherited by the spare server, which can then access and start up from the same boot disk. A spare server can be shared by multiple primary servers.

Figure 8.2 Spare Server Configuration for Booting from SAN/iSCSI Storage Servers

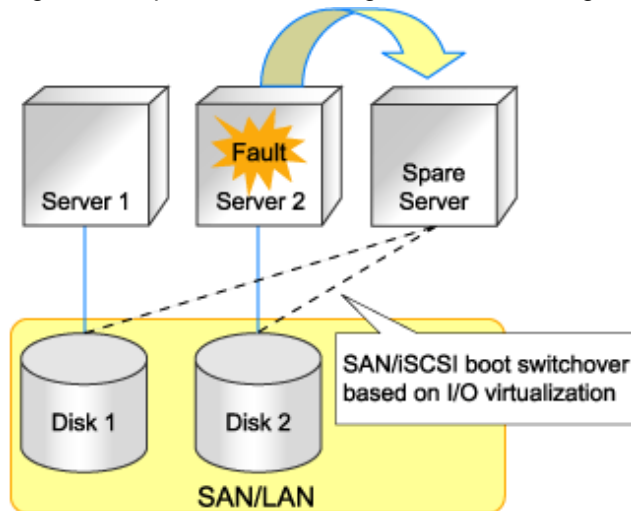


For spare server configurations based on I/O virtualization, a spare server can be shared by multiple physical OS's and VM guests (using the high-availability feature provided with their server virtualization software). For details on the server virtualization software supporting this configuration, refer to "E.1 Common Functions of Server Virtualization Software" of the "Setup Guide VE".

In this case, spare servers should be set up as a VM hosts booting from a SAN, so that when a physical server hosting VM guests experiences a failure, the high-availability feature provided with their server virtualization software can be used to transfer the VM guests to this spare VM host.


If a server running a physical OS fails, its boot disk will be reconnected to the spare server by means of an HBA address rename. When this happens, the spare server is halted, reconnected to the primary server's boot disk, and started up as the new active server.

Figure 8.3 Sharing a Spare Server Between Physical OS's and VM Guests (High-availability Function of Server Virtualization Software)

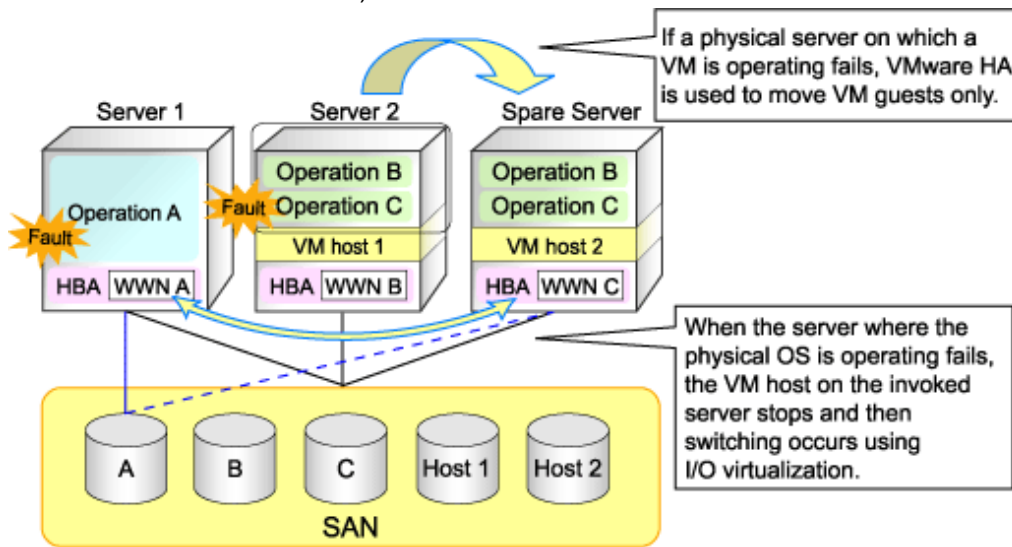

In server configurations using I/O virtualization, servers on which a server OS is operating can be used for spare servers. If a primary server fails and its spare server boots from a SAN, the OS of the spare server will be stopped. After that the boot disk is connected to the spare server using I/O virtualization, and the server started.

Figure 8.4 Configuration Using a Server on which a Server OS is Operating as a Spare Server

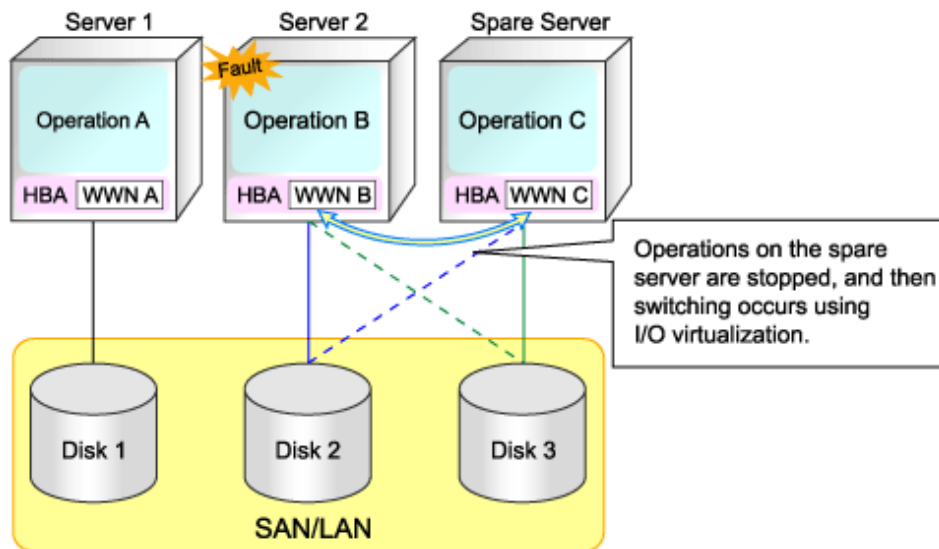

Note

A spare server cannot be shared by a local boot server, a SAN boot server, and an iSCSI boot server.

Furthermore, if the primary server is a local boot environment, the same server cannot be used as a spare server between the configurations 1 and 2 shown below.

1. In a SAN data environment using a physical WWN or VIOM
2. When using the Red Hat Enterprise Linux 6 ext4 file system or on a server using UEFI

- Spare server configuration for booting from SAN storage servers (using storage management software)

Storage management software should be set aside for servers in SAN boot environments.

When a primary server fails, changing the following configuration using storage management software enables access and startup from the same boot disk. A spare server can be shared by multiple primary servers.

- Zoning settings for the Fibre Channel switches connected to servers
- Host affinity settings for storage CAs

8.3 Server Switchover Conditions

The following conditions must be satisfied for manual server switchover, failback, and Auto-Recovery to function correctly.

Conditions for Spare Servers

The spare server must be identical to the active server in the ways listed below.

If these conditions are not satisfied, allocation of a spare server may not be possible, server switchover may fail, or the server may malfunction after the switchover is completed.

- Server Model
- Server Hardware Configuration

The following settings for optional cards and expansion boards must be the same.

- The locations they are mounted in
- The number and sizes of local disks
- RAID settings

There are no other hardware conditions for the spare server (such as memory capacity, number of CPUs and CPU clock speed). However, the hardware configuration of the spare server must be capable of running the operating system and applications running on the primary server.

- BIOS Settings

The same BIOS settings must have been made for all servers according to the procedure in "BIOS Settings of Managed Servers" in "4.1.2 Configuring the Server Environment" of the "Setup Guide VE".

- OBP Settings

For SPARC Enterprise, the OBP settings to start automatically from SAN servers of the same target disk must have been made according to the procedure in "OBP (Open Boot Prom) Settings (SPARC Enterprise)" in "4.1.2 Configuring the Server Environment" of the "Setup Guide VE".

With the storage affinity switchover method, as setting changes are only performed for Fibre Channel switch storage devices, it is necessary to perform configuration of servers that will be changed during switchover, and HBA and OBP settings.

- LAN and SAN Access Scope

The spare server must use the same network redundancy method, have the same redundancy paths, and have access to the same network and storage devices. Note that LAN or fibre channel switches connected in a cascade configuration are viewed as a single device.

- Firewall

There must be no firewall between the primary server and the spare server.

- Subnet

For servers other than blade servers, the primary server and the spare server must belong to the same subnet.

If a spare server is shared by a physical OS and one or more VM guests (using the high-availability feature provided with their server virtualization software), the spare server must be configured for SAN boot using I/O virtualization.

For details, refer to "[Figure 8.3 Sharing a Spare Server Between Physical OS's and VM Guests \(High-availability Function of Server Virtualization Software\)](#)" in "8.2 Configuration".

When using a server on which a server OS is operating as a spare server, both the primary server and spare server should be in a configuration that uses I/O virtualization.

For details, refer to "[Figure 8.4 Configuration Using a Server on which a Server OS is Operating as a Spare Server](#)" in "[8.2 Configuration](#)".

Also, if more than two local disks are connected to a spare server in a backup/restore configuration, and if the partitioning of the disks coming after the first in the boot order is different from the first disk, a warning message may be displayed at restart, or the operating system may not restart, causing any switchovers initiated to fail. After configuring the spare server, verify that it is operating properly by performing a switchover and failback.

If the operation fails, configure the partitions other than the first boot disk of the spare server to match the configuration of the primary server, or set up the primary server configuration so that it does not depend on any disk other than the first, using automatic service startups, and re-labeling the Windows drives as necessary.

With blade servers, if the primary server and spare server do not belong to the same subnet, if server switchover is performed to the spare server it is necessary that the VLAN ID or port group settings of the internal LAN switch ports are adjusted automatically.

For the setting method, refer to "[8.6 Server Switchover Settings](#)".

Conditions for Server Switchover

The following conditions must be satisfied for a server switchover or Auto-Recovery to succeed:

- The server configuration cannot already be switched over (the primary server must be the active server)
- The status of the spare server must be "normal", "warning", or "stop". If a VM host has been installed on the spare server(for VMware HA), its status must be either "normal" or "warning"
- If a spare server is shared by more than one active server, none of the other primary servers may be switched over to that spare server
- If the server is in a local boot environment, its system image must have been backed up

Conditions for Server Failback

The following conditions must be satisfied for server failback to succeed:

- The active server must have been switched over to the spare server
- The status of the primary server must be "stop"
- If the server is in a local boot environment, its system image must have been backed up

8.4 Conditions Required for Auto-Recovery

This section explains the conditions required for auto-recovery.

Auto-Recovery Using Server Switchover Settings

A server for which Auto-Recovery is enabled will be automatically switched over to its spare server if Resource Orchestrator detects both a failure from the server hardware and determines that its physical OS (or VM host) has stopped.

- Detecting hardware failures from servers

A hardware failure can be detected by an "Error" level SNMP trap failure notification sent to the admin server from either the ServerView Agents or the server management unit. Alternatively, Resource Orchestrator can detect a failure by periodically polling the status of each managed server.

Detectable hardware failures

- CPU faults
- Memory errors
- Temperature abnormalities

- Fan failures

As a result of a FAN failure, it is detected as a temperature abnormality.

- Detecting that a physical OS (or VM host) has stopped

A physical OS (or VM host) is seen to have stopped abnormally when the following conditions are met:

- PRIMERGY BX series servers

An abnormal server status is obtained from a server management unit, and it is not possible to communicate with either the ServerView Agents or the Resource Orchestrator agent

- For rack mount, tower, and SPARC Enterprise servers

Communication using the ping command is unavailable

Auto-Recovery Using Monitoring Information Settings

When ping monitoring using monitoring information is enabled, server switchover is automatically performed when there is no response from physical OS on servers or VM hosts, and restoration by executing reboot fails.

The recovery process can be changed by configuring settings. For details on how to configure these settings, refer to "8.4 Configuring Monitoring Information" of the "Setup Guide VE".

- No response detected by ping monitoring

When the period with no response in the ping command is over the time-out value, no response is detected.



Note

- Notification of hardware failures on rack mount servers, tower servers, and SPARC Enterprise servers is only detected by SNMP traps.
- Auto-Recovery is not triggered on servers that are in maintenance mode.
- Even if a hardware failure is detected, Auto-Recovery will not be triggered if no response is received from the target server. In such cases, shutting down or restarting the server will temporarily stop the operating system, triggering an automatic switchover as the conditions for Auto-Recovery will be met. Under such conditions, automatic switchovers can be prevented by setting the server to maintenance mode before shutdown or restart.

8.5 Status Display

Current recovery settings can be confirmed by selecting a physical OS or VM host in the server resource tree of the ROR console and from the spare server settings displayed in the [Resource Details] tab.

The following information is displayed:

Primary server

Displays the name of the physical server that will be replaced when server switchover occurs.

Active server

Displays the name of the physical server that is currently running.

Server switchover method

Displays the specified server switchover method.

Automatic server recovery

Shows whether automatic server recovery is enabled or not.

Network switchover

Shows whether network settings will be automatically adjusted during server switchover.

Spare server

Displays the name of the physical server that will replace the current active server when server switchover occurs. More than one spare server will be displayed if more than one has been specified.

8.6 Server Switchover Settings

Use the following procedure to configure server switchover settings:

When using local disks as system disks, and iSCSI storage as data disks, refer to the advisory notes described in the "Table 4.1 Supported Storage Device Configurations" in "4.3.1.1 Storage Configuration" of the "Setup Guide VE".

1. In the ROR console server resource tree, right-click a server (or a physical OS or VM host on the server) and select [Modify]-[Spare Server Settings] from the popup menu.

The [Spare Server Settings] dialog is displayed.

2. To use this feature, the following settings must first be defined:

Spare server

From the spare server list, select the checkbox in the "Select" column of the server that is to be used as the spare server. One or more spare servers can be specified, including spare servers from different chassis.

If more than one is specified, an unused spare server will be selected from the list of available candidates when a server switchover occurs.



With the storage affinity switchover method, a server for which WWN settings have been performed can only be used as a spare server for a primary server with WWN settings. When using the storage affinity switchover method, it is necessary to configure the target CA so that it matches the WWPN value in the access path settings of the actual server. Hyphens ("-") must be specified for target CAs of spare servers using the storage affinity switchover method.

Applying the patch T006147WP-04 [Windows] and T006292LP-03 [Linux] for the manager, enables a server on which an agent is registered to be used as a spare server. When using a server on which an agent is registered as a spare server, the server must meet one of the following conditions:

- When the WWPN of the target CA is the same value as that of the primary server
- When the AffinityGroup value is different from the value of the primary server
- When agents are not registered on ETERNUS SF Storage Cruiser

ETERNUS SF Storage Cruiser cannot perform event monitoring of spare servers. For details on event monitoring, refer to the "ETERNUS SF Storage Cruiser Event Guide".

In server configurations using I/O virtualization, servers on which server OS's are operating can be used for spare servers.

- Register the agent
- I/O virtualization
- Server switchover settings

To change a server with the above settings, which does not use I/O virtualization, to a spare server, delete the server and then re-register it. Note that if the server is registered while it is running, an agent will be registered automatically. For this reason it should be registered while it is stopped.

To delete a spare server that has been added, refer to "[8.8 Cancelling Server Switchover Settings](#)".

"Local-boot with SAN data (Backup and restore method)" checkbox

This checkbox is available only if the WWN of the servers selected from the server resource tree are being virtualized using HBA address rename or VIOM.

The checkbox is unavailable if the WWN is not being virtualized or boot configuration is set for a VIOM server profile.

Select this option for servers that boot from a local disk while using SAN storage to store data. If selected, spare server(s) will

also be able to boot locally and access the same SAN storage data space after a switchover.
Do not select this option for servers that boot from a SAN disk.

"Apply network settings when the server is switched over" checkbox

Select this option to enable automatic adjustment of VLAN ID or port group settings during a server switchover. If selected, the internal LAN switch ports connected to the spare server will be set with the same VLAN settings as those of the ports connected to the primary server.

This option is selected by default.

This feature is available only for PRIMERGY BX blade servers.

When VIOM is used, it is available only when a LAN switch is in switch mode or end-host mode.



Note

Do not select this option if VLAN settings are to be manually adjusted from the LAN switch's management interface (either graphical or command-line interface).

"Automatically switch over when a server fault is detected" checkbox

Select this option to enable Auto-Recovery.

Server failures are detected when the server's status changes to "error" or "fatal" and its operating system stops functioning.

Do not select this option if primary servers are to be manually switched over.

This option is selected by default.

"Power off forced when the server is switched over" checkbox

Check this checkbox if the spare server is to be turned off forcibly when the spare server is started before switchover takes place.

When shutting down the spare server, clear this checkbox.

This option is not selected by default.

"Switchover to server where VM guest exists" checkbox

When a spare server is a VM host, check this checkbox if switching to a spare server in which the VM host contains a VM guest.

When not switching to a VM host which contains a VM guest, clear this checkbox.

This option is not selected by default.

3. Click <OK>.

The server switchover settings are configured.

4. Set the boot agent for the spare server.

If the Windows manager is used and the primary server is in a configuration with a local boot environment, execute the following command on all servers that have been set as spare servers.

- In a SAN data environment using a physical WWN or VIOM

```
>Installation_folder\Manager\bin\rxadm server set -name physical server -attr bootagt=dos <RETURN>
```

- When using a rack or tower type server and the server is registered with "Disable" of "Association with management software (ServerView)" is selected, and one of the following conditions applies

- Using the Red Hat Enterprise Linux 6 ext4 file system
- Server using UEFI

```
>Installation_folder\Manager\bin\rxadm server set -name physical server -attr bootagt=winpe <RETURN>
```



Point

The conditions specified in "8.3 Server Switchover Conditions" must be satisfied for server switchover to be executed correctly.

Once settings are complete, perform switchover and fallback on each spare server that has been set up to verify that these operations can

be executed correctly.

For details on switchover and failback methods, refer to "Chapter 10 Server Switchover" in the "Operation Guide VE".



For servers other than those using I/O virtualization and those with WWN settings registered, the following checks will not be enabled.

- "Power off forced when the server is switched over" checkbox
- "Switchover to server where VM guest exists" checkbox

For servers with WWN settings registered, applying the patch T006147WP-04 [Windows] and T006292LP-03 [Linux] for the manager, enables the following checks:

[VM host]

The automatic startup of VM guests after the switchover of their VM host depends on their virtual machines' startup configuration within the server virtualization software used.

For details, refer to the manual of server virtualization software.

According to the server virtualization product used, a newly created VM guest may require some re-configuration before running a server switchover.

Refer to "E.2 Configuration Requirements" in the "Setup Guide VE" for details on such settings.

8.7 Changing Server Switchover Settings

The procedure used to change server switchover settings is the same as that described in "[8.6 Server Switchover Settings](#)".

For details, refer to "[8.6 Server Switchover Settings](#)".

8.8 Cancelling Server Switchover Settings

Use the following procedure to cancel server switchover settings.

1. In the ROR console server resource tree, right-click a server (or a physical OS or VM host on the server) and select [Modify]-[Spare Server Settings] from the popup menu.

The [Spare Server Settings] dialog is displayed.

2. Clear the checkbox in the "Select" column for the desired spare server.
3. Click <OK>.

The selected spare server is no longer set as a spare server.

Appendix A sFormat of CSV System Configuration Files

This appendix explains the format of the CSV system configuration files used by Resource Orchestrator's pre-configuration function.


A.1 Obtaining the System Configuration File (CSV Format)

The system configuration files can be obtained as follows.

- From the selection window of the Resource Orchestrator DVD-ROM [Windows]

Setting the Resource Orchestrator DVD-ROM in the CD-ROM drive automatically displays the screen below. Select "Tool" and click "System Configuration Template (CSV format)". The CSV file will be opened from the associated application (such as Excel). Check the file content and save it.

Figure A.1 Selection Window

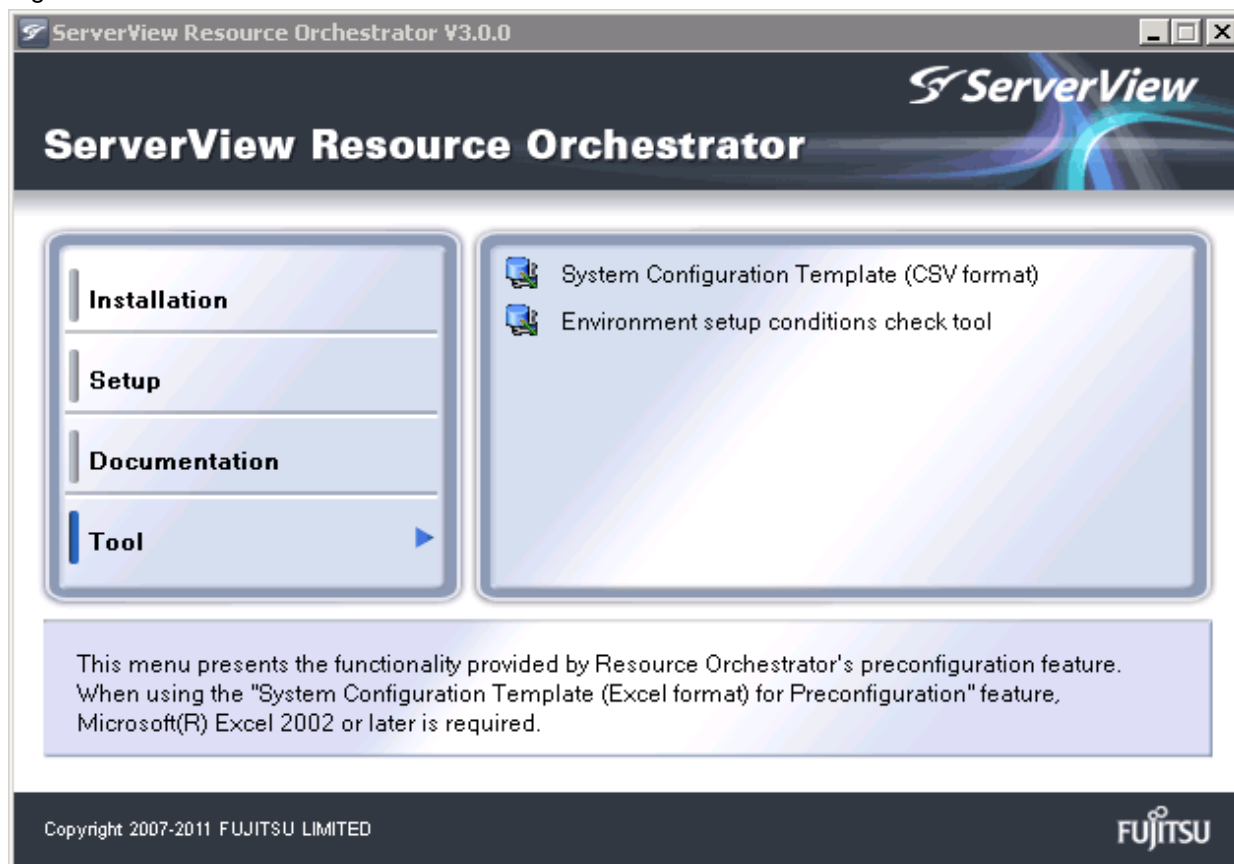

Information

If the above window does not open, execute "RcSetup.exe" from the DVD-ROM drive.

- From the Resource Orchestrator DVD-ROM

Set the Resource Orchestrator DVD-ROM in the DVD-ROM drive and copy the following file.

[Windows]

DVD-ROM_drive\template\ja\template.csv

[Linux]

DVD-ROM_mount_point/template/ja/template.csv

- From the ROR console

The System Configuration Template can be obtained from a Resource Orchestrator manager installation.

1. Open and log in to the ROR console according to "7.1 Login" of the "Setup Guide VE".
2. Select [File]-[Download Template]-[CSV Format] from the ROR console menu.
Displays the [File Download] window.
3. Click <Save>.
4. Specify the destination directory and the file name.
5. Click <Save>.

A.2 File Format

The system configuration files (CSV format) used for pre-configuration are comma (",") delimited.
The format of each line is given below:

- File Format Definition

The first line of the file must begin with the following:

```
RCXCSV,V3.4
```



Resource Orchestrator can import the following system configuration file formats.

- RCXCSV,V1.0
- RCXCSV,V2.0
- RCXCSV,V3.0
- RCXCSV,V3.1
- RCXCSV,V3.2
- RCXCSV,V3.3
- RCXCSV,V3.4

However, system definition files are always exported in the most recent format: importing a file in an older format and re-exporting it will produce a file in the latest format.



Although each RCXCSV version has a different format, those formats are retro-compatible (newer formats include all the information defined in older formats).

As detailed below, some sections (described in "[A.3 Resource Definitions](#)") are only available with the latest format(s).

- RCXCSV V2.0 and Later
"LanSwitchNet", "ServerAgent", "ServerVMHost", "PowerDevice", "Memo"
- RCXCSV V3.0 and Later
"VMManager"
- RCXCSV V3.1
"SPARCEnterprise"

- RCXCSV V3.2
"PRIMERGYPartitionModelChassis", "PRIMERGYPartitionModelServer"
- RCXCSV V3.1
"Subnet", "SPARCEnterprisePartitionModelChassis", "SPARCEnterprisePartitionModelServer", "MonitorSetting"
- RCXCSV V3.4
"VIOManager"

- Comments

The following lines are assumed to be comments and are skipped:

- Lines that begin with the symbol ("#")

 Example

```
#Development environment
definition
```

- Lines that consist of only blank spaces (" "), tab characters, or linefeed code
- Lines that contain only commas (",")
- Unrecognized resource definition

- Resource Definitions

Create the resource definition using the following format. Describe the same type of resource in the same section.

- Resource Definition Format

```
[Section name]
Section Header
Operation column, Parameter [,parameter]...
```

- Section Name
This describes the resource type.
- Section Header
This describes the parameter type unique to the resource.

 Note

Do not enter any comments between the section name and section header.

- Operation Column

This describes the operation type for the resource. The following characters can be used in the operation column.

- new
Register
- change
Modify
- Hyphens, ("-")
Do nothing

- Parameter

This describes the parameter value to be set.

Note

The order of operation and parameter columns should follow the order defined in section header under "[A.3 Resource Definitions](#)".

Allowed Characters

For details on the characters allowed for each resource definition, refer to "[A.3 Resource Definitions](#)". Optional parameters can be omitted by using hyphens ("-").

However, hyphens ("-") are seen as valid characters for user names, passwords, and SNMP communities. Note that if extra commas (",") are added to the end of a line, those will be simply ignored without errors.

Backslashes ("\") and double quotations (") will be displayed differently in the ROR console from how they appear in the system configuration file.

Refer to the following table for details on such differences.

Table A.1 Differences between System Configuration Files' Contents and Display in the ROR Console

Content of a System Configuration File (CSV)	Display in the ROR Console
\\	\
\n	Line break
""	"
, (*1)	,

*1: The whole value must be enclosed by double quotations (").

Example

- CSV Content

```
"a\nb,\n"
```

- Display in the ROR Console

```
A
b,\n
```

Order of Section Definition

Section order and section name are shown below.

Moreover, the section definition order is fixed.

Table A.2 Section Order and Section Names

Order	Section Name
1	Subnet
2	VIOManager
3	Chassis
4	PRIMERGYPartitionModelChassis
5	SPARCEnterprisePartitionModelChassis
6	LanSwitch
7	LanSwitchNet

Order	Section Name
8	Server
9	SPARCEnterprise
10	PRIMERGYPartitionModelServer
11	ServerNet
12	SPARCEnterprisePartitionModelServer
13	ServerWWNN (*1)
14	SpareServer (*1)
15	VMMManager
16	ServerAgent (*2, *3)
17	ServerVMHost (*2, *3)
18	MonitorSetting
19	PowerDevice
20	Memo (*2)

*1: When loading from the system configuration template in the Excel format, the operation column information will be skipped.

*2: When loading from the system configuration template in the Excel format, the whole section will be skipped.

*3: Do not enter the information of the same physical server both in the "ServerAgent" and "ServerVMHost" section.

System backup information is automatically added to the end of the system configuration file when exporting in the CSV format. The sections after the line below contain the backup information. The backup information is skipped when loading from the system configuration template in the Excel format.

#Do not edit the following information, which is used to recover the manager.

Do not modify the backup information, as it is automatically created. Note that these sections do not have to be defined if the system configuration file is created for new system configuration.

Note

- If a system configuration file (CSV format) is imported and then exported, the line order after export may differ from the line order before import.

The following information will also be deleted:

- Comments lines
- Strings enclosed in parenthesis "(" indicating omitted values
- Extra commas at the end of lines (",")
- As with chassis for server blades, and chassis for LAN switch blades, items that need to be registered in advance to enable registration of other should be defined in the system configuration file or registered in advance.

Character Code

The system configuration files (CSV format) used for pre-configuration are saved using ASCII (often referred to as "ANSI" in Windows systems). When files that use a character code other than ASCII are imported, the system may not operate correctly.

When directly editing configuration files using a text editor, please do not save the file using a character code other than ASCII.

A.3 Resource Definitions

This section explains the resource definition information specified system configuration files.

Admin LAN Subnet Data

- Section Name

Enter [Subnet] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

subnet_name

Enter the subnet name.

Enter a character string beginning with an alphabetic character and containing up to 16 alphanumeric characters, underscores (" _"), hyphens ("-"), and periods (".").

network_address

Enter the network address for the subnet used as the admin LAN.

Enter valid values for the network address.

subnet_mask

Enter valid values for the subnet mask.

gateway

Enter the settings for the gateway used for communication with the admin server on the admin LAN.

VIOM Data

- Section Name

Enter [VIOManager] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

name

Specify "VIOM".

ip_address

Enter the IP address of the terminal on which VIOM is installed.

Specify "127.0.0.1".

login_name

Enter the name of a VIOM user account.

When specifying a domain, use the following syntax: "*domain_name*\user_name".

login_passwd

Enter the password of the above VIOM user account.

passwd_enc

Enter one of the following.

- If login_passwd is plain text

"plain"

- If the password is encrypted

"encrypted"

Chassis Data

- Section Name

Enter [Chassis] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

chassis_name

Enter the name that will be used to identify the chassis.

Enter up to 10 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.



Chassis names should be unique between all chassis. Names are not case-sensitive.

ip_address

Enter the same IP address as that set on the management blade.

Enter a string of numeric values (between 0 and 255) and periods.



IP addresses should be unique between all resources.

snmp_community_name

Enter the same SNMP community (read-write permission) as that set on the management blade.

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

PRIMEQUEST Chassis Management Data

- Section Name

Enter [PRIMERGYPartitionModelChassis] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

chassis_name

Enter the name that will be used to identify the chassis.

Enter up to 10 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.



Chassis names should be unique between all chassis.

Names are not case-sensitive.

ip_address

Enter the same IP address as that set on the management board.

Enter a string of numeric values (between 0 and 255) and periods.

 **Note**

IP addresses should be unique between all resources.

snmp_community_name

Enter the same SNMP community (read-write permission) as that set on the management board.
Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

mgmt_user_name

Enter the name of a remote server management user account with administrative privileges.
This user name must be between 8 and 16 alphanumeric characters long.

mgmt_passwd

Enter the password of the remote server management account.
This password must be between 8 and 16 alphanumeric characters long.

mgmt_passwd_enc

Enter one of the following.

- If mgmt_passwd is plain text
"plain"
- If the password is encrypted
"encrypted"

SPARC Enterprise M4000/M5000/M8000/M9000 Chassis Data**- Section Name**

Enter [SPARCEnterprisePartitionModelChassis] as the section name.

- Section Header**operation**

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

chassis_name

Enter the name that will be used to identify the chassis.
Enter up to 10 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

 **Note**

Chassis names should be unique between all chassis.
Names are not case-sensitive.

ip_address

Enter the same IP address as that configured on the XSCF.
Enter a string of numeric values (between 0 and 255) and periods.

 **Note**

IP addresses should be unique between all resources.

snmp_community_name

Enter the name of a SNMP community (with read permission) configured on this server's remote management controller (XSCF).
Enter up to 32 characters, including alphanumeric characters, underscores (" _"), and hyphens ("-").

mgmt_user_name

Enter the name of a remote management controller (XSCF) user account with administrative privileges ("platadm" privileges).
Enter a string of up to 31 alphanumeric characters, hyphens ("-"), and underscores (" _"). This name must start with an alphabet character.

mgmt_passwd

Enter the password of the remote management controller (XSCF) user account.
Enter up to 32 characters, including alphanumeric characters, blank spaces (" "), and any of the following symbols.
"! ", "@ ", "# ", "\$ ", "% ", "^ ", "& ", "* ", "[", "] ", "{ ", " } ", "(", ") ", "- ", "+ ", "= ", "~ ", " ", "> ", "< ", "/ ", " ", "? ", "; ", ":"

mgmt_passwd_enc

Enter one of the following.

- If mgmt_passwd is plain text
"plain"
- If the password is encrypted
"encrypted"

LAN Switch Blade Data

- Section Name

Enter [LanSwitch] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

chassis_name

Enter the chassis name (the value of "chassis_name" in the [Chassis] section).

slot_no

Enter the slot number where the LAN switch blade is installed. Enter a number between 1 and 8.

switch_name

Enter the name to assign to this LAN switch blade.
Enter up to 15 characters, including alphanumeric characters, underscores (" _"), and hyphens ("-").



.....
LAN switch blade names should be unique between all LAN switch blades. The names are case-sensitive.
.....

ip_address

Enter the same IP address as that set on the LAN switch blade.
Enter a string of numeric values (between 0 and 255) and periods.



.....
IP addresses should be unique between all resources.
.....

snmp_community_name

Enter the same SNMP community (read-only permission) as that set on the LAN switch blade.
Enter a string of up to 32 alphanumeric characters, underscores ("_"), and hyphens ("-").

user_name

Enter the name of the user account used to remotely log into the LAN switch blade.
Enter up to 64 characters, including alphanumeric characters (upper or lower case), underscores ("_"), or hyphens ("-").

passwd

Enter the password of the above user account (for remote login).
Enter a string of up to 80 alphanumeric characters and symbols (ASCII character codes: 0x20, 0x21 or 0x23 to 0x7e) and no double-quotations (""). Passwords entered in this field are seen as plain text passwords.

passwd_enc

Enter one of the following.

- If passwd is plain text
"plain"
- If the password is encrypted
"encrypted"

privileged_passwd

Enter the admin password of the above user account.
Enter a string of up to 80 alphanumeric characters and symbols (ASCII character codes: 0x20, 0x21 or 0x23 to 0x7e) and no double-quotations (""). Passwords entered in this field are seen as plain text passwords.

privileged_passwd_enc

Enter one of the following.

- If privileged_passwd is plain text
"plain"
- If the password is encrypted
"encrypted"

product_name

Enter the model of the LAN switch blade. Note that if a hyphen ("-") is entered, it is treated as "BX600 GbE Switch Blade 30/12".
One of the following models can be entered.

- PY CB Eth Switch/IBP 1Gb 36/12
- PY CB Eth Switch/IBP 1Gb 36/8+2
- PY CB Eth Switch/IBP 1Gb 18/6
- PY CB Eth Switch/IBP 10Gb 18/8
- BX600 GbE Switch Blade 30/12
- PRIMERGY BX600 GbE Switch 16/2x10Gb
- PRIMERGY BX600 GbE Switch 16x1Gb
- Cisco Catalyst Blade Switch 3040

VLAN Data for LAN Switch Blades

- Section Name

Enter [LanSwitchNet] as the section name.

- **Section Header**

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

chassis_name

Enter the chassis name (the value of "chassis_name" in the [Chassis] section).

port_no

Enter the port number of an external LAN switch blade port. Enter numeric characters. The port number that can be specified is different depending on the model type.

For details, refer to the manual of the LAN switch blade to be used.

vlan_id (optional)

Enter the VLAN ID and tag type ("/T" for tagged or "/U" for untagged) to be assigned to the specified LAN switch blade port.

Enter a VLAN ID followed by tag types. To specify multiple VLAN IDs, separate each set of VLAN settings using semicolons (";"). Both tagged ("/T") and untagged ("/U") VLAN IDs can be used together, but only one untagged ("/U") type is allowed.



Example

10/U

10/U;20/T;30/T

10/T;20/T



Note

If a hyphen ("-") is entered, VLAN settings will not be performed.

This section will be ignored for PRIMERGY BX900/BX400 LAN switch blades operating in IBP mode.

Server Management Information

- **Section Name**

Enter [Server] as the section name.

- **Section Header**

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

chassis_name

Enter the chassis name (the value of "chassis_name" in the [Chassis] section).



Note

This field is only required for PRIMERGY BX servers.

slot_no

Enter the slot number where the server blade is installed. Enter a number between 1 and 18.



Note

- This field is only required for PRIMERGY BX servers.

- When a server blade is registered, Resource Orchestrator does not check the actual slot position, or whether it has been installed properly.
- When registering multi-slot servers, enter only the master slot number.

server_name

Enter the resource name that will be used to identify the server. Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character. If enclosed by parentheses "()", this server will be seen as being in a switched over state, and this line will be ignored when importing the system definition file.



Server names should be unique between all servers. Names are not case-sensitive.

ip_address

Enter the same IP address as that set within the server's operating system.
Enter a string of numeric values (between 0 and 255) and periods.



IP addresses should be unique between all resources.

mac_address

Enter the MAC address of the admin LAN network interface: NIC1 (Index1).
Enter a string delimited by hyphens ("-") or colons (":") ("xx-xx-xx-xx-xx-xx" or "xx:xx:xx:xx:xx:xx").

second_mac_address

Enter the MAC address of the network interface used for the HBA address rename setup service or for admin LAN redundancy.
The second network interface (Index 2) should be used.
Enter a string delimited by hyphens ("-") or colons (":") ("xx-xx-xx-xx-xx-xx" or "xx:xx:xx:xx:xx:xx").



- This field can be omitted in the following cases.
 - When not using the HBA address rename setup service
 - When not using GLS for admin LAN redundancy on the managed server
 - For a spare server whose primary servers are not using admin LAN redundancy
- The "second_mac_address" header is the equivalent of the "hbaar_mac_address" header defined in RCXCSV V3.0.
"hbaar_mac_address" can only be used when "RCXCSV,V3.0" is specified at the top of the imported system configuration file.
However, this header is automatically changed to "second_mac_address" when exporting a new system configuration file.

snmp_community_name

Enter the name of the SNMP community (read permission) assigned to this server.
Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").



This field is not necessary when using servers other than the PRIMERGY series.

ipmi_ip_address

Enter the IP address of this server's remote management controller.
Enter a string of numeric values (between 0 and 255) and periods.



IP addresses should be unique between all resources.

ipmi_user_name

Enter the name of a remote management controller user account with administrative privileges.
Enter a string of up to 16 alphanumeric characters and symbols (ASCII character codes: 0x20 to 0x7e).



If the name of the current administrator account on the remote management controller is longer than 16 characters, either create a new account or rename the current account (within 16 characters).

ipmi_passwd

Enter the password of the remote management controller user account.
Enter a string of up to 16 alphanumeric characters and symbols (ASCII character codes: 0x20 to 0x7e).
This field can be omitted if no password has been set for this user account.



If the password of the current administrator account on the remote management controller is longer than 16 characters, either create a new account or change its password (within 16 characters).

ipmi_passwd_enc

Enter one of the following.

- If ipmi_passwd is plain text
"plain"
- If the password is encrypted
"encrypted"

admin_lan1_nic_number

The index of the NIC to use for the admin LAN.
Enter a number (1 or larger).



This field is only required for PRIMERGY BX servers.

admin_lan2_nic_number

The Index number of NICs used for the HBA address rename setup service or for admin LAN redundancy.
Enter a number (1 or larger).
For the following cases, enter a hyphen ("-").

- When not using the HBA address rename setup service
- When redundancy of the admin LAN for managed servers does not use GLS
- When not using as the spare server of a managed server with redundancy configured

 **Note**

This field is only required for PRIMERGY BX servers.

admin_lan_nic_redundancy

Enter one of the following.

- When using the NIC specified in the admin_lan2_nic_number as the backup for admin LAN redundancy
"ON"
- When not using the NIC specified in the admin_lan2_nic_number as the backup for admin LAN redundancy
"OFF"

SPARC Enterprise Server Data**- Section Name**

Enter [SPARCEnterprise] as the section name.

- Section Header**operation**

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

server_name

Enter the resource name that will be used to identify the server. Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

ip_address

Enter the same IP address as that set within the server's operating system. Enter a string of numeric values (between 0 and 255) and periods.

mgmt_snmp_community_name

Enter the name of a SNMP community (with read permission) configured on this server's remote management controller (ILOM/XSCF).

Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

mgmt_ip_address

Enter the IP address of this server's remote management controller (ILOM/XSCF).

Enter a string of numeric values (between 0 and 255) and periods.

 **Note**

IP addresses should be unique between all resources.

mgmt_protocol

Enter the type of the remote management controller (ILOM/XSCF) to manage servers.

- For M3000 servers
"XSCF"
- For T series servers
"ILOM"

mgmt_user_name

Enter the user name (For ILOM, Admin privileges, and for XSCF, platadm privileges) of a remote management controller to manage servers (ILOM/XSCF).

- For XSCF

Enter up to 31 characters, including alphanumeric characters, underscores ("_"), or hyphens ("-"). This name should start with an alphabet character.

- For ILOM

Enter between 4 and 16 characters, including alphanumeric characters, underscores ("_"), or hyphens ("-"). This name should start with an alphabet character.

mgmt_passwd

Enter the password of the remote management controller (ILOM/XSCF) to manage a server.

- For XSCF

Enter up to 32 characters, including alphanumeric characters, blank spaces (" "), and any of the following symbols.

- For ILOM

Enter between 8 and 16 characters, including alphanumeric characters, blank spaces (" "), and any of the following symbols.

!" , "@" , "#" , "\$" , "%" , "^" , "&" , "*" , "[" , "]" , "{" , "}" , "(" , ")" , "-" , "+" , "=" , "~" , "," , ">" , "<" , "/" , "" , "?" , ";" , ":"

mgmt_passwd_enc

Enter one of the following.

- If mgmt_passwd is plain text

"plain"

- If the password is encrypted

"encrypted"

PRIMEQUEST Server Management Data

- **Section Name**

Enter [PRIMERGYPartitionModelServer] as the section name.

- **Section Header**

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

chassis_name

Enter the chassis name (the value of "chassis_name" in the [PRIMERGYPartitionModelChassis] section).

partition_no

The number of a partition. Enter a number between 0 and 3.

server_name

Enter the resource name that will be used to identify the server. Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character. If enclosed by parentheses "()", this server will be seen as being in a switched over state, and this line will be ignored when importing the system definition file.



Note

Server names should be unique between all servers. Names are not case-sensitive.

ip_address

Enter the same IP address as that set within the server's operating system.
Enter a string of numeric values (between 0 and 255) and periods.



IP addresses should be unique between all resources.

boot_option

Specify the boot option configured from BIOS when installing the OS.

- When installing using a legacy boot
"legacy"
- When installing using UEFI
"uefi"



[Linux]
The boot option specification will be disabled, and always be treated as "legacy".

Server Blade VLAN Data

- **Section Name**

Enter [ServerNet] as the section name.

- **Section Header**

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

server_name

Enter the server name (the value of "server_name" in the [Server] section).

nic_no

This is the index number of the server blade's network interface. Enter a number between 1 and 12.

vlan_id (optional)

Enter the VLAN ID and tag type ("/T" or "/U") to be assigned to the LAN switch blade port connected to this server's network interface.

Enter a VLAN ID followed by tag types. To specify multiple VLAN IDs, separate each set of VLAN settings using semicolons (";"). Both tagged ("/T") and untagged ("/U") VLAN IDs can be used together, but only one untagged ("/U") type is allowed.



10/U
10/U;20/T;30/T
10/T;20/T

Note

If a hyphen ("-") is entered, VLAN settings will not be performed.

Use the following NIC indexes to specify LAN expansion cards (if any was mounted).

- PRIMERGY BX600 Servers
7, 8
- PRIMERGY BX900/BX400 Servers
5 to 12

This section will be ignored for PRIMERGY BX900/BX400 LAN switch blades operating in IBP mode.

SPARC Enterprise M4000/M5000/M8000/M9000 Server Data

- Section Name

Enter [SPARCEnterprisePartitionModelServer] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

chassis_name

Enter the chassis name (the "chassis_name" in the [SPARCEnterprisePartitionModelChassis] section).

partition_no

The number of a partition. Enter a number between 0 and 23.

server_name

Enter the resource name that will be used to identify the server.

Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

Note

Server names should be unique between all servers.

Names are not case-sensitive.

ip_address

Enter the same IP address as that set within the server's operating system.

Enter a string of numeric values (between 0 and 255) and periods.

Note

IP addresses should be unique between all resources.

HBA address rename Information of a Server

- Section Name

Enter [ServerWWNN] as the section name.

- **Section Header**

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

server_name

Enter the server name (the value of "server_name" in the [Server] section).

port_count

This is the number of ports that use HBA address rename. Enter a number between 1 and 2.

wwnn

Enter the 16-digit hexadecimal WWNN string of the physical server which uses the HBA address rename function. Enter a hexadecimal string using alphanumeric characters, with "20 0" as the first three characters.



All WWNNs should be unique between all resources (WWNNs are not case-sensitive). Names are not case-sensitive.

Server Switchover Management Information

- **Section Name**

Enter [SpareServer] as the section name.

- **Section Header**

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

server_name

Enter the server name (the value of "server_name" in the [Server] section).

spare_server

Enter the physical server name of a server to be assigned as a spare server.

To specify multiple spare servers, separate each server name using semicolons (";"). To remove current spare server settings, enter "-DELETE".

vlan_switch (optional)

Specify whether VLAN settings or port group settings should be automatically transferred to the spare server when a server switchover occurs. Enter "ON", "OFF" or a hyphen ("-").

auto_switch (optional)

This value defines whether or not to trigger an automatic switchover upon detection of a server failure. Enter "ON", "OFF" or a hyphen ("-").

boot_type

Enter the boot type of the server. Enter one of the following.

- For SAN boot
"SAN"
- For local boot
"local"
- When using the VIOM server profile to conduct boot settings
Hyphens, ("-")

spare_server_force_off

Enter whether the spare server is turned off forcibly, when switching over to the spare server. Enter "ON", "OFF" or a hyphen ("-").

spare_server_with_vm_guest

Enter whether the server is switched to a VM host on which a VM guest exists. Enter "ON", "OFF" or a hyphen ("-").

VM Management Software Information

- Section Name

Enter [VMMManager] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

name

Enter the name used to identify this VM management software. Enter one of the following.

- When using VMware vCenter Server as VM management software.
"vCenterServer"
- When using System Center Virtual Machine Manager as VM management software.
"SCVMM"

ip_address

Enter the IP address used to connect to this VM management software or a hyphen ("-").

Enter a string of numeric values (between 0 and 255) and periods.

If a hyphen ("-") is entered, this VM management software will be seen as being installed on the admin server.

product

Enter the name of this VM management software. Enter one of the following.

- When using VMware vCenter Server as VM management software.
"vmware-vc"
- When using System Center Virtual Machine Manager as VM management software.
"ms-scvmm"

login_name

Enter the name of the user account set for this VM management software.

Use a string of up to 84 alphanumeric characters and symbols (ASCII character codes: from 0x21 to 0x7e). When specifying a domain, use the following syntax: "*domain_name\user_name*".

login_passwd

Enter the password for this VM management software.

Use a string of up to 128 alphanumeric characters and symbols (ASCII character codes: from 0x21 to 0x7e).

passwd_enc

Enter one of the following.

- If login_passwd is plain text
"plain"
- If the password is encrypted
"encrypted"

Server Agent Management Information

- Section Name

Enter [ServerAgent] as the section name.

This is required when registering multiple agents together (for Windows or Linux managed servers).

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

The "change" operation cannot be used for this section.

server_name

Enter the server name (the value of "server_name" in the [Server] section).

VM Host Management Information

- Section Name

Enter [ServerVMHost] as the section name.

This is required when registering multiple agents together (for VM host managed servers).

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

server_name

Enter the server name (the value of "server_name" in the [Server] section).

vm_login_name

Enter the name of the user account used to remotely log into the VM Host.

vm_login_passwd

Enter the password of the above user account (for remote login).

vm_passwd_enc

Enter one of the following.

- If the password is plain text

"plain"

- If the password is encrypted

"encrypted"

Monitoring Settings

- Section Name

Enter [MonitorSetting] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

server_name

Enter the server name (the value of "server_name" in the [Server] section).

ping_timeout

Enter the time-out value (in seconds) for ping control.
Enter a number from 5 to 3,600.

recovery_action

Enter a recovery process. Enter one of the following.

- Reboot
"reboot"
- Reboot (Forced)
"force_reboot"
- Switchover
"switchover"
- Reboot and Switchover
"reboot_and_switchover"
- Reboot (Forced) and Switchover
"force_reboot_and_switchover"

reboot_count

Enter the number of times to reboot. Enter a number from 1 to 3.

Power Monitoring Device Data

- Section Name

Enter [PowerDevice] as the section name.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

device_name

Enter the name that will be used to identify the power monitoring device.
Enter up to 15 characters, including alphanumeric characters and hyphens ("-"). This name should start with an alphabet character.

Note

.....
Device names should be unique between all power monitoring devices. The names are case-sensitive.
.....

ip_address

Enter the same IP address as that set on the power monitoring device.
Enter a string of numeric values (between 0 and 255) and periods.

Note

.....
IP addresses should be unique between all resources.
.....

snmp_community_name

Enter the same SNMP community (read-only permission) as that set on the power monitoring device.
Enter up to 32 characters, including alphanumeric characters, underscores ("_"), and hyphens ("-").

voltage

Enter the voltage (V) that is being supplied to the power monitoring device. Enter a number between 10 and 999.



Note

Resource Orchestrator calculates power consumption data using the electrical current value obtained from the power monitoring device and its specified voltage.

comment (optional)

Enter any comments for the power monitoring device.
Enter up to 128 alphanumeric characters or symbols (ASCII characters 0x20 to 0x7e).



Note

A line break is counted as one character. Use "Alt+Enter" to enter line breaks.

Memo

- Section Name

Enter [Memo] as the section name.

This is required when registering the labels, comments, and contact information (displayed in BladeViewer) using the pre-configuration function.

- Section Header

operation

Enter the desired operation for the current line. Enter a hyphen ("-") to skip this line.

resource_type

Enter the type of the resource for which to set this memo. Enter one of the following.

- When a physical server including a VM host is specified
"physical_server"
- When a VM guest is specified
"vm_guest"
- When contact information is specified
"common"

resource_name

Enter the name of the resource name for which to set this memo. Enter one of the following.

- When "resource_type" is "physical_server"
Enter one of the following.
 - Server name ("server_name" of [ServerAgent] section)
 - VM host name ("server_name" of [ServerVMHost] section)

- When "resource_type" is "vm_guest"
Enter the registered VM guest name
- When "resource_type" is "common"
Do not enter any characters.

label (optional)

This label is used to identify the applications running on each server. Enter up to 32 alphanumeric characters or symbols (ASCII characters 0x20 to 0x7e). Note that if the value of "resource_type" is "common", do not enter anything.



Line breaks ("n") are not available.

comment (optional)

This is a comment that can be set as an option for each application. If the "resource_type" is "common", this can be used for the contact details, maintenance information, or other information. Enter up to 256 alphanumeric characters or symbols (ASCII characters 0x20 to 0x7e).

A.4 Examples of CSV format

This section shows an example of the system configuration file in the CSV format.

```

RCXCSV,V3.4

# ServerView Resource Orchestrator
# System configuration file

[Subnet]
operation,subnet_name,network_address,subnet_mask,gateway
-,subnet1,172.16.0.0,255.255.0.0,172.16.0.1
-,subnet2,192.168.1.0,255.255.255.0,192.168.1.1

[VIOManager]
operation,name,ip_address,login_name,login_passwd,passwd_enc
-,VIOM,127.0.0.1,administrator,administrator,plain

[Chassis]
operation,chassis_name,ip_address,snmp_community_name
-,chassis01,192.168.3.150,public

[PRIMERGYPartitionModelChassis]
operation,chassis_name,ip_address,snmp_community_name,mgmt_user_name,mgmt_passwd,mgmt_passwd_enc
-,pqchassis0,192.168.3.207,public,administrator,administrator,plain
-,pqchassis1,192.168.3.208,public,administrator,administrator,plain

[SPARCEnterprisePartitionModelChassis]
operation,chassis_name,ip_address,snmp_community_name,mgmt_user_name,mgmt_passwd,mgmt_passwd_enc
-,spechassis,192.168.3.212,public,fujitsu,fujitsu,plain

[LanSwitch]
operation,chassis_name,slot_no,switch_name,ip_address,snmp_community_name,user_name,passwd,passwd_enc,priviled_passwd,privileged_passwd_enc,product_name
-,chassis01,1,switch-01,192.168.3.161,public,admin,admin,plain,admin,plain,BX600 GbE Switch Blade 30/12
-,chassis01,2,switch-02,192.168.3.162,public,admin,admin,plain,admin,plain,BX600 GbE Switch Blade 30/12

```

[LanSwitchNet]

operation,chassis_name,slot_no,port_no,vlan_id

-,chassis01,1,31,1/U;10/T;20/T
-,chassis01,1,32,1/U
-,chassis01,1,33,1/U
-,chassis01,1,34,1/U
-,chassis01,1,35,1/U
-,chassis01,1,36,1/U
-,chassis01,1,37,1/U
-,chassis01,1,38,1/U
-,chassis01,1,39,1/U
-,chassis01,1,40,1/U
-,chassis01,1,41,1/U
-,chassis01,1,42,1/U
-,chassis01,1,43,1/U
-,chassis01,1,44,1/U
-,chassis01,2,31,1/U;10/T;20/T
-,chassis01,2,32,1/U
-,chassis01,2,33,1/U
-,chassis01,2,34,1/U
-,chassis01,2,35,1/U
-,chassis01,2,36,1/U
-,chassis01,2,37,1/U
-,chassis01,2,38,1/U
-,chassis01,2,39,1/U
-,chassis01,2,40,1/U
-,chassis01,2,41,1/U
-,chassis01,2,42,1/U
-,chassis01,2,43,1/U
-,chassis01,2,44,1/U

[Server]

operation,chassis_name,slot_no,server_name,ip_address,mac_address,second_mac_address,snmp_community_name,ipmi_ip_address,ipmi_user_name,ipmi_passwd,ipmi_passwd_enc,admin_lan1_nic_number,admin_lan2_nic_number,admin_lan_nic_redundancy

-,chassis01,1,blade001,192.168.3.151,,,,,,1,4,ON
-,chassis01,7,blade002,192.168.3.157,,,,,,1,4,ON
-,chassis01,9,blade003,192.168.3.159,,,,,,1,4,ON
-,,,rackmount001,192.168.3.200,00:E5:35:0C:34:AB,,public,192.168.3.199,admin,admin,plain,,OFF
-,,,rackmount002,192.168.3.202,00:E5:35:0C:34:AC,,public,192.168.3.201,admin,admin,plain,,OFF

[SPARCEnterprise]

operation,server_name,ip_address,mgmt_snmp_community_name,mgmt_ip_address,mgmt_protocol,mgmt_user_name,mgmt_passwd,mgmt_passwd_enc

-,spe001,192.168.3.203,public,192.168.3.204,XSCF,fujitsu,fujitsu,plain
-,spe002,192.168.3.205,public,192.168.3.206,ILOM,fujitsu,fujitsu,plain

[PRIMERGYPartitionModelServer]

operation,chassis_name,partition_no,server_name,ip_address,boot_option

-,pqchassis0,0,pqserver01,192.168.3.209,legacy
-,pqchassis0,1,pqserver02,192.168.3.210,legacy
-,pqchassis0,2,pqserver03,192.168.3.211,legacy

[ServerNet]

operation,server_name,nic_no,vlan_id

-,blade001,1,1/U;10/T;20/T
-,blade001,3,1/U
-,blade001,5,1/U

-blade002,1,1/U;10/T;20/T
-blade002,3,1/U
-blade002,5,1/U
-blade003,1,1/U
-blade003,3,1/U
-blade003,5,1/U
-blade001,2,1/U
-blade001,4,1/U
-blade001,6,1/U
-blade002,2,1/U
-blade002,4,1/U
-blade002,6,1/U
-blade003,2,1/U
-blade003,4,1/U
-blade003,6,1/U

[SPARCEnterprisePartitionModelServer]

operation,chassis_name,partition_no,server_name,ip_address
-,spechassis,3,speserver3,192.168.3.213
-,spechassis,4,speserver4,192.168.3.214

[ServerWWNN]

operation,server_name,port_count,wwnn
-,blade001,1,20 00 00 17 42 51 00 01
-,blade002,1,20 00 00 17 42 51 00 02

[SpareServer]

operation,server_name,spare_server,vlan_switch,auto_switch,boot_type,spare_server_force_off,spare_server_with_vm_guest
-,blade001,blade003,ON,ON,local,OFF,OFF

[VMManager]

operation,name,ip_address,product,login_name,login_passwd,passwd_enc
-,vCenterServer,127.0.0.1,vmware-vc,Administrator,admin,plain

[ServerAgent]

operation,server_name
-,blade001
-,rackmount001
-,rackmount002

[ServerVMHost]

operation,server_name,vm_login_name,vm_login_passwd,vm_passwd_enc
-,blade002,admin,admin,plain

[MonitorSetting]

operation,server_name,ping_timeout,recovery_action,reboot_count
-,blade001,600,reboot_and_switchover,3

[PowerDevice]

operation,device_name,ip_address,snmp_community_name,voltage,comment
-,ups1,192.168.3.196,public,100,SmartUPS
-,ups2,192.168.3.197,public,100,SmartUPS

[Memo]

operation,resource_type,resource_name,label,comment
-,common,,,"TEL:0000-0000"

Appendix B Maintenance Mode

This appendix explains the maintenance mode available in Resource Orchestrator and how to use it.

Maintenance mode is used during hardware maintenance of managed servers. It is also used during the installation and maintenance of physical OS's and VM hosts. Maintenance mode avoids unwanted error notifications and disables execution of Auto-Recovery upon server failure.

The following operations can be performed on a server that has been placed into maintenance mode:

- Maintenance LED

Maintenance LEDs can be controlled.

- Backup and Restore

System images can be backed up and restored.

- Cloning

Cloning images can be collected and deployed.

Use the following procedures to set and release maintenance mode:

- Setting Maintenance Mode

In the ROR console server resource tree, right-click the server (or the physical OS or VM host on the server) to place into maintenance mode, and select [Maintenance Mode]-[Set] from the popup menu.

- Releasing Maintenance Mode

In the ROR console server resource tree, right-click the server (or the physical OS or VM host on the server) to place into active mode, and select [Maintenance Mode]-[Release] from the popup menu.



Note

When using ServerView Deployment Manager, depending on the operation, servers may be rebooted or temporarily shutdown. This also affects servers managed using Resource Orchestrator.

It is recommended to place affected servers into maintenance mode before running operations from ServerView Deployment Manager. Then, the maintenance mode should be released once finished.

Glossary

access path

A logical path configured to enable access to storage volumes from servers.

active mode

The state where a managed server is performing operations.

Managed servers must be in active mode in order to use Auto-Recovery.

Move managed servers to maintenance mode in order to perform backup or restoration of system images, or collection or deployment of cloning images.

active server

A physical server that is currently operating.

admin client

A terminal (PC) connected to an admin server, which is used to operate the GUI.

admin LAN

A LAN used to manage resources from admin servers.

It connects managed servers, storage, and network devices.

admin server

A server used to operate the manager software of Resource Orchestrator.

affinity group

A grouping of the storage volumes allocated to servers. A function of ETERNUS.

Equivalent to the LUN mapping of EMC.

agent

The section (program) of Resource Orchestrator that operates on managed servers.

Auto-Recovery

A function which continues operations by automatically switching over the system image of a failed server to a spare server and restarting it in the event of server failure.

This function can be used when managed servers are in a local boot configuration, SAN boot configuration, or a configuration such as iSCSI boot where booting is performed from a disk on a network.

- When using a local boot configuration

The system is recovered by restoring a backup of the system image of the failed server onto a spare server.

- When booting from a SAN or a disk on a LAN

The system is restored by having the spare server inherit the system image on the storage.

Also, when a VLAN is set for the public LAN of a managed server, the VLAN settings of adjacent LAN switches are automatically switched to those of the spare server.

BACS (Broadcom Advanced Control Suite)

An integrated GUI application (comprised from applications such as BASP) that creates teams from multiple NICs, and provides functions such as load balancing.

BASP (Broadcom Advanced Server Program)

LAN redundancy software that creates teams of multiple NICs, and provides functions such as load balancing and failover.

blade server

A compact server device with a thin chassis that can contain multiple server blades, and has low power consumption. As well as server blades, LAN switch blades, management blades, and other components used by multiple server blades can be mounted inside the chassis.

blade type

A server blade type.
Used to distinguish the number of server slots used and servers located in different positions.

BladeViewer

A GUI that displays the status of blade servers in a style similar to a physical view and enables intuitive operation. BladeViewer can also be used for state monitoring and operation of resources.

BMC (Baseboard Management Controller)

A Remote Management Controller used for remote operation of servers.

boot agent

An OS for disk access that is distributed from the manager to managed servers in order to boot them when the network is started during image operations.

CA (Channel Adapter)

An adapter card that is used as the interface for server HBAs and fibre channel switches, and is mounted on storage devices.

chassis

A chassis used to house server blades and partitions.
Sometimes referred to as an enclosure.

cloning

Creation of a copy of a system disk.

cloning image

A backup of a system disk, which does not contain server-specific information (system node name, IP address, etc.), made during cloning.
When deploying a cloning image to the system disk of another server, Resource Orchestrator automatically changes server-specific information to that of the target server.

Cloud Edition

The edition which can be used to provide private cloud environments.

Domain

A system that is divided into individual systems using partitioning. Also used to indicate a partition.

DR Option

The option that provides the function for remote switchover of servers or storage in order to perform disaster recovery.

end host mode

This is a mode where the uplink port that can communicate with a downlink port is fixed at one, and communication between uplink ports is blocked.

environmental data

Measured data regarding the external environments of servers managed using Resource Orchestrator.
Measured data includes power data collected from power monitoring targets.

ESC (ETERNUS SF Storage Cruiser)

Software that supports stable operation of multi-vendor storage system environments involving SAN, DAS, or NAS. Provides configuration management, relation management, trouble management, and performance management functions to integrate storage related resources such as ETERNUS.

Express

The edition which provides server registration, monitoring, and visualization.

FC switch (Fibre Channel Switch)

A switch that connects Fibre Channel interfaces and storage devices.

fibre channel switch blade

A fibre channel switch mounted in the chassis of a blade server.

GLS (Global Link Services)

Fujitsu network control software that enables high availability networks through the redundancy of network transmission channels.

GSPB (Giga-LAN SAS and PCI_Box Interface Board)

A board which mounts onboard I/O for two partitions and a PCIe (PCI Express) interface for a PCI box.

GUI (Graphical User Interface)

A user interface that displays pictures and icons (pictographic characters), enabling intuitive and easily understandable operation.

HA (High Availability)

The concept of using redundant resources to prevent suspension of system operations due to single problems.

hardware initiator

A controller which issues SCSI commands to request processes.
In iSCSI configurations, NICs fit into this category.

hardware maintenance mode

In the maintenance mode of PRIMEQUEST servers, a state other than Hot System Maintenance.

HBA (Host Bus Adapter)

An adapter for connecting servers and peripheral devices.
Mainly used to refer to the FC HBAs used for connecting storage devices using Fibre Channel technology.

HBA address rename setup service

The service that starts managed servers that use HBA address rename in the event of failure of the admin server.

HBAAR (HBA address rename)

I/O virtualization technology that enables changing of the actual WWN possessed by an HBA.

host affinity

A definition of the server HBA that is set for the CA port of the storage device and the accessible area of storage.
It is a function for association of the Logical Volume inside the storage which is shown to the host (HBA) that also functions as security internal to the storage device.

Hyper-V

Virtualization software from Microsoft Corporation.

Provides a virtualized infrastructure on PC servers, enabling flexible management of operations.

I/O virtualization option

An optional product that is necessary to provide I/O virtualization.

The WWNN address and MAC address provided is guaranteed by Fujitsu Limited to be unique.

Necessary when using HBA address rename.

IBP (Intelligent Blade Panel)

One of operation modes used for PRIMERGY switch blades.

This operation mode can be used for coordination with ServerView Virtual I/O Manager (VIOM), and relations between server blades and switch blades can be easily and safely configured.

ILOM (Integrated Lights Out Manager)

The name of the Remote Management Controller for SPARC Enterprise T series servers.

image file

A system image or a cloning image. Also a collective term for them both.

IPMI (Intelligent Platform Management Interface)

IPMI is a set of common interfaces for the hardware that is used to monitor the physical conditions of servers, such as temperature, power voltage, cooling fans, power supply, and chassis.

These functions provide information that enables system management, recovery, and asset management, which in turn leads to reduction of overall TCO.

IQN (iSCSI Qualified Name)

Unique names used for identifying iSCSI initiators and iSCSI targets.

iRMC (integrated Remote Management Controller)

The name of the Remote Management Controller for Fujitsu's PRIMERGY servers.

iSCSI

A standard for using the SCSI protocol over TCP/IP networks.

LAN switch blades

A LAN switch that is mounted in the chassis of a blade server.

license

The rights to use specific functions.

Users can use specific functions by purchasing a license for the function and registering it on the manager.

link aggregation

Function used to multiplex multiple ports and use them as a single virtual port.

With this function, if one of the multiplexed ports fails its load can be divided among the other ports, and the overall redundancy of ports improved.

logical volume

A logical disk that has been divided into multiple partitions.

LSB (Logical System Board)

A system board that is allocated a logical number (LSB number) so that it can be recognized from the domain, during domain configuration.

maintenance mode

The state where operations on managed servers are stopped in order to perform maintenance work.

In this state, the backup and restoration of system images and the collection and deployment of cloning images can be performed.

However, when using Auto-Recovery it is necessary to change from this mode to active mode. When in maintenance mode it is not possible to switch over to a spare server if a server fails.

managed server

A collective term referring to a server that is managed as a component of a system.

management blade

A server management unit that has a dedicated CPU and LAN interface, and manages blade servers.

Used for gathering server blade data, failure notification, power control, etc.

Management Board

The PRIMEQUEST system management unit.

Used for gathering information such as failure notification, power control, etc. from chassis.

manager

The section (program) of Resource Orchestrator that operates on admin servers.

It manages and controls resources registered with Resource Orchestrator.

master slot

A slot that is recognized as a server when a server that occupies multiple slots is mounted.

multi-slot server

A server that occupies multiple slots.

NAS (Network Attached Storage)

A collective term for storage that is directly connected to a LAN.

network device

The unit used for registration of network devices.

L2 switches and firewalls fit into this category.

network map

A GUI function for graphically displaying the connection relationships of the servers and LAN switches that compose a network.

network view

A window that displays the connection relationships and status of the wiring of a network map.

NFS (Network File System)

A system that enables the sharing of files over a network in Linux environments.

NIC (Network Interface Card)

An interface used to connect a server to a network.

OS

The OS used by an operating server (a physical OS or VM guest).

PDU (Power Distribution Unit)

A device for distributing power (such as a power strip).

Resource Orchestrator uses PDUs with current value display functions as Power monitoring devices.

physical LAN segment

A physical LAN that servers are connected to.

Servers are connected to multiple physical LAN segments that are divided based on their purpose (public LANs, backup LANs, etc.).

Physical LAN segments can be divided into multiple network segments using VLAN technology.

physical OS

An OS that operates directly on a physical server without the use of server virtualization software.

physical server

The same as a "server". Used when it is necessary to distinguish actual servers from virtual servers.

pin-group

This is a group, set with the end host mode, that has at least one uplink port and at least one downlink port.

Pool Master

On Citrix XenServer, it indicates one VM host belonging to a Resource Pool.

It handles setting changes and information collection for the Resource Pool, and also performs operation of the Resource Pool.

For details, refer to the Citrix XenServer manual.

port backup

A function for LAN switches which is also referred to as backup port.

port VLAN

A VLAN in which the ports of a LAN switch are grouped, and each LAN group is treated as a separate LAN.

port zoning

The division of ports of fibre channel switches into zones, and setting of access restrictions between different zones.

power monitoring devices

Devices used by Resource Orchestrator to monitor the amount of power consumed.

PDUs and UPSs with current value display functions fit into this category.

power monitoring targets

Devices from which Resource Orchestrator can collect power consumption data.

pre-configuration

Performing environment configuration for Resource Orchestrator on another separate system.

primary server

The physical server that is switched from when performing server switchover.

public LAN

A LAN used for operations by managed servers.

Public LANs are established separately from admin LANs.

rack

A case designed to accommodate equipment such as servers.

rack mount server

A server designed to be mounted in a rack.

RAID (Redundant Arrays of Inexpensive Disks)

Technology that realizes high-speed and highly-reliable storage systems using multiple hard disks.

RAID management tool

Software that monitors disk arrays mounted on PRIMERGY servers.

The RAID management tool differs depending on the model or the OS of PRIMERGY servers.

Remote Management Controller

A unit used for managing servers.

Used for gathering server data, failure notification, power control, etc.

- For Fujitsu PRIMERGY servers

iRMC2

- For SPARC Enterprise

ILOM (T series servers)

XSCF (M series servers)

- For HP servers

iLO2 (integrated Lights-Out)

- For Dell/IBM servers

BMC (Baseboard Management Controller)

Remote Server Management

A PRIMEQUEST feature for managing partitions.

Reserved SB

Indicates the new system board that will be embedded to replace a failed system board if the hardware of a system board embedded in a partition fails and it is necessary to disconnect the failed system board.

resource

Collective term or concept that refers to the physical resources (hardware) and logical resources (software) from which a system is composed.

resource pool

On Citrix XenServer, it indicates a group of VM hosts.

For details, refer to the Citrix XenServer manual.

resource tree

A tree that displays the relationships between the hardware of a server and the OS operating on it using hierarchies.

ROR console

The GUI that enables operation of all functions of Resource Orchestrator.

SAN (Storage Area Network)

A specialized network for connecting servers and storage.

server

A computer (operated with one operating system).

server blade

A server blade has the functions of a server integrated into one board.
They are mounted in blade servers.

server management unit

A unit used for managing servers.
A management blade is used for blade servers, and a Remote Management Controller is used for other servers.

server name

The name allocated to a server.

server virtualization software

Basic software which is operated on a server to enable use of virtual machines. Used to indicate the basic software that operates on a PC server.

ServerView Deployment Manager

Software used to collect and deploy server resources over a network.

ServerView Operations Manager

Software that monitors a server's (PRIMERGY) hardware state, and notifies of errors by way of the network.
ServerView Operations Manager was previously known as ServerView Console.

ServerView RAID

One of the RAID management tools for PRIMERGY.

ServerView Update Manager

This is software that performs jobs such as remote updates of BIOS, firmware, drivers, and hardware monitoring software on servers being managed by ServerView Operations Manager.

ServerView Update Manager Express

Insert the ServerView Suite DVD1 or ServerView Suite Update DVD into the server requiring updating and start it.

This is software that performs batch updates of BIOS, firmware, drivers, and hardware monitoring software.

Single Sign-On

A system among external software which can be used without login operations, after authentication is executed once.

slave slot

A slot that is not recognized as a server when a server that occupies multiple slots is mounted.

SMB (Server Message Block)

A protocol that enables the sharing of files and printers over a network.

SNMP (Simple Network Management Protocol)

A communications protocol to manage (monitor and control) the equipment that is attached to a network.

software initiator

An initiator processed by software using OS functions.

Solaris Container

Solaris server virtualization software.

On Solaris servers, it is possible to configure multiple virtual Solaris servers that are referred to as a Solaris zone.

Solaris zone

A software partition that virtually divides a Solaris OS space.

SPARC Enterprise Partition Model

A SPARC Enterprise model which has a partitioning function to enable multiple system configurations, separating a server into multiple areas with operating OS's and applications in each area.

spare server

A server which is used to replace a failed server when server switchover is performed.

storage blade

A blade-style storage device that can be mounted in the chassis of a blade server.

storage unit

Used to indicate the entire secondary storage as one product.

switchover state

The state in which switchover has been performed on a managed server, but neither failback nor continuation have been performed.

System Board

A board which can mount up to 2 Xeon CPUs and 32 DIMMs.

system disk

The disk on which the programs (such as the OS) and files necessary for the basic functions of servers (including booting) are installed.

system image

A copy of the contents of a system disk made as a backup.

Different from a cloning image as changes are not made to the server-specific information contained on system disks.

tower server

A standalone server with a vertical chassis.

UNC (Universal Naming Convention)

Notational system for Windows networks (Microsoft networks) that enables specification of shared resources (folders, files, shared printers, shared directories, etc.).



Example

.....
\\hostname\dir_name
.....

UPS (Uninterruptible Power Supply)

A device containing rechargeable batteries that temporarily provides power to computers and peripheral devices in the event of power failures.

Resource Orchestrator uses UPSs with current value display functions as power monitoring devices.

URL (Uniform Resource Locator)

The notational method used for indicating the location of information on the Internet.

VIOM (ServerView Virtual-IO Manager)

The name of both the I/O virtualization technology used to change the MAC addresses of NICs and the software that performs the virtualization.

Changes to values of WWNs and MAC addresses can be performed by creating a logical definition of a server, called a server profile, and assigning it to a server.

Virtual Edition

The edition that can use the server switchover function.

Virtual I/O

Technology that virtualizes the relationship of servers and I/O devices (mainly storage and network) thereby simplifying the allocation of and modifications to I/O resources to servers, and server maintenance.

For Resource Orchestrator it is used to indicate HBA address rename and ServerView Virtual-IO Manager (VIOM).

virtual server

A virtual server that is operated on a VM host using a virtual machine.

virtual switch

A function provided by server virtualization software to manage networks of VM guests as virtual LAN switches.

The relationships between the virtual NICs of VM guests and the NICs of the physical servers used to operate VM hosts can be managed using operations similar to those of the wiring of normal LAN switches.

VLAN (Virtual LAN)

A splitting function, which enables the creation of virtual LANs (seen as differing logically by software) by grouping ports on a LAN switch.

Using a Virtual LAN, network configuration can be performed freely without the need for modification of the physical network configuration.

VLAN ID

A number (between 1 and 4,095) used to identify VLANs.

Null values are reserved for priority tagged frames, and 4,096 (FFF in hexadecimal) is reserved for mounting.

VM (Virtual Machine)

A virtual computer that operates on a VM host.

VM guest

A virtual server that operates on a VM host, or an OS that is operated on a virtual machine.

VM Home Position

The VM host that is home to VM guests.

VM host

A server on which server virtualization software is operated, or the server virtualization software itself.

VM maintenance mode

One of the settings of server virtualization software, that enables maintenance of VM hosts.

For example, when using high availability functions (such as VMware HA) of server virtualization software, by setting VM maintenance mode it is possible to prevent the moving of VM guests on VM hosts undergoing maintenance.

For details, refer to the manuals of the server virtualization software being used.

VM management software

Software for managing multiple VM hosts and the VM guests that operate on them.

Provides value adding functions such as movement between the servers of VM guests (migration).

VMware

Virtualization software from VMware Inc.

Provides a virtualized infrastructure on PC servers, enabling flexible management of operations.

Web browser

A software application that is used to view Web pages.

WWN (World Wide Name)

A 64-bit address allocated to an HBA.

Refers to a WWNN or a WWPN.

WWNN (World Wide Node Name)

The WWN set for a node.

The Resource Orchestrator HBA address rename sets the same WWNN for the fibre channel port of the HBA.

WWPN (World Wide Port Name)

The WWN set for a port.

The Resource Orchestrator HBA address rename sets a WWPN for each fibre channel port of the HBA.

WWPN zoning

The division of ports into zones based on their WWPN, and setting of access restrictions between different zones.

Xen

A type of server virtualization software.

XSB (eXtended System Board)

Unit for domain creation and display, composed of physical components.

XSCF (eXtended System Control Facility)

The name of the Remote Management Controller for SPARC Enterprise M series servers.

zoning

A function that provides security for Fibre Channels by grouping the Fibre Channel ports of a Fibre Channel switch into zones, and only allowing access to ports inside the same zone.