



Fujitsu Storage ETERNUS SF Storage Cruiser V16.9.1

Operation Guide

B1FW-6007-12ENZ0(00)
June 2024

Preface

Purpose of This Manual

This manual describes how to use ETERNUS SF Storage Cruiser (hereafter abbreviated as "Storage Cruiser").

Intended Readers

The manual is intended for operations managers who use Storage Cruiser for storage management.

The procedure used for actual system configuration assumes that the reader knows the basic configuration procedure for the installation target server, storage units, and their network.

Structure of This Manual

The structure of this manual is as follows.

Chapter 1 Overview

Explains the ETERNUS SF Storage Cruiser.

Chapter 2 Fault Monitoring

Explains how to detect errors occurring in the devices making up a storage system, the screen displayed for them, and how to respond to them.

Chapter 3 Operation Design

Explains LAN connections.

Chapter 4 Environment Configuration

Provides the settings and notes required for devices to be managed.

Chapter 5 Startup and Setting

Provides device definitions and operation flowcharts required for operating this product software.

Chapter 6 Operation

Explains how to use each view of the resource view and Correlation window.

Chapter 7 Performance Management

Explains performance management functions.

Chapter 8 Reporting Function

Explains reporting functions.

Chapter 9 Storage Cluster Function

Explains Storage Cluster functions.

Chapter 10 Maintenance of Devices to Be Managed

Explains the screen displayed at the occurrence of a device error and how to respond to it.

Chapter 11 Maintenance of Administrative Environment

Explains how to maintain databases and the troubleshooting required if a problem occurs.

Chapter 12 Linkage to Other Software

Explains how to link with other software.

Chapter 13 Command References

Explains how to use each command.

Appendix A Customization

Explains how to customize definition files.

Appendix B Troubleshooting

Explains basic troubleshooting and also provides information on where to find further help.

Appendix C How to Check Product Version

Explains how to check version of installed ETERNUS SF Storage Cruiser.

Appendix D Operations Other Than Operations on Switches within System Managed on Storage Cruiser

Explains the operation points in cases when managing the system configuration storage devices and servers including switches not supported by Storage Cruiser.

Conventions

- "FUJITSU Storage" and "Fujitsu Storage" are omitted from the names of the products and manuals.
- This manual abides by the conventions listed in "Conventions" in the *ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Documentation Road Map*.
- Unless otherwise noted in this manual, "Deduplication/Compression" indicates either Deduplication or Compression.
- Unless otherwise noted in this manual, "Compression volume" indicates a volume with Compression enabled.

Export Controls

Exportation/release of this document may require necessary procedures in accordance with the regulations of your resident country and/or US export control laws.

Trademarks

- Microsoft, Windows, Windows Server, Internet Explorer, and Microsoft Edge are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.
- UNIX is a registered trademark of The Open Group in the United States and other countries.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.
- Linux is a registered trademark of Linus Torvalds.
- Red Hat and RPM are registered trademarks of Red Hat, Inc. in the U.S. and other countries.
- Novell is a registered trademark of Novell Inc., and SUSE and the SUSE logo is a trademark, of SUSE LLC, in the United States and other countries.
- HP-UX is a trademark of Hewlett-Packard Company in the United States and other countries.
- AIX is a trademark or a registered trademark of International Business Machines Corporation in the United States and other countries.
- All other brand and product names are trademarks or registered trademarks of their respective owners.

Revision History

Date of Publication	Revision	Document Part Number	
		PDF	HTML
June 2024	12	B1FW-6007-12ENZ0(00)	B1FW-6007-12ENZ2(00)
September 2023	11	B1FW-6007-11ENZ0(00)	B1FW-6007-11ENZ2(00)
February 2023	10.4	B1FW-6007-10ENZ0(04)	B1FW-6007-10ENZ2(04)
May 2022	10.3	B1FW-6007-10ENZ0(03)	B1FW-6007-10ENZ2(03)
November 2021	10.2	B1FW-6007-10ENZ0(02)	B1FW-6007-10ENZ2(02)
October 2021	10.1	B1FW-6007-10ENZ0(01)	B1FW-6007-10ENZ2(01)

Date of Publication	Revision	Document Part Number	
		PDF	HTML
August 2021	10	B1FW-6007-10ENZ0(00)	B1FW-6007-10ENZ2(00)
February 2021	9.5	B1FW-6007-09ENZ0(05)	B1FW-6007-09ENZ2(05)
October 2020	9.4	B1FW-6007-09ENZ0(04)	B1FW-6007-09ENZ2(04)
July 2020	9.3	B1FW-6007-09ENZ0(03)	B1FW-6007-09ENZ2(03)
March 2020	9.2	B1FW-6007-09ENZ0(02)	B1FW-6007-09ENZ2(02)
January 2020	9.1	B1FW-6007-09ENZ0(01)	B1FW-6007-09ENZ2(01)
November 2019	9	B1FW-6007-09ENZ0(00)	B1FW-6007-09ENZ2(00)
April 2019	8.1	B1FW-6007-08ENZ0(01)	B1FW-6007-08ENZ2(01)
December 2018	8	B1FW-6007-08ENZ0(00)	B1FW-6007-08ENZ2(00)
December 2017	7	B1FW-6007-07ENZ0(00)	B1FW-6007-07ENZ2(00)
May 2017	6	B1FW-6007-06ENZ0(00)	B1FW-6007-06ENZ2(00)
October 2016	5	B1FW-6007-05ENZ0(00)	B1FW-6007-05ENZ2(00)
June 2016	4.3	B1FW-6007-04ENZ0(03)	B1FW-6007-04ENZ2(03)
April 2016	4.2	B1FW-6007-04ENZ0(02)	B1FW-6007-04ENZ2(02)
December 2015	4.1	B1FW-6007-04ENZ0(01)	B1FW-6007-04ENZ2(01)
October 2015	4	B1FW-6007-04ENZ0(00)	B1FW-6007-04ENZ2(00)
July 2015	3.2	B1FW-6007-03ENZ0(02)	B1FW-6007-03ENZ2(02)
March 2015	3.1	B1FW-6007-03ENZ0(01)	B1FW-6007-03ENZ2(01)
January 2015	3	B1FW-6007-03ENZ0(00)	B1FW-6007-03ENZ2(00)
July 2014	2.1	B1FW-6007-02ENZ0(01)	B1FW-6007-02ENZ2(01)
June 2014	2	B1FW-6007-02ENZ0(00)	B1FW-6007-02ENZ2(00)
May 2014	1.3	B1FW-6007-01ENZ0(03)	B1FW-6007-01ENZ2(03)
April 2014	1.2	B1FW-6007-01ENZ0(02)	B1FW-6007-01ENZ2(02)
March 2014	1.1	B1FW-6007-01ENZ0(01)	B1FW-6007-01ENZ2(01)
December 2013	1	B1FW-6007-01ENZ0(00)	B1FW-6007-01ENZ2(00)

Notes

- No part of this manual may be reproduced without permission.
- This manual is subject to change without advance notice.

Copyright Notice

Copyright 2013-2024 Fujitsu Limited

Update History

Content of Update	Updated Section	Revision
The "FUJITSU Storage" part of the product name has been changed to "Fujitsu Storage".	Cover page	12
Information related to the following devices has been added. - ETERNUS DX S6 series	General	

Content of Update	Updated Section	Revision
<p>Information related to the following devices and software has been deleted.</p> <ul style="list-style-type: none"> - ETERNUS DX200F - ETERNUS VS850 S3 - ETERNUS CS800 S6 - ETERNUS LT40 S2, LT60 S2 - Brocade 7800 - Brocade VDX 8770-4, VDX 8770-8 - PRIMERGY BX600 Fibre Channel switch blade - Microsoft Windows Server 2012 R2 - Microsoft Windows Server 2012 - Red Hat Enterprise Linux 6 (for Intel64) - SUSE Linux Enterprise Server 12 for AMD64 & Intel64 - AIX <p>The term has been changed as follows.</p> <ul style="list-style-type: none"> - "Master CM" to "Main CM" - "Slave CM" to "Subordinate CM" - "Master port" to "Primary port" 		
The description about handling the newly added SNMP Traps in the ETERNUS AX/HX series has been added.	1.1, A.5	
The explanation has been modified.	2.5, 6.6.2.1, 6.6.2.2, 6.6.3.1, 7,1,1, 8.2, 11.1.2.11, 11.2.3.3	
In [Note], the explanation has been added or modified..	5.3, 7.2.6.6	
The entire chapter has been updated to support the Active-Active configuration.	Chapter 9	
The section title has been changed.	11.1.2.11, 11.2.3.3, 11.3.3.3, 11.4.2.3	
The description of -c option for the mpaplreg command has been modified.	12.1.4.1	
A command execution example has been added in EXAMPLES.	13.1.1.4	
A new section has been added.	B.4.4	
The method how to check the component version has been modified.	C.2, C.3	
The version information has been changed to V16.9A.	Cover page	11
The description about the working version of ETERNUS Multipath Driver has been changed.	3.2	
[Point] has been added.	7.4	
The reason why the target performance of I/O response is set to "30 msec or less" has been added to Case 1.	7.6	
Information related to the following software has been added.	11.1.1.2.2, 11.1.1.3.2, 13.3.3.1, A. 10	
<ul style="list-style-type: none"> - Red Hat Enterprise Linux 9 (for Intel64) 		
Information related to FC switches has been added.	11.1.2.8	

Content of Update	Updated Section	Revision
Information related to the following software has been added. - Red Hat Enterprise Linux 9 (for Intel64)	3.2, 4.1.3.3, A.12	10.4
The procedure to start the service when the Management Server is not used for a cluster operation has been modified.	13.3.1.2	
Information related to the following software has been added. - Microsoft Windows Server 2022 Information related to the following devices has been deleted. - Switches that Fabric OS v6.2 or earlier is installed	General	10.3
Information related to the following devices has been added in Step 1 of "Registering ETERNUS Disk Storage Systems and License". - ETERNUS DX S4 series (excluding the ETERNUS DX8900 S4) and ETERNUS AF S2 series that have firmware version V10L90-2000 or later	9.4.1	10.2
Information related to the VE ports of the Brocade 7810 has been added.	4.2.1	10.1
Information related to displaying data access state of the RAID group during redundancy loss has been added.	6.1.1	
Information related to the following devices has been added. - ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4), ETERNUS AF S2 series, AF series, or ETERNUS DX200F that has firmware version V10L90-1000 or later	9.4.2.6, 9.4.2.8, 9.4.2.9, 9.4.3	
Information related to the following device has been added. - ETERNUS CS800 M1 Information related to the following devices has been deleted. - ETERNUS VS850 S2 - ETERNUS CS800 S5/CS800 S4 - NetApp V-Series - Tintri VMstore series In addition, unnecessary description has been deleted.	General	10
The product overview article has been deleted from this manual because it was moved to the <i>Overview</i> . in addition, unnecessary description has been deleted.		
Information related to Red Hat Enterprise Linux 8 has been added.	3.2	
The content of "Unit of Eco-mode Control" that was described in section 1.2.5 of the previous version has been moved.	3.4	
[Point] has been added.	4.1.7	
In response to the migration of the "Problem-handling (FAQ)" section to Appendix B.4, reference destinations have been updated.	4.1.7.1, 10.1	
The "Problem-handling (FAQ)" section has been moved to Appendix B.4.	4.1.7.2, 4.2.1.3, 4.2.3.1.3, 4.3.1.2	
In [Note], the explanation has been modified.	4.2.1.1	
The content of "Concerns in Storage System Operation When Using Eco-mode" that was described in section 1.2.5 of the previous version has been moved.	6.1.6.1	

Content of Update	Updated Section	Revision
The contents of the table have been modified.	6.2.2.1	
A description to indicate that the operations are performed only when instructed by your maintenance engineer has been added.	9.4.2.7	
New sections have been added.	9.4.2.8, 11.1.2.12, B.4	
The description has been added in the "Maintenance" of the table "Phase".	9.4.2.9	
The procedure has been modified.	9.4.3.10	
The descriptions related to the operation and maintenance of Storage Cluster have been improved.	9.4.2, 9.4.3	9.5
Information related to Red Hat Enterprise Linux 8 has been added or modified.	1.2.9, 4.4, 13.3.3.1	9.4
The paragraph "When Managing with Products That Use the RESTful API of the Storage Device" has been added.	3.4	
Information related to the ETERNUS DX S5 series, DX8900 S4, and ETERNUS AF S3 series whose firmware version is V11L40 or later has been added.	6.1.3, 6.4.1, 7.1.1	
In [Note], the term "Veeam" has been changed to "Veeam Storage Integration".	6.1.5	
In "Threshold Values and Threshold Monitoring Status", the meaning of the displayed icons has been described. In addition, the explanation of "Action to Take When Threshold Values Are Exceeded" has been modified.	6.4.1	
The explanation has been modified or added.	7.2.9, 11.1.2.8	
[Point] has been added in step 1 of "Registering ETERNUS Disk Storage Systems and License".	9.4.1	
In [Note] of "Configuring TFO Group", the explanation has been added.	9.4.1	
The organization of this section have been reviewed and the explanation of the business volume allocation procedure using Web Console has been added.	9.4.2.1	
In "Configuring Access Path (When Allocating Volumes to Each Storage or When Adding Secondary Storage Where Only Primary Storage Is Used)", the bullet "About the host affinity setting when Veeam Storage Integration is used" has been added.	9.4.2.1	
In [Point], the explanation has been added.	9.4.2.6	
[Information] has been added.	12.2	
[Note] has been deleted.	Appendix E	
Information related to the following devices has been added. - ETERNUS AX/HX series - ETERNUS AB/HB series	General	
Descriptions related to unsupported devices and devices with support level I have been modified or deleted.	1.2.9, 2.1, 2.2, 2.4, 10.1, A.1, A.5	
Information related to the role group configuration file has been added.	11.1.1.2.3, 11.1.1.2.4, 11.1.1.3.3, 11.1.1.3.4	
Information related to expanding the event messages of the threshold monitoring alarm has been added.	7.1.3, 7.2.2, 7.3.6, 7.5, A.4	9.2

Content of Update	Updated Section	Revision
Information related to the following device has been added. - ETERNUS DX900 S5	General	9.1
The URL address of the <i>SNIA HBA API Library Installation Guide</i> has been modified.	4.1.1.1, 4.1.2.1, 4.1.3.1	
Information related to Model Upgrade from the following devices has been added. - ETERNUS DX60 S5 - ETERNUS DX100 S5 - ETERNUS DX200 S5 - ETERNUS DX500 S5 - ETERNUS AF150 S3 - ETERNUS AF250 S3	11.1.2.8	
Information related to the following devices and software has been added. - ETERNUS DX S5 series (excluding the ETERNUS DX900 S5) - ETERNUS AF S3 series - Red Hat Enterprise Linux 8 (for Intel64) - SUSE Linux Enterprise Server 15 for AMD64 & Intel64 - SUSE Linux Enterprise Server 12 Service Pack 4 for AMD64 & Intel64 Information related to the following devices and software has been deleted. - ETERNUS DX60, DX400 series, DX8000 series - ETERNUS SN200 series - ETERNUS VS850 - ETERNUS CS800 S3/CS800 S2/CS800 - ETERNUS LT20, LT40, LT60, LT200, LT210, LT220, LT230, LT250, LT270 - Microsoft Windows Server 2008 R2 - Microsoft Windows Server 2008 - Red Hat Enterprise Linux 5 (for x86) - Red Hat Enterprise Linux 5 (for Intel64) - SynfinityDISK	General	9
The description for Conventions has been changed so that the <i>ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Documentation Road Map</i> is referenced.	"Conventions" in Preface	
The "Manual Organization and Reading Suggestions" section has been deleted from Preface.	Preface	
In the table "Support Levels", information of the support level B has been modified.	1.2.9	
Information related to SUSE Linux Enterprise Server 12 has been modified.	3.2	

Content of Update	Updated Section	Revision	
The explanation has been added.	4.2.3		
In [Note], the explanation has been added.	4.5, 7.3.4		
In 1st [Note], the explanation has been modified. In addition, in [Note] under "For Hyper-V (Windows, Only for Manager)", the explanation has been modified.	6.1.7		
In [See], the explanation has been modified.	6.3		
In "Systemwalker Centric Manager Linkage", the explanation about events of transition of the Thin Provisioning Pool using rate and reduction of Thin Provisioning Pool's capacity has been added.	6.3		
The section title has been changed.	7.2.6.7		
In [Point], the explanation has been added.	7.2.9		
In [Note] of "Automatic Failover", the explanation has been modified.	9.2		
Explanation related to starting and stopping the ETERNUS SF Manager services/daemons has been modified.	13.3.1 - 13.3.3		
[Note] has been added.	Appendix E		
The description of step 1 has been modified.	Appendix E		
Information related to Microsoft Windows Server 2019 has been added.	"Notation" and "Others" in Preface, 3.1.1, 3.2		8.1
Information related to the ETERNUS LT140 has been added.	"Notation" in Preface, 1.2.9, 4.7.2, 12.1.4.2, A.5		
Information related to the ETERNUS CS800 S7/CS800 S6/CS800 S5/CS800 S4 has been added.	1.2.9, 4.6		
Information related to the Brocade 7810 has been added.	4.2.1.3		
In [Note], the explanation has been added.	6.1.5		
[Note] has been added in "Automatic Failover".	9.2		
The description about Veeam has been added in "Preparing Business Volume". In addition, the explanation in "Confirming Configuration" has been modified.	9.4.2.1		
In [Note], the description about Veeam has been added.	9.4.2.3		
The explanation of step 4 in "If the pre-replaced switch model and the post-replaced switch model are different" has been modified.	10.2.4		
The explanation of step 2 and [Note] has been modified.	12.1.4.1		
The explanation for the -dir option has been modified.	13.1.1.9		
The explanation of the work procedure has been modified.	B.3.1, B.3.2	8	
Information related to the ETERNUS DX8900 S4 has been added.	"Notation" and "Others" in Preface, 3.1.1, 3.4, 6.1.2 - 6.1.4, 6.1.8, 7.1.1, 7.2.3, 7.2.6.7, 9.4.1, 12.2, 13.1.1.5, 13.1.1.6, 13.1.2.2, 13.1.2.7, A.5		
Notation related to VDX has been modified.	"Others" in Preface, 1.2.9, 2.3, 3.1.1, 3.1.2, 4.2.3, 4.2.3.1.1 - 4.2.3.1.3, 4.2.3.2, 5.2.3, 11.1.2.9, 12.1.4.2, 13.1.1.2, 13.1.1.4, A.5	7	
Information related to Solaris 9 has been deleted.	"Notation" in Preface, 3.2, 5.2.2, 6.2.3.2		

Content of Update	Updated Section	Revision
Information related to the ETERNUS DX500 S4/DX600 S4 has been added.	"Notation" in Preface, 3.1.1, 6.6.1.5, 7.1.1, 7.2.3, 11.1.2.8, 12.2, A.5	
Information related to the ETERNUS AF250 S2/AF650 S2 has been added.	"Notation" in Preface, 1.2.5, 1.2.6, 1.2.9, 2.5, 3.1.1, 3.1.2, 4.3.1, 4.3.1.1, 4.3.1.2, 5.2.2, 5.2.3, 5.3, 6.1.3, 6.1.5, 6.2.1, 6.2.3, 6.2.3.1, 6.6, 7.1.1, 7.2.3, 8.2, 11.1.2.9, 11.1.2.11, 11.2.3.3, 12.1.4.2, 12.1.4.3, 12.2, 13.1.1.5, 13.1.1.6, 13.1.2, 13.1.2.2 - 13.1.2.4, 13.1.2.7, A.5	
The description related to the expansion of platforms that support Storage Cluster Controller has been modified or added.	4.1.1, 4.1.3, 11.2.3.3, 11.3.3.3, 11.4.2.3, 13.2.4, A.12	
In [Note], the explanation has been modified or added.	4.2.1.1, 4.2.1.3, 4.9, 6.1.1, 6.1.2, 7.2.3, 9.4.2.3, 10.3.1	
"Recovering for Performance Monitoring Status of Device Is Displayed" has been added in FAQ.	4.2.1.3	
Information related to the NetApp AFF A series has been added.	4.4, 10.1, 12.1.4.2, A.5	
[Point] has been added.	5.2.7, 6.2.3.2, 9.4.2.1	
The description related to the SNMP Trap test has been deleted.	5.3	
The description of "Checking Storage Settings" has been modified.	6.2.3.1	
A note for CA and CM Port has been added.	7.1.1	
In "Target", the description related to the Non-disruptive Storage Migration function has been added.	8.1.3	
The explanation in "Preparing Business Volume" has been added.	9.4.2.1	
The explanation in "Configuring Access Path" has been modified and added.	9.4.2.1	
In the note for "CA/CM Port Performance Information of Storage Device", the explanation related to the performance information of the FC-Initiator port has been added.	13.1.1.6	
NOTES has been added.	13.1.2.1	
IN NOTES, the description has been added.	13.1.2.2 - 13.1.2.4	
The EXAMPLES has been modified.	13.2.4	
In the table A.1, the SNMP Trap XML definition file for checking the settings for SNMP Traps from the Storage Cruiser's agent has been added.	A.5	
The explanation for "HBAMask" has been modified.	A.6	
Information related to Microsoft Windows Server 2016 has been added.	"Notation" and "Others" in Preface, 3.1.1, 3.2	6
Information related to Windows Vista has been deleted.	"Notation" in Preface	
Information related to SUSE Linux Enterprise Server 11 has been deleted and information related to SUSE Linux Enterprise Server 12 for AMD64 & Intel64 has been added.	"Notation" in Preface, 3.2, 4.1.3.3	
Information related to the ETERNUS DX60 S4/DX100 S4/DX200 S4 has been added.	"Notation" in Preface, 1.2.5, 1.2.6, 1.2.9, 2.5, 3.1.1, 4.3.1.1, 5.2.2, 5.2.3, 6.1.3, 6.1.5, 6.2.1,	

Content of Update	Updated Section	Revision
	6.2.3.1, 6.6.1.5, 7.1.1, 7.2.3, 8.2, 11.1.2.8, 12.2, 13.1.1.5, 13.1.1.6, 13.1.2, 13.1.2.2 - 13.1.2.4, 13.1.2.7, A.5	
ETERNUS Multipath Driver has been added to the middleware that can be managed in a Solaris 11 environment.	3.2	
The task required when you use the beacon function has been added.	4.2.1.1	
The section title has been changed.	5.3	
In [Information], one sentence has been deleted.	5.3	
In [Note], the explanation has been modified or added.	6.1.2, 6.1.3, 6.1.7, 9.4.1, 9.4.2.3, 13.3.1.1	
[Point] has been added.	6.1.3, 9.2, 9.4.1, 9.4.2.1	
Information has been added in "Notes".	6.2.3.1	
In [Note], information related to the Brocade X6-4/X6-8 has been added.	7.2.3	
The figure "Behavior of Automatic Failover When CA Port Is Linked Down (for FC Configuration)" has been added.	9.2	
The description about releasing/recovering a TFO pair has been added.	9.2	
In the table "Timing of Automatic Failover Operation", "*1" has been added to #8.	9.2	
The condition about ports for connecting to a business server has been modified. In addition, information on how to expand the total capacity of TFOVs has been added.	9.4.1	
The condition about preparing business volumes has been added.	9.4.2.1	
The description about expanding the capacity of the business volume capacity has been added.	9.4.2.4	
New sections have been added.	9.4.2.5, 9.4.3.4, 9.4.3.7, 9.4.3.8, 11.1.2.11	
The strings that are displayed in Phase and Status has been changed.	9.4.2.8	
In the step (a) of the table 9.7, information that the -force option is required for the acopc cancel command when using QuickOPC has been added.	9.4.3	
In the step (e) of the table 9.7, the procedure when using OPC/ QuickOPC has been modified.	9.4.3	
The operation procedure has been modified.	9.4.3.1 - 9.4.3.3, 9.4.3.5, 9.4.3.6, 9.4.3.10	
The procedure for backup and restoration has been modified.	11.1.1.2.1, 11.1.1.2.3, 11.1.1.3.1, 11.1.1.3.3	
The description has been modified so that Microsoft Windows Server 2016 is listed.	11.1.2.10, 13.3.1.1, 13.3.1.2, 13.4.1	
In NOTES, the description of the LUN concatenated volume has been deleted.	13.1.2.3, 13.1.2.4	
In the table A.1 and A.2, information about Device-Mapper Multipath in the Linux environment has been added.	A.5	
Information related to HP-UX 11i v1/v2 has been deleted.	"Notation" in Preface, 3.2	5

Content of Update	Updated Section	Revision
Information related to VMware vSphere 4 has been deleted.	"Notation" in Preface, 1.2.9, 2.1, 2.3, 3.1, 4.1.7, 5.2.2, 5.2.4, 5.3, 6.2.1, 6.2.3, 6.2.3.2, 6.2.4, 6.2.4.2, 10.3.1, 11.1.2.9	
Information related to the ETERNUS DX80/DX90 has been deleted.	"Notation" in Preface, 1.2.5, 1.2.9, 3.1.1, 4.3.1.1, 4.3.1.2, 5.2.2, 6.1.5, 6.1.9, 6.2.3.1, 7.1.1, 7.2.2, 7.2.3, 11.1.2.8, 12.2, 13.1.1.5, 13.1.1.6, 13.1.2, 13.1.2.2 - 13.1.2.4, 13.1.2.6, 13.1.2.7, A.5	
Information related to the ETERNUS AF250/AF650 has been added.	"Notation" and "Others" in Preface, 1.2.5, 1.2.6, 1.2.9, 2.5, 3.1.1, 3.1.2, 4.3.1, 4.3.1.1, 4.3.1.2, 5.2.2, 5.2.3, 5.3, 6.1.3, 6.1.5, 6.2.1, 6.2.3, 6.2.3.1, 6.6, 7.1.1, 7.2.3, 8.2, 11.1.2.9, 12.1.4.2, 12.1.4.3, 12.2, 13.1.1.5, 13.1.1.6, 13.1.2, 13.1.2.2 - 13.1.2.4, 13.1.2.7, A.5	
Information related to the ETERNUS LT60 has been deleted.	"Notation" in Preface, 1.2.9, 4.7.2, 12.1.4.2, A.5	
The description of the antivirus function has been deleted.	"Software Products" in Preface, 6.6	
[Point] has been added.	1.2.2, 6.5.5	
The explanation related to automatic updates of the device component status has been added.	1.2.2, 1.2.9, 2.2, 2.5, 5.2.3, 5.2.4, 10.1	
In [Note], the explanation has been modified or added.	4.2.1.3, 6.5.1.4, 6.5.1.5, 7.1.1, 10.3.1	
The explanation has been separated into the automatically detectable devices and the manually detected devices.	4.2.3	
The term "Deduplication" has been changed to "Deduplication/Compression". In addition, the explanation related to Deduplication/Compression has been added.	6.1.3	
The explanation of "Migration of Virtual Machine" has been modified.	6.1.10	
In [Point], the explanation has been added.	6.5.1.2, 6.5.1.3, 7.2.9	
New section has been added.	6.5.1.7	
The explanation for the setting item has been added.	7.3.3	
The explanation of "Minimum Threshold Monitoring Interval" has been added.	7.3.4	
The explanation to use the Storage Cluster function in an iSCSI environment has been added.	9.1 - 9.3, 9.4.1, 9.4.2.1, 9.4.3.1, 9.4.3.6, 9.4.3.7, 13.1.1.5, 13.1.2.6, 13.1.2.7	
The explanation of the requirement that is described in "Preparing Business Volume" has been modified.	9.4.2.1	
The procedure is modified.	11.1.1.3.1, 11.1.1.3.3	
Information related to Model Upgrade from the ETERNUS DX200 S3 to the ETERNUS DX500 S3 has been added.	11.1.2.8	
The bit7 and bit8 have been added in flag attribute of TrapType tag.	A.5	

Content of Update	Updated Section	Revision
The explanation related to the event notification setting of SNMP Traps has been added.	A.8	
The description related to email has been deleted.	B.1, B.2	
In [Point], information has been added.	6.6.1.1.1	4.3
The explanation related to home directory has been added.	6.6.1.1.3, 6.6.1.5.1, 6.6.4.1 - 6.6.4.3, 6.6.4.28	
In [Information], the explanation has been modified.	6.6.1.2.1	
The unit that can set quota has been described.	6.6.1.4.1, 6.6.4.16	
The explanation about a local user/local group for connecting to NAS has been added.	6.6.2.1, 6.6.2.2, 6.6.3.3	
The description of the following items has been added: - Usage - Access Configurations of Shared Folder - Host Access Configurations of Shared Folder	6.6.3.1	
"Hosts Allowed Access with root privilege" has been added to the item that can change the setting.	6.6.4.3	
Information related to the encryption mode AES-256 has been added.	6.1.9	4.2
Information related to the quota settings has been modified or added.	6.6.1.1.2, 6.6.1.4.1, 6.6.3.1, 6.6.4.16 - 6.6.4.21	4.1
The explanation related to the NAS file system has been modified.	6.6.1.1.3	
Information related to the snapshots has been modified or added.	6.6.1.3, 6.6.4.10, 6.6.4.13, 6.6.4.14	
Point has been added to "Creating RAID Groups".	6.6.2.5	
Information related to the shared folders has been modified or added.	6.6.3.1, 6.6.4.2, 6.6.4.3	
Information related to the ETERNUS DX8700 S3/DX8900 S3 has been added.	11.1.2.8	
Information related to Microsoft Windows Server 2003 has been deleted.	"Notation" in Preface, 3.2, 5.2.1, 6.2.3.2, 11.3.1, C.1	
Information related to Windows 10 has been added.	"Notation" in Preface	
The description related to SNMP communication has been modified or added.	1.2.9, Chapter 2, 2.1, 3.1.1, 3.1.2, 3.3.1, 4.1.1 - 4.1.3, 4.2.1.1, 4.2.1.3, 4.2.3.1, 4.2.3.3, 4.3.1.1, 4.3.1.2, 4.8, 5.2.1 - 5.2.3, 5.2.6, 5.3, 6.1, 11.1.2.6, 11.1.2.10, 13.1.1.1 - 13.1.1.3, 13.2.5, 13.3.1.1, 13.3.3.1, A.5	
Information related to disk storage system management has been added.	3.4	
Information related to the SNMPv3 protocol has been modified or added.	4.2.1.1, 4.2.3.1, 7.2.3, 11.1.2.10, Appendix F	
Information related to the Thin Provisioning has been added.	6.1.3	
Information related to the Dashboard has been added.	6.1.3, 6.3, 6.4.1, 6.4.2, 6.4.2.1, 6.5.1.6, 6.5.2, 6.5.2.1, 6.5.6, 6.6.1.1.2, 11.1.1.2.1, 11.1.1.3.1, 11.1.1.3.3, A.8	

Content of Update	Updated Section	Revision
A note has been modified or added.	6.1.5, 13.1.2.3, 13.1.2.4	
A reference destination of the specifiable items has been added.	6.5.1.1, 6.5.1.2, 6.5.3.1	
"Access Status Chart Settings of One Layer Tier Pool" has been added.	6.5.1.6	
Information has been added.	6.5.5	
Figure "Backup/Restoration of NAS Volume" has been modified.	6.6.1.2.1	
The explanation related to the shared folder has been modified.	6.6.1.2.2, 6.6.3.1	
Information related to the NAS backup has been modified or added.	6.6.4.9, 6.6.4.23, 6.6.4.24	
The explanation of the monitoring interval has been modified.	7.2.3	
The explanation of the threshold setting information has been modified.	7.3.4	
The restoration procedure when the report creation command is abnormal has been added.	8.3.4.3, 13.5.2	
The explanation of the access path configuration has been modified.	9.4.2.1	
The explanation of the monitoring target device configuration has been modified.	9.5.2	
An unnecessary description has been deleted.	11.1.1.2.1, 11.1.1.2.3, 11.1.1.3.1, 11.1.1.3.3	
The explanation for changing the configuration of the support device has been modified.	11.1.2.8	
The location of the log file has been modified.	A.3	
Information related to the ETERNUS DX8700 S3/DX8900 S3 has been added.	"Notation" in Preface, 1.2.5, 3.1.1, 7.1.1, 7.2.3, 13.1.1.5, 13.1.1.6, 13.1.2.2, 13.1.2.7, Appendix A	
Information related to the NetApp FAS Series and V-Series has been added.	"Notation" in Preface, 1.2.9, 4.4, 5.2.6, 10.1, 12.1.4.2, 13.1.2.9, A.5	
The explanation of the Tier pool setting has been modified.	6.5.1	
The description of the upper limit of Tier pools that can be managed by Automated Storage Tiering has been added.	6.5.5	
Method to identify CM or CM CPU of the ETERNUS Disk storage system from performance information collected by Systemwalker Service Quality Coordinator has been described.	12.2	
The term "VMware Virtual Volumes" has been changed to "VMware vSphere Virtual Volumes" according to the terms used by VMware, Inc.	Throughout this manual	3.1
Information related to VMware vSphere 6 has been added.	"Notation" in Preface	
The explanation of "VMware Server Node" has been added.	4.1.7	
The method to deal with changed environment has been modified.	4.1.7.2	
The description of access paths that should be removed separately has been added.	5.2.3	
The description of devices targeted for encryption has been deleted.	6.1.2	
"Encryption Mode Management" has been added.	6.1.9	
"Virtual Machine Management" has been added.	6.1.10	
The explanation of VMware vSphere Virtual Volumes Environment Access Path has been modified.	6.2.1	

Content of Update	Updated Section	Revision
The explanation of a VVOL metadata stored volume has been added.	7.1, 7.2.2	
Note has been modified.	7.2.2	
Procedure for backup/restoring of Storage Cruiser's manager has been modified.	11.1.1.2.1, 11.1.1.2.3, 11.1.1.3.1, 11.1.1.3.3, 11.1.1.3.4	
Note has been added.	A.4	
Antivirus server has been added.	"Software Products" in Preface	3
Information related to the ETERNUS DX200F has been modified or added.	"Others" in Preface, 1.2.6 to 1.2.8, 3.1, 3.2, 4.3.1, 4.3.1.1, 4.3.1.2, 5.2.1, 5.2.2, 5.3, 6.1.5, 6.2.1, 6.2.3, 6.2.3.1, 6.6.1.5, 7.1.1, 7.2.3, 8.2, 11.1.2.9, 12.1.4.2, 12.1.4.3, 13.1.1.5, 13.1.1.6, 13.1.2, 13.1.2.2 to 13.1.2.4, 13.1.2.7, A.5	
Information related to the ETERNUS DX60 S3 has been added.	"Notation" in Preface, 1.2.5, 1.2.6, 3.1.1, 4.3.1.1, 4.3.1.2, 5.2.1, 5.2.2, 6.1.5, 6.2.3.1, 7.1.1, 7.2.3, 8.2, 13.1.1.5, 13.1.1.6, 13.1.2, 13.1.2.2 to 13.1.2.4, 13.1.2.7, A.5	
Information related to the ETERNUS LT260 has been added.	"Notation" in Preface, 1.2.9, 4.7.2, 12.1.4.2, A.5	
An explanation of VMware Virtual Volumes has been added.	1.1, 1.2.8, 4.1.7.1, 6.2.1, 11.1.1.3.3~11.1.1.3.4, 13.1.1.4, 13.1.1.9, 13.1.2.3	
Information related to Red Hat Enterprise Linux AS v.4 and Red Hat Enterprise Linux ES v.4 has been deleted.	3.2, 5.2.1	
Information related to Red Hat Enterprise Linux 7 has been added.	3.2, 13.3.3.1, A.10	
An explanation of the switch management has been added.	3.3, 4.2.1.1, 4.2.3.1, 4.2.5.1, 5.2.2, Appendix E	
The description related to the community setting in SNMP (Agent) environment settings has been modified.	4.3.1.1	
An operation has been added to resource management.	6.1.2, 6.1.3, 6.1.9, 13.1.2.2, 13.1.2.3, 13.1.2.4, 13.1.2.6	
Notes on the host group and the port group have been added.	6.2.1	
Start/stop of Tier pool balancing has been added.	6.5.1.4, 6.5.1.5	
Antivirus has been added to the NAS environment.	6.6.1.1.2, 6.6.1.5, 6.6.1.6, 6.6.2.4, 6.6.4.18, 6.6.4.19, 6.6.4.20, 6.6.4.24	
Performance management has been added to NAS volume and NAS system.	6.6.1.1.2, 6.6.4.21, 7.1.1, 7.2.6.6, 13.1.1.6	
"Copy Table Size Settings" has been added.	6.6.2.5	
The SMB encryption of the data access and the enumeration based on the access permission setting has been added.	6.6.3.1, 6.6.4.2	
"Access Using NFS Protocol" has been changed.	6.6.4.1	
Note on the "Deleting Shared Folder" has been added.	6.6.4.24	
Table in case of the ETERNUS Disk storage system has been adjusted.	7.1.1	

Content of Update	Updated Section	Revision
Attention regarding display of performance information has been changed.	7.1.1	
The description related to the method of selecting the scope of monitoring volumes has been added.	7.2.2, 7.2.9	
"Failover mode" has been added. Input conditions for TFO Group name have been described. The conditions for the REC Path interface type have been described.	9.2	
Operation of the Storage Cluster function has been added.	9.2, 9.4.1, 9.4.2.1, 9.4.2.2, 9.4.2.4, 9.4.2.6	
Description of the Storage Cluster function has been corrected.	9.4.1, 9.4.2.1, 9.4.2.6, 9.4.3	
Procedure for confirming settings when allocating the business volume has been corrected. Reference to access state data synchronizing has been added.	9.4.2.1	
The description related to backup/restoring of Storage Cruiser's manager has been modified.	11.1.1.2.1, 11.1.1.2.5, 11.1.1.3.1, 11.1.1.3.3	
The explanative article on the -ipaddr option of the " setagtip command " has been changed.	13.2.1	
The example of outputting VERSION verify information has been changed.	C.2, C.3	
Note has been added.	6.6	
The number of NAS volumes and NAS backup volumes creatable on one ETERNUS Disk storage system has been changed.	6.6.1.2.1	
Note has been added when data inconsistency is found in a snapshot.	6.6.1.3.1, 6.6.4.12	
Point has been added to "NAS Environment Quota Management".	6.6.1.4.1	
Point has been added to "Events Notified by Quota Management".	6.6.1.4.2	
Note has been added to "Registration of User/Group".	6.6.2.2	
Note when using quota management function and snapshot function has been added.	6.6.2.4, 6.6.3.1, 6.6.4.10, 6.6.4.15	
"NAS Volume Number to Which to Create Shared Folder" has been added. Method for specifying time to collect snapshots has been added.	6.6.3.1	
Suffix of volume name has been changed. The limit to the number of volume name characters has been deleted.	6.6.3.1, 6.6.4.9	
Mode number has been added. Point has been added to "Port Bonding". Note has been added to "NAS Interface (Network)". Note has been added to "VLAN ID".	6.6.3.2	
Point has been added to "Removing Authentication Server".	6.6.4.21	2
Storage Cluster function has been added.	1.1, 1.2, 1.3, 3.1.1, 4.1.2, Chapter 9, 10.2.2, 10.2.6, 12.2.4, A.1, A.6, A.12	
Description of Eco Mode has been modified.	1.2.5, 6.1.6, 7.1.1, 12.1.1.7, 12.1.2.2	
Port number used for Manager communication has been changed.	3.1.1	
SSH login has been added.	3.1.1, 4.2.1.1, 4.2.1.3, 4.2.3.3, 5.2.2, 6.2.6, 10.2.4	
Zoning setting example has been deleted.	4.2.1.2	

Content of Update	Updated Section	Revision
Zoning setting has been modified.	4.2.5.1	
Action (FAQ) has been added.	4.2.5.3	
Description of invalid password status of ETERNUS system has been deleted.	4.3.1.1, 13.1.1.4, 13.1.1.5, 13.1.1.7, 13.1.2	
Operating systems to be searched with IPv4 address alone have been specified.	5.2.1	
Notes when deleting devices have been added.	5.2.3	
Notes have been added.	6.1.2, 6.1.3, 6.1.5	
Considerations have been added.	6.2.3.1	
Capacity management of Tier pool has been added.	6.5, A.8	
Function has been added to the NAS management.	6.6	
"RAID6-FR" has been added to type of RAIDGroup.	8.4	
Target devices have been added to replacement of fibre channel switch devices.	10.2.4	
Backup/restore procedure of Manager for Windows/Solaris in a cluster environment has been changed.	11.1.1.2.2, 11.1.1.2.6, 11.1.1.3.2, 11.1.1.3.6	
Backup/restore of Windows Manager has been deleted.	11.1.1.2.5, 11.1.1.3.5	
Method to change port numbers of Management Server/Server node has been added.	11.1.2.5, 11.2.3.2, 11.3.3.2, 11.4.2.2, 11.5.2.2	
Error in command name has been corrected.	13.1.1.1	
Command output result has been added.	13.1.1.4	
Examples in Solaris/Linux environments have been changed.	13.1.1.6, 13.1.1.9	
Description when the -dir option is omitted in Solaris environment has been changed.	13.2.3	
Notes when collecting troubleshooting information in a cluster configuration system have been added.	B.1	
Information related to the ETERNUS DX200F has been added.	"Others" in Preface, 1.2.5, 6.6, 6.6.1.3, 7.1.1, 13.1.1.6, 13.1.2	1.3
Operating environment has been changed.	6.6.1.3	1.2
Notes when creating a NAS interface have been added.	6.6.3.2	1.1
Notes when setting up an authentication server have been added.	6.6.3.3	
The access method by CIFS protocol has been changed.	6.6.4	

Contents

Chapter 1 Overview.....	1
1.1 Support Levels.....	1
Chapter 2 Fault Monitoring.....	4
2.1 Receiving SNMP Traps.....	5
2.2 Analyzing SNMP Traps.....	6
2.3 Device Polling.....	6
2.4 Setting Event Levels.....	7
2.5 Monitoring Device Component Status.....	8
Chapter 3 Operation Design.....	10
3.1 LAN Connections.....	10
3.1.1 Network Requirements.....	10
3.1.2 SNMP Communication Authentication.....	11
3.2 Server Node Middleware for Which Management Is Possible.....	13
3.3 Switch Management.....	14
3.3.1 Support Level A and B for Switch Management.....	14
3.4 Disk Storage System Management.....	15
Chapter 4 Environment Configuration.....	16
4.1 Server Node.....	16
4.1.1 Solaris OS Server Node.....	16
4.1.1.1 SNIA HBA API Library Settings.....	16
4.1.1.2 N-port Settings.....	17
4.1.1.3 SNMP Trap Transmission Settings.....	17
4.1.2 Windows Server Node.....	17
4.1.2.1 SNIA HBA API Library Settings.....	17
4.1.2.2 N-port Settings.....	18
4.1.2.3 SNMP Trap Transmission Settings.....	18
4.1.3 Linux Server Node.....	19
4.1.3.1 SNIA HBA API Library Settings.....	19
4.1.3.2 Using udev Device.....	19
4.1.3.3 SNMP Trap Transmission Settings.....	20
4.1.4 HP-UX Server Node.....	20
4.1.5 Other Server Nodes (Supported OS or Solaris OS/Windows/Linux/HP-UX without Agent).....	20
4.1.6 VMware Server Node.....	21
4.1.6.1 Setting.....	21
4.2 Fibre Channel Switch.....	22
4.2.1 Brocade Fibre Channel Switch.....	22
4.2.1.1 Setting.....	23
4.2.1.2 Zoning.....	25
4.2.2 PRIMERGY Fibre Channel Switch Blade.....	26
4.2.3 VDX Series.....	26
4.2.3.1 Automatically Detectable Devices.....	26
4.2.3.1.1 Setting.....	28
4.2.3.1.2 Zoning.....	29
4.2.3.2 Configuration for Manually Detected Devices.....	30
4.2.4 PRIMERGY BX Ethernet Fabric Switch.....	31
4.3 Disk Storage Systems and All Flash Arrays.....	31
4.3.1 ETERNUS DX Series, ETERNUS AF All-Flash Arrays.....	31
4.3.1.1 Setting.....	31
4.4 ETERNUS AX/HX series, ETERNUS AB/HB series.....	34
4.5 NetApp FAS Series, FAS Series (with clustered Data ONTAP), and AFF series Network Disk Storage System.....	35
4.6 ETERNUS CS800 M1/CS800 S7 De-dupe Appliance.....	35
4.7 Tape Library Device.....	36
4.7.1 Tape Library Device ETERNUS LT20 S2/LT140/LT260/LT270 S2.....	36

4.7.2 Virtual Tape Appliance ETERNUS CS2000.....	36
Chapter 5 Startup and Setting.....	37
5.1 Opening and Closing.....	37
5.2 Registering Device.....	37
5.2.1 SNMP User Information Registration.....	37
5.2.2 Device Search.....	37
5.2.3 Registering Device.....	39
5.2.4 Deletion.....	40
5.2.5 Function for Setting Event Notification Destinations.....	41
5.2.6 SNMP Trap Transmission Place Automatic Setting Function.....	41
5.2.7 Registering Manually Embedded Device.....	43
5.3 Checking SNMP Trap Settings.....	43
Chapter 6 Operation.....	46
6.1 Resource Management.....	46
6.1.1 RAID Group Management.....	46
6.1.2 Volume Management.....	46
6.1.3 Thin Provisioning Management.....	47
6.1.4 Advanced Copy Management.....	50
6.1.5 Connectivity Management.....	50
6.1.6 How to Control Eco-mode.....	51
6.1.6.1 Concerns in Storage System Operation When Using Eco-mode.....	52
6.1.7 End to End List Display.....	53
6.1.8 Extreme Cache Management.....	56
6.1.9 Encryption Mode Management.....	56
6.1.10 Virtual Machine Management.....	57
6.1.11 Changing SNMP setting.....	57
6.2 Access Path Management.....	57
6.2.1 What Is Access Path?.....	57
6.2.2 Access Path Display (Display of Logical Relationship Between Server Node and Storage Systems).....	59
6.2.2.1 Access Path Status Display.....	59
6.2.3 Access Path Setting.....	62
6.2.3.1 Preparations.....	64
6.2.3.2 Setting.....	64
6.2.4 Deleting Access Path.....	66
6.2.4.1 Preparations.....	66
6.2.4.2 Setting.....	67
6.2.5 Access Path Inheritance.....	69
6.2.6 Managing Fibre Channel Switch That Has Already Set in Port Zoning.....	69
6.3 Event Display and Linkage.....	69
6.4 Thin Provisioning Management.....	72
6.4.1 Threshold Monitoring.....	73
6.4.2 Capacity Management.....	74
6.4.2.1 Graph Type in Capacity Management.....	74
6.5 Automated Storage Tiering Management.....	75
6.5.1 Configure One Layer Tier Pool.....	76
6.5.1.1 Create One Layer Tier Pool.....	77
6.5.1.2 Change One Layer Tier Pool.....	77
6.5.1.3 Delete One Layer Tier Pool.....	77
6.5.1.4 Expand Sub-Pool Capacity in One Layer Tier Pool.....	78
6.5.1.5 Balancing of One Layer Tier Pool.....	78
6.5.1.6 Access Status Chart Settings of One Layer Tier Pool.....	80
6.5.1.7 Deletion of RAID Groups in One Layer Tier Pool.....	81
6.5.2 Capacity Management of One Layer Tier Pool.....	81
6.5.2.1 Graph Type in Capacity Management.....	81
6.5.3 Configure FTV.....	81

6.5.3.1 Create FTV.....	82
6.5.3.2 Change FTV.....	82
6.5.3.3 Format FTV.....	82
6.5.3.4 Delete FTV.....	82
6.5.4 Measures to Be Taken When Tier Pool Configuration Has Been Changed with Managed Devices.....	83
6.5.5 Change to Multiple Layer Tier Pool.....	83
6.5.6 Checking Access Status Chart of One Layer Tier Pool.....	83
6.6 NAS Management.....	85
6.6.1 Overview of Functions.....	85
6.6.1.1 About NAS Management.....	85
6.6.1.1.1 Basic System Configuration.....	85
6.6.1.1.2 Support Features.....	85
6.6.1.1.3 Configuration Items of NAS File System.....	86
6.6.1.2 Backup of NAS Environment.....	89
6.6.1.2.1 Backup/Restoration of NAS Volume.....	89
6.6.1.2.2 Mounting/Unmounting NAS Backup Volume.....	90
6.6.1.3 NAS Environment Snapshot.....	91
6.6.1.3.1 NAS Snapshot.....	91
6.6.1.3.2 Automatic Snapshot Collection Stop/Start.....	93
6.6.1.4 About NAS Environment Quota Management.....	94
6.6.1.4.1 NAS Environment Quota Management.....	94
6.6.1.4.2 Events Notified by Quota Management.....	96
6.6.1.5 Operating Environment.....	96
6.6.2 Required Setup Configuration.....	96
6.6.2.1 ETERNUS Disk Storage System Configuration.....	97
6.6.2.2 Authentication Server Setup.....	97
6.6.2.3 Prior Configuration of DNS Server.....	98
6.6.2.4 Prior Configuration of Management Server.....	98
6.6.3 Installation Steps.....	101
6.6.3.1 Creating Shared Folder.....	101
6.6.3.2 Creating NAS Interface.....	108
6.6.3.3 NAS File System Environment Settings.....	111
6.6.4 Operation Method.....	112
6.6.4.1 Access to Shared Folder.....	113
6.6.4.2 Changing Basic Setting for Shared Folder.....	114
6.6.4.3 Changing Access Setting for Shared Folder.....	114
6.6.4.4 Changing NAS Interface.....	115
6.6.4.5 Changing NAS Server Name.....	116
6.6.4.6 Changing DNS Server.....	116
6.6.4.7 Changing Authentication Server.....	116
6.6.4.8 Activating Sharing.....	117
6.6.4.9 Stopping Sharing.....	117
6.6.4.10 Configuring NAS Backup.....	117
6.6.4.11 Setting/Changing/Disabling NAS Snapshot.....	118
6.6.4.12 Snapshot Reference.....	119
6.6.4.13 Restoring from Snapshot.....	119
6.6.4.14 Start Automatic Snapshot Collection.....	120
6.6.4.15 Stop Automatic Snapshot Collection.....	120
6.6.4.16 Adding Quota Settings (User/Group).....	120
6.6.4.17 Changing Quota Settings (User/Group).....	121
6.6.4.18 Deleting Quota Settings (User/Group).....	121
6.6.4.19 Adding Quota Settings (Shared Folder).....	121
6.6.4.20 Changing Quota Settings (Shared Folder).....	121
6.6.4.21 Deleting Quota Settings (Shared Folder).....	122
6.6.4.22 Performance Management for NAS Volume and NAS System.....	122
6.6.4.23 Capacity Management of Thin Provisioning Pool.....	122
6.6.4.24 Expansion of NAS File System.....	122

6.6.4.25 Deleting of NAS Environment.....	124
Chapter 7 Performance Management.....	127
7.1 Overview.....	127
7.1.1 Performance Information Types.....	127
7.1.2 Performance Graph Window Types.....	130
7.1.3 Threshold Monitoring Types.....	130
7.2 Flow of Performance Management.....	132
7.2.1 Checking Disk Space on Management Server.....	132
7.2.2 Instruction for Performance Management.....	132
7.2.3 Setting Monitoring Intervals.....	133
7.2.4 Displaying Performance Information of Selected Device.....	135
7.2.5 Displaying Fibre Channel Switch Performance Information.....	136
7.2.6 Displaying Storage Performance Information.....	136
7.2.6.1 Displaying Logical Volume and RAID Group Performance Information.....	136
7.2.6.2 Displaying Disk (Physical Drive) Performance Information.....	136
7.2.6.3 Displaying CM Performance Information.....	136
7.2.6.4 Displaying CA and CM Port Performance Information.....	136
7.2.6.5 Displaying Number of Active Disks, Power Consumption, and Temperature Performance Information.....	136
7.2.6.6 Displaying Performance Information of NAS Volume and NAS System.....	136
7.2.6.7 Displaying Performance Information of Compression Volume or Deduplication/Compression Volume.....	137
7.2.7 Examples of Use of Performance Management.....	137
7.2.8 Instruction for Stopping Performance Management.....	137
7.2.9 Updating Configuration Information.....	137
7.2.10 Performance Data.....	139
7.3 Flow of Threshold Monitoring.....	139
7.3.1 Checking Disk Space on Management Server.....	139
7.3.2 Instruction for Threshold Management.....	140
7.3.3 Setting Threshold Monitoring Hours.....	140
7.3.4 Setting Threshold Monitoring Information.....	140
7.3.5 Instruction for Stopping Threshold Monitoring.....	142
7.3.6 Changing the Event Message Display Setting of the Threshold Monitoring Alarm.....	142
7.4 Evaluation Criteria for Thresholds in Threshold Monitoring.....	142
7.5 Definition File.....	143
7.6 Examples of Threshold Monitoring.....	143
Chapter 8 Reporting Function.....	148
8.1 Required Operation for Charging.....	148
8.1.1 Set Policy.....	149
8.1.2 Collect Report Information.....	149
8.1.3 Create Report.....	150
8.2 Supported Device.....	152
8.3 Operation.....	152
8.3.1 Design.....	153
8.3.1.1 Define Charging Method.....	153
8.3.1.2 Concept of Volume Allocation Period.....	154
8.3.1.3 Define Report Information Retention Period.....	156
8.3.2 Setup.....	157
8.3.2.1 Obtain and Setup License.....	157
8.3.2.2 Setup Policy.....	157
8.3.2.3 Setup Periodic Command Execution.....	157
8.3.2.4 Create Accounting Application.....	158
8.3.3 Operation.....	159
8.3.3.1 Create Invoice.....	159
8.3.4 Maintain.....	159
8.3.4.1 Backup/Restore of Report Related Files.....	159
8.3.4.2 Error When Running Report Information Collection Command.....	160

8.3.4.3 Error When Running Report Creation Command.....	160
8.4 Configuration of Report File.....	160
Chapter 9 Storage Cluster Function.....	167
9.1 Overview.....	167
9.1.1 System Structure.....	167
9.1.2 Unit of Failovers.....	169
9.1.3 TFO Group Operation Configuration.....	170
9.1.4 Access Control According to the Preferred Path.....	172
9.1.5 Failover Target Volume.....	173
9.1.6 Pairing of CA Ports.....	174
9.1.7 Control of Link Status of CA Ports.....	176
9.1.8 Failover and Failback Methods.....	178
9.1.9 Confirming the Existence Using the Storage Cluster Controller and the Failover Execution Trigger.....	184
9.2 Work Flow.....	185
9.2.1 Work Flow in Active-Active Configuration.....	185
9.2.2 Work Flow in Active-Standby Configuration.....	188
9.3 Operation Method in Active-Active Configuration.....	192
9.3.1 Installation.....	193
9.3.2 Operation.....	197
9.3.2.1 Allocating Business Volume.....	197
9.3.2.1.1 Preparing Business Volume.....	198
9.3.2.1.2 Configuring Access Path (when performing the procedure from a new volume creation with the Primary/Secondary Storage).....	201
9.3.2.1.3 Configuring Access Path (when allocating volumes to each Storage or when adding the Secondary Storage where only the Primary Storage is used).....	205
9.3.2.1.4 Confirming Configuration.....	207
9.3.2.2 Setting/Changing the Preferred Path.....	208
9.3.2.3 Updating TFO Group Status.....	209
9.3.2.4 Adding and Deleting Business Volume.....	210
9.3.2.5 Expanding Business Volume Capacity.....	214
9.3.2.6 Changing Total Capacity of TFOVs.....	216
9.3.2.7 Manual Failover/Failback.....	216
9.3.2.8 Force-Failover.....	217
9.3.2.9 Failover/Failback Limited to the Maintenance State.....	217
9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen.....	218
9.3.2.11 Confirming the Status on the TFO Group Details Screen.....	220
9.3.2.11.1 TFO Group Information.....	220
9.3.2.11.2 Session Information of TFO Pairs.....	221
9.4 Operation Method in Active-Standby Configuration.....	222
9.4.1 Installation.....	222
9.4.2 Operation.....	229
9.4.2.1 Allocating Business Volume.....	229
9.4.2.1.1 Preparing Business Volume.....	230
9.4.2.1.2 Configuring Access Path (when performing the procedure from a new volume creation with the Primary/Secondary Storage).....	233
9.4.2.1.3 Configuring Access Path (when allocating volumes to each storage or when adding the Secondary Storage where only the Primary Storage is used).....	236
9.4.2.1.4 Confirming Configuration.....	238
9.4.2.1.5 Recognition of iSCSI IP Address to Business Server due to Manual Failover and Manual Failback.....	240
9.4.2.2 Updating TFO Group Status.....	240
9.4.2.3 Adding and Deleting Business Volume.....	241
9.4.2.4 Expanding Business Volume Capacity.....	245
9.4.2.5 Changing Total Capacity of TFOVs.....	248
9.4.2.6 Manual Failover/Failback.....	248
9.4.2.7 Force-Failover.....	250
9.4.2.8 Failover/Failback Limited to the Maintenance State.....	250

9.4.2.9	Confirming the Status on the Storage Cluster Overview Screen.....	251
9.4.2.10	Confirming the Status on the TFO Group Details Screen.....	253
9.4.2.10.1	TFO Group Information.....	253
9.4.2.10.2	Session Information of TFO Pairs.....	254
9.5	Maintenance.....	255
9.5.1	ETERNUS Disk Storage System Fault.....	257
9.5.2	RAID Failure.....	259
9.5.3	RAID Close.....	262
9.5.4	CA Port Linkdown.....	265
9.5.5	Bad Sectors.....	266
9.5.6	When the Session Status of the TFO Pair is Error Suspend.....	269
9.5.7	Single-system Operation.....	272
9.5.8	Releasing TFO Pair.....	273
9.5.9	Recovering TFO Pair.....	274
9.5.10	Changing the TFO Group Settings.....	274
9.5.11	Changing iSCSI IP Address.....	276
9.5.12	Temporarily Deleting the Storage Cluster Environment for Recovery.....	277
9.5.13	Deleting the Storage Cluster Environment When the Storage Cluster Operation Is Completed.....	278
9.6	Storage Cluster Controller.....	280
9.6.1	Provided Function.....	280
9.6.2	Installation Steps.....	280
9.6.3	Operation Procedure.....	280
9.6.3.1	Add and Delete Monitored Device.....	281
9.6.3.2	Change IP Address of Monitored Device.....	281
Chapter 10	Maintenance of Devices to Be Managed.....	283
10.1	Windows Displayed in Event of Fault and Troubleshooting.....	283
10.2	Replacing Supported Device.....	286
10.2.1	Replacing Server Node.....	286
10.2.2	Replacing ETERNUS Disk Storage System.....	287
10.2.3	Replacing Fibre Channel Switch.....	288
10.2.4	Replacing Manually Embedded Device.....	290
10.2.5	Replacing Storage Cluster Controller.....	292
10.3	Replacing Supported Device Components.....	292
10.3.1	Replacing Server Node Components.....	292
10.3.1.1	Host Bus Adapter (HBA) Replacement of Server Node.....	293
10.3.1.1.1	[For Solaris OS Server Node] Host Bus Adapter (HBA) Replacement.....	294
10.3.1.1.2	[For Operating Systems Other than Solaris OS] Host Bus Adapter (HBA) Replacement.....	295
10.3.1.2	Access Path Inheritance after HBA Replacement.....	295
10.3.1.2.1	Post-replaced HBA State Is "Changed".....	296
10.3.1.2.2	Post-replaced HBA State Is "Unknown".....	296
10.3.2	Replacing Faulty Components of ETERNUS Disk Storage Systems.....	297
10.3.3	Replacing Faulty Components of Manually Embedded Device.....	297
10.4	Adding Supported Device Components.....	300
10.4.1	Adding ETERNUS LT270 S2 Extended Cabinet.....	300
Chapter 11	Maintenance of Administrative Environment.....	302
11.1	Maintenance of Manager.....	302
11.1.1	Maintenance of Manager.....	302
11.1.1.1	Collecting Data for Troubleshooting.....	302
11.1.1.2	Backup of Manager.....	302
11.1.1.2.1	Backup of Solaris OS/Linux Manager.....	302
11.1.1.2.2	Backup of Solaris OS/Linux Manager (Cluster Environment).....	306
11.1.1.2.3	Backup of Windows Manager.....	306
11.1.1.2.4	Backup of Windows Manager (Cluster Environment).....	311
11.1.1.3	Restoring Manager.....	312
11.1.1.3.1	Restoring Solaris OS/Linux Manager.....	312

11.1.1.3.2 Restoring Solaris OS/Linux Manager (Cluster Environment).....	317
11.1.1.3.3 Restoring Windows Manager.....	318
11.1.1.3.4 Restoring Windows Manager (Cluster Environment).....	323
11.1.2 Changing Operating Environment.....	324
11.1.2.1 Changing IP Address of Management Server.....	324
11.1.2.2 Changing IP Address of Server Node.....	324
11.1.2.3 Changing Server Name of Management Server.....	325
11.1.2.4 Changing Name of Server Node.....	325
11.1.2.5 Changing Port Numbers of Management Server.....	325
11.1.2.6 Changing IP Address, SNMP Setting or Engine ID of Supported Device.....	326
11.1.2.7 Changing Operation Management of Clustered System (Node Name Takeover).....	327
11.1.2.8 Changing Configuration of Supported Devices.....	327
11.1.2.9 Changing Password of Supported Devices.....	328
11.1.2.10 Changing SNMP Communication Protocol of Management Server.....	328
11.1.2.11 SSL Version Settings for Communicating with Supported Devices.....	329
11.1.2.12 Changing the VMware Server Node.....	329
11.2 [Solaris OS Version] Maintenance of Agent.....	330
11.2.1 Action to Take for Troubleshooting.....	330
11.2.2 Collecting Data for Troubleshooting.....	330
11.2.3 Changing Administrative Environment.....	330
11.2.3.1 Changing IP Address of Server Node.....	330
11.2.3.2 Changing Port Numbers of Server Node.....	330
11.2.3.3 SSL Version Settings for Communicating with Supported Devices.....	331
11.3 [Windows Version] Maintenance of Agent.....	331
11.3.1 Action to Take for Troubleshooting.....	331
11.3.2 Collecting Data for Troubleshooting.....	331
11.3.3 Changing Administrative Environment.....	331
11.3.3.1 Changing IP Address of Server Node.....	331
11.3.3.2 Changing Port Numbers of Server Node.....	332
11.3.3.3 SSL Version Settings for Communicating with Supported Devices.....	332
11.4 [Linux Version] Maintenance of Agent.....	332
11.4.1 Collecting Data for Troubleshooting.....	332
11.4.2 Changing Administrative Environment.....	332
11.4.2.1 Changing IP Address of Server Node.....	332
11.4.2.2 Changing Port Numbers of Server Node.....	332
11.4.2.3 SSL Version Settings for Communicating with Supported Devices.....	332
11.5 [HP-UX Version] Maintenance of Agent.....	332
11.5.1 Collecting data for troubleshooting.....	332
11.5.2 Changing Administrative Environment.....	332
11.5.2.1 Changing IP Address of Server Node.....	332
11.5.2.2 Changing Port Numbers of Server Node.....	332
Chapter 12 Linkage to Other Software.....	333
12.1 Linkage with Systemwalker Centric Manager.....	333
12.1.1 Linkage Function with Systemwalker Centric Manager.....	333
12.1.2 Required Versions.....	334
12.1.3 Preparations.....	334
12.1.4 Setup Procedure.....	334
12.1.4.1 Setup on Systemwalker Centric Manager Administrative Client.....	334
12.1.4.2 Action to Be Taken If Systemwalker Centric Manager Administrative Server and This Software Management Server Are Same Server.....	336
12.1.4.3 Setting Confirmation Test.....	339
12.2 Linkage with Systemwalker Service Quality Coordinator.....	340
12.3 Linkage with Other Administrative Software.....	343
Chapter 13 Command References.....	344
13.1 Manager Commands.....	344

13.1.1 Commands for Operating Environment Management.....	344
13.1.1.1 sanadmsh chtraprcvip (SNMP Trap Transmission Place IP Address Change Command).....	344
13.1.1.2 swtrapstest (SNMP Trap Test for Fibre Channel Switch).....	346
13.1.1.3 grtrapstest (SNMP Trap Test for ETERNUS Disk Storage System).....	347
13.1.1.4 storageadm zone (Host Affinity and Zoning Operation Command).....	347
13.1.1.5 storageadm iscsizone (Host Affinity Operation Command).....	353
13.1.1.6 storageadm perfdata (Performance Information Operation Command).....	359
13.1.1.7 storageadm spindle (Disk Control command).....	368
13.1.1.8 storageadm remcs (REMCS Notification Command).....	373
13.1.1.9 esfsnap (Troubleshooting Information Collection of Manager).....	374
13.1.1.10 esfadm esfdata (Configuration Information Operation Command).....	375
13.1.2 Commands for Storage Management.....	377
13.1.2.1 storageadm disk (Disk Management Command).....	377
13.1.2.2 storageadm raid (RAID Management Command).....	379
13.1.2.3 storageadm volume (Volume Management Command).....	385
13.1.2.4 storageadm affinity (AffinityGroup Management Command).....	389
13.1.2.5 storageadm ecomode (Eco-mode Management Command).....	394
13.1.2.6 storageadm port (Port Management Command).....	395
13.1.2.7 storageadm iscsiport (iSCSI Port Management Command).....	397
13.1.2.8 storageadm progress (Progress Display Command).....	403
13.1.2.9 storageadm perfctl (Performance Monitoring Command).....	405
13.1.2.10 storageadm device (Device Management Command).....	407
13.2 Agent Commands.....	408
13.2.1 setagtip (Agent Information Change Command).....	408
13.2.2 trapstest (SNMP Trap Test for Server Node Agent).....	409
13.2.3 agentsnap (Troubleshooting Information Collection of Agent).....	410
13.2.4 agtpatrol (Monitored Status Display Command).....	411
13.2.5 setagtsnmp (SNMP Settings Command of Agent).....	413
13.3 Starting and Stopping Manager.....	415
13.3.1 Starting and Stopping Services (Windows Environment).....	415
13.3.1.1 Starting and Stopping the SNMP Trap Monitoring Service.....	415
13.3.1.2 Starting and Stopping the ETERNUS SF Manager Services.....	417
13.3.2 Starting and Stopping Daemons (Solaris Environment).....	418
13.3.2.1 Starting and Stopping the SNMP Trap Monitoring Daemon.....	418
13.3.2.2 Starting and Stopping the ETERNUS SF Manager Daemons.....	418
13.3.3 Starting and Stopping Daemons (Linux Environment).....	419
13.3.3.1 Starting and Stopping the SNMP Trap Monitoring Daemon.....	419
13.3.3.2 Starting and Stopping the ETERNUS SF Manager Daemons.....	420
13.4 Starting and Stopping Agent.....	421
13.4.1 Starting and Stopping Services (Windows Environment).....	421
13.4.2 Starting and Stopping Daemons (Solaris, Linux, or HP-UX Environment).....	422
13.5 Commands for Reporting Function.....	422
13.5.1 esfadm report collect (Report Information Collection Command).....	422
13.5.2 esfadm report create (Report Creation Command).....	424
Appendix A Customization.....	427
A.1 Overview.....	427
A.2 sanma.conf Parameter.....	427
A.3 ssmgr.conf Parameter.....	428
A.4 perf.conf Parameter.....	430
A.5 SNMP Trap XML Definition File.....	432
A.6 Correlation.ini Parameter.....	439
A.7 Device Polling Setting File.....	440
A.8 Polling Service Setting File.....	444
A.9 Explanation of Configuration Settings File.....	447
A.10 snmptrapd.conf Configuration File.....	449
A.11 policy.conf Parameter.....	451

A.12 TFOConfig.ini Parameter.....	451
Appendix B Troubleshooting.....	453
B.1 Collecting Troubleshooting Information.....	453
B.2 Information for Initial Investigation.....	453
B.2.1 Collecting Information from Management Server (Solaris OS).....	454
B.2.2 Collecting Information from Management Server (Linux).....	454
B.2.3 Collecting Information from Management Server (Windows).....	454
B.2.4 Collecting Information on Managed Server Node (Solaris OS).....	455
B.2.5 Collecting Information on Managed Server Node (Windows).....	455
B.2.6 Collecting Information on Managed Server Node (Linux).....	455
B.2.7 Collecting Information on Managed Server Node (HP-UX).....	455
B.3 Information for Further Investigation.....	456
B.3.1 Collecting Information from Management Server (Solaris OS).....	456
B.3.2 Collecting Information from Management Server (Linux).....	456
B.3.3 Collecting Information from Management Server (Windows).....	457
B.3.4 Collecting Information on Managed Server Node (Solaris OS).....	457
B.3.5 Collecting Information on Managed Server Node (Windows).....	457
B.3.6 Collecting Information on Managed Server Node (Linux).....	458
B.3.7 Collecting Information on Managed Server Node (HP-UX).....	458
B.4 Troubleshooting Errors That Occur in Devices.....	458
B.4.1 Troubleshooting Errors That Occur in Server Nodes.....	458
B.4.1.1 Common to Server Nodes.....	458
B.4.1.2 VMware Server Node.....	458
B.4.2 Troubleshooting Errors That Occur in Fibre Channel Switches.....	459
B.4.2.1 Brocade Fibre Channel Switch.....	459
B.4.2.2 VDX series.....	460
B.4.3 Troubleshooting Errors That Occur in ETERNUS DX series or ETERNUS AF All-Flash Arrays.....	460
B.4.4 Workaround When the ETERNUS SF Manager Tomcat Daemon Stops (Non-Clustered Environments and Solaris Environments Only).....	461
Appendix C How to Check Product Version.....	463
C.1 Checking Product Version in Windows Operating System.....	463
C.2 Checking Product Version in Solaris OS.....	463
C.3 Checking Product Version in Linux.....	464
C.4 Checking Product Version in HP-UX.....	464
Appendix D Operations Other Than Operations on Switches within System Managed on Storage Cruiser.....	465

Chapter 1 Overview

This software stands behind the stable operation of a multi-vendor storage system environment such as a SAN, a DAS, and a NAS using the configuration that provide integrated management of storage-related resources and functions of connection, fault and performance management, and reporting function.

Refer to the *Overview* for information on the overview of functions provided by this product.

1.1 Support Levels

The scope of the storage management functions of this software that can be used varies with the storage device model being used. For this software, the scope of available functions is represented as support levels, which are used as settings of the fault monitoring function and for other purposes. The table below lists the support levels that can be selected.

Table 1.1 Support Levels

Support Level	Typical Device Name	Device Detection	Fault Management			Management Window Linkage	Performance Management
			SNMP Trap Monitoring (*1)	Device Polling Monitoring (*1)	Acquisition of Device Status		
A	ETERNUS DX S6/S5/S4 series ETERNUS DX S3 series (V10L60 or later firmware) ETERNUS AF All-Flash Arrays	Automatic (*2)	Y1	Y1	Y1 (*9)	Y1	Y1 (*5)
	ETERNUS DX S2 series Brocade series VDX series (except VDX 6740/VDX 6740T) (*4, *7, *8) PRIMERGY BX Ethernet Fabric Switch (*4, *7)	Automatic (*2)	Y1	Y1	Y1 (*10)	Y1	Y1 (*5)
B	Windows, Linux, Solaris OS, or HP-UX server node on which the Storage Cruiser's agent is already installed	Automatic (*2)	Y1	Y1	Y1 (*10)	-	-
C	VMware vSphere	Automatic (*2)	-	Y1	Y1 (*10)	-	-
D	NetApp FAS Series	Manual	Y1 (*4)	Y1	-	Manual setting	Y1 (*6 For data collection only)
E	VDX 6740, VDX 6740T, VDX series (4.0 or later firmware) ETERNUS AX/HX series (*11) ETERNUS AB/HB series NetApp FAS Series (with clustered Data ONTAP) (*11)	Manual	Y1 (*4)	Y1	-	Manual setting	-

Support Level	Typical Device Name	Device Detection	Fault Management			Management Window Linkage	Performance Management
			SNMP Trap Monitoring (*1)	Device Polling Monitoring (*1)	Acquisition of Device Status		
	NetApp AFF series (*11) ETERNUS LT series						
	ETERNUS CS800 M1/CS800 S7 ETERNUS CS2000	Manual	Y1 (*4)	Y1	-	-	-
I	Server node on which the Storage Cruiser's agent is not installed	Manual	-	- (*3)	-	Manual setting	-

Y1: Detail information on device internal elements can be displayed.

*1: The protocols used with SNMP Trap monitoring and device polling are as follows.

Typical Device Name	Protocol Name	
	SNMP Trap Monitoring	Device Polling Monitoring
ETERNUS DX series (excluding the ETERNUS DX60 S2) ETERNUS AF All-Flash Arrays Brocade series VDX series (excluding 4.0 or later firmware) PRIMERGY BX Ethernet Fabric Switch	SNMP(SNMPv1 or SNMPv3)	
ETERNUS DX60 S2 VDX series (4.0 or later firmware) NetApp FAS Series	SNMP(SNMPv1)	
ETERNUS AB/HB series	SNMP(SNMPv2c)	ping
Server node on which Storage Cruiser's agent is already installed	SNMP(SNMPv1 or SNMPv3)	unique protocol
VMware vSphere	-	VMware dedicated protocol
Other	SNMP(SNMPv1)	ping

*2: The "Detect device in subnet" function is not supported by the devices below. Specify and register the IP addresses.

- Solaris OS, Windows, Linux, or HP-UX server node on which Storage Cruiser's agent is already installed
- VMware server node
- The following switches may not be able to be detected in subnet depending on the firmware version, etc.
Brocade series, VDX series, PRIMERGY BX Ethernet Fabric Switch

*3: For devices supporting LAN, ping monitoring is enabled by specifying an IP address at manual embedding.

*4: SNMP Trap transmission must be set for each device. (This software does not automatically make said setting.)

*5: There are concerns in performance information. Refer to [Note] in "[7.1.1 Performance Information Types](#)".

*6: For NetApp FAS Series only. To refer to the performance information that is collected on the NetApp FAS Series, must be linkage with Systemwalker Service Quality Coordinator. Contact Fujitsu Technical Support for details on performance information.

*7: Only as for devices whose firmware version number is 3.0.1 or later, the performance management function is supported.

*8: The automatic registration function is not supported for devices whose firmware version number is 4.0 or later. Revise the firmware version or register manually.

*9: It takes a maximum of one minute to acquire the device information.

*10: This product acquires the device status automatically, but does not acquire the device component status automatically.

*11: If a new SNMP Trap definition is added to the device and that SNMP Trap must be monitored, customize the contents of the SNMP Trap XML definition file to handle the added SNMP Trap. Refer to "[A.5 SNMP Trap XML Definition File](#)" for information on how to customize the SNMP Trap XML definition file.

Chapter 2 Fault Monitoring

This chapter describes how this software monitors for faults in devices consisting of a storage system and explains the fault information displayed and actions to be taken if an error occurs.

See

Refer to "Fault Management" in "Function Overview of Storage Cruiser" of the Overview for information on the fault monitoring.


Refer to the *Event Guide* for details on events.

Refer to "1.1 Support Levels" for details on the support levels mentioned in this chapter.

The protocols that can be used for fault monitoring differ depending on the device. Refer to "1.1 Support Levels" for protocols that can be used.

This software performs the fault monitoring operation as explained below by processing events that are asynchronously reported by monitoring information from Agent and an SNMP Trap from each device. The SNMP Trap must be correctly set in the device that supports that SNMP Trap.

The Manager's event processing function is a resident function that is always when Manager is started (when the Management Server is started up). Therefore, Web Console does not need to be started when a fault is only reported by Systemwalker Centric Manager linkage or Shell/bat linkage.

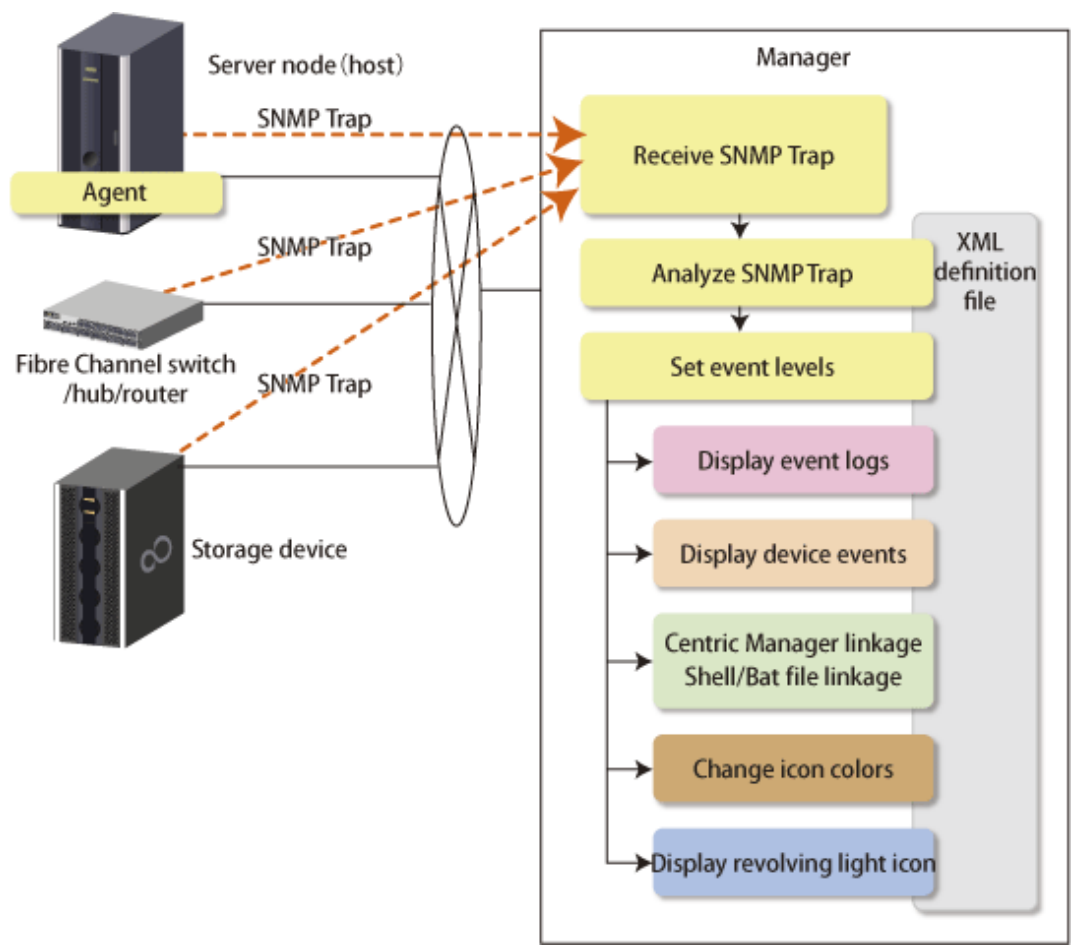

Manager processes event monitoring information from Agent in the same manner as for an SNMP Trap.

2.1 Receiving SNMP Traps

First, set up an environment in which devices can send SNMP Traps.

Server Node

SNMP Trap transmission place addresses are automatically set for the server node agent when this software registers devices.

If Manager operates across multiple networks, however, this software may not be able to set correct settings for the server node agent. In this event, check whether SNMP Trap transmission place addresses are correctly set for the server node agent. The files indicated below for the server nodes specify the SNMP Trap transmission place addresses of the server node agent. Check the addresses, and edit any address that must be corrected. To operate according to the contents of the file the restart of Agent is needed.

Server Node OS	Place of File
Windows	\$TMP_DIR\ES\Agent\var\snm.ip (\$TMP_DIR means "Work Directory" specified at the Agent installation.)
Solaris OS, Linux, HP-UX	/var/opt/FJSSvssage/snm.ip

Note

The SNMP Trap fault monitoring function is not supported for VMware vSphere.

Support Levels A and B

When using SNMPv1, the SNMP Trap destination address is automatically set on each managed device when registering the device with this product.

However, if Manager operates across multiple networks, this software may not be able to set the correct setting for each device to be managed. In this case, check whether SNMP Trap transmission target addresses are correctly set for the managed devices.

In addition, if SNMP Trap transmission place addresses are automatically set, the SNMP Trap transmission send destination community name is fixed to "public".

When using SNMPv3, set the Management Server IP address manually to the SNMP Trap destination address for the device. Refer to the device manual for details.

Support Level E

Set the Management Server IP address manually to the SNMP Trap destination address for the device. Refer to the device manual for details.

Support Level I

The fault management for server nodes on which the Storage Cruiser's agent is not installed is not supported.

Note

- Check whether the SNMP Trap monitoring service is running. If not, start it. For details about checking and starting the service, refer to the following sections:
 - For Windows environments
["13.3.1.1 Starting and Stopping the SNMP Trap Monitoring Service"](#)
 - For Solaris environments
["13.3.2.1 Starting and Stopping the SNMP Trap Monitoring Daemon"](#)

- For Linux environments
"13.3.3.1 Starting and Stopping the SNMP Trap Monitoring Daemon"
- The reception of SNMP Traps of SNMPv3 Inform is not supported. For this reason, when using SNMPv3, do not enable Inform.

2.2 Analyzing SNMP Traps

The Management Server processes SNMP Traps according to the support levels of the mechanism for devices, as described below.

- Server node agent
SNMP Traps are decoded.
- Support levels A, B, and E
SNMP Traps are decoded. Incidentally, the only SNMP Traps decoded are those for which event display and linkage are required.

Information

Methods of decoding SNMP Traps can be customized. Refer to "[A.5 SNMP Trap XML Definition File](#)" for details.

Note

For devices that support automatic updates of the device component status, this product acquires the device status and the device component status automatically from the device. For this reason, the device information is displayed automatically. For devices that support automatic updates of the device component status, refer to "[2.5 Monitoring Device Component Status](#)".

For devices that do not support automatic updates of the device component status, this product acquires the device status automatically from the device, but does not acquire the device component status automatically. For this reason, when an Error or Warning level event is reported or when the status of the storage system is recovered, update the status of the corresponding storage system element manually.

The device status of the device in which a trouble is occurred is updated automatically.

Refer to "Reload ETERNUS Disk Storage System Configuration Information" in the *Web Console Guide* for details on the operation procedures.

2.3 Device Polling

The Manager checks the statuses of registered devices by using SNMP, ping or unique protocol at intervals of 60 seconds (default). It is as follows which polling method.

Polling Method	Protocol	Devices
Device status	SNMP	ETERNUS Disk storage system NetApp FAS Series
Communication status	SNMP	PRIMERGY Fibre Channel switch blade Brocade Fibre Channel switch VDX series PRIMERGY BX Ethernet Fabric Switch
	unique protocol	server nodes for which Agent is installed
	private protocol	VMware vSphere

Polling Method	Protocol	Devices
	ping	Devices supporting automatic detection, other than the above devices. Manually embedded devices for which IP addresses are set.

- Device status polling method

For devices using SNMP, the system obtains status information using the respective vendor's private MIB. If the status has been changed compared with that stored by Manager, an event is displayed depends on the change.

- Communication status polling method

Changes in device status cannot be detected. However, if an abnormality occurs in the device or in a network between the device and the Manager and there is no response to a communication (non-communicating state), then an event is displayed and the icon color changes to gray. The next time there is a response to polling, the previous state (the one before the non-communicating state) is restored.

For VMware vSphere, this software uses a private protocol of VMware. The communication status polling method does not detect changes in the device status, but does detect the non-communicating status. The polling is performed only for VM hosts; VM guests are not polled. When the non-communicating state is detected for a VM host, this software judges that the VM host and all the VM guests included in it are in the non-communicating state.

With either SNMP or ping, Systemwalker Centric Manager linkage and Shell/bat linkage are enabled by default. The swsag code reported to Centric Manager is 4822. The linkage behavior can be modified. For information see "[A.7 Device Polling Setting File](#)".

Users can customize polling intervals, the time at which operation stops, the specification of devices to be excluded from polling operation, and other device polling functions. For details, see "[A.7 Device Polling Setting File](#)".

 Note

- When the device polling detects a change in network or device status, any event of "Device Polling Event" in the *Event Guide* is displayed. However, when the state change of device is detected by performing the **Reload Conf.** operation, the following events are not displayed. Confirm the state from Web Console.

- In a large-scale environment in which hundreds of devices targeted for polling are registered, not all the devices may be checked within 60 seconds (default). In that case, on the next polling cycle, the devices whose statuses were not checked on the last polling cycle are given priority. The polling interval can be changed. Refer to "[A.7 Device Polling Setting File](#)" for details.

2.4 Setting Event Levels

If Manager receives an SNMP Trap from a device, the device's status display on Web Console is displayed as described below depending on the support level of the mechanism for the device.

There are three event levels: Error, Warning, and Information.

- Server node agent

The device status may or may not be changed.

For HBA faults and faults detected in the multipath driver, the device status is changed to a status that is the same as the event level.

For faults detected in middleware besides the multipath driver, the device status is not reflected in the event-only display.

- Support levels A, B, and E

The device status is changed to a status which is the same as the event level.

If you have performed the **Reload Conf.** operation after this, the device status for support levels A and B is changed to the statuses read from the device.

Information

The event level for individual SNMP Traps can be customized. Refer to "[A.5 SNMP Trap XML Definition File](#)" for details.

2.5 Monitoring Device Component Status

This product can monitor the status of components in managed devices.

The methods for acquiring the device component status from the device varies depending on the device.

Storage Devices Supporting Automatic Acquisition of Device Component Status

This product can acquire the device component status automatically for the following devices.

- ETERNUS AF All-Flash Arrays
- ETERNUS DX S6/S5/S4/S3 series

For devices other than the ones listed above, you must acquire the device component status manually. To acquire the device component status manually, perform the **Reload Conf.** operation with Web Console.

Configuration for Automatically Acquiring Device Component Status

To acquire the device component status from the devices in "[Storage Devices Supporting Automatic Acquisition of Device Component Status](#)", perform one of the following settings:

- Setting during the device registration

When using SNMPv1, enable SNMP Trap Settings.

When using SNMPv3, manually specify the Management Server IP address for the SNMP Trap destination address on the device side.

- Setting after the device registration

When using SNMPv1, enable SNMP Trap Settings by using the event notification destination setting function.

When using SNMPv3, manually specify the Management Server IP address for the SNMP Trap destination address on the device side.

Point

- If the above settings are performed, the SNMP Trap event notifications of the device is automatically changed from OFF to ON. The items of the SNMP Trap event notifications that are automatically changed are as follows:

- Remote Path Error of no Data Transfer
- Recovery module
- Temperature restoration
- FC CA Port Link Status Changed
- iSCSI CA Port Link Status Changed
- Remote Path Recovery

- In the device, the Item that changed to OFF among the items with a default value of ON

- When the device is removed from this product, the SNMP Trap event notifications are returned to the default value of the device.

However, if the SNMP Trap event notifications are changed on the device side after being changed automatically by this product, it does not return to the default value even if the device is removed from this product. Make sure there is nothing wrong with the SNMP Trap event notification setting on the device side.

Triggers for Automatically Acquiring Device Component Status

This product acquires the device component status automatically for the following cases:

- If SNMP Traps are received when a device component fails and when recovering from that failure.
- If a change of the device status is detected due to a device polling.
- If the link status of the ports is changed.
 - The link status of the FC ports and the iSCSI ports is updated when an SNMP Trap is received.
 - The link status of the SAS ports and the FCoE ports is updated every 10 minutes.

If the device component status is changed when the SNMP Traps cannot be received or a device polling cannot be performed because of a network error or because ETERNUS SF Manager is being stopped, the component status that is displayed in Web Console may not have been updated. In this case, perform the **Reload Conf.** operation with Web Console for the device whose component status was changed to update to the latest information.

To update the information of Automated Storage Tiering to the latest status, perform the **Status Update** operation for Automated Storage Tiering. Refer to "Update Automated Storage Tiering Information" in the *Web Console Guide* for information on how to perform the **Status Update** operation.

Chapter 3 Operation Design

3.1 LAN Connections

Manager manages devices, using the LAN I/Fs of a managed device.

Connect the LAN for management to all devices subject to management.

In this case, transactions affected by management can be minimized by separating the LAN for management from that for transaction.

3.1.1 Network Requirements

Communication with Manager

When a firewall is placed between Manager and a managed device, set the following port numbers to be able to pass the firewall.

Transmission Destination Device	Port/Protocol	Transmission Start Direction	Function
Server node (Agent)	4917/tcp	Manager -> device	Configuration management, Polling monitoring
	162/udp	Device -> Manager	Fault management
Microsoft Windows Server 2022 (Hyper-V function installation environment) Microsoft Windows Server 2019 (Hyper-V function installation environment) Microsoft Windows Server 2016 (Hyper-V function installation environment)	5985/tcp	Manager -> device	Configuration management
VMware vSphere VMware vCenter Server	443/tcp	Manager -> device	Configuration management, Polling monitoring
Brocade Fibre Channel switch PRIMERGY Fibre Channel switch blade	161/udp	Manager -> device	Configuration management, Performance management, Polling monitoring
	22/tcp	Manager -> device	Configuration management
	162/udp	Device -> Manager	Fault management
VDX series PRIMERGY BX Ethernet Fabric Switch	161/udp	Manager -> device	Configuration management, Performance management, Polling monitoring
	830/tcp	Manager -> device	Configuration management
	162/udp	Device -> Manager	Fault management
ETERNUS DX series (excluding the ETERNUS DX60 S2) ETERNUS AF All-Flash Arrays	161/udp	Manager -> device	Configuration management, Performance management, Polling monitoring
	22/tcp	Manager -> device	Configuration management, Performance management
	1999/tcp (*1)	Manager -> device	Configuration management

Transmission Destination Device	Port/Protocol	Transmission Start Direction	Function
	1372/tcp (*2)	Manager -> device	Configuration management, Performance management
	162/udp	Device -> Manager	Fault management
ETERNUS DX60 S2	161/udp	Manager -> device	Configuration management, Performance management, Polling monitoring
	1999/tcp (*1)	Manager -> device	Configuration management
	23/tcp	Manager -> device	Configuration management
	162/udp	Device -> Manager	Fault management
Disk Storage System other than listed above	161/udp	Manager -> device	Configuration management, Polling monitoring
	80/tcp	Manager -> device	Configuration management
	1999/tcp (*1)	Manager -> device	Configuration management
	162/udp	Device -> Manager	Fault management
NetApp FAS Series	162/udp	Device -> Manager	Fault management
	161/udp	Manager -> device	Polling monitoring
Manual embedding, and others	162/udp	Device -> Manager	Fault management
	ping/icmp	Manager -> device	Polling monitoring

*1: For Maintenance connection

*2: For Maintenance-Secure connection

Communication with Agent

To place Storage Cluster Controller, if a firewall is placed between Agent and a managed device, set the following port number to be able to pass the firewall.

Transmission Destination Device	Port/Protocol	Transmission Start Direction	Function
ETERNUS DX100 S5/S4/S3 ETERNUS DX200 S5/S4/S3 ETERNUS DX500 S5/S4/S3 ETERNUS DX600 S6/S5/S4/S3 ETERNUS DX900 S6/S5 ETERNUS DX8900 S6/S4/S3 ETERNUS DX8700 S3 ETERNUS AF All-Flash Arrays	1372/tcp (*1)	Agent -> device	Monitoring by Storage Cluster Controller

*1: For Maintenance-Secure connection

3.1.2 SNMP Communication Authentication

SNMPv1

The SNMPv1 communication between the Manager and the managed device is authenticated using the SNMP community. Specify the SNMP community name when registering the device. The defaults for the managed device's SNMP Community names are as follows:

Transmission Destination Device	Default	Access	Method of Settings
Brocade Fibre Channel switch PRIMERGY Fibre Channel switch blade	public private	read read/write	Refer to " 4.2.1.1 Setting " for detailed settings.
VDX series PRIMERGY BX Ethernet Fabric Switch	public	read	
ETERNUS DX series ETERNUS AF All-Flash Arrays	public	read	Refer to " 4.3.1.1 Setting " for detailed settings.

Information

The SNMP Community name can be changed with Web Console.

SNMPv3

The SNMPv3 communication between the Manager and the managed devices is authenticated using the SNMP Engine ID and SNMPv3 user information that is set on the managed device. SNMPv3 user information for MIB access and for receiving SNMP Traps is available (as well as a combined usage). The SNMPv3 user information must be registered from Web Console before registering the device. Refer to the "Display/Add/Change/Delete SNMPv3 User Configuration" in the *Web Console Guide* for information on how to register from Web Console.

The SNMP Engine ID is automatically retrieved by the product when registering the device.

The authentication protocols that can be used with the product are as follows. Set the managed devices for the devices that can be managed by this product using SNMPv3 within the range of the authentication protocol.

Function	Supported Range
Authentication	Enable, Disable
Authentication protocol	MD5, SHA
Privacy	Enable, Disable
Privacy protocol	DES, AES, 3DES, AES192, AES256

One user (esfagent) is registered for the user information for SNMPv3 on the server node.

The default values of the esfagent user are as follows.

Function	Default Values of esfagent User
Authentication	Disabled
Authentication protocol	-
Privacy	Disabled
Privacy protocol	-

Change the authentication method from Web Console based on the operation. Refer to "Display/Add/Change/Delete SNMPv3 User Configuration" in the *Web Console Guide* for information on how to make changes from Web Console.

When using a different authentication protocol for each server node, newly add new SNMPv3 user information.

Note

Double quotations (") and single quotations (!) cannot be used in user names, authentication passwords, and privacy passwords that are specified when registering SNMPv3 user information.

3.2 Server Node Middleware for Which Management Is Possible

The server node middleware for which management is possible are as follows. Inquire for the latest support information.

OS Platform	Type of Middleware	Product Name	Version	Fault Monitoring
Solaris 11 (*1, *2)	Multipath driver	ETERNUS Multipath Driver	*6	A
		MPxIO	-	A
	Mirror disk driver	PRIMECLUSTER GD	4.3A10 or later	A
	File system	UFS	-	N/A
ZFS		-	N/A	
Solaris 10 (*1, *3)	Multipath driver	ETERNUS Multipath Driver	*6	A
		MPxIO	-	A
	Mirror disk driver	PRIMECLUSTER GD	4.1A40 or later	A
	File system	UFS	-	N/A
		ZFS	-	N/A
QFS		-	N/A	
Microsoft Windows Server 2022 Microsoft Windows Server 2019	Multipath driver	ETERNUS Multipath Driver	*6	A
		MPIO (*4)	-	A
Microsoft Windows Server 2016	Multipath driver	ETERNUS Multipath Driver	*6	A
		msdsm (*4)	-	A
Microsoft Windows Server 2016	File system	NTFS, ReFS	-	N/A
	Red Hat Enterprise Linux 9 Red Hat Enterprise Linux 8 Red Hat Enterprise Linux 7	Multipath driver	ETERNUS Multipath Driver	*6
Device-Mapper Multipath			-	A
File system		ext2, ext3	-	N/A
SUSE Linux Enterprise Server 15	Multipath driver	Device-Mapper Multipath	-	A
	File system	ext2, ext3, ReiserFS	-	N/A
HP-UX 11i v3	Multipath driver	PV-LINK (LVM function) (*5)	-	A
		Native multipath function (*5)	-	A
	Mirror disk	LVM	-	N/A

*1: If a zone with Solaris 10 or Solaris 11 is used, the non-global zone is not supported for fault monitoring.

*2: If an Oracle-made HBA is used, only the file system (UFS and ZFS) and the multipath driver (MPxIO) are supported.

*3: If an Oracle-made HBA is used, only the file system (UFS, ZFS, and QFS) and the multipath driver (MPxIO) are supported.

*4: This is a multipath driver embedded as a standard in Windows operating systems.

*5: The [Mount Point] in the [End to End View] displays a hyphen (-).

*6: The version that operates on the target OS. Check the ETERNUS Multipath Driver manual about the version that operates on the target OS.

3.3 Switch Management

In this product, configuration management, fault management and performance management capabilities are supported in relation to the fiber channel switch.

3.3.1 Support Level A and B for Switch Management

The range of operating capabilities for the switch depends on the user's security level. Configure the user's settings accordingly.

- When management including setting and changing the configuration on the switch is operated using Storage Cruiser, specify a user with administrator permission security levels when registering devices on this product.
- When managing the settings and changing the configurations on the switch using equipment other than Storage Cruiser and when the switch status management such as fault management is performed using Storage Cruiser, specify a user with a security level other than a user with administrator permissions when registering devices on this product.

The operating capability differences, depending on the security level of the specified user, are as follows:

Features		User with Administrator Permissions (*1)	User with Permissions Other Than Administrator Permissions (*1)
Device detection, automatic registration, registration deletion		Can be used	Can be used (*2)
Configuration Management	Acquire physical connection	Can be used	Can be used
	Access path management (status display)	Can be used	Can be used
	Operating Beacon	Can be used (*4)	Cannot be used
	Access path management (set/delete/inherit)	Can be used	Cannot be used (*3)
Fault Management	SNMP Trap monitoring	Can be used	Can be used
	Device polling monitoring	Can be used	Can be used
	Acquiring device status	Can be used	Can be used
	Setting the SNMP Trap destination address	Can be used	Cannot be used
Performance Management		Can be used	Can be used

*1: The operating capabilities differ according to the support level.

*2: When performing a device registration using SNMPv1, change the SNMP Community name on the switch information change screen.

Configuration Items	Configuration Details
SNMP Community name (Write)	SNMP community name in the Write direction. The device registration is set to "private". Change this to "public".

Refer to "Change FC Switch Information" in the *Web Console Guide* for the operation details.

*3: Zoning information cannot be set or deleted in relation to the switch. For this reason, when setting/deleting/inheriting the access path for this product, set/delete the zoning information in relation to the switch in advance. When the zoning information is not set/deleted in advance, an error occurs in the operation results. When an error occurs without the zoning information being set/deleted in advance, perform setting/deletion of zoning information in relation to the switches on the access path route and perform the **Reload Conf.** operation in relation to the relevant switches.

*4: Only when performing a device registration using SNMPv1.

3.4 Disk Storage System Management

When Managing Devices with a Large Number of Volumes

When managing the following storage devices in which the number of volumes exceeds 18,000 per device, check whether the Management Server satisfies the CPU and memory required for behaviors of ETERNUS SF Manager.

- ETERNUS DX900 S6/S5
- ETERNUS DX8900 S6/S4
- ETERNUS DX8000 S3/S2 series

For the CPU required for behaviors, refer to "Hardware Requirements" in "Operating Environment of ETERNUS SF Manager" in the *Installation and Setup Guide*.

For the memory required for behaviors, refer to "Estimating Memory Size When Using Large Numbers of Volumes" in the *Installation and Setup Guide*.

If the CPU and memory required for behaviors are not enough, it is required to add cores and memory to the Management Server.

In addition, when adding memory, it is also required to set memory to ETERNUS SF Manager, too. For setting method, refer to "Memory Settings to ETERNUS SF Manager When Using Large Numbers of Volumes" in the *Installation and Setup Guide*.

When Managing with Products That Use the RESTful API of the Storage Device

In system environments where this product shares storage devices with other products that use the RESTful API of the storage device, the operation must be designed so that each product does not perform a simultaneous configuration change operation of the shared storage device.

If a configuration change operation of the storage device is simultaneously performed from each product, one of the operations may terminate with an error. If the operation terminates with an error, after the operation is completed on the other side, try again.

Unit of Eco-mode Control

The Eco-mode can be controlled for each RAID group. Therefore, when different transactions (type, online time, etc.) use a RAID group, the disk drives of its RAID group may not be able to be stopped depending on the operating policy of the transaction. Consider the relation between RAID group and transactions in the design of the storage system operation using Eco-mode.

Chapter 4 Environment Configuration

This chapter provides settings and notes required for devices to be managed.

Flow of All Operations

Whether building a new storage system or using this software for an existing storage system, start the environment setup and operation according to the procedure indicated in the figure shown below. Software can be installed and set up on individual devices in any sequence.

Note that once this software is installed and devices to be managed are registered, regardless of the connection status from Web Console, while the Management Server is starting up, the processing for when there is a fault/fault monitoring is performed to the registered device. Also, for the device for which performance management is being performed, performance information continues to be stored.

4.1 Server Node

4.1.1 Solaris OS Server Node

Two methods are used for managing Solaris OS server nodes: one method installs Agent on the host, and the other does not.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).

To place a Storage Cluster Controller, agent must be installed.



See

Refer to "[3.2 Server Node Middleware for Which Management Is Possible](#)" for information about products that can be monitored by Agent.

Refer to "[9.6 Storage Cluster Controller](#)" for details about the Storage Cluster Controller and its operation method.



Note

Limitations When Solaris OS Server Nodes Are Managed Using Agent:

- If device files of more than one controller number are generated

If more than one device driver type is used to access storage of a different type from a single HBA, device files for at least 2 controller numbers may be generated for the single HBA. This software does not support this status.

If there is a problem with information gathering or display, manage the server nodes using the manual embedding function. Refer to "[5.2.7 Registering Manually Embedded Device](#)" for details on the manual embedding function.

4.1.1.1 SNIA HBA API Library Settings

To manage the HBAs that are installed at Solaris OS server nodes, the SNIA HBA API library that an HBA vendor distributes must be installed.

Refer to the *SNIA HBA API Library Installation Guide* at the following URL for details on how to install the HBA API library:

<https://www.fujitsu.com/global/support/products/computing/storage/manuals-list.html>

4.1.1.2 N-port Settings

N port setting is needed on the side of HBA when connecting with the Fibre Channel switch. The method of setting the port of HBA as N port depends on the HBA type. Each method for setting is shown below.

For Solaris OS Default emlxs Driver (Target HBA: XSEFC401AF, XSEFC402AF, SG-XPCIE2FC-EM4, SG-XPCIE2FC-EM8, and so on.)

Specify "2" for the emlxsX-topology parameter in the /kernel/drv/emlxs.conf file.

```
#
# +++ Fibre Channel specific parameters +++
#
# topology: link topology for initializing the Fibre Channel connection.
#
#         0 = attempt loop mode, if it fails attempt point-to-point mode
#         2 = attempt point-to-point mode only
#         4 = attempt loop mode only
#         6 = attempt point-to-point mode, if it fails attempt loop mode
#
# Set point-to-point mode if you want to run as an N_Port.
# Set loop mode if you want to run as an NL_Port.
#
# Range: Min:0 Max:6 Default:0
#
emlxs0-topology=2;
emlxs1-topology=2;
```

For Solaris OS Default qlc Driver (Target HBA: SE0X7F21F, SE0X7F22F, SG-XPCI1FC-QF4, SG-XPCIE2FC-QF8, and so on.)

N port settings are not required.

4.1.1.3 SNMP Trap Transmission Settings

With a method to be managed by installing an agent, SNMP Traps from the server nodes are sent using SNMPv1 or SNMPv3. The default is SNMPv1. When using SNMPv3, perform an SNMPv3 configuration by using the [setagtsnmp](#) command on the server node.

4.1.2 Windows Server Node

This software provides two methods for managing Windows hosts: one method installs Agent on the host, and the other does not.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).

To place a Storage Cluster Controller, agent must be installed.



See

.....
Refer to "[3.2 Server Node Middleware for Which Management Is Possible](#)" for information about the products that can be observed by Agent.

Refer to "[9.6 Storage Cluster Controller](#)" for details about the Storage Cluster Controller and its operation method.
.....

4.1.2.1 SNIA HBA API Library Settings

To manage the HBAs that are installed in Windows server nodes, the SNIA HBA API library that an HBA vendor distributes must be installed.

Refer to the *SNIA HBA API Library Installation Guide* at the following URL for details on how to install the HBA API library:

<https://www.fujitsu.com/global/support/products/computing/storage/manuals-list.html>

4.1.2.2 N-port Settings

To connect Emulex Corporation LP7000, 8000, 9000, 9002L, 9802, 1050, 1050Ex, to a Fibre Channel switch, N-port settings are required on the HBA side.

To make up a SAN by connecting Emulex Corporation LP7000, 8000, 9000, 9002L, 9802, 1050, 1050Ex to the fibre channel switch, use the driver parameter in the registry to indicate explicitly that the topology is an N-port. The following indicates the procedure for setting the topology in the driver parameter:


1. Open the registry editor.

Select [Start] - [Run...] from the task bar, and then execute the following:

```
regedit.exe
```

2. Open the keyword of the following registry key, and then set the Topology value to 1:

```
HKEY_LOCAL_MACHINE\  
System\  
  CurrentControlSet\  
    Services\  
      lpxnds\  
        Parameters\  
          Device\  
            "DriverParameter"      Topology=1
```

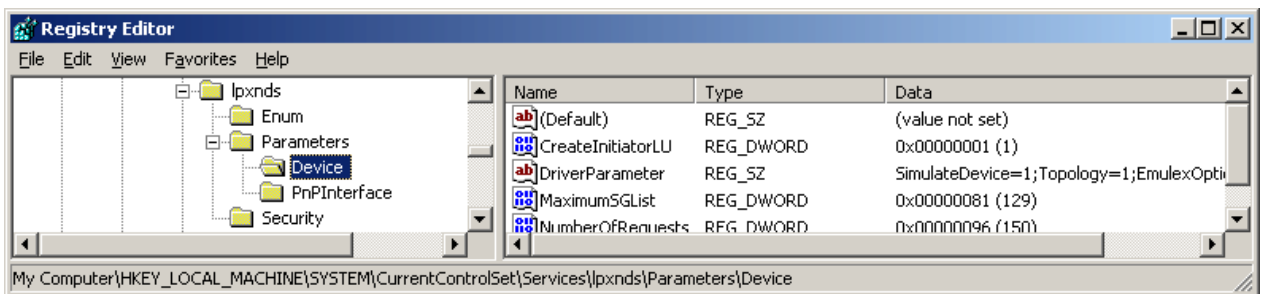

- The DriverParameter value depends on the version of the driver used. The Topology word may not exist depending on the driver version. In this event, the Topology word must be added. For details, refer to the readme file supplied with the driver or contact the HBA vendor.
- If the system accommodates more than one Emulex HBA and you want to connect them to Fibre Channel using different topologies, follow the above procedure for each HBA. For details, refer to the readme file supplied with the driver or contact the HBA vendor.
- The procedure involves changing the registry contents. Take particular care when carrying out the procedure because, if any part of the registry becomes corrupted as a result of an operation mistake or an operation that is not in the procedure, restarting the Windows system may not be possible.

4.1.2.3 SNMP Trap Transmission Settings

With a method to be managed by installing an agent, SNMP Traps from the server nodes are sent using SNMPv1 or SNMPv3. The default is SNMPv1. When using SNMPv3, perform an SNMPv3 configuration by using the [setagtsnmp](#) command on the server node.

4.1.3 Linux Server Node

This software provides Linux server nodes with two management methods. In one method Agent is installed and in the other method Agent is not installed.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).

To place a Storage Cluster Controller, agent must be installed.



See

Refer to "3.2 Server Node Middleware for Which Management Is Possible" for information about the products that can be observed by Agent.

Refer to "9.6 Storage Cluster Controller" for details about the Storage Cluster Controller and its operation method.

4.1.3.1 SNIA HBA API Library Settings

It is necessary to install the HBA API library that the HBA vendor distributes to manage HBA installed in the Linux server node.

Refer to the *SNIA HBA API Library Installation Guide* at the following URL for details on how to install the HBA API library:

<https://www.fujitsu.com/global/support/products/computing/storage/manuals-list.html>

4.1.3.2 Using udev Device



Information

- The udev device is a Linux function that always assigns a fixed device name, even if the hardware configuration is changed.

It assigns a device name that starts with "/dev/disk", unlike for existing device names, such as "/dev/sda".

"/dev/disk/by-path/xxxxxxx" xxxxxxx is information generated from the disk location information

"/dev/disk/by-id/yyyyyyy" yyyyyyy is information generated from the disk ID information

In the following explanations, device names that start with "/dev/disk/by-path" are shown as "by-path", and device names that start with "/dev/disk/by-id" are shown as "by-id". Existing device names, such as "/dev/sda", are shown as compatible device names.

If the Linux udev function is used for devices monitored using Storage Cruiser, use "by-id".

"by-id" is a symbolic link to "/dev/sd?name", therefore the relationship for "by-id" and the compatible device name displayed in this software can be checked by using the "ls -l /dev/disk/by-id" command.



Example

Method Shown below Checks "by-id" for "/dev/sdb"

```
# ls -l /dev/disk/by-id/
Total 0
lrwxrwxrwx 1 root root 9 April 3 21:28 scsi-1FUJITSU_300000690000 -> ../../sdb
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690000-part1 -> ../../sdb1
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690000-part2 -> ../../sdb2
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690000-part3 -> ../../sdb3
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690000-part7 -> ../../sdb7
lrwxrwxrwx 1 root root 9 April 3 21:28 scsi-1FUJITSU_300000690001 -> ../../sdc
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690001-part1 -> ../../sdc1
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690001-part2 -> ../../sdc2
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690001-part3 -> ../../sdc3
```

```
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690001-part7 -> ../../sdc7
lrwxrwxrwx 1 root root 9 April 3 21:28 scsi-1FUJITSU_300000690002 -> ../../sdd
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690002-part1 -> ../../sdd1
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690002-part2 -> ../../sdd2
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690002-part3 -> ../../sdd3
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690002-part7 -> ../../sdd7
```

Accordingly, it is possible to determine that "by-id" of "/dev/sdb" is "/dev/disk/by-id/scsi-1FUJITSU_300000690000".

Point

- "by-path" for the device that is connected to the Fibre Channel switch may change, therefore specify "by-id".
- Linux device nodes are displayed as compatible device name "sd?" in this software. The "by-id" and "by-path" are not displayed. Check the relationship using the command as shown above.

4.1.3.3 SNMP Trap Transmission Settings

- For Red Hat Enterprise Linux 7 or later environments

With a method to be managed by installing an agent, SNMP Traps from the server nodes are sent using SNMPv1 or SNMPv3. The default is SNMPv1. When using SNMPv3, perform an SNMPv3 configuration by using the [setagtsnmp](#) command on the server node.

- For SUSE Linux Enterprise Server 15 environments

With a method to be managed by installing an agent, SNMP Traps from the server nodes are sent using only SNMPv1.

4.1.4 HP-UX Server Node

This software provides two methods for managing the HP-UX server node. In one method, Agent is installed on the node, in the other, it is not.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).

See

Refer to "[3.2 Server Node Middleware for Which Management Is Possible](#)" for information on products that can be monitored by Agent.

To manage the HBA mounted on an HP-UX server node, the HBA API library must be installed. When in doubt, contact your HBA sales representative.

4.1.5 Other Server Nodes (Supported OS or Solaris OS/Windows/Linux/HP-UX without Agent)

This software also provides a method for manually managing server nodes that are not supported by Agent or Solaris OS/Windows/Linux/HP-UX environments in which Agent is not installed.

Status inquiry or automatic reading of configuration data from a device cannot be performed, but the configuration can be changed by displaying the devices on the screen and manually editing the configuration.



See

Refer to "[5.2.7 Registering Manually Embedded Device](#)" for information on the procedure for registering the Managed Server without Agent.

4.1.6 VMware Server Node

If using End to End display for the VM host (VMware ESX or VMware ESXi) itself and any VM guests (virtual machines and guest operating systems) and storage devices can be supported by registering the VM host to the VMware vCenter Server.

It communicates directly with VMware ESX, VMware ESXi or VMware vCenter Server without using an Agent, and displays information about the VM host and VM guests.



Point

If more than one network adapter is defined in the VM guest, an IP address of the VM guest is displayed only one. The displayed IP address is a primary IP address that is defined to a VM guest. Generally a primary IP address indicates the IP address of the network adapter first recognized by OS.

4.1.6.1 Setting

IP addresses

It is recommended to set an IP address in the same format (IPv4 or IPv6) as the VM host.

If the IP address format (IPv4 or IPv6) of the VM guest is different from that of the VM host, the IP address of the VM guest is not displayed.

VMware Tools

It is recommended that VMware Tools be installed on the guest OS.

VMware Tools must be running on the guest OS in order to display information about the guest OS (such as the IP address, host name, and the name and version of the operating system). When VMware Tools is not installed on the guest OS, refer to "[B.4.1.2 VMware Server Node](#)" for what is displayed in it.

To use the VMware vSphere Virtual Volumes function, install VMware Tools on the guest OS.

When operating an Exchange Server Database Availability Group (hereinafter referred to as "DAG") in the VM guest environment

Set the IP address for management of the VM guest and the IP address for the DAG to another network adapter each. Assign the IP address for management of the VM guest to the network adapter with the highest number.

If the VM guest is a single network adaptor environment, newly allocate the network adaptor to the VM guest, and operate the network adaptor separately for IP address for DAG and IP address for the management of the VM guest.

When displaying the End to End list for VM guest and storage device or in the VMware vSphere Virtual Volumes environment

Registration of the VMware vCenter Server to which the VM host was registered is also necessary. An IP address, user name, and password are required for registering the VMware vCenter Server.

When the VM host has been registered to the VMware vCenter Server using the IP address, specify the IP address registered to the VMware vCenter Server also when registering the VM host to this product.

If VMware vCenter Server is already registered to this product, reload VMware vCenter Server.

4.2 Fibre Channel Switch

4.2.1 Brocade Fibre Channel Switch

This software support the Brocade Fibre Channel switch and PRIMERGY Fibre Channel switch blade.

Before starting the operations in "4.2.1.1 Setting", make sure to understand the following descriptions.

- Brocade Fibre Channel switch can define six monitoring device addresses (SNMP Trap transmission places) per device and a different SNMP Trap Configuration for each of these addresses. When using SNMPv1 this software must be used by overwriting the entry where the name of SNMP Community is set in this public. If the device side is designed to change the name of SNMP Community of public and accordingly the settings of this software, the entry with the changed name of SNMP Community is used.
- Brocade Fibre Channel switch features the QuickLoop function that accomplishes FC-AL hub emulation. However, this software does not support Fibre Channel switches for which this function is enabled.
- This software communicates with the Fibre Channel switch using SNMP.
- This software communicates with the Fibre Channel switch using SSH.
- Brocade Fibre Channel switch supports the password-less login function by SSH public key authentication. However, this product does not provide this function.
- It is recommended of Fibre Channel switch redundancy (cascading).

At present, the Fibre Channel switch zoning information cannot be restored from the database of this software. Therefore, multiple Fibre Channel switches must be connected in cascade to prevent the zoning information stored on the Fibre Channel switches from being erased. The zoning information is stored separately on each of the Fibre Channel switches connected in cascade. Even if one of the Fibre Channel switches fails, the zoning information is stored by the other switches.

The Fibre Channel switch zoning information is changed using the access path setting. When cascade connection is not used, be sure to save the device configuration information (configUpload file) after making changes in the settings. Refer to the manuals of the device for details on storing configuration information.

However, cascade connections should not be implemented between two or more ETERNUS VS900 model 300.

- To manage Fibre Channel switches with this software, all the Fibre Channel switches that are connected in cascade must be registered with this software. If any Fibre Channel switch is connected in cascade but not registered with this software, the SAN environment cannot be correctly managed.
- In consideration of incompatibility of Fibre Channel switch firmware, this software checks the firmware version number.
If this software detects firmware that it does not support, all functions including the configuration management is restricted.
The following message is output to the event log. (XXXXXX is the version number of the detected firmware.)
"Unsupported Firmware Version XXXXXX"
Contact your Fujitsu CE or SE because patches need to be applied to this software.
- The FC routing function is not supported.
If a cascade is connected using the FC routing function, the cascade connection line is not displayed in Web Console.
For this reason, an error is displayed for the access path that goes through the cascade connection line, and a Warning is displayed for the server node that is used to configure the access path.
- To the GbE port, It may takes a time till SNMP Trap is notified.

Following SNMP Traps are displayed in the event log when execute disconnect/connect FC cable in a short time.

- When the cable is disconnected : [Link Down Trap]
- When the cable is connected : [Link Up Trap]

The port where the trouble occurs cannot be specified from the event log, also the event linkage function does not operate. Login to the Fibre Channel switch to specify the port where the trouble occurs, and confirm the state of the VE port and the GbE port.

* Also following event logs are displayed with above event log.

- When the cable is disconnected : [FC Port No.214 Offline]
- When the cable is connected : [FC Port No.214 Online]

- For GbE ports that are used in the FCIP tunneling function, virtual FC ports are displayed in Web Console as follows.

Device	Number of Virtual FC Ports	Remarks
Brocade 7500	16	For firmware versions prior to v5.2.0, a Warning is displayed in Web Console for the FC ports for which the FCIP tunneling function is disabled. Monitor the occurrence of errors using SNMP Trap.
Brocade 7810	8	-
Brocade 7840	20	-
Extension Blade (FC 8Gbps) (This is installed in Brocade DCX series)	20	-

- [1Gbit/s] is displayed as the VE port transfer speed.
- For this product, the VE port state of the Brocade 7810 is not managed. In Web Console, the VE port state is displayed as Warning. Log in to the Brocade 7810 to check the VE port state.
- This software does not support the Administrative Domain (Admin Domain).
- This software does not support the Persistent PID function. Only configurations that have a default port address setting are supported.

4.2.1.1 Setting

This section explains the items that must be configured directly to the device side in advance to use this product to manage the Brocade Fibre Channel switch and PRIMERGY Fibre Channel switch blade. Refer to the manuals of each device for details on these items.

IP Address, Subnet Mask, and Gateway Address (Required)

Define the IP address, subnet mask, and gateway address for a LAN. If the Fibre Channel switch is equipped with an operation panel, these settings can be defined from the operation panel. If the Fibre Channel switch is equipped with a serial port, define them by issuing the ipAddrSet command via the serial port.

User Name and Password for Fibre Channel Switch Control

For Fibre Channel switch control, this software is used to log in using SSH to the target device. Enable the SSH connection of the target device.

Set users with security levels according to the requirements of the system administrator. The user name "admin" is set with the system administrator security level in the factory shipped configuration. Refer to the manuals of the device or contact a Fujitsu customer engineer for the default password of this user.

If the password has been changed on the device side, when perform the **Reload Conf.** operation for the relevant device with Web Console, this software recognizes the change and the device status becomes a Warning display.

In order for the setting to match the changed device setting, perform a change to the account information for device management using Web Console.

For some types of devices, the change of the password on the device side cannot be recognized automatically. Change the device management account information in Web Console for these devices.

When connected to a cascade, some types of devices cannot automatically recognize the changed password. In this case, delete the device and register it again. Refer to "5.2 Registering Device" for details on deleting and registering devices.

Domain Name

A domain name is a unique name defined for a Fibre Channel switch in a SAN. Such names are necessary for a cascade connection of multiple Fibre Channel switches. Since domain names are automatically defined by firmware built into the individual Fibre Channel switches, the name need not be considered during definition and management of access paths using this software.

However, the domain names are important elements in manual port zoning. In such cases, make sure that no identical value is set for any two Fibre Channel switches in the cascade connection. If a Fibre Channel switch is equipped with an operation panel, a domain name can be set from the operation panel. If a Fibre Channel switch is equipped with a serial port or if network settings are defined for the Fibre Channel switch, log in to the switch, and set a domain name by executing the configure command.

SysName (Recommended)

Register a switch name for Fibre Channel switch control. This software uses this switch name as SysName. SysName should be a name that is not identical to any other name registered with this software. If the Fibre Channel switch is equipped with an operation panel, a switch name can be set from the operation panel. If the Fibre Channel switch is equipped with a serial port or if the network settings are defined for the Fibre Channel switch, log in to the switch, and set a switch name by executing the switchName command.

Zoning Setting

Zoning is recommended.

No zoning may be set for Fibre Channel switches. When Fibre Channel switches that are not set the zoning are connected to server nodes or storage devices, they are placed in a state where their security levels are undefined (which makes all of the Fibre Channel switches accessible from every server node). To prevent inadvertent access from destroying data on the storage side, recommend to set the temporary zone as follows. By this setting, it is able to stop all access paths of the Fibre Channel switches. After defining this setting, connect the server node and storage device to the Fibre Channel switch, and set up an access path using this software. When setting up a cascade connection between the Fibre Channel switch and another Fibre Channel switch for which zoning is already set, you need not define this setting because zoning information is copied. The setting is also not necessary if the default of zoning mode is set to "No Access" on the Default Zone function of the Fibre Channel switch.

```
zoneCreate"SNM_0001" , "10:0B:00:00:0E:00:00:00;10:0C:00:00:0E:00:00:00"  
cfgCreate"SNM_BCSI" , "SNM_0001"  
cfgEnable"SNM_BCSI"  
cfgSave
```

If the Fibre Channel switches are to be cascaded for operation, cascade the switches before executing the above command. Execute this command on a Fibre Channel switch where the latest firmware has been installed.

Note

- If the temporary zone has been created, all accesses are blocked. For this reason, do not implement this measure while the target Fibre Channel switch environment is operating. Implement this measure either immediately after the Fibre Channel switch environment has been installed and before operations have started (or while operations are paused).
- Set a temporary zoning for Fibre Channel switches that are not configured with zoning or set to "No Access" with the Default Zone function.
- This software does not support environments whose zone name, zone config name, or Alias meets either of the following conditions.
 - Symbols other than the underscore (_) are used
 - The name starts with a number

SNMP Setting

This software handles fibre channel switches and SNMP communication. The SNMPv1 or SNMPv3 protocol can be used.

When Using SNMPv1

The name of the SNMP Community used for SNMP communication is specified when registering the switch. If the SNMP Community settings are at their defaults, this software communicates by using "public" or "private" for the SNMP Community name.

If you use the beacon function, before operating the beacon, execute the snmpConfig command of the fibre channel switch and check that SNMP SET Security Level is "No security". If SNMP SET Security Level is not "No security", re-execute the snmpConfig command and set SNMP SET Security Level to "No security". Refer to the manuals of the target fibre channel switch for details.

When Using SNMPv3

The SNMP user information for using SNMP communication with this product is specified when registering the switch.

To change the SNMP settings, change the device side settings and then change the SNMP settings in this software. The settings of this product can be changed from Web Console.

SNMP-MIB Setting

For the SNMP-MIB setting of the Fibre Channel switch, set the following by specifying the "snmpConfig --set mibCapability" command or the "snmpMibCapSet" command. Specify "yes" for the "FE-MIB", "SW-MIB", "FA-MIB", "HA-MIB" and "SW-TRAP" items. Leave the other items unspecified. Simply press ENTER for these unspecified items.

```
switch:admin> snmpConfig --set mibCapability
  The SNMP Mib/Trap Capability has been set to support
(omitted)
FE-MIB (yes, y, no, n): [yes] yes
SW-MIB (yes, y, no, n): [yes] yes
FA-MIB (yes, y, no, n): [yes] yes
FICON-MIB (yes, y, no, n): [yes]
HA-MIB (yes, y, no, n): [yes] yes
FCIP-MIB (yes, y, no, n): [no]
ISCSI-MIB (yes, y, no, n): [no]
SW-TRAP (yes, y, no, n): [yes] yes
  swFCPortScn (yes, y, no, n): [yes]
  swEventTrap (yes, y, no, n): [yes]
  swFabricWatchTrap (yes, y, no, n): [yes]
  swTrackChangesTrap (yes, y, no, n): [yes]
(omitted)
switch:admin>
```

The output of the above command may depend on the firmware version of the Fibre Channel switch. Change the settings of only the "FE-MIB", "SW-MIB", "FA-MIB", "HA-MIB" and "SW-TRAP" items.

Note that if HA-MIB items are not displayed, HA-MIB settings are not required.

If "FE-MIB" and "SW-MIB" are not set to "yes", searching and registering devices fail.

If "FA-MIB" is not "yes", physical connection information, port zoning information, and port speed (transfer rate) information on each port of the Fibre Channel switch is erroneously recognized.

The fault monitoring function only runs if "SW-TRAP" is set to "yes".

The director performance management function only runs if HA-MIB is set to "yes".

4.2.1.2 Zoning

This software uses the one-to-one WWPN zoning of the Fibre Channel switch as the basis for setting up and removing access paths (logical paths). However, it also supports other types of zoning settings at their respective levels. The functions that it supports for the different types of zoning are as follows:

No Zoning Setting (with This Software, This Is Called "no security state".)

This is a state that has no zoning setting. In this state, the Fibre Channel switch permits access between all ports. It is the factory default setting. However, if a Fibre Channel switch is connected in cascade to another Fibre Channel switch with a zoning setting, the zoning setting information is copied when cascade connection communication is established.

This software can perform management normally for the Fibre Channel switches without a zoning setting. Also, when registering a Fibre Channel switch with this software, you can specify whether to set zoning in response to a subsequent software attempt to set up an access path.

With no zoning setting, the Fibre Channel switch operates with security management delegated to the binding and affinity capabilities of server nodes and storage devices.

WWPN Zoning Setting

The WWPN zoning setting is a method by which zoning is defined based on the WWPN of a Fibre Channel port. A WWPN value that is unique throughout the world is defined for each port. As a result, no wrong access path is created even if the port connection place of the Fibre Channel switch is changed.

All access path control functions of this software are effective for access paths defined in the one-to-one WWPN zoning setting. For other defined access paths, this software can read access and display path information, but it cannot delete and inherit the access paths. However, it is possible to delete only zoning setup.

Port Zoning Setting

The port zoning setting is a method by which zoning is defined based on the specification of the port connection place of the Fibre Channel switch. A new port zoning setting must be defined if the port connection place of the Fibre Channel switch is changed.

As for the access path control functions, this software can read information about access paths for which port zoning is set, display the paths, and manage their status, but it cannot delete and inherit the access paths. However, it is possible to delete only zoning setup.

WWNN Zoning Setting

The WWNN zoning setting is a method by which zoning is defined based on the WWNN of a Fibre Channel port. Though a WWNN can be shared by several Fibre Channel ports, its definition differs from company to company.

As for the access path control functions, this software cannot display or delete access paths for which WWNN zoning is set. However, it can perform fault management of the Fibre Channel switch.

Different types of zoning settings can be defined for the Fibre Channel switch. To allow this software to provide complete zoning security, however, changing the existing zoning setting to the one-to-one WWPN zoning setting is recommended.

The zoning setting can be defined in the Zone Administration window of WEBTOOLS of the Fibre Channel switch. Note that settings in WEBTOOLS are dependent on the device and firmware.

4.2.2 PRIMERGY Fibre Channel Switch Blade

Refer to "[4.2.1 Brocade Fibre Channel Switch](#)" for information on how to set up the environment.

4.2.3 VDX Series

This product supports the VDX series.

The used procedure and setting items vary depending on the support level of the managed device. For devices that are described as "Automatic" under [Device Detection] in "[Table 1.1 Support Levels](#)", refer to "[4.2.3.1 Automatically Detectable Devices](#)". For devices that are described as "Manual", refer to "[4.2.3.2 Configuration for Manually Detected Devices](#)".

For details about the items that require configuration, refer to the manuals of those devices.

4.2.3.1 Automatically Detectable Devices

Before starting the operations in "[4.2.3.1.1 Setting](#)", make sure to understand the following descriptions.

- The connecting information is not displayed if connection type not supported by the device.
- This product manages the device by using SNMP and NETCONF.
- This product supports only the operation mode in VCS modes. The standalone mode is not supported.
- The switches managed by this product are all managed as a Fibre Channel switch.
- This product manages RBridgeID as a domain ID.
- It is recommended of Fibre Channel switch redundancy (cascading).
At present, the Fibre Channel switch zoning information cannot be restored from the database of this software. Therefore, multiple Fibre Channel switches must be connected in cascade to prevent the zoning information stored on the Fibre Channel switches from being erased. The zoning information is stored separately on each of the Fibre Channel switches connected in cascade. Even if one of the Fibre Channel switches fails, the zoning information is stored by the other switches.
The Fibre Channel switch zoning information is changed using the access path setting. When cascade connection is not used, be sure to save the device configuration information after making changes in the settings. Refer to the manuals of the device for details on storing configuration information.
- To manage Fibre Channel switches with this software, all the Fibre Channel switches that are connected in cascade must be registered with this software. If any Fibre Channel switch is connected in cascade but not registered with this software, the connection cannot be correctly managed.
- The beacon function is not supported.
- If the user is logged on to the Fibre Channel switch using SSH, the Fibre Channel switch information cannot properly be obtained nor configured.
- The FC routing function is not supported.
If a cascade is connected using the FC routing function, the cascade connection line is not displayed in Web Console.
For this reason, an error is displayed for the access path that goes through the cascade connection line, and a Warning is displayed for the server node that is used to configure the access path.
- If the transfer speed of FC port is configured by the Auto Negotiation function, this product displays the maximum transfer speed of FC port configured by the Auto Negotiation function.
- FCoE port is not displayed.
- As for the Ethernet port and FC port number, the following values are displayed in Web Console based on the Index value output by "show fabric islports" command of the VDX series.
 - When index value starts from 0 : Index value + 1
 - When index value starts from 1 : Index value
- For the VDX series firmware version 3.0.1 or later, if port disconnection or connection is done, the following SNMP Traps alone are displayed in the event log:
 - Cable disconnected : [Link Down Trap]
 - Cable connected : [Link Up Trap]

At this time, a failing port cannot be located from the event log. Also, the function in conjunction with event does not work. To locate the failing port, login to the Fibre Channel switch to check the port status.
- 1GbE RJ45 port is not displayed.
- If LC (Line Card) is moved or connection in Breakout mode is done on VDX 6740/VDX 6740T, even if a target is the same port in the same slot, a combination of the port number and its port information seen from Web Console may be changed before and after the operation. To check whether the target is the same, log in to the Fibre Channel switch to see the slot number, port number and port connection status.
- If Access Gateway mode is specified, the port type of FC port is displayed as "F_Port".
- 100GbE Line Card is not supported.

4.2.3.1.1 Setting

This section describes the items that must be configured directly to the device side in advance to use this product to manage the VDX series that supports automatic device detection.

Connecting to Network (Required)

Make the required settings for the VDX series which you use to connect to a network, and then connect to the network.

Refer to the manuals of the respective devices for details on the setting method.

User Name and Password for Fibre Channel Switch Control

For Fibre Channel switch control, this software is used to log in using SSH to the device. Set users with security levels according to the requirements of the system administrator. The user name "admin" is set with the system administrator security level in the factory shipped configuration. Refer to the manuals of the device or contact a Fujitsu customer engineer for the default password of this user.

If the password has been changed on the device side, when perform [Reload Conf.] for the relevant device with Web Console, this software recognizes the change and the device status becomes a Warning display.

In order for the setting to match the changed device setting, perform a change to the account information for device management using Web Console.

SysName (Recommended)

Register a host name for Fibre Channel switch control. This software uses this host name as SysName. SysName should be a name that is not identical to any other name registered with this software.

Refer to the manuals of the respective devices for details on the setting method.

Zoning Setting

Zoning is recommended.

No zoning may be set for Fibre Channel switches. When Fibre Channel switches that are not set the zoning are connected to server nodes or storage devices, they are placed in a state where their security levels are undefined (which makes all of the Fibre Channel switches accessible from every server node).

To prevent inadvertent access from destroying data on the storage side, recommend to set the temporary zone as follows:

By this setting, it is able to stop all access paths of the Fibre Channel switches. After defining this setting, connect the server node and storage device to the Fibre Channel switch, and set up an access path using this software.

When setting up a cascade connection between the Fibre Channel switch and another Fibre Channel switch for which zoning is already set, you need not define this setting because zoning information is copied.

The setting is also not necessary if the default of zoning mode is set to "No Access" on the Default Zone function of the Fibre Channel switch.

```
VDX-Sw# configure terminal
Entering configuration mode terminal
VDX-Sw(config)# zoning defined-configuration zone SNM_0001
VDX-Sw(config-zone- SNM_0001)# member-entry 00:0B:00:00:0E:00:00:00
VDX-Sw(config-zone-SNM_0001)# member-entry 00:0C:00:00:0E:00:00:00
VDX-Sw(config-zone-SNM_0001)# exit
VDX-Sw(config)# zoning defined-configuration cfg SNM_BCSI
VDX-Sw(config-cfg-SNM_BCSI)# member-zone SNM_0001
VDX-Sw(config-cfg-SNM_BCSI)# exit
VDX-Sw(config)# zoning enabled-configuration cfg-name SNM_BCSI
VDX-Sw Updating flash ...
VDX-Sw(config)# end
VDX-Sw#
```

If the Fibre Channel switches are to be cascaded for operation, cascade the switches before executing the above command.

Note

- If the temporary zone has been created, all accesses are blocked. For this reason, do not implement this measure while the target Fibre Channel switch environment is operating. Implement this measure either immediately after the Fibre Channel switch environment has been installed and before operations have started (or while operations are paused).
- Set a temporary zoning for Fibre Channel switches that are not configured with zoning or set to "No Access" with the Default Zone function.

SNMP Trap Settings

Although SNMP Trap is used in fault monitoring, the SNMP Trap destination address automatic settings function is not supported for the VDX series.

In order for the SNMP Trap to be sent to the Management Server, after logging in to the device, execute the device commands (the `snmp-server host` command for SNMPv1 and the `snmp-server v3host` command for SNMPv3) to set the SNMP Trap destination address.

If the Management Server is a clustered system, the logical IP address of the clustered system needs to be set.

Refer to the manuals of the respective devices for details on the setting method.

SNMP Setting

When Using SNMPv1

If the SNMP Community settings are at their defaults, this software communicates by using "public" for the SNMP Community name.

When Using SNMPv3

The SNMP user information for using SNMP communication on this product is specified when registering the switch.

To change the SNMP setting, change the device side, and then change the SNMP setting in this software. It is possible to change the settings of this software from Web Console.

4.2.3.1.2 Zoning

This software uses the one-to-one WWPN zoning of the Fibre Channel switch as the basis for setting up and removing access paths (logicalpaths). However, it also supports other types of zoning settings at their respective levels. The functions that it supports for the different types of zoning are as follows:

No Zoning Setting

This is a state that has no zoning setting.

In this situation, if the default zoning mode is set to All Access, access is permitted across all the ports of the fibre channel switch. (This product refers to this situation as No Security status)

If the default zoning mode is set to No Access, access is blocked across all the ports of the Fibre Channel switch.

In the case of "No Access" or "All Access", if a Fibre Channel switch is connected in cascade to another Fibre Channel switch with a zoning setting, the zoning setting information is copied when cascade connection communication is established.

This software can perform management normally for the Fibre Channel switches without a zoning setting. Also, when registering a Fibre Channel switch with this software, you can specify whether to set zoning in response to a subsequent software attempt to set up an access path. With no zoning setting, the Fibre Channel switch operates with security management delegated to the binding and affinity capabilities of server nodes and storage devices.

WWPN Zoning Setting

The WWPN zoning setting is a method by which zoning is defined based on the WWPN of a Fibre Channel port.

A WWPN value that is unique throughout the world is defined for each port. As a result, no wrong access path is created even if the port connection place of the Fibre Channel switch is changed.

All access path control functions of this software are effective for access paths defined in the one-to-one WWPN zoning setting. For other defined access paths, this software can read access and display path information, but it cannot delete and inherit the access paths.

However, it is possible to delete only zoning setup.

WWNN Zoning Setting

The WWNN zoning setting is a method by which zoning is defined based on the WWNN of a Fibre Channel port. Though a WWNN can be shared by several Fibre Channel ports, its definition differs from company to company.

As for the access path control functions, this software cannot display or delete access paths for which WWNN zoning is set.

Point

In the VDX series, the WWNN zoning can be set. To allow this software to provide complete zoning security, however, changing the existing zoning setting to the one-to-one WWPN zoning setting is recommended.

4.2.3.2 Configuration for Manually Detected Devices

This section describes the items that must be configured directly to the device side in advance to use this product to manage the VDX series that requires manual device detection.

1. Connecting to network

Make the required settings for the VDX series which you use to connect to a network, and then connect to the network.

Refer to the manuals of the respective devices for details on the setting method.

2. SNMP Trap settings

Although SNMP Trap is used in fault monitoring, the SNMP Trap destination address automatic settings function is not supported for the VDX series. In order for the SNMP Trap to be sent to the Management Server, after logging in to the device, execute the following commands to set the SNMP Trap destination address.

If the Management Server is a clustered system, the logical IP address of the clustered system needs to be set.

```
switch# configure terminal
switch(config)# snmp-server host <SNMP Trap destination address> public version 1 udp-port 162
severitylevel Warning
switch(config)# exit
```

Refer to the manuals of the respective devices for details on the setting method.

3. Registering device

Refer to "[5.2.7 Registering Manually Embedded Device](#)" and "Register Storage Device" in the *Web Console Guide* to register the device.

For the registration, set the following for the device:

- Select "Other" for the product type and storage type
- Enter "Brocade" in the manufacture name

Note

- SNMP protocol version 1 is used for SNMP Trap received from the VDX series.
- The ping command is used for polling monitoring.

4.2.4 PRIMERGY BX Ethernet Fabric Switch

Refer to "4.2.3 VDX Series" for information on how to set up the environment.

4.3 Disk Storage Systems and All Flash Arrays

4.3.1 ETERNUS DX Series, ETERNUS AF All-Flash Arrays

4.3.1.1 Setting

To manage the ETERNUS DX series and the ETERNUS AF All-Flash Arrays with this software, set up devices while keeping in mind the points listed below.



See

.....
Refer to the ETERNUS Web GUI manual supplied with the respective device for settings details.
.....

This product can be used for SNMP communication with the ETERNUS Disk storage system using SNMPv1 or SNMPv3. When using SNMPv3, start from step 2.

1. SNMP (agent) environment setting when using SNMPv1

This product communicates with an ETERNUS Disk storage system using SNMP. The SNMP Community name that this product uses for SNMP communication is specified when the ETERNUS Disk storage system is registered. If the SNMP Community name setting is default, this product communicates with the ETERNUS Disk storage system by "Community name: public". Therefore, the Community name on the ETERNUS Disk storage system side should be set to either of the following step a and b. Also, the Community name can be changed to other than "public". When using other than the default Community name, follow step c below for the device and set the Community name for this product from Web Console.

In addition, for storage devices other than the ETERNUS DX60 S2, set "ViewALL" in the MIB view to the Community name.

a. Community is not set. (default)

Many devices have "public" (Access: read Only, address: all hosts, and view: all Object) set as the default SNMP Community access.

However, storage devices other than the ETERNUS DX60 S2 have no default SNMP Community access. Access must be explicitly enabled. Enable access by following either step b or step c below.

b. Specify "public" for the Community name explicitly. (*1)

c. Specify other than "public" for the Community name explicitly. (*1)

*1: Select either of the following methods as an SNMP manager when the Community name is set:

- Specify the Management Server or select it.

Select this when permitting access from just the Management Server only.

When the Management Server is running in a clustered system, the Management Server communicates with the ETERNUS Disk storage system by using the physical IP address of the clustered system. For this reason, add only the number of physical IP addresses as an SNMP manager.

- Specify "0.0.0.0" or keep it unselected.

Select this when permitting access from all the SNMP managers.



Example

.....
"ssc" Is Specified Community Name for SNMP Communication with Management Server (IP Address: 192.0.2.10):

```
community ssc 192.0.2.10
```

"ssccom" Is Specified Community Name for SNMP Communication with Management Server Operating as Clustered System Operation (Physical IP_A: 192.0.2.11, Physical IP_B: 192.0.2.12):

```
community ssccom 192.0.2.11
community ssccom 192.0.2.12
```

2. SNMP (agent) environment setting when using SNMPv3

The SNMP user information to be used in SNMP communications with this product is specified when registering the ETERNUS Disk storage system. Because of this, you must set the user for accessing the device side SNMP agent in advance using the "Setup SNMP User" screen of ETERNUS Web GUI.

In addition, set the MIB view for the user that was set at this time from "ViewALL". Refer to the storage device manuals for details on the set method.

When operating the Management Server in a clustered system, you must add the same number of physical addresses in order to communicate with the ETERNUS Disk storage system using the physical IP address of the clustered system.

3. Trap setting in SNMP Agent Configuration Setting

When sending SNMPv1 Traps

Since the manager's SNMP Trap receiving module has not judged this Community name, all SNMP Traps sent to the Management Server can be received. Even in an environment where the Community name is specified other than default, it is not necessary to change this Community name in trap setting. The Community name of the trap destination is recommended to be set as "public", not same as the Community name of SNMP Community under the consideration of security.

When sending SNMPv3 Traps

For the SNMP (agent) environment settings, SNMPv3 Traps can be sent by specifying the name of the user specified in step 2.

In the ETERNUS Disk Storage system, if the number of the SNMP Trap transmission destination is set to the maximum number of register, no new IP address can be added. Therefore, make sure that the number of SNMP Trap transmission destination is less than the maximum number.

4. Device name setting (SysName) in SNMP (Agent) environment settings

Register a nickname for storage management. This software uses this value as SysName.

When changing the device name while AdvancedCopy Manager CCM is in use, refer to "Changing Registered Information for ETERNUS Disk Storage System" in the *AdvancedCopy Manager Operation Guide for Copy Control Module* to change the registered information.

5. Network environment settings

If the Management Server resides outside the location indicated by the IP address, subnet mask, gateway, and subnet, the subnet of the Management Server must be registered as the destination network address.

 **Point**

When Management Server Is in Cluster:

If you specify the IP address of the Management Server as a destination network address, specify both physical IP address of each node on the Management Server in a cluster and IP address taken over.

6. Generation of SSH server key (for storage devices other than the ETERNUS DX60 S2)

Execute the generation of the SSH server key needed for the SSH communication between this software and the devices.

The bit number of the SSH server keys is arbitrary.

7. Creation of Software role account (for storage devices other than the ETERNUS DX60 S2)

Create an account for this software to manage a device.

Note the following restrictions about the account.

- The root user cannot be used to manage this software.
- The account should be a software role.
Select Software as the user level when creating the account
- Specify this account information when you register a device in this product.

If the user name and password are changed on the device side after having been registered to this product, the device information cannot be properly collected nor configured from this product.

Change the device management account information in Web Console to make it match with the change in settings made on the device side.

8. SSL Certificate generation or registration (for storage devices other than the ETERNUS DX60 S2)

This product uses an HTTPS connection to manage the storage devices (default).

In order to be able to use a HTTPS connection with the storage devices, choose one of the following settings:

- Create Self-signed SSL Certificate Setting
- Register SSL Certificate Setting

9. Logoff

Be sure to log off from ETERNUS Web GUI after completing the setup in ETERNUS Web GUI.

You must be logged off from ETERNUS Web GUI in order to perform registration of the device to this product.

10. ETERNUS Web GUI network settings (for the ETERNUS DX60 S2 only)

Under the ETERNUS Web GUI Global Settings tab, click **Setup Network Environment** in the Network Settings and check the settings for the following items:

- Check that "Enable" is specified for Maintenance connections.
- Check that "Disable" is specified for Maintenance-Secure connections.

Information

For this software, the host access control function of ETERNUS Disk storage system is called "host affinity function", and zone numbers are called "AffinityGroup numbers".

To use this software to set the server node and storage access path (the SAN environment containing the Fibre Channel switch), refer to "[6.2.3.1 Preparations](#)". The following settings must also be configured in the device.

The following settings can be set up from this product, so it is not necessary to perform setup from the device side.

- RAID Settings
- Storage's AffinityGroup/Zone Settings
- Connection Configuration Settings
- Host Interface Settings
- HostWWN Definition
- HostWWN-AffinityGroup/Zone Definition

Date-time Settings

To set the date-time for the device, perform the procedure shown below. If the date-time is set during performance monitoring, briefly stop performance monitoring and then restart it.

1. Stop performance monitoring of the device for which date-time is set.
2. Set date-time for the device.
3. After the date-time settings are complete, restart performance monitoring of the device.

Device Configuration Changing

To change the configuration for the device, the device configuration information kept by performance management must be updated. Update the configuration information according to the procedure in "[7.2.9 Updating Configuration Information](#)".

4.4 ETERNUS AX/HX series, ETERNUS AB/HB series

This software supports fault management and linkage to the Management Software for the ETERNUS AX/HX series and the ETERNUS AB/HB series. This software decodes SNMP Traps that are sent from a device and displays them.



.....
The ETERNUS AB/HB series is monitored using the SNMPv2c protocol.
.....

Configuration Procedure for the Device

1. Connecting to the network

Connect the management port of all the controllers installed in the device to the network. Refer to the manuals of the device for details on how to connect to the network.

2. SNMP Trap setting

Perform the setup of the SNMP Trap transmission destination for the device so that SNMP Traps of the device can be transmitted to the Management Server. If the Management Server is operated in a cluster configuration, set the logical IP address of the cluster as the destination.

3. Management software linkage

Use the management software provided for device to check the detailed device status and manage the various settings of the device. The management software can be called directly from Web Console. In advance, setup the URL of the management software on Web Console.

4. Access path setting

This software does not set the Fibre Channel Interface for the device, but performs the access path settings by using SwitchZoning and performs the SwitchZoning displaying.
When setting the Fibre Channel Interface, refer to the manuals of the device.

Configuration Procedure for This Product

1. Registering the device

Specify the management port IP address of all the controllers installed in the device to register them. Refer to "[5.2.7 Registering Manually Embedded Device](#)" for information how to register a device.



-
- If some of the installed controllers are not registered, SNMP Traps sent from the device may not be displayed. To properly monitor the state of the device, register all the controllers installed in the device. For example, when registering a device installed with two controllers, perform a registration for each controller by specifying the IP address of the management port and the serial number of the device that acquired the license key. When registering controllers in the same device, enter the same serial number.
 - For the device name specified when registering a controller, to easily identify the controller output by an event, it is recommended that you register a name that combines the device name of the ETERNUS AX/HX series, ETERNUS AB/HB series with the controller name (for example, "HB5100_CNTLA" and "HB5100_CNTLB").
-

2. Registering the license

Register the license in one of the registered controllers by entering the license key. License registration to the other controllers in the same device is not necessary.

If multiple devices are being managed, a license is required for each device.

3. Registering the port

When using the access path setting, register the HBA port for each controller that is installed.

4.5 NetApp FAS Series, FAS Series (with clustered Data ONTAP), and AFF series Network Disk Storage System

This software supports fault management and linkage to the Management Software for NetApp FAS Series, and AFF series. Embed a device and register its IP address by referring to "[5.2.7 Registering Manually Embedded Device](#)". This software decodes SNMP Traps that are sent from a device and displays them.

1. Connecting to the network

At the device, perform the network connection settings to connect to the network. Refer to the manuals of the device for details on how to perform it.

2. Activating SNMP

Enable the SNMP function so that device information can be acquired using SNMP. Refer to the manuals of the device for details on how to enable it.

The device polling function uses SNMP to acquire the device status of the NetApp FAS Series. If the SNMP Community name is default, this software uses the Community name "public." However, it is also possible to specify the Community name. It is possible to change the Community name this software uses for a device from Web Console.

3. SNMP Trap setting

Perform the setup of the SNMP Trap transmission destination for the device so that SNMP Traps of the device can be transmitted to the Management Server. If the Management Server is operated in a cluster configuration, set the logical IP address of the cluster as the destination.

4. Management software linkage

Use the management software provided for device to check the detailed device status and manage the various settings of the device. The management software can be called directly from Web Console. In advance, setup the following address as the management software on Web Console. The *ipAddress* is the IP address of the device.

```
"http://ipAddress/na_admin/"
```

4.6 ETERNUS CS800 M1/CS800 S7 De-dupe Appliance

This software supports fault management (SNMP Trap monitoring only) for the ETERNUS CS800 M1/CS800 S7.

1. Connecting to the network

At the device, perform the network connection settings to connect to the network. Refer to the manuals of the device for details on how to perform it.

2. SNMP Trap setting

Perform the setup of the SNMP Trap transmission destination for the device so that SNMP Traps of the device can be transmitted to the Management Server. If the Management Server is operated in a cluster configuration, set the logical IP address of the cluster as the destination.

3. Registering the device

Refer to "[5.2.7 Registering Manually Embedded Device](#)" for registering the device.

Specify the IP address of the device during the registration operation.

4.7 Tape Library Device

4.7.1 Tape Library Device ETERNUS LT20 S2/LT140/LT260/LT270 S2

This software supports fault management and linkage to the management software, for the ETERNUS LT20 S2/LT140/LT260/LT270 S2.

1. Connecting to the network

At the device, perform the network connection settings to connect to the network. Refer to the manuals of the device for details on how to perform it.

2. SNMP Trap setting

Set the SNMP Trap destination address to the IP address for the Management Server on which this software is running, using management software for the tape library server you use. If the Management Server is operated in a cluster configuration, set the logical IP address of the cluster as the destination.

Restart the device after the setting.

3. Management software linkage

Use the management software provided with a tape library device for device management such as checking the detailed status of the tape library device and the various settings. The management software can be called directly from Web Console. In advance, setup the following address as the management software on Web Console. The *ipAddress* is the IP address of the device.

```
http://ipAddress/
```

4. Access path setting and display

This software does not set the Fibre Channel Interface for the tape library device, but displays access paths by using SwitchZoning or StorageAffinity on the server node.

When setting the Fibre Channel Interface, use management software for the tape library device.

4.7.2 Virtual Tape Appliance ETERNUS CS2000

This software supports fault management (SNMP Trap monitoring only) for the ETERNUS CS2000.

1. Connecting to the network

At the device, perform the network connection settings to connect to the network. Refer to the manuals of the device for details on how to perform it.

2. SNMP Trap setting

Make the required settings on the CS console so that SNMP Traps of the device are sent to the Management Server. If the Management Server is operated in a cluster configuration, set the logical IP address of the cluster as the destination.

3. Registering the device

Refer to "[5.2.7 Registering Manually Embedded Device](#)" for registering the virtual tape appliance device. IP address of ETERNUS CS2000 must be set in "IP address" for the registration.

Chapter 5 Startup and Setting


This chapter explains device definitions and operation flowcharts required for operating this software.

5.1 Opening and Closing

The Storage Cruiser function is operated form Web Console.

Refer to the *Web Console Guide* for information on how to start up and shutdown.

5.2 Registering Device

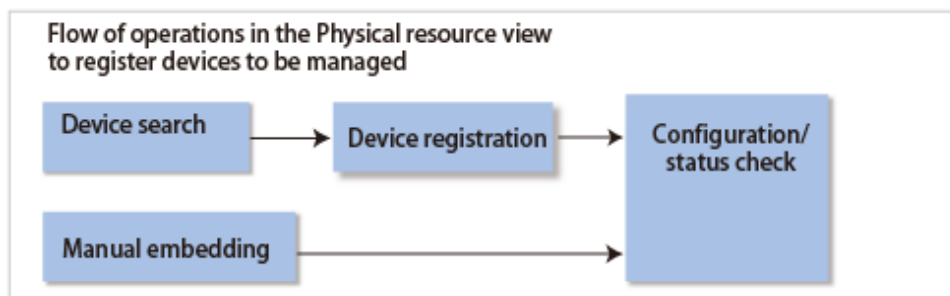

5.2.1 SNMP User Information Registration

For this product, when managing the device using SNMPv3, you must register the user information that is used to access the device MIB and the user information for sending the SNMP Trap. Refer to "Display/Add/Change/Delete SNMPv3 User Configuration" in the *Web Console Guide* for the registration information.

5.2.2 Device Search

For device management using this software, it is necessary to first conduct a device search. There are two methods for conducting a device search.

- [Detecting for Devices in Subnet Automatically](#)
- [Detecting Device by Specifying IP Address](#)

Information

- The following devices are automatically registered when they are found:
 - Storage Cruiser's agent
 - VM host and VM guest in VMware vSphere
- Even when detected a server node, the host name may not be resolved. In this case, the host name is displayed in the format of "IP-IP address".
- Even if an IPv6 address exists in a server to be searched, the Storage Cruiser's agent running on an HP-UX shown below supports only the search with IPv4 address.

Detecting for Devices in Subnet Automatically

To detect devices in a subnet automatically, specify the target subnet on the Web Console screen. Through detection of the devices within the subnet, the automatic detection-compatible devices supported by the Manager are displayed on the screen. SNMP-based broadcasting processes are performed internally, and the devices supported by this software are automatically displayed. Devices must have SNMP access enabled for the Manager.

Devices with IPv6 address are not searched. If any device registered with IPv6 address exists, this function is not available. When managing any device with IPv6 address, specify its IP address to search it.

Devices using SNMPv3 are not searched. When managing any device using SNMPv3, specify its IP address to search it.

Note

- Devices within subnets directly connected with the Management Server are subject to automatic detection regardless of the subnet being specified.
- An environment which has broadcast processing pass through the target subnet is required for SNMP-based broadcast processing to be performed internally.
- If the devices in the subnet cannot automatically be detected, check "[1.1 Support Levels](#)". For devices that do not support [Detect device in subnet] as described in "[1.1 Support Levels](#)", use the method described below "[Detecting Device by Specifying IP Address](#)".
- If the IP address of Subordinate CM in an ETERNUS Disk storage system is set, both IP addresses of Main CM and Subordinate CM are detected. Refer to "[5.2.3 Registering Device](#)" to specify the device with the IP address of Main CM. If the IP address of Subordinate CM is specified, the access path cannot be set.

Detecting Device by Specifying IP Address

- To detect Storage Cruiser's agent
Specify the IP address for the target device.
- To detect the VM host and VM guest in VMware vSphere
Specify the IP address for the VM Host. Also, input the username and password used during login to the VM Host.

Information

- By registering a VM host, all of the VM guests on the VM host are automatically registered.
- With Web Console, perform the **Reload Conf.** operation for the VM host to detect VM guests created after the VM host was registered.

Note

- To register a VM host (and its VM guests) with this software, the IP address, login name and password of the VM host are required.
- It is not possible to specify and register only VM guests.
- To detect any device other than above devices
When using SNMPv1, specify the IP address and the SNMP Community name for the target device.
When using SNMPv3, specify the IP address and the SNMPv3 username for the target device.

Note

- If such a search for a product in the ETERNUS DX series or the ETERNUS AF All-Flash Arrays fails, check the following items:
 - In the case that the SNMP environment has not been set up from ETERNUS Web GUI since installation of the device, the SNMP agent of the device is not active. Set up the SNMP environment as instructed in "[4.3.1 ETERNUS DX Series, ETERNUS AF All-Flash Arrays](#)".

- For the device detection, specify the IP address on the Main CM side. If the IP address on the Subordinate CM side was specified for detection or registration, access path settings are not possible.
- If the search for Storage Cruiser's agent fails, check whether the Storage Cruiser's agent is activated and that its level is compatible. If not activate, Storage Cruiser's agent. If the level is not compatible, upgrade the Storage Cruiser's agent.
- If the search for Brocade Fibre Channel switch or PRIMERGY Fibre Channel switch blade fails, check the settings of SNMP MIB on the device side. Refer to "[SNMP-MIB Setting](#)" in "[4.2.1 Brocade Fibre Channel Switch](#)" for details.

5.2.3 Registering Device

To make this product's managed device, it is necessary to register a device which has already been detected using Web Console.

- User name and password

To manage the device, this software must recognize the user name and password associated with the device. Since each device requires different information, the items displayed in the dialog change accordingly.

Devices	Required Information
Brocade Fibre Channel switch PRIMERGY Fibre Channel switch blade VDX series PRIMERGY BX Ethernet Fabric Switch	User name and password with administrator privileges
ETERNUS DX series (excluding the ETERNUS DX60 S2) ETERNUS AF All-Flash Arrays	User name and password of Software roll
ETERNUS DX60 S2	User name and password with administrator privileges

- Check box of "Enable fault monitoring via SNMP Traps on this device"

When a device using SNMPv1 is registered, this software automatically sets the SNMP Trap destination address for the device so that it can monitor for faults using SNMP Traps. Refer to "[1.1 Support Levels](#)" for information about the device types for which the address automatic setting function can be used.

Information

- Refer to "[5.2.5 Function for Setting Event Notification Destinations](#)" for information about fault monitoring required for a registered device after the function is disabled. Refer to "[5.2.6 SNMP Trap Transmission Place Automatic Setting Function](#)" for a detailed explanation of the automatic setup.
- The check box of "Enable fault monitoring via SNMP Traps on this device" is invalid for the device which does not support the SNMP Trap destination address automatic setting function.
- To update the device component status automatically, you must enable the SNMP Trap destination address automatic setting function. For devices that support automatic updates of the device component status, refer to "[2.5 Monitoring Device Component Status](#)".

Note

When registering users with a security level other than an administrator level on the switch, remove the check here. When requesting fault monitoring with this product, log in to the device and configure the destination of the SNMP Trap so that the SNMP Trap can be sent from the Management Server. For details on the configuration, refer to the manual attached to the device.

Table 5.1 Configuration Details on SNMP Trap Destination Address

Item	Configuration Details
SNMP Trap destination	Management Server IP Address If the Management Server is clustered system, it is necessary to set the logical IP address of the cluster.
SNMP Community name	public
SNMP version	1
Port number	162
Level	Warning

- Checkbox for enabling the zoning setting

When a fibre channel switch device is registered, this software sets up the device such that zoning setup can be done. Select this option if performing setup of the access path from this software. If you do not select this option, operations start as is (i.e. with no security) for the fibre channel switch device which had no zoning setup performed (meaning this switch is in a No Security status).

 **Note**

When registering users with a security level other than an administrator level on the switch, remove the check here.

 **Note**

- If a device to be managed cannot be accessed, it cannot be registered.
- The devices in the following status could not be registered. It is recommended to log out and then register them.
 - For the Fibre Channel switch
 - SSH is used to log in to a target device.
Action: Log out, and then perform the registration process.
 - For the ETERNUS DX series and the ETERNUS AF All-Flash Arrays
 - User is logged into the target device's ETERNUS Web GUI.
Action: Log out, and then perform the registration process.
- During the device registration process, if the VDX series and PRIMERGY BX Ethernet Fabric Switch have already been manually registered, be sure to delete the manually registered devices first and then perform registration. If registration is performed when manually registered devices remain registered, no information can be obtained from the Fibre Channel switch. In this case, delete target manually registered devices.

5.2.4 Deletion

This function cancels the registration of a device being managed by this software, thereby deleting that device from the range of management. It is used in such cases as when a device has been removed.

 **Information**

Individual VM guests for VMware vSphere can be deleted from the management target for this product by first deleting the VM guest using VMware management software and then deleting the VM guest using this procedure. If the VM guest is still on the VM host, it is registered again automatically.

Note

- You cannot delete a server which has volume definition(s) of Backup management of AdvancedCopy Manager or Replication Group definition(s) of Replication management of AdvancedCopy Manager. You should delete the volume definition(s) of Backup management of AdvancedCopy Manager or Replication Group definition(s) of Replication management of AdvancedCopy Manager before the server deletion.
 - To delete a VM host in VMware vSphere from this product, delete all VM guests on the VM host to be deleted in advance.
 - In this product, even if an SNMP Trap destination address is not automatically set, when deleting a target device, if the IP address of the Management Server is set to the SNMP Trap destination address of the device, its setting is deleted.
-

Execute the deletion of the device from Web Console. The disk storage system's copy sessions are not deleted. When the device is removed from this product, the event notification settings for SNMP Traps that were changed when the device was registered return to the settings prior to the registration of the device. Refer to [Point] in "[2.5 Monitoring Device Component Status](#)" for details.

If the deleted device has been detected again by this software's automatic device detection it is re-displayed.

It is also possible to delete only the access path existing between the Managed Server and the device that is the target for deletion.

Note

About Selection of **Remove Access Path** When Deleting Devices

- When **Remove Access Path** is selected.
The access path set to the device to be deleted is deleted.
As the zoning information is deleted from the switch on the access path route, perform the **Reload Conf.** operation for the switch on the access path route after deleting the device. The zoning information set for the switch is changed.

The following access paths are not deleted even if **Remove Access Path** is specified when deleting the device:
When those access paths need to be deleted, delete them before deleting the device.
 - Access path of an iSCSI port
 - VVOL access path of an iSCSI port
 - Access path of a SAS port
 - VVOL access path that the virtual machine is operating
 - When **Remove Access Path** is not selected.
The access path set to the device to be deleted is not deleted.
If you want to continue to operate the device to be deleted as a non-managed device for this product, or if it is necessary to leave the access path settings, do not select **Remove Access Path**.
-

5.2.5 Function for Setting Event Notification Destinations


If fault monitoring is required for a device after the SNMP Trap transmission place address automatic setting function is disabled for the device during the device registration process, it is possible to perform setup from Web Console.

5.2.6 SNMP Trap Transmission Place Automatic Setting Function

The SNMP Trap transmission place automatic setting function, which is executed at the time of a device registration, and its accuracy are explained with the figures below.

Management Server with Only One IP Address

This software automatically identifies IP address A of the Management Server and sets "IP address A" as the SNMP Trap transmission place for each managed device.

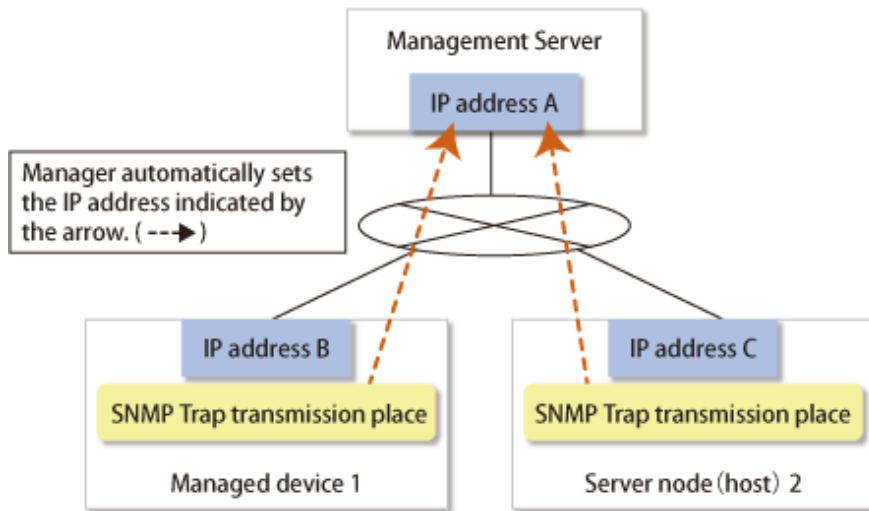


Management Server with Multiple IP Addresses

Such Management Server has a cluster or redundant LAN configuration or is connected to multiple subnets, and it has two or more IP addresses.

From the multiple IP addresses of the Management Server, this software selects the one that is most suitable as the transmission IP address for each device. However, this logic does not work in all cases. In the environment shown in the figure below, for example, this software may set "IP address D" as the SNMP Trap transmission place for Managed device 1. This is because addresses cannot be automatically detected in some cases due to the nature of current LAN technology. In such an environment, therefore, it is necessary to check the SNMP Trap transmission place setting of each device after the device registration process and, if required, set SNMP Trap transmission places directly on the device side.

In the figure below, specify "IP address A" as the SNMP Trap transmission place for Managed device 1, and "Logical IP address F" as the SNMP Trap transmission place for Server node 2. Refer to "2.1 Receiving SNMP Traps" for information about how to set SNMP Trap transmission place addresses of server nodes manually.

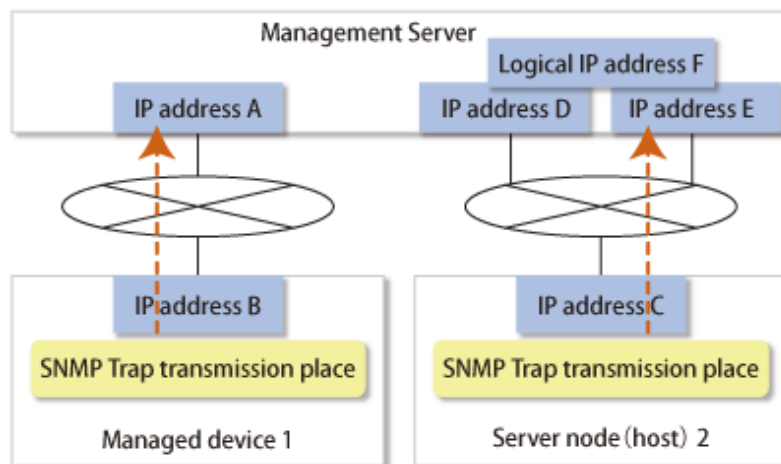

Point

In order for the server node to send the SNMP Trap, agent must be installed on the host.

Note

This function is not available for storage devices and switches registered using SNMPv3. Perform the SNMP Trap transmission setting manually for the storage device or switch using SNMPv3.

5.2.7 Registering Manually Embedded Device

Some devices (such as Managed Servers without an agent, tape units, ETERNUS AX/HX series, ETERNUS AB/HB series, and NAS devices) cannot be retrieved by device search. Register these devices with this software by using the manual embedding function.

Point

- The ETERNUS AX/HX series, ETERNUS AB/HB series, NetApp FAS Series, NetApp FAS Series (with clustered Data ONTAP), and NetApp AFF series are registered as "Other" for the storage type during the registration.
- For the manually embedded device that is registered as "Other" for the storage type, "Unknown" is displayed in the **Storage Type** field on the device details screen. Refer to "Display Storage Device" in the *Web Console Guide* for information about how to display the device details screen.

In the case of ETERNUS AX/HX series, ETERNUS AB/HB series, NetApp FAS Series(with clustered Data ONTAP), and NetApp AFF series

Specify the following product type at registration.

Device Type	Product Type to Be Specified
ETERNUS AX/HX series	ETERNUS AX/HX
ETERNUS AB/HB series	ETERNUS AB/HB
NetApp FAS Series (with clustered Data ONTAP) NetApp AFF series	NR1000 or ETERNUS AX/HX

In the case of NetApp FAS Series and NetApp FAS Series (with clustered Data ONTAP)

Specify an operation mode according to the firmware version number.

The registered operation mode can be viewed on Main pane of the Detail screen.

Firmware Version Number	String Included in Firmware Name	Operation Mode
Data ONTAP 7.x	(Any string)	7-Mode
Data ONTAP 8 - 8.2.x	7-Mode	
Data ONTAP 8 - 8.2.x	Cluster-Mode	clustered Data ONTAP
Data ONTAP 8.3 or later	(Any string)	

5.3 Checking SNMP Trap Settings

With the following methods, check whether SNMP Trap monitoring is set up correctly in the device that supports the SNMP Trap monitoring for fault management. Refer to "[1.1 Support Levels](#)" for the devices that support SNMP Trap monitoring.

[Test 1] Check Whether Every Device (Excluding Server Node Agent) Can Correctly Receive SNMP Traps

This software receives generic traps 0 to 5, which are SNMP Traps not unique to a specific vendor, and it decodes their contents and displays information about each event (that does not use Systemwalker Centric Manager linkage or Shell/bat linkage.) As one of generic traps 0 to 5, a COLD START trap is issued by an ordinary device. When using this trap to test whether the software can correctly receive an SNMP Trap.

A device sends the COLD START trap and other traps by turning OFF and ON the device to be managed, performing a variety of setup tasks (setup of the SNMP environment for ETERNUS), doing other such work. Check whether the event is displayed with regard to the above operation and trap.

However, generic traps 0 to 5 are not normally required, so after the test is completed, you can disable display of generic traps 0 to 5 by using the following method:

Edit the following definition file:

Platform of Manager	File Location
Windows	\$ENV_DIR\Manager\etc\opt\FJSVssmgr\current\sanma.conf (\$ENV_DIR means "Environment Directory" specified at the Manager installation.)
Solaris OS, Linux	/etc/opt/FJSVssmgr/current/sanma.conf

Edit one description as follows (0=Hide, 1=Show): `DISPLAY_SNMP_STANDARD_EVENT = 0;`

Using Web Console, execute re-read definition file and import the definition files into the program.

[Test 2] Check Whether Server Node (Agent) Can Correctly Receive SNMP Traps

The server node (Agent) provides the following command that issue SNMP Trap for the test.

Platform of Agent	Command Location
Windows	\$INS_DIR\Agent\bin\traptest [<i>ipAddress</i>] (\$INS_DIR means "Program Directory" specified at the Agent installation.)
Solaris OS, Linux, HP-UX	/opt/FJSVssage/bin/traptest [<i>ipAddress</i>]

Only in the environment where the host holds two or more IP addresses, a server node's IP (Agent start IP address) address which the manager recognizes is specified to ip-address.

Make sure the IP address input is correct, if the event cannot be received correctly.

If SNMP Trap monitoring is set up correctly in the device, an event is issued to Web Console when the command is executed.

If you change the action for SNMP Trap, refer to "[A.5 SNMP Trap XML Definition File](#)".

 **Information**

.....
The community name of a test SNMP Trap is fixed to "public".
.....

[Test 3] Check Systemwalker Centric Manager Linkage and Shell/Bat Linkage of Events

Events cannot be linked with Systemwalker Centric Manager or Shell/bat for the standard SNMP Trap. To test the Systemwalker Centric Manager linkage and Shell/bat linkage of an SNMP Trap from a device, execute a tentative SNMP Trap command for the test on the Management Server. This command changes internal information of an SNMP Trap so that the SNMP Trap seems to have been sent from a device being monitored, and it sends such an SNMP Trap to the system's own port for receiving the SNMP Trap. Since descriptions of events are linked to Systemwalker Centric Manager and Shell/bat, Systemwalker Centric Manager linkage and Shell/bat linkage can be tested. To test the Shell/bat linkage of an SNMP Trap of the server node agent, use the method described in [Test 2].

For the IP address of an argument, specify the IP address of a device (ETERNUS Disk storage systems or Fibre Channel switch) registered with this software. The contents of this simulated SNMP Trap are loaded into the event log.

To generate a simulated SNMP Trap for the ETERNUS DX series and the ETERNUS AF All-Flash Arrays that are registered in this software, execute the commands shown below. Using these commands, the manager creates the

simulated trap, receives the same trap, and checks whether the displayed event and shell/bat linkage are correct. Here, the simulated trap is a fan fault with "public" as the Community name. This simulated trap has arbitrary test information that is distinct from actual trap information.

Also, the ETERNUS Disk storage systems can issue an SNMP Trap from the device by using the "SNMP Trap sending test" function of ETERNUS Web GUI. Though the test uses a simulated trap, its results are the same as those from a test that sends a real trap and checks the response, since the trap is sent from an actual ETERNUS Disk storage systems.

Platform of Manager	Command Location
Windows	<code>\$INS_DIR\Manager\opt\FJSVssmgr\bin\grtraptest <i>ipAddress</i></code> (<code>\$INS_DIR</code> means "Program Directory" specified at the Manager installation.)
Solaris OS, Linux	<code>/opt/FJSVssmgr/bin/grtraptest <i>ipAddress</i></code>

To generate a simulated SNMP Trap for a Fibre Channel switch that is registered in this software, execute the commands shown below. (A simulated error that is a port fault is issued.):

Platform of Manager	Command Location
Windows	<code>\$INS_DIR\Manager\opt\FJSVssmgr\bin\swtraptest <i>ipAddress</i></code> (<code>\$INS_DIR</code> means "Program Directory" specified at the Manager installation.)
Solaris OS, Linux	<code>/opt/FJSVssmgr/bin/swtraptest <i>ipAddress</i></code>

Note

- Execute [Test 1] and [Test 3] on devices that are using SNMPv1. Use the device side function to confirm the receipt of the SNMP Traps from devices that are using SNMPv3.
- The test trap Event Priority of the ETERNUS AB/HB series is Information. This is not displayed in the event log by default. To display the Information SNMP Trap that includes the test trap, customization of the SNMP Trap XML definition file is required. Refer to "[Convert Tag \(Option\)](#)" in "[A.5 SNMP Trap XML Definition File](#)" for information on how to customize it.

Chapter 6 Operation

The configuration management can be performed with Web Console. This chapter explains how to use the screens of Web Console.

6.1 Resource Management

For the device registered to this product, it is possible to use various functions via Web Console.

6.1.1 RAID Group Management

With this product, it is possible to manage the storage device's RAID groups. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Display the RAID group status
- Create/Delete the RAID group
- RAID group Eco-mode settings



Note

In this product, the External RAID groups that are used for the Non-disruptive Storage Migration cannot be operated or displayed. Perform these operations with ETERNUS Web GUI.



Point

In the "Display the RAID group status" operation, the following information is also displayed.

- Whether there is data access failure in the RAID group during redundancy loss
- Whether there is access failure to the disks that configure the RAID group

Note that the above information can be displayed for the following storage devices and firmware versions.

Storage Device	Required Firmware Version
ETERNUS DX S6 series	All versions
ETERNUS DX S5 series ETERNUS DX8900 S4 ETERNUS AF S3 series	V11L50-1000 or later
ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4) ETERNUS AF S2 series ETERNUS AF series	V10L90-1000 or later

6.1.2 Volume Management

With this product, it is possible to manage the storage device's volume. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Create/Delete Volume

- Format Volume
- Expand Thin Provisioning Volume Capacity
- Delete Snap Data Pool Volume
- Encrypt Volume
- Equalize Thin Provisioning Volume
- Enabling/Disabling Extreme Cache(Read)
- Enabling/Disabling Thin Provisioning Volume Allocation
- Enabling/Disabling FTV Allocation

Note

- The number of maximum volumes that can be made with this product at a time is 128. Make them by dividing into two or more times when you make volumes that exceed 128.
- The ETERNUS DX S6/S5 series, DX8900 S4, and the ETERNUS AF S3 series have an upper limit for the total capacity of volumes that can be created in a single operation. When creating volumes with a total capacity that exceeds the upper limit, create them in several batches. Refer to the *ETERNUS Web GUI User's Guide (Settings)* for details.
- On Web Console, the following operations cannot be performed:
 - Delete reservation of Snap Data Pool Volume
 - Create and format volumes of LUN concatenation
 - Create, delete and format Wide Striping Volume
 Perform those operations with ETERNUS Web GUI.
- In this product, the volumes that are used for the Non-disruptive Storage Migration cannot be created. Create the volumes with ETERNUS Web GUI.

6.1.3 Thin Provisioning Management

With this product, it is possible to manage the storage device's Thin Provisioning. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Display the Thin Provisioning Pool
- Display the Thin Provisioning Pool status
- Change the Thin Provisioning Pool threshold value
- Create/Delete the Thin Provisioning Pool
- Display the Thin Provisioning Pool Capacity graph
- Expand the Thin Provisioning Pool Capacity
- Format the Thin Provisioning Pool
- Enabling/Disabling Thin Provisioning Pool Deduplication/Compression
- Display the Thin Provisioning Pool Deduplication/Compression status
- Display the data reduction rate, data size before reduction, data size after reduction, and GC remaining size of Thin Provisioning Pool Deduplication/Compression

- For the Deduplication/Compression, the ETERNUS DX900 S6/S5, DX8900 S6/S4 can use Compression only.
- The data size before reduction, data size after reduction, and GC remaining size can be displayed only if the target device is an ETERNUS DX S6/S5 series, DX8900 S4, or an ETERNUS AF S3 series. Note that to display the GC remaining size, the firmware version of the target device must be V11L40 or later.
- The displayed content for the Data reduction rate, Data size before reduction, Data size after reduction, and GC remaining size is as follows.

Displayed Item	Displayed Content
Data reduction rate	Reduction rate of the data due to Deduplication or Compression
Data size before reduction	Total data size before compressing a volume enabled with Compression
Data size after reduction	Total data size after compressing a volume enabled with Compression
GC remaining size	Size of a Thin Provisioning Pool enabled with Deduplication or Compression temporarily used by the storage device for Deduplication or Compression

The following information can also be displayed in a graph using the Dashboard. Refer to "Operations for Capacity" in the *Web Console Guide* for details.

- Thin Provisioning Pool capacity
- TPV capacity
- NAS file system capacity

When you create a Thin Provisioning Pool, Deduplication or Compression of Thin Provisioning Pool can be enabled. When you enable Deduplication or Compression of a Thin Provisioning Pool in the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5), or the ETERNUS AF S3 series, a Container Volume is automatically created. When you enable Compression of a Thin Provisioning Pool in the ETERNUS DX900 S6/S5, DX8900 S6/S4, a Container Volume is automatically created. When you enable Deduplication or Compression of a Thin Provisioning Pool in any other storage device, a Container Volume and a Block Map Volume are automatically created.

In addition, information related to the Thin Provisioning is updated every hour.

- Updated Thin Provisioning Pool information

As shown in the following table, updated information differs according to the storage device and firmware version.

Storage Devices	Firmware Version	Updated Information				
		Used Capacity	Data Reduction Rate	Data Size Before Reduction	Data Size After Reduction	GC Remaining Size
ETERNUS DX S6 series	All versions	Y	Y	Y	Y	Y
ETERNUS DX S5 series	V11L40 or later	Y	Y	Y	Y	Y
ETERNUS DX8900 S4 ETERNUS AF S3 series	Earlier than V11L40	Y	Y	Y	Y	N
Others	-	N	Y	N	N	N

Y: Updated, N: Not Updated

- Updated Thin Provisioning volume information

The used capacity and original data size are updated only for the following storage devices.

- ETERNUS DX S6 series
- ETERNUS DX S5 series, DX8900 S4, and ETERNUS AF S3 series whose firmware version is V11L40 or later

If you delete the Thin Provisioning Pool for which Deduplication or Compression is enabled, after disabling Deduplication and Compression, delete the Thin Provisioning Pool.

Refer to the following storage device manuals for information on the Deduplication/Compression of Thin Provisioning Pool.

Used Storage Model Name	Manual Name
ETERNUS DX S6 series ETERNUS DX S5 series (excluding the ETERNUS DX60 S5, DX100 S5) ETERNUS DX S4 series (excluding the ETERNUS DX60 S4, DX100 S4) ETERNUS DX S3 series (excluding the ETERNUS DX60 S3, DX100 S3) ETERNUS AF All-Flash Arrays (excluding the ETERNUS AF150 S3)	ETERNUS Web GUI User's Guide (Settings)

 **Point**

The methods for creating Thin Provisioning Pools are automatic creation (recommended) and manual creation. For automatic creation, select "Automatic" in the **Create Mode** field on the **Create Thin Provisioning Pool** screen. For manual creation, select "Manual".

- For the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5), or the ETERNUS AF S3 series
When you create a Thin Provisioning Pool automatically or manually, Deduplication/Compression can be set to "Enable".
For automatic creation, a configuration suitable to Deduplication/Compression is automatically created based on the specified disk type, reliability, and Thin Provisioning Pool total capacity.
For manual creation, a RAID group configuration can be selected.
- For the ETERNUS DX900 S6/S5, DX8900 S6/S4
When you create a Thin Provisioning Pool automatically or manually, Compression can be set to "Enable".
For automatic creation, a configuration suitable to Compression is automatically created based on the specified disk type, reliability, and Thin Provisioning Pool total capacity.
For manual creation, a RAID group configuration can be selected.
- For storage devices other than above
When you create a Thin Provisioning Pool automatically, Deduplication/Compression can be set to "Enable". For automatic creation, a configuration suitable to Deduplication/Compression is automatically created based on the specified disk type, reliability, and Thin Provisioning Pool total capacity. Therefore, before the automatic creation, check that the required number of assigned disks in which two or more RAID groups can be created exist. For the required number of disks to create RAID groups, refer to the manuals of the target ETERNUS Disk storage system.
Deduplication/Compression can be used even if a Thin Provisioning Pool is created manually, but advanced knowledge is required. For manual creation, a RAID group configuration can be selected. To enable Deduplication/Compression for manual creation, after creating a Thin Provisioning Pool by setting the chunk size to 21 MB, enable Deduplication/Compression. To set the chunk size to 21 MB, check the **Deduplication/Compression Ready** checkbox of the **Chunk Size** field on the **Create Thin Provisioning Pool** screen.

In the **Create Thin Provisioning Pool** screen, if you select "Automatic" in the **Create Mode** field, the maximum capacity that can be created for the Thin Provisioning Pool is displayed in the format "(MAX: *maximumCapacityToBeCreated*)" in the **Thin Provisioning Pool Total Capacity** field.

 **Note**

- If the firmware version number of the ETERNUS DX80 S2/DX90 S2 is less than V10L20, a total capacity of Thin Provisioning Pool exceeding 2 TB cannot properly be displayed. When using a Thin Provisioning Pool exceeding 2 TB, the firmware version number must be V10L20 or later:

- For creation of the Thin Provisioning Pool with Deduplication or Compression enabled, even if a Thin Provisioning Pool is successfully created, Deduplication or Compression may fail to be enabled. If it fails to be enabled, take action according to the corresponding message.
- If the state of Deduplication or Compression is "Error", a hyphen (-) is displayed in the **Data Reduction Rate**, **Data Size Before Reduction**, and **Data Size After Reduction** fields. If an automatic update occurs after recovering from the "Error" state, the hyphens (-) change to a numeric value. If you want to update the display manually before the automatic update, perform the Reload Conf. operation for the target ETERNUS Disk storage system.

6.1.4 Advanced Copy Management

With this product, it is possible to manage the storage device's Advanced Copy. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Display Advanced Copy
- Set Up Copy Parameters
- Set Up REC path
- Change REC path line speed
- Acquire REC path information
- Collect REC Device Information
- Measure REC Response Delay Time
- Set Up REC Multiplicity
- Set Up REC Buffer

Point

The REC path line speed can be changed if at least one of the REC connection storage devices is an ETERNUS DX S6/S5 series, DX8900 S4, or an ETERNUS AF S3 series.

See

To check whether the storage device that can set up REC path, refer to the ETERNUS Web GUI manual supplied with each storage device.

6.1.5 Connectivity Management

With this product, it is possible to manage the storage device's connectivity. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Display Connectivity Status (Set Up Host, Set Up Port, Reset Group)
- Create/Delete Host Affinity
- Set Up FC Host/iSCSI Host/SAS Host
- Set Up FC Port/iSCSI Port/SAS Port
- Set Up Affinity Group

- LUN Mapping (direct connection) display

Note

- The iSCSI-RA port Transfer Rate cannot be changed in Web Console. To change a transfer rate, do it with ETERNUS Web GUI.
- Setting the IP address, link local IP address, connection IP address, iSCSI name, or iSCSI alias name of an iSCSI port the same as another iSCSI port may not be allowed. Refer to the following table for information on the duplicate registration:

Storage Model Name	Duplicate Registration				
	IP Address	Link Local IP Address	Connection IP Address	iSCSI Name (*1)	iSCSI Alias Name
ETERNUS DX series (excluding the ETERNUS DX60 S2) ETERNUS AF All-Flash Arrays	N/A	N/A	N/A	N/A	N/A
ETERNUS DX60 S2	N/A	-	-	N/A	N/A

A= Available, N/A=Not Available

*1: If the default iSCSI name has been set, it is able to be registered by duplicating.

- Setting the IP address, iSCSI name, iSCSI alias name, and iSCSI host name of an iSCSI host the same as another iSCSI host may not be allowed. Refer to the following table for information on the duplicate registration:

Storage Model Name	Duplicate Registration			
	IP Address	iSCSI Name	iSCSI Alias Name	iSCSI Host Name
ETERNUS DX series (excluding the ETERNUS DX60 S2) ETERNUS AF All-Flash Arrays	A (*1)	A (*1)	N/A	N/A
ETERNUS DX60 S2	N/A	A	N/A	N/A

A= Available, N/A=Not Available

*1: If both the IP address and the iSCSI name are duplicated, it is not available. If one either is not duplicated, it is available.

- The function of Multi-VLAN of iSCSI port is not supported. On Web Console, a basic IP address (#0) can be set or viewed. However, expanded virtual IP addresses (#1 through #15) cannot be set or viewed. Set and view the configuration information of expanded virtual IP addresses (#1 through #15) with ETERNUS Web GUI.
- If uppercase letters are used for the iSCSI name of a server and a storage device, the connectivity cannot be managed. To manage the connectivity, do not use any uppercase letters in the iSCSI name.
- To delete all the volumes from an affinity group used for Veeam Storage Integration, use ETERNUS Web GUI.

6.1.6 How to Control Eco-mode

This product allows you to use Eco-mode. While checking the RAID group in use from the server, the spindle rotation of disk drive can be turned ON/OFF on a per RAID group basis and the power of the disk drive can be controlled.

There are "Eco-mode for Device" and "Eco-mode for RAID Group" in Eco-mode. "Eco-mode for Device" can be set to ON/OFF and "Eco-mode for RAID Group" can be set ON/ON(power off)/ OFF respectively.

When Eco-mode for Device is set to ON, Eco-mode for RAID Group can be ON/OFF controlled.

When Eco-mode for RAID group is set to ON and Schedule to External, the spindle rotation of disk drives making up the RAID group can be ON/OFF controlled. Also, when Eco-mode for RAID group is set to ON(power off) and Schedule to External, the power of disk drives making up the RAID group can be ON/OFF controlled. However, Eco-mode operation cannot be done toward the RAID groups listed in "[Uncontrollable RAID Groups](#)" of "[6.1.6.1 Concerns in Storage System Operation When Using Eco-mode](#)".

For the Eco-mode operation, the target device is selected with Web Console and the operation is executed.

The executable operations are as follows:

- Setting the device's Eco-mode to ON
- Setting the device's Eco-mode to OFF
- Setting the RAID Group's Eco-mode to ON
- Setting the RAID Group's Eco-mode to ON(power off)
- Setting the RAID Group's Eco-mode to OFF
- Starting up the disk drive for which the RAID Group is configured
- Stopping the disk drive for which the RAID Group is configured



Note

When the RAID group corresponds to either following conditions, the disk drive cannot be stopped from Web Console. Stop the disk drive by the [storageadm spindle stop](#) command:

- The volume whose volume type is WSV exists in the target RAID group.
- The volumes in the target RAID group are concatenated with other RAID groups by the LUN Concatenation.

6.1.6.1 Concerns in Storage System Operation When Using Eco-mode

There are following concerns when using Eco-mode in storage system operation.

Uncontrollable RAID Groups

The Eco-mode is not available for the following RAID groups.

- A RAID group for which the system disk is included
- A RAID group for which it is set in the NAS area
- A RAID group for which the mainframe volumes, MVV volumes or MVV Concatenation volumes are registered
- A RAID group for which no volumes are registered
- A RAID group that includes an SSD
- A RAID group used by Thin Provisioning function
- A RAID group used by Flexible Tier
- A RAID group belonging to a REC disk buffer
- Temporary RAID group created while executing the Logical Device Expansion

Stopping Disk Drives

The ETERNUS Disk storage system stops a disk drive after confirming that its disk drive is not accessed within a certain period of time (30 minutes). Therefore, time more than its period is needed until the disk drive stops actually even if the "stop request" in this software is executed.

The ETERNUS Disk storage system does not stop a disk drive while the configuration of the RAID group or volume is changed and the Advanced Copy to access to its disk drive is done. Therefore, the disk drives may not be stopped even if the "stop request" in this software is executed. The disk drives stop when the procedure is completed in the ETERNUS Disk storage system.

Starting Disk Drives

When it is accessed to the stopped disk drive, the ETERNUS Disk storage system starts its disk drive rotation. However, a few minutes (about three minutes) is needed until the disk drive becomes the accessible status.

Continuous Disk Drive Rotation

When the number of the starting disk drive rotation exceeds the number of certain times (three times), the ETERNUS Disk storage system judges that its disk drive is used with high frequency and does not stop its disk drive rotation. Therefore, even if the "stop request" in this software is executed, after the disk drive status changes from "Idle" to "Active" and there is no access to its disk drive, its disk drive status may not change to "Idle". The number of the starting disk drive rotation per one day is cleared to zero when time of ETERNUS Disk storage system becomes 00:00.

6.1.7 End to End List Display

For the End to End list display, correlating information from the storage to the server is displayed. Using Web Console, select **Correlation** on the Category pane.



Note

- Only volumes that are connected by host affinity function are displayed at End to End list display.
- The [Mount Point] or the [Multipath Driver Device] is displayed only when you selected the [End to End View]. VMware and Hyper-V are not supported.
- If one of the following conditions is satisfied, a hyphen (-) is displayed at the [Mount Point] and the [Multipath Driver Device].
 - The connection configuration is not FC connection.
 - The Managed Server node OS is Windows and the installed Storage Cruiser's agent is Version 15.0.
- If one of the following conditions is satisfied, a hyphen (-) is displayed at the [Mount Point].
 - The corresponding Multipath driver is not installed.
 - The disk partition format is GPT.



See

Refer to "[3.2 Server Node Middleware for Which Management Is Possible](#)" for the details on the corresponding Multipath drivers and file systems.

For VMware

To display the End to End list for VMware's VM guest and the storage device, register the VM host to the Management Server. It is also necessary to register to this software the VMware vCenter Server which manages the VM host registered to the Management Server.

Specify the following for registration of the VMware vCenter Server.

- IP address
- User name

- Password
- Communication port number of VMware vCenter Server (Default: 443)

Note

- The End to End list for VMware supports the display of information for storage devices connected to the VM host with FC, iSCSI and FCoE connections. Storage devices utilizing SAS connections, NPIV connections in an FC environment, and storage devices with the VM guests directly connected with iSCSI are not supported.
- When registering the VM host to the VMware vCenter Server using the host name, set it so that name lookup can be done on the Management Server for the VM host being registered to this product. Perform one of the following setups.
 - Register the IP address and host name for the VM host being set to the VMware vCenter Server to the DNS server which the Management Server references.
 - Define the IP address and host name for the VM host set to the VMware vCenter Server to the /etc/hosts file on the Management Server.
- The display of LUN used for VM guests supports the display of RawDeviceMapping and data store in VMFS format. The display of data store in NFS format is not supported.
- For the following environments, a path is displayed as a single path in the End to End list display:
 - iSCSI multipath environment where two iSCSI ports of a storage system have the same iSCSI name
 - Storage Cluster environment with iSCSI

For Hyper-V (Windows, Only for Manager)

To display the End to End list for the VM guest on the Hyper-V host, install the agent to the Hyper-V host and then register it to the Management Server.

Next, register the target Hyper-V host in the End to End View (Hyper-V).

Specify the following for registration of the Hyper-V host.

- User name
 - When Hyper-V host is participating in the ActiveDirectory environment:
Specify users with administrator privileges in the format of "Domain name\User name".
 - When Hyper-V host is not participating in the ActiveDirectory environment:
Specify users with administrator privileges in the format of "NetBIOS computer name\User name".

If the user name is not specified in the formats listed above, incorrect information may be displayed.

- Password

Also, implement the following settings to the Hyper-V host and the Management Server.

To make settings, users must have administrator privileges to log in.

- Set up Hyper-V host

Perform the following procedure to give permission for Hyper-V host that is performing End to End display to remote management.

1. Click **start > Administrative Tools > Server Manager** to run Server Manager. Click **Configure Server Manager Remote Management** in [Computer Information] on Server Manager.
If **Enable remote management of this server from other computers** checkbox is unchecked, check it and click **OK**.

2. Click **start** > **run**. Enter "cmd.exe" to click **OK**.
Execute the following command at the command prompt.

```
C:\Users\administrator> winrm quickconfig [Enter]
```

If the remote management is not set, enter "y".

For the End to End list display for Hyper-V with iSCSI connection, set up the advanced settings for the connection when connecting to a target detected from iSCSI initiator property. Specify the IP address for the Hyper-V host adopter to the initiator IP in the advanced settings. If the settings are incorrect, the End to End list for Hyper-V is not displayed properly.

- Set up the Management Server

Click **start** > **run**. Enter "cmd.exe" to click **OK**.

Execute the winrm command below on the console of cmd, and check the value for TrustedHosts.

[Execution example]

```
C:\Users\administrator> winrm get winrm/config/client
```

Specify "*" for TrustedHosts or, only if the IP address for the Hyper-V host for which the End to End list is to be displayed has not been set, execute the winrm command below to specify the value for TrustedHosts.

[Execution example]

```
C:\Users\administrator> winrm set winrm/config/client @{TrustedHosts="ipAddr"} [Enter]
```

For *ipAddr*, specify as the value for the previously confirmed TrustedHosts and the IP address for the Hyper-V host for which the End to End list of the VM guests is to be displayed. If you specify multiple IP addresses, specify them with the addresses separated by commas (as in "*ipAddr1, ipAddr2,...*"). For IPv6 format, surround the IP address with brackets "[]".

[Example]

When registering 192.0.2.10,fcde:555:444:333:222::1027,fcde:555:444:333:222::1154 in Trusted Hosts:

```
TrustedHosts="192.0.2.10,[fcde:555:444:333:222::1027],[fcde:555:444:333:222::1154]"
```

Note

- To use this function, the following need to be installed on the Management Server:
 - .NET Framework 2.0 or later
 - PowerShell 2.0 or later
 - WinRM2.0 or later

Note that the supported version of Hyper-V is 2.0 or later.

- The End to End list for Hyper-V supports the display of information for storage devices connected to the VM host with FC, iSCSI and FCoE connections. Storage devices utilizing SAS connections and storage devices with VM guests directly connected with iSCSI are not supported.
- For a multipath configuration, the End to End list for Hyper-V displays only one path.
A host name detected by the agent may not be consistent with a host name of the Hyper-V host displayed in the End to End list for Hyper-V. To be consistent with those host names, define the host name as a computer name in the /etc/hosts file of Hyper-V host.
- The information of virtual HBA on the Hyper-V guest is not displayed.
- The IP addresses of the VM guests are not displayed.

6.1.8 Extreme Cache Management

With this product, a storage device's Extreme Cache can be managed. Tasks can be performed with the same operability without having to be conscious of limitations due to the type or model of the storage device.

Operations regarding Extreme Cache can be executed to a storage device or volume. This section explains the operations in relation to a storage device. Refer to "[6.1.2 Volume Management](#)" for information on operations in relation to a volume.

Select the target storage device with Web Console, and select the operation from the Action pane.

The operations that can be executed are as follows:

- Extreme Cache Configuration
 - Enable/Disable
 - Size of Extreme Cache
- Release Extreme Cache

Point

- The Extreme Cache size can be configured only if the target device is an ETERNUS DX500 S4/DX600 S4, DX500 S3/DX600 S3.
 - Extreme Cache can be released only if the target device is an ETERNUS DX500 S5/DX600 S5/DX900 S5, DX8900 S4.
-

Note

In order to utilize the Extreme Cache function, it is required that configuration for the storage device is enabled.

When the configuration for the storage device is disabled, the Extreme Cache function cannot be utilized, regardless of the enabled / disabled configurations of each volume.

6.1.9 Encryption Mode Management

With this product, a storage device's encryption mode can be managed. Tasks can be performed with the same operability without having to be conscious of limitations due to the type or model of the storage device.

Operations regarding encryption mode can be executed to a storage device, Tier pool, or volume. This section explains the operations in relation to a storage device.

Refer to "Creation of Tier Pool" in the *Storage Cruiser Operation Guide for Optimization Function* for information on operations in relation to a Tier pool. Refer to "[6.1.2 Volume Management](#)" for information on operations in relation to a volume.

Select the target storage device with Web Console, and select the operation from the Action pane.

The operations that can be executed are as follows:

- Encryption Mode Configuration
 - Enable/Change/Disable

Point

When the storage device supports the encryption mode AES-256, you can select the following encryption modes when operating to enable or change the encryption:

- Fujitsu Original Encryption
- AES-128

- AES-256

When the storage device does not support the encryption mode AES-256, Fujitsu Original Encryption is set when operating to enable the encryption. You cannot change to other encryption mode than Fujitsu Original Encryption.

Note

- In order to utilize the encryption mode function, it is required that configuration for the storage device is enabled. When the configuration for the storage device is disabled, the encryption mode function cannot be utilized, regardless of the enabled / disabled configurations of Tier pool or each volume.
 - For the ETERNUS DX60 S2, management of encrypted volumes and configuration of the encryption mode cannot be performed with this product.
-

6.1.10 Virtual Machine Management

New creation of Virtual Machine

After creating a new VM guest, perform the **Reload Conf.** operation for the VM host where the VM guest exists.

In a VMware vSphere Virtual Volumes environment, when a VM guest created on the VVOL datastore is powered on, it is automatically registered on the ETERNUS SF system. Therefore, it is not required to perform the **Reload Conf.** operation for the VM guest.

Migration of Virtual Machine

When migrating VM guests between VM hosts using the Storage vMotion function or the vSphere HA function, this migration is not automatically detected by this product. If an operation that changes the UUID of the VM guest is performed, such as when moving a VM guest or when performing a backup / restore, the status of the VM guest becomes "Unknown" since this product cannot recognize whether the VM guest before and after the operation is the same one. For this reason, when the operation that changes the UUID of a VM guest has been performed, take the following action on Web Console:

1. From the VM host, delete the VM guest that is set with the UUID before the change.
2. Perform the **Reload Conf.** operation for the VM host in which the VM guest that is set with the UUID after the change exists.

In a VMware vSphere Virtual Volumes environment, when the VM guest is migrated to the VVOL datastore, its migration is automatically recognized. If the VM guest is migrated with its power OFF, its migration is automatically recognized when the VM guest is powered on. Therefore, it is not required to perform the **Reload Conf.** operation for the migrated VM guest.

6.1.11 Changing SNMP setting

The following operation can be executed from **SNMP Configuration** under **System** on the global navigation tab in Web Console.

- Displaying/Changing the Manager Engine ID
- Changing the SNMP communication settings
- Displaying/Adding/Changing/Deleting the SNMPv3 user settings

6.2 Access Path Management

6.2.1 What Is Access Path?

In this software, a logical path between a server node and a storage device is defined as an access path.

Access paths are generated by the following access control functions of the server node, Fibre Channel switch, and storage.

Fibre Channel Switch Zoning

Switch vendors provide Fibre Channel switch zoning. Information such as the WWN/port number used by Fibre Channel for the host bus adapter (HBA) on the server node side and the WWN/port number of channel adapters (CAs) on the storage side is combined in a zone unit, and access from ports other than the port defined for the zone are restricted.

Storage Host Affinity

Storage vendors provide storage host affinity. The storage side recognizes the WWPN of the HBA on the server node side in order to restrict access. Associations of WWPNs of HBAs with storage areas (AffinityGroup/Zone) can also be set.

The ETERNUS DX series and the ETERNUS AF All-Flash Arrays refer to storage host affinity as "Set Affinity Group", "Set Host-Affinity Group".

Integrated Access Path Control

This software integrates and manages these functions to facilitate definition of settings that make use of the characteristics of SAN security and each function.

It controls access paths according to the functions and settings of individual devices.

Access Path in VMware Environment

This software does not support access path management for VM guests because it does not support HBA management.

In environments other than the VMware vSphere Virtual Volumes environment, if the access path environment modification (setting up, deleting and inheriting) is executed for the VM host, reboot the VM host or rescan the Storage Adapters from VMware vCenter Server or VMware vSphere Client.

For access path management in a VMware vSphere Virtual Volumes environment, refer to "VVOL Access Path Management" in the *Storage Cruiser / AdvancedCopy Manager Operation Guide for VMware vSphere Virtual Volumes*.



Note

These are the following notes during a time when the host group and the CA port group of the ETERNUS DX series (excluding the ETERNUS DX60 S2) and the ETERNUS AF All-Flash Arrays are used:

- There is no need to be aware of the host group or CA port group for this product. The host group and CA port group are not displayed in the Web Console screen or command execution results for this product.
- Host affinities created with specifying the host group or CA port group are displayed as access path information on Web Console.
- Host affinities with an access path created using the access path settings for this product are displayed on ETERNUS Web GUI.
However, the relevant host affinity host group and CA group columns is "-".
- Hosts with an access path deleted using the access path deletion operation for this product is deleted from the host group but this does not affect behavior.
- When the host registered in a host group by deleting the relevant host does not exist, it is deleted from the relevant host group but this does not affect behavior.

6.2.2 Access Path Display (Display of Logical Relationship Between Server Node and Storage Systems)

This software gathers information from each device and displays the status of access paths or the status of logical access paths from the server node. This function is effective for verifying the validity of system configuration setup and recognizing the effect of a resource error because it enables the logical relationship in the more complicated SAN environment to be easily determined.

If the server node operates under a Solaris environment and the storage system is a library or tape device, the tape-type drivers for which access paths can be displayed are as follows:

st, ftla, fsct, IBMtape, mt, lb, sg, sgen



Note

The Solaris server node uses special file `/dev/rdisk/cXtX`, `/dev/rmt` to obtain WWPN binding information. For this reason, to recognize WWPN binding, this special file (device file) must be created in advance. If any unused special file is in `/dev/rdisk/`, `/dev/rmt`, it causes the access path display to be incorrect. If access path display by this software differs from that by system equipment, clarify the special files defined in the following operations:

- Solaris (For the environment which uses hard disk driver (HDDV), and does not use multipath control (ETERNUS Multipath Driver, MPLB, MPHD))

```
# touch /reconfigure
# /usr/sbin/shutdown -y -i6 -g0 (server node restart processing)
```

After the server node has been restarted

```
# format (Loading processing to HDDV driver's kernel)
# disks -C
```

- Solaris (For the environment which uses both hard disk driver (HDDV) and multipath control (ETERNUS Multipath Driver, MPLB, MPHD), uses only multipath control or uses neither.)

```
# touch /reconfigure
# /usr/sbin/shutdown -y -i6 -g0 (server node restart processing)
```

After the server node has been restarted



```
# disks -C
```


6.2.2.1 Access Path Status Display

You can check the access path status connected by the Fibre Channel on the **Status** column on the Access Path screen. The status of access paths are displayed as the following icons. When you click the each status, the corresponding error content message is displayed.

In addition, if you check the access path status, click **Refresh** on the Action pane to update the access path status.

Access Path Status	Description	Action
Normal	The access path is normal.	<p>No action is required.</p> <p>However, for HBA shown below, you must take actions for making the operating system recognize LUN.</p> <ul style="list-style-type: none"> - If the HBA is XSEFC401AF, XSEFC402AF, SG-XPCIE2FC-EM4, or SG-XPCIE2FC-EM8 <ol style="list-style-type: none"> 1. In an environment connected to a Fibre Channel switch, configure the HBA N port settings. Refer to "4.1.1.2 N-port Settings", and check the N-port settings. If the settings are incorrect, correct them.

Access Path Status	Description	Action
		<p>2. Check the storage Ap_id by executing <code>cfgadm -al</code> command, and make the OS recognize the LUN by executing <code>cfgadm-c configure Ap_id</code> command. For details about the commands, check the <code>man</code> command.</p> <ul style="list-style-type: none"> - If the HBA is SE0X7F21F, SE0X7F22F, SG-XPCI1FCQF2, SG-XPCI2FC-QF2 SGXPCI1FC-QL2, SG-XPCI2FCQF2-Z, SG-XPCI1FC-QF4, or SGXPCIE2FC-QF8 <p>Check the storage Ap_id by executing <code>cfgadm -al</code> command, and make the OS recognize the LUN by executing <code>cfgadm-c configure Ap_id</code> command. For details about the commands, check the <code>man</code> command.</p>
 Warning	<p>The following possibilities are considered.</p> <ul style="list-style-type: none"> - The access path definition is inconsistent. - The Fibre Channel switch is not registered. 	<ul style="list-style-type: none"> - When the access path definition is inconsistent <p>Click status to display the error content message. Refer to "Error Messages of Access Path" in the <i>Messages</i>, take actions according to the instructions for the error message.</p> <ul style="list-style-type: none"> - When the Fibre Channel switch is not registered <p>Register all the Fibre Channel switches connected in cascade. If the storage device and the server are connected directly to each other, no action is required.</p>
 Error	<p>The following possibilities are considered.</p> <ul style="list-style-type: none"> - The access path is disconnected due to an error (if the multipath control mechanism is installed). - Another part failure caused an access path error. This state also occurs if a device in the access path is faulty. - The Fibre Channel cable on a route is disconnected. - The access path is set "Offline" by the user. - HBA was reduced or replaced. - The Fibre Channel switch is not registered. 	<p>Click status to display the error content message. Refer to "Error Messages of Access Path" in the <i>Messages</i>, take actions according to the instructions for the error message.</p> <ul style="list-style-type: none"> - When an error might occur in the access path <p>Reload the configuration to the device defined as an access path for identify whether a failure occurs or not. Replace the faulty part, and execute recovery processing. When the access path is set to "Offline", set it to "Online" as necessary.</p> <ul style="list-style-type: none"> - If HBA was reduced <p>Delete the access path on the Access Path screen. Refer to "Delete Access Path" in the <i>Web Console Guide</i> for details on how to delete.</p> <ul style="list-style-type: none"> - If HBA was replaced <p>It is required to take corrective action that corresponds to the HBA status displayed on the Server Detail screen. Perform the Reload Conf. operation as to the replaced HBA-installed device to perform the following steps:</p> <ul style="list-style-type: none"> - If the HBA status is "Changed" <p>Perform access path modification operation. Refer to "10.3.1.2.1 Post-replaced HBA State Is "Changed"" for details on the inheritance operation.</p> <ul style="list-style-type: none"> - If the HBA status is "Unknown" <p>Perform access path modification operation. Refer to "10.3.1.2.2 Post-replaced HBA State Is "Unknown"" for details on the modification operation.</p> <ul style="list-style-type: none"> - When the Fibre Channel switch is not registered

Access Path Status	Description	Action
		Register all the Fibre Channel switches connected in cascade. If the storage device and the server are connected directly to each other, no action is required.
 Unknown	<p>The following possibilities are considered.</p> <ul style="list-style-type: none"> - The access path status needs to be updated. - Access path settings are incorrect. - HBA has been replaced. - The access path is not created - The Fibre Channel switch is not registered. 	<p>Click Refresh on the Action pane to update the access path status.</p> <ul style="list-style-type: none"> - When the server is not registered on the Management Server or Storage Cruiser's agent is not installed on the server (manually embedded server) <p>"Unknown" is displayed because the access path status cannot be obtained. For displaying the access path status, install Storage Cruiser's agent and register the server on the Management Server.</p> <ul style="list-style-type: none"> - If HBA was replaced <p>It is required to take corrective action that corresponds to the HBA status displayed on the Server Detail screen. Perform the Reload Conf. operation as to the replaced HBA-installed device to perform the following steps:</p> <ul style="list-style-type: none"> - If the HBA status is "Changed" <ul style="list-style-type: none"> Perform access path modification operation. Refer to "10.3.1.2.1 Post-replaced HBA State Is "Changed" for details on the inheritance operation. - If the HBA status is "Unknown" <ul style="list-style-type: none"> Perform access path modification operation. Refer to "10.3.1.2.2 Post-replaced HBA State Is "Unknown" for details on the modification operation. <ul style="list-style-type: none"> - When the access path is not created <ul style="list-style-type: none"> Create an access path. - When the Fibre Channel switch is not registered <ul style="list-style-type: none"> Register all the Fibre Channel switches connected in cascade. If the access path is not created, create it. If the storage device and the server are connected directly to each other, no action is required.
(-) hyphen	Access path cannot be displayed because the interface is iSCSI.	No action is required.

Note

- For devices that support automatic updates of the device component status, the status of the access path is automatically updated when the link status of a port is changed. It may take a few minutes to display the status of the access path after the link status is changed. For devices that support automatic updates of the device component status, refer to ["2.5 Monitoring Device Component Status"](#).
If the link status of the port is not changed or if the device does not support automatic updates of the device component status, the status of the access path is not updated automatically. When you check the status of the access path, click **Refresh** on the Action pane to update the status of the access path.
- In an environment not connected to a Fibre Channel switch, the status of the access path is not displayed correctly.

- It may take a few minutes to update the status of the access path. You can check the completion of the process on the **Operation History** screen.

6.2.3 Access Path Setting

In a storage system where a Fibre Channel switch is between a server node and storage, this software automatically changes the security settings supported by each device and sets an access path, as shown in the figure below. If no security mechanism is provided on the device side, setting up security may not be possible. However, the security mechanisms of other devices create access paths. If none of the devices constituting these access paths is equipped with a security function, security cannot be set up but the access paths can be accessed from the server node.

Point

You can set the access path concurrently with assigning volumes to the server using Web Console. Refer to "Assign ETERNUS Disk Storage System Volumes to Server" in the *Web Console Guide* for details on the operation.

Note

Each storage system has requirements, such as HBA types used, for guaranteeing operation according to the mutual connection verification status. Set each access path so that these requirements are satisfied. For more information about the requirements, contact the respective storage system distributor.

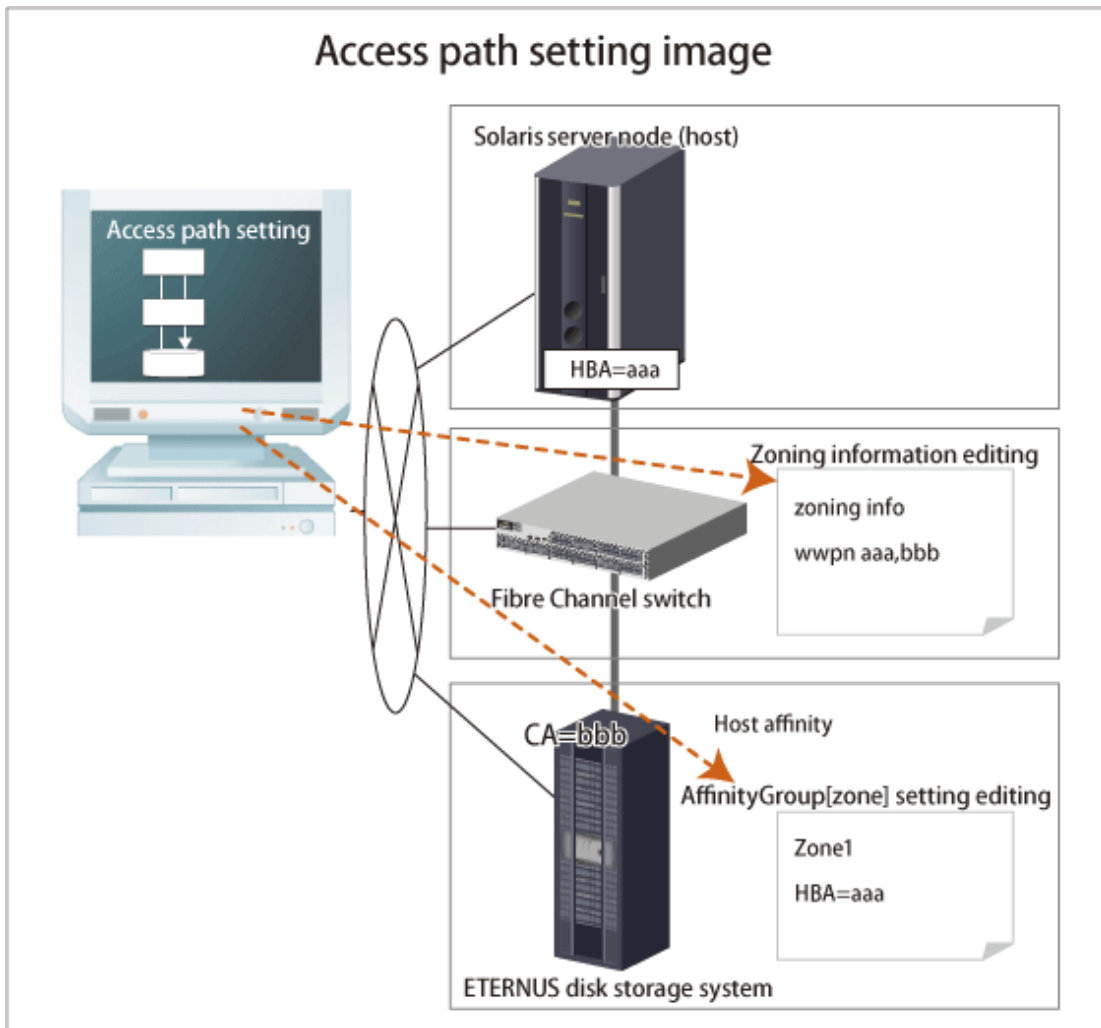


Table 6.1 Security Information That This Software Sets in Device When Setting Access Path

Device Type		Contents Set by This Software
Solaris server node	Agent available/unavailable	No setting
Windows server node	Agent available/unavailable	No setting
Linux server node	Agent available/unavailable	No setting
HP-UX server node	Agent available/unavailable	No setting
Other server nodes	Agent unavailable	No setting
Fibre Channel switch	With zoning setting	WWPN one-to-one zoning is set. (However, this zoning is not set if the Fibre Channel switch side already has sufficient port zoning.)
	Without zoning setting	No setting
ETERNUS DX series ETERNUS AF All-Flash Arrays	With security setting	Setting of HBA WWPN for security
	Host affinity (zone) setting	Setting of HBA WWPN to the affinity group (zone)
	Without security setting	No setting
Other storage/tapes		No setting

6.2.3.1 Preparations

Notes

- Only "System Administrator" account can set access paths.
- To change the specified AffinityGroup/zone name on the ETERNUS Disk storage system side of a set access path, delete the path and then set it again with a new zone.
- Verify that all Fibre Channel switches cascaded to the Fibre Channel switch associated with the access path setting are correctly recognized in the current status. Once an access path is changed because a Fibre Channel switch is temporarily disconnected from the cascade connection, the old cascade connection cannot easily be recovered. (In this event, execute the `cfgClear` command to delete zoning information for the Fibre Channel temporarily disconnected from the cascade connection. This enables cascade reconnection.)
- When setting an access path that is configured in the FC routing functionality LSAN zone in this software, manually set the LSAN zone in the device in advance.
- If a fibre channel switch existing on the configured access path is in No Security status, zoning is not done to the fibre channel switch. When configuring zoning to the fibre channel switch, enable "SAN Zoning Setting" on the Change screen for switch information. For the method to display the screen, refer to "Change FC Switch Information" in the *Web Console Guide*.
Security status of fibre channel switch can be viewed on the Detail Information screen. For the method to display the screen, refer to "Display FC Switch" in the *Web Console Guide*.
- If the storage device and the server are directly connected, access paths can be configured as long as host affinity for CA ports is enabled.
- In the SAS environment, the access path setting is not supported. Use the host affinity setting.

Checking Storage Settings

For the ETERNUS DX series and the ETERNUS AF All-Flash Arrays, check the following settings on the storage side before setting an access path.

By setting up the zone (host affinity) function, you can use storage areas efficiently on a storage area network. To use this zone (host affinity) function, you must set up an Affinity Group/zone on the storage side before setting an access path.

Connected State of FC Cable Between Devices

- When setting an access path, an HBA and CA must be physically connected via a Fibre Channel switch.

Device Status

- Each HBA must be connected to a Fibre Channel switch and operate as the N port or NL public.
- All of a Fibre Channel switch on the way of the access path setting, HBAs, server nodes, CAs and storages should be operating normally.

6.2.3.2 Setting

Set access paths for the Fibre Channel.



.....
When using the affinity group for the BS2000, set an access path by selecting "BS2000" for the Host Response.
.....

Access Path Setting Procedure

Configure the access path environment by installing additional storage and connecting a Fibre Channel cable, etc.

1. Select the target server node and add an access path by using Web Console.

2. [On a Solaris server node with multipath disk control (ETERNUS Multipath Driver 2.0.1 or later)] Execute the command below on the target server node to enable the server node to recognize the storage device.

- To automatically build a multipath device, execute the `grmpdautoconf` command. Refer to the driver manual for details on the command.

```
# /usr/sbin/grmpdautoconf
```

To automatically build a multipath device that uses the ETERNUS multipath driver and has a path passing through multiple Fibre Channel switches, execute the command after confirming path redundancy and specifying the "-X" option (because the `grmpdautoconf` command cannot check whether the redundancy of a path passing through multiple Fibre Channel switches is guaranteed).

```
# /usr/sbin/grmpdautoconf -X
```

3. [On a Solaris server node with multipath disk control (MPLB, MPHD, HDDV2.2 or later) and hot system expansion specified (`hddvadm -M` execution environment)] Execute the following command on the target server node so that the target server node recognizes the storage unit.

With the above setting, the `hddv` driver can recognize the logical storage unit. If necessary, execute the command that builds an extension path to the multipath instance or the command that configures the multipath instance. Refer to the applicable driver manual for information about the commands (`mplbconfig/iompadm add/iompadm new`).

4. [On a Solaris server node, in the multipath disk control (MPLB, MPHD, HDDV) environment with non-hot system expansion is specified (`hddvadm -m`), or in the environment without multiple disk control] Execute the following command on the target server node to enable the server node to recognize the device:

No.	Environment	Commands to Execute
1	When using the following HBA: <ul style="list-style-type: none"> - SE0X7F21F - SE0X7F22F - XSEFC401AF - XSEFC402AF - SG-XPCI1FC-QF2 - SG-XPCI2FC-QF2 - SG-XPCI1FC-QL2 - SG-XPCI2FC-QF2-Z - SG-XPCI1FC-QF4 - SG-XPCIE2FC-QF8 - SG-XPCIE2FC-EM4 - SG-XPCIE2FC-EM8 	Check the storage <code>Ap_id</code> using the <code>cfgadm -al</code> command, and make the OS recognize the LUN using the <code>cfgadm -c configure Ap_id</code> command. For details about the commands, check the <code>man</code> command.
2	When using HBA other than item No.1 and when it is not a Multipath Disk Control (MPLB, MPHD, HHDDV) environment (including tape environments)	<pre># touch /reconfigure # /usr/sbin/shutdown -y -i6 -g0</pre>
3	When using HBA other than item No.1 and when it is a Multipath Disk Control(MPLB, MPHD, HHDDV) environment (<code>hddvadm -m</code>)	<pre># touch /reconfigure # /usr/sbin/shutdown -y -i6 -g0 # hddvadm -m (The required part of sd.conf is moved to hddv.conf, and the saved mphd.conf/ mplb.conf file is restored.) # touch /reconfigure # /usr/sbin/shutdown -y -i6 -g0 (Existing</pre>

No.	Environment	Commands to Execute
		instances for each driver (mplb/mphd/hddv) are configured when the definition file is restored. For new instances, hddv instances are configured.)

According to the environment, execute the command that builds an extension path to the multipath instance or the command that configures the multipath instance. Refer to the applicable driver manual for information about the commands (mplbconfig/iompadm add/iompadm new).

5. [Solaris server node] Arrange the files in /dev/rdisk with # disks -C command.
6. [Windows] Restart the unit so that the device is recognized.
7. [Linux server node] Restart the unit so that the device is recognized.
8. [HP-UX server node] Restart the unit to execute device recognition. After restart, check the connection of the device and search for the device file (for example, /dev/dsk/c5t1d0) with #ioscan -funC disk command. If the device file does not exist, create the device file by executing #insf-H <H/W pathname > -e command for H/W path in which the device file is not detected.
9. [Other server nodes] Perform operations for device recognition.

For VMware vSphere, perform the **Reload Conf.** operation for the target server node either after rebooting the VM host or after rescanning for the HBA in which the access path is set from VMware vCenter Server or VMware vSphere Client.

10. Check the access path from this software.

- [For Solaris server node]
/dev/rdisk/cXtXdX is created on the server node side and the access path is displayed.
- [Windows server node, Linux server node, or HP-UX server node]
A device is generated on the server node side, and the access path is displayed.

Note

Confirmation of the status of server node (HBA)-server node (HBA) and storage device (CA)-storage device (CA) access paths is performed by checking the zoning information for the fibre channel switch device using Web Console. Deletion is performed by deleting the fibre channel switch device information in Web Console.

These zonings are normally set during the device installation, but for the storage zone, it is possible to set the switch device's zoning and the storage device's host affinity using this software's access path setting function. For zones besides the storage zone, set the zoning for the switch device manually.

6.2.4 Deleting Access Path

This software can delete access paths set by it and access paths for Fibre Channel switches.

Delete an access path for which one-to-one WWPN zoning is set for a Fibre Channel switch between server nodes (HBAs) or between storages (CAs) according to the zoning information in Fibre Channel switch properties.

The access path cannot be deleted to change the zone status of the switch to non-zoning (No Security). All the zoning settings of the switch are deleted when a user request to delete an access path is processed, this software creates a dummy zone. Although the loss of zone security as a result of deleting zoning can lead to inadvertent accessing of disk areas during operation, the dummy zone created prevents data destruction.

When changing the zone status of the switch to non-zoning (No Security), manually change the zone status of the switch to No Security. Note that this dummy zone is not deleted even if access path addition processing is executed.

6.2.4.1 Preparations

Notes

- Only "System Administrator" account can delete access paths.
- You cannot delete access paths defined during setup other than for setting one-to-one WWPN zoning such as port zoning, WWNN zoning, or multi-port WWPN zoning in a Fibre Channel switch. (Only the one-to-one WWPN zoning setting is valid in this software.) In such cases, delete a zone from the zone information of Fibre Channel switch properties, or log in directly to the Fibre Channel, and change the setup.
- Verify that all Fibre Channel switches cascaded to the Fibre Channel switch associated with the access path setting can be correctly recognized in the current status. Once an access path is changed because a Fibre Channel switch is temporarily disconnected from the cascade connection, the old cascade connection cannot easily be recovered. (In this event, execute the `cfgClear` command to delete zoning information for the Fibre Channel temporarily disconnected from the cascade connection. This enables cascade reconnection.)
- When deleting an access path that is configured in the FC routing functionality LSAN zone in this software, manually delete the LSAN zone in the device in advance.

Server Node Setting

- If Fujitsu multipath disk control mechanism or `msdsm` on the Windows server node, be sure to shut down the server node before deleting an access path. If an access path is deleted while the server node is in operation, a very long time is required to shut down the server node later because of the operation of Windows path detection logic.
- To delete the access path of Fujitsu multipath disk control mechanism or `msdsm` on the same server node as the Management Server from this software, shut down the Management Server, disconnect the FC cable from the access path to be deleted, restart the admin server, and delete the access path.
- For Unix, execute `umount` for the access path to be deleted.

Physical Removal (Only for Solaris environments)

- When ETERNUS Multipath Driver 2.0.1 or higher is used and the access path to be deleted is physically connected to a Fibre Channel switch for which no zone is set, physically remove the access path in advance such as by disconnecting the cable for which access path deletion is to be executed.

6.2.4.2 Setting

Delete a set access path.

1. [Solaris (MPLB, MPHD environment)] Release the multipath setting.

Refer to the relevant driver's manual for information on the command and command parameters.

- If MPLB 2.2 and higher, execute the following command:

```
# mplbconfig (arguments are required, -d option)
```

- If MPLB 2.1 and former or MPHD, execute the following command:

```
# iompadm (arguments are required, destroy option)
```

MPLB2.1 or earlier and MPHD do not support the commands that add and remove paths. Delete the multipath instance by using the above command (`iompadm destroy`).

2. [Solaris (MPLB, MPHD, HDDV environment)] Release HDDV.

When the hot system expansion function of server node is disabled, execute the following commands:

```
# hddvadm -i
```

`hddv.conf` is moved to `sd.conf`, and the `mphd.conf/mplb.conf` file is saved.

3. [Windows] If Fujitsu multipath disk control mechanism or `msdsm` is set, shut down the Windows server node. If the Windows server node is active in this environment, this software suppresses access path deletion.
4. Using Web Console, execute the deletion of the target access path.

5. [ETERNUS Multipath Driver 2.0.1 or higher] Execute the `grmpdautoconf` command to implement path removal. (Refer to the *ETERNUS Multipath Driver User's Guide* for details about the command specifications.)

6. [Solaris] Follow the procedure below so that the server node recognizes the storage unit.

In the hot system expansion (`hddvadm -M`) environment of ETERNUS Multipath Driver 2.0.1 or higher, MPLB, MPHD, or HDDV, execute the command shown below. After path removal, the server must be restarted to enable the Fibre Channel card definition of the server node.

```
# /usr/sbin/shutdown -y -i6 -g0 (restarts the server)
# disks -C
```

In an environment using MPLB2.2 or later, MPHD, and HDDV with non-hot system expansion or normal specified (`hddvadm -m`), execute the following operations:

- #touch /reconfigure
- # /usr/sbin/shutdown -y -i5 -g0
- Start it in single user mode.
- # hddvadm -m (The required part of `sd.conf` is moved to `hddv.conf`, and the saved `mphd.conf/mplb.conf` file is restored.)
- #touch /reconfigure
- #/usr/sbin/shutdown -y -i6 -g0 (Instances for each driver (`mplb/mphd/hddv`) are configured when the definition file is restored.)
- # disks -C

In an environment using MPLB2.1 or earlier

- #touch /reconfigure
- # /usr/sbin/shutdown -y -i5 -g0
- Start it in single user mode.
- # hddvadm -m (The required part of `sd.conf` is moved to `hddv.conf`, and the saved `mphd.conf/mplb.conf` file is restored.)
- #touch /reconfigure
- # /usr/sbin/shutdown -y -i6 -g0
- # disks -C
- Reconfigure the multipath by using the new `#iompadm` command.

In an environment where neither the hard disk driver (HDDV) nor multipath control (MPHD MPLB) is used

- #touch /reconfigure
- # /usr/sbin/shutdown -y -i6 -g0
- # disks -C

7. Check the access path from this software.

8. [Windows, Linux, or HP-UX] Restart the device.

9. [Other server nodes] Perform operations for device deletion recognition.

For VMware vSphere, perform the **Reload Conf.** operation for the target server node either after rebooting the VM host or after rescanning for the HBA in which the access path is set from VMware vCenter Server or VMware vSphere Client.

6.2.5 Access Path Inheritance

This software sets WWPN-based security settings on a device to form an access path. However, when the faulty part such as an adapter (controller) is replaced, the WWPN name may be changed because it is unique.

- Devices whose WWPNs are changed when the faulty part such as an adapter (controller) is replaced:

All HBAs

- Devices whose WWPNs are not changed when the faulty part such as an adapter (controller) is replaced:

ETERNUS Disk storage systems

Operation can be performed as is if WWPNs are not changed. If WWPNs are changed because an adapter (controller) is replaced, security functions of the WWPNs constituting the access path must be changed to those of new WWPNs. This operation is defined as "access path inheritance" and it provides a function that changes the WWPN security settings managed by this software.

Refer to the following sections for the access path inheritance procedure after replacing the faulty parts.

- ["10.3.1.2 Access Path Inheritance after HBA Replacement"](#)

6.2.6 Managing Fibre Channel Switch That Has Already Set in Port Zoning

One-to-one WWPN zoning setting is recommended in this software to realize the complete zoning security management as described in ["4.2.1 Brocade Fibre Channel Switch"](#), though port zoning is possible to be performed. The procedure to change into one-to-one WWPN zoning setting is as follows:

1. Confirm that all the monitored devices are connected with all the switch ports.
2. Change the "sanma.conf" file. Refer to ["A.2 sanma.conf Parameter"](#) and specify 1 in "SET_SW_ZONING_ALWAYS".

Either perform an update to the setting file using Web Console or restart Manager to reflect the content of this file.

3. Execute the [storageadm zone](#) command on the Management Server to add an access path corresponding to the port zoning.
4. After the access path has been added, perform the **Reload Conf.** operation for the target Fibre Channel switch on Web Console. Then, confirm on Web Console that the WWPN zoning is displayed which has the same information as the port zoning, and delete the specified port zoning.



For the multiple ports zoning setting, do not delete the multiple ports zoning until WWPN zoning corresponding to each port zoning.

5. Repeat the procedure from steps 3 to 4.
6. If necessary, return the setting that is executed in step 2 to the former setting.

To change the zoning setting can be also executed in zone administration window in WEBTOOLS in Fibre Channel switch and by CLI.

6.3 Event Display and Linkage

This software receives and decodes an SNMP Trap that is sent from a device, and handles a device status change as an event for managing device errors.

The event is created based on the contents of SNMP Traps and user settings.

The processing described below is performed for generated events.

- [Displaying Event Logs](#)

- [Systemwalker Centric Manager Linkage](#)
- [Shell/Bat Linkage](#)
- [External Script Linkage](#)
- [E-mail Notification](#)

As for the following event, this software only displays event logs, and other processing are not performed.

- Trap events common to devices ("Trap Common to Devices" in "Notes about Common Traps for Devices" in the *Event Guide*)
- Start of performance data re-collection/Success of performance data re-collection event (Success of performance data re-collection, Success of performance data re-collection in "Performance Management Traps" in the *Event Guide*)
- Event that indicates when the state changes into error(red) in the device polling function ("When error occurs in the polling function" in "Device Polling Event" in the *Event Guide*)



See

The contents of event display and linkage can be changed for each SNMP Trap by customizing the fault monitoring method. For more information about customizing the fault monitoring method, refer to "[A.5 SNMP Trap XML Definition File](#)".

Displaying Event Logs

Generated events are displayed in the event log and Dashboard of Web Console. Events are displayed as shown below.

Displayed Items	Details
type	Displays the level of a displayed event.
date	Displays time and date event occurred in Month DD, YYYY HH:MM:SS AM (or PM).
device	Displays the name of a device on which the event occurred. This may not be displayed for events by user operations.
message	Indicates the event ID and its details. Displays this ID when the event has the corresponding ID. This ID is defined in the manager that is monitoring the event. Refer to the <i>Event Guide</i> for details about events.



Note

If multiple SNMP Traps comprised of the same information are received from a device at the same time and date, only the first received SNMP Trap is displayed on the event log.

Systemwalker Centric Manager Linkage

Also, generated events are reported to Systemwalker Centric Manager. Refer to "[12.1 Linkage with Systemwalker Centric Manager](#)" for information on settings required in advance. The importance levels of the events are also reported.

This software reports events such as transition of the Thin Provisioning Pool using rate and reduction of Thin Provisioning Pool's capacity, to Systemwalker Centric Manager as Information events. However, with the default notification settings of Systemwalker Centric Manager, the Information events sent by this software are not displayed in Systemwalker Centric Manager. To display the events in Systemwalker Centric Manager, customize the fault monitoring method of this software to change the event level from "Information" to "Warning" or "Error".

Note

Events of the server node agent is not reported to Systemwalker Centric Manager. (Shell/Bat linkage is operated.) Execute fault monitoring by message monitoring function of Systemwalker Centric Manager.

Shell/Bat Linkage

A generated event is specified in the call argument of the Shell file, such shown as below.

Platform of Manager	File Name (Full Path)
Windows	<code>\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\trapop.bat arg1 arg2 arg3 arg4 arg5 arg6</code> (<code>\$ENV_DIR</code> means "Environment Directory" specified at the Manager installation.)
Solaris, Linux	<code>/etc/opt/FJSVssmgr/current/trapop.sh arg1 arg2 arg3 arg4 arg5 arg6</code>

The "arg1" is the fault detail for the target device.

The "arg2" is the IP address for the target device.

The "arg3" is the server node name (FQDN) for the target device (if the full domain name cannot be confirmed, the IP address is set).

The "arg4" is the number of milliseconds that have elapsed from 00:00:00 GMT 01 Jan 1970 ("zero") to the current time.

The "arg5" is the fault level ("INFO", "WARNING", "ERROR").

The "arg6" is the name for the target device.

Rewriting the content of these shell/bat files enables the E-mail linkage of fault information or other Management Software linkage (such as issuing commands to Management Software and writing information to a log file managed by Management Software).

Sample Shell/Bat files are installed in the directories shown below. Copy this sample and create Shell/Bat files for linkage.

Platform of Manager	File Location
Windows	<code>\$ENV_DIR\ESC\Manager\opt\FJSVssmgr\lib\sample\trapop.bat</code> (<code>\$ENV_DIR</code> means "Environment Directory" specified at the Manager installation.)
Solaris, Linux	<code>/opt/FJSVssmgr/lib/sample/trapop.sh</code>

If the Shell/Bat linkage function is not used, there is no need to create these Shell/Bat files.

The following are examples of scripts output in the system log or event log if an event occurs:

- For Windows environments

```
@echo off
EVENTCREATE /L SYSTEM /ID 999 /SO StorageCruiser /T ERROR /D "%4 %5 %3 %2 %~1"
```

- For Solaris or Linux environments

```
#!/bin/sh
logger -- "$4 StorageCruiser $5 $3 $2 $1"
```

Note

- The IP address of a target device is included in the event message output in the system log or event log.

- Perform event output into in the system log or event log in a Manager environment that does not coexist with a server node agent. In the Manager and server node agent coexisting environment, a message may repeatedly be output.

External Script Linkage

Any external script other than trapop.sh/trapop.bat of Shell/Bat linkage can be executed. Up to two scripts can be defined in each SNMP Trap XML definition file. Arguments for calling such scripts are common to those for Shell/Bat linkage.

Refer to "[A.5 SNMP Trap XML Definition File](#)" for information about the methods for defining.

Note

- External script linkages must be defined in the SNMP Trap XML definition file. Therefore, they are not available on devices where XML definition files are not provided.
- For shell scripts or batch files in Shell/Bat linkages or external script linkages, do not output processing results and processing progress on the screen (for example, do not perform such a process as displaying a message with the echo command). Be sure to describe "@echo off" at the head under Windows.

E-mail Notification

A created event is notified by E-mail in the following format:

```
Subject: ETERNUS SF Event Mail
From: $1
To: $2

Severity: $3
Date: $4
Device IP: $5
Device Name: $6
Message: $7
```

\$1: Indicate E-mail address from where the notification is sent (You need to set it in advance.).

\$2: Indicates E-mail address where the notification is sent (You need to set it in advance.).

\$3: Indicates the fault level (Information, Warning, Error)

\$4: Indicates time and date when the event occurred.

\$5: Indicates IP address for the target device

\$6: Indicates a name of the target device

\$7: Indicates the fault detail

All Warning and Error events are notified. For Information events, transition of the Thin Provisioning Pool using rate and reduction of Thin Provisioning Pool's capacity are notified. If you want to be notified of other Information events, customize the fault monitoring method.

Point

To perform Systemwalker Centric Manager linkage, Shell linkage, or external script linkage, either register the IP address and host name information for each device in the DNS server that is referenced by the Management Server, or define them in the /etc/hosts file on the Management Server so that the names of the devices registered in this software can be resolved.

6.4 Thin Provisioning Management

This product can manage storage capacity virtualization operations that use the Thin Provisioning function of the ETERNUS Disk storage system. The functions below are provided.

Threshold Monitoring

This function monitors the threshold values for the Thin Provisioning Pool capacity used. It can also change the threshold values.

Capacity Management

This function displays the changes in capacity used for the Thin Provisioning Pool graphically.




6.4.1 Threshold Monitoring

This function monitors the threshold values for the Thin Provisioning Pool capacity used.

Threshold Values and Threshold Monitoring Status

The values of the "Caution threshold value" and the "Warning threshold value" set for each Thin Provisioning Pool and the Threshold monitoring status are displayed. The "Caution threshold value" and the "Warning threshold value" are prepared at the storage device, and are the threshold values for Thin Provisioning Pool capacity used.

The threshold monitoring status is displayed with the following icons and character strings.

Threshold Monitoring Status	Meaning
 Normal	The usage rate of the Thin Provisioning Pool is below the Caution threshold value.
 Caution	The usage rate of the Thin Provisioning Pool has reached or exceeded the Caution threshold value but is below the Warning threshold value.
 Warning	The usage rate of the Thin Provisioning Pool has reached or exceeded the Warning threshold value.

Threshold Value Settings

The initial values for the "Caution threshold value" and the "Warning threshold value" are set by the storage device when a Thin Provisioning Pool is created. If required, change the settings for the capacity threshold values.

Procedure for Setting Threshold Values

Set the threshold values by using Web Console.

Action to Take When Threshold Values Are Exceeded

If threshold values are exceeded, then follow the procedures below:

- Detection of status change

When a threshold value is exceeded, the product displays an SNMP Trap in the event log and Dashboard of Web Console, which notifies the change in the Thin Provisioning Pool status of the storage device.

- Updating to the latest status

For devices that do not support automatic updates of the device component status, perform the **Reload Conf.** operation on the applicable storage device after checking the displayed event.

For devices that support automatic updates of the device component status, it is unnecessary to perform the **Reload Conf.** operation. Refer to "[2.5 Monitoring Device Component Status](#)" for information on the devices that support automatic updates of the device component status.

- Checking the status of the Thin Provisioning Pool

Start the Thin Provisioning Pool monitor window and check the Thin Provisioning Pool status. Extend disks or take other action in accordance with the exceeded threshold values.



.....
If the SNMP Trap that notifies of changes in the Thin Provisioning Pool status is not received due to packet loss or other reason, then the product detects the change by polling the Thin Provisioning Pool information of the storage

device. Since the polling interval is one hour, the time from status change to detection is within one hour. The polling intervals can be customized. Refer to "A.8 Polling Service Setting File" for details.

Information

Even if capacity reaches "Caution threshold value" which is set for each LogicalVolume, SNMP Trap is not sent. "Caution threshold value" for LogicalVolume is a threshold value for unallocated capacity of LogicalVolume which is at the storage device.

Capacity Depletion Monitoring of Container Volumes

For one of the following, this product displays "Caution" for the threshold monitoring status of the Thin Provisioning Pool and the threshold monitoring status of the Container Volume.

- When the Container Volume capacity in the Thin Provisioning Pool that is enabled with Compression in the ETERNUS DX900 S6 and DX8900 S6, or the ETERNUS DX900 S5 and DX8900 S4 whose firmware version is V11L40 or later is exhausted
- When the Container Volume capacity in the Thin Provisioning Pool that is enabled with Deduplication or Compression in the ETERNUS DX600 S6, or the ETERNUS DX S5 series (excluding the DX900 S5) and ETERNUS AF S3 series whose firmware version is V11L40 or later is exhausted

6.4.2 Capacity Management

This function displays the Thin Provisioning Pool Capacity and its changes in the capacity used graphically to grasp the changes in the capacity used for the Thin Provisioning Pool. This enables users to grasp the period to expand the size of the physical disk for the Thin Provisioning Pool, or to review the threshold setting according to the situation.

The following information can also be displayed in a graph using the Dashboard. Refer to "Operations for Capacity" in the *Web Console Guide* for details.

- Thin Provisioning Pool capacity
- TPV capacity
- NAS file system capacity

Information

Information of the capacity and used capacity for Thin Provisioning Pool, TPV, and NAS file system that are shown in the graph are collected everyday at 1:00:00.

You can change the time to obtain the information by using a polling service setting file. Refer to "A.8 Polling Service Setting File" for details.

6.4.2.1 Graph Type in Capacity Management

It is possible to display the following graph.

- Thin Provisioning Pool capacity graph

One-month Graph window

The line graph displays data for the past 31 days from the present day.

The plot points are displayed on a daily basis.

One-year Graph window, One-decade Graph window

The line graph displays data for the past a year or a decade from the present day.

The plot points are displayed on a monthly basis.

- Capacity panel in Dashboard

Dashboard displays the following three types of capacity panels. Refer to "Operations for Capacity" in the *Web Console Guide* for details.

Type of Capacity Panel	Displayed Information
Capacity ranking	<ul style="list-style-type: none"> - Capacity of Thin Provisioning Pool - Capacity of TPV - Capacity of NAS file system
Capacity list	<ul style="list-style-type: none"> - Capacity of Thin Provisioning Pool - Capacity of TPV - Capacity of NAS file system
Capacity summary	<ul style="list-style-type: none"> - Capacity of Thin Provisioning Pool

6.5 Automated Storage Tiering Management

In this product, the Automated Storage Tiering function of the ETERNUS Disk storage system can be used by registering an optional license (ETERNUS SF Storage Cruiser Optimization Option). The Flexible Tier Volume (FTV) uses the Automated Storage Tiering function. However, FTV can be created and used without an optional license, by using the one layer Tier pool function explained in this section.

If you register the optional license to use the Automated Storage Tiering in the future, using FTV according to the instruction in this section reduces the work procedure.

Until the option license is registered, FTV is available as a volume that has the Thin Provisioning function.



See

Refer to the *Storage Cruiser Operation Guide for Optimization Function* for more information on the Automated Storage Tiering function.



Point

Operate one layer architecture explained in this section with the same Management Server. It does not occasionally operate correctly when operating it with two or more Management Servers.

Enable One Layer Operation

Enable the one layer operation (status of Automated Storage Tiering).

Refer to "Enable/Disable Automated Storage Tiering" in the *Web Console Guide* to enable it.



Note

To disable the one layer operation, it is required to delete all Tier pools.

Configure Tier Pool (One Layer)

Create a one layer Tier pool. For the created Tier pool, the following operations are available:

- Change Warning/Caution Threshold of Pool
- Change sub-pool name
- Expand sub-pool capacity
- Delete Tier pool



When using a one layer Tier pool, the ETERNUS SF Storage Cruiser Optimization Option license is not required.

Capacity Management

Changes in capacity and used capacity of a created one layer Tier pool are displayed in a graph.

Configure FTV

Create an FTV in an existing one layer Tier pool. The created FTV can be deleted/changed/formatted.

6.5.1 Configure One Layer Tier Pool

A one layer Tier pool is registered as a FTRP in a storage device.

Creating a Tier pool from Web Console creates both FTRP and FTSP in the storage device. Moreover, it is also made possible to create an FTV in the storage device from Web Console.

Specify Assigned CM

An Assigned CM can be specified when performing the following operations.

- When creating a one layer Tier pool
- When expanding the capacity of the sub-pool

It is possible to specify more than one Assigned CM, and by specifying an Assigned CM in relation to the Tier pool, it is possible to specify an Assigned CM of the entire Tier pool.

When multiple Assigned CMs are specified to the Tier pool, the Assigned CM is decided from the specified Assigned CMs using the round-robin method.

When creating a sub-pool in the Tier pool, it is possible to specify an Assigned CM of the sub-pool from the multiple Assigned CMs specified to the Tier pool.

When expanding the capacity of the sub-pool, take into account the Assigned CMs that have already been assigned to each sub-pool that has already been created, and assign an Assigned CM using the round-robin method. It is also possible to make a specification from the Assigned CM which is displayed in the Assigned CM list.

When a specification of an Assigned CM has been omitted, this is automatically assigned according to the implementation of the storage device.

Table 6.2 CM Allocation Logic During New Creation in Storage Device Having 2 CMs

Specified Tier Pool	Sub-Pool Specification	Assigned CM to Be Set	Description
CM#0	-	CM#0	Configure CM#0 according to specification of pool
CM#0, CM#1	-	CM#0	Configure CM#0 in round-robin method based on specified Tier pool
CM#0, CM#1	CM#0	CM#0	Configure CM#0 according to specification of sub-pool
CM#0, CM#1	CM#1	CM#1	Configure CM#1 according to specification of sub-pool

Table 6.3 CM Allocation Logic During Capacity Expansion in Storage Device Having 2 CMs

Specified Tier Pool	Set Assigned CM	Assigned CM Which Are Newly Assigned	Description
CM#0	CM#0	CM#0	Configure CM#0 according to specification of pool
CM#0, CM#1	CM#0	CM#1	Configure CM#1 that is not assigned
CM#0, CM#1	CM#1	CM#0	Configure CM#0 that is not assigned

Disk Auto-Selection

The disk can be automatically selected when performing the following operations.

- When creating a one layer Tier pool
- When expanding the capacity of the sub-pool

Specify the necessary physical capacity when selecting automatically. The disk can also be selected manually.

6.5.1.1 Create One Layer Tier Pool

Create a one layer Tier pool.

Refer to "Creation of Tier Pool" in the *Storage Cruiser Operation Guide for Optimization Function* for the items that can be specified to one layer Tier Pool.

Refer to "Create One Layer Tier Pool" in the *Web Console Guide* for creation methods.

6.5.1.2 Change One Layer Tier Pool

To change the operation of one layer Tier pool, change the definition of the Tier pool.

Changeable items are as follows. Refer to "Creation of Tier Pool" in the *Storage Cruiser Operation Guide for Optimization Function* for an explanation of the items:

- Warning Threshold of Pool
- Caution Threshold of Pool
- FTSP Name

Refer to "Display Tier Pool" in the *Web Console Guide* for information on how to display the current detailed information of a Tier pool.

Refer to "Change Tier Pool" in the *Web Console Guide* for information on how to change the Tier pool.

Point

- It is not possible to change the definition of multiple Tier pools at once. When changing the definition of multiple Tier pools, make changes to the each Tier pool at a time.
 - The definition of the following Tier pools cannot be changed:
 - Tier pools in which Automated Storage Tiering has already been started
 - Tier pools in which RAID groups are being deleted
-

6.5.1.3 Delete One Layer Tier Pool

Before operating the deletion, display the detailed information of the one layer Tier pool that you are about to delete and confirm that deleting this is not a problem. Refer to "Display Tier Pool" in the *Web Console Guide* for information on how to display the detailed information of a Tier pool.

Refer to "Delete Tier Pool" in the *Web Console Guide* for information on how to delete a Tier pool.

Point

- Multiple Tier pools can be deleted at once.
- The following Tier pools cannot be deleted:
 - Tier pools on which any FTV is present
 - Tier pools that have Virtual Volumes
 - Tier pools in which Automated Storage Tiering has already been started

- Tier pools that have configured VVOL datastores
- Tier pools that have configured Clone backup VVOL datastores
- Tier pools in which RAID groups are being deleted

6.5.1.4 Expand Sub-Pool Capacity in One Layer Tier Pool

It is possible to expand the capacity of the sub-pools which configure a one layer Tier pool. Refer to "Expand Capacity of SubPool in Tier Pool" in the *Web Console Guide* for information on how to expand the capacity of a sub-pool.



Note

- Expanding the capacity of the sub-pool leads to deviation of data in the sub-pool and differences in access performance may occur. Execute Tier pool balancing in order to resolve data deviation. Also execute the Tier pool balancing when expanding the capacity of the sub-pool. Refer to "Expand Capacity of Sub-Pool in Tier Pool" in the *Web Console Guide* for the setting method.
- Tier pool balancing can be started after expanding the capacity of the sub-pool. Refer to "Start/Stop Tier Pool Balancing" in the *Web Console Guide* for the method of starting.
- For a Tier pool in which RAID groups are being deleted, the capacity expansion of the sub-pools cannot be performed.



See

Refer to "[6.5.1.5 Balancing of One Layer Tier Pool](#)" for details about one Tier pool balancing.

6.5.1.5 Balancing of One Layer Tier Pool

Tier pool balancing is a function that relocates the physically allocated areas for RAID groups within each sub-pool that makes up a Tier pool so that the usage capacity of each RAID Group becomes even balanced. Therefore, I/O access to the FTV is almost evenly distributed to RAID groups within the FTSP.

Perform a Tier pool balancing when you want to equalize the volumes used by the RAID groups within the FTSP. Tier pool balancing can be performed regardless of the balancing level. Normally, Tier pool balancing is performed to change the Tier pool balancing level from "Middle" or "Low" to "High".

The balancing level can be confirmed from **Balancing:Level** that is displayed in the Tier pool overview on the Automated Storage Tiering of Web Console.

The Tier pool balancing processing can be stopped. The Tier pool balancing can be started/stopped for only one Tier pool within the device.



See

Refer to "Start/Stop Tier Pool Balancing" in the *Web Console Guide* for information on how to start/stop Tier pool balancing.

To perform a Tier pool balancing, the target one layer Tier pool must satisfy all of the following requirements:

- **Pool Status** of the target Tier pool is "Available", "Partially Ready", or "Exposed".
- The Tier pool balancing process for the target Tier pool is not running.
- **Balancing:Status** of the target Tier pool is "Stop".

To stop the Tier pool balancing process, target one layer Tier pool must satisfy the following requirement:

- **Balancing:Status** of the target Tier pool is "Active" or "Error".

Point

- Even when the business I/Os are occurring on the one layer Tier pool, a Tier pool balancing can be performed on the one layer Tier pool.
- The one layer Tier pool balancing level, sub-pool balancing level and balancing progress status can be confirmed with Web Console. Refer to "Confirmation of Configuration Details of Tier Pool" in the *Storage Cruiser Operation Guide for Optimization Function* for details.

Note

- Tier pool balancing prioritizes FTVs with a low balancing level within the Tier pool and a maximum of 32 FTVs can be balanced at a time. For this reason, if there are many FTVs, there may be times when the balancing level does not become "High" even if a Tier pool balancing is performed. To make the balancing level "High", reperform a Tier pool balancing.
- If the balancing status is "Error", stop the Tier pool balancing process for that one layer Tier pool.
- Even if a Tier pool balancing is performed, the sub-pool that was physically allocated with the FTV is not changed.
- Tier pool balancing cannot be performed if any of the following conditions are satisfied:
 - **Operating Status** of the target Tier pool is "Start".
 - An FTV does not exist in the target Tier pool.
 - A Tier pool that is performing a Tier pool balancing exists within the storage device.
 - The maximum number of volumes is registered on storage device.
 - The number of sessions for a Thin Provisioning Volume balancing and RAID Migration is a combined 32 processes executing at the same time in the storage device.
 - The migration capacity for a Thin Provisioning Volume balancing and RAID Migration is a combined 128 TB process executing at the same time in the storage device.
 - A RAID group diagnosis is being executed on the storage device.
 - A disk diagnosis is being executed on the storage device.
 - The capacity is being optimized for all FTVs to be balanced that exist on the target Tier pool.
 - ODX is being executed for all FTVs to be balanced that exist on the target Tier pool.
 - An FTV to be balanced that exists on the target Tier pool is using the RAID group that is being deleted.
- The Tier pool balancing process cannot be stopped for the following cases:
 - The Tier pool performing the Tier pool balancing does not exist.
 - The Tier pool stopping the Tier pool balancing due to an error does not exist.
 - The Tier pool balancing process for the target Tier pool is completed.
- When creating, deleting, or configuring the FTV, the balancing level is not updated. Execute a status update of Automated Storage Tiering to update the balancing level.
- FTVs that satisfy any of the following conditions are not targets for the balancing process.
 - FTVs with a total capacity of 20 GB or less
 - FTVs with a used capacity of 10 GB or less

6.5.1.6 Access Status Chart Settings of One Layer Tier Pool

The access status chart graphs the access status data (IOPS value) that occurs in the Tier pool or FTV. By referring to the access status chart and by confirming the trend in the IOPS value, you can determine that the use of Automated Storage Tiering can achieve a performance increase and disk usage optimization.

By starting Automated Storage Tiering, the one layer Tier pool information can be displayed on the Access Status Chart panel of the Dashboard. For the start method of Automated Storage Tiering, refer to "Start/Stop Automated Storage Tiering for Tier Pool" in the *Web Console Guide*.

If you display the one layer Tier pool information on the Access Status Chart panel, the average for the IOPS values that occur over a one day period is displayed on the graph.

When you want to change the IOPS calculation period and evaluation standard in a one layer Tier pool, modify the configuration file. The configuration file is stored in the following location of the Management Server.

Platform of Management Server	Absolute Path Name
Windows	<code>\$ENV_DIR\AST\Manager\etc\opt\FJSVssast\data\astchart\astchart.properties</code> (<code>\$ENV_DIR</code> is "Environment Directory" specified at the ETERNUS SF Manager installation.)
Solaris, Linux	<code>/etc/opt/FJSVssast/data/astchart/astchart.properties</code>

How to Reflect Configuration File

The modified content is automatically reflected at the next IOPS calculation time (at 2:00 the next day).

Customization

DAY_UNIT

Set an IOPS calculation period on a one to seven day basis. The default value is set with one. If set with a value outside the specified range, the default value is used.

```
Example:  
DAY_UNIT = 1
```

EVALUATE_VALUE

Set an IOPS evaluation standard with 1 (average) or 2 (peak value). The default value is set with one. If set with a value outside the specified range, the default value is used.

```
Example:  
EVALUATE_VALUE = 1
```

DAY_OF_WEEK

When an IOPS evaluation period is set to seven days, you can specify the day of the week to start the evaluation. The evaluation start day can be set as "SUN" (Sunday), "MON" (Monday), "TUE" (Tuesday), "WED" (Wednesday), "THU" (Thursday), "FRI" (Friday), "SAT" (Saturday), or "" (unspecified). The default value that is set is "". If set with a string other than those listed above, the default value is used.

```
Example:  
DAY_OF_WEEK = SUN
```



Note

These settings are the common settings in all one layer Tier pools managed by ETERNUS SF Manager. Because of that, the settings cannot be changed for each Tier pool.

6.5.1.7 Deletion of RAID Groups in One Layer Tier Pool

The RAID groups that constitute one layer Tier pools can be deleted. Refer to "Deletion of RAID Groups" in the *Storage Cruiser Operation Guide for Optimization Function* for details.

6.5.2 Capacity Management of One Layer Tier Pool

Displaying the changes in total capacity and used capacity of a one layer Tier pool in a graph can understand changes in one layer Tier pool used capacity. This helps you understand the time of increasing physical disks in the one layer Tier pool and review easily the settings of thresholds according to the usage status.

For the method to display capacity graph of a one layer Tier pool, refer to "Display Capacity Graph of Tier Pool" in the *Web Console Guide*.

The following information can be displayed in a graph using the Dashboard. Refer to "Operations for Capacity" in the *Web Console Guide* for details.

- Tier pool capacity
- FTV capacity

Information

The information for total capacity and used capacity of a one layer Tier pool and FTV displayed in a graph is collected at 01:30:00 every morning. The collecting time is changeable in the polling service setting file. Refer to "[A.8 Polling Service Setting File](#)" for details.

6.5.2.1 Graph Type in Capacity Management

The following graphs are displayed:

- Tier pool capacity graph
 - One-month graph
The data back to one month before the present time (for 31 days) is displayed in a line graph. Plot points are displayed by the day.
 - One-year graph, Ten-year graph
The data back to one year or ten years before the present time is displayed in a line graph. Plot points are displayed by the month.
- Capacity panel in Dashboard

Dashboard displays the following three types of capacity panels. Refer to "Operations for Capacity" in the *Web Console Guide* for details.

Type of Capacity Panel	Displayed Information
Capacity ranking	<ul style="list-style-type: none">- Capacity of Tier pool- Capacity of FTV
Capacity list	<ul style="list-style-type: none">- Capacity of Tier pool- Capacity of FTV
Capacity summary	<ul style="list-style-type: none">- Capacity of Tier pool

6.5.3 Configure FTV

Only FTVs can be created in a one layer Tier pool. Configuration of FTV is performed with Web Console. This cannot be performed with ETERNUS Web GUI.

Note

Implement the changing / deletion / formatting of an FTV after updating the administration information of the FTV.

In order to update the administration information of an FTV, in relation to the ETERNUS Disk storage system of which the IP address thereof has been changed, perform the procedures listed under "Reload ETERNUS Disk Storage System Configuration Information" in the *Web Console Guide*.

6.5.3.1 Create FTV

Create an FTV.

Refer to "Creation of FTV" in the *Storage Cruiser Operation Guide for Optimization Function* for the items that can be specified to FTV.

Refer to "Create FTV" in the *Web Console Guide* for information on how to create an FTV.

6.5.3.2 Change FTV

The definition of an FTV is changeable.

Refer to "Change FTV" in the *Web Console Guide* for information on how to change it.

Point

- The current details of the definition of an FTV can be confirmed by following the procedures listed under "Display FTV" in the *Web Console Guide*.
- It is not possible to change the definition of multiple FTVs at once.

6.5.3.3 Format FTV

Refer to "Format FTV" in the *Web Console Guide* for information on how to format an FTV.

Furthermore, as an FTV is automatically formatted when being created, it is unnecessary to format a newly created FTV.

Point

- It is not possible to format multiple FTVs at once.
- Virtual Volumes cannot be formatted.

6.5.3.4 Delete FTV

Before operating the deletion, display the detailed information of the FTV that you are about to delete and confirm that deleting this is not a problem. Refer to "Display FTV" in the *Web Console Guide* for information on how to display the detailed information of an FTV.

Refer to "Delete FTV" in the *Web Console Guide* for information on how to perform the deletion.

Point

- Multiple FTVs can be deleted at once.
- An FTV that is currently assigned to a server cannot be deleted.
- Virtual Volumes cannot be deleted.
As an exception, Virtual Volumes with an "Unknown" VVOL type can be deleted. When deleting multiple Virtual Volumes, each one must be deleted individually since a batch delete is not possible.

6.5.4 Measures to Be Taken When Tier Pool Configuration Has Been Changed with Managed Devices

When the configuration of the Tier pool to be managed is changed, there is a possibility that a difference occurs between the Tier pool information present on the ETERNUS SF Manager and the Tier pool information of the device. When status update of Automated Storage Tiering is performed while in a state where there is a difference, the esast3101 message is output to the operation log.

When the esast3101 message has been output to the operation log, perform the following actions.

1. Execute the "esfast tierpool delete" command and delete only the information of the Tier pool subject to the esast3101 message.

```
> esfast tierpool delete -name name -mode file -s
```

For *name*, specify the name of the Tier pool subject to the esast3101 message.

2. In Web Console, click **Automated Storage Tiering** > **Overview**, and click **Status Update** under **Automated Storage Tiering** on the Action pane.

Refer to "Command References" in the *Storage Cruiser Operation Guide for Optimization Function* for information on the "esfast tierpool delete" command.

6.5.5 Change to Multiple Layer Tier Pool

Registering the ETERNUS SF Storage Cruiser Optimization Option license allows changing a one layer Tier pool to a two layer or three layer Tier pool, and the Automated Storage Tiering can be operated.

The procedure for that is as follows:

1. Register the ETERNUS SF Storage Cruiser Optimization Option license.
Refer to "Register License" in the *Web Console Guide* for the registration procedure.
2. Change the layer number of the Tier pool, and operate the Automated Storage Tiering.
Refer to "Change Number of Layers of Tier Pool" in the *Storage Cruiser Operation Guide for Optimization Function* for information on how to change the layer number.



Information

The introduction of Automated Storage Tiering can be examined from the access status chart. Refer to "Access Status Chart of One Layer Tier Pool" in the *Storage Cruiser Operation Guide for Optimization Function* for information on how to confirm the access status chart.



See

There is an upper limit to the number and capacity of Tier pools that can be managed by Automated Storage Tiering. Refer to "Upper Limit of Automated Storage Tiering" in the *Installation and Setup Guide* for details.



Point

The number of layers of the Tier pool in which RAID groups are being deleted cannot be changed.

6.5.6 Checking Access Status Chart of One Layer Tier Pool

Referencing the Tier pool access status chart to check the tendency of the IOPS value can evaluate whether performance can be improved and disk usage can be optimized with the introduction of Automated Storage Tiering.


Clicking the graph area displays a vertical auxiliary line at that location, and in **Capacity** and **I/O Rate** at the top right panel, the total value from the left of the auxiliary line is displayed. High sub-pool capacities required to move to a multiple-layer (two or more) Tier pool can be checked from **Capacity**. Also, from **I/O Rate**, the rate of IOPS that can be processed a High tiering level can be checked.

When FTRPEs with high IOPSs are concentrated in a single part of the graph area, performance improvements can be expected by introducing Automated Storage Tiering.

Example

The following example describes how to calculate the High sub-pool capacity required to move to a multiple-layer Tier pool.

When designing so that 90 % of IOPS produced in a target Tier pool can be processed in High sub-pool

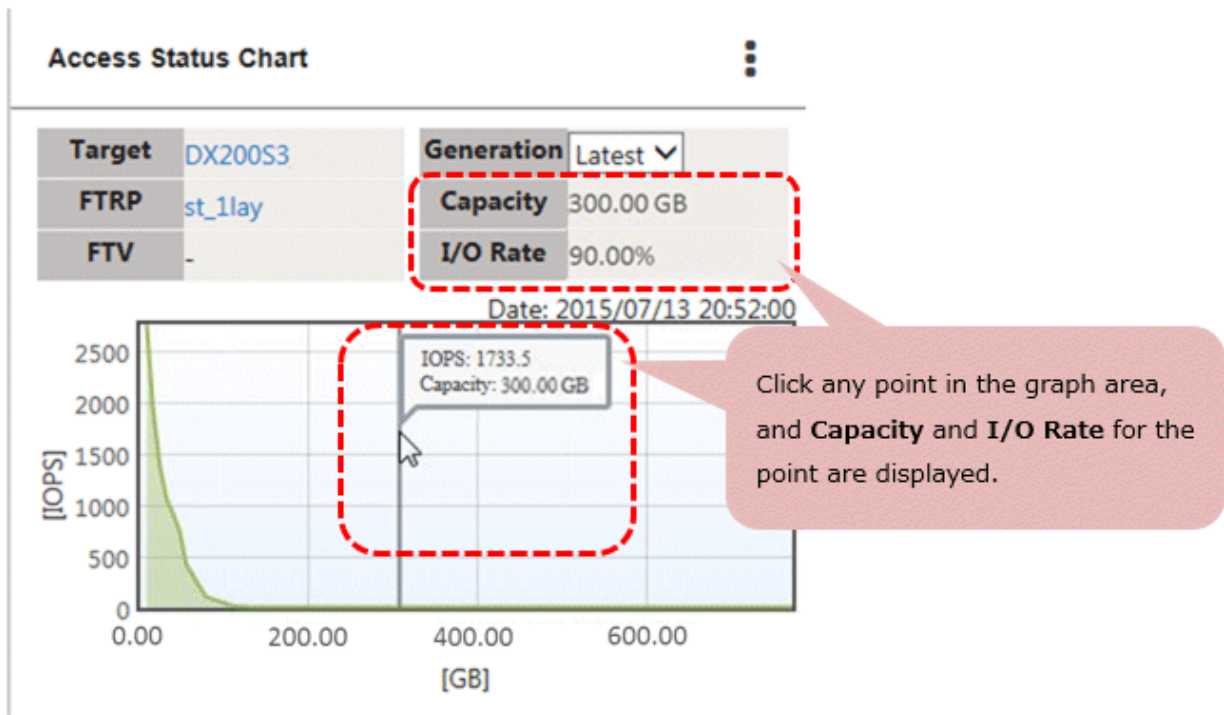

1. Click the graph area to search for a part where the **I/O Rate** is 90 %.
2. Check the value displayed in **Capacity**. That value is the required capacity for the High sub-pool.

Note

- In an FTV access status chart, only the IOPS produced in the target FTV can be checked.
- Graph data of the access status chart is created at 2:00 after Automated Storage Tiering starts. (The time listed on the left or later is an interval of IOPS calculation period.)

However, no data of the access status chart is displayed for the following cases:

- If data has never been created.
- If no access status data exists in the IOPS calculation period or evaluation period.
- Since the access status chart displays only the data of an I/O generated area, the maximum capacity value on the horizontal axis may not agree with the used capacity in a pool or FTV.

6.6 NAS Management

This section explains the following items necessary in order to perform NAS operation of the ETERNUS Disk storage system with this product.

- [Overview of Functions](#)
- [Required Setup Configuration](#)
- [Installation Steps](#)
- [Operation Method](#)



- This function cannot be used for the ETERNUS DX S6 series and the ETERNUS AF All-Flash Arrays.
- Web Console cannot be used to operate the ETERNUS DX S5 series shared folders or NAS interfaces. Use ETERNUS Web GUI of each device instead.
- Refer to the ETERNUS Disk storage system manuals for notes of NAS operation.

6.6.1 Overview of Functions

6.6.1.1 About NAS Management

6.6.1.1.1 Basic System Configuration

For a basic system configuration to perform NAS operation of the ETERNUS Disk storage system, refer to "NAS Management" in "Function Overview of Express" of the *Overview*.

6.6.1.1.2 Support Features

In order to perform NAS operation of the ETERNUS Disk storage system, this product is provided with the following features:

- [Easy Installation of NAS File System Using Wizard](#)
- [Display of Configuration Information and Fault Monitoring](#)
- [Block Level Capacity Monitoring](#)
- [Performance Management](#)
- [Backup/Restoration of NAS Volume](#)
- [Automatic Snapshot Collection of NAS Volume](#)
- [Quantity Consumed Upper Limit Management and Monitoring \(Quota Management\)](#)

Easy Installation of NAS File System Using Wizard

The "creating of a shared folder" and the "creating of a NAS interface" which are necessary when installing a NAS file system can be configured easily by using a wizard.

Display of Configuration Information and Fault Monitoring

The configuration information resources being used for ETERNUS Disk Storage system NAS can be confirmed with Web Console. In addition, when a failure occurs, the details of the failure are displayed in the event log and Dashboard of Web Console.

Block Level Capacity Monitoring

Capacity monitoring of NAS file system in ETERNUS Disk storage system is implemented at a level similar to that for block volumes.

Performance Management

This enables performance monitoring of resources with the ETERNUS Disk storage system below.

- NAS volume
- NAS system

Information

- The performance monitoring and threshold monitoring functions cannot be used for NAS port.
- The threshold monitoring function cannot be used for NAS volume and NAS system.

Backup/Restoration of NAS Volume

Backup and restoration of a NAS volume utilizes QuickOPC and a NAS backup volume. The use of the NAS backup volume provides protection against loss or corruption of the active NAS volume. In addition, the NAS backup volume can be accessed Read-Only for file level recovery.

Automatic Snapshot Collection of NAS Volume

This is a function that follows the specified schedule and automatically collects snapshots. The capture of the NAS volume snapshot is achieved using SnapOPC+. The NAS volume snapshot for the specified generation can be stored, and files and folders from the snapshot can be recovered without administrators.

Quantity Consumed Upper Limit Management and Monitoring (Quota Management)

This is a function for managing the upper limit of the quantity consumed by user/group or shared folder. This prevents in advance the depletion of total resources due to large disk volume consumption by certain users/groups or shared folders.

6.6.1.1.3 Configuration Items of NAS File System

Configure the following with Web Console in order to perform NAS operation of the ETERNUS Disk storage system.

- [Shared Folder](#)
- [NAS Interface](#)
- [NAS File System Environment](#)

Shared Folder

The shared folder refers to a folder made public on the network as a NAS file system. With this product, by creating a shared folder and setting access controls, it is possible to capture a backup and snapshot.

When creating a shared folder from Web Console, the following resources are also created simultaneously.

Resources	Explanation
NAS volume	A volume where the shared folder is created. Multiple shared folders can be configured to a single NAS volume.
NAS backup volume	A volume for backup of the NAS volume. When configuring NAS backup is done by a new NAS backup volume, one is created for each NAS volume. Configuring NAS backup volume is optional.
NAS snapshot volume	This is a volume for the NAS volume snapshot. When using NAS snapshot, one is created for each generation. Configuring NAS snapshot is optional.
NAS system volume	System volumes are used to control NAS volumes. They are created when a new NAS volume is created. It is created in the same Thin Provisioning Pool as NAS volume.

Resources	Explanation
Copy group	Copy group used to back up NAS volume. This is created only when a NAS backup volume is configured.
Copy pair	A copy pair of a NAS volume and a NAS backup volume. This is created only when a NAS backup volume is configured.
Quota settings	Quota settings for shared folder. This is created only when a quota settings are configured.

The shared folder that is created with this product can be accessed using the following protocols. As it is possible to use the following protocols simultaneously, it is possible to access a single shared folder from both UNIX and Windows clients.

- CIFS
This protocol is a developed version of SMB which is used in Windows file sharing.
- NFS
This protocol is a protocol used between UNIX based OSs.

 **See**

Refer to the ETERNUS Disk storage system manuals for details about protocols that are supported by ETERNUS Disk storage system.

In an environment that a shared folder for home directory has been created, a shared folder (home directory) exclusively for a user is automatically created when accessing the shared folder from a client on business LAN with CIFS protocol.

To access the home directory, enter the following format to the address bar or to the network drive mapping window.

```
\\nasInterfaceIpAddress\userName
```

NAS Interface

A NAS interface refers to the definition information of a network interface that manages, over a business LAN, a public IP address for access to the shared folder and information of the port to which this IP address is assigned. When using the VLAN function, it is possible to configure multiple IP addresses for one port.

 **Information**

There is no relation between the shared folder and the NAS interface. It is possible to reference the same shared folder from any NAS interface.

The NAS interface maybe assigned to a single port or 2 ports. The type of connections that can be configured are as follows:

- Active-Active connection

A method where 2 ports are used, and an IP address is configured to each. Both ports are enabled, and it is possible to access the shared folder from either port. In addition, 2 IP addresses can be publicized for clients, and it is possible to distribute the bandwidth load. In the event that one port is down, as the IP address configuration can be passed on to the other port automatically, operation with the same IP address can be continued even after recovering from the down time.

 **Information**

During the time one port is down, operation is limited to a single port. It is not possible to distribute the bandwidth load across 2 ports.

- Active-Standby connection

A method where 2 ports are used, and a single IP address is configured. Of the 2, only one port is enabled (Active port), and the other port is disabled (Standby port). When the Active port is down, the IP address configuration can be passed on to the Standby port which is automatically enabled, making it possible to continue operation with the same IP address even after recovering from the down time.

- Single connection

A method where 1 port is used, and a single IP address is configured. When the port goes down, it is not possible to access the shared folder.

Information

In order to continue business when a port is down, it is recommended to configure either Active-Active or Active-Standby connection for redundancy.


Further, with the aim of increasing communication speed and becoming more fault-resilient, multiple physical ports can be bundled and handled as one logical port. Further, a NAS interface can be allocated for that logical port (bonding port). The method of determining communication ports of bonding port is to select an operating mode and hash policy.

- Increase Communication Speed

Networks are bundled to increase communication speed.

"Figure 6.1 Increase Communication Speed" is when three 100 Mbps networks are bundled to communicate at maximum of 300 Mbps.

Figure 6.1 Increase Communication Speed

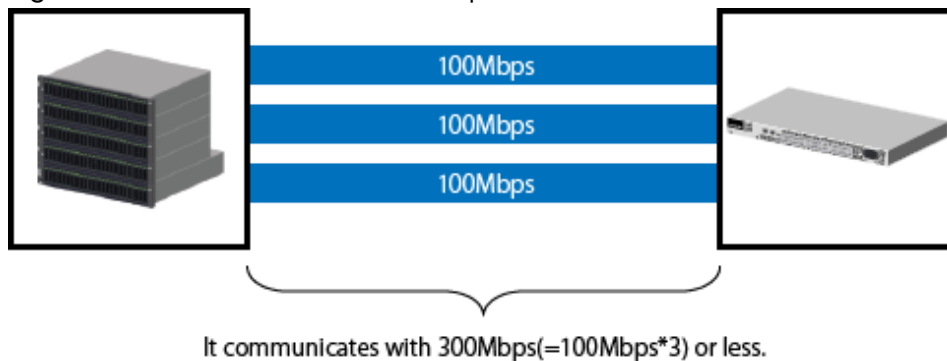


- Improved Fault-Resilience

When a communication fault occurs in any one of the bundled networks, the remaining networks can continue communication.

"Figure 6.2 Improved Fault-Resilience" is when one of 3 networks has a fault so the remaining 2 networks continue at a maximum speed of 200 Mbps.

Figure 6.2 Improved Fault-Resilience

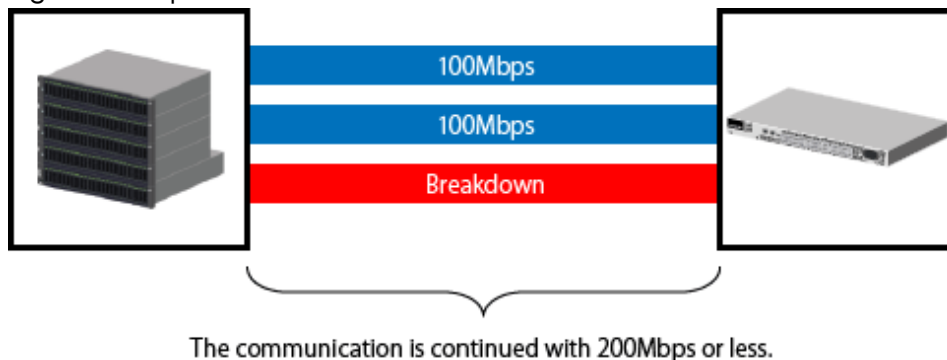

NAS File System Environment

- NAS server name

NAS server name is a unique name set within the ETERNUS Disk storage system.

By registering the NAS server name set within the ETERNUS Disk storage system and the DNS server, it is possible to set the NAS server name and access the CIFS protocol shared folder.

- DNS server

Sets the DNS server to use when operating NAS.

It is possible to set a maximum of 2 DNS Servers for IPv4 and IPv6 respectively.

- Authentication System

With this product, as access to the shared folder is controlled, an authentication system using a domain controller is provided.

The domain controller centrally manages the account information of individual clients on the network, and conducts authentication in relation to each of these clients or permits access.

In case an authentication server goes down, it is possible to register a maximum of 3 authentication servers for each authentication method.

The authentication methods supported by this product are as follows:

- Kerberos Authentication Method with Active Directory

Kerberos is a network authentication protocol designed to provide strong authentication for client/server applications. A password received from a client is authenticated, and a ticket is issued. By utilizing the ticket, the client that has been authenticated is able to utilize the network service.

When accessing the shared folder with a CIFS protocol, and when managing access to directories and files, in order to perform authentication and access control using this authentication method, register an Active Directory domain controller.

When accessing the shared folder from multiple domain users/groups, set up an explicit confidential relationship of an authentication server. This makes it possible for other domain users/groups for which an explicit confidential relationship is set up with the registered authentication server to access the shared folder.

- Authentication Method using LDAP

LDAP is a protocol for accessing the directory service. With the directory service, it is possible to easily use features such as the search function by centrally managing the account information of network equipment and clients.

When accessing the shared folder with the NFS protocol, and when performing access management to directories and files, in order to perform authentication and access control using this authentication method, register an LDAP server.

6.6.1.2 Backup of NAS Environment

This section explains an overview of backup of the NAS environment in the ETERNUS Disk storage system.




See

Refer to "Backup of NAS Environment" in the *AdvancedCopy Manager Operation Guide for Copy Control Module* for information on the backup operation for NAS environment.

6.6.1.2.1 Backup/Restoration of NAS Volume

It is possible to back up the entire NAS volume configured with Web Console to a NAS backup volume. In addition, it is possible to restore the entire NAS volume from the NAS backup volume.

Figure 6.3 Backup/Restoration of NAS Volume

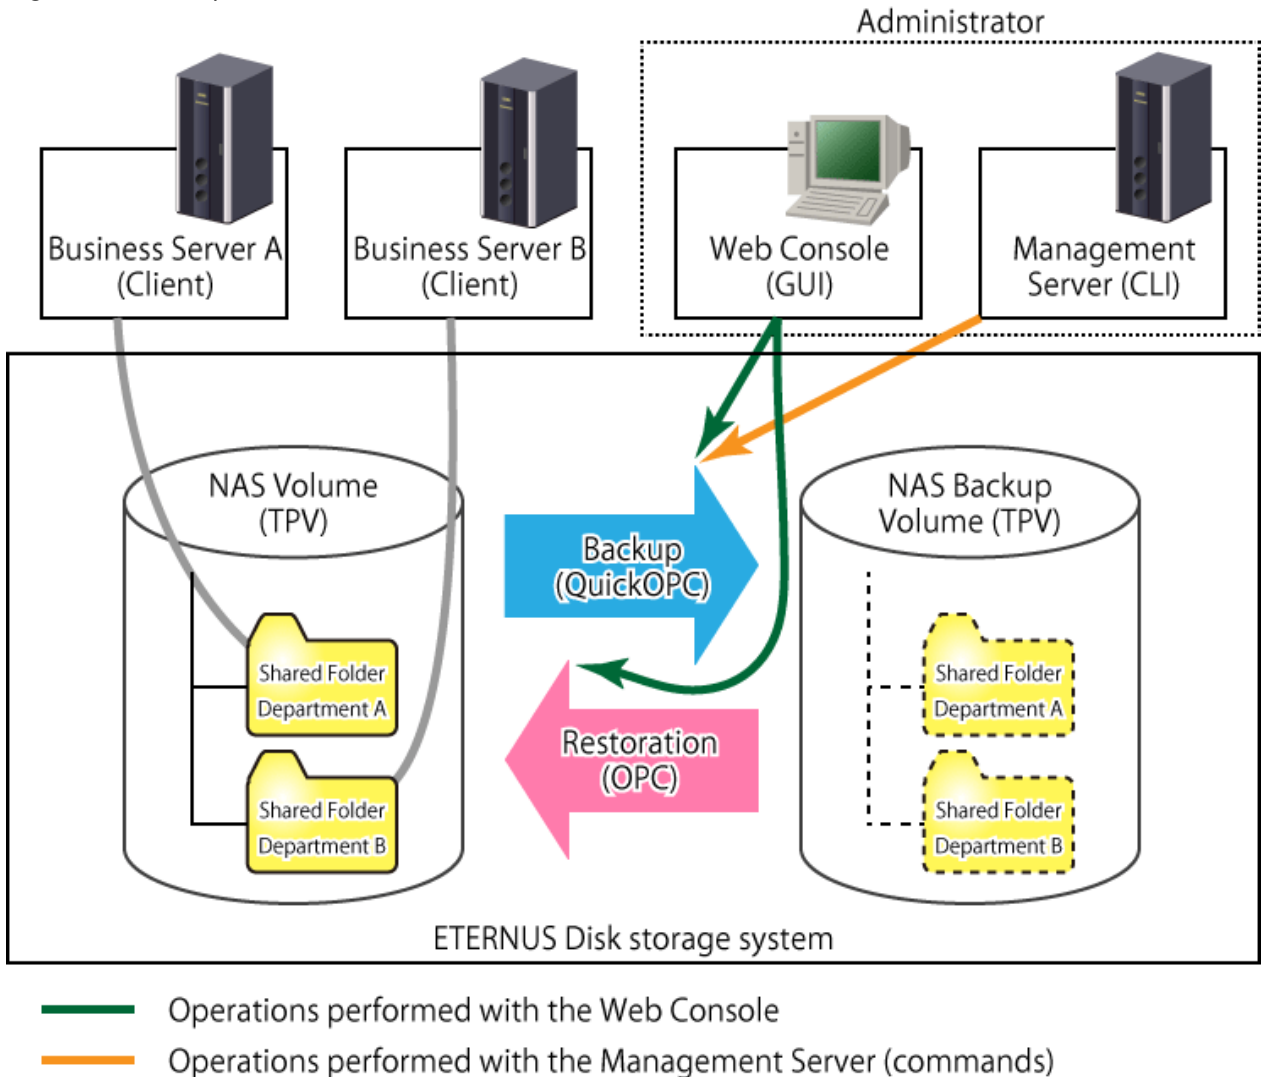


Information

- Backup / restore of the NAS volume can either be executed with Web Console, or be executed with commands from the Management Server.
- When recovering individual files from the NAS backup volume, mount the NAS backup volume and manually copy the files.
- The number of NAS volumes and NAS backup volumes creatable on one ETERNUS Disk storage system varies with the device model and its firmware version. Refer to the ETERNUS Disk storage system manuals for details.

6.6.1.2.2 Mounting/Unmounting NAS Backup Volume

The NAS backup volume that is the backup destination of the NAS volume can be mounted onto the NAS environment as Read-Only. By mounting the NAS backup volume, users can recover files themselves. In addition, a mounted NAS backup volume can be unmounted when recovery has been completed.

Figure 6.4 Mounting/Unmounting the NAS Backup Volume

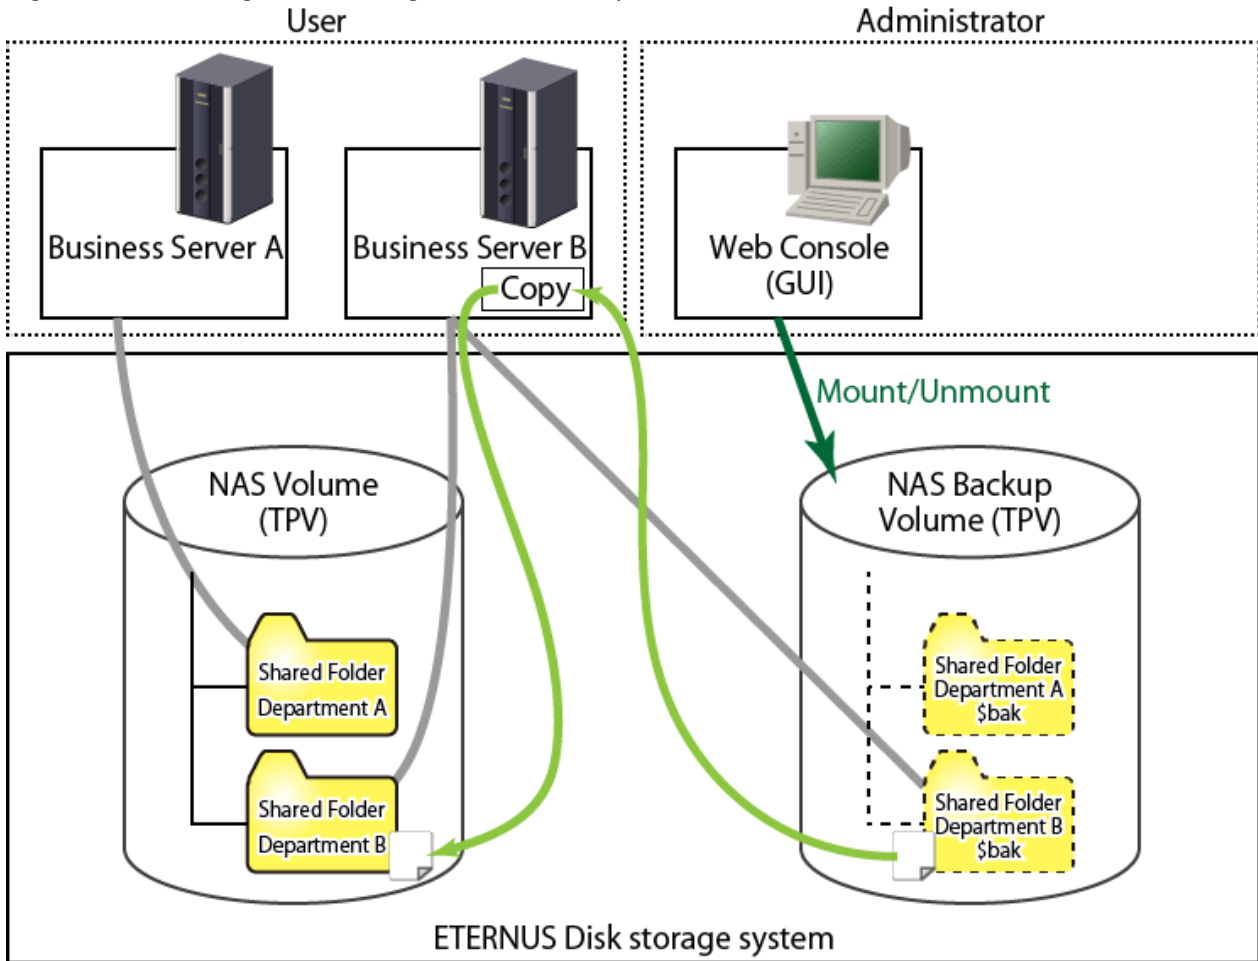

— Operations performed with the Web Console

Information

- Mounting and unmounting of the NAS backup volume can be done from Web Console.
- While the NAS backup volume is mounted, it is not possible to backup or restore the NAS volume.
- When accessing the shared folder in the NAS backup volume after mounting with the CIFS protocol, the name of the shared folder is "the name of the shared folder at the time of backup" + "\$bak". Furthermore, the name of the shared folder of the NAS backup volume is not displayed in Web Console.

6.6.1.3 NAS Environment Snapshot

This section provides an outline of the NAS environment snapshot function for the ETERNUS Disk storage system.

6.6.1.3.1 NAS Snapshot

NAS snapshots can be periodically captured and the captured snapshots can be browsed by a snapshot captured client. The NAS volume snapshot is achieved using SnapOPC+. This is provided for the purposes of NAS volume generation management and to be able to recover files and folders deleted due to operating errors.

The NAS snapshot feature can be used by configuring the snapshot from Web Console.




.....
There are two modes in NAS snapshot of NAS volumes: Automatic and Manual. In this product, Automatic mode can be set up/changed/cancelled.

To set up/change/cancel Manual mode that captures snapshots at any timing, refer to the ETERNUS Disk storage system manuals.
.....

The following items are configured:

- Snapshot generation number
Set the number of snapshot generations for that you want to own.
The settable number of NAS snapshot generations varies with the device model and firmware version number, and with the total number of NAS snapshot generations specified for a target device. Set a value in this item for a target device so that the maximum settable number of NAS snapshot generations is not exceeded.
The total number of NAS snapshot generations specified for a device means the sum of NAS snapshot generations set for all the NAS volumes in the device. The number of generations includes the number of generations taken in Automatic mode and the number of generations taken in Manual mode, as well. Refer to the NAS snapshot specification described in the ETERNUS Disk storage system manual for details.
- Schedule configuration
Sets the schedule for capturing the snapshots. A snapshot is taken on the day set every week or the hour set every day.

Figure 6.5 Outline of NAS Snapshot

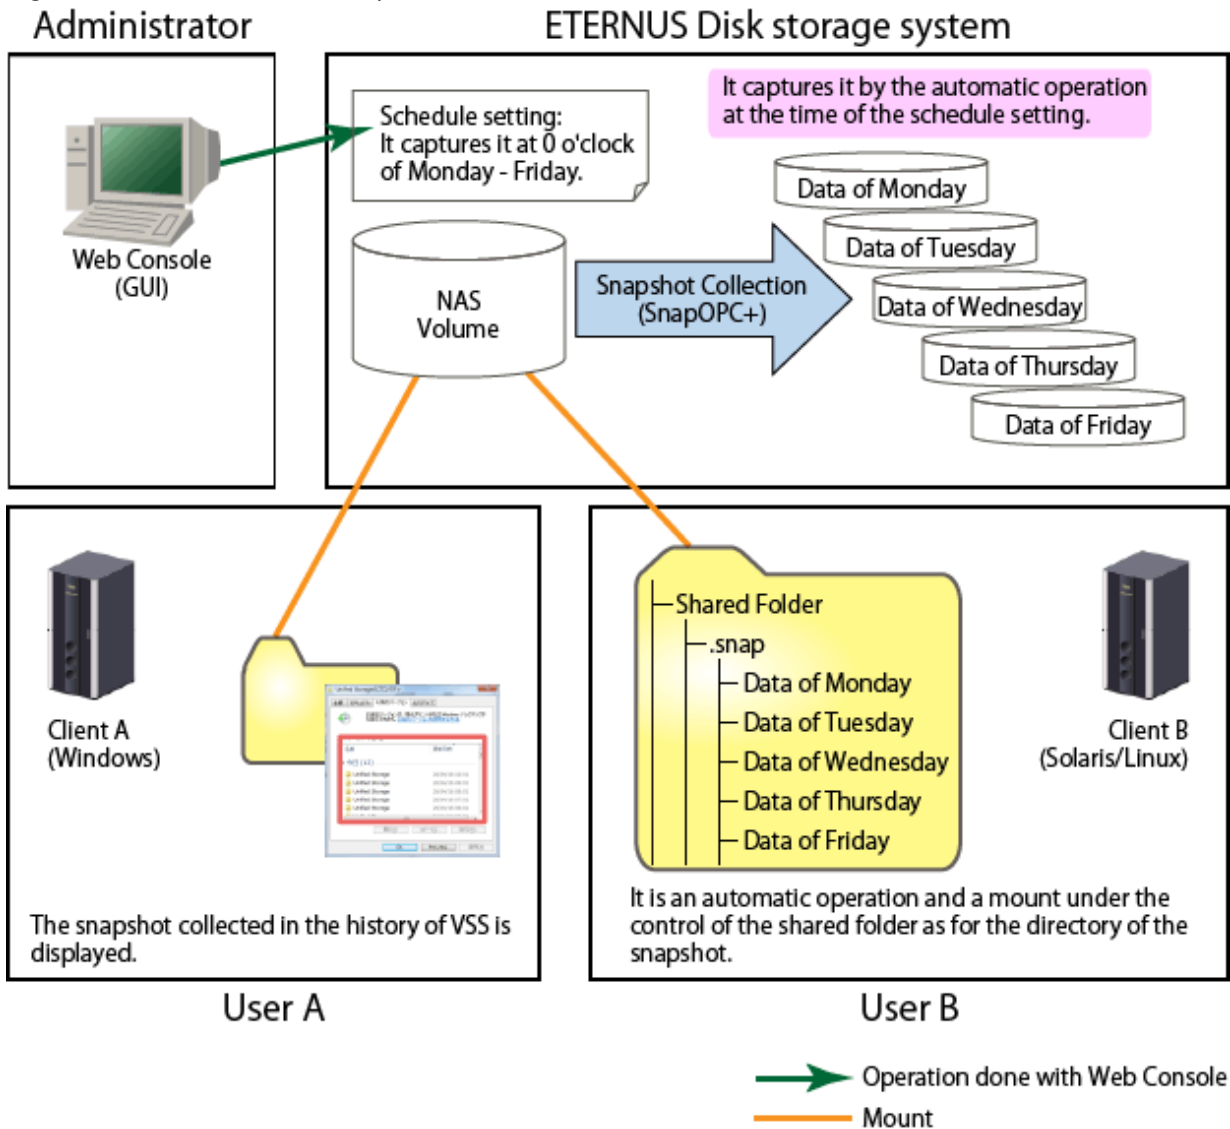


Note

If a snapshot is collected while accessing a volume from an application, a snapshot at a point in time at which half-done data was written to the volume could be created. In this case, the data consistency in the snapshot is not ensured, so that the operation of the file in the snapshot is made impossible or the file content becomes incomplete. Generally, to collect a snapshot whose data is consistent, the application accessing a volume must be stopped beforehand. Configure a schedule for snapshot collection and the number of generations in a snapshot so that correct data can be traced back through generations when data inconsistency is found in the snapshot.

6.6.1.3.2 Automatic Snapshot Collection Stop/Start

Where the NAS volume is temporarily not updated due to device maintenance period or long break, overwriting of past snapshots can be prevented by stopping the automatic snapshot collection. When restarting the automatic snapshot collection, execute automatic snapshot collection start. Automatic snapshot collection can be restarted carrying on with the snapshot before stopping.

Figure 6.6 Automatic Snapshot Collection Stop/Start

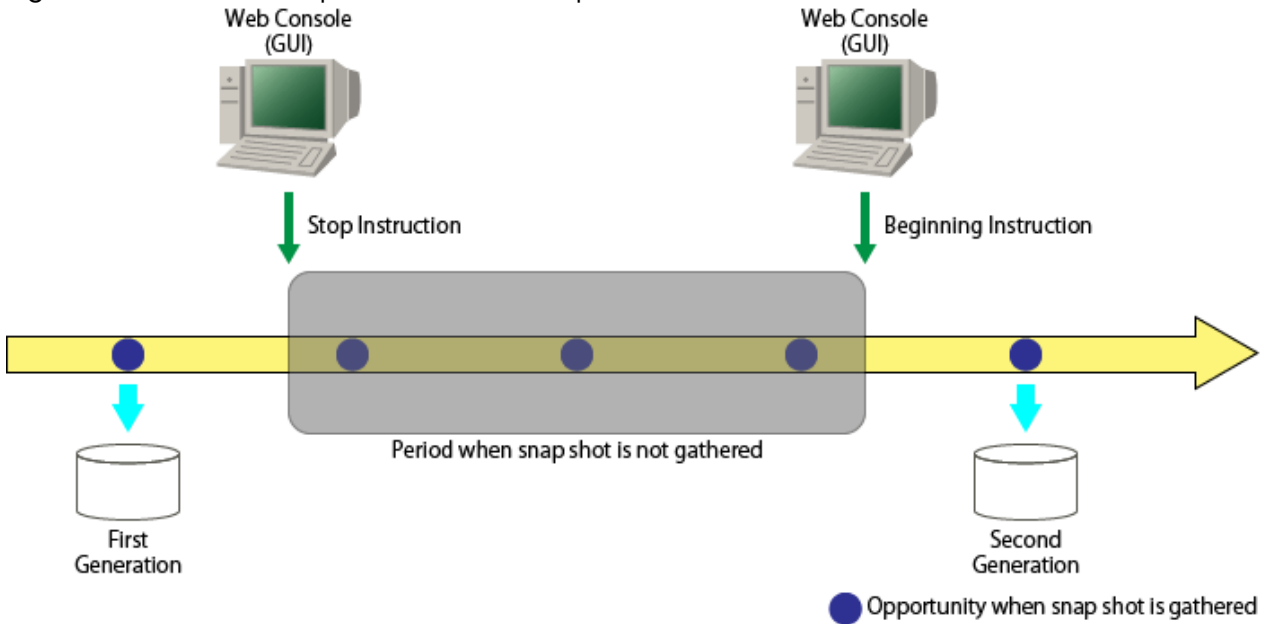

6.6.1.4 About NAS Environment Quota Management

This section provides an outline of NAS environment quota management for the ETERNUS Disk storage system.

6.6.1.4.1 NAS Environment Quota Management

With quota management, the amount of usable resources can be limited. This prevents the depletion of the whole system resources that is caused by disk capacity being consumed away by some users/groups or on some shared folders.

When accessing a shared folder with CIFS protocol, disk usage and the number of files can be limited for the users and shared folders.

When accessing a shared folder with NFS protocol, disk usage and the number of files can be limited for the users, groups, and shared folders.

The following two values can be set:

- Limit value
This is the upper limit value actually used. When updating data that exceeds the limit value, there is an error for the update.
- Warning value
This is the value for providing pre-notification before reaching the limit value. When updating data that has exceeded the warning value, an SNMP Trap and event shall be notified to the Management Server.

Point


- Quota can be set for the user/group and shared folder at the same time. There is no order of priority in settings, and control is executed by a warning value or limit value that is reached first.
- Even if a disk is used with a limit value exceeded, it may not cause any error. In this case, it is used up to disk use amount limitation value + 2 GB in the maximum.
- When a NAS volume to which quota is set is backed up, its quota setting information is backed up at the same time. For this reason, when it is restored, its quota setting information backed up is applied.

Note

When using the quota management function, enable SNMP Trap settings. If they are not enabled, no alarm notification is output when a quota threshold is exceeded.

To change SNMP Trap settings on Web Console, refer to "Change ETERNUS Disk Storage System Information" in the *Web Console Guide*.

Figure 6.7 Quota Management Outline

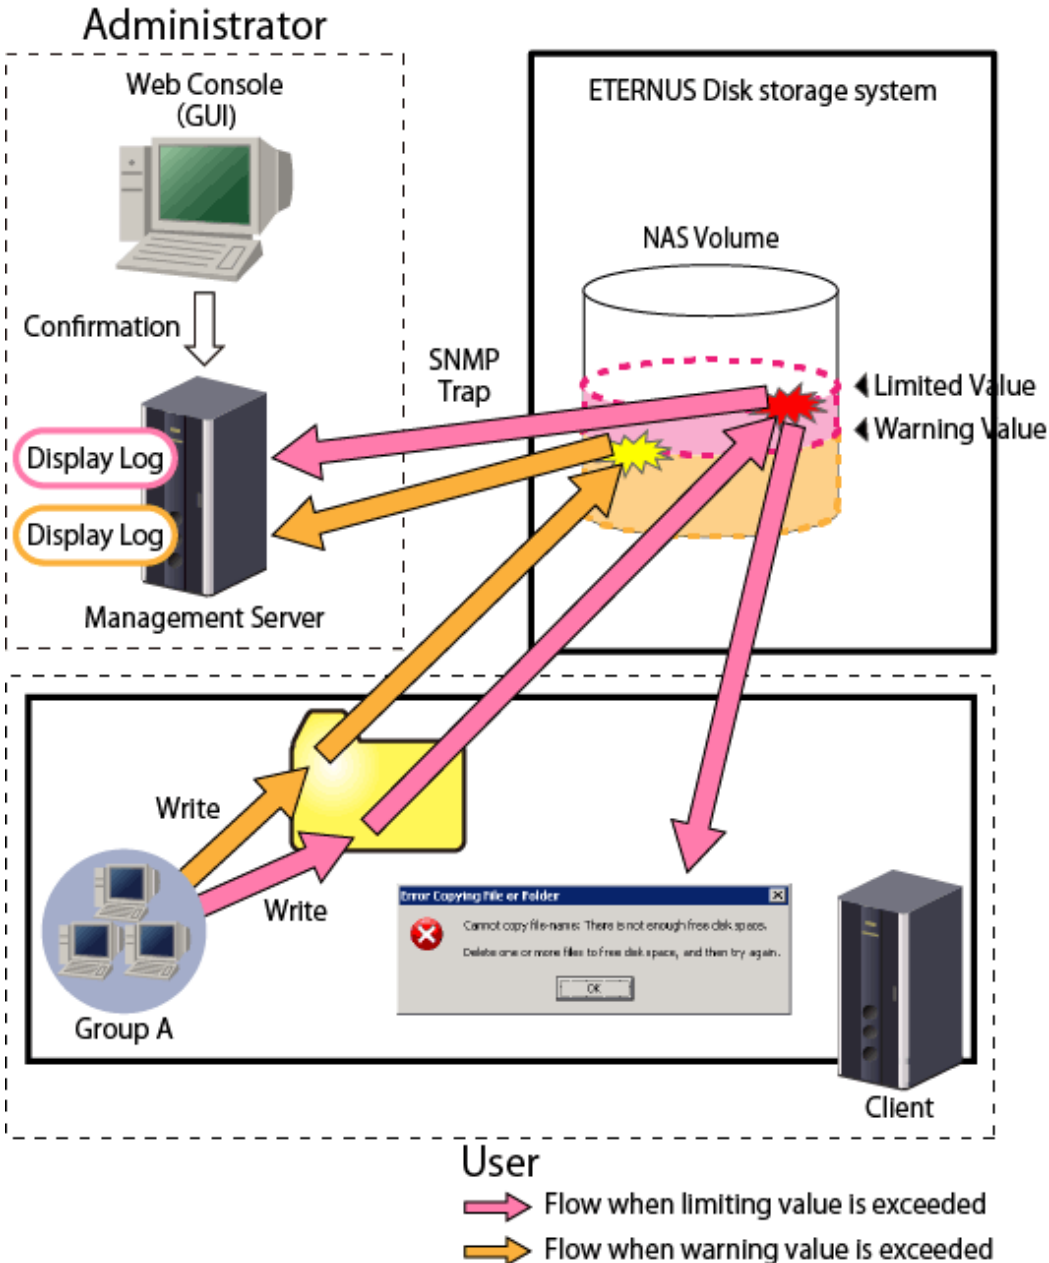

Information

- Sets a quota for the users/groups or shared folders registered on the authentication server set in "6.6.3.3 NAS File System Environment Settings".
- By using mail notification and Systemwalker Centric Manager linkup feature, you are notified by E-mail when the quota management limit value or warning value are exceeded. Refer to "6.3 Event Display and Linkage" for details.

6.6.1.4.2 Events Notified by Quota Management

With quota management, an SNMP Trap is notified by the Management Server in the following cases.

- Error occurred when data update or file creation was attempted with the limit value reached (Limit value exceeded)
- Warning value exceeded (predicted)
- Returned below warning value

The notified event can be confirmed on the quota management log screen on Web Console. Logs are stored for 30 days.



See

Refer to "Display Quota Information" in the *Web Console Guide* for the procedure to display the Quota Management Log screen.



Point

- Events are categorized by type; warning value exceeded, limit value exceeded, warning value removed, and notified every 10 minutes.
- The limit value exceeded event is notified when an error occurred because data update or file creation was attempted with a limit value reached.

6.6.1.5 Operating Environment

The functions of the NAS option of the ETERNUS Disk storage system can be used with the following environments.

Table 6.4 Operating Environment

Object	Environment
Platform	Platforms on which the ETERNUS SF Manager can be operated.
Required licenses (software)	<ul style="list-style-type: none">- ETERNUS SF Storage Cruiser Basic License (*1,*3)- ETERNUS SF Storage Cruiser Standard License (*1,*3)- ETERNUS SF AdvancedCopy Manager Local Copy License (*2)
ETERNUS Disk storage system	ETERNUS DX100 S5/DX200 S5, DX500 S5/DX600 S5 ETERNUS DX100 S4/DX200 S4, DX500 S4/DX600 S4 ETERNUS DX100 S3/DX200 S3, DX500 S3/DX600 S3
Required options (hardware)	NAS Option
Agent	Storage Cruiser's agent is not required.
Authentication methods (*4)	When accessing with the CIFS protocol: Active Directory When accessing with the NFS protocol: LDAP

*1: Required to construct the NAS file system.

*2: Required to back up the NAS volumes.

*3: Required to register either one.

*4: Required when performing access control using an authentication server for the NAS file system. When no authentication server is configured, all accesses are permitted.

6.6.2 Required Setup Configuration

This section explains requirements for installing ETERNUS Disk storage system NAS management.

Table 6.5 Prior Configurations

Subject of Configuration	Configuration Details
ETERNUS Disk storage system	<ul style="list-style-type: none"> - Application of NAS Option - Preparing ETERNUS for Registration to This Product
Authentication server	<ul style="list-style-type: none"> - Registration of User/Group - Creating Redundant Authentication Servers
DNS server	<ul style="list-style-type: none"> - NAS Server Name Registration
Management Server	<ul style="list-style-type: none"> - Device Registration - License Registration - Creating Thin Provisioning Pool - Configuration of Connection Type of Advanced Copy - Creating RAID Groups - SDP Capacity Expansion - Copy Table Size Settings

6.6.2.1 ETERNUS Disk Storage System Configuration

This section explains ETERNUS Disk storage system configuration.

The items to be configured are as follows:

- Application of NAS Option
- Preparing ETERNUS for Registration to This Product
- Registration of Local User/Local Group for Connecting to NAS

Application of NAS Option

To apply the ETERNUS Disk storage system NAS option, refer to the ETERNUS Disk storage system manuals.

Skip this work if the NAS option has already been applied to the target ETERNUS Disk storage system.

Preparing ETERNUS for Registration to This Product

Prepare the ETERNUS Disk storage system to be registered to this product. Refer to "4.3.1.1 Setting" for details about the configuration.

Skip this work if the target ETERNUS Disk storage system has already been registered to this product.

Registration of Local User/Local Group for Connecting to NAS

You can register a local user/local group for connecting to NAS on the ETERNUS Disk storage system. Refer to the ETERNUS Disk storage system manuals for information on how to register them.



.....

The local user/local group configuration and the authentication server configuration are exclusively correlated. When you use an authentication system by an authentication server, do not register any local user/local group on the ETERNUS Disk storage system.

.....

6.6.2.2 Authentication Server Setup

This section explains required configuration for the authentication server.

Before executing this configuration, delete the local user/local group registered on the ETERNUS Disk storage system for connecting to NAS.

The items to be configured are as follows:

- [Registration of User/Group](#)
- [Creating Redundant Authentication Servers](#)

Registration of User/Group

On the domain controller or LDAP server, register the users and groups that have access to the shared folders. Refer to the LDAP or domain controller manuals for information on how to perform the registration.

Note

When using both protocols of CIFS and NFS, ensure uniqueness of user/group information between Active Directory authentication server and LDAP authentication server.

Mapping Windows security identifier (SID) and UNIX server's user ID (UID)/group ID (GID) can secure the uniqueness of user/group information.

When mapping user/group information, set the UID/GID of an LDAP authentication server based on the user ID/group ID of an Active Directory authentication server.

When registering a user/group on the LDAP authentication server, register as UID/GID the number that has 10,000,000 added to the end part of SID of the user/group registered on the Active Directory authentication server (e.g.: when the value of SID is S-1-5-21-xxxx-yyyy-zzzz-nnnn, nnnn is the end part).

Creating Redundant Authentication Servers

In this product, redundant authentication servers can be registered up to 3 units. Refer to the LDAP or domain controller manuals for information on how to create redundant configuration.

6.6.2.3 Prior Configuration of DNS Server

This section describes the pre-configuration of the DNS server.

The items to be configured are as follows:

- [NAS Server Name Registration](#)

NAS Server Name Registration

When the NAS server name is specified when accessing the shared folder, the NAS server can be registered on the DNS server using any name set uniquely in the ETERNUS Disk storage system.

Refer to the manual accompanying the DNS server for the registration method.

6.6.2.4 Prior Configuration of Management Server

This section explains the prior setting of this product when installed in the Management Server.

The details to be configured are as follows:

- [Device Registration](#)
- [License Registration](#)
- [Creating Thin Provisioning Pool](#)
- [Configuration of Connection Type of Advanced Copy](#)
- [Creating RAID Groups](#)
- [SDP Capacity Expansion](#)
- [Copy Table Size Settings](#)

Device Registration

Register the ETERNUS Disk storage system to be managed with this product. Refer to "[5.2 Registering Device](#)" for information on how to register the device.

When a target ETERNUS Disk storage system has already been registered to this product, and when application of the addition of the NAS option has been performed with "[6.6.2.1 ETERNUS Disk Storage System Configuration](#)", perform the **Reload Conf.** operation for the ETERNUS Disk storage system.

Note

When using the snapshot function or quota management function, enable SNMP Trap Setup when you register devices. If SNMP Trap Setup is not enabled, snapshot collection result and an alarm output when a quota threshold is exceeded are not notified.

See

Refer to "Reload ETERNUS Disk Storage System Configuration Information" in the *Web Console Guide* for information on how to perform the **Reload Conf.** operation.

License Registration

Register the ETERNUS Disk storage system NAS license, and any other required license that is not already registered.

Refer to required licenses (software) of the "[6.6.1.5 Operating Environment](#)" for required and optional licenses.

Skip this work if the license of the object has already been registered in this product.

See

Refer to "Register License" in the *Web Console Guide* for information on how to register the license.

Creating Thin Provisioning Pool

Create a Thin Provisioning Pool in which the NAS volume is created.

Skip this work if the Thin Provisioning Pool for the NAS volume has already been made.

See

Refer to "Create Thin Provisioning Pool" in the *Web Console Guide* for information on how to create a Thin Provisioning Pool.

Information

For increased reliability, it is recommended to create the primary NAS volume and the backup NAS volume in separate Thin Provisioning Pools. When performing NAS volume backup, create two Thin Provisioning Pools; one for the primary NAS volume and one for the backup NAS volume.

Configuration of Connection Type of Advanced Copy

Configure the access connection type for Advanced Copy in order to define the NAS volume backup.

Skip this work if the backup is not being used for NAS environment or if the connection has been configured already.

See

Refer to "Configure Connection Type for ETERNUS Disk Storage System" in the *Web Console Guide* for information on how to perform the configuration.

Information

For the configuration of the connection type, select "Access through volumes" or "Access through network".

Creating RAID Groups

When using the NAS snapshot, a NAS snapshot volume is created on the RAID group. The capacity is calculated according to the following formula, and is required as free space within the RAID group.

```
RAID group free space = Total capacity of NAS volume for NAS snapshot * snapshot generation numbers * 0.001
```

Skip this work if not creating a NAS snapshot or if a NAS snapshot volume on the RAID group has already been created.

Point

For the number of snapshot generations, calculate the sum of the number of generations taken in Automatic mode and the number of generations taken in Manual mode.

Note

As shown below, if the RAID group where the NAS snapshot volume is created is shared, it may not be possible to set the maximum number of snapshot generations.

- Where creating SDPV with "SDP Capacity Expansion"
- Where creating a NAS snapshot volume for other NAS volumes
- When creating volumes for SAN

See

For the RAID group creation procedure, Refer to "Create RAID Group" in the *Web Console Guide*.

SDP Capacity Expansion

SDP capacity may need to be expanded in order to use the NAS snapshot. Skip this work when not using NAS snapshot.

The physical capacity allocated for the snapshot captured with NAS snapshot is provided by creating an SDPV. Create so that the total SDPV capacity becomes the capacity estimated below.

```
SDP additional capacity = total value for updated volume (*1) of NAS volumes for each generation
```

*1: NAS volume content that is changed between the time of one snapshot and the next snapshot.

When it is difficult to estimate size of the changed content, we recommend adding the following capacity. This is only a recommended value, so it should be modified according to the operational state.

```
SDP additional capacity = Total capacity of NAS volumes for NAS snapshot * a number between 0.3 and 0.5
```

Point

SDPV and SDP are shared with SAN AdvancedCopy.

For this reason, when using SAN AdvancedCopy and NAS snapshot on the ETERNUS Disk storage system simultaneously, prepare SDP capacity that is the total estimated volume for SAN and NAS.



Refer to "Create Volume" in the *Web Console Guide* for the SDPV creation procedure.

Copy Table Size Settings

In order to use NAS snapshot, configure the copy table size and resolution.



- Values that can be configured for the copy table size and resolution differ depending on the model of the storage device. Refer to the ETERNUS Disk storage system manuals for information on the specification of the copy table size.
- Refer to "Configure Copy Table Size for Advanced Copy" in the *Web Console Guide* for the copy table size configuration procedure. However, if an AdvancedCopy Manager license is not purchased, this cannot be configured from Web Console. Configure from ETERNUS Web GUI.

6.6.3 Installation Steps

The installation steps for performing ETERNUS Disk storage system NAS operation is explained.

Installation is implemented in the following order.

Order	Installation Item	Title of Sections Listed in the <i>Web Console Guide</i>	Optional/Required (*1)
1	Creating Shared Folder	Create Shared Folder	Required
2	Creating NAS Interface	Create NAS Interface	Required
3	NAS File System Environment Settings	Configure DNS Server	Optional
		Configure Authentication Server	Optional

*1: Tasks that must be performed in order to operate the NAS file system are "Required", while tasks that may be omitted are "Optional".



If an authentication system is not implemented then the NAS file system can be accessed from any clients connected to the business LAN. It is strongly recommended that an authentication server is properly configured and implemented.

6.6.3.1 Creating Shared Folder

Create a shared folder in order to configure the folder of the access destination of the NAS file system.

Configure the following for the shared folder:

Table 6.6 Create Shared Folder

Subject of Configuration	Configuration Details
Shared Folder	<ul style="list-style-type: none"> - Usage - Shared Folder Name

Subject of Configuration	Configuration Details
	<ul style="list-style-type: none"> - Protocol - Oplocks Setting - Data Access SMB Encryption - Enumeration Based on Access Permission Settings - Destination Volume of Shared Folder Creation Destination - NAS File System Block Size of Shared Folder Creation Destination - NAS Volume Capacity of Shared Folder Creation Destination - NAS Volume Number of Shared Folder Creation Destination
NAS Backup	<ul style="list-style-type: none"> - NAS Backup Volume
NAS Snapshot	<ul style="list-style-type: none"> - Number of Snapshot Generations - Schedule Configuration
Access Settings	<ul style="list-style-type: none"> - Access Configurations of Shared Folder - Host Access Configurations of Shared Folder - Configurations of CIFS Access Permission to Shared Folder
Quota Settings	<ul style="list-style-type: none"> - Quota Configurations of Shared Folder

Shared Folder

Usage

Purpose and intended use of the shared folder. You can select either "File Sharing" or "Home Directory". If you select "Home Directory", you cannot specify values of the following items.

Item Name	Explanation
Shared Folder Name	"homes" is fixed.
Protocol	"CIFS" is fixed.
Enumeration Based on Access Permission Settings	"Disable" is fixed.
Configurations of CIFS Access Permission to Shared Folder	No specification is allowed.

The setting items other than listed above are common to all the home directories that are created under the shared folder.

Shared Folder Name

The name of the shared folder.

Protocol

The protocol to be used by the shared folder.
It is possible to select CIFS, NFS, or both of these protocols.



See

When using a protocol other than CIFS and NFS, refer to the procedure for creating NAS environments described in the ETERNUS Disk storage system manuals.

Oplocks Setting

This is the configuration of the Oplocks function that prevents concurrent file access.
It is possible to configure this only when using the CIFS protocol.

When the Oplocks function is enabled, although improvement of access performance from the client can be expected, it becomes impossible to use the Alternate Data Stream. In addition, when selecting both protocols of CIFS and NFS, it is recommended that the Oplocks function is not enabled.

Data Access SMB Encryption

Settings that are for the SMB encryption function.

The settings can be configured only when using the CIFS protocol.

When the SMB encryption function is enabled, the communications between the client and the ETERNUS Disk storage system are encrypted. In order to use this function, the client must support SMB 3.0.

Note

When data access encryption is enabled, clients that do not support SMB 3.0 cannot access the shared folder.

Enumeration Based on Access Permission Settings

This is the Access Based Enumeration (ABE) function settings.

The settings can be configured only when using the CIFS protocol.

When the ABE function is enabled, folders and files that cannot be referenced by users accessing the shared folder are not displayed.

Destination Volume of Shared Folder Creation Destination

This is the volume where the shared folder is to be created.

When no NAS volumes are already defined, a new NAS volume is created.

When NAS volumes are already defined, one of them may be selected, or a new NAS volume may be created.

NAS File System Block Size of Shared Folder Creation Destination

This is NAS file system block size.

Only specified when creating a new NAS volume.

Information

If you increase the block size, the maximum volume capacity and the maximum file size increases, but the capacity efficiency decreases.

NAS Volume Capacity of Shared Folder Creation Destination

This is the capacity of the NAS volume.

Only specified when creating a new NAS volume.

The capacity that can be specified differs depending on the NAS file system block size. For details, refer to the NAS file system specification described in the ETERNUS Disk storage system manuals.

Information

For NAS volume, a system area of 300 GB is reserved. For this reason, the area available as a file system is the value after subtracting the system area from the area specified for the NAS volume.

For example, if a NAS volume of 3 TB is created, the user area is 2.7 TB and the system area is 0.3 TB.

NAS Volume Number of Shared Folder Creation Destination

This is a NAS volume number.

Specify this number when execute the inter-box backup of NAS volumes.

NAS Backup

This is set for the purpose of backing up the NAS volume data.

NAS Backup Volume

When there is no NAS backup volume, create a new NAS backup volume. Where there is a NAS backup volume, you can choose to either create a new NAS backup volume or use an existing NAS backup volume.

The NAS backup volume is created with the following details.

Volume Name	<i>nasVolumeName\$bak_N (*1)</i>
Capacity	Same as the source NAS volume.
Volume Type	Same as the source NAS volume.
Thin Provisioning Pool of the Creation Destination	User Selection

*1: "N" is a sequential number from 0. The number of digits varies.

When a NAS backup volume is created, the following copy group and copy pair are automatically created.

- Copy group

The copy group is a group of copy pairs. A copy pair is comprised of a source NAS volume and a destination NAS backup volume.

Copy Group Name	<i>NAS_QuickOPC_nasVolumeName_N (*1,*2)</i>
Copy Group Type	QuickOPC

*1: "N" is a sequential number from 0. The number of digits varies.

*2: Characters other than those listed below in *nasVolumeName* are replaced with hash (#):
One-byte alphanumeric character, minus (-), underscore (_), hash (#), period (.), plus (+)

- Copy pair

The copy pair is a definition of a source NAS volume and a destination NAS backup volume. A copy pair is defined within a copy group.

In addition, it is also possible to configure NAS backup individually. Refer to "[6.6.4.10 Configuring NAS Backup](#)" for this procedure.

Point

- For increased reliability, it is recommended to create Thin Provisioning Pools of the creation destination for the NAS backup volume and the NAS volume in separate Thin Provisioning Pools.
- When configuring NAS backup or backing up the NAS volume, an ETERNUS SF AdvancedCopy Manager Local Copy License is required.

NAS Snapshot

Sets the number of generations that the NAS snapshot has and the schedule that the snapshot is captured automatically. This can be configured only when setting a new NAS snapshot. When using an existing NAS snapshot, the existing setting is used. This cannot be modified.

Number of Snapshot Generations

Sets the number of snapshot generations owned.

The settable number of NAS snapshot generations varies with the device model and firmware version number, and with the total number of NAS snapshot generations specified for a target device. Set a value in this item for a target device so that the maximum settable number of NAS snapshot generations is not exceeded.

The total number of NAS snapshot generations specified for a device means the sum of NAS snapshot generations

set for all the NAS volumes in the device. The number of generations includes the number of generations taken in Automatic mode and the number of generations taken in Manual mode, as well. Refer to the NAS snapshot specification described in the ETERNUS Disk storage system manual for details.

Schedule Configuration

Sets the schedule that the snapshot is captured automatically. The following items are set.

Item	Explanation
Cycle	Selects the cycle for capturing snapshots. Daily: Snapshots captured every day at selected "Time". Weekly: Snapshots captured on the selected "Day" and "Time" of every week.
Day	Selects the days to capture the snapshot. This cannot be selected when Daily is selected for the [Cycle]. Check the check box of the days you wish to capture the snapshot.
Time	Selects the time to capture the snapshot. Check the check box of the time you wish to capture the snapshot. When an interval of capturing a snapshot is selected, the selected interval time is automatically checked from the start point of zero time.

When configuring a new NAS snapshot, the NAS snapshot volume for the collected snapshot backup is automatically created. The NAS snapshot volume is created with the following content.

Volume Name	<i>nasVolumeName\$snap_N (*1)</i>
Capacity	Same as the NAS volume of the backup source
Volume Type	SDV
RAID Group Created	User Selection

*1: "N" is a sequential number from 0. The number of digits varies.

Point

- The snapshot is collected based on the time set for the ETERNUS Disk storage system.
- When a new NAS snapshot is configured, it automatically goes into start state.

Note

When using the snapshot function, enable SNMP Trap Setup. If SNMP Trap Setup is not enabled, snapshot collection result is not notified. Refer to "Change ETERNUS Disk Storage System Information" in the *Web Console Guide* for the procedure to change SNMP Trap Setup via Web Console.

Access Settings

Access Configurations of Shared Folder

The owner and group that issue access rights in relation to the shared folder are configured. For the owner and group, configure a user and group on the authentication server configured with "[6.6.3.3 NAS File System Environment Settings](#)" or configure a local user and local group registered with "[6.6.2.1 ETERNUS Disk Storage System Configuration](#)" for connecting to NAS. When root is configured as the owner and group that has the access rights of the shared folder, it is possible to access the shared folder from all clients on the business LAN.

Point

- Set root to the owner and the group when making first time of the shared folder or the authentication server is a unsetting. Refer to "[6.6.4.3 Changing Access Setting for Shared Folder](#)" for the modification procedure when the access authority is given to a specific owner and the group after the authentication server is set.
- In order to perform detailed access control such as specifying Read-Only to individual users other than the owner, directly configure this in relation to the authentication server.

Host Access Configurations of Shared Folder

Configure host access, permitted and denials, to the shared folder. When a host to permit is not specified, access from all hosts is permitted.

It is possible to configure hosts to deny only when CIFS is specified for the protocol.

It is possible to configure hosts allowed access with root privileges only when NFS is specified for the protocol.

Point

- If a user other than root user is specified for an NFS owner and group, the root user of an NFS client cannot operate files in a shared folder with root privileges.
- If you specify a host allowed access with root privileges, only the root user of the specified NFS client can operate files in a shared folder with root privileges.

Note

The host access control to the shared folder when NFS is specified for protocol complies with the standard NFS server control.

Since there is priority on the order of specified host names, the specified order is important. Also, the host name specified for root Access Allowed Hosts must correspond to a NFS allowed host in the format of the character string.

Concretely speaking, when specifying multiple host names for the NFS allowed host, the priority order applied to root Access Allowed Hosts differs with the specified format and order. The priority order is as follows. The number 1 shows the highest priority and the number 4 shows the lowest priority. When the priority order is the same, the number listed to the left has a priority.

Priority Order	Specified Format
1	FQDN
2	IP address, IP network (for example: 192.0.2.0/255.255.255.0)
3	Others (host name, FQDN that includes *)
4	*

Depending on the specified order, access may not be allowed with root privileges from a host specified for root Access Allowed Hosts. The following is the example:

- Inaccessible example with root privileges

Specified IP address and IP network are mixed.

```
Allowed hosts: 192.0.2.0/255.255.255.0, 192.0.2.100
root Access Allowed Hosts: 192.0.2.100
```

In the above configuration, the access from the host with IP address 192.0.2.100 is not allowed with root privileges. The reason of being inaccessible is that the IP address 192.0.2.100 falls under 192.0.2.0/255.255.255.0

specified to the left of the allowed host and 192.0.2.0/255.255.255.0 is not specified for root Access Allowed Hosts.

In this case, considering the priority order, specify the IP address first as follows.

```
Allowed hosts: 192.0.2.100, 192.0.2.0/255.255.255.0
root Access Allowed Hosts: 192.0.2.100
```

- Accessible example with root privileges

Specified FQDN and IP network are mixed.

```
Allowed hosts: 192.0.2.0/255.255.255.0, fqdn.example.com
root Access Allowed Hosts: fqdn.example.com
```

When "fqdn.example.com" specified in FQDN is defined as IP address 192.0.2.100, set as listed above, and when accessing from the host of 192.0.2.100, access is allowed with root privileges. The reason of being accessible is that "fqdn.example.com" specified in FQDN is applicable to high priority of allowed hosts.

Configurations of CIFS Access Permission to Shared Folder

Configure access permission to the shared folder with CIFS protocol on a per user/group basis.



When CIFS access permission has been configured, the users/groups that are not permitted to access cannot access the shared folder with CIFS protocol.

Quota Settings

Quota Configurations of Shared Folder

Sets limits on the quantity consumed of disk/number of files for shared folders.

The following items are set:

- Disk Space (Warning, Limit)
- File Count (Warning, Limit)

In addition, the following are automatically configured when creating the shared folder:

- [Writing Authority of Shared Folder](#)
- [Shared Status of Shared Folder](#)

Writing Authority of Shared Folder

The state of whether writing to the shared folder is enabled or disabled is displayed. The client can only write into a shared folder for which writing authority is enabled, or folders and files subordinate to such a shared folder.

When the shared folder is created, writing is enabled by default.

Refer to "[6.6.4.2 Changing Basic Setting for Shared Folder](#)" for information on how to change write authority.

Shared Status of Shared Folder

The state of whether the sharing of the shared folder is active (Online) or inactive (Offline) is displayed. For a folder where sharing has been made active, a client is able to access files via the NAS interface.

When the shared folder is created, sharing is in an active state by default.

Refer to "[6.6.4.8 Activating Sharing](#)" or "[6.6.4.9 Stopping Sharing](#)" for information on how to change the shared status.

Shared folders can be created up to 256 folders per device.



Refer to "Create Shared Folder" in the *Web Console Guide* for information on how to create using Web Console.

6.6.3.2 Creating NAS Interface

Create a NAS Interface in order to configure a public IP address and a port to access the shared folder.

The following can be configured with this function:

Subject of Configuration	Configuration Details
NAS Interface (Port)	<ul style="list-style-type: none">- RIP Setting Enable/Disable- Port for Access- Connection Access Method- Port Bonding
NAS Interface (network)	<ul style="list-style-type: none">- IP Address for Access- VLAN ID

NAS Interface (Port)

RIP Setting Enable/Disable

Configure whether to enable/disable RIP configuration.

When the RIP setting is enabled, its own routing table is automatically generated based on the routing table broadcast from the router connected to the port, and the access route set in the NAS interface can be automatically selected.

When the RIP setting is disabled, there is dynamic generation of the routing table.



- When the RIP configuration is enabled, in order to dynamically create the routing table of the NAS interface, enable the RIP configuration of the router that is connected.
- When the RIP setting is disabled, the NAS interface cannot select its own access route. Set the routing table manually using the ETERNUS Disk storage system command.

Port for Access

Configure the Allocation port and the Redundant port of the NAS interface. The shared folder is accessed via the port configured as the Allocation port.

When the Allocation port is down, the shared folder can be accessed via the port configured as the Redundant port. It is also possible to use a single port operation format where a Redundant port is not configured.



- By setting the VLAN ID, 1 port can be allocated to multiple NAS interfaces.
- The following ports cannot be selected for the Allocation port:
 - Member ports of bonding port

- The following port cannot be selected for Redundant port:
 - Port of same CM as assignment Allocation port
 - Redundant port of other port
 - Member port of bonding port
- When a Redundant port is not configured, it is not possible to access the shared folder when the Allocation port goes down. For this reason, it is recommended that a Redundant port be configured.

Connection Access Method

Configure the Allocation port and Redundant port for the shared folder access connection method.

The method for configuration of the connection type is as follows:

Connection Settings	Configuration Method
Single connection	Specify only an Allocation port, and create a NAS interface.
Active-Standby connection	Specify an Allocation port and a Redundant port, and create a NAS interface.
Active-Active connection	<p>There are the two following configuration methods.</p> <ul style="list-style-type: none"> - Method 1 <ol style="list-style-type: none"> 1. Create a NAS interface of an Active-Standby connection. 2. Again, create a NAS interface. During this, specify the "Redundant port of the NAS interface" created in step 1 as the port. - Method 2 <ol style="list-style-type: none"> 1. Create a NAS interface of a Single connection. 2. Again, create a NAS interface. During this, specify the "port of the NAS interface" created in step 1 as the Redundant port.

Port Bonding

The Allocation ports and the Redundant ports for the NAS interface can be set as operating mode of member port and bonding port.

Point

- The following ports cannot be selected for bonding ports.
 - Port of CM different from the primary port
 - Port to which a NAS interface has already been assigned
 - Duplicated port

The operating mode that is the method of determining the communication ports from the bonding ports can be selected from the following.

Mode	Name	Explanation
0	Load distribution (round robin)	Performs load distribution using round robin.
1	Active backup	Communicates on one port, and when communication is not possible, switches over to other ports. This does not perform load distribution.

Mode	Name	Explanation
2	Load distribution (EXCLUSIVE OR)	Performs load distribution based on EXCLUSIVE OR of recipient/ sender
4	IEEE802.3ad	Performs load distribution following the IEEE802.3ad standard. As it communicates with the switch using Link Aggregation Control Protocol, an 802.3ad-compatible switch is required.
5	Load distribution (link speed[only transmit])	Transmit performs load distribution in line with Link speed. Receive is only performed on one port.
6	Load distribution (link speed[transmit and receive])	Transmit performs load distribution in line with Link speed. Receive allocates a communication ports as necessary for each communication partner. With IPv6, there is the same operation as mode 5.

Further, when the operating mode is "load distribution (EXCLUSIVE OR)" or "IEEE802.3ad", has policy is set as the method of determining the port.

Name	Explanation
MAC Address	This is determined using an EXCLUSIVE OR of the sender and recipient MAC addresses.
MAC Address and IP Address	This is determined using an EXCLUSIVE OR of the sender and recipient MAC addresses and IP addresses.
IP Address and Port Number	This is determined using an EXCLUSIVE OR of the sender and recipient IP addresses and port numbers.

Point

- Specify "1" for Restriction on the number of detached ports of the switch. The number "1" is set by default. The Restriction on the number of detached ports indicates the allowable number of ports disconnected from members making up a bonding port. When the number of detached ports is less than the restriction number, the bonding port is disabled. For example, if number "1" is specified for the Restriction on the number of detached ports and 4 ports make up a bonding port, when all the 4 ports become unavailable, the bonding port is disabled. When all the ports are recovered, the bonding port gets enabled.
- The function required for LAN switch varies depending on the operating mode of bonding port. Refer to the ETERNUS Disk storage system manuals for the function required for switch by operating mode.

NAS Interface (network)

IP Address for Access

Sets the IP address used for the NAS interface. Either an IPv4 address, IPv6 address or both can be configured.

VLAN ID

Sets the tag VLAN ID configured for the NAS interface.

By setting the VLAN ID for the NAS interface, the NAS interface can be additionally allocated for ports that other NAS interfaces have allocated.

Note

- When multiple NAS interface are assigned to the same port using the VLAN ID, the NAS interface must all be in different subnets.
- Port VLAN is not supported for connection between ETERNUS Disk storage system and switch.



See

Refer to "Create NAS Interface" in the *Web Console Guide* for information on settings using Web Console.



Note

- When the same subnet is assigned to the same CM, the behavior is to communicate using only a specific port.
- Where the network is allocated in an Active-Active connection form, it is necessary to set the same network address between CM.
- To create a NAS interface, allocate a new NAS interface to NAS ports and then restart the service to access the shared folder by the CIFS protocol. Before the restart process is completed, the shared folder is not accessible from the existing NAS interface by the CIFS protocol. Wait a few moments to access it again.
- If Spanning Tree Protocol (STP) is implemented into the LAN switch for connecting to NAS ports, when the STP function is enabled, access to the shared folders may fail.
Take the following steps to disable the STP function:
 - When the STP function is not required for network configuration:
Disable the STP function of the LAN switch.
 - When the STP function is required for network configuration:
At only the NAS port connected part of the connection ports of the LAN switch, disable the STP function or configure Port-Fast.

6.6.3.3 NAS File System Environment Settings

Configures the NAS file system environment settings

DNS Server

The ETERNUS Disk storage system NAS file system sets the DNS Server for performing name resolution.

The DNS Server is in both IPv4 and IPv6 formats. A primary DNS Server and secondary DNS Server can be registered for each.



Information

When Active Directory authentication Servers on which the DNS feature is enabled are registered in the ETERNUS Disk storage system, name resolution is performed using the DNS feature on the Active Directory authentication server. In this case, the DNS Server information can be displayed on Web Console.

Authentication Server

Perform configuration of the authentication server to perform client access control to the NAS file system.

Depending on the type of protocol for access, specify the following for the authentication method:

Active Directory

Specify this when accessing the NAS file system using the CIFS protocol.

LDAP

Specify this when accessing the NAS file system using the NFS protocol.

Note

- The authentication methods that can be operated differ with each protocol. For this reason, when the shared folder is accessed with an authentication method that is not supported, the authentication system does not operate.
- In the operation using Active Directory, it is required to synchronize the time between the ETERNUS Disk storage system and the Active Directory installed authentication server. It is recommended to automatically correct the time by Network Time Protocol (NTP).
- When a local user/local group for connecting to NAS is created on the ETERNUS Disk storage system, you cannot set up an authentication server.

It is possible to register a maximum of 3 authentication servers for each authentication method.

See

Refer to "Configure Authentication Server" in the *Web Console Guide* for information on settings using Web Console.

Set the access authority to the owner and the group if necessary for the shared folder made by "[6.6.3.1 Creating Shared Folder](#)" after setting the authentication server.

6.6.4 Operation Method

This section explains the operation method for performing ETERNUS Disk storage system NAS operations with this product.

The functions that can be executed during operation are as follows:

- [Access to Shared Folder](#)
- [Changing Basic Setting for Shared Folder](#)
- [Changing Access Setting for Shared Folder](#)
- [Changing NAS Interface](#)
- [Changing NAS Server Name](#)
- [Changing DNS Server](#)
- [Changing Authentication Server](#)
- [Activating Sharing](#)
- [Stopping Sharing](#)
- [Configuring NAS Backup](#)
- [Setting/Changing/Disabling NAS Snapshot](#)
- [Snapshot Reference](#)
- [Restoring from Snapshot](#)
- [Start Automatic Snapshot Collection](#)
- [Stop Automatic Snapshot Collection](#)
- [Adding Quota Settings \(User/Group\)](#)
- [Changing Quota Settings \(User/Group\)](#)
- [Deleting Quota Settings \(User/Group\)](#)
- [Adding Quota Settings \(Shared Folder\)](#)
- [Changing Quota Settings \(Shared Folder\)](#)

- [Deleting Quota Settings \(Shared Folder\)](#)
- [Performance Management for NAS Volume and NAS System](#)
- [Capacity Management of Thin Provisioning Pool](#)
- [Expansion of NAS File System](#)
- [Deleting of NAS Environment](#)

6.6.4.1 Access to Shared Folder

The access method to the shared folder is the following:

- [Access Using CIFS Protocol](#)
- [Access Using NFS Protocol](#)

Access Using CIFS Protocol

The shared folder is accessible by the Windows file sharing or network drive mapping.

Enter the following format to the address bar or to the network drive mapping window:

```
\\nasInterfaceIpAddress\sharedFolderName
```

When the shared folder is home directory, enter the following format.

```
\\nasInterfaceIpAddress\userName
```

When authenticating by Active Directory, the operation method varies depending on the presence of setup of an authentication server.

- If Active Directory is configured as an authentication server:
Enter the user name and password registered to Active Directory.
When connecting from the client participating in Active Directory, authentication is not needed.
- If an authentication server is not set up:
Enter the user name and password described in the ETERNUS Disk storage system manuals or local user name and password registered in the ETERNUS Disk storage system for connecting to NAS.

Information

Entering the IP address for NAS interface in the address bar can view sharable folders.

Access Using NFS Protocol

The shared folder is accessible by performing the NFS mount from a UNIX server using the following procedure:

When authenticating through LDAP, there is no difference in operation method with the presence of setup of an authentication server. Make the UNIX server participate in the LDAP domain to perform the NFS mount.

1. Check the NFS export path for the shared folder.
The **NFS Export Path** displayed in the **Basic** tab of the Detail Shared Folder screen is the shared folder path.
Refer to "Display Shared Folder" in the *Web Console Guide* for the procedure to display the **Basic** tab of the Detail Shared Folder screen.
2. Log in to the UNIX server with administrator privileges.
3. Execute the mount command to mount the shared folder.
When executing the mount command, specify the following:
 - For Solaris environments

```
mount -F nfs nasInterfaceIpAddress:nfsExportPath mountDestinationDir
```

- For Linux environments

```
mount -t nfs nasInterfaceIpAddress:nfsExportPath mountDestinationDir
```

Information

- Executing the showmount command on the UNIX server can view NFS mountable shared folders.

```
showmount -e nasInterfaceIpAddress
```

- The format for the *nfsExportPath* is as follows.

```
/mnt/nas/nvnasVolumeNumber/data/sharedFolderName
```

After NFS mounted, logging in to the UNIX server as the user registered to LDAP can access the shared folder with the owner/group permissions set to the shared folder.

When not authenticating through LDAP, logging in to the UNIX server can access the shared folder.

6.6.4.2 Changing Basic Setting for Shared Folder

The items of the shared folder can be changed.

The items that can be changed are as follows:

- Oplocks Configuration (when the protocol is CIFS or both CIFS and NFS)
- Data Access SMB Encryption (when the protocol is CIFS or both CIFS and NFS)
- Enumeration Based on Access Permission Settings (when the protocol is CIFS or both CIFS and NFS)
- Writing Authority

Note

- When the configuration of a shared folder is changed, sharing is temporarily suspended and it is not possible to access the shared folder. When the changes to the shared folder are complete, sharing is automatically resumed.
- When data access encryption is enabled, clients that do not support SMB 3.0 cannot access the shared folder.
- When accessing the shared folder for which CIFS access permission is configured with CIFS protocol, priority is given to CIFS access permission settings, and the write permission settings are disabled.
- For "homes" that is the shared folder for home directory, the settings in the following items cannot be changed:
 - Enumeration Based on Access Permission Settings
 - Writing Authority

See

Refer to "Change Shared Folder" in the *Web Console Guide* for information on how to make changes to the shared folder using Web Console.

6.6.4.3 Changing Access Setting for Shared Folder

The items of the shared folder can be changed.

The items that can be changed are as follows:

- Owner/Group of Shared Folder
- Hosts Permitted Access

- Hosts Denied Access (When the protocol is CIFS or both CIFS and NFS)
- Hosts Allowed Access with root privilege (When the protocol is NFS or both CIFS and NFS)
- User/Group Privileges that Permits CIFS Access

Note

- When the shared folder settings have been changed, since the share is temporarily stopped, the shared folder gets inaccessible. When the change of the shared folder has been completed, the share is automatically resumed.
- If CIFS access permission is configured, users/groups that are not permitted to access cannot access the shared folder with CIFS protocol. Also, if other access permission level is specified for a user and a group to which the user belongs, priority is given to "Read/Write".
- When a user/group for which Read/Write permission is configured with CIFS access permission accesses the shared folder, even if "No" is set for write permission to shared folder, the shared folder is writable.
- For "homes" that is the shared folder for home directory, the setting in the following item cannot be changed:
 - User/Group Privileges that Permits CIFS Access
- When changing a host to which access is allowed with root privileges, change it according to the instruction listed in [Note] of "[Host Access Configurations of Shared Folder](#)" in "[6.6.3.1 Creating Shared Folder](#)".

See

Refer to "Change Shared Folder" in the *Web Console Guide* for information on how to make changes to the shared folder using Web Console.

6.6.4.4 Changing NAS Interface

The items of the NAS interface can be changed.
The items that can be changed are as follows:

- IP Address
- RIP Setting
- Port
- Redundant port
- Member ports of bonding port
- Operating mode of bonding port

Information

- Only when a new port is set to the NAS interface to which the port is not set, the setting of the port can be changed.
- The following ports cannot be selected as the port:
 - Member ports of bonding port
- The following ports cannot be selected for Redundant ports:
 - Port of same CM as assignment Allocation port
 - Redundant port of other port
 - Member ports of bonding port

- The following ports cannot be selected as member ports of bonding port:
 - Port of CM different from the primary port
 - Port to which a NAS interface has already been assigned
 - Duplicated port
 - Primary ports of bonding port
- It is not possible to delete all member ports and disable port bonding.
- The NAS interface IP addresses allocated for the ports on which redundancy has been set cannot be changed.
- With ETERNUS SF, the same operating mode and hash policy are set for the ports and Redundant ports. When a different operating mode is set for the Redundant ports using the ETERNUS Disk storage system CLI etc, the Redundant port side operating mode shall be set to the same setting as the port side operating mode when an ETERNUS SF NAS interface operation takes place.



See

Refer to "Change NAS Interface" in the *Web Console Guide* for information on how to change NAS interface using Web Console.



Note

When changing the settings of the Redundant port, access to the shared folder using the CIFS protocol shall become temporarily impossible.

6.6.4.5 Changing NAS Server Name

Changes the name of the NAS Server. It is also possible to return it to the same setting as when the ETERNUS Disk storage system was shipped.



See

Refer to "Change NAS Server Name" in the *Web Console Guide* for the procedure for configuring from Web Console.



Note

When the Active Directory authentication Server is configured, delete the Active Directory authentication server before changing the name of the NAS Server. Refer to "[Deleting Authentication Server](#)" for how to delete the authentication server. Re-register the Active Directory Server, as well, after changing the NAS Server name.

6.6.4.6 Changing DNS Server

Change the DNS Server settings.

The change procedure and items that can be changed are the same as when configuring the DNS Server. Refer to "[DNS Server](#)".

6.6.4.7 Changing Authentication Server

The values of the authentication server can be changed.

The steps for making changes and the items that can be changed are the same as those when configuring the authentication server. Refer to "[6.6.3.3 NAS File System Environment Settings](#)".

Point

When changing the domain administrator name of the authentication server, it is necessary to re-enter the password of the domain administrator. When changing items other than the domain administrator name, the password of the domain administrator is not required.

6.6.4.8 Activating Sharing

The sharing status of the shared folder can be activated.
When sharing is activated, it is possible to access the shared folder via the NAS interface.

See

Refer to "Change NAS Interface" in the *Web Console Guide* for information on how to change NAS interface using Web Console.

6.6.4.9 Stopping Sharing

The sharing status of the shared folder can be stopped.
When sharing is stopped, it is not possible to access the shared folder.

See

Refer to "Start/Stop Sharing" in the *Web Console Guide* for information on the procedure using Web Console.

6.6.4.10 Configuring NAS Backup

Configures the backup of NAS volume data.
For the NAS backup configuration, apart from creating a NAS backup volume, a copy group and copy pair can be configured.
If NAS backup is not set up, this function is enabled to create a NAS volume backup system.

Configure the following for the NAS volume:

- [NAS Backup Volume](#)
- [Copy Group](#)
- [Copy Pair](#)

NAS Backup Volume

This is the volume for backup of the data of the NAS volume.
When there is no NAS backup volume, create a new NAS backup volume. Where there is a NAS backup volume, you can choose to either create a new NAS backup volume or use an existing NAS backup volume.
The NAS backup volume is created with the following details.

Volume Name	<i>nasVolumeName\$bak_N (*1)</i>
Capacity	Same as the source NAS volume
Volume Type	Same as the source NAS volume
Thin Provisioning Pool of the Creation Destination	User Selection

*1: "N" is a sequential number from 0. The number of digits varies.

Point

For increased reliability, it is recommended to create Thin Provisioning Pools of the creation destination for the NAS backup volume and the NAS volume in separate Thin Provisioning Pools.

Copy Group

This is a group for defining copy pairs of a NAS volume and a NAS backup volume.

If no copy group definition for backup exists, a copy group is automatically created with the following settings:

Copy Group Name	NAS_QuickOPC_nasVolumeName_N (*1,*2)
Copy Group Type	QuickOPC

*1: "N" is a sequential number from 0. The number of digits varies.

*2: Characters other than those listed below in nasVolumeName are replaced with hash (#):
One-byte alphanumeric character, minus (-), underscore (_), hash (#), period (.), plus (+)

Copy Pair

This is a copy pair of a source NAS volume and backup NAS volume.

It is created when creating a copy group.

See

Refer to "Set NAS Backup" in the *Web Console Guide* for information on how to configure steps using Web Console.

Point

- When it is possible to execute this function from Web Console, the NAS backup configuration is not setup or is incomplete. When constructing a backup system of the NAS volume, implement this task.
- When configuring NAS backup or backing up the NAS volume, an ETERNUS SF AdvancedCopy Manager Local Copy License is required.

6.6.4.11 Setting/Changing/Disabling NAS Snapshot

Configures the NAS snapshot settings. Disabling NAS snapshot also uses this operation.

The items that can be set are as follows:

- Whether automatic snapshot is used
- Number of snapshot generations
- Schedule configuration (cycle, day, time)
- RAID group on which NAS snapshot volume created (can only be set when newly set)

Note

- When disabling the NAS snapshot settings, the snapshots already captured are discarded. The NAS snapshot volumes are also deleted.
- When using the snapshot function, enable SNMP Trap Setup. If SNMP Trap Setup is not enabled, snapshot collection result is not notified. Refer to "Change ETERNUS Disk Storage System Information" in the *Web Console Guide* for the procedure to change SNMP Trap Setup via Web Console.

- If snapshot settings for NAS volume is Manual mode, this operation cannot be executed. To set up/change/cancel Manual mode, refer to the ETERNUS Disk storage system manuals.

Point

- When a new NAS snapshot is set, a NAS snapshot volume is automatically created on the specified RAID group.
- The snapshot is collected based on the time set for the ETERNUS Disk storage system.
- The RAID group on which the NAS snapshot volume is created cannot be modified while the NAS snapshot is in use. Reconfigure after disabling the NAS snapshot settings.
- When a new NAS snapshot is configured, it automatically goes into start state.

See

Refer to "Set/Change/Release NAS Snapshot" in the *Web Console Guide* for the procedure for setting via Web Console.

6.6.4.12 Snapshot Reference

The captured snapshot is referenced from the client in the following way.

- Where the client server is a Windows environment
The captured snapshot can be referenced as the "previous version" using the Windows OS VSS feature.
- Where the client server is a Linux or Solaris environment
The data in the shared folder when a snapshot was captured from ".snap" under the shared folder mounted on the client can be referenced. Each snapshot is in a directory named below:

Directory Name	@GMT-yyyymm.dd-hh.mm.00 (yyyymm.dd-hh.mm is the time that a snapshot was captured (Greenwich Mean Time). The second is rounded down.)
----------------	--

Point

Users can access the ".snap" directory. However, since ".snap" is a virtual directory, it is not displayed. The following is the example of a directory content displayed by the ls command:

```
[root@esf nas]# ls -a
. .. dir1 dir2 nas.txt
[root@esf nas]# ls .snap
@GMT-2014.06.11-08.00.00 @GMT-2014.06.11-09.00.00 @GMT-2014.06.11-10.00.00
```

6.6.4.13 Restoring from Snapshot

It is possible to restore files and folders that have been modified/deleted due to operator error using the captured snapshot. The restore procedure is as follows:

- Where the client server is a Windows environment
The snapshot to be restored can be specified and executed from "Restoring a previous version" using the Windows OS VSS feature.

- Where the client server is a Linux or Solaris environment

There are directories for each snapshot in the ".snap" directory under the shared folder. Copy the files or directories you want to restore to the shared folder from the snapshots using the OS function.

Note

When data inconsistency is found in a snapshot, trace back the data through generations.

6.6.4.14 Start Automatic Snapshot Collection

Starts automatic snapshot collection.

See

Refer to "Start/Stop Automatic Snapshot Collection" in the *Web Console Guide* for the procedure for setting via Web Console.

6.6.4.15 Stop Automatic Snapshot Collection

Stops automatic snapshot collection.

See

Refer to "Start/Stop Automatic Snapshot Collection" in the *Web Console Guide* for the procedure for setting via Web Console.

6.6.4.16 Adding Quota Settings (User/Group)

Sets limits on the quantity consumed of disk/number of files for users/groups.
The following items are set:

- NAS volume
- Restricted users/groups
- Disk Space (Warning, Limit)
- File Count (Warning, Limit)

Point

- Quotas can be set for users and groups that are registered on the authentication server.
- When accessing a shared folder with CIFS protocol, quotas can be set for users.
When accessing a shared folder with NFS protocol, quotas can be set for users and groups.

See

Refer to "Add Quota Setting" in the *Web Console Guide* for the procedure for setting via Web Console.

Note

The users/groups that can be added with one quota configuration are as follows:

- Total number of user name characters within 2,048
- Total number of group name characters within 2,048

When exceeding the above described number of characters when configuring, add quota configurations by dividing into multiple instances.

6.6.4.17 Changing Quota Settings (User/Group)

Changes the quantity consumed of disk/file number limits for users/groups.
The items that can be changed are as follows:

- Disk Space (Warning, Limit)
- File Count (Warning, Limit)



Refer to "Change Quota Setting" in the *Web Console Guide* for the procedure for changing via Web Console.

6.6.4.18 Deleting Quota Settings (User/Group)

Disables the quantity consumed of disk/file number limits for users/groups.
After deleting, the quantity consumed of disk/file number limits for users/groups are "unlimited".



Refer to "Delete Quota Setting" in the *Web Console Guide* for the procedure for deleting via Web Console.

6.6.4.19 Adding Quota Settings (Shared Folder)

Sets limits on the quantity consumed of disk/number of files for shared folders.
The items that can be changed are as follows:

- Disk Space (Warning, Limit)
- File Count (Warning, Limit)



Refer to "Add Quota Setting" in the *Web Console Guide* for the procedure for setting via Web Console.

6.6.4.20 Changing Quota Settings (Shared Folder)

Changes the quantity consumed of disk/file number limits for shared folders.
The items that can be changed are as follows:

- Disk Space (Warning, Limit)
- File Count (Warning, Limit)



Refer to "Change Quota Setting" in the *Web Console Guide* for the procedure for changing via Web Console.

6.6.4.21 Deleting Quota Settings (Shared Folder)

Disables the quantity consumed of disk/file number limits for shared folders.
After deleting, the quantity consumed of disk/file number limits for shared folders are "unlimited".



Refer to "Delete Quota Setting" in the *Web Console Guide* for the procedure for deleting via Web Console.

6.6.4.22 Performance Management for NAS Volume and NAS System

The performance of NAS volume and NAS system can be managed.

Refer to "[Chapter 7 Performance Management](#)" for details.



Refer to "Operations for Performance Management of Storage Device" in the *Web Console Guide* for information on the procedure using Web Console.



- The performance monitoring and threshold monitoring functions cannot be used for NAS port.
- The threshold monitoring function cannot be used for NAS volume and NAS system.

6.6.4.23 Capacity Management of Thin Provisioning Pool

Capacity management for the Thin Provisioning Pool in which the NAS volume is created is implemented.

Refer to "[6.4 Thin Provisioning Management](#)" for details.



Refer to "Operations for Thin Provisioning" in the *Web Console Guide* for information on the procedure using Web Console.

6.6.4.24 Expansion of NAS File System

Expansion of the NAS file system can be performed.

- [Expansion of NAS Volume](#)
This is performed when there is a possibility that total free space on the NAS volume on which the NAS file system has been created may be insufficient.
- [Expansion of Thin Provisioning Pool](#)
This is performed when there is a possibility that the used capacity of the Thin Provisioning Pool in which the NAS volume is created may exceed the total capacity.

Expansion of NAS Volume

NAS volume expansion is performed using the following procedure:

1. Confirms the total free capacity for the NAS volume.
Confirms the total free capacity of the NAS volume from Web Console.
Expand the NAS volume capacity based on the size of the free capacity.



See

Refer to "Display Shared Folder" in the *Web Console Guide* for the procedure for displaying the total free capacity of the NAS volume from Web Console.

2. Disables NAS backup settings.

When NAS backup has already been set for the NAS volume to be expanded, this releases the NAS backup settings.



See

Refer to "Deleting NAS Backup Settings" in the *AdvancedCopy Manager Operation Guide for Copy Control Module* for information on how to disable NAS backup settings.

3. Disable NAS snapshot settings.

When NAS snapshot has already been set for the NAS volume to be expanded, this disables the NAS snapshot settings.



See

Refer to "[6.6.4.11 Setting/Changing/Disabling NAS Snapshot](#)" for information on how to delete NAS snapshot settings.

4. Expands NAS volume capacity.

Expands the NAS volume capacity using a new provisioning volume capacity extension function from Web Console.



See

Refer to "Expand Capacity of Thin Provisioning Volume" in the *Web Console Guide* for the procedure for expanding capacity via Web Console.



Note

- The NAS volume cannot be expanded in the following cases.
 - Where there is a copy session on the NAS volume
 - A NAS snapshot is configured on the NAS volume
- NAS backup volume and NAS system volume cannot be expanded
- When NAS backup or NAS snapshot operation is continued after expansion of the NAS volume, reconfigure after expansion.

Expansion of Thin Provisioning Pool

Expansion of the Thin Provisioning Pool in which the NAS volume is created is implemented with the following steps.

1. Confirm the capacity of the Thin Provisioning Pool.

Confirm the capacity of the Thin Provisioning Pool in which the NAS volume is created.

Refer to "[6.6.4.23 Capacity Management of Thin Provisioning Pool](#)".

Depending on the size of the available capacity of the Thin Provisioning Pool, perform the expansion of the capacity of the Thin Provisioning Pool with the following steps.

- Expand the capacity of the Thin Provisioning Pool.
Perform the expansion of the capacity of the Thin Provisioning Pool from Web Console.



Refer to the "Expand Capacity of/Format/Change Threshold Value of/Delete Thin Provisioning Pool" in the *Web Console Guide* for the procedure for expanding capacity.

A disk that is not being used is necessary to expand the capacity of the Thin Provisioning Pool. Add more disks as needed before performing the extension of the capacity.
Refer to the manual included with the ETERNUS Disk storage system for information on how to add disks.

6.6.4.25 Deleting of NAS Environment

This section explains the steps for deleting the NAS environment.
The deletion is performed with the following steps.

Table 6.7 Dismantling of NAS Environment

Order	Item	Title of Sections Listed in the <i>Web Console Guide</i>
1	Disable NAS Snapshot	Set/Change/Release NAS Snapshot
2	Deleting Authentication Server	Configure Authentication Server
3	Deleting DNS Server	Configure DNS Server
4	Deleting NAS Interface	Delete NAS Interface
5	Deleting NAS Backup Settings	Delete NAS backup settings
6	Deleting Shared Folder	Delete Shared Folder
7	Deleting NAS Volume	Delete Volume



When these steps are implemented, the NAS environment is deleted. All the data that had been stored on the NAS volume and the NAS backup volume are deleted. Do not implement this step except when deleting the NAS environment.

Disable NAS Snapshot

Disables the settings for NAS snapshot.
When dismantling the NAS environment, disable the NAS snapshot settings for all of the NAS volumes. When disabling the NAS snapshot settings individually, specify the target NAS volume and delete.



When disabling the NAS snapshot settings, the snapshots already captured are discarded. The NAS snapshot volumes are also deleted.

Deleting Authentication Server

The authentication server is deleted from the configuration.
Delete domain information and all authentication server information when you dismantle the NAS environment.



See

Refer to "Configure Authentication Server" in the *Web Console Guide* for the procedure with Web Console.



Point

After deleting the authentication server, quota cannot be added, changed or deleted.
When a NAS volume targeted for quota management is deleted, the quota setting is also deleted.

Deleting DNS Server

Deletes the DNS Server.

When dismantling the NAS environment, delete all the information from the primary server and secondary server.



See

Refer to "Configure DNS Server" in the *Web Console Guide* for the delete procedure.

Deleting NAS Interface

Deletes the NAS interface.

When deleting the NAS environment, be sure to delete all NAS interfaces. In order to delete a specific NAS interface, specify the chosen NAS interface and execute the deletion.



See

Refer to "Delete NAS Interface" in the *Web Console Guide* for information on how to delete.



Point

When the following two conditions are met, the redundancy of ports is removed:

- All NAS interfaces are deleted from Allocation ports.
- A Redundant port is set to an Allocation port.

Deleting NAS Backup Settings

Deletes the NAS backup settings.

Select "Yes" to **Delete NAS Backup Volume**, and delete the copy group, copy pair, and NAS backup volume.



See

Refer to "Deleting NAS Backup Settings" in the *AdvancedCopy Manager Operation Guide for Copy Control Module* for information on how to delete NAS backup settings.



Information

Even if all shared folders have been deleted, the NAS backup settings are not deleted. When deleting NAS backup settings, such as when reconfiguring the NAS file system, delete the settings from Web Console.

Deleting Shared Folder

Deletes the shared folder.

When deleting the NAS environment, be sure to delete all shared folders. In order to delete a specific shared folder, specify a shared folder of choice and execute the deletion.

See

Refer to "Delete Shared Folder" in the *Web Console Guide* for information on how to delete.

Note

- Delete the files and the folders in the shared folders beforehand.
When the files or the folders are existed in the shared folder, it is an error of the deletion the shared folders.
- If you delete "homes" that is the shared folder for home directory, before deleting "homes", use the Clear NAS Data function of the ETERNUS Disk storage system to delete all the files and folders (including home directory) under "homes". Refer to the ETERNUS Disk storage system manuals for details about the Clear NAS Data function.
- The shared folder at the time of being accessed from the client might not be able to be deleted.
Delete this after stopping access to the shared folder.

Deleting NAS Volume

Deletes the NAS volume.

See

Refer to "Delete Volume" in the *Web Console Guide* for information on how to delete.

Information

Even if all shared folders have been deleted, the NAS volume is not deleted. In order to delete the NAS volume, perform the deletion from Web Console.

Point

In the following cases, the volume for NAS cannot be deleted from Web Console.

- When a shared folder is present on the NAS volume
- When the NAS backup volume is mounted
- When the volume is a NAS system volume

Delete the NAS system volume from the ETERNUS Disk storage system. Refer to the ETERNUS Disk storage system manuals for the deletion procedure.

Chapter 7 Performance Management

7.1 Overview

This software supports performance management function for fibre channel switch and ETERNUS Disk storage systems. This function enables users to get details about the operation and load statuses of devices.

Additionally, by knowing the number of active disks, it is possible to verify the Eco-mode status of the ETERNUS Disk storage system.

In an environment using VMware vSphere Virtual Volumes, a VVOL metadata stored FTV, whose volume name is "\$VVOL_META", is excluded from performance management.



See

Refer to "1.1 Support Levels" for details about supported devices.



Note

- Do not execute performance monitoring for a single device from more than one Management Server (administrative server) at the same time. The Softek Storage Cruiser administrative servers, the ETERNUS SF Storage Cruiser Management Server or the Systemwalker Resource Coordinator administrative servers
- The performance management function always starts up when the Management Server starts up. For devices in which performance management settings have been configured, performance information collection starts in the background. Accordingly, performance information is collected regardless of whether Web Console is started or not. To stop performance information collection, execute performance management stop processing.

7.1.1 Performance Information Types

The following information can be managed: Performance monitoring can be set at different intervals, refer to "7.2.3 Setting Monitoring Intervals" for the settings available for each device.

- Fibre Channel switch

	Performance Information (Unit)	Fibre Channel Switch
Port	Transfer rates of send/receive data (MB/S)	A
	Number of CRC errors	A

A=Available, N/A=Not Available

- ETERNUS Disk storage system

	Performance Information (Unit)	ETERNUS DX500 S5/S4/S3, ETERNUS DX600 S6/S5/S4/S3, ETERNUS DX900 S6/S5, ETENRUS DX8900 S6, ETERNUS DX400 S2 series, ETERNUS DX8000 S4/S3/S2 series, ETERNUS AF650 S3/S2, AF650	ETERNUS DX60 S5/S4/S3/S2, ETERNUS DX100 S5/S4/S3, ETERNUS DX200 S5/S4/S3, ETERNUS DX80 S2/DX90 S2, ETERNUS AF150 S3, ETERNUS AF250 S3/S2, AF250
Logical volume, RAID group	Read/write count (IOPS)	A	A
	Read/write data transfer rate (MB/S)	A	A

	Performance Information (Unit)	ETERNUS DX500 S5/S4/S3, ETERNUS DX600 S6/S5/S4/S3, ETERNUS DX900 S6/S5, ETERNUS DX8900 S6, ETERNUS DX400 S2 series, ETERNUS DX8000 S4/S3/S2 series, ETERNUS AF650 S3/S2, AF650	ETERNUS DX60 S5/S4/S3/S2, ETERNUS DX100 S5/S4/S3, ETERNUS DX200 S5/S4/S3, ETERNUS DX80 S2/DX90 S2, ETERNUS AF150 S3, ETERNUS AF250 S3/S2, AF250
	Read/write response time (msec)	A	A
	Read/pre-fetch/write cache hit rate (%)	A	A
	Read (Extreme Cache) cache hit rate (%)	A (ETERNUS DX500 S5/S4/S3, DX600 S6/S5/S4/S3, DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series only)	A (ETERNUS DX100 S5/S4/S3, DX200 S5/S4/S3 only)
	Read (DRAM, Extreme Cache) cache hit rate (%)	A (ETERNUS DX500 S5/S4/S3, DX600 S6/S5/S4/S3, DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series only)	A (ETERNUS DX100 S5/S4/S3, DX200 S5/S4/S3 only)
	Read QoS delay time (msec)	A (ETERNUS DX500 S5/S4/S3, DX600 S6/S5/S4/S3, DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, ETERNUS AF650 S3/S2, AF650 only)	A (ETERNUS DX100 S5/S4/S3, DX200 S5/S4/S3, ETERNUS AF150 S3, AF250 S3/S2, AF250 only)
	Write QoS delay time (msec)	A (ETERNUS DX500 S5/S4/S3, DX600 S6/S5/S4/S3, DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, ETERNUS AF650 S3/S2, AF650 only)	A (ETERNUS DX100 S5/S4/S3, DX200 S5/S4/S3, ETERNUS AF150 S3, AF250 S3/S2, AF250 only)
NAS volume (*1)	Read/write throughput (MB/s)	A (ETERNUS DX500 S5/S4/S3, DX600 S5/S4/S3 only)	A (ETERNUS DX100 S5/S4/S3, DX200 S5/S4/S3 only)
Disk drive	Disk busy rate (%)	A	A
CM	Load (CPU usage) rate (%)	A	A
	Copy remaining amount (GB)	A	A
CA (*2)	Read/write count (IOPS)	A	N/A
	Read/write data transfer rate (MB/S)	A	N/A
CM port (*2)	Read/write count (IOPS)	N/A	A
	Read/write data transfer rate (MB/S)	N/A	A
Device	Number of active disks (Disk)	A	A
	Power consumption (W)	A	A

	Performance Information (Unit)	ETERNUS DX500 S5/S4/S3, ETERNUS DX600 S6/S5/S4/S3, ETERNUS DX900 S6/S5, ETERNUS DX8900 S6, ETERNUS DX400 S2 series, ETERNUS DX8000 S4/S3/S2 series, ETERNUS AF650 S3/S2, AF650	ETERNUS DX60 S5/S4/S3/S2, ETERNUS DX100 S5/S4/S3, ETERNUS DX200 S5/S4/S3, ETERNUS DX80 S2/DX90 S2, ETERNUS AF150 S3, ETERNUS AF250 S3/S2, AF250
	Temperature (C)	A	A
NAS system (*1)	CPU usage rate (%)	A (ETERNUS DX500 S5/S4/S3, DX600 S5/S4/S3 only)	A (ETERNUS DX100 S5/S4/S3, DX200 S5/S4/S3 only)
	Number of CIFS/NFS processes (ops/s)	A (ETERNUS DX500 S5/S4/S3, DX600 S5/S4/S3 only)	A (ETERNUS DX100 S5/S4/S3, DX200 S5/S4/S3 only)
Compression Volume (*3)	Data Compression Rate (%)	A (ETERNUS DX900 S6/S5, DX8900 S6/S4 only)	N/A
	Unaligned I/O Rate (%) (*6)	A (ETERNUS DX900 S6/S5, DX8900 S6/S4 only)	N/A
Deduplication/Compression Volume (*4)	Data Compression Rate (%) (*5)	A (ETERNUS DX500 S5, DX600 S6/S5, ETERNUS AF650 S3 only)	A (ETERNUS DX200 S5, ETERNUS AF250 S3 only)
	Unaligned I/O Rate (%) (*6)	A (ETERNUS DX500 S5, DX600 S6/S5, ETERNUS AF650 S3 only)	A (ETERNUS DX200 S5, ETERNUS AF250 S3 only)

A=Available, N/A=Not Available

*1: This information can be displayed only if the NAS option is applied.

*2: The performance information of the FC-Initiator ports can be displayed only for the ETERNUS DX S6/S5 series, DX8900 S4, or the ETERNUS AF S3 series, or for the ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4), or the ETERNUS AF S2 series, AF series that has a firmware version of V10L80 or later.

*3: This information can be displayed only for storage devices with Compression enabled.

*4: This information can be displayed only for storage devices with Deduplication/Compression enabled.

*5: This information is not displayed for volumes with Deduplication only enabled.

*6: If the firmware version is V11L40 or later, the performance information for Read and Write is displayed. If the firmware version is earlier than V11L40, the performance information for Write is displayed.

Note

- Do not simultaneously perform performance monitoring to a single device from multiple Management Server (administrative servers). The administrative server for Softek Storage Cruiser, the Management Server for ETERNUS SF Storage Cruiser, and the administrative server for Systemwalker Resource Coordinator are to be used for the performance monitoring.
- In order to prevent a discrepancy with the times shown on the performance graph due to a discrepancy in the internal clocks for the Management Server and the monitored device, it is recommended that you enable the NTP setting to the Management Server and the monitored device to synchronize the internal clocks.
- It is possible to reference performance information for Storage Cruiser. However, there is some performance information which is not supported. Refer to the manual of Systemwalker Service Quality Coordinator for details.
- If the monitored device has been restarted while performance monitoring was in progress, you may be unable to acquire accurate performance data immediately after the restarting of the device. It is recommended that you first halt performance monitoring before performing any tasks which entail restarting the monitored device.

- Performance information about the ETERNUS Disk storage system main frame volume, MVV/SDV, and ODX Buffer Volume are not supported. The value for the performance information about the RAID Group containing SDV cannot be guaranteed. Performance information values for RAIDGroup, excluding Thin Provisioning and Flexible Tier, do not contain ODX Buffer Volume.
- Performance information of SAS ports and NAS ports, which are ETERNUS Disk storage system host interfaces, is not supported.
- Performance monitoring cannot be done for the ETERNUS Disk storage system which do not have LogicalVolume (LUN).
- Because the performance information for VE ports that are used for the FCIP function is not supported, the values of the displayed performance information are not guaranteed. It is recommended that 0 is set for the transfer rate of the VE ports that are used for the FCIP function to prevent a performance monitoring or a threshold monitoring. Refer to "A.9 Explanation of Configuration Settings File" for information on how to set the transfer rate.
- The CPU and ROE usage rates are displayed for the CM load (CPU usage) for the ETERNUS DX400 S2 series, DX8000 S2 series. For other ETERNUS Disk storage systems, the ROE usage rate is not displayed. Also, for ETERNUS Disk storage systems that do not have a ROE, the parity generation processing for RAID5, RAID6 and RAID6-FR, and encryption processing that would otherwise be performed by the ROE are performed by the CM and the CM-CPU.
- RDB performance information cannot be displayed in environments that use the REC Disk Buffered Consistency function.

7.1.2 Performance Graph Window Types

It is possible to display the following graphs.

One-hour Graph window

Based on the time selected as monitoring interval, a line graph for a one-hour period is displayed. For example, if the monitoring interval is 30 seconds, a line graph for a one-hour period with values obtained at an interval of 30 seconds is displayed.

One-day Graph window

Based on the mean values for 10-minute periods, a line graph for a one-day period is displayed.

One-week Graph window

Based on the mean values per hour, a line graph for a one-week period is displayed.



Information

- Following performance values are displayed as they are obtained from the device (not their mean values).
 - CM Copy remaining amount
 - Number of active disks
 - Power consumption
 - Temperature
- If the summer time function of the operating system is enabled, a part of the graph that is supposed to show the data around the switch to summer time may not be displayed correctly.
- Each performance graph may not be able to be displayed at every monitoring interval, every 10 minutes, and every 60 minutes depending on the LAN traffic condition or network environment (for example, the Management Server and target device of the performance monitoring exist in the different subnets).

7.1.3 Threshold Monitoring Types

Threshold monitoring is supported for Fibre Channel switch and ETERNUS Disk storage systems.

The threshold monitoring function sends an alarm or report when Fibre Channel switch or ETERNUS Disk storage systems performance value reaches a certain level (threshold value) under certain conditions in daily transaction operations.

The advantage of using the threshold monitoring is that the symptom of Fibre Channel switch or ETERNUS Disk storage systems performance drop caused by changes in data processing rates and transaction processing rates can be automatically and reliably detected in daily transaction operations.

The effect that can be expected from the threshold monitoring function is that operations in the most suitable environment are enabled. This is accomplished by preventing the adverse effect of performance drops through early detection of bottleneck locations, identification of their causes, and improvement of device configuration.

The threshold monitoring function can manage the following information: You can set multiple threshold values.

- Fibre Channel switch
 - Port throughput (%)
 - A port throughput value (MB/s) is monitored as the percentage (%) of an allowable tolerance to a maximum transfer capability (MB/s).
- ETERNUS Disk storage system
 - Response time (msec) of LogicalVolume (OLU)
 - Average use (busy) rate (%) of RAIDGroup (RLU, LUN_R)
 - CM load (CPU usage) rate (%)

The following information can be added and displayed in event messages related to the threshold monitoring alarms of the ETERNUS DX S6/S5 series, ETERNUS DX8900 S4, and ETERNUS AF S3 series. To add and display the following information, they must be set. Refer to "[A.4 perf.conf Parameter](#)" for the setting method.

Additional Information That Can Be Displayed	Remarks
Volume number (Decimal notation)	-
Volume name	-
RAID group number (Decimal notation)	-
RAID group name	-
CE number (Decimal notation)	Displayed only for the ETERNUS DX900 S6/S5, DX8900 S6/S4.
CE name	Displayed only for the ETERNUS DX900 S6/S5, DX8900 S6/S4.
CM number (Decimal notation)	-
CM name	-

 **Note**

- The threshold monitoring function is always started when the Management Server is started, and the function starts threshold monitoring and obtaining performance information at the same time for a device for which performance management is specified. Accordingly, performance information is obtained and thresholds are monitored regardless of whether Web Console is started or not. To end threshold monitoring, stop threshold monitoring from this software.
- For the CM load (CPU usage) rate, the ROE usage rate is not monitored.

7.2 Flow of Performance Management

When a user gives an instruction for performance management of a target device using Web Console, the performance management unit for this product saves the device performance data for each device, and stores them as performance data to the Management Server. This performance data is displayed on a graph.

7.2.1 Checking Disk Space on Management Server

To conduct performance monitoring, sufficient disk space is required on the Management Server for performance data storage. Make sure that sufficient disk space is ensured referring to the *Installation and Setup Guide*. This software is capable of deleting performance data overdue the specified holding period. The default is seven days and data exceeded this period are automatically deleted. This period can be modified. To change the number of days to store performance data refer to "[7.5 Definition File](#)".

7.2.2 Instruction for Performance Management

When performing performance management, configure and start the performance management by using Web Console.

In ETERNUS Disk storage systems, enter the minimum and maximum values for the performance information securement target Logical Volume (LUN_V). Setting LogicalVolume can reduce the effect of obtaining performance information on disk areas where performance data is saved and reduce the load. Setting LogicalVolume prevents allocation of more space than necessary for Logical Volume. Consequently, the recommended entry for Logical Volume is the minimum value for obtaining performance data.

Operation by the specification of the scope of monitoring volumes is as follows:

- When "All" is selected for the scope of monitoring volumes:
The creation or deletion of volumes is detected and appropriate volumes are included in targets for performance management.

Note

- A monitoring interval is automatically changed with the number of volumes by the ETERNUS SF system. However, it is not shorter than the monitoring interval specified when performance management was started. For the relationship between the number of volumes and the monitoring interval, refer to "[7.2.3 Setting Monitoring Intervals](#)".
Performance management stops temporarily while changing monitoring interval.
- When any volume has been created, it becomes a target volume whose performance information is obtained. Secure the disk space required for the Management Server.
- For the ETERNUS Disk storage systems shown below, the volumes existing in those systems when performance management is started are to be monitored. The volumes created or deleted after performance management has been started are not to be monitored.

Device	Firmware Version
ETERNUS DX S2 series (excluding the ETERNUS DX60 S2)	Less than V10L40
ETERNUS DX60 S2	All versions

- When "Partial" is selected for the scope of monitoring volumes:
The volumes in the specified scope are targets for performance management. Even if any volume is created or deleted, it is not included in targets for performance management.
When including any created or deleted volume in targets for performance management, refer to "[7.2.9 Updating Configuration Information](#)" to update the configuration information.

In an environment using VMware vSphere Virtual Volumes, even if a VVOL metadata stored FTV, whose volume name is "\$VVOL_META", is included in the scope of monitored volumes, it is excluded from performance

management. Also when specifying the scope of monitored volumes, the number larger than that of existing volumes cannot be specified except for the VVOL metadata stored FTV.

Information

- Since performance information is obtained internally in units of 64 for Logical Volume, performance information in the neighboring area of the Logical Volume setting is also obtained. For example, if a range of 70 to 80 is set for Logical Volume (LUN_V) on the screen, the information of Logical Volume between 64 and 127 is obtained internally. After instructing it to start the performance management, the monitoring range which is displayed on Web Console is not the value specified at the start time but the value converted to units of 64 for Logical Volume.
- When threshold monitoring is used, additional information can be displayed in the event messages. Refer to "[A.4 perf.conf Parameter](#)" for the setting method.

Point

The maximum transfer rate for the Fibre Channel switch VE port is set as 1 Gbps by default.

If the FCIP trunking function or FCIP data compression function is enabled and a transfer rate of 1 Gbps or more occurs for the VE port, then change the VE port transfer rate.

Refer to "[A.9 Explanation of Configuration Settings File](#)" for details on how to set this value.

7.2.3 Setting Monitoring Intervals

Enter the interval at which performance information is secured in the ETERNUS Disk storage systems and Fibre Channel switch common settings. You can specify 5, 10, 30, 60, 300, or 600 seconds as the interval. However, intervals that can be specified vary depending on device models and the number of Logical Volumes indicating performance level being maintained.

If "All" is selected for the scope of the monitoring volumes, this product automatically changes the monitoring interval according to the number of monitoring volumes.

If it is not possible to monitor at the specified monitoring interval by adding monitoring volumes, the monitoring interval is automatically lengthened. After that, if it is possible to shorten the lengthened monitoring interval by reducing monitoring volumes, the monitoring interval is automatically shortened. However, the monitoring interval cannot be shorter than the initially specified Minimum Monitoring Interval Time.

Monitoring Condition		Specifiable Interval (Seconds)					
Device Model Name	Number of Logical Volumes Whose Performance Is Maintained	5	10	30	60	300	600
ETERNUS DX60 S5/S4/S3 ETERNUS DX100 S5/S4/S3 ETERNUS DX200 S5/S4/S3 ETERNUS AF150 S3 ETERNUS AF250 S3/S2, AF250	1,472 or less	N/A	N/A	A	A	A	A
	1,473 to 3,200	N/A	N/A	N/A	A	A	A
	3,201 or more	N/A	N/A	N/A	N/A	A	A
ETERNUS DX500 S5/S4/S3 ETERNUS DX600 S6/S5/S4/S3 ETERNUS AF650 S3/S2, AF650	1,024 or less	N/A	N/A	A	A	A	A
	1,025 to 2,752	N/A	N/A	N/A	A	A	A
	2,753 to 11,072	N/A	N/A	N/A	N/A	A	A
	11,073 or more	N/A	N/A	N/A	N/A	N/A	A
ETERNUS DX900 S6/S5 ETERNUS DX8900 S6 ETERNUS DX8000 S4/S3 series	3,200 or less	N/A	N/A	A	A	A	A
	3,201 to 12,416	N/A	N/A	N/A	A	A	A
	12,417 or more	N/A	N/A	N/A	N/A	A	A
ETERNUS DX60 S2	128 or less	A	A	A	A	A	N/A

Monitoring Condition		Specifiable Interval (Seconds)					
Device Model Name	Number of Logical Volumes Whose Performance Is Maintained	5	10	30	60	300	600
	129 to 2,048	N/A	N/A	A	A	A	N/A
	2,049 or more	N/A	N/A	N/A	A	A	N/A
ETERNUS DX80 S2 ETERNUS DX90 S2	No limitation	N/A	N/A	A	A	A	N/A
ETERNUS DX400 S2 series ETERNUS DX8100 S2	1,024 or less	N/A	N/A	A	A	A	A
	1,025 or more	N/A	N/A	N/A	A	A	A
ETERNUS DX8700 S2	1,024 or less	N/A	N/A	N/A	A	A	A
	1,025 to 8,192	N/A	N/A	N/A	N/A	A	A
	8,193 to 16,384	N/A	N/A	N/A	N/A	N/A	A
Brocade series	-	A	A	A	A	N/A	N/A

A=Available, N/A=Not Available

Point

In LAN traffic or cross-subnet (where there is a gateway between the performance monitoring target device and the Management Server) situations, it may not be possible to obtain the performance information inside the monitoring interval that was set. Change the monitoring interval when you cannot acquire performance information on each monitoring interval.

Note

- The Fibre Channel switch and Fibre Channel switch blade as shown in the table below, set a monitoring interval according to the FC transfer rate. If this setting is incorrect, it might not be possible to obtain the correct performance value from the device.

Device Model Name	Monitoring Interval	Transfer Rate
Brocade Fibre Channel switch (excluding switches in which the maximum transfer speed of the FC port is 16 Gbps or faster)	5 seconds	1 - 25 Gbps
	10 seconds	1 - 12 Gbps
PRIMERGY Fibre Channel switch blade	30 seconds	1 - 4 Gbps
	60 seconds	1 - 2 Gbps

- On the performance information for the number of active disks, power consumption and temperature, the performance monitoring interval sets 60 seconds if its interval is set to shorter than 60 seconds.
- When performing performance management for Brocade series managed by SNMPv3 protocol, it is required to change the monitoring interval of Brocade series according to the number of managed devices. Set monitoring interval to a value larger than the value calculated by the following formula. If the calculated value is 60 or more, set monitoring interval to 60 seconds.

$$\text{Calculated value} = a + b * 2$$

a: Total number of Disk storage systems, All-Flash Arrays, and Brocade series, which are managed by SNMPv3 protocol.

b: Number of devices whose performance is managed among Brocade series, which are managed by SNMPv3 protocol.

In the following example, a calculated value is 7 and set monitoring interval to 10, 30, or 60 seconds:

- The total number of Disk storage systems, All-Flash Arrays, and Brocade series, which are managed by SNMPv3 protocol, is 3.
- The number of devices whose performance is managed among Brocade series, which are managed by SNMPv3 protocol, is 2.

Calculated value = 3 + 2 * 2

Since the performance management unit is started as a daemon of the Management Server, the unit continues obtaining performance information while the Management Server is active, without starting Web Console.

The logical configuration of the storage device is recognized, and the obtaining of performance information starts. At the start of obtaining performance information of the selected storage system, an amount of time (tens of seconds to several minutes) is spent to obtain the logical configuration before any performance information is actually obtained.

Performance monitoring status, description and action are described as follows:

Performance Monitoring Status	Description	Action
Monitoring	Shows that performance monitoring works normally.	No action is required.
Recovering	Shows that performance monitoring is in recovery state.	Management Server cannot communicate to devices. Check the network and device conditions. If logged on to ETERNUS Web GUI, log off from it.
Error	Shows that performance monitoring is in error state.	It is possible that writing to performance information file failed. Check the write access to file and the file system capacity and then perform the following steps. Refer to "7.2.10 Performance Data" for the location to store performance information file in: <ol style="list-style-type: none"> Record the performance monitoring settings contents <Recorded settings contents> <ul style="list-style-type: none"> - Interval before obtaining performance information (in seconds) - Performance monitoring targets (only for ETERNUS Disk storage system. Minimum LUN_V, Maximum LUN_V) Stop performance monitoring Refer to "7.2.8 Instruction for Stopping Performance Management". Start performance monitoring based on the settings contents recorded in step 1 Refer to "7.2.2 Instruction for Performance Management" and "7.2.3 Setting Monitoring Intervals". <p>If despite of the above steps having been taken, any performance monitoring error is not resolved, internal error may be occurring. Contact Fujitsu Technical Support.</p>

7.2.4 Displaying Performance Information of Selected Device

Confirm by displaying the graph using Web Console.

In addition, the performance information can be output to the CSV format file by using the performance information operation command (storageadm perfdata).

7.2.5 Displaying Fibre Channel Switch Performance Information

Select a port whose performance information you want to display in graph.

7.2.6 Displaying Storage Performance Information

7.2.6.1 Displaying Logical Volume and RAID Group Performance Information

Select the number of LogicalVolume or RAID Group whose performance information you want to display in graph.



Performance information about the ETERNUS Disk storage system main frame volume, MVV/SDV, and ODX Buffer Volume are not supported. The value for the performance information about the RAID Group containing SDV cannot be guaranteed. Performance information values for RAIDGroup, excluding Thin Provisioning and Flexible Tier, do not contain ODX Buffer Volume.

7.2.6.2 Displaying Disk (Physical Drive) Performance Information

Select the number of the disk whose performance information you want to display in graph.

7.2.6.3 Displaying CM Performance Information

Select the CM or CM CPU whose performance information you want to display in graph.

7.2.6.4 Displaying CA and CM Port Performance Information

Select the CA or CM Port from a list of ports whose performance information you want to display in graph.

7.2.6.5 Displaying Number of Active Disks, Power Consumption, and Temperature Performance Information

Select the performance information you want to display in graph.



When the specified ETERNUS Disk storage system has no Eco-mode function, the number of active disks, power consumption and temperature graph is not displayed. Refer to "Energy-saving Operation for Storage Devices" in "Function Overview of Storage Cruiser" of the Overview for information on the ETERNUS Disk storage systems that have the Eco-mode function.

Before the displaying the performance information for the number of active disks, power consumption and temperature, it is necessary to upgrade to the firmware that supports the Eco-mode operation and change the composition of the device.

7.2.6.6 Displaying Performance Information of NAS Volume and NAS System

Select the performance information you want to display and display the graph.



If the ETERNUS Disk storage system does not support NAS function, performance information of NAS volumes and NAS systems is not displayed. Even if NAS function is supported, it is necessary to perform "[Required Setup Configuration](#)". In order to display performance information, after performing pre-configuration, it is necessary to perform "[Update Configuration Information](#)" and restart performance monitoring.

7.2.6.7 Displaying Performance Information of Compression Volume or Deduplication/Compression Volume

Select the performance information to display in the graph from the volume list.



The volume list shows only the volumes with Deduplication or Compression enabled.

7.2.7 Examples of Use of Performance Management

If an I/O delay from the server node to a storage system occurs, the user can check for the cause in the storage system by using the methods described below. These are only examples, so all causes of I/O delays cannot be determined by use of these methods.

1. Identify the time when the I/O processing delay occurred and the access path where the delay occurred.
2. Use this software to check the Affinity Group number and Logical Volume number of the ETERNUS Disk storage system defined in the target access path.
3. Using performance management, display and check the target LogicalVolume performance values.
4. If a response of the LogicalVolume unit takes a long time, check RAID Group performance. If a response of RAID Group also takes a long time, find another Logical Volume belonging to RAID Group, and find the LUNs to which the Logical Volume is allocated. Check the I/O statuses of these Logical Volumes, and check for a heavy load on RAID Group. If there is a heavy load, move the appropriate LogicalVolume to another RAID Group, or take other appropriate action.

7.2.8 Instruction for Stopping Performance Management

Stop the performance management processing on Web Console.

Refer to the following in the *Web Console Guide* for information on how to stop the processing:

- For storage devices
"Start/Change Settings of/Stop Performance Monitoring" in "Operations for Performance Management of Storage Device"
- For FC switches
"Start/Change Settings of/Stop Performance Monitoring" in "Operations for Performance Management of Network Device"

7.2.9 Updating Configuration Information

Device configuration information is independently maintained in the performance management function.



- When "All" is specified for the scope of monitoring volumes when starting performance management, it is not required to change the information on device configuration using the procedure mentioned below. The configuration information is automatically updated at the following timing.

- When the volume is created or deleted

If the configuration information must be updated before the volume creation or deletion, perform the **Reload Conf.** operation for the target device with Web Console. Refer to "[7.2.2 Instruction for Performance Management](#)".

- When the firmware is updated

Depending on the configuration of the device, the update may take some time to be completed. In addition, the performance information that is displayed may not be correct until the configuration information update is

completed. To immediately update to the latest status, update the configuration information with the ["Configuration Information Update Procedure \(When "All" is selected for the scope of monitoring volumes\)"](#) procedure when updating the firmware.

However, to perform a threshold monitoring of RAID groups created after the performance management is started, it is required to stop and restart threshold monitoring. Refer to ["7.3.4 Setting Threshold Monitoring Information"](#) for details.

- If the scope of monitoring volumes has been changed, set the scope of monitoring volumes according to the change.



To change the device configuration, update the device configuration information that is maintained by the performance management function according to the procedure shown below. Also perform the update if the configuration for a device used to execute performance monitoring and threshold monitoring has been changed.

If the configuration for a device used to execute performance monitoring and threshold monitoring has been changed, the configuration information before the update is used for performance monitoring and threshold monitoring. Performance information and threshold monitoring, shown in the procedure below, cannot be guaranteed prior to the configuration information update.

Configuration Information Update Procedure (When "Partial" is selected for the scope of monitoring volumes)

1. Record the performance monitoring settings. (if performance monitoring is used).
<Settings for recording>
 - Scope of monitoring volumes
 - Minimum Monitoring Volume No (only for ETERNUS Disk storage system)
 - Maximum Monitoring Volume No (only for ETERNUS Disk storage system)
 - Monitoring Interval Time
2. Stop performance monitoring. (if performance monitoring is used.)
Refer to ["7.2.8 Instruction for Stopping Performance Management"](#) for details.
3. Change the configuration of the supported device.
4. Start performance monitoring based on the settings recorded in step 1. (if performance monitoring is used).
<Setting>
 - Scope of monitoring volumes (Select "Partial")
 - Minimum Monitoring Volume No (only for ETERNUS Disk storage system)
 - Maximum Monitoring Volume No (only for ETERNUS Disk storage system)
 - Monitoring Interval Time
 - Create Device Configuration File (Select "Yes")

Refer to ["7.2.2 Instruction for Performance Management"](#) and ["7.2.3 Setting Monitoring Intervals"](#) for details.

Configuration Information Update Procedure (When "All" is selected for the scope of monitoring volumes)

1. Record the performance monitoring settings. (if performance monitoring is used).
<Settings for recording>
 - Monitoring Interval Time
2. Stop performance monitoring. (if performance monitoring is used.)
Refer to ["7.2.8 Instruction for Stopping Performance Management"](#) for details.
3. Change the configuration of the supported device.

4. Start performance monitoring based on the settings recorded in step 1. (if performance monitoring is used).

<Setting>

- Scope of monitoring volumes (Select "All")
- Monitoring Interval Time

Refer to ["7.2.2 Instruction for Performance Management"](#) and ["7.2.3 Setting Monitoring Intervals"](#) for details.

7.2.10 Performance Data

Performance data is saved in CSV files in the following directory of the Management Server:

Platform for Manager	Location
Windows	\$TMP_DIR\Manager\var\opt\FJSVssmgr\current\perf (\$TMP_DIR means "Work Directory" specified at the Manager installation.)
Solaris OS, Linux	/var/opt/FJSVssmgr/current/perf

You can save these files by saving the entire directory as necessary, and you can display old information as necessary by recovering it in the same format.

However, the automatic deletion function operates in the performance data. When restoring, execute it after confirming days of the data retention duration. Refer to ["A.4 perf.conf Parameter"](#) for the data retention duration.



Example

Case of Solaris OS:

- Backup

```
# cd /var/opt/FJSVssmgr/current/perf/
# tar -hcf - csv |compress -c > csv.backup.tar.Z
```

- Restore

```
# cd /var/opt/FJSVssmgr/current/perf/
# uncompress -c /var/opt/FJSVssmgr/current/perf/csv.backup.tar.Z | tar -xvf -
```

7.3 Flow of Threshold Monitoring

When a user uses Web Console to issue an instruction for threshold monitoring of the devices subject to performance management, this software then sequentially analyzes the performance data.

If a problem is detected from the performance information, it is displayed as an alarm in the Threshold Monitoring Alarms.



Information

When a problem is displayed as an alarm in the Threshold Monitoring Alarms, the event level is shown as [Warning].

7.3.1 Checking Disk Space on Management Server

To monitor thresholds, disk capacity is required for the Management Server. About 4 MB is required. Make sure that the server has sufficient disk space.

7.3.2 Instruction for Threshold Management

Enable the threshold monitoring on the target device. Then you can set the threshold monitoring condition. To do so, however, performance information of the device must have already been obtained by performance management.

7.3.3 Setting Threshold Monitoring Hours

Setting the threshold monitoring hours enables to set a time period for threshold monitoring. If no time period is set, thresholds are monitored and alarms are reported for all time periods.

To set a period of time for threshold monitoring, "Threshold Monitoring Time" and "Alarm Display Time" are available.

- Threshold Monitoring Time

Period of time that thresholds are monitored in a day

- Alarm Display Time

Period of time and frequency that determines whether the performance data exceeded the threshold during the threshold monitoring time. Period of time must be within "Threshold Monitoring Time". The parameters that can be specified for frequency are as follows.

Parameters That Can Be Specified	Meaning
All	All alarms in the period of time are notified. (Default)
Day by Day	An alarm is notified only when the first threshold is exceeded in during the period of time in a day.
Every Monitoring Time	Same as All .
Nothing	Alarm are not notified.

7.3.4 Setting Threshold Monitoring Information

Define threshold setting information of the target device, and issue an instruction to start monitoring. You can set multiple thresholds setting information on each device.

The threshold setting information includes "Threshold", "Minimum Threshold Monitoring Interval", "Minimum Alarm Tolerance Time", "Alarm Tolerance Level", and "Lower Level". By configuring these five settings in together, you can determine if there are any problems in the performance data.

Threshold Setting Information	Meaning
Threshold	A value to determine whether there is a problem in the performance data.
Minimum Threshold Monitoring Interval	This is the interval for evaluating whether there are any problems in the performance data. If the performance data exceeds the threshold within the specified interval, the next evaluation starts after alarm is notified. In this case, the interval is taken from the point when the performance data exceeded the threshold.
Minimum Alarm Tolerance Time	Specifies the total time to determine whether the performance data exceeds the threshold within the Minimum Threshold Monitoring Interval . The thinking behind the total time differs depending on the specification of the Alarm Tolerance Level .
Alarm Tolerance Level	Specifies "Total Time" or "Continuous Time". - When "Total Time" is specified The total time for the Minimum Alarm Tolerance Time is the total value for all the time in which the performance data exceeds the threshold, during the Minimum Threshold Monitoring Interval . - When "Continuous Time" is specified

Threshold Setting Information	Meaning
	The total time for the Minimum Alarm Tolerance Time is the time for which the performance data continuously exceeds the threshold within the Minimum Threshold Monitoring Interval .
Lower Level	When "Total Time" is specified for the Alarm Tolerance Level , the Lower Level can be set. When the performance data is below this value, the total time for the Minimum Alarm Tolerance Time is reset.

Refer to ["7.6 Examples of Threshold Monitoring"](#) for examples of threshold monitoring.

Incidentally, since the threshold monitoring unit is started as a daemon of the Management Server along with the performance management unit, the threshold monitoring unit continues threshold monitoring while the Management Server is active, regardless of the access from Web Console.

Note

- For the CM load (CPU usage) rate, the ROE usage rate is not monitored.
- The "Minimum Alarm Tolerance Time" can be specified within a range that is above the monitoring interval and below the Minimum Threshold Monitoring Interval. In addition, the "Minimum Threshold Monitoring Interval" can be specified within a range that is above the "Minimum Alarm Tolerance Time" and below 1440 minutes. For this reason, if the range of monitored volumes is set to "All" to change the monitoring interval automatically, the Alarm Tolerance Time and Threshold Monitoring Interval are also changed automatically. However, the Alarm Tolerance Time cannot be shorter than the initially specified "Minimum Alarm Tolerance Time". In the same way, the Threshold Monitoring Interval cannot be shorter than the "Minimum Threshold Monitoring Interval".
- When individually setting the threshold for the newly created volume, perform the following procedure:
 1. Record the performance monitoring settings.
 - Settings for recording
 - Monitoring Interval Time
 2. Stop performance monitoring. (If performance monitoring is used).
Refer to ["7.2.8 Instruction for Stopping Performance Management"](#) for details.
 3. Start performance monitoring based on the settings recorded in step 1.
 - Settings
 - Range of Monitoring Volume No (Select "All")
 - Monitoring Interval Time

Refer to ["7.2.2 Instruction for Performance Management"](#) and ["7.2.3 Setting Monitoring Intervals"](#) for details.

- To perform a threshold monitoring of newly created RAID groups by creating a RAID group, expanding the capacity of the sub-pools, or expanding the capacity of Thin Provisioning Pools, perform the following procedure:
 - When "All" is specified for the scope of monitoring volumes when starting performance management
 1. Record the threshold monitoring settings.
 2. Stop threshold monitoring.
 3. Start p threshold monitoring based on the settings recorded in step 1.
 - When "Partial" is specified for the scope of monitoring volumes when starting performance management
Update the configuration information in the performance management function. Refer to ["7.2.9 Updating Configuration Information"](#) for details.

7.3.5 Instruction for Stopping Threshold Monitoring

Stop threshold monitoring for the target device. The Management Server continues to secure performance data from the device, but monitoring of the threshold is halted.

7.3.6 Changing the Event Message Display Setting of the Threshold Monitoring Alarm

The display setting related to the event messages of the threshold monitoring alarm can be changed during operations. Refer to "A.4 perf.conf Parameter" for the changing method.

Point

After the setting is changed, the display format of the generated event messages is based on the set content.

7.4 Evaluation Criteria for Thresholds in Threshold Monitoring

Storage Thresholds

Standard storage thresholds when Fibre Channel is used to connect between the business servers and the ETERNUS Disk storage systems are listed below.

	Online Response-oriented System	Batch Throughput-oriented System
LogicalVolume Response	30 ms or less	-
RAIDGroup Busy Rate	60% or less	80% or less
CM Busy Rate	80% or less	90% or less

Point

If iSCSI is used to connect the business servers and the ETERNUS Disk storage systems, specify the threshold after understanding the iSCSI features by referring to "ETERNUS AF, ETERNUS DX Configuration Guide -Server Connection-" that corresponds to the OS of the business servers.

For a response-oriented system such as for online applications, implementing LogicalVolume responses within 30 ms is a standard for stress-free storage operation. To implement responses within 30 ms, suppress the RAIDGroup busy rate to 60% or less and the CM busy rate to 80% or less.

In a throughput-oriented system such as for batch applications, LogicalVolume responses are extended to a few milliseconds because sequential access increases the cache hit ratios. However, the cache hit ratios are greatly affected by application access and the values change a great deal. As a result, responses may vary from a few milliseconds to 50 ms or more. Thus, for batch applications, there is no standard threshold for LogicalVolume responses.

To improve throughputs for batch applications, users must optimize the use of storage resources. Note, however, that performance may deteriorate rapidly if the above threshold is exceeded. For this reason, make it a standard to suppress the RAIDGroup busy rate to 80% or less and the CM busy rate to 90% or less.

During hours in which advanced copy is processing, advanced copy processing itself increases the CM busy rate. For this case, set thresholds in consideration of execution of advanced copy.

Thresholds of Switch Ports

The threshold and lower limit value vary depending on the type of applicable switch (1 Gbps, 2 Gbps, etc). When the switch type is 1 Gbps, the maximum value (100% use rate) is 100 MB/s. When the switch type is 2 Gbps, the maximum value is 200 MB/s. For the threshold, specify the allowable utilization (%) corresponding to the maximum value.

For instance, when 90% is specified for the threshold of a 2 Gbps type switch, the threshold of the throughput is:
 $200 \text{ MB/s} \times 90\% = 180 \text{ MB/s}$ (total of reception and transmission)
 An alarm is given when the throughput reaches 180 MB/s.

Switch port threshold monitoring is effective when there is a difference in the numbers of paths between the server and storage.

Figure A Application + backup system


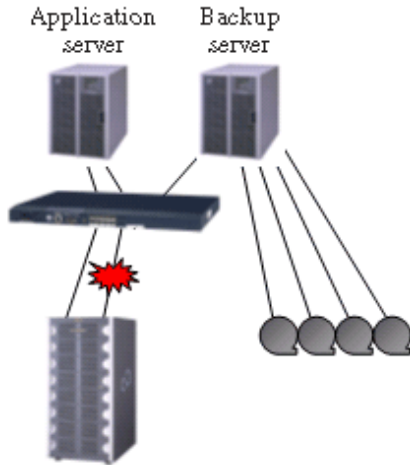


Figure B Cluster system (example: Oracle RAC)

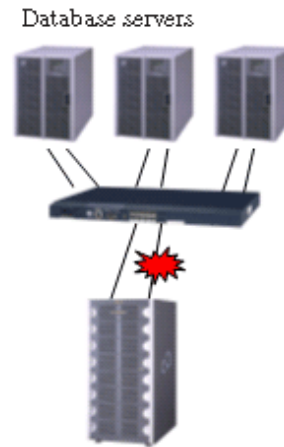

7.5 Definition File

The following items for performance management can be set up in perf.conf file.

- The number of days to retain performance data
- The number of generations of log files (perflog.*)
- Whether to use the performance management for the number of active disks, power consumption and temperature
- Whether to use the performance management for iSCSI port
- Event message display setting of the threshold monitoring alarm



See

Refer to "A.4 perf.conf Parameter" for the settings.

7.6 Examples of Threshold Monitoring

This section provides an overview of threshold monitoring in the form of key examples to enable users to determine what situations require thresholds and the types of thresholds that should be set for them.

Case 1: Online Application System of Company A

Material - System Operation Standard and Performance Requirements (Excerpt)


1. Online application service hours: 8:00 to 18:00 everyday.
2. Online application busy hours: 12:00 to 15:00 everyday.
3. This system requires that operator terminal operation be stress-free even with workload during the busy hours.
 Therefore, the target performance of I/O response shall be "30 msec or less" (*1).
 The target I/O response performance in hours other than the busy hours shall be "10 msec or less," one

third of 30 msec, according to the workload proportion (the workload in the busy hours is about three times higher than that in other hours).

4. During the busy hours, processing for data reference, updating, and addition may occur concurrently and continue for up to 60 minutes.
If a state in which an I/O response taking 30 msec or more occurs for a period equivalent to 10% (6 minutes) of the said continuous execution, operation at the operator terminal may undergo stress. Therefore, make the settings so that an alarm log is displayed when such state occurs.
5. If I/O responses during the busy hours come down to 10 msec or less, the same as the performance target in other hours, the I/O response delays that occurred previously shall be deemed as instantaneous symptoms. Therefore, an alarm log need not be displayed when this state occurs.
6. The alarm log need not be displayed every time but can be displayed only once a day.

*1: The standard value for the online application service described in "7.4 Evaluation Criteria for Thresholds in Threshold Monitoring" is used as the target performance of I/O response.

Figure 7.1 Illustration of Operational Status of Company A's Online Application System (Transition of LogicalVolume Responses)

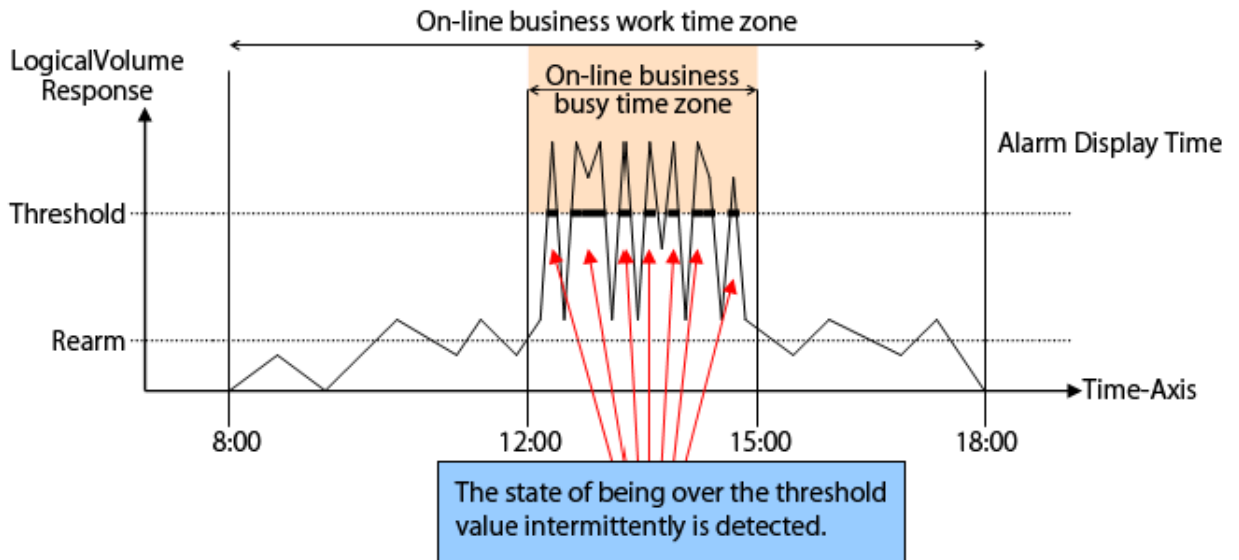

Example of Threshold Monitoring Setting for Company A's Online Application System

Table 7.1 "Time Setting" Threshold Monitoring Time

Number Corresponding to Material	Setting Item	Setting
1	Starting time	8:00
1	Shutdown time	18:00

Table 7.2 "Time Setting" Alarm Display Time

Number Corresponding to Material	Setting Item	Setting
1	Starting time	12:00
1	Shutdown time	15:00
5	Frequency	Day by Day

Table 7.3 "Volume Configuration" Threshold Monitoring Information

Number Corresponding to Material	Setting Item	Setting
2	Threshold	30msec


Number Corresponding to Material	Setting Item	Setting
4	Lower limit	10msec
5	Alarm Tolerance Level	Total Time
5	Alarm Tolerance Time	360sec
5	Threshold monitoring Interval	60min

Case 2: Online Shopping System of Company B

Material - System Operation Standard and Performance Requirements (Excerpt)

1. Online application service hours: 24 hours a day for 365 days a year.
2. Online application busy hours: Cannot be specified.
3. This system features that the number of accesses gradually increases as the number of member customers increases after start of the production run. It is assumed that the load on storage also increases gradually. Measures need to be taken when the busy rate of storage resources (CM and disk) comes over 60% to 80%.
4. This system executes credit card transactions every 5 minutes. Therefore, for five minutes immediately before each transaction, product retrieval and order processing must be executed without stress. If the storage resource is kept in busy state (a state in which the busy rate exceeds 60% to 80%) for five minutes, transactions may be affected. Therefore, make settings so that an alarm log is displayed when such state occurs.
5. Alarm log shall be displayed every time.

Figure 7.2 Illustration of Operational Status of Company B's Online Shopping System (Transition of CM Busy Rate)

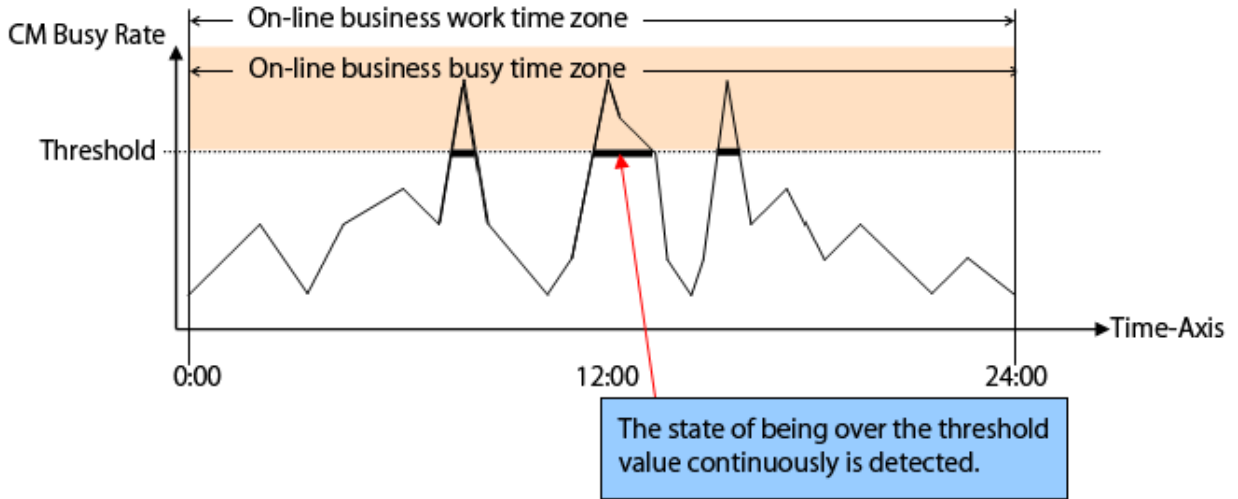

Example of Threshold Monitoring Setting for Company B's Online Shopping System

Table 7.4 "Time Setting" Threshold Monitoring Time

Number Corresponding to Material	Setting Item	Setting
1	Starting time	0:00
1	Shutdown time	24:00

Table 7.5 "Time Setting" Alarm Display Time

Number Corresponding to Material	Setting Item	Setting
1	Starting time	0:00

Number Corresponding to Material	Setting Item	Setting
1	Shutdown time	24:00
4	Frequency	All

Table 7.6 "CM Configuration" Threshold Monitoring Information

Number Corresponding to Material	Setting Item	Setting
2	Threshold	60%
3	Alarm Tolerance Level	Continuous Time
3	Alarm Tolerance Time	300sec

Table 7.7 "RAID Group Configuration" Threshold Monitoring Information


Number Corresponding to Material	Setting Item	Setting
2	Threshold	80%
3	Alarm Tolerance Level	Continuous Time
3	Alarm Tolerance Time	300sec

Case 3: Batch Processing with Multiple Database Servers (Clustered System) of Company C

Material - System Operation Standard and Performance Requirements

1. System service hours: 24 hours a day, 365 days a year.
2. Batch processing hours: 20:00 to 23:00 every night.
3. This clustered system is an Oracle RAC system consisting of three nodes. There is no problem with the batch processing performance because the amount of processed data is currently small. As the amount of data increases in the future, however, we have concerns over bottlenecks in the performance of FC path transfer between the FC switch and storage. If an FC path bottleneck occurs, it must be eliminated quickly.
4. Assume the state in which the port throughput reaches about 80% of the maximum transfer capability as an FC path bottleneck, and make settings so that an alarm log is displayed when such state continues for 30 minutes or more.
5. Alarm log need not be displayed every time but can be displayed only once even in the batch processing hours.

Figure 7.3 Illustration of Batch Processing with Multiple Database Servers (Clustered System) at Company C (Transition of Port Throughputs)

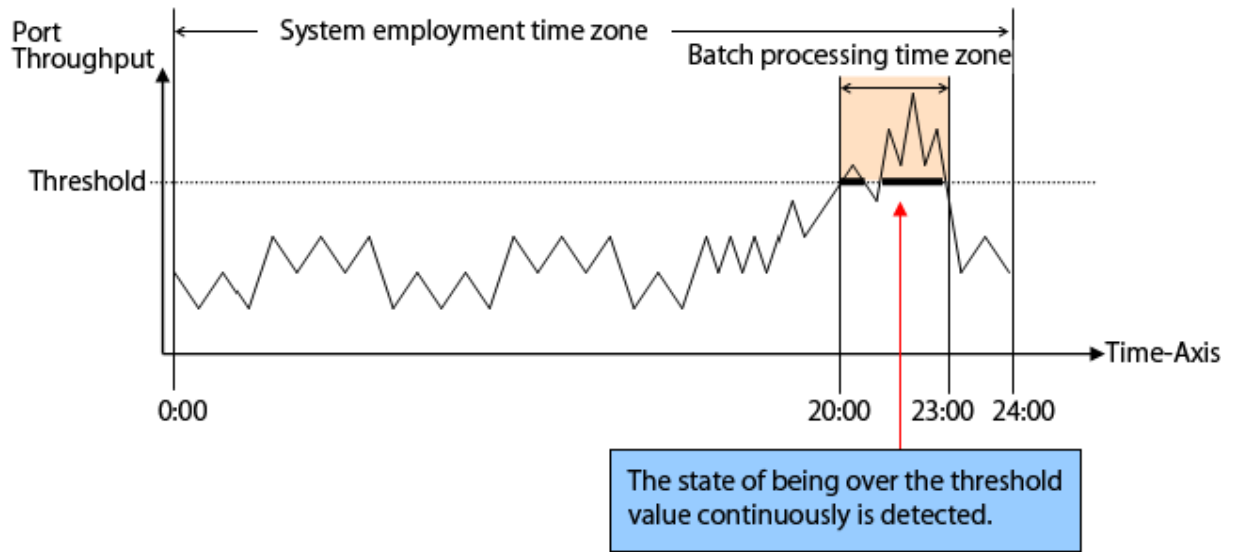

Example of Threshold Monitoring Setting for Business System Backup Operation at Company C

Table 7.8 "Time Setting" Threshold Monitoring Time

Number Corresponding to Material	Setting Item	Setting
1	Starting time	0:00
1	Shutdown time	24:00

Table 7.9 "Time Setting" Alarm Display Time

Number Corresponding to Material	Setting Item	Setting
1	Starting time	20:00
1	Shutdown time	23:00
4	Frequency	All

Table 7.10 "Port Configuration" Threshold Monitoring Information


Number Corresponding to Material	Setting Item	Setting
2	Threshold	80%
3	Alarm Tolerance Level	Continuous Time
3	Alarm Tolerance Time	1800sec

Chapter 8 Reporting Function

For information on the overview of the Reporting function, refer to "Reporting Function" in "Function Overview of Storage Cruiser" in the Overview.

8.1 Required Operation for Charging

For the center administrator to make an invoice, the following operation is required.

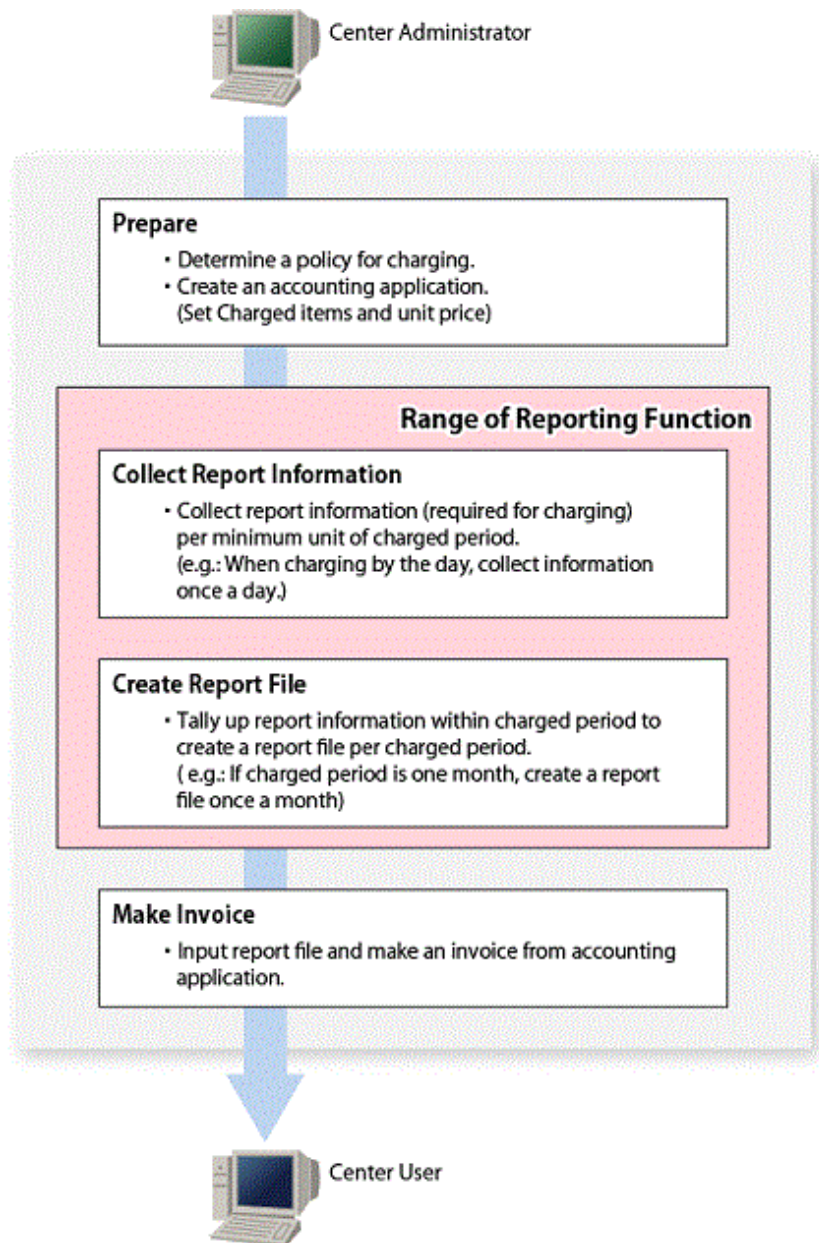

Working Step	Explanation
Prepare	Determines charged items, unit price, charged period and minimum unit of charged period.
Collect Report Information	Collects the information required for charging.
Create Report File	Totals collected information.
Make Invoice	Makes an invoice through an accounting application from the report file.

Point

The center administrator can create an accounting application with customized charged items and unit prices from a report file. This allows the center administrator to respond to various charging requirements.

In the Reporting function, a report containing information required for charging can be created by the following procedure.

1. [Set Policy](#)
Set up a policy file for activities of the Reporting function.
2. [Collect Report Information](#)
Use the report information collection command to store report information in the information stack file from the common control repository.
3. [Create Report](#)
Use the report creation command to tally up report information in the information stack file based on the policy file and create a report file.

8.1.1 Set Policy

Overview

Set up requirements for the Reporting function in the file. They are handled as one policy in the system.

Policy File

This is loaded when the report creation command is run. The setting item is as follows:

- Data retention period of report information

See

Refer to "[8.3.2.2 Setup Policy](#)" for policy setup.

Refer to "[A.11 policy.conf Parameter](#)" for parameters about policy setup.

8.1.2 Collect Report Information

Overview

Running the `esfadm report collect` command to collect report information accumulates in the information stack file the report information stored in the common control repository.

See

Refer to "[Setup from Web Console](#)" in "[8.3.2.3 Setup Periodic Command Execution](#)" for information on how to activate the Reporting function.

Information to Be Collected

Collect configuration information for volumes connected to servers.

Target for Which to Collect Information

The target for which to collect information is a volume that meets all of the following conditions:

- Volume is on a supported storage device registered to ETERNUS SF system.
(Refer to "[8.2 Supported Device](#)" for details.)

- Volume connected to a server registered to ETERNUS SF system.
("Connected to a server" indicates that access path is set up and server HBA is registered to ETERNUS SF system. Hereafter, this status is described as "connected to server".)
- Volume is on a storage system for which the Reporting function is set to "Activate" from Web Console.

Note

For a volume connected to server, note the following points:

- Whether the volume is targeted for reporting is determined by access path definition. For this reason, server usage and connection/disconnection between server and storage are not considered.
- Virtual server guest is not supported.

8.1.3 Create Report

Overview

Running the [esfadm report create](#) command to create a report obtains the report information within the period specified by the command, from the information stack file and creates a report file.

The report file can be viewed in the Web browser. If it is viewed in the Web browser, diverse information in the report can be viewed in colored tabular form.

See

Refer to "[Setup from Web Console](#)" in "[8.3.2.3 Setup Periodic Command Execution](#)" for information on how to activate the Reporting function.

If the [esfadm report create](#) command is periodically run, the created report files are stored at the location shown below. The storage location cannot be changed:

- Storage directory

For Windows environments: `$INS_DIR\Common\var\report\auto`

(\$INS_DIR is an install directory.)

For Solaris or Linux environments: `/var/opt/FJSVesfcm/report/auto`

- File name

`esfreport_auto_month_YYYYMMDDhhmmss.xml`

(YYYYMMDDhhmmss is command executed date and time and local time of ETERNUS SF system.)

Up to 12 report files created by running the [esfadm report create](#) command are save. When 12 files already exist, the oldest file is automatically deleted when the [esfadm report create](#) command is run.

Note

If you want to save a report file, back it up before the old files are automatically deleted.

Report File Information

Created report files can be viewed by users with administrator privileges on the server operating system.

The output information and the HTML example of an XML file in the Web browser are as follows:

Server: name=194_30 os=Windows2008 IP-Address=

DiskArray :									
name	SerialNo	BusID					ec		
JB461308022	4691308022						1.3.6.1.4.1.211.1.21.1.150		

Volume :									
name	number	Allocation(start)	Allocation(end)	type	capacity	encryption	multiPath	connectServerNumber	concatenationNumber
SDV_Volume	2896	2013-09-13T10:53:00+0900	2013-09-13T12:05:00+0900	SDV	1024	No	1	1	-

RAIDGroup :									
name	number	type	Disk						
			number	enclosureNumber	slotNumber	diskType	speed		
RAID_GP_0	7	Striping (RAID0)	12	0x00	12	SAS	10000		
			13	0x00	13	SAS	10000		

Volume :									
name	number	Allocation(start)	Allocation(end)	type	capacity	encryption	multiPath	connectServerNumber	concatenationNumber
TPP_Volume	1	2013-09-13T12:02:35+0900	2013-09-13T12:05:00+0900	TPV	5120	No	1	1	-

ThinProvisioningPool :									
name	number								
TPP_1	3								

RAIDGroup :									
name	number	type	Disk						
			number	enclosureNumber	slotNumber	diskType	speed		
RAID_GP_1	0	Mirroring (RAID1)	1	0x00	1	SAS	10000		
			237	0x01	1	SAS	10000		

Volume :									
name	number	Allocation(start)	Allocation(end)	type	capacity	encryption	multiPath	connectServerNumber	concatenationNumber
FTV_Volume	150	2013-09-13T10:53:00+0900	2013-09-13T11:42:02+0900	FTV	204800	No	1	1	-

TierPool :									
name	number								
TIER_1	0								

SubPool :									
name	number	level							
FTSP_NAME#0	0	Low							

RAIDGroup :									
name	number	type	Disk						
			number	enclosureNumber	slotNumber	diskType	speed		
FTSP_NAME#0_0	2	Mirroring (RAID1)	23	0x00	23	SAS	7200		
			279	0x01	23	SAS	7200		

SubPool :									
name	number	level							
FTSP_NAME#1	1	Middle							

RAIDGroup :									
name	number	type	Disk						
			number	enclosureNumber	slotNumber	diskType	speed		
FTSP_NAME#1_0	3	Mirroring (RAID1)	0	0x00	0	SAS	10000		
			236	0x01	0	SAS	10000		

SubPool :									
name	number	level							
FTSP_NAME#2	2	High							

RAIDGroup :									
name	number	type	Disk						
			number	enclosureNumber	slotNumber	diskType	speed		
FTSP_NAME#2_0	4	Mirroring (RAID1)	12	0x00	12	SSD	-		
			268	0x01	12	SSD	-		

The character encoding of XML files is output in UTF-8 format.
 (On Windows, the destination directory privileges are inherited.)

Target

The report creation command creates a report file from the report information in the information stack file. For volumes that meet all of the following conditions, a report is created:

- Data accumulated in the information stack file
- Volume exited within the period specified by the report creation command

The number of volumes connected to the servers registered to ETERNUS SF system is output to the report information. The unit price charged per target is determined by the center administrator.

If a migration is performed using the Non-disruptive Storage Migration function, a volume of the source storage device and an External LU of the destination storage device are output to the report information as a volume of each different storage device. You must also consider whether to charge for those volumes.

8.2 Supported Device


The devices for which the Reporting function is supported are as follows:

Device	Firmware Version
ETERNUS DX S6/S5/S4/S3/S2 series (excluding the ETERNUS DX60 S2) ETERNUS AF All-Flash Arrays	Versions supported by this product (Refer to "Supported Devices" in the <i>Installation and Setup Guide</i> for details.)

8.3 Operation

Using the Reporting function center users can be charged according to his (her) usage. To use the Reporting function, preparation is required in accordance with the operational environment. This section describes specific uses of the Reporting function including design, setup, operation and maintenance to charge fees.

The flow for creating an invoice is as follows:

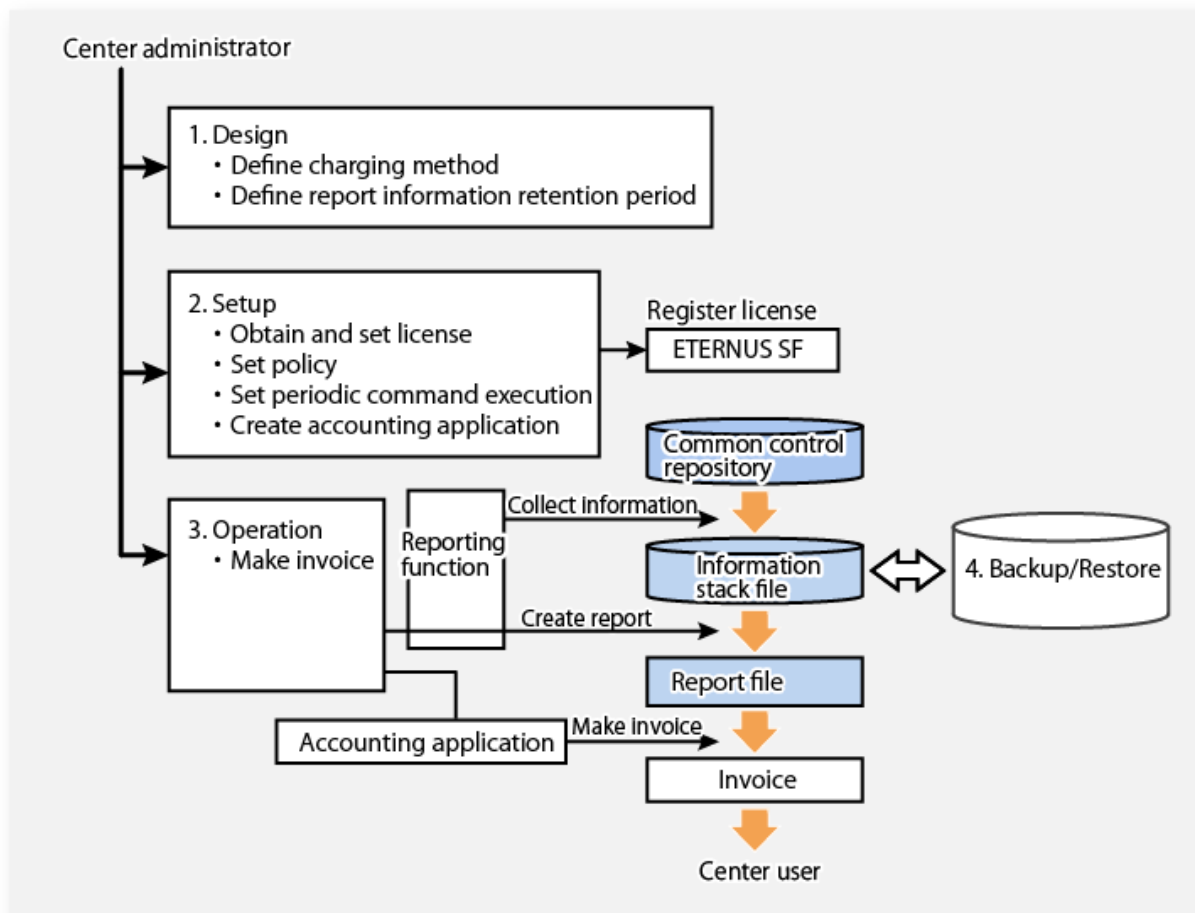

1. Design

Define charging method and report information retention period.

2. Setup

The content of setup is as follows:

- Register the ETERNUS SF Storage Cruiser Standard Edition license.
- Set up a policy file based on the report information retention period.
- Activate periodic command execution in Web Console so that report information can be collected and a report can be created, periodically.
Refer to "[Setup from Web Console](#)" in "[8.3.2.3 Setup Periodic Command Execution](#)" for information on how to activate the Reporting function.
- Create an accounting application.

3. Operation

Make an invoice using an accounting application based on a monthly created report.

4. Backup/Restore

Back up the information stack file periodically as required.

8.3.1 Design

8.3.1.1 Define Charging Method

For assistance in defining a charging method, the following example cases are provided. Based on the following requirements, do various settings of the Reporting function and create an accounting application:

- Range of charged servers
 - Charge a fee per server and send an invoice.
 - Charge a fee per group of multiple servers and send an invoice.
- Unit of charged time
 - Charge a fee per hour.
 - Charge a fee on a daily basis.
- How to calculate fees
 - Set a unit price per volume capacity to calculate fees based on allocation and usage period.
 - Set extra/reduced fees based on volume additional information.
- When and for which period to make an invoice
 - Charge usage fee for the previous week at 3:00 AM every Monday.
 - Charge usage fee for the previous month on the 10th of each month.
- How to deliver the invoice to the center user
 - Send usage fee to the user by E-mail.
 - Print out the invoice to send to the user by post.
- What to do if collecting charging information or making an invoice fails
 - Sound an alarm using the buzzer.
 - Send a notification E-mail to the center administrator.

8.3.1.2 Concept of Volume Allocation Period


Concept of Volume Allocation Period

Since the Reporting function calculates a volume allocation period from periodically collected information, the actual volume allocation period allocated by the center user is different from that recognized by the Reporting function. Basically, an allocation period for one volume is a period from when volume is connected to server to when volume is disconnected from server. However, if the configuration information for a volume connected to server has been changed, the volume is handled as a new volume. In this case, two volumes are output ("Volume configuration information is changed" indicates that any element other than the Header information written in "[Table 8.2 Attributes Maintained by Elements](#)" has been changed). The output on a per volume configuration basis makes it possible to charge fees in accordance with the volume configuration.

The start/end date and time of using a volume allocation period recognized by the Reporting function is defined as follows:

- Start date and time of use
Date and time when the report information collection command was run after server connection or configuration information for volume connected to server has been changed.
- End date and time of use
Date and time when the report information collection command was run after server disconnection or volume configuration information has been changed.

The following is an example of running the report information collection command per day:

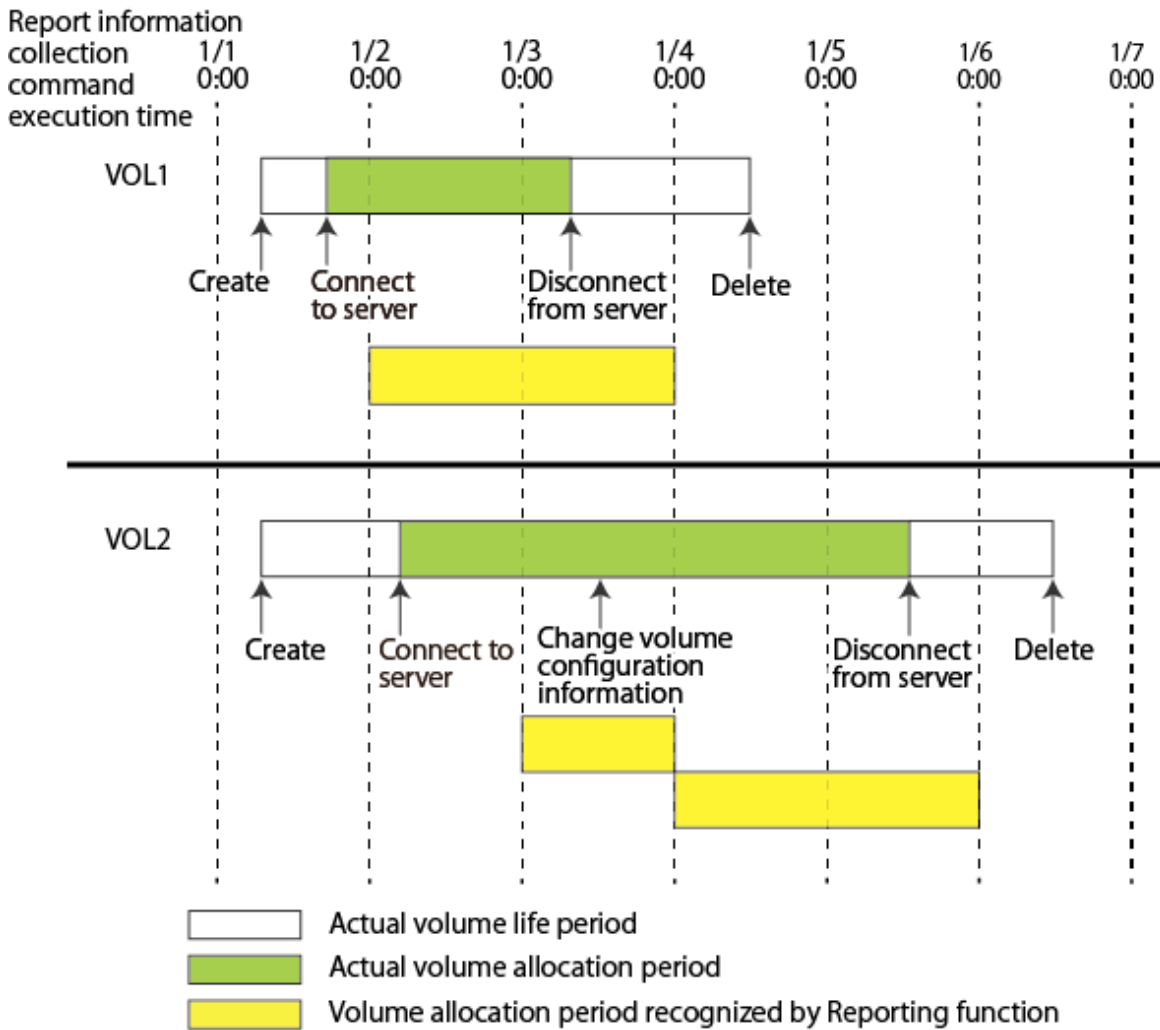

The volume allocation period recognized by the Reporting function is as follows:

- VOL1
0:00 of 1/2 to 0:00 of 1/4 (2 days in all)
- VOL2
0:00 of 1/3 to 0:00 of 1/4, and 0:00 of 1/4 to 0:00 of 1/6 (3 days in all)


Since in this example a collection interval is set to one day, a maximum of 23 hours and 59 minutes of error is caused. The relation between information collection interval and error is as shown in "[Table 8.1 Influence Rate by Information Collection Interval and Collected Information Amount](#)".

Table 8.1 Influence Rate by Information Collection Interval and Collected Information Amount

Information Collection Interval	Accumulated Information Amount	Time Lag Reflected in Report Information
Long	Little	Large
Short	Large	Small

Concept of Volume Allocation within Report Output Period

Report information is output in the report file based on the volume allocation period recognized by the Reporting function within a report output period. The point where the report output period specified by the user when creating a report overlaps the volume allocation period recognized by the Reporting function is a volume allocation period output into the report file.

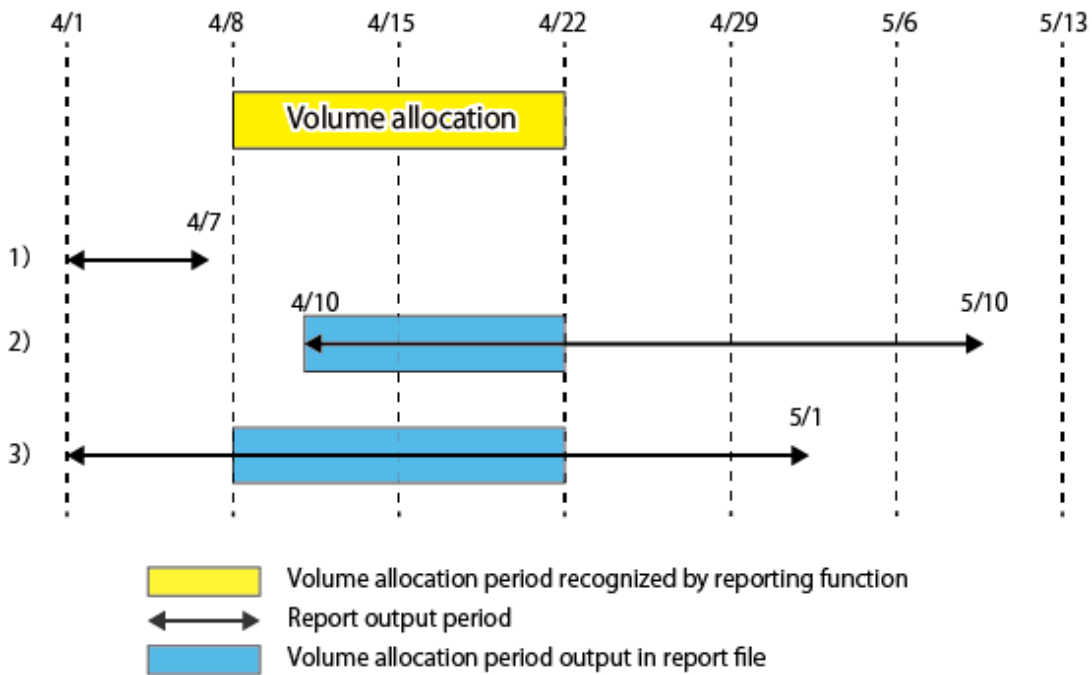

The volume allocation period recognized by the Reporting function is 4/8 to 4/22. In the following report output period, a volume allocation period output in the report file is as follows:

No.	Report Output Period	Volume Allocation Period Output in Report File	Remark
1)	4/1-4/7	None	Report output period is out of volume allocation period.
2)	4/10-5/10	4/10-4/22	-
3)	4/1-5/1	4/8-4/22	-

8.3.1.3 Define Report Information Retention Period

The report creation command removes the old information exceeding the period preset by the policy from the information stack file.

First, define how long to retain report information. A report information retention period is defined based on the following factors:

- Possible restrictions from the purpose of use
 - Retention period by internal control
 - Backup interval of information stack file
 - Interval of creating a report
 - Interval of collecting information, etc.
 - Quotation of the information stack file capacity based on the configuration of an assumed storage system
- Refer to the *Installation and Setup Guide* for information on estimating the information stack file capacity.

The defined retention period is enabled by being set in the policy file.



Refer to "8.3.2.2 Setup Policy" for information on how to set a retention period.

Note

The report information is deleted based on the retention period set in the policy file when the report creation command is run. For this reason, if the report creation command is not run even though the report information in the information stack file exceeds the retention period, the report information is not deleted.

8.3.2 Setup

8.3.2.1 Obtain and Setup License

To use the Reporting function, the ETERNUS SF Storage Cruiser Standard Edition license is required.

For the ETERNUS Disk storage system to which the above license is not registered, reporting is not available. If the license is not registered for the ETERNUS Disk storage system and reporting is desired, register the license.

Information

The required license for ETERNUS Disk storage system is checked when the report information collection command is run. For this reason, even if the license is deleted while in use, already collected information is output in the report.

8.3.2.2 Setup Policy

Specify the report information retention period in the information stack file by setting up a policy.

See

Refer to "[A.11 policy.conf Parameter](#)" for information on how to set up a policy.

8.3.2.3 Setup Periodic Command Execution

Setup from Web Console

Select Storage from Web Console to activate the Reporting function.

Periodic command execution of the Reporting function can be started and stopped on a per storage basis. Enabling the Reporting function runs the report information collection command at the 5th minute of every hour and the report creation command at 6:30 AM on the 1st of every month periodically. The period of the report made by periodic command execution is one month from 0:00 of the 1st of the previous month to 0:00 of the 1st of the month.

Set Up Periodic Command Execution by Creating Unique Application

If you want to run the report creation command with more detailed settings than the command execution interval set up from Web Console, perform the following operations:

- Use the operating system periodic execution function
- Create an application to periodically invoke the report creation command

Note

For report period information specified for option of the report creation command, specify a proper value every time.

8.3.2.4 Create Accounting Application

A general charging method devised by the Reporting function is to charge usage fees for volumes used by servers within a report output period, which is calculated on a per server basis. Server administrator privileges are required to view the report file.

The calculation formula for fees charged for volumes is as follows:

```
Fees charged for volume = Unit price (a) * Volume allocation (b) * Volume allocation time (c)
```

The following is an example of unit price per RAID level:

RAID Level	Unit Price per MB and per Hour
RAID0	1 dollar
RAID1	2 dollars
RAID1+0	3 dollars
RAID5	4 dollars
RAID6	5 dollars
RAID5+0	6 dollars

```
Fees charged for server = Sum of fees charged per volume
```

- The report file configuration output by the Reporting function is as follows:

```
Server information
  ETERNUS Disk storage system information
    Allocated volume information
      Information for volume (disk type, RAID level, etc.)
    Allocated volume information
    ...
  ETERNUS Disk storage system information
  ...
Server information
...
```

To calculate fees charged for volumes allocated per server, for example, create an accounting application to perform the following processing (element name in the brackets):

```
foreach <server information (Servers)> {
  Fee charged for server = 0
  foreach <ETERNUS Disk storage system information (DiskArrays)> {
    foreach <allocated volume information (Volumes)> {
      Obtain type of RAID group from RAID information (RAIDGroup).
      Get unit price from fee sheet according to obtained RAID group type. ... a
      Obtain volume allocation (capacity) from volume information (Volume). ... b
      Obtain volume allocation time (difference between end and start) from volume allocation
      information (Allocation). ... c
      Fee charged for allocated volume = a * b * c
      Fee charged for server += Fee charged for allocated volume }
    }
  }
  Output the fee charged for server
}
```

Example

Calculate fees charged for server (charged for volume 1 and volume 2).

The conditions per volume are as follows:

- Volume1
 - RAID level: RAID0 (unit price: 1 dollar)

- Volume allocation: 100 MB
- Volume allocation period: 12/1 5:00 - 12/2 1:30 (20.5 hours in all)
- Volume2
 - RAID level: RAID6 (unit price: 5 dollars)
 - Volume allocation: 500 MB
 - Volume allocation period: 12/10 11:00 - 12/10 14:00 (3.0 hours in all)

Fee charged per volume is as follows:

- Fee charged for Volume1
 $1(\text{dollar}) * 100(\text{MB}) * 21(\text{hour}) = 2,100(\text{dollars})$
- Fee charged for Volume2
 $5(\text{dollars}) * 500(\text{MB}) * 3(\text{hour}) = 7,500(\text{dollars})$

Fee charged for server is as follows:

- Fee charged for server
 $2,100(\text{dollars}) + 7,500(\text{dollars}) = 9,600(\text{dollars})$

8.3.3 Operation

8.3.3.1 Create Invoice

The Reporting function outputs report information as a report. For the operation to charge fees mentioned in the later examples, the center administrator is responsible to do it.

- Input a report file in the accounting application to make an invoice.
 (On completion of output of the report file, the accounting application loads the report file.)
- Send an invoice to the center user.
- Charge usage fee based on the invoice.

Information

The Reporting function calculates charging information based on volume capacity and usage period. Also, ETERNUS system obtains performance information for storage systems and switches as well as configuration information for storage systems. If you want to calculate charging information using performance information for each system, use the [storageadm perfdm command](#) to obtain the performance information.

8.3.4 Maintain

8.3.4.1 Backup/Restore of Report Related Files

For report related files (report information stack file, policy file, etc.) used in the Reporting function, it is recommended to back them up periodically, and restore them in an emergency so as to continue business.

See

Refer to "[11.1.1.2 Backup of Manager](#)" and "[11.1.1.3 Restoring Manager](#)" for the backup/restore procedure of report-related files.

8.3.4.2 Error When Running Report Information Collection Command

If an error occurs when running the report information collection command, the report information at that point in time is not stored in the information stack file. For example, if any error occurs on completion of information collection for Disk storage system A, the report information collection command terminates abnormally after the collected information for Disk storage system A has been deleted. If a force-quit is performed by [Ctrl] + [C] on the command side, the processing may be continued. In that case, check the Operation History of ETERNUS SF system.

If any error is found in the report information collection command, correct the cause and then re-execute the command.

If any error is found, the report information collection command notifies it in the following ways:

- Command resetting value (The value of 1 or more is returned for abnormal end)
- Command output message
- ETERNUS SF system Operation History

To set the report information collection command so that it is periodically run, it is necessary to read those values and make sure that no error is occurring.

If any error should occur, a return code and message identifying the cause are returned, so that proper corrective action can be taken.

8.3.4.3 Error When Running Report Creation Command

If an error occurs when running the report creation command, no report is created.

If any error is found in the report creation command, correct the cause and then re-execute the command.

If any error is found, the report creation command notifies it in the following ways:

- Command return code (The value of 1 or more is returned for abnormal end)
- Command output message
- ETERNUS SF system Operation History

To set the report creation command so that it is periodically run, it is necessary monitor the results and make sure that no errors are occurring.

If any error should occur, a return code and message identifying the cause are returned, so that proper corrective action can be taken.


If the ETERNUS SF Manager is stopped while the [esfadm report create](#) command (report creation command) is executing, re-executing the [esfadm report create](#) command after that may cause the command to terminate with an error. In this case, recover the environment with the following procedure:

1. Login to the Management Server with the following administrative permissions.
 - For Windows
User belonging to the Administrators group
 - For Solaris/Linux
"root" or user belonging to the root group
2. Move to the following directory.
 - For Windows
\$INS_DIR\Common\var\report
(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)
 - For Solaris/Linux
/var/opt/FJSVesfcm/var/report
3. Delete the retention_period file.

8.4 Configuration of Report File

Output Overview

The output configuration of a XML report is as follows:

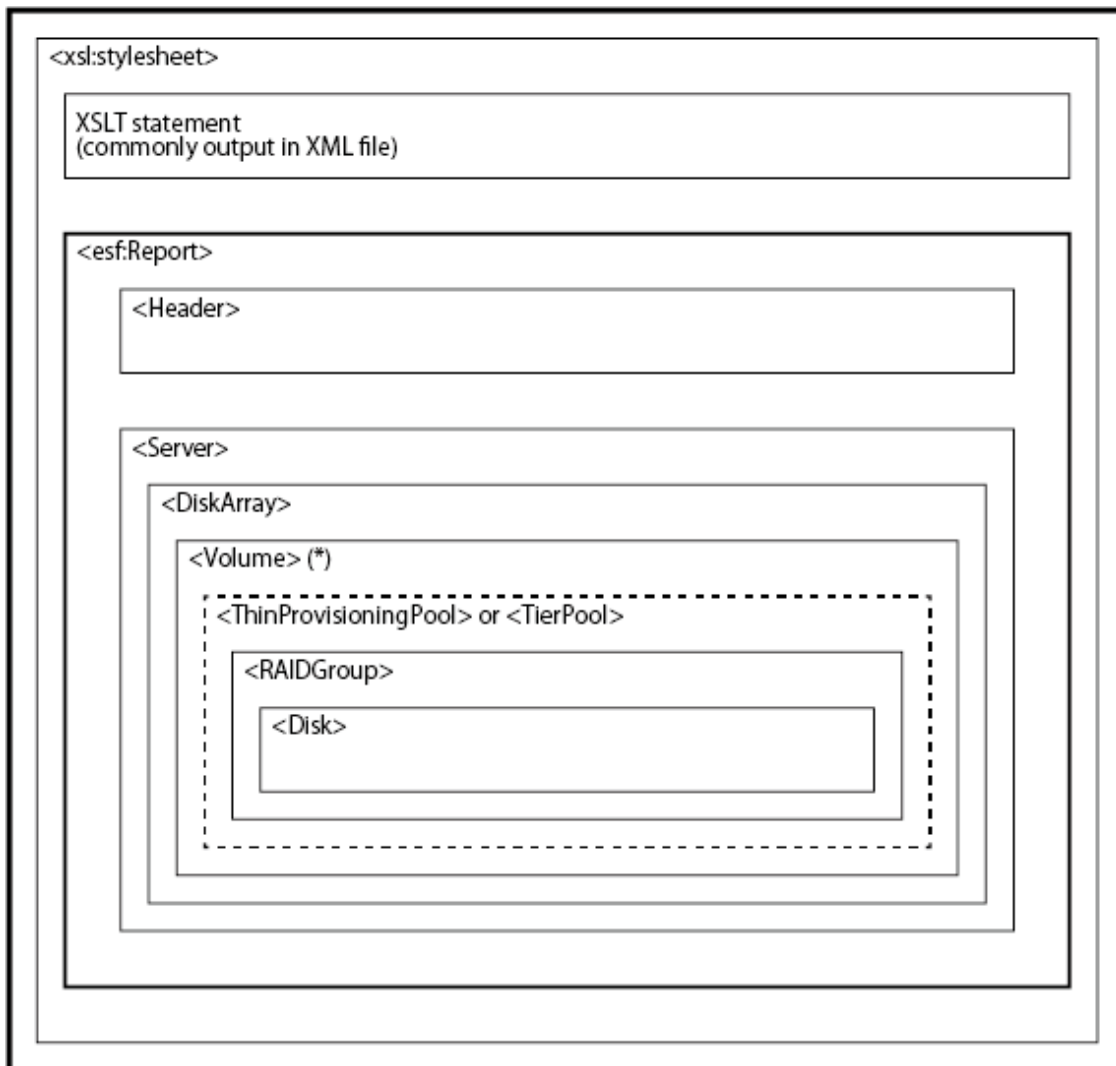

*: The content varies with volume type.

Output Detail

```
<?xml version="1.0" encoding="UTF-8" ?>
<?xml-stylesheet type="text/xsl" href="#esfreportxsl"?>
<!DOCTYPE Report [ <!ATTLIST xsl:stylesheet id ID #REQUIRED > ]>
<xsl:stylesheet id="esfreportxsl" xmlns:esf="localhost" ~ >

  XSLT statement
  (commonly output in XML file)

<esf:Report>
  <Header created="2013-09-13T12:03:25+0900" reportBegin="2013-09-13T10:53:00+0900"
reportEnd="2013-09-13T12:03:00+0900" version="1.00" />
  <Servers>
    <Server name="Server1" os="Windows2008" ipAddress="192.168.1.10">
      <DiskArrays>
        <DiskArray name="Storage1" serialNo="0000000001"
boxid=" " ec="1.3.6.1.4.1.211.1.21.1.150">
          <Volumes>
            Information per volume

          </Volumes>
        </DiskArray>
      </DiskArrays>
    </Server>
  </Servers>
</esf:Report>
</xsl:stylesheet>
```

The following is the information on a per volume type basis:

- For Standard Volume, SDV, WSV

```
<Volume name="SDV_Volume" number="2896" type="SDV" capacity="1024" encryption="No" multiPath="1"
connectServerNumber="1" concatenationNumber="-">
  <Allocation start="2013-09-13T10:53:00+0900" end="2013-09-13T12:03:00+0900" />
  <RAIDGroups>
    <RAIDGroup name="RAID_GP_0" number="7" type="Striping (RAID0)">
      <Disks>
        <Disk number="12" enclosureNumber="0x00" slotNumber="12" diskType="SAS" speed="10000" />
        <Disk number="13" enclosureNumber="0x00" slotNumber="13" diskType="SAS" speed="10000" />
      </Disks>
    </RAIDGroup>
  </RAIDGroups>
</Volume>
```

- For TPV

```
<Volume name="TPP_Volume" number="1" type="TPV" capacity="5120" encryption="No" multiPath="1"
connectServerNumber="1" concatenationNumber="-">
  <Allocation start="2013-09-13T12:02:35+0900" end="2013-09-13T12:03:00+0900" />
  <ThinProvisioningPool name="TPP_1" number="3">
    <RAIDGroups>
      <RAIDGroup name="RAID_GP_1" number="0" type="Mirroring (RAID1)">
        <Disks>
          <Disk number="1" enclosureNumber="0x00" slotNumber="1" diskType="SAS" speed="10000" />
          <Disk number="257" enclosureNumber="0x01" slotNumber="1" diskType="SAS" speed="10000" />
        </Disks>
      </RAIDGroup>
    </RAIDGroups>
  </ThinProvisioningPool>
</Volume>
```

- For FTV

```

<Volume name="FTV_Volume" number="158" type="FTV" capacity="204800" encryption="No"
multiPath="1" connectServerNumber="1" concatenationNumber="-">
  <Allocation start="2013-09-13T10:53:00+0900" end="2013-09-13T11:42:02+0900" />
  <TierPool name="TIER_1" number="0">
    <SubPools>
      <SubPool name="FTSP_NAME#0" number="0" level="Low">
        <RAIDGroups>
          <RAIDGroup name="FTSP_NAME#0_0" number="2" type="Mirroring (RAID1)">
            <Disks>
              <Disk number="23" enclosureNumber="0x00" slotNumber="23" diskType="SAS" speed="7200" /
            >
              <Disk number="279" enclosureNumber="0x01" slotNumber="23" diskType="SAS"
speed="7200" />
            </Disks>
          </RAIDGroup>
        </RAIDGroups>
      </SubPool>
      <SubPool name="FTSP_NAME#1" number="1" level="Middle">
        <RAIDGroups>
          <RAIDGroup name="FTSP_NAME#1_0" number="3" type="Mirroring (RAID1)">
            <Disks>
              <Disk number="0" enclosureNumber="0x00" slotNumber="0" diskType="SAS" speed="10000" />
              <Disk number="256" enclosureNumber="0x01" slotNumber="0" diskType="SAS"
speed="10000" />
            </Disks>
          </RAIDGroup>
        </RAIDGroups>
      </SubPool>
      <SubPool name="FTSP_NAME#2" number="2" level="High">
        <RAIDGroups>
          <RAIDGroup name="FTSP_NAME#2_0" number="4" type="Mirroring (RAID1)">
            <Disks>
              <Disk number="12" enclosureNumber="0x00" slotNumber="12" diskType="SSD" speed="-" />
              <Disk number="268" enclosureNumber="0x01" slotNumber="12" diskType="SSD" speed="-" />
            </Disks>
          </RAIDGroup>
        </RAIDGroups>
      </SubPool>
    </SubPools>
  </TierPool>
</Volume>

```

The attributes maintained by elements are as shown in "Table 8.2 Attributes Maintained by Elements".

Table 8.2 Attributes Maintained by Elements

Element Name	Description (Data Size)	Output Difference per Volume Type			Frequency
		FTV	TPV	Other	
Header	Information to differentiate report	A	A	A	1
created	Date and time when report was created (string, 24 bytes) (*1)	A	A	A	1
reportBegin	Start date and time of reporting period specified by esfadm report create command (string, 24 bytes) (*1)	A	A	A	1
reportEnd	End date and time of reporting period specified by esfadm report create command (string, 24 bytes) (*1)	A	A	A	1
version	Report format version information (string, max 8 bytes)	A	A	A	1

Element Name		Description (Data Size)	Output Difference per Volume Type			Frequency
Attribute Name			FTV	TPV	Other	
Servers		Maintain all Server elements. (All Server elements are sub-elements of this element)	A	A	A	1
Server		Number of servers connected to volumes	A	A	A	1 or more
	name	Server name (string, max. 255 bytes)	A	A	A	1
	os	Operating system type (string, max. 255 bytes)	A	A	A	1
	ipAddress	IP address (string, max. 64 bytes)	A	A	A	1
DiskArrays		Maintain all DiskArray elements related to servers (All DiskArray elements are sub-elements of this element)	A	A	A	1
DiskArray		Disk array information including volumes connected to servers	A	A	A	1 or more
	name	Disk array name (string, max. 255 bytes)	A	A	A	1
	serialNo	Serial number (string, max. 16 bytes)	A	A	A	1
	boxid	Box ID (string, 40 bytes)	A	A	A	1
	ec	Enterprise code (string, max. 255 bytes)	A	A	A	1
Volumes		Maintain Volume elements related to some DiskArray, connected to server (All Volume elements are sub-elements of this element)	A	A	A	1
Volume		Information for volume connected to server	A	A	A	1 or more
	name	Volume name (string, max. 16 bytes)	A	A	A	1
	number	Volume number (value: decimal, max. 10 bytes)	A	A	A	1
	type	Volume type (string, max. 16 bytes) Standard, WSV, SDV, TPV or FTV	A	A	A	1
	capacity	Volume capacity (MB) (value: decimal, max. 10 bytes) The meaning varies with volume type. Standard/WSV: Physical capacity SDV/TPV/FTV: Logical capacity	A	A	A	1
	encryption	Encryption status (string, max. 255 bytes) Yes: Enable No: Disable	A	A	A	1
	multiPath	Number of paths between server and volume (value: decimal, max. 10 bytes)	A	A	A	1
	connectServerNumber	Number of connected servers (value: decimal, max. 10 bytes)	A	A	A	1
	concatenationNumber	Number of concatenated LUNs in volume (string, max. 255 bytes) If LUN is not concatenated, a hyphen (-) is displayed.	A	A	A	1
Allocation		Information for volume allocation	A	A	A	1
	start	Start date and time of volume allocation (string, 24 bytes) (*1)	A	A	A	1
	end	End date and time of volume allocation (string, 24 bytes) (*1)	A	A	A	1

Element Name		Description (Data Size)	Output Difference per Volume Type			Frequency
Attribute Name			FTV	TPV	Other	
TierPool		Tier pool information	A	N/A	N/A	1 or more
	name	Tier pool name (string, max. 64 bytes)	A	N/A	N/A	1
	number	Tier pool number (value: decimal, max. 10 bytes)	A	N/A	N/A	1
SubPools		Maintain sub-pool elements (All sub-pool elements are sub-elements of this element)	A	N/A	N/A	1
SubPool		Sub-pool information	A	N/A	N/A	1 or more
	name	Sub-pool name (string, max. 64 bytes)	A	N/A	N/A	1
	number	Sub-pool number (value: decimal, max. 10 bytes)	A	N/A	N/A	1
	level	Layer level (string, max. 32 bytes) Low: Low sub-pool Middle: Middle sub-pool High: High sub-pool For one layer Tier pool, a hyphen (-) is displayed.	A	N/A	N/A	1
ThinProvisioningPool		Thin Provisioning Pool information	N/A	A	N/A	1 or more
	name	Thin Provisioning Pool name (string, max. 16 bytes)	N/A	A	N/A	1
	number	Thin Provisioning Pool number (value: decimal, max. 10 bytes)	N/A	A	N/A	1
RAIDGroups		Maintain RAID Group elements (All RAID Group elements are sub-elements of this element)	A	A	A	1 or more
RAIDGroup		RAID information	A	A	A	1 or more
	name	RAID Group name (string, max. 16 bytes)	A	A	A	1
	number	RAID Group number (value: decimal, max. 10 bytes)	A	A	A	1
	type	RAID Group type (string, max. 64 bytes) - Striping (RAID0) - Mirroring (RAID1) - High Performance (RAID1+0) - High Capacity (RAID5) - High Reliability (RAID6) - High Reliability (RAID6-FR) - Reliability (RAID5+0) - Unknown	A	A	A	1
Disks		Maintain Disk elements (All Disk elements are sub-elements of this element)	A	A	A	1
Disk		Disk information	A	A	A	1 or more
	number	Disk number (value: decimal, max 10 bytes)	A	A	A	1
	enclosureNumber	Enclosure number (value: hexadecimal, 4 bytes) For disks contained in Controller Enclosure, "0x00" is displayed.	A	A	A	1
	slotNumber	Slot number (value: decimal, max. 10 bytes)	A	A	A	1

Element Name		Description (Data Size)	Output Difference per Volume Type			Frequency
Attribute Name			FTV	TPV	Other	
	diskType	Disk type (string, max. 255 bytes) SAS, SSD, SED-SAS, NVMe SSD, or NVMe SSD SED	A	A	A	1
	speed	Disk rotation count (rpm) (value: decimal, max. 10 bytes) If there is no rotation count, a hyphen (-) is displayed.	A	A	A	1

"A" indicates "Applicable", and "N/A" indicates "Not Applicable".

*1: For date and time, the local time of ETERNUS SF system is output in ISO8601 format.

Chapter 9 Storage Cluster Function

This chapter describes an overview of the Storage Cluster function as well as its settings and operation method.

Note

There are limitations to the operating system and driver of business server to support transparent failover of Storage Cluster. For details, contact Fujitsu Technical Support.

9.1 Overview

Storage Cluster function switches over to the components in a standby system from the components in an active system transparently from external environments. The storage used as an active system is called "Primary Storage" and the storage used as a standby system is called "Secondary Storage".

In the existing operation, data must be kept equivalency maintenance state in an environment in which REC Paths are configured between the Primary Storage and the Secondary Storage, and if the Primary Storage stops, failover to the Secondary Storage must be performed in the following steps:


1. Change physical connections to the Secondary Storage and zoning configuration.
2. Re-acknowledge volumes by restarting business server.

Using the Storage Cluster function can save the time and steps spent in this work and realize transparent failover.

9.1.1 System Structure

The following is a description of basic system structure required to use the Storage Cluster function. The example of system structure is shown in "[Figure 9.1 Storage Cluster Function: Example of System Structure](#)". Data is transferred between the Primary Storage and the Secondary Storage in the synchronization mode using the [REC path](#).

Figure 9.1 Storage Cluster Function: Example of System Structure

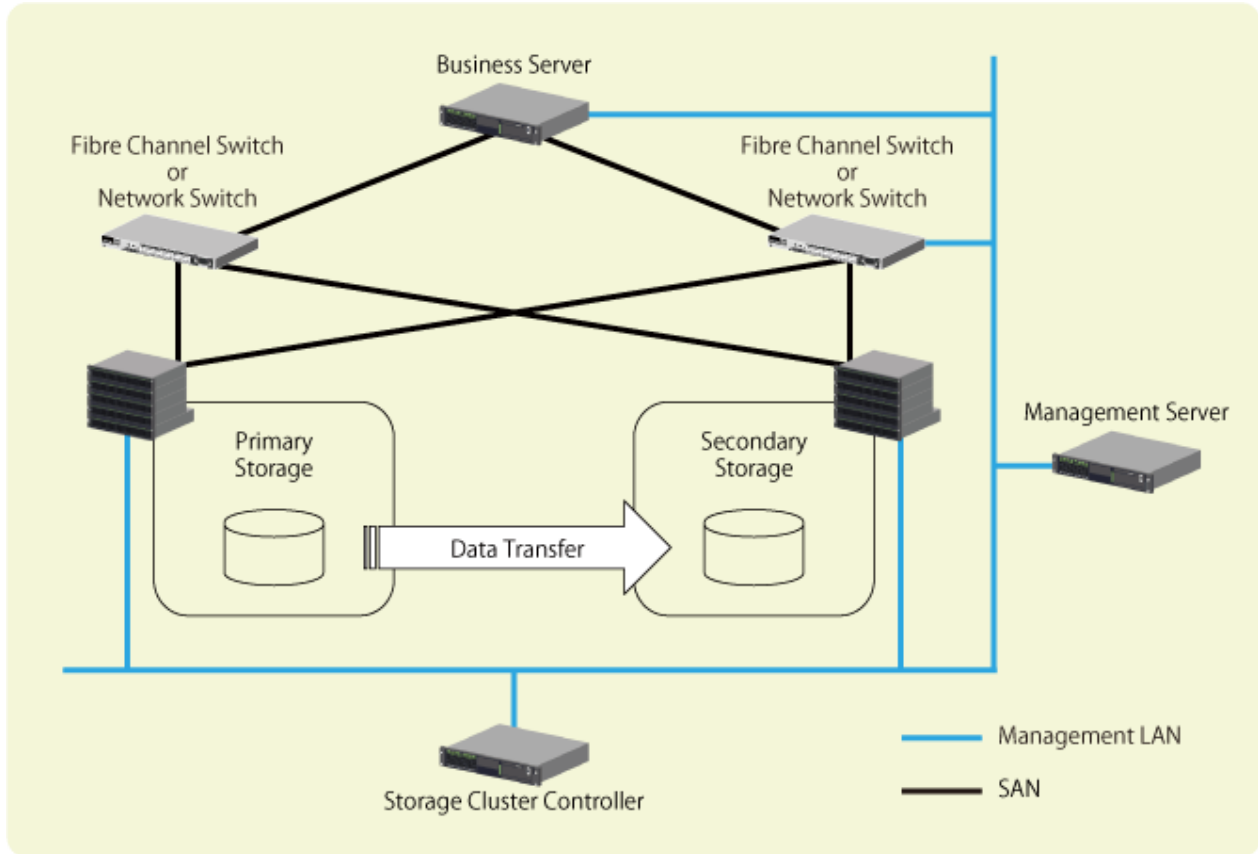

For the Primary Storage and Secondary Storage that configure Storage Cluster, the REC path is used to confirm that the other storage device exists. If the REC path is disconnected, because the existence of other storage device cannot be confirmed, a failover may be performed due to a misjudgment even though both the Primary Storage and Secondary Storage are operating. To prevent this misjudgment, configure a server to monitor the Primary Storage and Secondary Storage. In the Storage Cluster function, this server is called "Storage Cluster Controller".

Point

- To perform an automatic failover operation to the Secondary Storage when an abnormality is detected in the Primary Storage, install the Storage Cluster Controller as shown in "Figure 9.1 Storage Cluster Function: Example of System Structure" and then connect the Storage Cluster Controller to the Primary Storage and the Secondary Storage with the management LAN.
- Configure the Storage Cluster function on the Management Server. Connect the Management Server to the Primary Storage and the Secondary Storage with the management LAN. If a Storage Cluster Controller is installed, connect both the Management Server and the Storage Cluster Controller with the management LAN.

See

Refer to "9.1.9 Confirming the Existence Using the Storage Cluster Controller and the Failover Execution Trigger" for a role of the Storage Cluster Controller.

REC Path

REC path is the path in which the Storage Cluster function transfers data between the Primary Storage volumes and the Secondary Storage volumes.

An ETERNUS Disk storage system manages copy sessions used in the Storage Cluster function and Advanced Copy sessions separately. Since the ETERNUS Disk storage system automatically controls copy sessions used in the Storage Cluster function, it is not required to configure copy sessions and copy groups in this product.

Point

When an REC route temporary fault (communication break) occurs, a differential copy is executed after the REC route recovers, and the data is automatically recovered in the equivalent state. As failover does not occur during the period until the REC route is recovered, we recommend a redundant REC route configuration.

Split Mode


With the Storage Cluster function, the operation mode can be specified for the Primary Storage volume when the REC path is disconnected. This operation mode is called "split mode". One of the following can be specified for the split mode.

Split mode	Explanation
Read/Write (default)	This mode gives priority to business continuity and continues writing data to volumes in the Primary Storage. In this case, data is written only on the volumes in the Primary Storage, causing the data to be nonequivalent to data in the Secondary Storage.
Read	This mode gives priority to maintenance of data equivalent state and inhibits writing data to the volumes in the Primary Storage.

9.1.2 Unit of Failovers

Failovers for the Storage Cluster function are performed on a per "TFO group" basis. TFO group is a group for which the connection configuration, policy, status, and maintenance that are required to perform a failover is consolidated on one storage device. TFO group includes one or more CA ports and volumes allowed to access those CA ports. The example of TFO group is shown in "Figure 9.2 Example of TFO Group".

Figure 9.2 Example of TFO Group

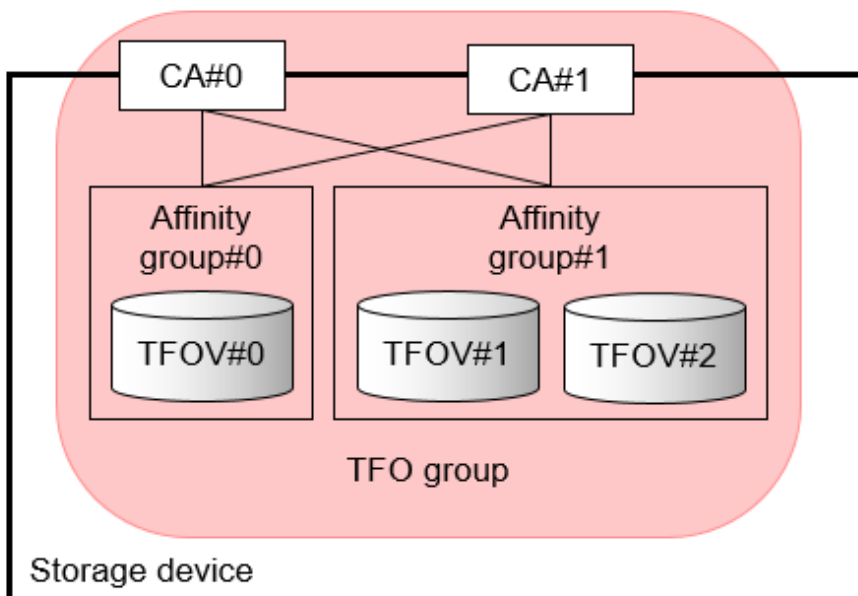

TFOV is a volume for which failover is enabled.



See

Refer to "9.1.5 Failover Target Volume" for details of the TFOV.

9.1.3 TFO Group Operation Configuration

TFO groups can be operated with either the Active-Active configuration or the Active-Standby configuration. The configuration that can be operated differs depending on the used storage device and firmware version as shown in "Table 9.1 Relationship between the Storage Device and the Operable TFO Group Configuration".

Table 9.1 Relationship between the Storage Device and the Operable TFO Group Configuration

Group	Storage Devices		Operable TFO Group Configuration	
	Model	Firmware Version	Active-Active Configuration	Active-Standby Configuration
A	ETERNUS DX S6 series	All versions	A (*1)	A
B	Other storage devices that support the Storage Cluster function	All versions that support the Storage Cluster function	N/A	A

A: Available, N/A: Not Available

*1: Only when the business server is an ESXi Host in an FC connection environment

The concept of "TFO mode" exists in the storage devices of Group A in the above table. TFO mode has the Active-Active mode and the Active-Standby mode, and the operation configuration of the TFO group is determined according to the mode specified during the creation of the TFO group.

- If the Active-Active mode is specified, the TFO group is operated with the Active-Active configuration. The Active-Active configuration is a configuration in which I/O to both the Primary Storage or the Secondary Storage is possible by Linking up with both storage devices.
- If the Active-Standby mode is specified, the TFO group is operated with the Active-Standby configuration. The Active-Standby configuration is a configuration in which I/O to the storage device that is Linked up is possible by Linking up with either the Primary Storage or the Secondary Storage.

The concept of "TFO mode" does not exist in the storage devices of Group B and the TFO group is always operated with the Active-Standby configuration.



Point

- When a TFO group is being operated with the Active-Active configuration, the Automatic Failover function is required and the Storage Cluster controller described in "Figure 9.1 Storage Cluster Function: Example of System Structure" must be installed. Refer to "Automatic Failover" in "9.1.8 Failover and Failback Methods" for details of the Automatic Failover function.
- When a TFO group is being operated with the Active-Active configuration, each Managed Server can be configured to perform priority I/Os to volumes that belong to TFO groups in either the Primary Storage and Secondary Storage. Refer to "9.1.4 Access Control According to the Preferred Path" for details.
- After a TFO group is created, the TFO mode and operation configuration of that TFO group cannot be changed. To change them, that TFO group must first be deleted and then recreated by specifying a different TFO mode.

The difference between a TFO group of the Active-Active configuration and a TFO group of the Active-Standby configuration is as follows.

- TFO group of the Active-Active configuration

TFO groups of the Active-Active configuration have the following TFO status and TFOG Role. Depending on whether a failover or failback is executed, the TFOG Role is changed.

Table 9.2 TFO Status in TFO Groups of the Active-Active Configuration


TFO Status	Meaning
Active	Accessible from Managed Servers.
Standby	Inaccessible from Managed Servers. While the TFOV data is being synchronized between two TFO groups, the TFO status of the TFO group that is the data copy destination is "Standby".

Table 9.3 TFOG Role in TFO Groups of the Active-Active Configuration

TFOG Role	Meaning
Local	Indicates the data copy source to synchronize the TFOV data between two TFO groups.
Remote	Indicates the data copy destination to synchronize the TFOV data between two TFO groups.

During the initial configuration of an environment, the TFO group whose TFOG Role is "Local" is called "Primary TFO group" and the TFO group whose TFOG Role is "Remote" is called "Secondary TFO group". The following figure is an example of a TFO group of the Active-Active configuration during the configuration of an environment.

Figure 9.3 Example of TFO Group of the Active-Active Configuration during the Configuration of an Environment

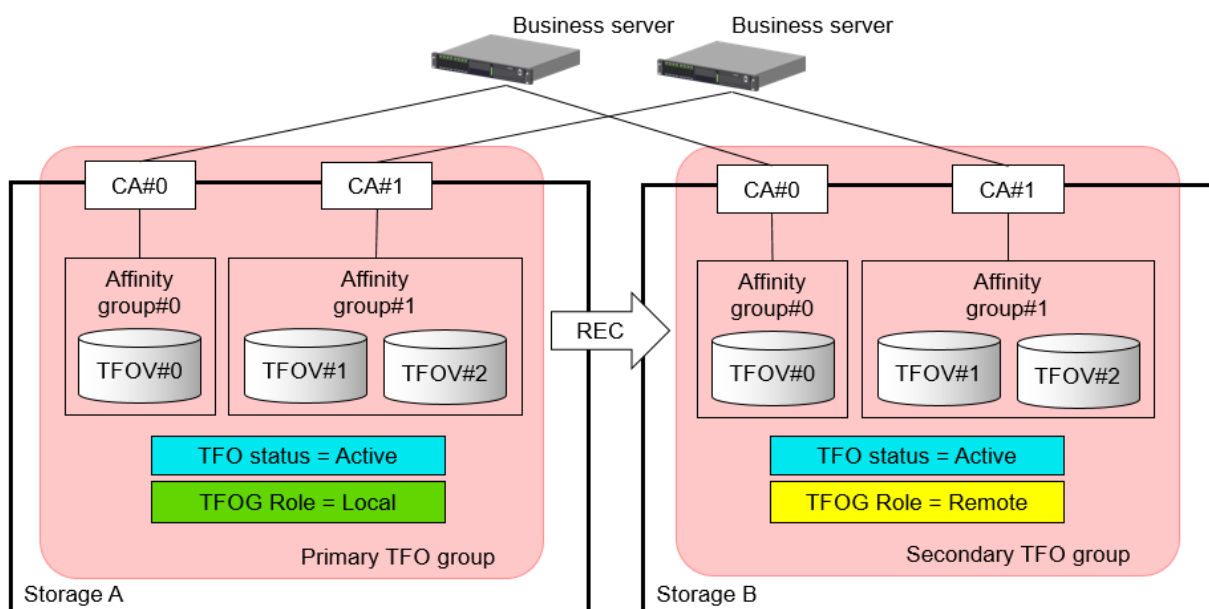

- TFO group of the Active-Standby configuration

TFO groups of the Active-Standby configuration have the following TFO status. When a failover or failback is executed, the TFO status is changed.

There is no TFOG Role in TFO groups of the Active-Standby configuration.


Table 9.4 TFO Status in TFO Groups of the Active-Standby Configuration

TFO Status	Meaning
Active	Indicates an active side. Accessible from Managed Servers.
Standby	Indicates a standby side. Inaccessible from Managed Servers.

During the initial configuration of an environment, the TFO group whose TFO status is "Active" is called "Primary TFO group" and the TFO group whose TFO status is "Standby" is called "Secondary TFO group".

The following figure is an example of a TFO group of the Active-Standby configuration during the configuration of an environment.

Figure 9.4 Example of TFO Group of the Active-Standby Configuration during the Configuration of an Environment

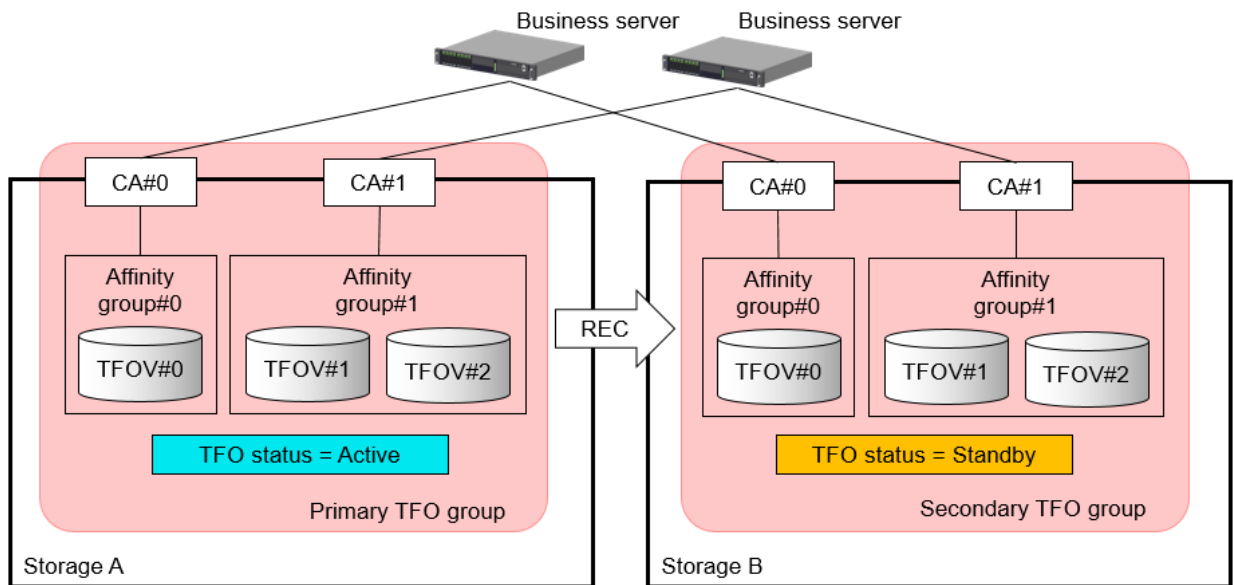

P Point


The input conditions for the TFO group name are as follows:

- The 1-16 characters which are alphanumeric characters "A-Z, a-z, 0-9" and special characters. However, " ? " \ * %" cannot be used.

9.1.4 Access Control According to the Preferred Path

When a TFO group is being operated with the Active-Active configuration, each Managed Server can be configured to perform priority I/Os to volumes that belong to TFO groups in either the Primary Storage and Secondary Storage. In the Storage Cluster function, an access path configured to perform priority I/Os is called "Preferred path". An image in which a preferred path is configured is shown in "Figure 9.5 Preferred Path Configuration Example".

Figure 9.5 Preferred Path Configuration Example

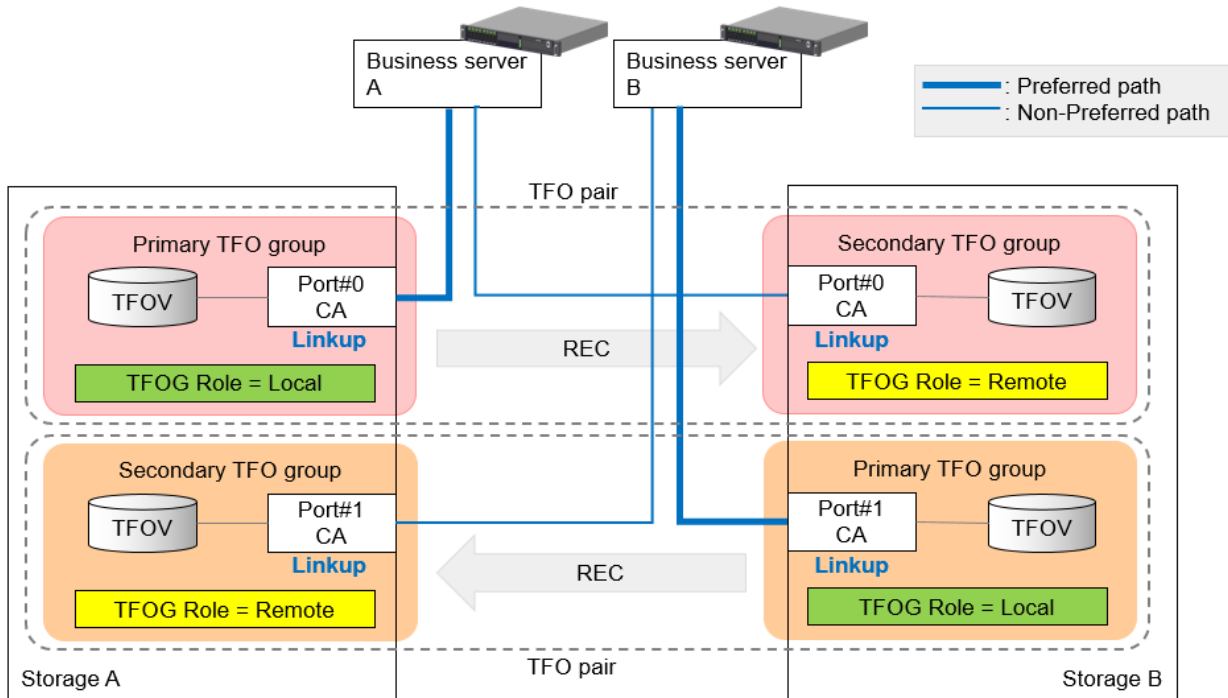

Information

If a preferred path is not configured, I/Os are evenly performed in both the Primary Storage and Secondary Storage.

Note that if the TFO group is operating with the Active-Standby configuration, preferred paths cannot be configured.

9.1.5 Failover Target Volume

In the Storage Cluster function, volumes that are targets of a failover are called "TFOV".

Among TFOVs created on both the Primary Storage and the Secondary Storage, those TFOVs that have the same Host Logical Unit (HLU) number and capacity are volumes whose data is synchronized. In addition to data synchronization, the volume information on the Secondary Storage is changed as shown in "Table 9.5 Change in Volume Information on Pre- and Post-Data Synchronization Secondary Storage".

Table 9.5 Change in Volume Information on Pre- and Post-Data Synchronization Secondary Storage

Volume Information to be Changed	Pre-Data Synchronization	Post-Data Synchronization
UID	UID unique to volume on the Secondary Storage	UID of volume on the Primary Storage of a pair
Product ID	Product ID unique to the Secondary Storage	Product ID of the Primary Storage of a pair

Note

- Even if a volume on the Secondary Storage is removed from the synchronized volume by the operation of deleting the TFO group after data has been synchronized, post-data synchronization volume information is inherited. For this reason, when continuing to use the volume on the Secondary Storage, use the ETERNUS CLI to return the volume information to pre-data synchronization status. Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used.

- There is an upper limit for the total capacity of all TFOVs per storage device. Refer to the following sections for the procedure to expand the total capacity of TFOVs per storage device.
 - When operating a TFO group with the Active-Active configuration: "[Expanding Total Capacity of TFOVs](#)" in "[9.3.1 Installation](#)"
 - When operating a TFO group with the Active-Standby configuration: "[Expanding Total Capacity of TFOVs](#)" in "[9.4.1 Installation](#)"

Point

The capacity of a TFOV can be expanded. Refer to the following sections for details.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.5 Expanding Business Volume Capacity](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.4 Expanding Business Volume Capacity](#)"

Required Conditions for TFOV

Volumes that are to be TFOVs must satisfy all the following conditions:

- There should be volumes of the same size in respective Primary and Secondary ETERNUS Disk storage systems.
- They are not the volumes used for the Non-disruptive Storage Migration.
- The External LU Information of those volumes is not "Inherited".
- "Veeam" is not displayed in the **Usage** column in the screen of Web Console for the volumes.
- When an ETERNUS DX S6 series is used, Deduplication and Compression are disabled for the volume.
- When operating a TFO group with the Active-Active configuration, volume type is any of "Standard", "WSV", or "TPV". In addition, the volume type of corresponding volumes on the Primary Storage and the Secondary Storage should be the same.
"SDV", "SDPV", and "FTV" are not supported.
- When operating a TFO group with the Active-Standby configuration, volume type is any of "Standard", "WSV", "TPV" or "FTV". In addition, the volume type of corresponding volumes on the Primary Storage and the Secondary Storage should be the same.
"SDV" and "SDPV" are not supported.
For "FTV", synchronizing the access status data can inherit the performance information and the relocation status of Automated Storage Tiering even after failover/failback. Refer to "Access Status Data Synchronization" in the *Storage Cruiser Operation Guide for Optimization Function* for the method to synchronize access status data.
- When operating a TFO group with the Active-Active configuration, a volume that is not concatenated with LUN concatenation.
- Advanced Copy should not be in operation.
- The total capacity of business volumes per storage device should not exceed the total capacity of TFOVs.

Note

The volume that belongs to the pair of CA ports cannot be shared from the unused port by the Storage Cluster function.

9.1.6 Pairing of CA Ports


The Storage Cluster function shares the port parameter in the CA ports of two ETERNUS Disk storage systems, controls the Link status of each CA port, and achieves the failover.

The CA ports included in one TFO group shares one port parameter with the CA ports included in the other TFO group between storage systems. This sharing operation is called "Pairing of CA ports". Also, a pair of CA ports sharing port parameter is called "CA port pair".

- For the Active-Active configuration

CA port WWPNs of the Primary Storage and Secondary Storage remain a physical WWPN even if a CA port pairing is performed. For CA ports of the Secondary Storage, although a Linkdown occurs when a CA port pairing is performed, the Link status changes to Linkup after an equivalence of the TFO session is completed. The image of CA port pair in the Active-Active configuration is shown in "Figure 9.6 Example of CA Port Pair in the Active-Active Configuration".

Figure 9.6 Example of CA Port Pair in the Active-Active Configuration

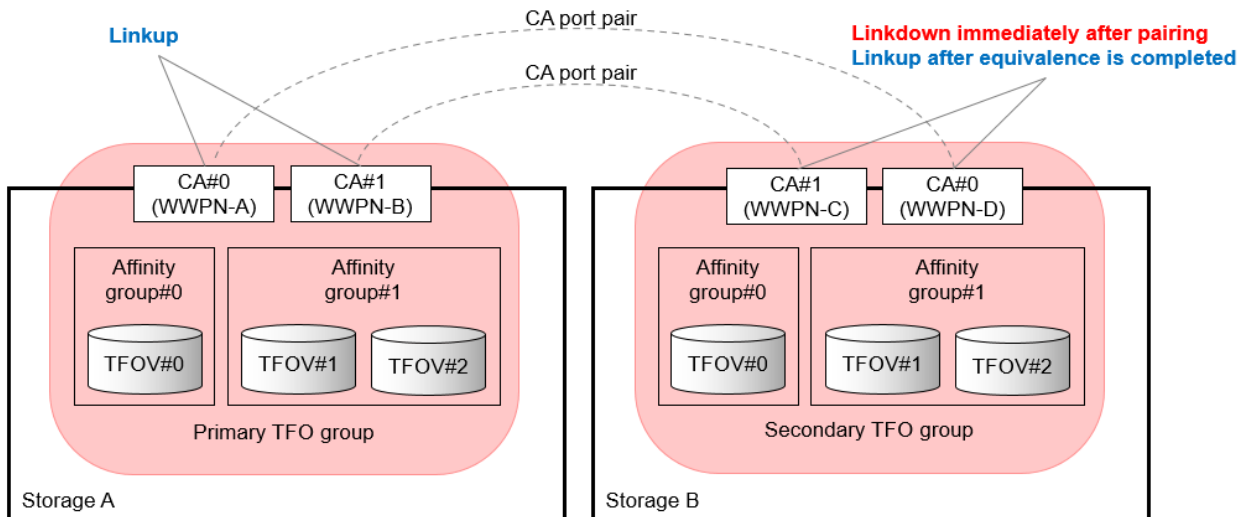


- For the Active-Standby configuration

For FC connection environments, WWPN/WWNN is shared. By pairing CA ports, WWPN/WWNN of the CA port in the Primary Storage is automatically configured as a logical WWPN/WWNN to the CA port in the Secondary Storage and the CA port in the Secondary Storage is Linkdown.

For iSCSI connection environments, iSCSI name and iSCSI IP address are shared. By pairing CA ports, the CA port in the Secondary Storage is Linkdown. After that, by setting the iSCSI name and iSCSI IP address of the CA port in the Primary Storage to the CA port in the Secondary Storage manually, the iSCSI name and iSCSI IP address can be shared.

The image of CA port pair in the Active-Standby configuration is shown in "Figure 9.7 Example of CA Port Pair in the Active-Standby Configuration".

Figure 9.7 Example of CA Port Pair in the Active-Standby Configuration

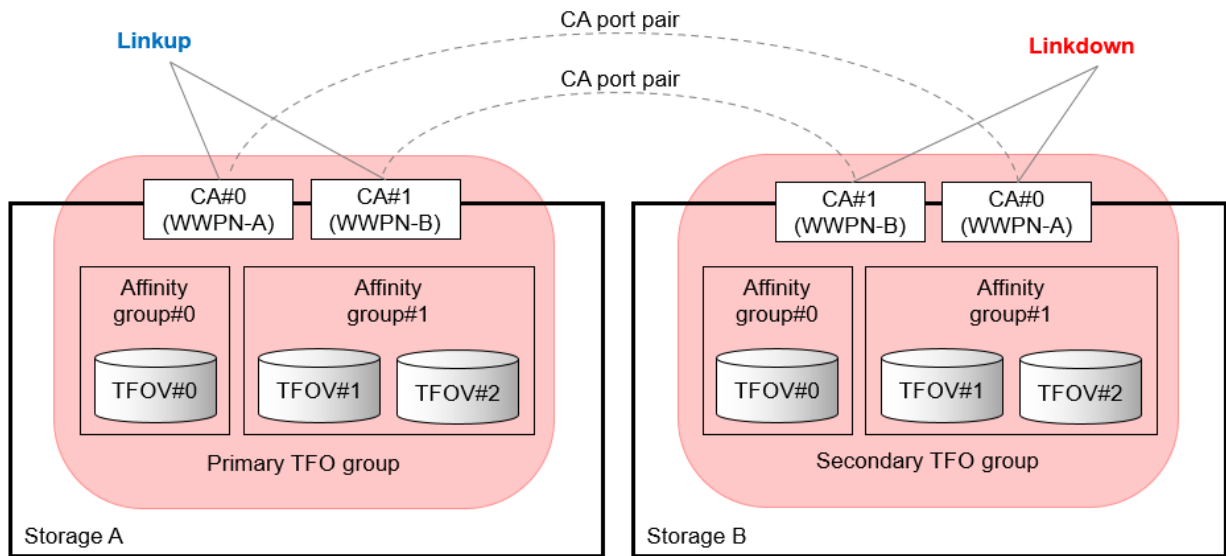

9.1.7 Control of Link Status of CA Ports

Depending on pairing of CA ports and failover, the port parameter and Link status of CA ports are changed. The device whose Link status is "Linkup" is accessible from Managed Servers.

For FC connection environments, the value of WWPN/WWNN is changed by pairing CA ports.

For iSCSI connection environments, manually setting the parameter of the iSCSI CA port of the Secondary Storage to match that of the Primary Storage after a CA port pairing can control the Link status.

Change in Link status of each CA port with CA port pairing and failover/failback operations are shown in "Table 9.6 Change in Link Status of CA Port (for FC Connection Environment)" and "Table 9.7 Change in Link Status of CA Port (for iSCSI Connection Environment)".

Table 9.6 Change in Link Status of CA Port (for FC Connection Environment)

Primary Storage		Timing	Secondary Storage (in the Active-Active configuration)		Secondary Storage (in the Active-Standby configuration)	
WWPN/WWNN	Link Status		Link Status	WWPN/WWNN	Link Status	WWPN/WWNN
WWPN/WWNN of the Primary Storage side	Linkup	Pre-CA port pairing	Linkup	WWPN/WWNN of the Secondary Storage side	Linkup	WWPN/WWNN of Secondary Storage side
		Post-CA port pairing	Linkdown when REC starts Linkup after equivalence is completed		Linkdown	WWPN/WWNN of the Primary Storage side
	Linkdown	Primary Storage stops Under failover	Linkup			

Primary Storage		Timing	Secondary Storage (in the Active-Active configuration)		Secondary Storage (in the Active-Standby configuration)	
WWPN/ WWNN	Link Status		Link Status	WWPN/ WWNN	Link Status	WWPN/ WWNN
		Failover completed			Linkup	
		Primary Storage recovered				
		Failback started				
		Under failback				
	Linkup	Failback completed			Linkdown	
		Storage Cluster deconstructed				Linkup

*1: When returning the WWPN/WWNN of the Secondary Storage CA port to its original status.

Table 9.7 Change in Link Status of CA Port (for iSCSI Connection Environment)

Primary Storage		Timing	Secondary Storage (in the Active-Standby configuration) (*1)	
iSCSI Information	Link Status		Link Status	iSCSI Information
iSCSI information of the Primary Storage side	Linkup	Pre-CA port pairing	Linkup	iSCSI information of the Secondary Storage side
		Post-CA port pairing	Linkdown	
		Parameter setting of iSCSI CA port of the Secondary Storage side		
	Linkdown	Primary Storage stops	Linkup	iSCSI information of the Primary Storage side
		Under failover		
		Failover completed		
		Primary Storage recovered		
		Failback started		
	Linkup	Under failback	Linkdown	iSCSI information of the Secondary Storage side
		Failback completed		
		Parameter setting of iSCSI CA port of the Secondary Storage side		
		Storage Cluster deconstructed		

*1: The Active-Active configuration is not supported in iSCSI connection environments.

About CA Port WWPN/WWNNs of the Secondary Storage when deconstructing a Storage Cluster Environment

If such a trouble as requires storage device replacement occurs and an ETERNUS Disk storage system should be replaced, deconstruct the Storage Cluster environment by deleting TFO groups.

For FC connection environments with the Active-Standby configuration, when deleting TFO groups, you can select either of the following actions to handle WWPN/WWNN of the CA port for the Secondary Storage:

- a. Return the Secondary Storage CA port to its original WWPN/WWNN.

- b. Return the Secondary Storage CA port not to its original WWPN/WWNN but continue to use the logical WWPN/WWNN.

If Step "a" is selected, it does not compete with the WWPN/WWNN of the Primary Storage CA port.

If Step "b" is selected, the device operated as the Primary Storage can be replaced while the Secondary Storage is accessible from Managed Servers.

Note

- For FC connection environments with the Active-Standby configuration

If both the Primary Storage CA port and the Secondary Storage CA port get active, their WWPN/WWNN competes with each other, possibly causing data corruption. Therefore, when selecting Step "b", keep the following rules:

- Do not delete the TFO group before making sure that the Primary Storage CA port is physically disconnected from SAN.
- Do not connect to SAN the ETERNUS Disk storage system that had the Primary TFO group deleted.

- For iSCSI connection environments

The set values for the iSCSI name and the iSCSI IP address remain unchanged. Therefore, keep the following rules:

- Check whether the iSCSI IP address is not a duplicate in the same SAN. If it is a duplicate, do not delete the TFO group before changing the iSCSI IP address.
- Do not delete the TFO group before making sure that the storage device in the standby side is physically disconnected from SAN.

9.1.8 Failover and Failback Methods

In the Storage Cluster function, the mode related to the method for failing over from the Primary Storage to the Secondary Storage is called "Failover mode". In addition, the mode related to the method for failing back from the Secondary Storage to the Primary Storage is called "Failback mode".

Failover Mode

Either of the following can be selected.

Failover Mode	Explanation
Auto (default)	This is the Failover mode that runs automatically when a failure of the Primary Storage is detected. This function that automatically performs a failover is called " Automatic Failover ". Business can be continued without stopping. A Storage Cluster Controller is required when operated in this mode. When this mode is set, failover can be performed manually from Web Console.
Manual	This is the Failover mode that runs manually. A Storage Cluster Controller is not required when operated in this mode.

Note

Even if the interface type of the REC path is "iSCSI", if the Primary Storage and the Secondary Storage do not support Automatic Failover through the REC path of the iSCSI port, set this mode to "Manual".

Failback Mode

Either of the following can be specified.

Mode	Explanation
Auto	This is the Failback mode that runs automatically when a failure recovery of the Primary Storage is detected. This function that automatically performs a failback is called " Automatic Failback ".
Manual (default)	This is the Failback mode that runs manually. Failback can be performed at any time from Web Console.

Automatic Failover

"[Figure 9.8 Behavior of Automatic Failover when Storage Device is downed in the Active-Active Configuration](#)" shows an image that Storage A (Primary Storage) is down and a failover to Storage B (Secondary Storage) is performed when Storage A and Storage B are in use in the Active-Active configuration. The TFOG Role of Storage A switches from "Local" to "Remote" and the TFOG Role of Storage B switches from "Remote" to "Local" due to a failover.

"[Figure 9.9 Behavior of Automatic Failover when Storage Device is downed in the Active-Standby Configuration \(for FC Connection Environment\)](#)" shows an image that Storage A (Primary Storage) is down and a failover to Storage B (Secondary Storage) is performed when Storage A and Storage B are in use in the Active-Standby configuration. This is an example for FC connection environments. For iSCSI connection environments, the iSCSI name and iSCSI IP address are set for the CA port and the switch becomes the network switch.

Figure 9.8 Behavior of Automatic Failover when Storage Device is down in the Active-Active Configuration


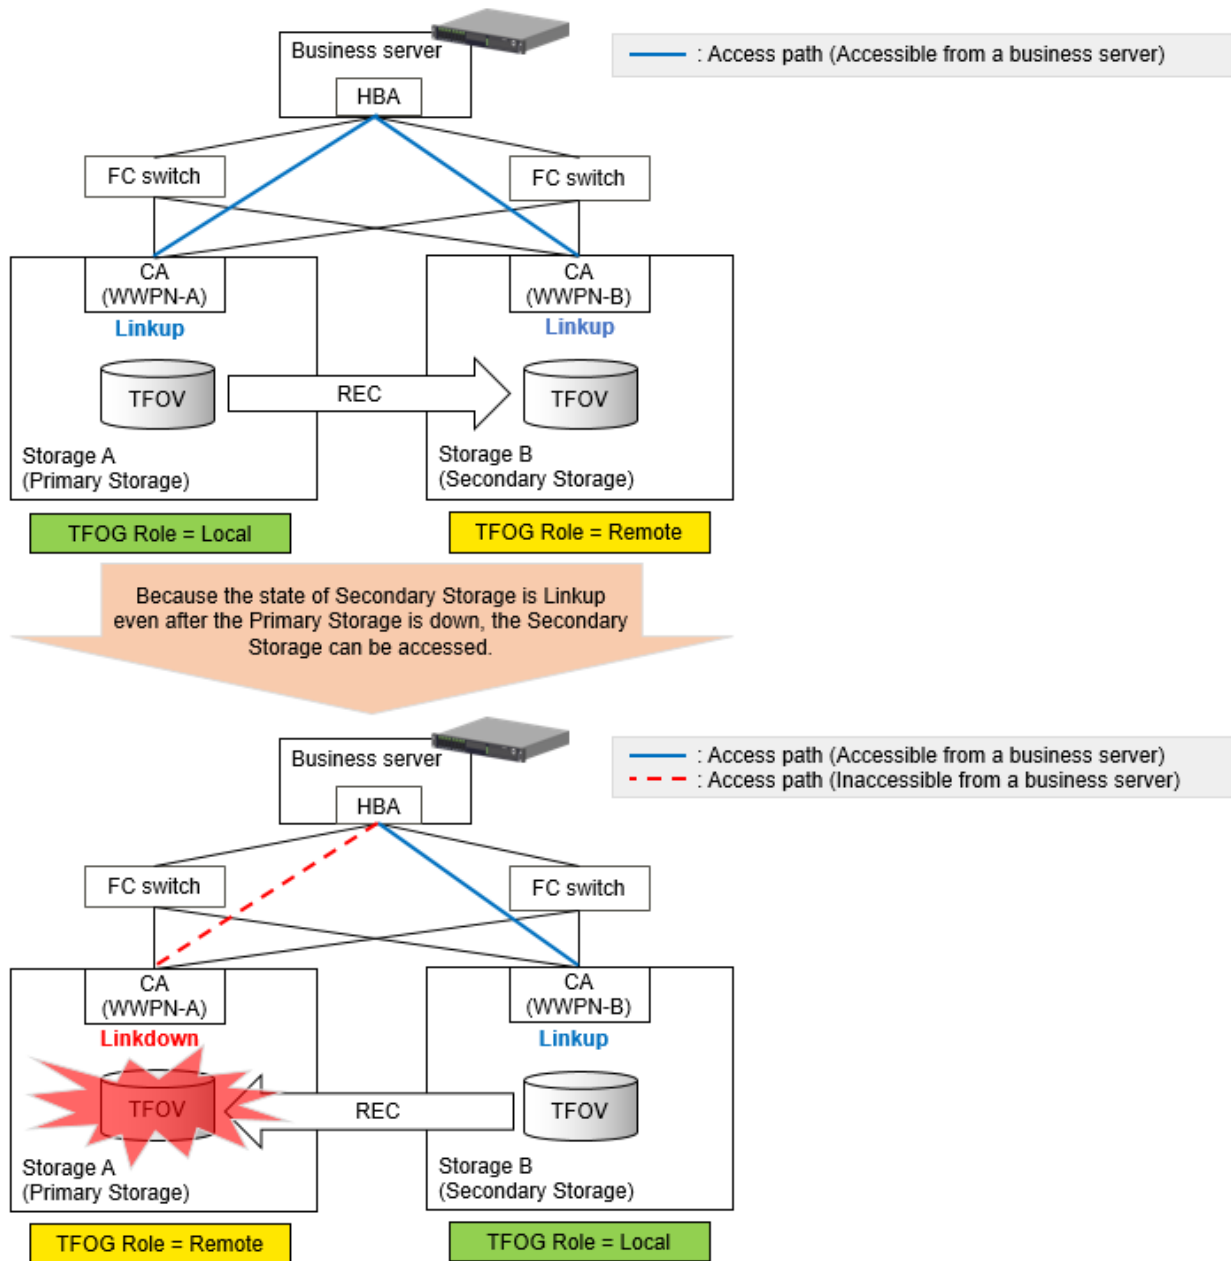


Figure 9.9 Behavior of Automatic Failover when Storage Device is downed in the Active-Standby Configuration (for FC Connection Environment)

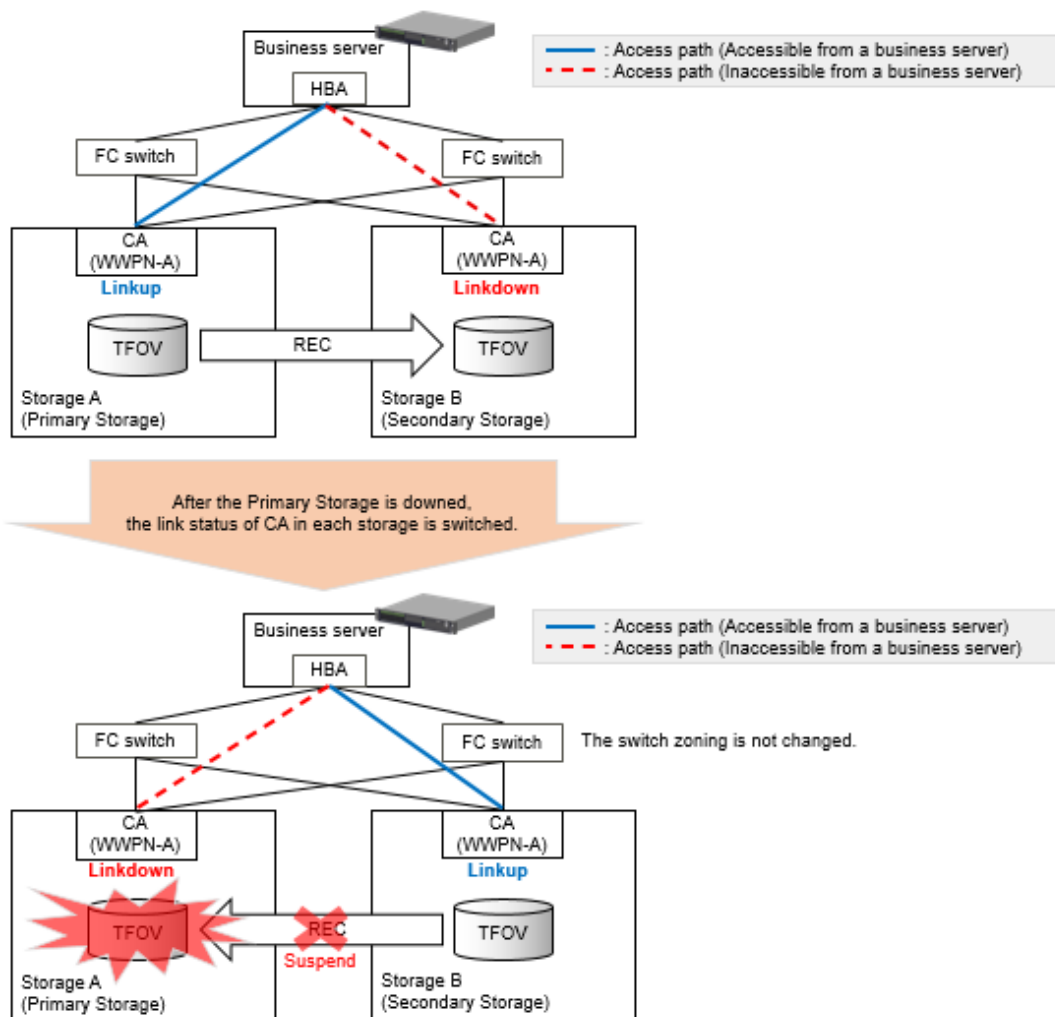

"Figure 9.10 Behavior of Automatic Failover when CA Port is linked down in the Active-Active Configuration" shows an image that all the CA ports belonging to the Primary TFO group are linked down because of CA port failure or connection failure in Storage A (Primary Storage) and a failover to Storage B (Secondary Storage) is performed when Storage A and Storage B are in use in the Active-Active configuration.

"Figure 9.11 Behavior of Automatic Failover when CA Port is linked down in the Active-Standby Configuration (for FC Connection Environment)" shows an image that all the CA ports belonging to the Primary TFO group are linked down because of CA port failure or connection failure in Storage A (Primary Storage) and a failover to Storage B (Secondary Storage) is performed when Storage A and Storage B are in use in the Active-Standby configuration. This is an example for FC connection environments. For iSCSI connection environments, the iSCSI name and iSCSI IP address are set for the CA port and the switch becomes the network switch.

In accordance with link switchover of each CA port, the status of TFO group is also automatically switched, so that the volumes in the Secondary TFO group become accessible.

Figure 9.10 Behavior of Automatic Failover when CA Port is linked down in the Active-Active Configuration


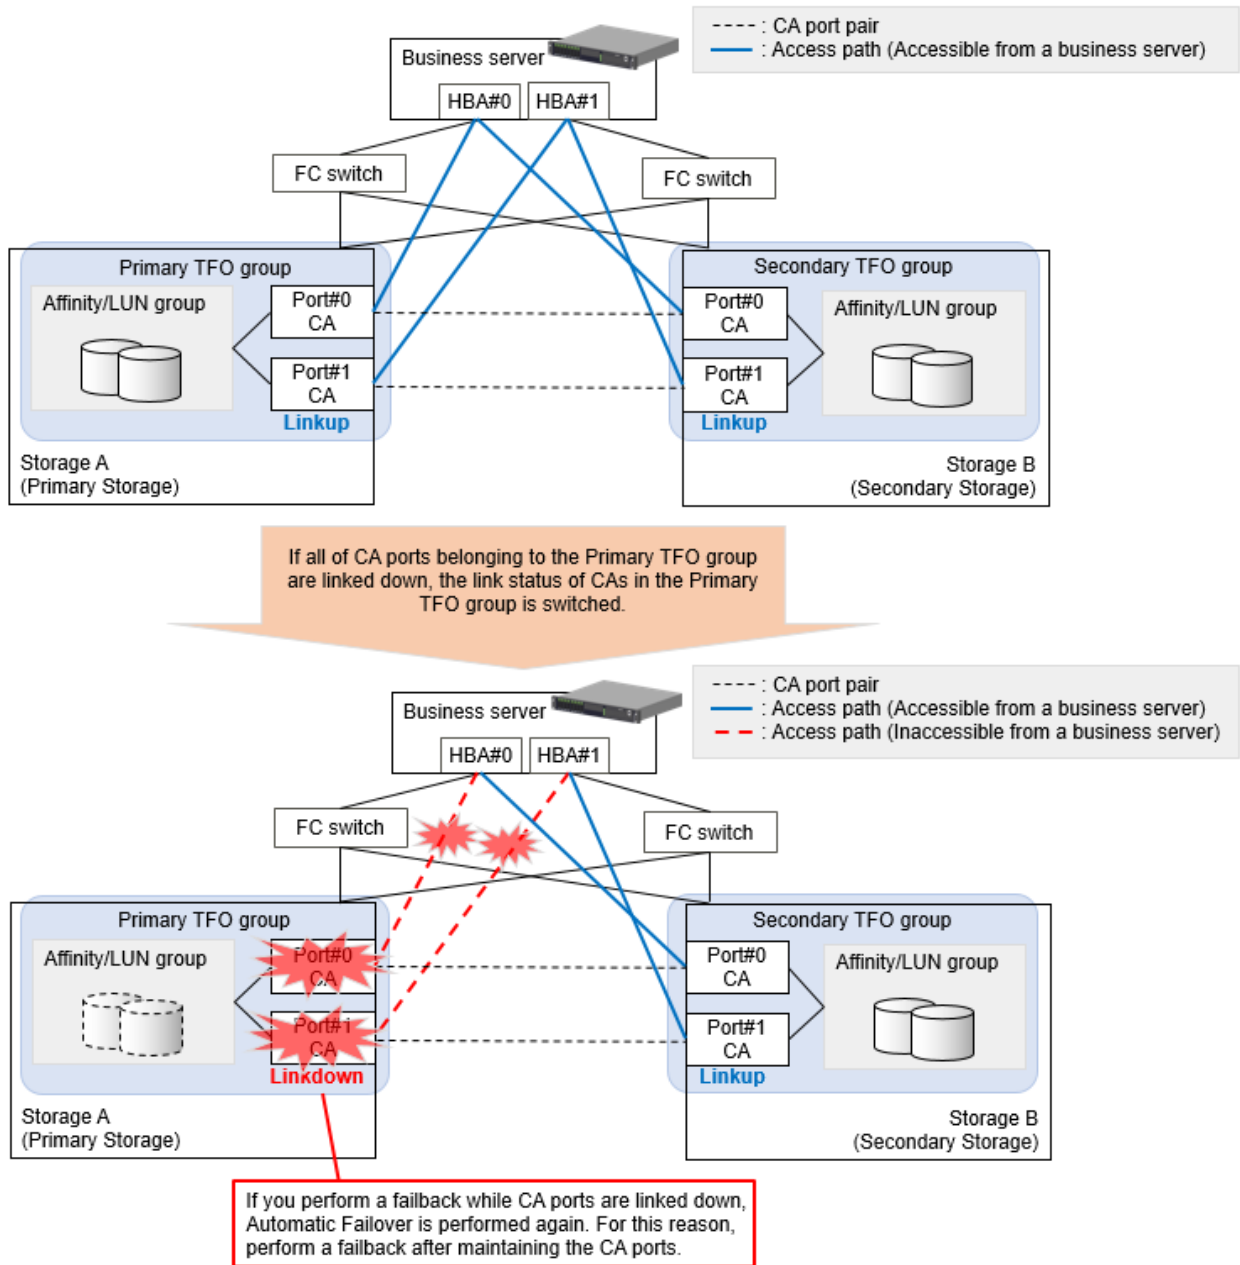


Figure 9.11 Behavior of Automatic Failover when CA Port is linked down in the Active-Standby Configuration (for FC Connection Environment)

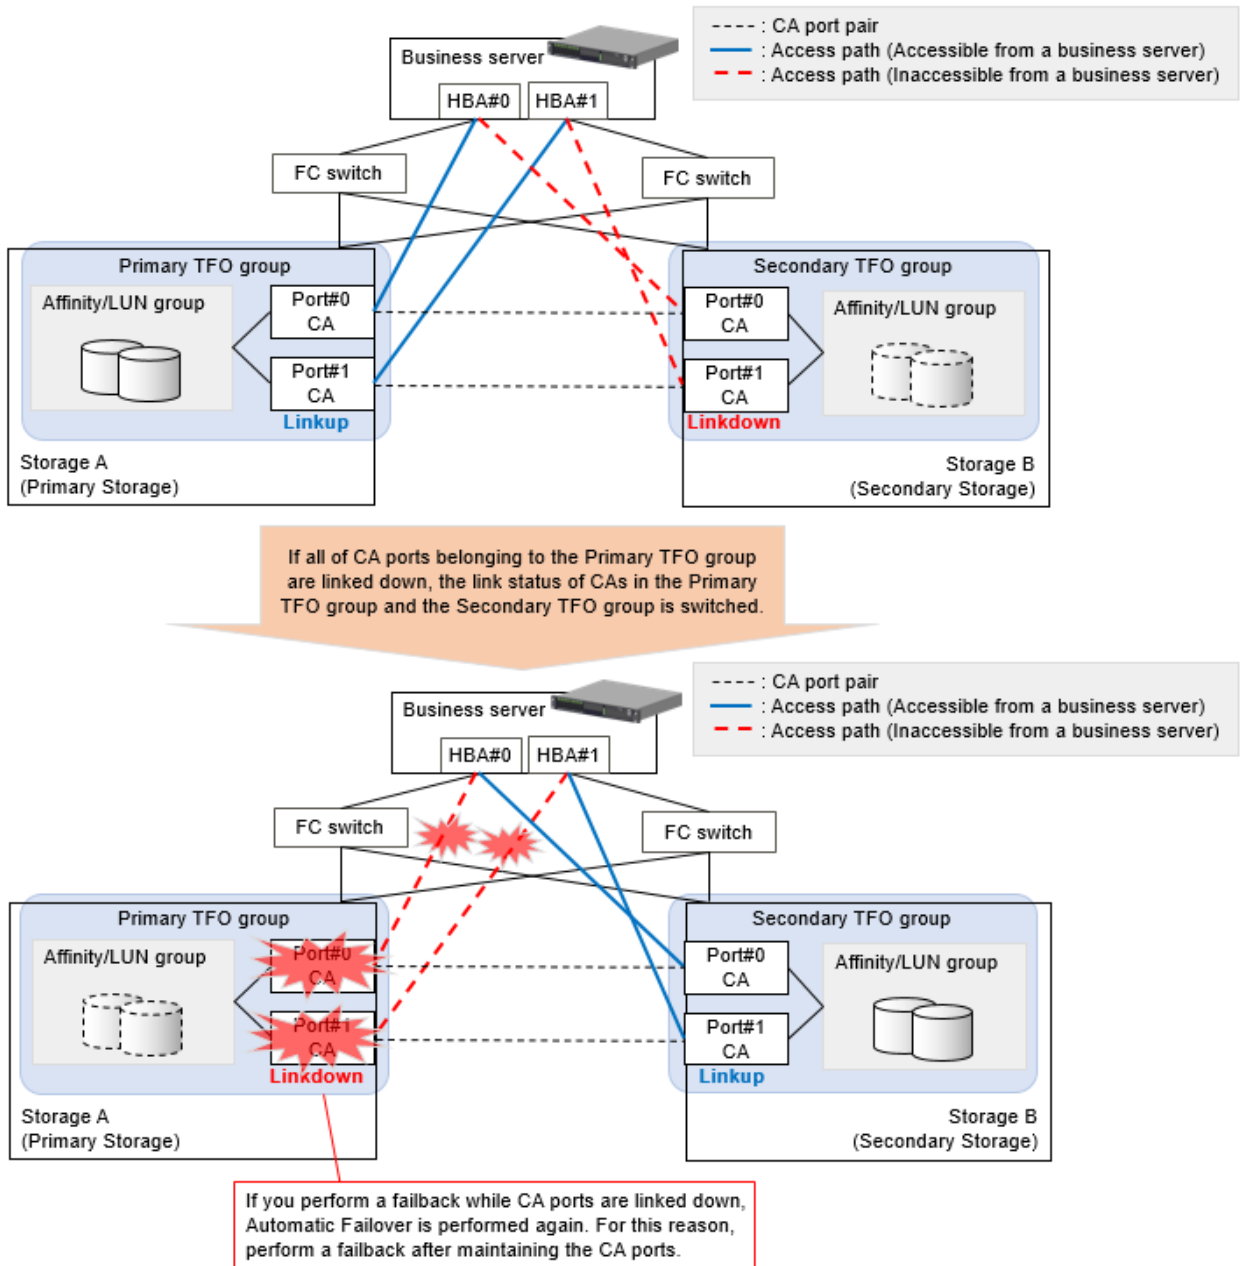

Note

When the storage device is an ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4) or an ETERNUS AF S2 series, or when the storage device is an ETERNUS DX8900 S4 whose firmware version is earlier than V11L20, if a Linkdown of the REC path between the Primary Storage and the Secondary Storage and a Linkdown of the CA port that connects with business servers occur at the same time when multiple switches fail, Automatic Failover cannot be performed during a CA port Linkdown. Configure the system settings to separate the switches for the REC path and for the business server so that a simultaneous Linkdown does not occur.

Automatic Failback

Automatic Failback is a function in which the Primary TFO group automatically becomes "Active" when recovering from the failure of ETERNUS Disk storage system with the Primary TFO group detected.

9.1.9 Confirming the Existence Using the Storage Cluster Controller and the Failover Execution Trigger

The example of structure between both the Primary Storage and the Secondary Storage and Storage Cluster Controller is shown in "Figure 9.12 Structure Example of Life Check via Storage Cluster Controller". In this structure example, communication status, device status and timing of Automatic Failover are shown in "Table 9.8 Timing of Automatic Failover Operation".

Figure 9.12 Structure Example of Life Check via Storage Cluster Controller

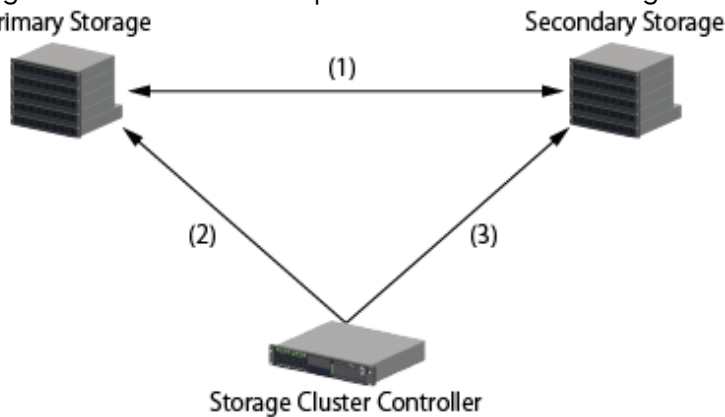


Table 9.8 Timing of Automatic Failover Operation

Number	Communication Status			Device Status		
	(1)	(2)	(3)	Primary Storage	Secondary Storage	Timing of Automatic Failover Operation and Status Change
1	Y	Y	Y	Alive	Alive	N/A
2	N	Y	Y			
3	Y	N	Y			
4	Y	Y	N			
5	N	N	Y	Down		A Primary Storage: Active -> Standby Secondary Storage: Standby -> Active
6	N	Y	N	Alive	Down	N/A
7	Y	N	N		Alive	
8	N	N	N	Down	Down	N/A (all blocked) (*1)

Y: Communication enabled status

N: Communication disabled status

*1: During a disaster, when recreating a network environment that includes communication of Storage Cluster Controller, the communication from Storage Cluster Controller may be temporarily disconnected and an overall blockage may occur.

Note

Automatic Failover does not operate in the following cases:

- For FC connection environments
 - When "route (1) between the Primary Storage and the Secondary Storage" failed 10 seconds after "route (2) between the Primary Storage and the Storage Cluster Controller" had failed.

- When "route (2) between the Primary Storage and the Storage Cluster Controller" failed three seconds after "route (1) between the Primary Storage and the Secondary Storage" had failed.
- For iSCSI connection environments
 - When "route (1) between the Primary Storage and the Secondary Storage" failed 20 seconds after "route (2) between the Primary Storage and the Storage Cluster Controller" had failed.
 - When "route (2) between the Primary Storage and the Storage Cluster Controller" failed seven seconds after "route (1) between the Primary Storage and the Secondary Storage" had failed.


Location of Storage Cluster Controller

Storage Cluster Controller and each monitored ETERNUS Disk storage system monitor each other. Therefore, if the Storage Cluster Controller and the managed ETERNUS Disk storage systems are placed in the same building, the following trouble could occur:

- If the building is exposed to disaster, all the paths are blocked and failover gets disabled.

To prevent the above trouble, it is recommended to place the Storage Cluster Controller and each monitored ETERNUS Disk storage system in separate buildings respectively. The location example is shown in "[Figure 9.13 Location Example of Storage Cluster Controller and Monitored ETERNUS Disk Storage Systems](#)". Also, the Storage Cluster Controller can be located on the same server as Management Server.

Figure 9.13 Location Example of Storage Cluster Controller and Monitored ETERNUS Disk Storage Systems

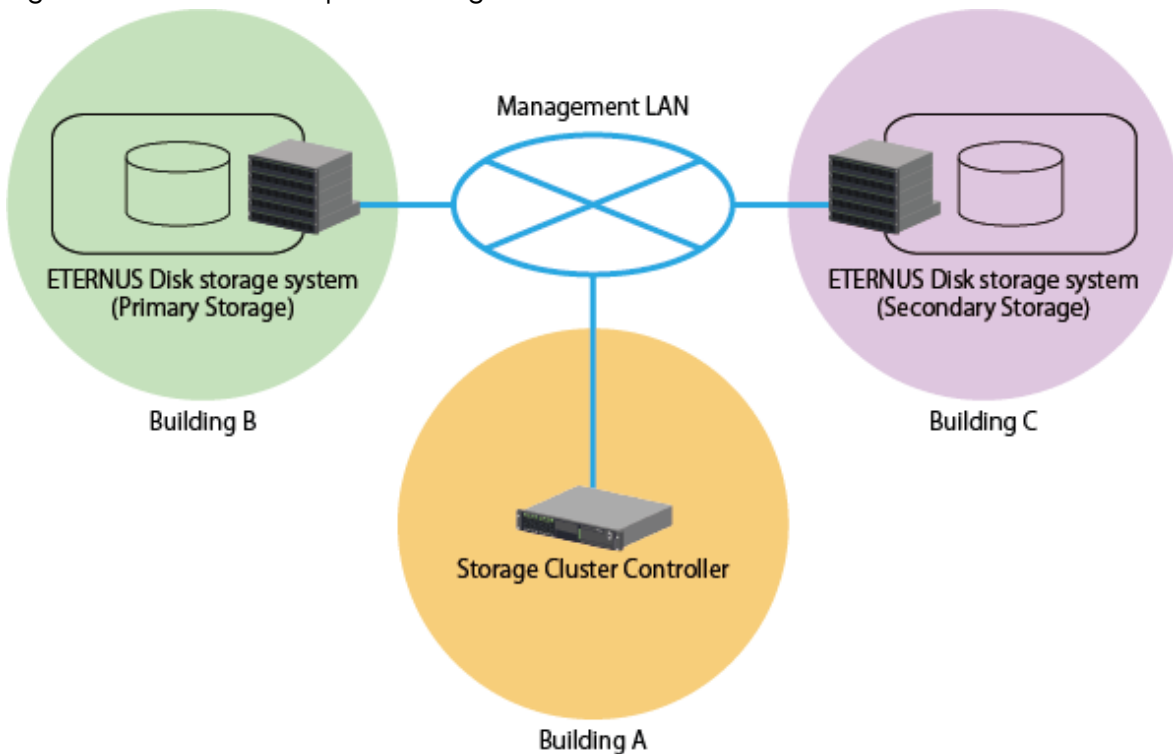

9.2 Work Flow

The following is a description of the procedure to create a Storage Cluster environment.

9.2.1 Work Flow in Active-Active Configuration

This section describes the following work flow when the Storage Cluster is operating with the Active-Active configuration.


- [When registering new Primary and Secondary Storage devices](#)

- When adding Secondary Storage where only Primary Storage is used
- When adding volumes

Refer to "9.3 Operation Method in Active-Active Configuration" for details about the procedure to create a Storage Cluster environment.


When registering new Primary and Secondary Storage devices

Figure 9.14 Work Flow

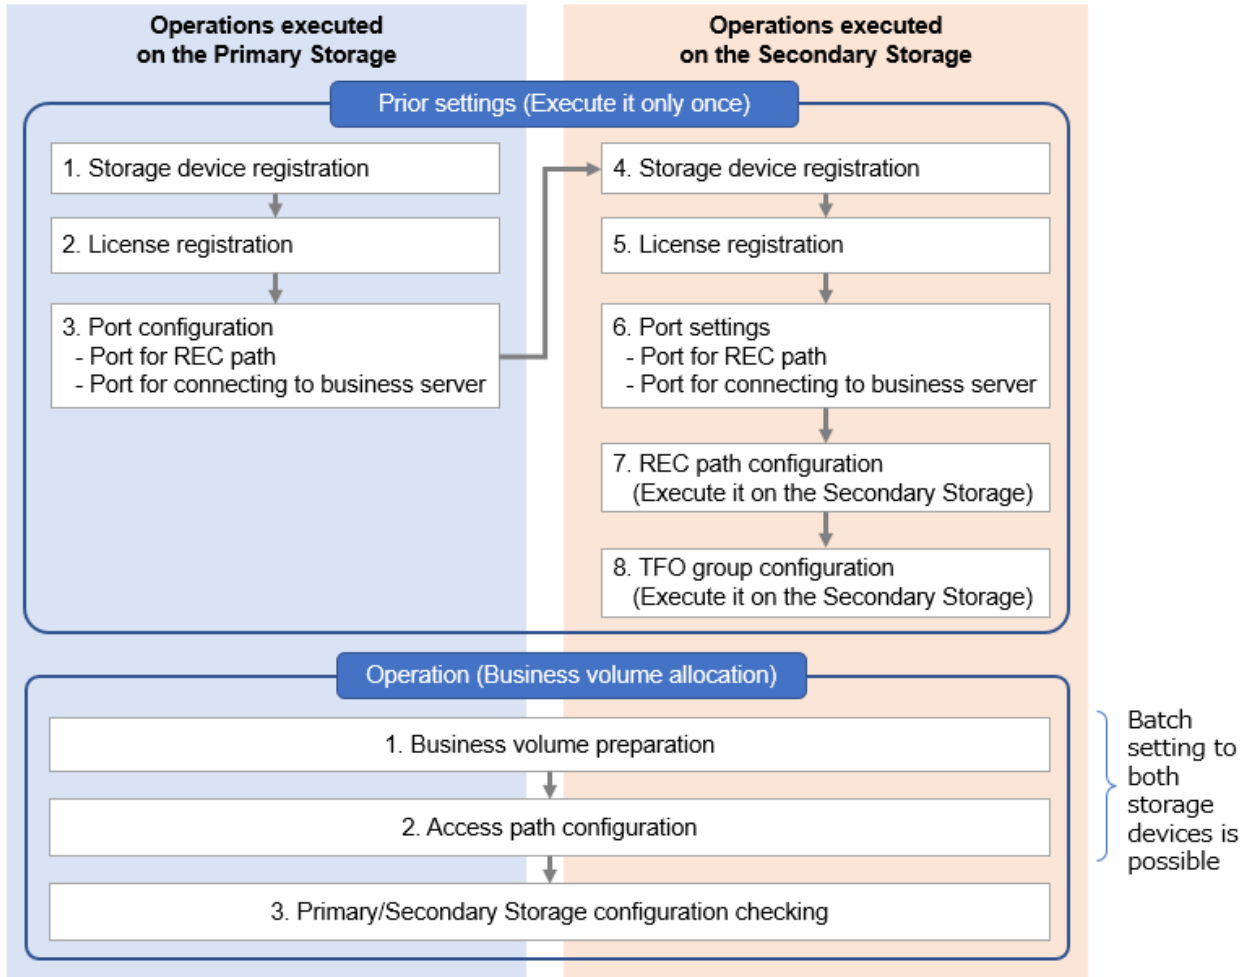

When adding Secondary Storage where only Primary Storage is used

Figure 9.15 Work Flow

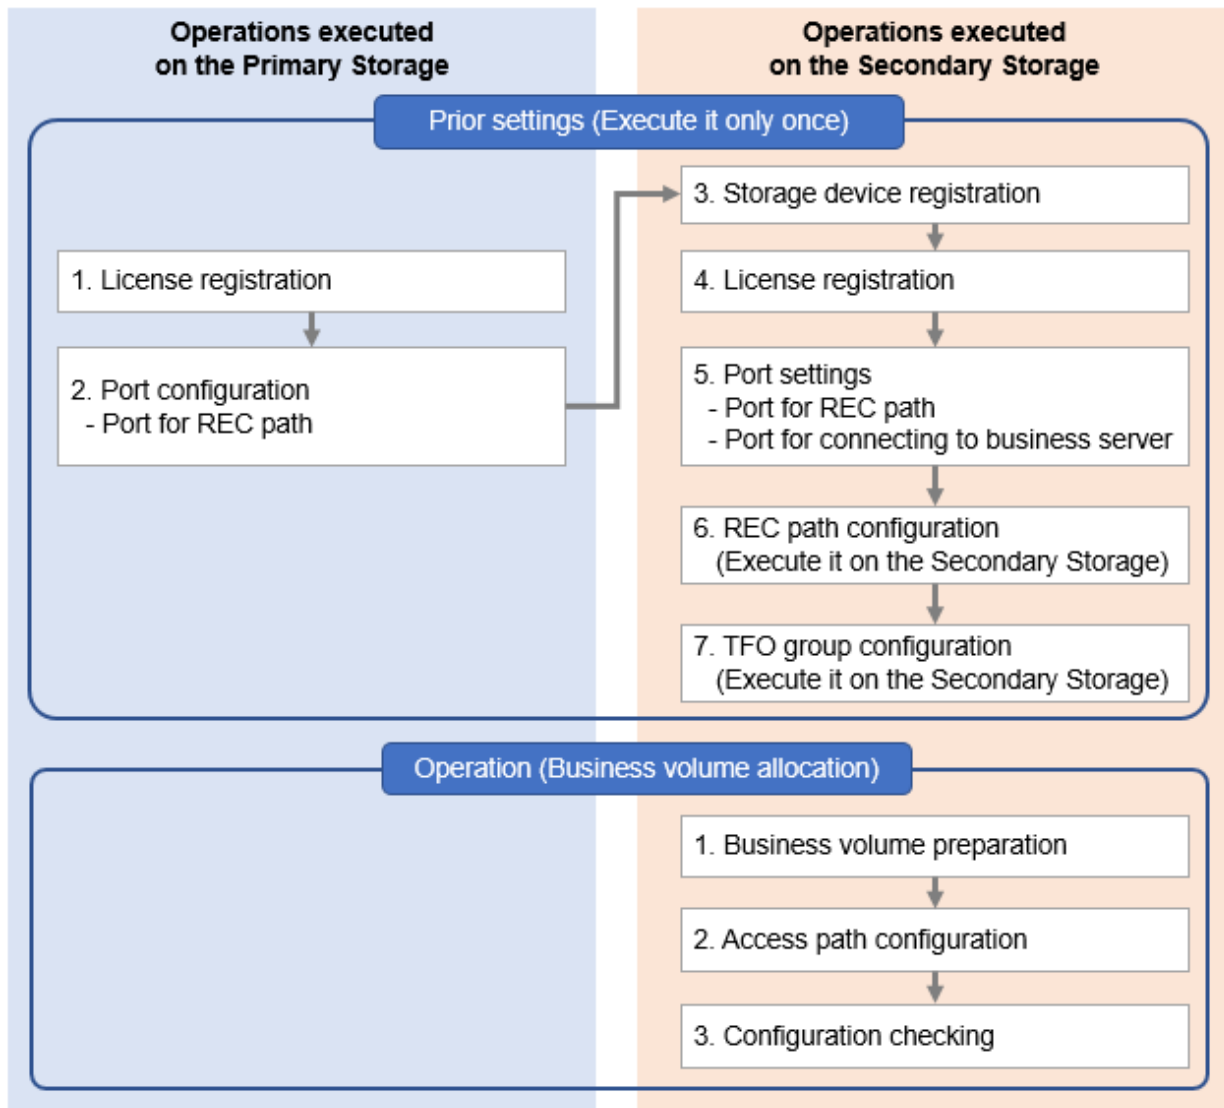


Point

To set a preferred path, perform it after all the work in the above work flow is completed. Refer to "[9.3.2.2 Setting/Changing the Preferred Path](#)" for the setting procedure of a preferred path.

When adding volumes

Figure 9.16 Work Flow

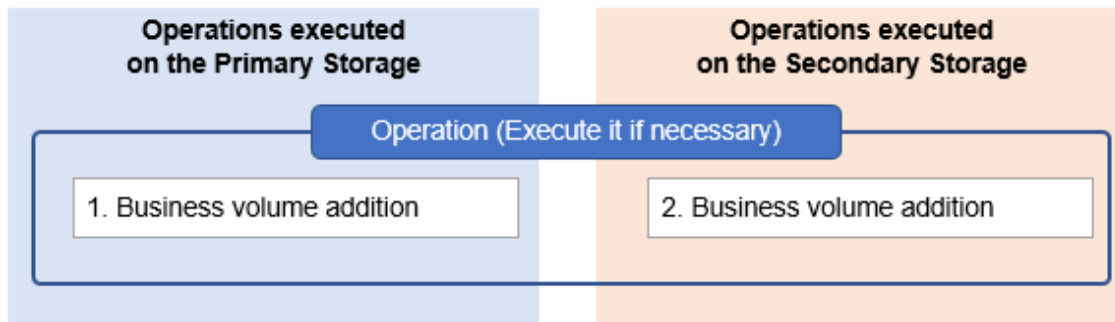

9.2.2 Work Flow in Active-Standby Configuration

This section describes the following work flow when the Storage Cluster is operating with the Active-Standby configuration.

- [When registering new Primary and Secondary Storage devices](#)
- [When adding Secondary Storage where only Primary Storage is used](#)
- [When adding volumes](#)

Refer to "[9.4 Operation Method in Active-Standby Configuration](#)" for details about the procedure to create a Storage Cluster environment.

When registering new Primary and Secondary Storage devices

Figure 9.17 Work Flow when FC Ports are used


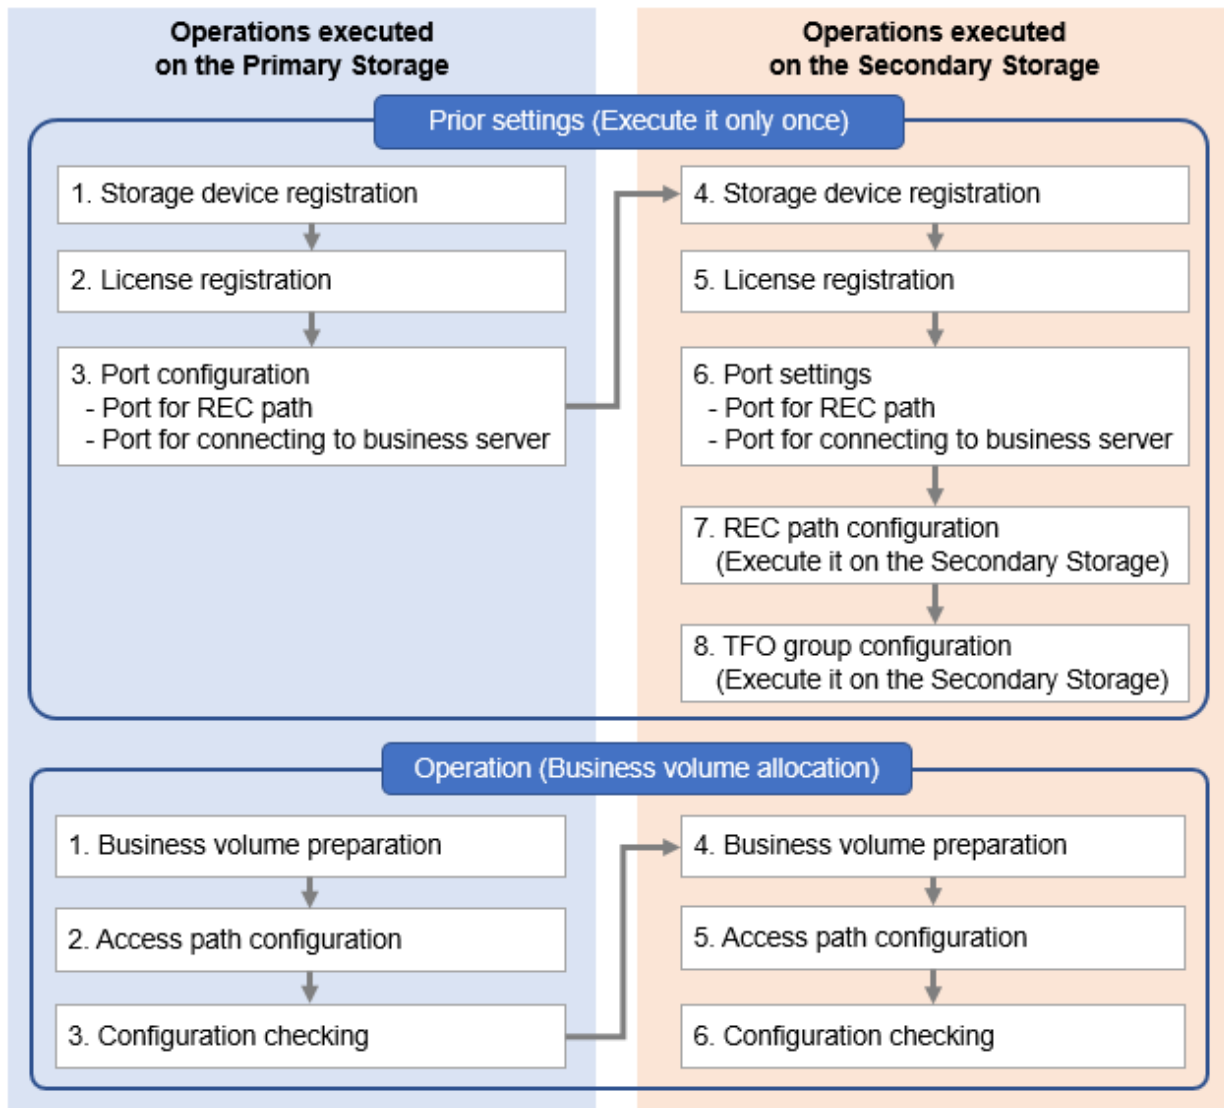


Figure 9.18 Work Flow when iSCSI Ports are used

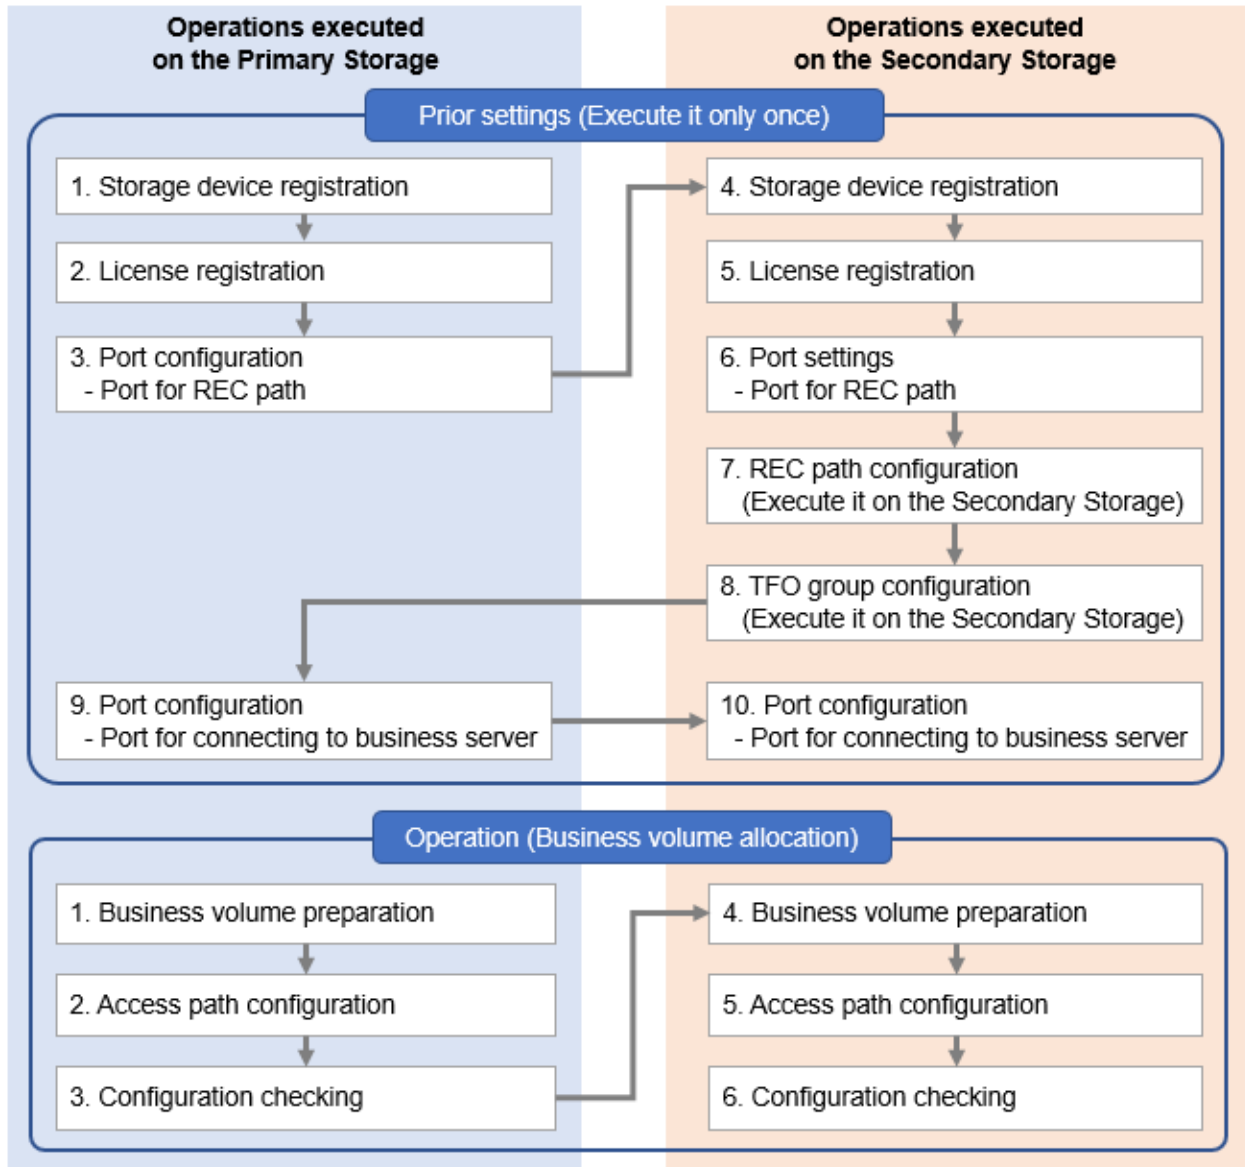

When adding Secondary Storage where only Primary Storage is used

Figure 9.19 Work Flow when FC Ports were used



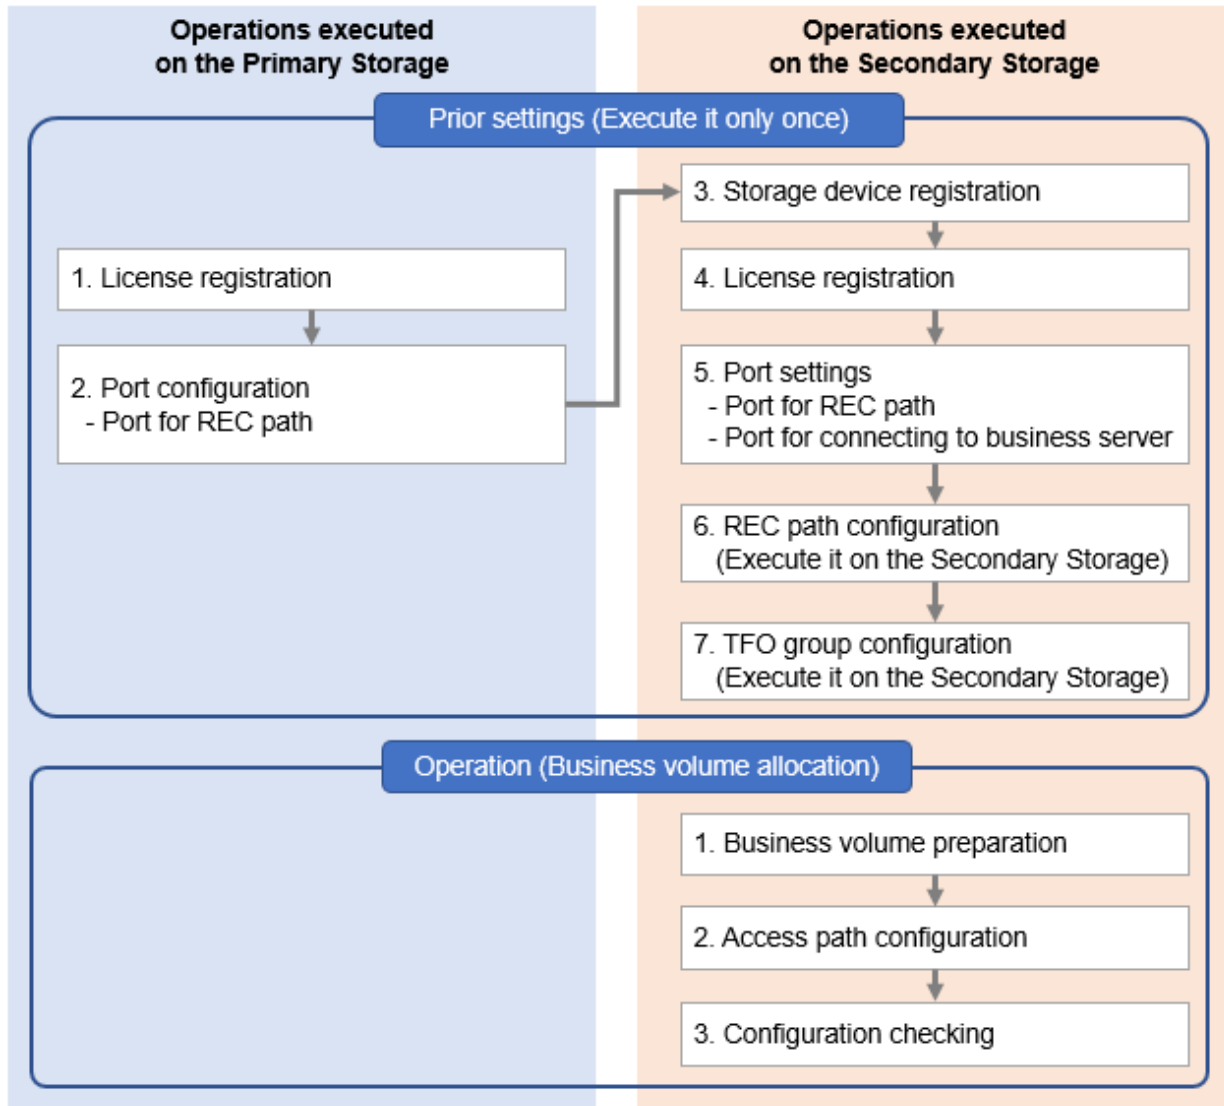


Figure 9.20 Work Flow when iSCSI Ports were used

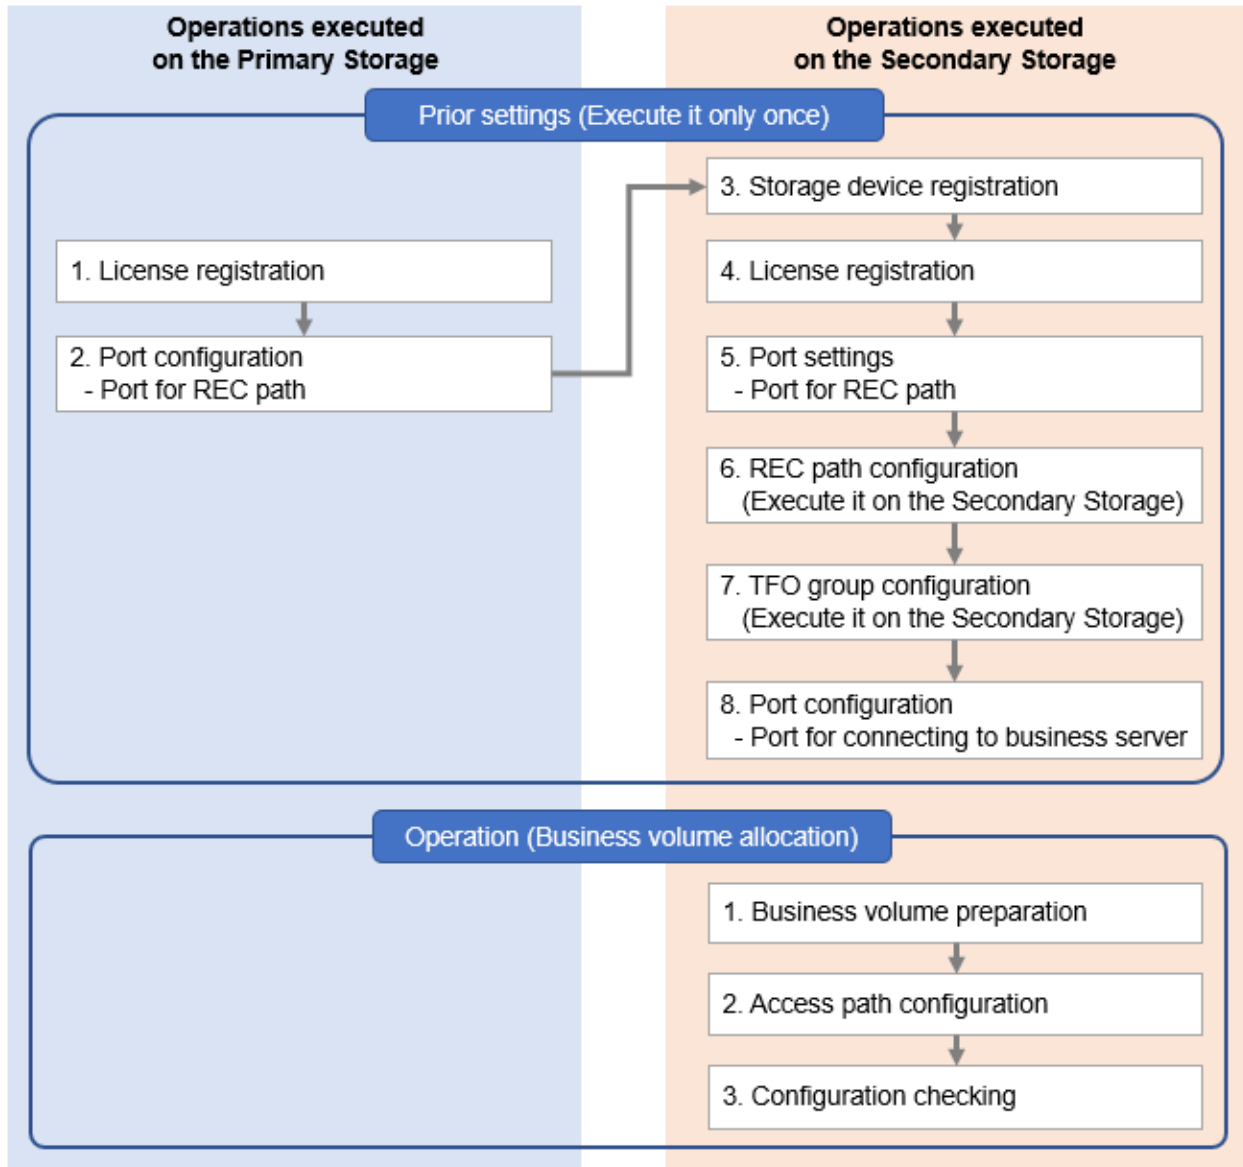

When adding volumes

Figure 9.21 Work Flow

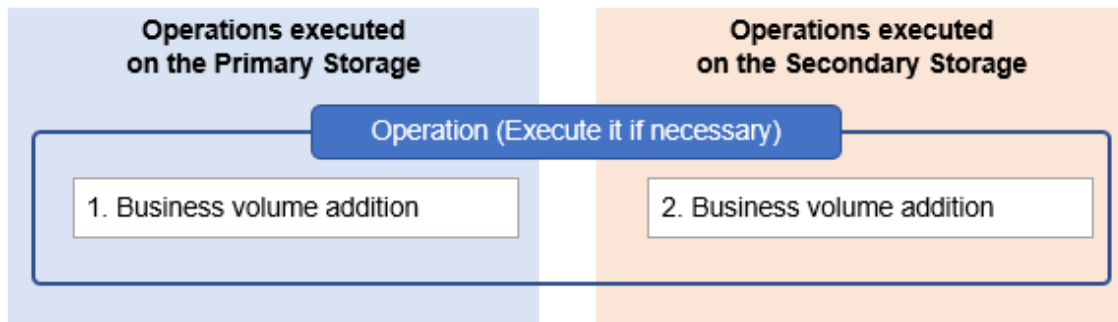

9.3 Operation Method in Active-Active Configuration

This section describes how to use the Storage Cluster function in the Active-Active configuration.

9.3.1 Installation

Preconfigure in the following steps to use the Storage Cluster function:

1. [Registering ETERNUS Disk Storage Systems and License](#)
2. [Registering and Configuring Server and FC Switch](#)
3. [Configuring Storage Cluster Structure](#)
4. [Expanding Total Capacity of TFOVs](#)

Registering ETERNUS Disk Storage Systems and License

1. Register ETERNUS Disk storage system

Register all the ETERNUS Disk storage systems that use the Storage Cluster function.



See

.....
Refer to "Register ETERNUS Disk Storage System" in the *Web Console Guide* for the procedure to register ETERNUS Disk storage systems.
.....

2. Register license

Register Storage Cluster Option License to the ETERNUS Disk storage systems registered in the above Step 1. This license must be registered to all the ETERNUS Disk storage systems that use the Storage Cluster function.



Information

.....
To register Storage Cluster Option License, the following licenses must be registered:

- ETERNUS SF Storage Cruiser Standard Edition License
 - ETERNUS SF AdvancedCopy Manager Remote Copy License
-



See

.....
Refer to "Register License" in the *Web Console Guide* for the procedure to register licenses.
.....

Registering and Configuring Server and FC Switch

1. Register FC switch

Register all the FC switches that use the Storage Cluster function to devices.



See

.....
Refer to "Register FC Switch" in the *Web Console Guide* for the procedure to register FC switches.
.....

2. Configure Storage Cluster Controller

When operating a TFO group with the Active-Active configuration, Storage Cluster Controller must be configured.

Log in not to Web Console but to the server to configure the Storage Cluster Controller and check its settings.



See

.....
Refer to "[9.6 Storage Cluster Controller](#)" for the procedure to configure the Storage Cluster Controller.
.....

3. Register business server

Register all the business servers used for the Storage Cluster function.




Refer to "Register Server" in the *Web Console Guide* for the procedure to register business servers.

Configuring Storage Cluster Structure

Configure the structure of ETERNUS Disk storage systems required for the Storage Cluster function. The structure example is shown in "Figure 9.22 Structure Example of Storage Cluster".

Figure 9.22 Structure Example of Storage Cluster

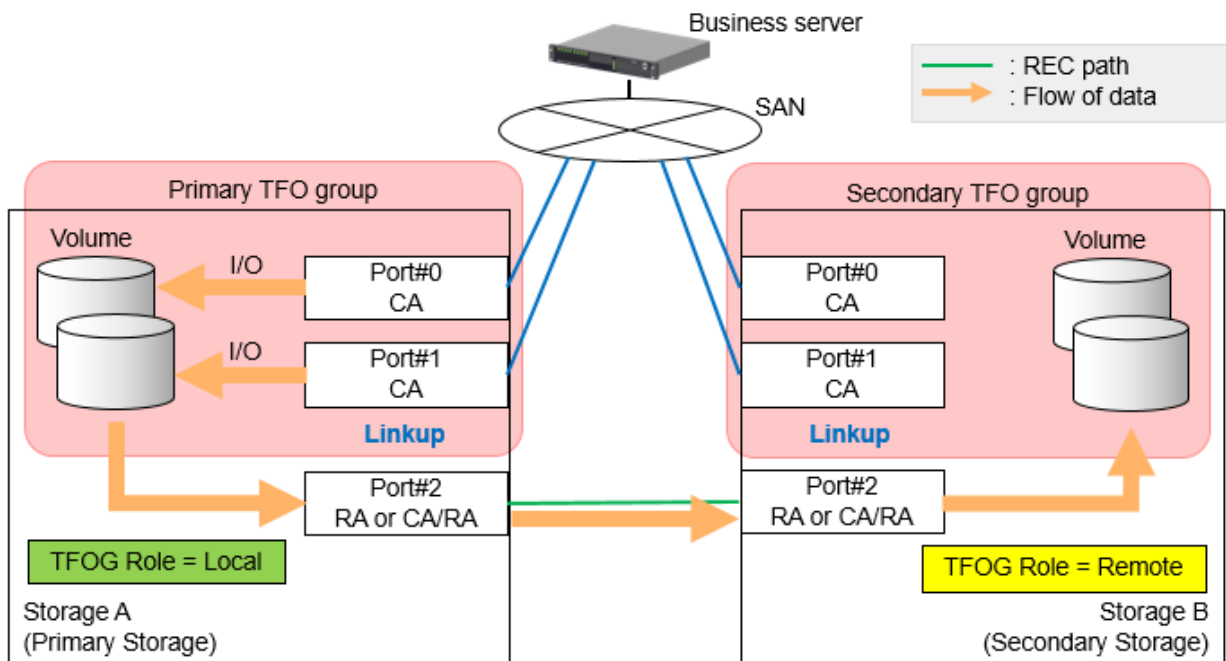

The setting procedure for the Active-Active configuration is as follows:

1. [Configuring Port](#) (port for REC path)
2. [Configuring Port](#) (port for connecting to business server)
3. [Configuring REC Path](#)
4. [Configuring TFO Group](#)

The setting method for each procedure is as follows.

Configuring Port

The Storage Cluster function uses the ports on ETERNUS Disk storage systems for the following two purposes:

- [Port for REC Path](#)
- [Port for Connecting to Business Server](#)

Port for REC Path

The Storage Cluster function uses the synchronous transfer method to keep data equivalent between business volumes on the Primary Storage and the Secondary Storage. To configure REC Paths that become their copy pathways are required ports on Primary and Secondary ETERNUS Disk storage systems.

There are requirements for ports used to configure REC Paths in the Storage Cluster function as follows:

- When operating a TFO group with the Active-Active configuration, port interface type must be "FC".
- Port mode must be "RA" or "CA/RA".

As required, change the port mode for each ETERNUS Disk storage system.



See

Refer to "Change FC/iSCSI/SAS Port Settings" in the *Web Console Guide* for the procedure to change the port mode.

Port for Connecting to Business Server

The Storage Cluster function makes a pair of ports through which to access business servers between Primary and Secondary ETERNUS Disk storage systems.

There are requirements for ports through which to access business servers as follows:

- When operating a TFO group with the Active-Active configuration, port interface type must be "FC".
- Port mode must be "CA", however "CA/RA" is not supported.
- Port parameters specified for paired ports must be the same.
- When creating multipath connection, the same number of ports should be provided to Primary and Secondary ETERNUS Disk storage systems respectively so as to make a pair of all the associated ports. There should be two or more ports.

As required, change the port mode and port parameter for respective ETERNUS Disk storage systems.



See

Refer to "Change FC/iSCSI/SAS Port Settings" in the *Web Console Guide* for the procedure to change the port mode and port parameter.

Configuring REC Path

Use the ports configured in "[Port for REC Path](#)" to configure a REC Path between Primary and Secondary ETERNUS Disk storage systems. Once a REC Path is configured from either the Primary ETERNUS Disk storage system or the Secondary ETERNUS Disk storage system, it is set to both ETERNUS Disk storage systems. Use the following steps on Web Console to configure a REC Path:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster function.
4. On the Category pane, click **REC Path**.
Created REC Paths are displayed on the Main pane.
5. On the Action pane, click **Remote Copy Setting** under Wizard.
The Remote Advanced Copy Setting Wizard screen is displayed, and click **Next**.
The screen on which to select a remote partner is displayed.
6. Select an ETERNUS Disk storage system to be remote copy destination, and click **Next**.
The screen on which to set a copy table size is displayed.
7. Set copy parameters for both ETERNUS Disk storage systems as copy source and copy destination, and click **Next**.
The screen on which to configure REC Paths is displayed.

8. Select Remote copy path and Connectivity type between ETERNUS Disk storage systems and click **Next**.
The screen on which to configure REC buffer is displayed.
9. Since REC buffer is not needed to use the Storage Cluster function, click **Next**.
The Setting Confirmation screen is displayed.
10. If the information is correct, click **Close**.

Note

The settings of REC Path line speed and compression ratio are valid only when one or more REC Paths are added. If only existing REC Paths are deleted, specified line speed and compression ratio are not set.

Configuring TFO Group

Use the [ports for connecting to the business server](#) to configure TFO groups between Primary and Secondary ETERNUS Disk storage systems. Once TFO groups are configured from either the Primary ETERNUS Disk storage system or the Secondary ETERNUS Disk storage system, they are configured on both ETERNUS Disk storage systems.

Note

- When operating a TFO group with the Active-Active configuration, confirm that the TFO mode can be set for both devices of the Primary Storage and Secondary Storage. Only "Auto" can be used for the [Failover mode](#).
- If a number of TFO groups are created in a pair of ETERNUS Disk storage systems, one pair of CA ports cannot be specified for multiple TFO groups.
- In multipath connection, a number of access paths (Host Affinity) may be configured for a certain LUN/Affinity group. When specifying the ports included in such access paths (Host Affinity) for a CA port pair in a TFO group, select all the ports associated with the target LUN/Affinity group at the same time.
- Configure access paths (Host Affinity) for CA ports on the Secondary Storage after having configured TFO groups. If access paths (Host Affinity) are configured for CA ports on the Secondary Storage before configuring TFO groups, at that point the volumes in the Secondary Storage are recognized by business server, possibly causing a trouble. For this reason, on the port pair selection screen, a CA port on the Secondary Storage on which the access path (host affinity) has been set cannot be selected.
- CA ports set with host affinity for Veeam Storage Integration on the storage device side cannot be set in TFO groups.
- When adding a CA port for the TFO group, it is necessary for the Primary Storage TFOG Role to be "Local" and the Secondary Storage TFOG Role to be "Remote".

Use the following steps on Web Console to configure TFO groups:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Action pane, click **Set** under **TFO Group**.
The TFO Group Configuration Wizard screen is displayed.
5. The Selection screen for ETERNUS Disk storage systems and options is displayed.
 - When creating a new TFO group:
Select a remote ETERNUS Disk storage system and specify which ETERNUS Disk storage system to be the Primary Storage.

- When changing an existing TFO group:
Specified Primary and Secondary Storages and TFO mode of the TFO group cannot be changed.

As the initial value of the Failover mode, "Auto" has been selected. Select "Manual" when you do the failover by manual operation.

As the initial value of the Failback mode, "Manual" has been selected. Select "Auto" when you do the failback by automatic operation.

As the initial value of the TFO mode, "Active-Standby" has been selected. Select "Active-Active" when you operate with the Active-Active configuration.

On completion of input, click **Next**.

The TFO Group Configuration screen is displayed.

6. Select from a list of ports for the Primary Storage and the Secondary Storage, one port for each storage to be paired and click **Add**. When deleting, select an unnecessary pair from the Port Pair List table to click **Delete**.
7. On completion of required configuration, click **Next**.
The Setting Confirmation screen is displayed.
8. If the information is correct, click **Set**.

Expanding Total Capacity of TFOVs

The total capacity of TFOVs can be set. The total capacity of TFOVs is the total capacity per storage device of volumes that are used by the Storage Cluster function. Expand the total capacity of TFOVs according to a total capacity of business volumes.

Expand the capacity of the Primary Storage and the Secondary Storage as required.
The procedure to set the total capacity of TFOVs with Web Console is as follows:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items of the Category pane change into the items concerning Storage Cluster.
4. On the Category pane, click **Setting**.
The total capacity of TFOVs that is set currently is displayed on the Main pane.
5. On the Action pane, click **Modify** on **Setting**.
The **Storage Cluster Settings** screen is displayed.
6. Select the capacity to be set in the **Maximum TFOV Total Capacity** field.
7. Click **Setting**.

9.3.2 Operation

9.3.2.1 Allocating Business Volume

To start or change the operation of the Storage Cluster function, perform the following steps.

- When performing the procedure from a new volume creation for both the Primary Storage and the Secondary Storage
 1. [9.3.2.1.1 Preparing Business Volume](#)
 2. [9.3.2.1.2 Configuring Access Path \(when performing the procedure from a new volume creation with the Primary/Secondary Storage\)](#)
 3. [9.3.2.1.4 Confirming Configuration](#)


Point

Steps 1 and 2 can easily be performed through Web Console.

- When performing procedures other than those listed above
 1. 9.3.2.1.1 Preparing Business Volume
 2. 9.3.2.1.3 Configuring Access Path (when allocating volumes to each Storage or when adding the Secondary Storage where only the Primary Storage is used)
 3. 9.3.2.1.4 Confirming Configuration

The example of structure regarding allocation of business volumes is shown in "Figure 9.23 Storage Cluster Function: Structure Example of Allocating Business Volume".

Figure 9.23 Storage Cluster Function: Structure Example of Allocating Business Volume

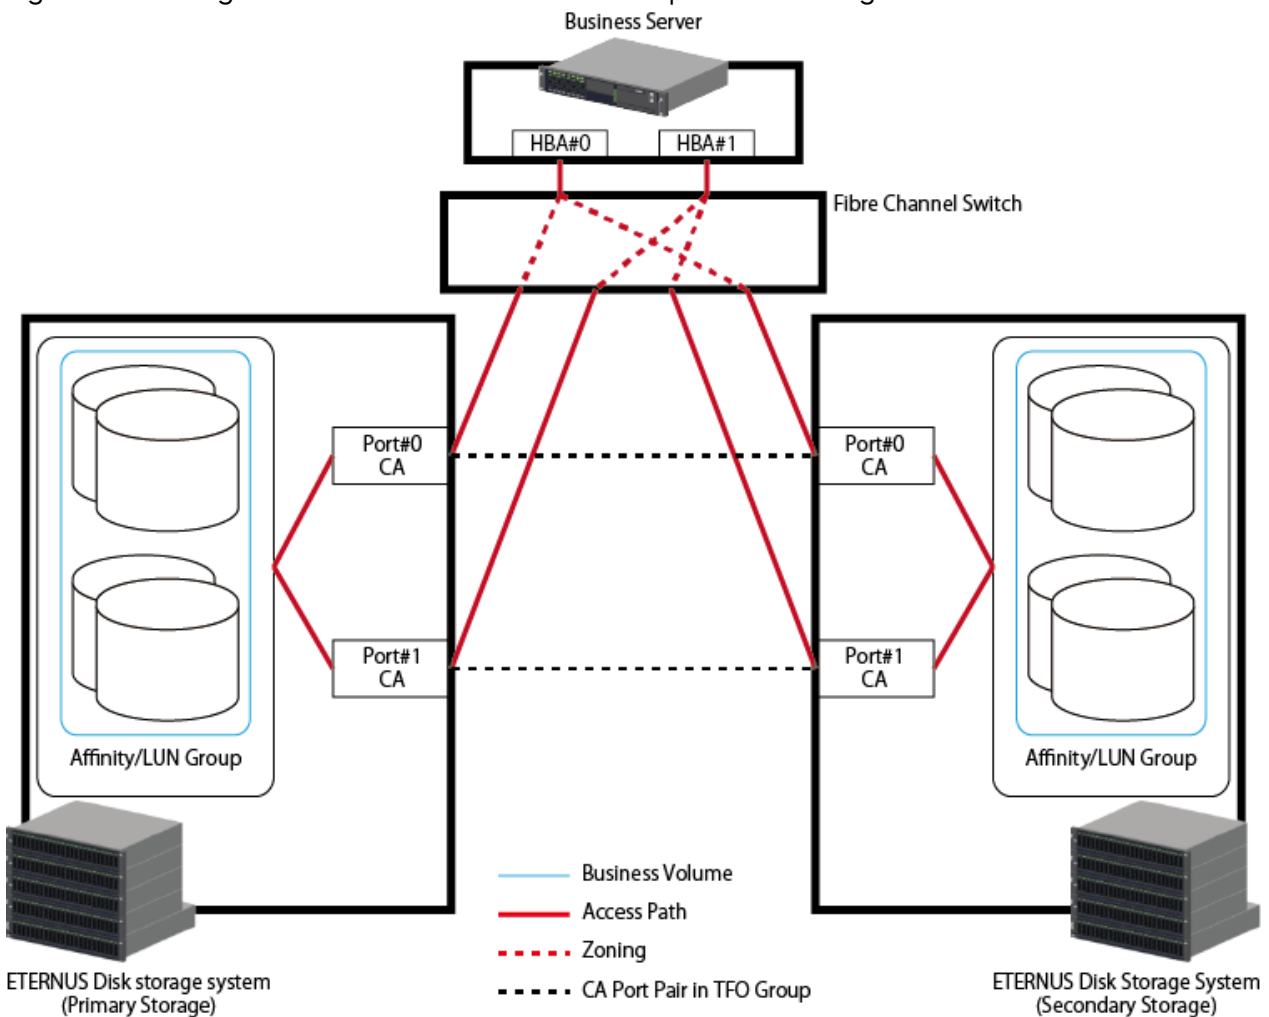

9.3.2.1.1 Preparing Business Volume

Prepare volumes to be switched in the Storage Cluster function on Primary and Secondary ETERNUS Disk storage systems respectively. The volumes to be switched by Storage Cluster must meet all of the conditions described in "Required Conditions for TFOV".

Point

- If the type of volume using Storage Cluster is "Standard", "TPV", or "FTV", the volume capacity can be expanded. Refer to "[9.3.2.5 Expanding Business Volume Capacity](#)" for information on how to expand the volume capacity. If the volume type is "WSV", the volume capacity cannot be expanded.
 - If the total capacity of business volumes exceeds the total capacity of TFOVs per storage device, expand the total capacity of TFOVs. Refer to "[Expanding Total Capacity of TFOVs](#)" for the procedure to expand the total capacity of TFOVs.
-

If there is no space in RAID group, Thin Provisioning pool or Tier pool, refer to "Operations for RAID Group", "Operations for Thin Provisioning" or "Operations for Automated Storage Tiering" in the *Web Console Guide* to secure areas.

When starting from a new volume creation for both the Primary Storage and the Secondary Storage, a volume that satisfies the conditions described in "[Required Conditions for TFOV](#)" can be created easily with Web Console.

The operation procedure using Web Console is shown below.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system that is specified as the Primary Storage.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. Create a volume.
 - When creating a volume with a volume type of "Standard" or "TPV"
 - a. On the Action pane, click **Create Volume** under **Allocating Business Volume**.
 - b. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function.
On the left side of the screen, the information input screen of the volume to be created in the Primary Storage is displayed.
On the right side of the screen, the information input screen of the volume to be created in the Secondary Storage is displayed.
 - c. Enter the required information for the Primary Storage portion on the left side of the screen.
 - d. Make sure that the **Create the same Volume as the Primary Storage** checkbox in the Secondary Storage portion on the right side of the screen is checked.

Point

If the **Create the same Volume as the Primary Storage** checkbox is checked, the following items can be omitted since they will have the same setting value as the Primary Storage.

- Name
- Capacity
- Type
- Encryption
- Deduplication
- Compression
- Deduplication/Compression
- Allocation

Note that a value must be entered for "Number of Volumes" regardless of the checkbox selection state.

- e. Enter the required information for the Secondary Storage portion on the right side of the screen.
- f. Click **Next**.
The information confirmation screen is displayed.

- g. Confirm the information, and then click **Create**.
- When creating a volume with a volume type of "FTV"
 - a. On the Action pane, click **Create FTV** under **Allocating Business Volume**.
 - b. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function. On the left side of the screen, the information input screen of the volume to be created in the Primary Storage is displayed. On the right side of the screen, the information input screen of the volume to be created in the Secondary Storage is displayed.
 - c. Enter the required information for the Primary Storage portion on the left side of the screen.
 - d. Make sure that the **Create the same Volume as the Primary Storage** checkbox in the Secondary Storage portion on the right side of the screen is checked.

 **Point**

.....

If the **Create the same Volume as the Primary Storage** checkbox is checked, the following items can be omitted since they will have the same setting value as the Primary Storage.

- FTV Name
- Total Capacity
- Number of Volumes
- Allocation
- Caution Threshold of FTV
- Automated QoS Enable/Disable
- Automated QoS:Priority
- Target Response Time

Note that a value must be entered for the following items regardless of the checkbox selection state.

- Tier Pool Name
 - Priority FTSP
 - Low Quota Share
 - Middle Quota Share
 - High Quota Share
 - Tune by Quota Share
-

- e. Enter the required information for the Secondary Storage portion on the right side of the screen.
- f. Click **Next**.
The information confirmation screen is displayed.
- g. Confirm the information, and then click **Create**.

For the information how to create a new volume in cases other than those listed above, refer to "Create Volume" or "Create FTV" in the *Web Console Guide* to create a new volume.

When using the volumes already allocated to servers for the Storage Cluster function, create volumes in an ETERNUS Disk storage system as the Secondary Storage so that the conditions described in "[Required Conditions for TFOV](#)" are satisfied.

In addition, if Advanced Copy is in operation, stop it.

 **See**

.....

To stop Advanced Copy, refer to either of the following sites in accordance with the function in use:

- When the Copy Control Module function of AdvancedCopy Manager is in use:
Refer to "Operations Started from Storage Tab" in the *Web Console Guide*.

- When the backup operation or replication operation of AdvancedCopy Manager is in use:
Refer to "Operations Started from Server Tab" - "Operations for Advanced Copy" in the *Web Console Guide*.
-

When the operations up to this point are completed, proceed to the following sections:

- When performing the procedure from a new volume creation for both the Primary Storage and the Secondary Storage
["9.3.2.1.2 Configuring Access Path \(when performing the procedure from a new volume creation with the Primary/Secondary Storage\)"](#)
- When performing procedures other than those listed above
["9.3.2.1.3 Configuring Access Path \(when allocating volumes to each Storage or when adding the Secondary Storage where only the Primary Storage is used\)"](#)

9.3.2.1.2 Configuring Access Path (when performing the procedure from a new volume creation with the Primary/Secondary Storage)

Connect the volumes to be switched by Storage Cluster function to servers.

The following three operations described in this section are required to configure access paths:

- [Adding a host](#)
- [Creating an Affinity / LUN group](#)
- [Configuring Host Affinity](#) (Associate server HBA, port on disk storage system, and Affinity/LUN group)

Point


- The host affinity which Affinity/LUN groups that have 513 or more volumes is associated can be set in a BS2000 environment.

- About selection of server HBA and port on ETERNUS Disk storage system

Associate the two ports specified as a pair in TFO groups with the same HBA.


For example, if HBA and ports are selected as shown in "Figure 9.24 Storage Cluster Function: Example of Correct Access Path Configuration", the Storage Cluster function is available.

Figure 9.24 Storage Cluster Function: Example of Correct Access Path Configuration

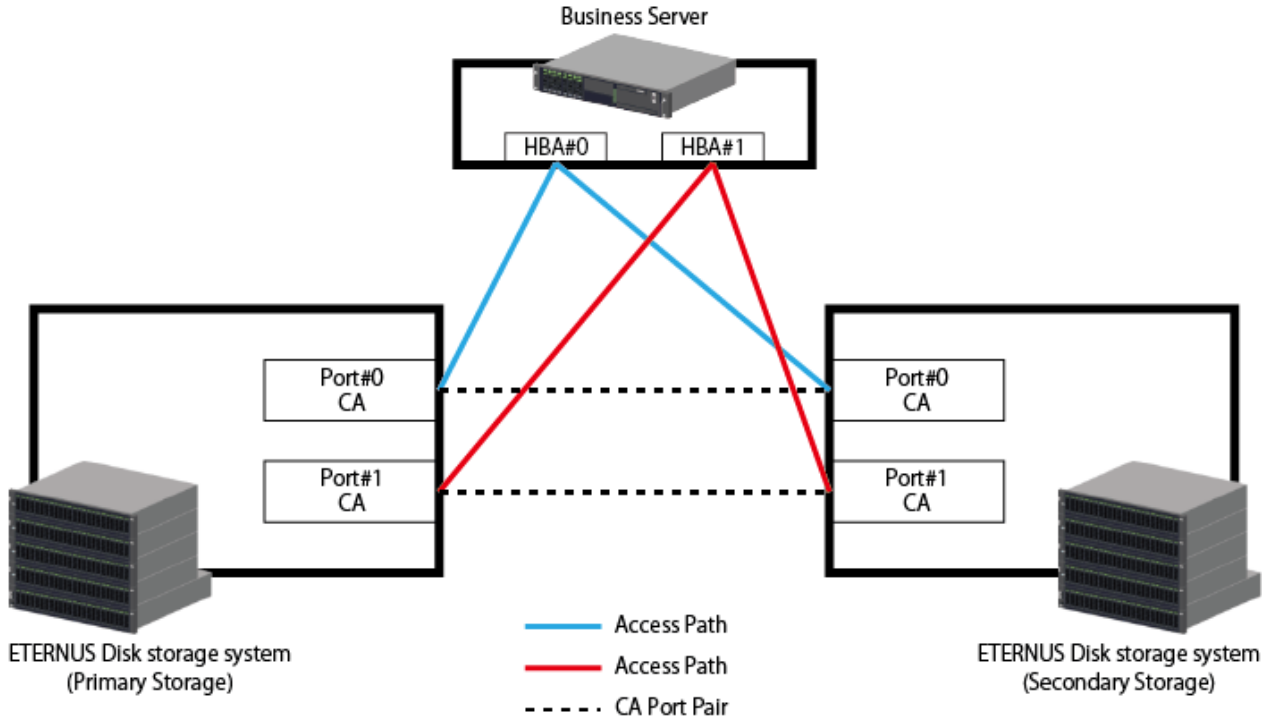

If HBA and ports are selected as shown in "Figure 9.25 Storage Cluster Function: Example of Incorrect Access Path Configuration", the Storage Cluster function is not available.

Figure 9.25 Storage Cluster Function: Example of Incorrect Access Path Configuration

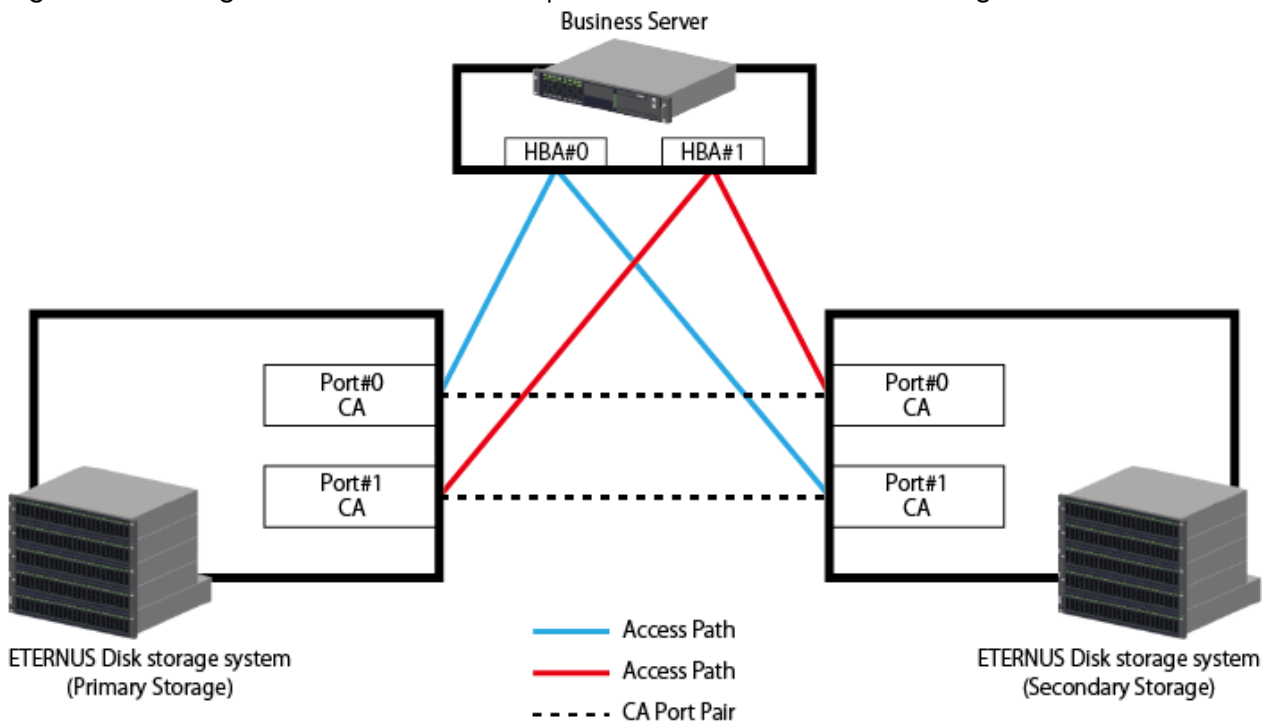

Adding a host

The procedure for adding a host in Web Console is shown below.

Point

- By following this procedure, the Primary Storage port and Secondary Storage port that are specified for the port pair can be associated to the same HBA without being aware of the WWPN.
- The hosts that are connected to the storage device and automatically detected are shown on the host list screen during this procedure. To automatically detect the target hosts to add, the zoning setting must be performed on the FC switch in advance, and the storage device must be able to communicate with the target hosts to add. For the setting procedure of the FC switch zoning, refer to the description when specifying the IP address of the Fibre Channel switch for the `-ipaddr` option of the `storageadm zone` command.
Do not omit the `-ipaddr` option when specifying the `storageadm zone` command. Also, do not specify the IP address of the storage device for the `-ipaddr` option. If the `-ipaddr` option is omitted or if the IP address of the storage device is specified for the `-ipaddr` option, host affinity is created with the automatically created FC host name and the FC host cannot be added using this procedure. If this occurs, delete the created host affinity settings and FC host names, and then perform this procedure.
- For operations with the Active-Active configuration, you can set the order of the storage device to be accessed from the FC host as described in "9.1.4 Access Control According to the Preferred Path". For storage devices in which "Yes" is selected in the **Preferred Path** column, access from the host is prioritized.

Note

If an error occurs with the host add operation, perform the following actions according to the host list content of the Primary/Secondary Storage.

- When the added host is registered to the host list of both the Primary Storage and Secondary Storage
After performing the following Affinity/LUN groups creation and the host affinity setting, check the preferred path setting in the Preferred Path Setting List screen.
Change the preferred path setting in the Modify Preferred Path screen if necessary.
- When the added host is registered to either the Primary Storage or Secondary Storage
Delete that host and perform the procedure to add the host again. Refer to "Delete FC/iSCSI/SAS Host" in the *ETERNUS SF Web Console Guide* for the procedure to delete hosts.
- When the added host is not registered to both the Primary Storage and Secondary Storage
Perform the procedure to add the host again.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system that is specified as the Primary Storage.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. Add a host.
Note that only FC hosts can be added.
 - a. On the Action pane, click **Add FC Host** under **Allocating Business Volume**.
The information input screen is displayed.
 - b. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function.
From the **Port** drop-down list on the left side of the screen, a Primary side port in the TFO group can be selected.

- c. From the **Port** drop-down list, select a Primary side port that is assigned to the host.
The two ports (Primary Storage port and Secondary Storage port) that are specified for the pair in the TFO group are displayed.
- d. In the host list, only the hosts that are connected to the Primary Storage port are displayed. Check the WWPN and select the host that is assigned to the port.
- e. Enter the necessary information, and then click **Next**.
- f. Confirm the information, and then click **Add**.

Creating an Affinity / LUN group

The procedure for creating an Affinity/LUN Group in Web Console is shown below.

Point

By following this procedure, the required conditions for the Storage Cluster switchover volume of the Primary/Secondary Storage in the Affinity/LUN Group can be satisfied. For the required conditions, refer to "[Required Conditions for TFOV](#)".

Note

When setting the Primary/Secondary Storage LUN mapping, set the same number for the host LUN. Of the volumes for which host affinity is set for the two ports of CA port pair, volumes for which host LUN No.(HLU) and volume capacity match are the target for synchronization.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system that is specified as the Primary Storage.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Action pane, click **Create Affinity /LUN Group** under **Allocating Business Volume**.
The information input screen is displayed.
5. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function.
On the left side of the screen, the information input screen for the Affinity/LUN Group that is created in the Primary Storage specified for the selected TFO group is displayed.
On the right side of the screen, the information input screen for the Affinity/LUN Group that is created in the Secondary Storage specified for the selected TFO group is displayed.
6. Input the Affinity/LUN group name in the **Name** field.
7. Input the host LUN starting number in the **Start Host LUN Number** field.
8. Select the volume assigned to the Affinity/LUN Group and click **Add**.
In the assigned volume list, make sure the selected volume is displayed.
9. Make sure that the **Create the same Affinity/LUN Group as the Primary Storage** checkbox in the Secondary Storage portion on the right side of the screen is checked.
10. Click **Next**.
The information confirmation screen is displayed.
11. Confirm the information, and then click **Create**.

Configuring Host Affinity

The procedure for setting the host affinity in Web Console is shown below.

Point

By following this procedure, the host affinity between each port of the selected port pair and the selected host can be set.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system that is specified as the Primary Storage.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Action pane, click **Create Host Affinity** under **Allocating Business Volume**.
The information input screen is displayed.
5. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function.
On the left side of the screen, the information input screen for the host affinity that is created in the Primary Storage specified for the selected TFO group is displayed.
On the right side of the screen, the information input screen for the host affinity that is created in the Secondary Storage specified for the selected TFO group is displayed.
6. For the Primary Storage and the Secondary Storage, select a host to be set in the host affinity.
7. Select a TFO group port pair to be set in the host affinity.
8. For the Primary Storage and the Secondary Storage, select an Affinity/LUN Group to be set in the host affinity from the **Affinity/LUN Group** drop-down list.
9. Click **Create**.

When the operations up to this point are completed, proceed to "[9.3.2.1.4 Confirming Configuration](#)".

9.3.2.1.3 Configuring Access Path (when allocating volumes to each Storage or when adding the Secondary Storage where only the Primary Storage is used)

When starting from a new volume creation for both the Primary Storage and the Secondary Storage, refer to "[9.3.2.1.2 Configuring Access Path \(when performing the procedure from a new volume creation with the Primary/Secondary Storage\)](#)" for information on how to configure the access path.

When performing procedures other than those listed above, connect the volumes to be switched with the Storage Cluster function to the servers by performing the operations in this section on the Primary and Secondary ETERNUS Disk storage systems. However, if the configuration is already completed for the Primary Storage, perform the operations only for the Secondary Storage.

The following operations are required to configure access paths in the Storage Cluster structure:

- Creating Affinity / LUN group
- Configuring Host Affinity (Associate server HBA, port on disk storage system, and Affinity/LUN group)
- Configuring FC switch zoning (for FC connection environment only)
- Configuring TFO port pair

It is recommended to use the volume allocation function to configure access paths that can perform the above operations all at one time and configure multiple access paths between a certain server and a certain ETERNUS Disk storage system at the same time.

If you configure access paths to the Primary Storage and the Secondary Storage with Web Console or the [storageadm zone](#) command, after the access path setting for the Secondary Storage is executed, the TFO port pair is configured and a volume synchronization with the Storage Cluster function is started.

Note

- With the volume allocation function, multiple access paths cannot be set to the same ETERNUS Disk storage system from one HBA. When setting multiple access paths, add the access paths one by one using the procedure for adding access paths.
- When setting the Preferred Path, set it after setting the access paths and performing the work in "9.3.2.1.4 [Confirming Configuration](#)". Refer to "9.3.2.2 [Setting/Changing the Preferred Path](#)" for the Preferred Path setting procedure.

Point

The host affinity which Affinity/LUN groups that have 513 or more volumes is associated can be set in a BS2000 environment.

See

- Refer to "Assign ETERNUS Disk Storage System Volumes to Server" in the *Web Console Guide* for the procedure for allocating volumes.
- Refer to "Add Access Path to ETERNUS Disk Storage System" in the *Web Console Guide* for the procedure for adding access paths.

Configure access path in the following steps:

- About selection of server HBA and port on ETERNUS Disk storage system
Associate the two ports specified as a pair in TFO groups with the same HBA.
For example, if HBA and ports are selected as shown in "[Figure 9.24 Storage Cluster Function: Example of Correct Access Path Configuration](#)", the Storage Cluster function is available.
If HBA and ports are selected as shown in "[Figure 9.25 Storage Cluster Function: Example of Incorrect Access Path Configuration](#)", the Storage Cluster function is not available.
- About creation of Affinity/LUN group
The volumes enabled with the Storage Cluster function must be defined to Affinity/LUN group based on the following rules:
 - The Primary/Secondary Storage hosts LUN No.(HLU) are the same.
 - The volume capacities for the Primary/Secondary Storage are the same.
 - The volume type is either "Standard", "WSV", "TPV" or "FTV". And the volume type for corresponding volumes on the Primary Storage and the Secondary Storage is the same.
- About the host affinity setting when Veeam Storage Integration is used
For the LUN group that is to be the target of the Storage Cluster function, use a LUN group that has a hyphen (-) as the value in the **Veeam Storage Integration** column.

Note

- If access path configuration does not meet the requirements, error occurs on the device side and the operation log is displayed. Refer to the *Messages* for corrective actions.

- When setting the Primary/Secondary Storage LUN mapping, set the same number for the host LUN. Of the volumes for which host affinity is set for the two ports of CA port pair, volumes for which host LUN No.(HLU) and volume capacity match are the target for synchronization.

When the operations up to this point are completed, proceed to "[9.3.2.1.4 Confirming Configuration](#)".

9.3.2.1.4 Confirming Configuration

Confirm that the Storage Cluster function is configured correctly.

- Confirm the access paths to the pair port in the TFO groups

Confirm that each of the two ports paired across the TFO groups (one port in the Primary Storage and the other in the Secondary Storage) has an access path to the same HBA in the business server.

- Confirm the target volumes for the Storage Cluster function

When access paths are configured to Primary and Secondary ETERNUS Disk storage systems, the volumes start to be synchronized by the Storage Cluster function.

Take the following steps with Web Console to check whether specified volumes are properly configured as volumes enabled with the Storage Cluster function:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Volume**.
Created volumes are displayed on the Main pane. If a string of "/TFOV" is included in the value displayed in the **Usage** column, the volume is properly configured as a volume enabled with the Storage Cluster function.
It takes a certain period of time for access paths to be configured and volumes to be synchronized so that failover is enabled. Check the progress rate of the synchronization processing from the TFO group details screen. To see whether synchronization is complete and failover is executable, continue to perform Step 4.
4. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
Check the value in the **Phase** column of the TFO group:
 - "Normal"
Volume synchronization within the TFO group is all complete, and it is in a state that Failover is made possible.
When using Automatic Failover, check that **Failover Mode** of TFO group is to be "Auto" and **Status** of TFO group is to be "Normal".
 - "Copying"
Volume has been synchronizing from the Primary Storage to the Secondary Storage. Wait until synchronization is completed.
 - In cases other than those listed above
Refer to "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)".

Point

When all the following requirements are met, the access state data between the Primary/Secondary Storage can be synchronized.

- It is configured that the synchronization of the volume by the Storage Cluster function can begin between FTV.
- Automated Storage Tiering control function on ETERNUS Disk storage system is used.

Refer to "Access Status Data Synchronization" in the *Storage Cruiser Operation Guide for Optimization Function* for the synchronization procedure of the access state data.

Note


- In host affinity groups under a pair of CA ports, the volumes that have the same HLU number and capacity can be a synchronized pair. Match those volumes with the same HLU number and capacity.
- To perform volume recognition with the business server after configuring the access paths, perform it after the initial copy is completed and the TFO group status of both the Primary Storage and Secondary Storage become "Active".
- In volume synchronization, an initial copy is done between paired volumes. The time required for initial copy is affected by line speed of transfer, quality, data compression ratio (depending on data contents), being greatly varied.

An indication of time required is as follows:

Table 9.9 Time Required for Initial Copy (Standard Value of 1 TB Physical Capacity Volume)

Requirements for Initial Copy	Time needed
FC-RA port and IP network: one line (1 Gbit/sec) connection, Typical throughput of FC switch: 114 MB/sec (=114,000,000 byte/sec) (data compression ratio 50%, no delay)	1.5 hrs
FC-RA port and IP network: one line (100 Mbit/sec) connection, Typical throughput of FC switch: 12 MB/sec (=12,000,000 byte/sec) (data compression ratio 50%, no delay)	13 hrs

Figure 9.26 Storage Cluster Function: Example of Synchronized Volumes

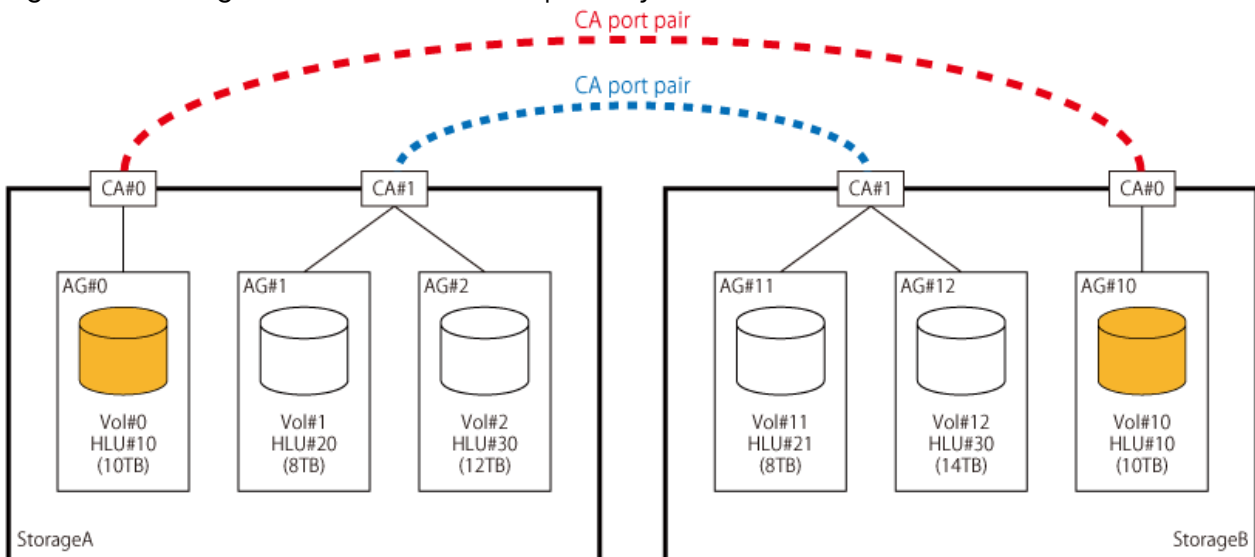

The above figure represents the following matters:

- A pair of Vol#0 of Storage A and Vol#10 of Storage B is the same in HLU number and size, so that they are synchronized (failover enabled) volumes.
- A pair of Vol#1 of Storage A and Vol#11 of Storage B is different in HLU number, so that they cannot be synchronized.
- A pair of Vol#2 of Storage A and Vol#12 of Storage B is different in size, so that they cannot be synchronized.

Trying to make a pair of CA ports correlated to the volumes that are the same in HLU number but different in size terminates the processing abnormally.

- Refer to "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)" for the status of TFO group.

9.3.2.2 Setting/Changing the Preferred Path

To set the Preferred Path or to change the Preferred Path that is set, perform the following procedure.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, click the Name of a target TFO group.
The TFO group details screen is displayed on the Main pane.
5. On the Action pane, click **Modify** under **Preferred Path Setting**.
The Modify Preferred Path screen is displayed.
6. Select the WWN of the path to be changed from the drop-down list.
7. Between local and remote, set the value in the **Preferred Path** column to "Yes" to prioritize access from the host.
8. Click **Next**.
The **Confirm** page is displayed.
9. Confirm the displayed information, if no problem then click **Modify**.

Point

- To set a Preferred Path, the host name of the Primary Storage must be the same as the host name of the Secondary Storage. If created with different host names, set the Preferred Path after recreating with the same host name.
- In an environment where only the Primary Storage is being operated, when adding the Secondary Storage, perform the Preferred Path setting after all the work in "[9.3.2.1 Allocating Business Volume](#)" is completed.

9.3.2.3 Updating TFO Group Status

The TFO group status is automatically updated.

Perform the following procedure when you need to update it to its most recent state right away.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Action pane, click **Update** under **TFO Group Status**.
A dialog box is displayed. Click **Done**.
When this operation is performed, the TFO status of the other device paired with the selected device is also updated.

Note

If communication is disabled between paired devices, the operation terminates abnormally with error status. Even in this case, the TFO status of the selected device is updated.

See

Refer to "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)" for details of the TFO group status and its meaning.

9.3.2.4 Adding and Deleting Business Volume

To change a volume enabled with the Storage Cluster function, delete that volume, add a new volume, or do both. Either of the following methods can be performed for the work.

- [Method for simultaneously performing the work for the Affinity/LUN Group in both devices of the Primary Storage and Secondary Storage](#)

This method can be performed for "[9.3.2.1 Allocating Business Volume](#)" if the affinity/LUN group is created following the procedure in "[9.3.2.1.2 Configuring Access Path \(when performing the procedure from a new volume creation with the Primary/Secondary Storage\)](#)".

- [Method for performing the work for each device of the Primary Storage and Secondary Storage](#)

The following describes the work procedure for each method.

Method for simultaneously performing the work for the Affinity/LUN Group in both devices of the Primary Storage and Secondary Storage

1. Confirm that the volume is in a state in which an addition/deletion operation can be performed.

- When adding a volume

Confirm that the TFO group where the volume is to be added has the following state.

- Primary Storage side: The **Active/Standby** column is "Active" and the **TFOG Role** column is "Local".
- Secondary Storage side: The **Active/Standby** column is "Active" and the **TFOG Role** column is "Remote".

- When deleting a volume

To continue using a volume that is not enabled with the Storage Cluster function and without using the Storage Cluster function, make sure all the following conditions are satisfied.

- The TFO group phase is "Normal".
- In the session information of the TFO pair related to the volume, the session status is "Active" and the session phase is "Equivalent".



See

For details of the TFO group status, refer to "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)" and for details of the TFO pair session information, refer to "[9.3.2.11 Confirming the Status on the TFO Group Details Screen](#)".

2. Change Affinity/LUN groups.



Note

In the procedure described here, for both devices of the Primary Storage and Secondary Storage, an affinity/LUN group that satisfies all the conditions of "[\[Required Conditions for Affinity/LUN Groups\]](#)" can be selected/set.

[Required Conditions for Affinity/LUN Groups]

- Corresponding volumes between the Primary Storage and the Secondary Storage have the same host LUN No. (HLU).
- Corresponding volumes between the Primary Storage and the Secondary Storage have the same volume capacity.
- Corresponding volumes between the Primary Storage and the Secondary Storage have the same volume type.

Note that for either of the following, all the requirements described in "[\[Required Conditions for Affinity/LUN Groups\]](#)" are satisfied, so the procedure here can be performed.

- In "9.3.2.1 Allocating Business Volume", when the Affinity/LUN group is created following the procedure in "9.3.2.1.2 Configuring Access Path (when performing the procedure from a new volume creation with the Primary/Secondary Storage)"
- In "9.3.2.1 Allocating Business Volume", when the Affinity/LUN group is created without following the procedure in "9.3.2.1.2 Configuring Access Path (when performing the procedure from a new volume creation with the Primary/Secondary Storage)", but an Affinity/LUN group with the same name is created in both the Primary Storage and Secondary Storage, and when a setting that satisfies all the requirements described in "[Required Conditions for Affinity/LUN Groups]" is performed and the following requirements are satisfied
 - When a business volume is added to an Affinity/LUN group, although a volume with the same name as the volume to be added to the Primary Storage side is created on the Secondary Storage side, the created volume is not assigned to the Affinity/LUN group on the Secondary Storage side
 - When a business volume is deleted from the Affinity/LUN group, the volume with the same name as the volume to be deleted on the Primary Storage side must be assigned to the Affinity/LUN group on the Secondary Storage side

If the requirements described in "[Required Conditions for Affinity/LUN Groups]" are not satisfied, the procedure here cannot be performed. Perform the procedure in "Method for performing the work for each device of the Primary Storage and Secondary Storage".

- a. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
- b. On the Main pane, click the Name of the ETERNUS Disk storage system to specify as the Primary Storage.
- c. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
- d. On the Main pane, select the TFO group whose setting is to be changed. And then, click **Modify Affinity/LUN Group** under **Allocating Business Volume** on the Action pane.
The information input screen is displayed.
- e. In the [Port] drop-down on the left side of the screen, the ports on the Primary Storage side that are paired in the selected TFO group are displayed. Select the port with the access path setting to the affinity/LUN group to be changed.
If the port is selected, the paired port of the Secondary Storage is displayed for the selected port.
- f. After a port is selected, a list of affinity/LUN groups with the access path setting to the selected port is displayed in the [Name] drop-down. Select the target affinity/LUN group to change in the Primary Storage and Secondary Storage.

Point

- If the affinity/LUN group name on the Primary Storage side is the same as the corresponding affinity/LUN group name on the Secondary Storage side

For the volume that has the same name as the volume selected on the Primary Storage side, volume selection is omitted on the Secondary Storage side and the volume with the same name on the Primary Storage side is automatically selected.

If the **Modify the same Affinity/LUN Group as that of the Primary Storage** checkbox is checked, the volume information that is selected on the Primary Storage is applied on the Secondary Storage side.

- For cases other than the above

The volumes in each affinity/LUN group of the Primary Storage and Secondary Storage must be selected.

- g. To add a volume to the affinity/LUN group, select the volume to assign and click **Add**. In the list of "Assigned Volumes", confirm that the selected volume is displayed.

To delete a volume from the affinity/LUN group, select the volume to delete from the list of "Assigned Volumes" and then click **Remove**.

Note

If a port or an Affinity/LUN group on the Primary Storage side is reselected while a volume is selected, the volume selection of the Primary Storage and Secondary Storage returns to the state before transitioning to this screen. If it returns to the that state, the procedure must be started over from the volume selection.

- h. Click **Next**.
The information confirmation screen is displayed.
 - i. Confirm the information, and then click **Modify**.
3. If a volume of the Secondary Storage that is not enabled with the Storage Cluster function is continued to be used without using the Storage Cluster function, use ETERNUS CLI to revert the information of that volume to the state prior to the data synchronization.
Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used.

Note

If this procedure is not performed, the volume information of the Secondary Storage may conflict with the volume information of the Primary Storage and data corruption may occur.

After changing a volume enabled with the Storage Cluster function, it takes a certain period of time for volumes to be synchronized and for failover to be enabled.

Refer to "[9.3.2.1.4 Confirming Configuration](#)" in "[9.3.2.1 Allocating Business Volume](#)" for the procedure to see if the volume synchronization is completed and failover can be executed.

Note

- There is an upper limit to the number of volumes that can be defined to one Affinity/LUN group. Refer to the manual for the ETERNUS Disk storage system in use for the upper limit.
- The format of a volume enabled with the Storage Cluster function is not supported.
- The following volumes cannot be added:
 - The volume type is "SDV" or "SDPV".
 - Volumes created with the LUN concatenation function
 - Volumes that are used for the Non-disruptive Storage Migration.
 - Volumes whose External LU Information is "Inherited".
 - Volumes in which the **Usage** column in the screen of Web Console is "Veeam"
 - Volumes for which Advanced Copy is running.

Method for performing the work for each device of the Primary Storage and Secondary Storage

1. Confirm that the volume is in a state in which an addition/deletion operation can be performed.
 - When adding a volume
Confirm that the TFO group where the volume is to be added has the following state.
 - Primary Storage side: The **Active/Standby** column is "Active".

- Secondary Storage side: The **Active/Standby** column is "Standby".

For the TFO group where the volume is to be added, confirm that the TFO status of the Primary Storage is "Active" and the TFO status of the Secondary Storage is "Standby".

- When deleting a volume

To continue using a volume that is not enabled with the Storage Cluster function and without using the Storage Cluster function, make sure all the following conditions are satisfied.

- The TFO group phase is "Normal".
- In the session information of the TFO pair related to the volume, the session status is "Active" and the session phase is "Equivalent".



See

For details of the TFO group status, refer to ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#) and for details of the TFO pair session information, refer to ["9.3.2.11 Confirming the Status on the TFO Group Details Screen"](#).

2. Change Affinity/LUN groups for Primary and Secondary ETERNUS Disk storage systems.

The procedure to see which Affinity/LUN group to change is as follows:

- Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
- On the Main pane, click the Name of a target ETERNUS Disk storage system.
- On the Category pane, click **Connectivity**.
The items on the Category pane switch to those associated with Connectivity.
- On the Category pane, click **Host Affinity**.
A list of host affinities is displayed on the Main pane.
Check in the **Port** column, host affinity including ports specified as pairs in TFO groups. The Affinity/LUN group configured to the host affinity must be changed.



See

Refer to "Change Affinity/LUN Group Settings" in the *Web Console Guide* for the procedure to change Affinity/LUN group.

3. If a volume of the Secondary Storage that is not enabled with the Storage Cluster function is continued to be used without using the Storage Cluster function, use ETERNUS CLI to revert the information of that volume to the state prior to the data synchronization.

Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used.



Note

If this procedure is not performed, the volume information of the Secondary Storage may conflict with the volume information of the Primary Storage and data corruption may occur.

After changing a volume enabled with the Storage Cluster function, it takes a certain period of time for volumes to be synchronized and for failover to be enabled.

Refer to ["9.3.2.1.4 Confirming Configuration"](#) in ["9.3.2.1 Allocating Business Volume"](#) for the procedure to see if the volume synchronization is completed and failover can be executed.

Note

- There is an upper limit to the number of volumes that can be defined to one Affinity/LUN group. Refer to the manual for the ETERNUS Disk storage system in use for the upper limit.
- The format of a volume enabled with the Storage Cluster function is not supported.
- The following volumes cannot be added:
 - The volume type is "SDV" or "SDPV".
 - Volumes created with the LUN concatenation function
 - Volumes that are used for the Non-disruptive Storage Migration.
 - Volumes whose External LU Information is "Inherited".
 - Volumes in which the **Usage** column in the screen of Web Console is "Veeam"
 - Volumes for which Advanced Copy is running.

9.3.2.5 Expanding Business Volume Capacity

To expand the capacity of volumes enabled with the Storage Cluster function, all the following conditions must be satisfied:

- The target volumes for the capacity expansion are in pairs.
- The session status of the TFO pair is "Active".

For details of the TFO pair session information, refer to "[9.3.2.11.2 Session Information of TFO Pairs](#)".

- In a TFO group, the TFOG Role of the Primary Storage is "Local" and the TFOG Role of the Secondary Storage is "Remote", or the TFOG Role of the Primary Storage is "Remote" and the TFOG Role of the Secondary Storage is "Local".

For details on the TFOG Role of a TFO group, refer to "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)".

Point

- If the session status of the TFO pair is not "Active", the following causes are possible:
 - Temporary session pending by a failover or a failback
 - REC path close
 - Occurrence of a RAID failure, a RAID close, or a bad sector

Check the status of the ETERNUS Disk storage system, and then perform the steps in "[9.5 Maintenance](#)" as required.

- Only one volume pair can be specified for a single capacity expansion operation.
- To provide against the unexpected, it is recommended that you expand the volume capacity after backing up the data of the target volumes.
- Note that when expanding the capacity, a synchronization between paired volumes is temporarily desynchronized until the capacity expansion is completed. Upon completion of the capacity expansion, a synchronization between the paired volumes is performed with the initial copy. Refer to "[Table 9.9 Time Required for Initial Copy \(Standard Value of 1 TB Physical Capacity Volume\)](#)" for the time required for an initial copy.
- After the capacities of the business volumes have been expanded, the initial copy is completed, and the TFO group status of the Primary Storage and Secondary Storage becomes "Active", you must recognize the expanded volume capacities to the business server.

Note

- In TFO group operations with the Active-Active configuration, because volumes concatenated by LUN concatenation are not supported, the capacity of business volumes whose volume type is "Standard" cannot be expanded with the LUN concatenation function.
- To expand the capacity of a business volume whose volume type is "TPV" or "FTV", all the following conditions must be satisfied:

- Current capacity is less than 128 TB.
- If the target volume is TPV, a Thin Provisioning Volume balancing is not running.
- If the target volume is FTV, a Tier pool balancing is not running.
- RAID migration is not running.
- The total capacity of all TPVs and all FTVs in the storage device does not exceed the maximum pool capacity of the storage device.

The total capacity of all TPVs and FTVs that can be created in a storage device depends on the maximum pool capacity of the storage device. Refer to the ETERNUS Disk storage system manuals for the maximum pool capacity that can be created.

- No Advanced Copy session exists in which "Totally" is specified for the copy range.

The following are the cases where "Totally" is specified for the copy range:

- LUN to LUN copy of AdvancedCopy Manager CCM
- Copy using ETERNUS SF AdvancedCopy Manager SRA
- Copy using ETERNUS VSS Hardware Provider
- SnapOPC+ that is set from ETERNUS Web GUI or ETERNUS CLI

If you perform a capacity expansion for the business volumes of either the Primary Storage or the Secondary Storage, the business volume capacity is expanded for both the Primary Storage and the Secondary Storage.

The procedure to expand the capacity of a business volume with Web Console is as follows:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, click the Name of a target TFO group.
The TFO group details screen is displayed on the Main pane.
5. On the Main pane, click the **Volume** tab.
The information for a pair of local volume and remote volume is displayed.
6. After checking the target volume checkbox to be expanded the capacity, click **Expand Capacity** under **TFOV** on the Action pane.
The **Expand TFOV** wizard screen is displayed.
7. Enter the expanded capacity in the **Post-Expansion Volume Capacity** field in the **Expand TFOV (TPV/FTV)** page.

Point

The maximum number of characters that can be entered in the item field is 15 including a decimal point. If you select "MB" (megabytes) as the unit, the digits after the decimal point are rounded off. If you select "GB" (gigabytes) or "TB" (terabytes) as the unit, the digits after the decimal point of a value converted to megabytes are rounded off.

For the capacity, enter a value between 25 MB and 128 TB.

8. After checking that the setting is correct, click **Expand**.

9.3.2.6 Changing Total Capacity of TFOVs

The total capacity of TFOVs can be changed. Refer to "[Expanding Total Capacity of TFOVs](#)" for the procedure to change the total capacity of TFOVs.

Point

If any paired TFO group exists, the total capacity of TFOVs cannot be reduced. If you reduce the total capacity of TFOVs, perform the following actions:

1. Perform the procedure in "[9.5.8 Releasing TFO Pair](#)" to release all TFO pairs.
2. Perform the procedure in "[9.3.2.4 Adding and Deleting Business Volume](#)" to delete unnecessary business volumes. Set the total capacity of all TFOVs to a value below the total capacity of TFOVs to be set in Step 3.
3. Change the total capacity of TFOVs.
4. If you continue to use Storage Cluster, perform the procedure in "[9.5.9 Recovering TFO Pair](#)" to recover all the TFO pairs that were released in Step 1.

9.3.2.7 Manual Failover/Failback

In the case that switchover is needed right now for switching test, failover can be done manually. When performing Failover manually, Normal mode and Forced mode can be selected. Refer to "[9.3.2.8 Force-Failover](#)" for Forced mode.

When setting automatic Failback with a TFO group setting, after the Primary Storage ETERNUS Disk storage system has recovered, failback is performed automatically after detecting that it has moved into a state where failback is possible. When it is recovered from RAID failure and you wish to switchover at an arbitrary time, it is possible to perform manual failback.

Point

When performing a manual failover/failback, make sure that the operation can be performed and the data integrity is consistent by checking the status of the TFO group to switch and the session information of the TFO pair.

For details of the TFO group status, refer to "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)" and for details of the TFO pair session information, refer to "[9.3.2.11 Confirming the Status on the TFO Group Details Screen](#)".

Note

- If a manual failover/failback is performed when the TFO group phase is not normal or when the session status of the TFO pair is not normal, the integrity of the data may become inconsistent.
- A failover/failback cannot be performed when the TFO group phase is "Maintenance". If an attempt is made, it results in an error.

The following is the procedure to perform a manual failover/failback. Failover/failback can be performed from either Primary/Secondary Storage.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.

3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. After confirming the status of the TFO group and the session information of the TFO pair, select a TFO group to enable failover or failback on the Main pane and click **Failover** or **Failback** on the Action pane.
A warning dialog box is displayed.
5. When enabling failover or failback, click **OK**.

 **Point**

- If the Primary ETERNUS Disk storage system is down or removed and communication is not enabled with that storage system, Manual Failover is not possible. Make sure that the Primary disk storage system is stopped to execute Force-Failover.
- While a restore process from Veeam Storage Integration is running, a failover cannot be performed manually. After confirming that the restore process is completed, perform the failover manually.

9.3.2.8 Force-Failover

Execute Force-Failover by performing the following procedure only when instructed by your maintenance engineer when the Primary ETERNUS Disk storage system is down or removed and becomes inaccessible from business servers:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
Select a Primary ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, select a TFO group for which you want to enable Force-Failover and click **Force-Failover** on the Action pane.
A warning dialog box is displayed.
5. When executing Force-Failover, click **OK**.

 **Note**

- If the ETERNUS Disk storage system as the Primary Storage is connected to business servers, do not execute this function.
- If a recovery can be performed with the procedure described in "9.5 Maintenance", do not execute this function.
- Even if this function is executed, a normal mode failover may be executed depending on the state of the ETERNUS Disk storage system.

9.3.2.9 Failover/Failback Limited to the Maintenance State

Follow the instructions of your maintenance engineer and perform a failover (Maintenance state only) or a failback (Maintenance state only) using the following procedure only if a manual failover/failback must be performed while the TFO group phase is "Maintenance".

 **Point**

The procedure in this section can be performed for either the Primary Storage or the Secondary Storage.

Note

The procedure in this section has a risk of causing data corruption. Because of that, make sure to carefully follow the instructions of your maintenance engineer.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, click the Name of a target TFO group for which you want to failover or failback.
Information of the selected TFO group is displayed on the Main pane.
5. On the Action pane, click **Advanced Operations**.
The **Failover(Maintenance state only)** and **Failback(Maintenance state only)** are displayed on the Action pane.
6. On the Action pane, click **Failover(Maintenance state only)** or **Failback(Maintenance state only)**.
A warning dialog box is displayed. Check the contents displayed on the warning dialog box.
7. When enabling failover or failback, click **OK**.

9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen

The meaning and action plan of each status for TFO groups that are displayed on the Storage Cluster overview screen are as follows.

Phase

This displays the status of TFO group. The phase varies with the configuration of TFO groups, operation of failover/failback and state of volume synchronization.

Status	Meaning and Action Plan
Initial	Indicates that TFO group is configured but no volume is allocated. Refer to " 9.3.1 Installation " and " 9.3.2 Operation " to continue configuration.
Maintenance	Indicates that copy sessions between TFO port pairs and volumes are forcibly cleared. Perform the following actions: <ul style="list-style-type: none">- When there is an abnormality in the TFO pair session Refer to "9.3.2.11.2 Session Information of TFO Pairs" and confirm whether there is an abnormality in the TFO pair session. When an abnormality occurs, take action according to the procedure that matches the applicable case described in "9.5 Maintenance". If there is no applicable case, perform the following operations.<ol style="list-style-type: none">1. To eliminate the abnormal state of the TFO pair session, perform the procedure in "9.5.8 Releasing TFO Pair" to release the TFO pair.2. If necessary, eliminate the cause of the abnormal state in the TFO pair session.3. Perform the procedure in "9.5.9 Recovering TFO Pair" to recover the TFO pair.- When there is a TFOV that is not set with a TFO pair within the TFO group Refer to "9.3.1 Installation" and "9.3.2 Operation" and review the setting status of the applicable TFOV.- When a restore process is executed from Veeam Storage Integration Wait until the restore process is completed. <p>A failover/failback cannot be performed when the TFO group phase is "Maintenance". If an attempt is made, it results in an error. Take action to recover from the "Maintenance" state. If</p>

Status	Meaning and Action Plan
	a failover/failback must be performed for maintenance while the TFO group phase is "Maintenance", contact your maintenance engineer in advance.
Copying	Indicates that volumes are being synchronized from the Primary Storage to the Secondary Storage. Wait until the synchronization process is completed.
Normal	Indicates that volume synchronization is completed and failover is ready to be done.
Failovered	Indicates the status immediately after failover is completed. Update after a while.
Copying Back	Indicates that after recovery of the Primary Storage, volumes are being synchronized from the Secondary Storage to the Primary Storage. Wait until the synchronization process is completed.
Failback Ready	Indicates that after recovery of the Primary Storage, the volume synchronization process is completed and failback is ready to be done.
Failbacked	Indicates the status immediately after failback is completed. Update after a while.
Failed	This state indicates that the ETERNUS Disk storage system is down or the REC route is disconnected. During the failover/failback sequence, if this phase is displayed, wait a while before updating.
Attention (*1)	There is a phase inconsistency for the Primary TFO group and the Secondary TFO group. After confirming the Phase column value from the TFO group details screen for both the Primary Storage and the Secondary Storage, follow each direction on this table.
Unknown (*2)	Trouble with network is causing status update to fail. A disk storage switched due to a failure becomes "Unknown" because status update is sure to fail. Refer to " 9.3.2.3 Updating TFO Group Status " to update the status of TFO group.

*1: This is only displayed on the Storage Cluster overview screen.

*2: For the "Unknown" status, because a common meaning is shown in all the columns, the meaning is omitted in the columns that follow.

Status

This displays whether TFO group status is normal or error.

Status	Meaning and Action Plan
Halt	Indicates that there is a fault in TFO group. Refer to " Halt Factor " in " 9.3.2.11.1 TFO Group Information " to take action.
Normal	Indicates that TFO group is in normal status. No action is required.
Disruption (*1)	There is a phase inconsistency for the Primary TFO group and the Secondary TFO group. After confirming the Status column value from the TFO group details screen for both the Primary Storage and the Secondary Storage, follow each direction on this table.

*1: This is only displayed on the Storage Cluster overview screen.

TFO Mode

This displays the operational configuration of the TFO group.

Status	Meaning
Active-Active	Indicates that the TFO group is operated with the Active-Active configuration.
Active-Standby	Indicates that the TFO group is operated with the Active-Standby configuration.

Active/Standby

This displays whether the storage device is connected to the server or not connected to the server.

Status	Meaning
Active	Indicates that the storage device is currently connected to a server.
Standby	Indicates that the storage device is not connected to a server.

TFOG Role

This displays the synchronization direction when TFOV data is synchronized between two TFO groups with the Active-Active configuration.

Status	Meaning
Local	Indicates the data copy source.
Remote	Indicates the data copy destination.

9.3.2.11 Confirming the Status on the TFO Group Details Screen

9.3.2.11.1 TFO Group Information

The meaning and action plan of each status for the TFO group details screen are as follows.

Active/Standby

The same statuses as the **Active/Standby** column of the Storage Cluster overview screen are displayed. Refer to "[Active/Standby](#)" in "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"

TFOG Role

The same statuses as the **TFOG Role** column of the Storage Cluster overview screen are displayed. Refer to "[TFOG Role](#)" in "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"

Phase

The same statuses as the **Phase** column of the Storage Cluster overview screen are displayed. Refer to "[Phase](#)" in "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"

Status

The same statuses as the **Status** column of the Storage Cluster overview screen are displayed. Refer to "[Status](#)" in "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"

TFO Mode

The same statuses as the **TFO Mode** column of the Storage Cluster overview screen are displayed. Refer to "[TFO Mode](#)" in "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"

Halt Factor

If there is any error in TFO group, its cause is displayed.

Status	Meaning and Action Plan
None	Indicates that TFO group is in normal status. No action is required.
TFO Group Disconnected	Indicates that the path to a destination device is blocked or the device is not started. Remove the factor of path blockage or start the destination device.
Version Mismatch	Indicates that a destination device does not support Storage Cluster function or the firmware version does not support Storage Cluster. If the firmware is not up-to-date, update the firmware.
TFO Group Setting Missing	TFO group settings of a destination device are not found. Refer to " 9.3.1 Installation " and " 9.3.2 Operation " to review the settings or reconfigure.
TFO Group Setting Mismatch	Indicates that data transfer of Storage Cluster is disabled at all the RA ports of the Secondary Storage or there are some inconsistencies in TFO group settings at a destination device. Take either of the following actions:

Status	Meaning and Action Plan
	<ul style="list-style-type: none"> - Review the port parameters for the Secondary Storage. - Refer to "9.3.1 Installation" and "9.3.2 Operation" to review the TFO group settings or reconfigure.
Monitoring Server Disconnected	<p>Indicates that the path to Storage Cluster Controller is blocked or Storage Cluster Controller is not started. This status is displayed only when Storage Cluster Controller is set up. Take either of the following actions:</p> <ul style="list-style-type: none"> - Review the communication path between Storage Cluster Controller and ETERNUS Disk storage system. - Refer to "9.6 Storage Cluster Controller" to review the settings or reconfigure.

Note

When any status other than those above is displayed, perform the following operations:

- After a while, perform "[9.3.2.3 Updating TFO Group Status](#)".
- Refer to "[9.3.1 Installation](#)" and "[9.3.2 Operation](#)" to review the settings or reconfigure.

If the problem is not solved, record the displayed status and contact Fujitsu Technical Support.

9.3.2.11.2 Session Information of TFO Pairs

The session information of the TFO pair is displayed in the **Volume** tab of the TFO group details screen. The meaning and action plan of each status are as follows.

Session status of volumes

Status	Meaning and Action Plan
Active	Volume synchronization is operating normally. No action is required.
Error Suspend	Volume synchronization is suspended due to an error. Refer to " 9.3.1 Installation " and " 9.3.2 Operation " to review the settings or reconfigure, or take action according to the procedure that matches the applicable case described in " 9.5 Maintenance ".
Suspend	<p>Volume synchronization is suspended. The Standby side storage may be down. Check the state of the Standby side storage and perform the following actions.</p> <ul style="list-style-type: none"> - When the Standby side storage is recoverable After recovering the storage, perform the following operations. <ol style="list-style-type: none"> 1. To eliminate the abnormal state of the TFO pair session, perform the procedure in "9.5.8 Releasing TFO Pair" to release the TFO pair. 2. Perform the procedure in "9.5.9 Recovering TFO Pair" to recover the TFO pair. - When a replacement of the Standby side storage is required Perform the procedure in "9.5.1 ETERNUS Disk Storage System Fault" to recover the Standby side storage.
Halt	Volume synchronization is in an abnormal state. Refer to " Halt Factor " in " 9.3.2.11.1 TFO Group Information " to take action.

Session phase of volumes

Status	Meaning and Action Plan
Copying	A volume is being synchronized from the Primary Storage to the Secondary Storage. Wait until the synchronization process is completed.

Status	Meaning and Action Plan
Equivalent	<ul style="list-style-type: none"> - When the session status of the volume is "Active" The synchronization process of the volume is completed and the equivalency maintenance state is continued. No action is required. - When the session status of the volume is not "Active" The integrity of the data may be inconsistent. Refer to "Meaning and Action Plan" for the displayed status and perform the corrective action.

9.4 Operation Method in Active-Standby Configuration

This section describes how to use the Storage Cluster function in the Active-Standby configuration.

9.4.1 Installation

Preconfigure in the following steps to use the Storage Cluster function:

1. [Registering ETERNUS Disk Storage Systems and License](#)
2. [Registering and Configuring Server and FC Switch](#)
3. [Configuring Storage Cluster Structure](#)
4. [Expanding Total Capacity of TFOVs](#)

Registering ETERNUS Disk Storage Systems and License

1. Register ETERNUS Disk storage system

Register all the ETERNUS Disk storage systems that use the Storage Cluster function.

Point

To use the Storage Cluster function in environments that use Veeam Storage Integration, the firmware version of the ETERNUS Disk storage system to be registered must be upgraded as shown below.

Storage Devices	Required Firmware Version
ETERNUS DX S6 series	All versions
ETERNUS DX S5 series ETERNUS DX8900 S4 ETERNUS AF S3 series	V11L40 or later
ETERNUS DX S4 series (excluding the ETERNUS DX8900 S4) ETERNUS AF S2 series	V10L90-2000 or later

See

Refer to "Register ETERNUS Disk Storage System" in the *Web Console Guide* for the procedure to register ETERNUS Disk storage systems.

2. Register license

Register Storage Cluster Option License to the ETERNUS Disk storage systems registered in the above Step 1. This license must be registered to all the ETERNUS Disk storage systems that use the Storage Cluster function.

Information

To register Storage Cluster Option License, the following licenses must be registered:

- ETERNUS SF Storage Cruiser Standard Edition License
- ETERNUS SF AdvancedCopy Manager Remote Copy License

See

Refer to "Register License" in the *Web Console Guide* for the procedure to register licenses.

Registering and Configuring Server and FC Switch

1. Register FC switch (for FC connection environment only)

Register all the FC switches that use the Storage Cluster function to devices.

See

Refer to "Register FC Switch" in the *Web Console Guide* for the procedure to register FC switches.

2. Configure Storage Cluster Controller

When using Automatic Failover, Storage Cluster Controller must be configured.

Log in not to Web Console but to the server to configure the Storage Cluster Controller and check its settings.

See

Refer to "[9.6 Storage Cluster Controller](#)" for the procedure to configure the Storage Cluster Controller.

3. Register business server

Register all the business servers used for the Storage Cluster function.


See

Refer to "Register Server" in the *Web Console Guide* for the procedure to register business servers.

Configuring Storage Cluster Structure

Configure the structure of ETERNUS Disk storage systems required for the Storage Cluster function. The structure example is shown in "[Figure 9.27 Structure Example of Storage Cluster \(when Primary ETERNUS Disk Storage System is Active\)](#)".

Figure 9.27 Structure Example of Storage Cluster (when Primary ETERNUS Disk Storage System is Active)

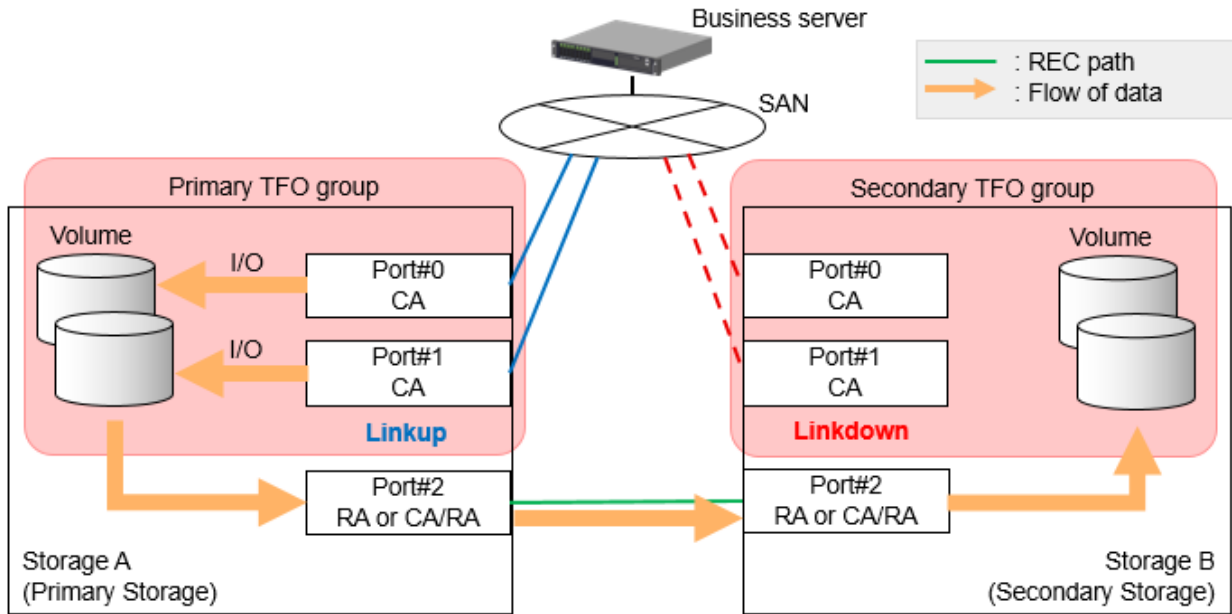

The following settings are required:

- [Configuring Port](#)
 - Port for REC path
 - Port for connecting to business server
- [Configuring REC Path](#)
- [Configuring TFO Group](#)

The setting procedure for FC connection environments differs from that for iSCSI connection environments. The setting procedure for each connection environment is as follows:

- For FC connection environments
 1. [Configuring Port](#) (port for REC path)
 2. [Configuring Port](#) (port for connecting to business server)
 3. [Configuring REC Path](#)
 4. [Configuring TFO Group](#)
- For iSCSI connection environments
 1. [Configuring Port](#) (port for REC path)
 2. [Configuring REC Path](#)
 3. [Configuring TFO Group](#)
 4. [Configuring Port](#) (port for connecting to business server)

Note

For iSCSI connection environments, if Step 4 "[Configuring Port](#) (Port for Connecting to Business Server)" is performed before Step 3 "[Configuring TFO Group](#)", the business server may be prevented from accessing the Primary Storage and the Secondary Storage due to conflicts occurring with the IP addresses. Do not mistake FC connection environments for iSCSI connection environments.

The setting method for each connection environment is as follows.

Configuring Port

The Storage Cluster function uses the ports on ETERNUS Disk storage systems for the following two purposes:

- [Port for REC Path](#)
- [Port for Connecting to Business Server](#)

Port for REC Path

The Storage Cluster function uses the synchronous transfer method to keep data equivalent between business volumes on the Primary Storage and the Secondary Storage. To configure REC Paths that become their copy pathways are required ports on Primary and Secondary ETERNUS Disk storage systems.

There are requirements for ports used to configure REC Paths in the Storage Cluster function as follows:

- Port interface type must be "FC" or "iSCSI". "FCoE" is not supported.
- Port mode must be "RA" or "CA/RA".

As required, change the port mode for each ETERNUS Disk storage system.



See

.....
Refer to "Change FC/iSCSI/SAS Port Settings" in the *Web Console Guide* for the procedure to change the port mode.
.....

Port for Connecting to Business Server

The Storage Cluster function makes a pair of ports through which to access business servers between Primary and Secondary ETERNUS Disk storage systems. Automatically switching a port to be accessed at the time of failover/failback can continue to access business volumes.

There are requirements for ports through which to access business servers as follows:

- Port interface type must be "FC" or "iSCSI". "FCoE" is not supported.
- Port mode must be "CA", however "CA/RA" is not supported.
- Port parameters specified for paired ports must be the same.
However, for iSCSI connection environments and when using the Primary Storage and the Secondary Storage between different subnets, different iSCSI IP addresses can be specified for the Primary Storage and the Secondary Storage.
- CA port pairs that are created between the Primary Storage and the Secondary Storage must have the same interface type.
- When creating multiple CA port pairs, the interface type must be the same.
- When creating two or more TFO groups in one ETERNUS Disk storage system, the CA port pairs of each TFO group must have the same interface type.
- When creating multipath connection, the same number of ports should be provided to Primary and Secondary ETERNUS Disk storage systems respectively so as to make a pair of all the associated ports. There should be two or more ports.

As required, change the port mode and port parameter for respective ETERNUS Disk storage systems.



See

.....
Refer to "Change FC/iSCSI/SAS Port Settings" in the *Web Console Guide* for the procedure to change the port mode and port parameter.
.....

Configuring REC Path

Use the ports configured in "[Port for REC Path](#)" to configure a REC Path between Primary and Secondary ETERNUS Disk storage systems. Once a REC Path is configured from either the Primary ETERNUS Disk storage system or the Secondary ETERNUS Disk storage system, it is set to both ETERNUS Disk storage systems. Use the following steps on Web Console to configure a REC Path:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster function.
4. On the Category pane, click **REC Path**.
Created REC Paths are displayed on the Main pane.
5. On the Action pane, click **Remote Copy Setting** under Wizard.
The Remote Advanced Copy Setting Wizard screen is displayed, and click **Next**.
The screen on which to select a remote partner is displayed.
6. Select an ETERNUS Disk storage system to be remote copy destination, and click **Next**.
The screen on which to set a copy table size is displayed.
7. Set copy parameters for both ETERNUS Disk storage systems as copy source and copy destination, and click **Next**.
The screen on which to configure REC Paths is displayed.
8. Select Remote copy path and Connectivity type between ETERNUS Disk storage systems and click **Next**.
The screen on which to configure REC buffer is displayed.
9. Since REC buffer is not needed to use the Storage Cluster function, click **Next**.
The Setting Confirmation screen is displayed.
10. If the information is correct, click **Close**.

Note

The settings of REC Path line speed and compression ratio are valid only when one or more REC Paths are added. If only existing REC Paths are deleted, specified line speed and compression ratio are not set.

Configuring TFO Group

Use the [ports for connecting to the business server](#) to configure TFO groups between Primary and Secondary ETERNUS Disk storage systems. Once TFO groups are configured from either the Primary ETERNUS Disk storage system or the Secondary ETERNUS Disk storage system, they are configured on both ETERNUS Disk storage systems.

Point

For the ETERNUS Disk storage systems whose firmware version number is V10L70 or later, when creating a TFO group, Automatic Failover is set to work if CA port linkdown occurs. Not to make Automatic Failover work even if CA port linkdown occurs, it is required to change the TFO group configuration using ETERNUS CLI. Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used.


Also, to use Automatic Failover for CA port linkdown in a TFO group, the TFO group must satisfy all the following conditions:

- The [Failover mode](#) is "Auto".
- The [Failback mode](#) is "Manual".

Note

- To use the Automatic Failover mode, Storage Cluster Controller is required. Refer to "9.6 Storage Cluster Controller" for the procedure to configure the Storage Cluster Controller and confirm its settings.
- If a number of TFO groups are created in a pair of ETERNUS Disk storage systems, one pair of CA ports cannot be specified for multiple TFO groups.
- When using the Storage Cluster function in both directions as shown in "Figure 9.28 Structure Example of Using Storage Cluster Function Bi-Directionally", two TFO groups must be created where the Primary Storage is switched with the Secondary Storage for a pair of ETERNUS Disk storage systems.

Figure 9.28 Structure Example of Using Storage Cluster Function Bi-Directionally

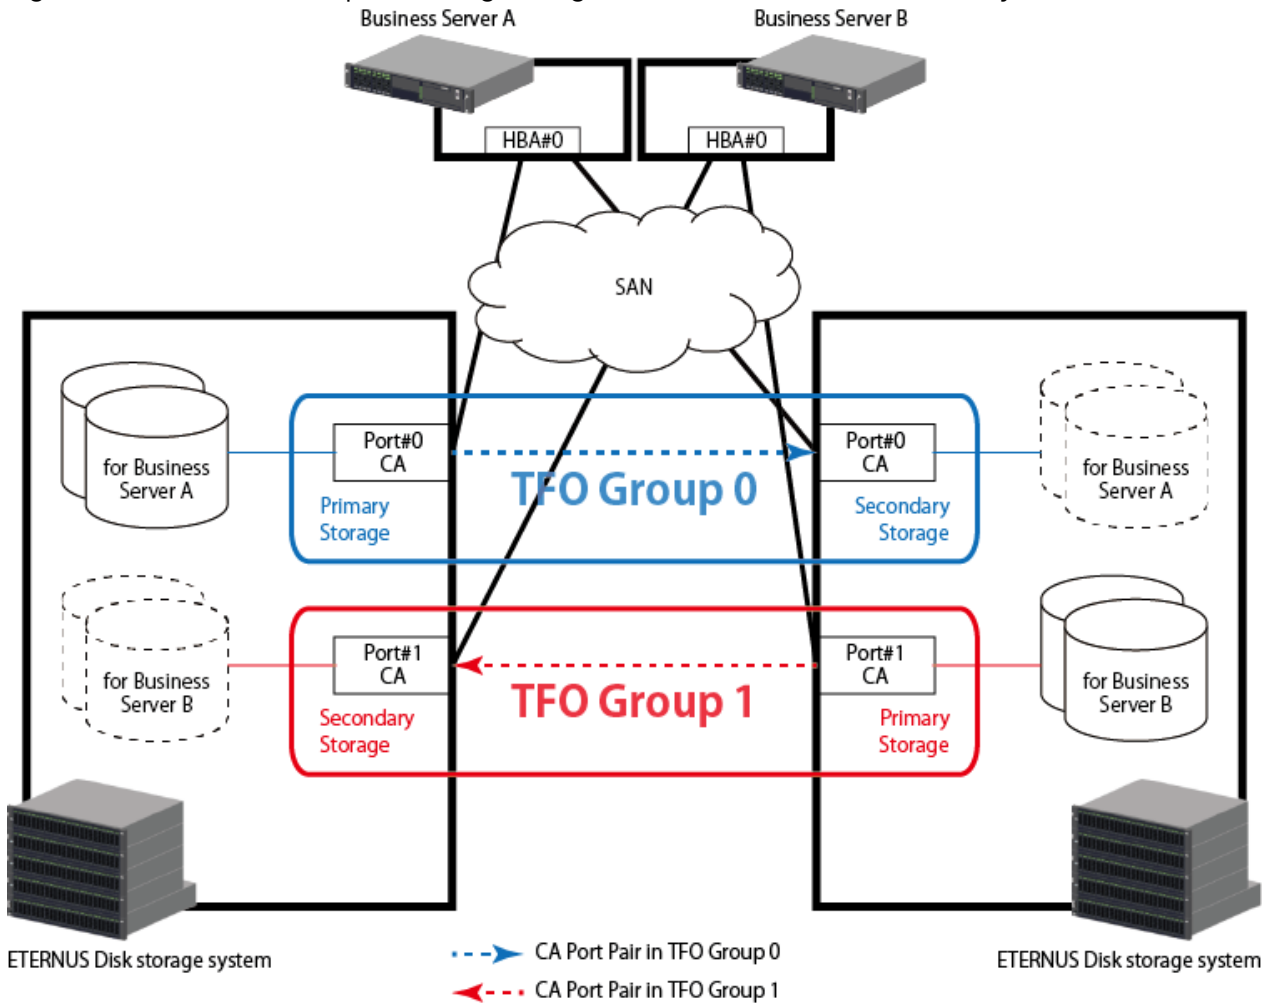

- In multipath connection, a number of access paths (Host Affinity) may be configured for a certain LUN/Affinity group. When specifying the ports included in such access paths (Host Affinity) for a CA port pair in a TFO group, select all the ports associated with the target LUN/Affinity group at the same time.
- Configure access paths (Host Affinity) for CA ports on the Secondary Storage after having configured TFO groups. If access paths (Host Affinity) are configured for CA ports on the Secondary Storage before configuring TFO groups, at that point the volumes in the Secondary Storage are recognized by business server, possibly causing a trouble. For this reason, on the port pair selection screen, a CA port on the Secondary Storage on which the access path (host affinity) has been set cannot be selected.
- CA ports set with host affinity for Veeam Storage Integration on the storage device side cannot be set in TFO groups.
- When adding a CA port for the TFO group, it is necessary for the Primary Storage TFO status to be "Active" and the Secondary Storage TFO status to be "Standby".

- When a TFO group is created in an ETERNUS Disk storage system (excluding the ETERNUS DX S4 series and ETERNUS AF S2 series) with a firmware version earlier than V10L70, even if the firmware version is upgraded to V10L70 or later, the TFO group is set not to use the Automatic Failover function triggered by CA port linkdown. To use the Automatic Failover function triggered by CA port linkdown for the TFO group, it is required to change TFO group settings with ETERNUS CLI. Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used.
-

Use the following steps on Web Console to configure TFO groups:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Action pane, click **Set** under **TFO Group**.
The TFO Group Configuration Wizard screen is displayed.
5. The Selection screen for ETERNUS Disk storage systems and options is displayed.
 - When creating a new TFO group:
Select a remote ETERNUS Disk storage system and specify which ETERNUS Disk storage system to be the Primary Storage.
 - When changing an existing TFO group:
Specified Primary and Secondary Storages and TFO mode of the TFO group cannot be changed.

As the initial value of the Failover mode, "Auto" has been selected. Select "Manual" when you do the failover by manual operation.

As the initial value of the Failback mode, "Manual" has been selected. Select "Auto" when you do the failback by automatic operation.

On completion of input, click **Next**.
The TFO Group Configuration screen is displayed.
6. Select from a list of ports for the Primary Storage and the Secondary Storage, one port for each storage to be paired and click **Add**. When deleting, select an unnecessary pair from the Port Pair List table to click **Delete**.
7. On completion of required configuration, click **Next**.
The Setting Confirmation screen is displayed.
8. If the information is correct, click **Set**.

Expanding Total Capacity of TFOVs

The total capacity of TFOVs can be set. The total capacity of TFOVs is the total capacity per storage device of volumes that are used by the Storage Cluster function. Expand the total capacity of TFOVs according to a total capacity of business volumes.

Expand the capacity of the Primary Storage and the Secondary Storage as required.
The procedure to set the total capacity of TFOVs with Web Console is as follows:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items of the Category pane change into the items concerning Storage Cluster.
4. On the Category pane, click **Setting**.
The total capacity of TFOVs that is set currently is displayed on the Main pane.
5. On the Action pane, click **Modify** on **Setting**.
The **Storage Cluster Settings** screen is displayed.

6. Select the capacity to be set in the **Maximum TFOV Total Capacity** field.
7. Click **Setting**.

9.4.2 Operation

9.4.2.1 Allocating Business Volume

To start or change the operation of the Storage Cluster function, perform the following steps.

- When performing the procedure from a new volume creation for both the Primary Storage and the Secondary Storage
 1. [9.4.2.1.1 Preparing Business Volume](#)
 2. [9.4.2.1.2 Configuring Access Path \(when performing the procedure from a new volume creation with the Primary/Secondary Storage\)](#)
 3. [9.4.2.1.4 Confirming Configuration](#)
 4. [9.4.2.1.5 Recognition of iSCSI IP Address to Business Server due to Manual Failover and Manual Failback](#)

Point


.....
Steps 1 and 2 can easily be performed through Web Console.
.....

- When performing procedures other than those listed above
 1. [9.4.2.1.1 Preparing Business Volume](#)
 2. [9.4.2.1.3 Configuring Access Path \(when allocating volumes to each storage or when adding the Secondary Storage where only the Primary Storage is used\)](#)
 3. [9.4.2.1.4 Confirming Configuration](#)
 4. [9.4.2.1.5 Recognition of iSCSI IP Address to Business Server due to Manual Failover and Manual Failback](#)

For FC connection environments, the example of structure regarding allocation of business volumes is shown in "[Figure 9.29 Storage Cluster Function: Structure Example of Allocating Business Volume \(for FC connection environment\)](#)".

For iSCSI connection environments, the FC switch in the following figure serves as a network switch and no zoning setting exists.

Figure 9.29 Storage Cluster Function: Structure Example of Allocating Business Volume (for FC connection environment)

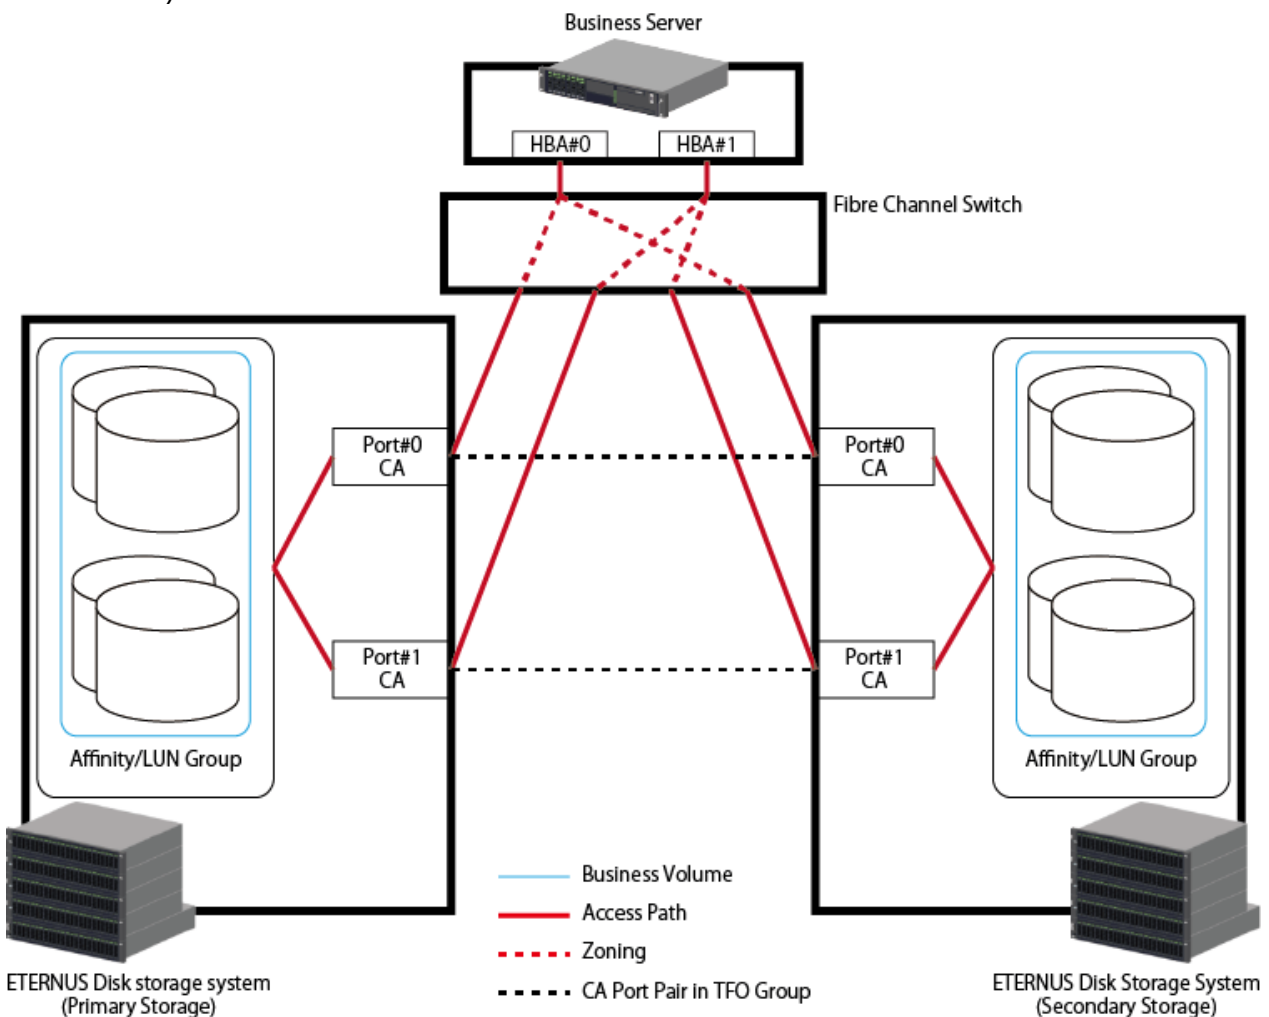

9.4.2.1.1 Preparing Business Volume

Prepare volumes to be switched in the Storage Cluster function on Primary and Secondary ETERNUS Disk storage systems respectively. The volumes to be switched by Storage Cluster must meet all of the conditions described in "[Required Conditions for TFOV](#)".

Point

- If the type of volume using Storage Cluster is "Standard", "TPV", or "FTV", the volume capacity can be expanded. Refer to "[9.4.2.4 Expanding Business Volume Capacity](#)" for information on how to expand the volume capacity. If the volume type is "WSV", the volume capacity cannot be expanded.
- If the total capacity of business volumes exceeds the total capacity of TFOVs per storage device, expand the total capacity of TFOVs. Refer to "[Expanding Total Capacity of TFOVs](#)" for the procedure to expand the total capacity of TFOVs.

If there is no space in RAID group, Thin Provisioning pool or Tier pool, refer to "Operations for RAID Group", "Operations for Thin Provisioning" or "Operations for Automated Storage Tiering" in the *Web Console Guide* to secure areas.

When starting from a new volume creation for both the Primary Storage and the Secondary Storage, a volume that satisfies the conditions described in "[Required Conditions for TFOV](#)" can be created easily with Web Console. The operation procedure using Web Console is shown below.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system that is specified as the Primary Storage.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. Create a volume.
 - When creating a volume with a volume type of "Standard" or "TPV"
 - a. On the Action pane, click **Create Volume** under **Allocating Business Volume**.
 - b. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function.
On the left side of the screen, the information input screen of the volume to be created in the Primary Storage is displayed.
On the right side of the screen, the information input screen of the volume to be created in the Secondary Storage is displayed.
 - c. Enter the required information for the Primary Storage portion on the left side of the screen.
 - d. Make sure that the **Create the same Volume as the Primary Storage** checkbox in the Secondary Storage portion on the right side of the screen is checked.

 **Point**

.....

If the **Create the same Volume as the Primary Storage** checkbox is checked, the following items can be omitted since they will have the same setting value as the Primary Storage.

- Name
- Capacity
- Type
- Encryption
- Deduplication
- Compression
- Deduplication/Compression
- Allocation

Note that a value must be entered for "Number of Volumes" regardless of the checkbox selection state.

.....

- e. Enter the required information for the Secondary Storage portion on the right side of the screen.
 - f. Click **Next**.
The information confirmation screen is displayed.
 - g. Confirm the information, and then click **Create**.
- When creating a volume with a volume type of "FTV"
 - a. On the Action pane, click **Create FTV** under **Allocating Business Volume**.
 - b. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function.
On the left side of the screen, the information input screen of the volume to be created in the Primary Storage is displayed.
On the right side of the screen, the information input screen of the volume to be created in the Secondary Storage is displayed.
 - c. Enter the required information for the Primary Storage portion on the left side of the screen.
 - d. Make sure that the **Create the same Volume as the Primary Storage** checkbox in the Secondary Storage portion on the right side of the screen is checked.

Point

If the **Create the same Volume as the Primary Storage** checkbox is checked, the following items can be omitted since they will have the same setting value as the Primary Storage.

- FTV Name
- Total Capacity
- Number of Volumes
- Allocation
- Caution Threshold of FTV
- Automated QoS Enable/Disable
- Automated QoS:Priority
- Target Response Time

Note that a value must be entered for the following items regardless of the checkbox selection state.

- Tier Pool Name
- Priority FTSP
- Low Quota Share
- Middle Quota Share
- High Quota Share
- Tune by Quota Share

- e. Enter the required information for the Secondary Storage portion on the right side of the screen.
- f. Click **Next**.
The information confirmation screen is displayed.
- g. Confirm the information, and then click **Create**.

For the information how to create a new volume in cases other than those listed above, refer to "Create Volume" or "Create FTV" in the *Web Console Guide* to create a new volume.

When using the volumes already allocated to servers for the Storage Cluster function, create volumes in an ETERNUS Disk storage system as the Secondary Storage so that the conditions described in "[Required Conditions for TFOV](#)" are satisfied.

In addition, if Advanced Copy is in operation, stop it.

See

To stop Advanced Copy, refer to either of the following sites in accordance with the function in use:

- When the Copy Control Module function of AdvancedCopy Manager is in use:
Refer to "Operations Started from Storage Tab" in the *Web Console Guide*.
- When the backup operation or replication operation of AdvancedCopy Manager is in use:
Refer to "Operations Started from Server Tab" - "Operations for Advanced Copy" in the *Web Console Guide*.

When the operations up to this point are completed, proceed to the following sections:

- When performing the procedure from a new volume creation for both the Primary Storage and the Secondary Storage
["9.4.2.1.2 Configuring Access Path \(when performing the procedure from a new volume creation with the Primary/Secondary Storage\)"](#)
- When performing procedures other than those listed above
["9.4.2.1.3 Configuring Access Path \(when allocating volumes to each storage or when adding the Secondary Storage where only the Primary Storage is used\)"](#)

9.4.2.1.2 Configuring Access Path (when performing the procedure from a new volume creation with the Primary/Secondary Storage)

Connect the volumes to be switched by Storage Cluster function to servers.
The following three operations described in this section are required to configure access paths:

- Adding a host
- Creating an Affinity / LUN group
- Configuring Host Affinity


Point

- The host affinity which Affinity/LUN groups that have 513 or more volumes is associated can be set in a BS2000 environment.
- About selection of server HBA and port on ETERNUS Disk storage system

Associate the two ports specified as a pair in TFO groups with the same HBA.


For example, if HBA and ports are selected as shown in "Figure 9.30 Storage Cluster Function: Example of Correct Access Path Configuration", the Storage Cluster function is available.

Figure 9.30 Storage Cluster Function: Example of Correct Access Path Configuration

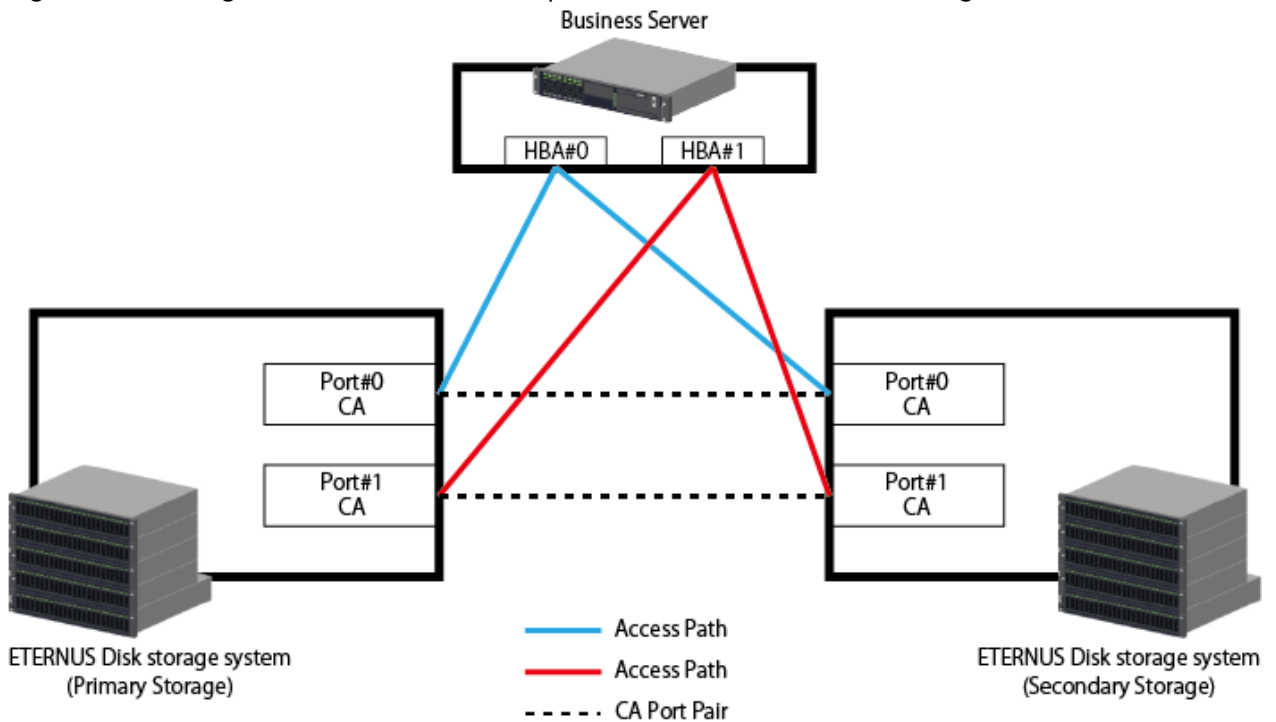

If HBA and ports are selected as shown in "Figure 9.31 Storage Cluster Function: Example of Incorrect Access Path Configuration", the Storage Cluster function is not available.

Figure 9.31 Storage Cluster Function: Example of Incorrect Access Path Configuration

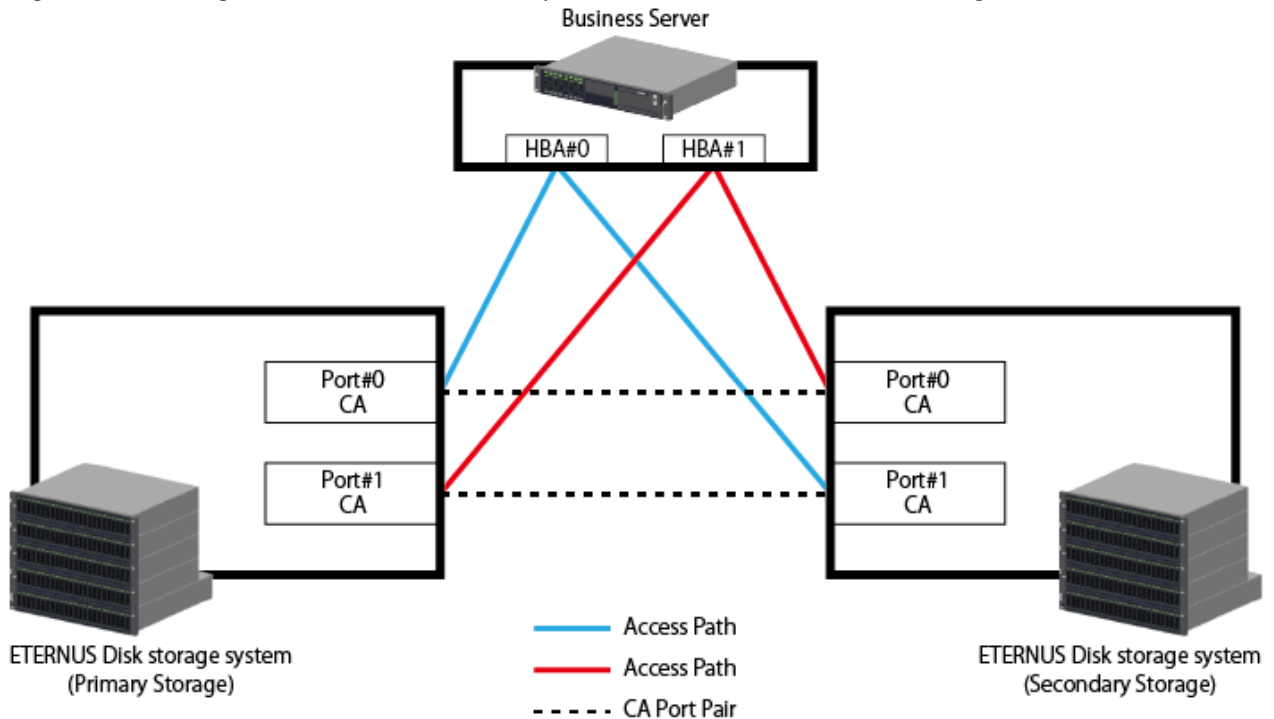

Adding a host

The procedure for adding a host in Web Console is shown below.

Point

- By following this procedure, the Primary Storage port and Secondary Storage port that are specified for the port pair can be associated to the same HBA without being aware of the WWPN/iSCSI name.
- The hosts that are connected to the storage device and automatically detected are shown on the host list screen during this procedure. To automatically detect the target hosts to add, the zoning setting must be performed on the FC switch in advance, and the storage device must be able to communicate with the target hosts to add. Refer to the [storageadm zone](#) command for details on the zoning setting of the FC switch.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system that is specified as the Primary Storage.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. Add a host.
 - When adding an FC host
 - a. On the Action pane, click **Add FC Host** under **Allocating Business Volume**.
The information input screen is displayed.

- b. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function. From the **Port** drop-down list on the left side of the screen, a Primary side port in the TFO group can be selected.
 - c. From the **Port** drop-down list, select a Primary side port that is assigned to the host. The two ports (Primary Storage port and Secondary Storage port) that are specified for the pair in the TFO group are displayed.
 - d. In the host list, only the hosts that are connected to the Primary Storage port are displayed. Check the WWPN and select the host that is assigned to the port.
 - e. Enter the necessary information, and then click **Next**.
 - f. Confirm the information, and then click **Add**.
- When adding an iSCSI host
- a. On the Action pane, click **Add iSCSI Host** under **Allocating Business Volume**. The information input screen is displayed.
 - b. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function. From the **Port** drop-down list on the left side of the screen, a Primary side port in the TFO group can be selected.
 - c. From the **Port** drop-down list, select a Primary side port that is assigned to the host. The two ports (Primary Storage port and Secondary Storage port) that are specified for the pair in the TFO group are displayed.
 - d. In the host list, only the hosts that are connected to the Primary Storage port are displayed. Check the iSCSI name and select the host that is assigned to the port.
 - e. Enter the necessary information, and then click **Next**.
 - f. Confirm the information, and then click **Add**.

Creating an Affinity / LUN group

The procedure for creating an Affinity/LUN Group in Web Console is shown below.

Point

By following this procedure, the required conditions for the Storage Cluster switchover volume of the Primary/Secondary Storage in the Affinity/LUN Group can be satisfied. For the required conditions, refer to "[Required Conditions for TFOV](#)".

Note

When setting the Primary/Secondary Storage LUN mapping, set the same number for the host LUN. Of the volumes for which host affinity is set for the two ports of CA port pair, volumes for which host LUN No.(HLU) and volume capacity match are the target for synchronization.

1. Click **Storage** on the global navigation tab. Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system that is specified as the Primary Storage.
3. On the Category pane, click **Storage Cluster**. Created TFO groups are displayed on the Main pane.
4. On the Action pane, click **Create Affinity /LUN Group** under **Allocating Business Volume**. The information input screen is displayed.

5. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function.
On the left side of the screen, the information input screen for the Affinity/LUN Group that is created in the Primary Storage specified for the selected TFO group is displayed.
On the right side of the screen, the information input screen for the Affinity/LUN Group that is created in the Secondary Storage specified for the selected TFO group is displayed.
6. Input the Affinity/LUN group name in the **Name** field.
7. Input the host LUN starting number in the **Start Host LUN Number** field.
8. Select the volume assigned to the Affinity/LUN Group and click **Add**.
In the assigned volume list, make sure the selected volume is displayed.
9. Make sure that the **Create the same Affinity/LUN Group as the Primary Storage** checkbox in the Secondary Storage portion on the right side of the screen is checked.
10. Click **Next**.
The information confirmation screen is displayed.
11. Confirm the information, and then click **Create**.

Configuring Host Affinity

The procedure for setting the host affinity in Web Console is shown below.



Point

By following this procedure, the host affinity between each port of the selected port pair and the selected host can be set.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system that is specified as the Primary Storage.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Action pane, click **Create Host Affinity** under **Allocating Business Volume**.
The information input screen is displayed.
5. From the **TFO Group** drop-down list, select the TFO group to be used by the Storage Cluster function.
On the left side of the screen, the information input screen for the host affinity that is created in the Primary Storage specified for the selected TFO group is displayed.
On the right side of the screen, the information input screen for the host affinity that is created in the Secondary Storage specified for the selected TFO group is displayed.
6. For the Primary Storage and the Secondary Storage, select a host to be set in the host affinity.
7. Select a TFO group port pair to be set in the host affinity.
8. For the Primary Storage and the Secondary Storage, select an Affinity/LUN Group to be set in the host affinity from the **Affinity/LUN Group** drop-down list.
9. Click **Create**.

When the operations up to this point are completed, proceed to "[9.4.2.1.4 Confirming Configuration](#)".

9.4.2.1.3 Configuring Access Path (when allocating volumes to each storage or when adding the Secondary Storage where only the Primary Storage is used)

When starting from a new volume creation for both the Primary Storage and the Secondary Storage, refer to "[9.4.2.1.2 Configuring Access Path \(when performing the procedure from a new volume creation with the Primary/Secondary Storage\)](#)" for information on how to configure the access path.

When performing procedures other than those listed above, connect the volumes to be switched with the Storage Cluster function to the servers by performing the operations in this section on the Primary and Secondary ETERNUS Disk storage systems. However, if the configuration is already completed for the Primary Storage, perform the operations only for the Secondary Storage.

The following operations are required to configure access paths in the Storage Cluster structure:

- Creating Affinity / LUN group
- Configuring Host Affinity (Associate server HBA, port on disk storage system, and Affinity/LUN group)
- Configuring FC switch zoning (for FC connection environment only)
- Configuring TFO port pair

It is recommended to use the volume allocation function to configure access paths that can perform the above operations all at one time and configure multiple access paths between a certain server and a certain ETERNUS Disk storage system at the same time.

If you configure access paths to the Primary Storage and the Secondary Storage with Web Console or the [storageadm zone](#) command, after the access path setting for the Secondary Storage is executed, the TFO port pair is configured and a volume synchronization with the Storage Cluster function is started.



Note

With the volume allocation function, multiple access paths cannot be set to the same ETERNUS Disk storage system from one HBA. When setting multiple access paths, add the access paths one by one using the procedure for adding access paths.



Point

The host affinity which Affinity/LUN groups that have 513 or more volumes is associated can be set in a BS2000 environment.



See

- Refer to "Assign ETERNUS Disk Storage System Volumes to Server" in the *Web Console Guide* for the procedure for allocating volumes.
- Refer to "Add Access Path to ETERNUS Disk Storage System" in the *Web Console Guide* for the procedure for adding access paths.

Configure access path in the following steps:

- About selection of server HBA and port on ETERNUS Disk storage system

Associate the two ports specified as a pair in TFO groups with the same HBA.

For example, if HBA and ports are selected as shown in "[Figure 9.30 Storage Cluster Function: Example of Correct Access Path Configuration](#)", the Storage Cluster function is available.

If HBA and ports are selected as shown in "[Figure 9.31 Storage Cluster Function: Example of Incorrect Access Path Configuration](#)", the Storage Cluster function is not available.

- About creation of Affinity/LUN group

The volumes enabled with the Storage Cluster function must be defined to Affinity/LUN group based on the following rules:

- The Primary/Secondary Storage hosts LUN No.(HLU) are the same.
- The volume capacities for the Primary/Secondary Storage are the same.

- The volume type is either "Standard", "WSV", "TPV" or "FTV". And the volume type for corresponding volumes on the Primary Storage and the Secondary Storage is the same.
- About the host affinity setting when Veeam Storage Integration is used

For the LUN group that is to be the target of the Storage Cluster function, use a LUN group that has a hyphen (-) as the value in the **Veeam Storage Integration** column.

Note

- If access path configuration does not meet the requirements, error occurs on the device side and the operation log is displayed. Refer to the *Messages* for corrective actions.
- When setting the Primary/Secondary Storage LUN mapping, set the same number for the host LUN. Of the volumes for which host affinity is set for the two ports of CA port pair, volumes for which host LUN No.(HLU) and volume capacity match are the target for synchronization.

When the operations up to this point are completed, proceed to "[9.4.2.1.4 Confirming Configuration](#)".

9.4.2.1.4 Confirming Configuration

Confirm that the Storage Cluster function is configured correctly.

- Confirm the access paths to the pair port in the TFO groups

Confirm that each of the two ports paired across the TFO groups (one port in the Primary Storage and the other in the Secondary Storage) has an access path to the same HBA in the business server.

- Confirm the target volumes for the Storage Cluster function

When access paths are configured to Primary and Secondary ETERNUS Disk storage systems, the volumes start to be synchronized by the Storage Cluster function.

Take the following steps with Web Console to check whether specified volumes are properly configured as volumes enabled with the Storage Cluster function:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Volume**.
Created volumes are displayed on the Main pane. If a string of "/TFOV" is included in the value displayed in the **Usage** column, the volume is properly configured as a volume enabled with the Storage Cluster function.
It takes a certain period of time for access paths to be configured and volumes to be synchronized so that failover is enabled. Check the progress rate of the synchronization processing from the TFO group details screen. To see whether synchronization is complete and failover is executable, continue to perform Step 4.
4. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
Check the value in the **Phase** column of the TFO group:
 - "Normal"
Volume synchronization within the TFO group is all complete, and it is in a state that Failover is made possible.
When using Automatic Failover, check that **Failover Mode** of TFO group is to be "Auto" and **Status** of TFO group is to be "Normal".
 - "Copying"
Volume has been synchronizing from the Primary Storage to the Secondary Storage. Wait until synchronization is completed.

- In cases other than those listed above

Refer to "9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen".

Point

When all the following requirements are met, the access state data between the Primary/Secondary Storage can be synchronized.

- It is configured that the synchronization of the volume by the Storage Cluster function can begin between FTV.
- Automated Storage Tiering control function on ETERNUS Disk storage system is used.

Refer to "Access Status Data Synchronization" in the *Storage Cruiser Operation Guide for Optimization Function* for the synchronization procedure of the access state data.

Note


- In host affinity groups under a pair of CA ports, the volumes that have the same HLU number and capacity can be a synchronized pair. Match those volumes with the same HLU number and capacity.
- In volume synchronization, an initial copy is done between paired volumes. The time required for initial copy is affected by line speed of transfer, quality, data compression ratio (depending on data contents), being greatly varied.

An indication of time required is as follows:

Table 9.10 Time Required for Initial Copy (Standard Value of 1 TB Physical Capacity Volume)

Requirements for Initial Copy	Time needed
FC-RA port and IP network: one line (1 Gbit/sec) connection, Typical throughput of FC switch: 114 MB/sec (=114,000,000 byte/sec) (data compression ratio 50%, no delay)	1.5 hrs
FC-RA port and IP network: one line (100 Mbit/sec) connection, Typical throughput of FC switch: 12 MB/sec (=12,000,000 byte/sec) (data compression ratio 50%, no delay)	13 hrs
iSCSI-RA port and IP network: one line (1 Gbit/sec) connection, Typical throughput of iSCSI-RA port: 26 MB/sec (no data compression, 30 msec delayed)	12 hrs

Figure 9.32 Storage Cluster Function: Example of Synchronized Volumes

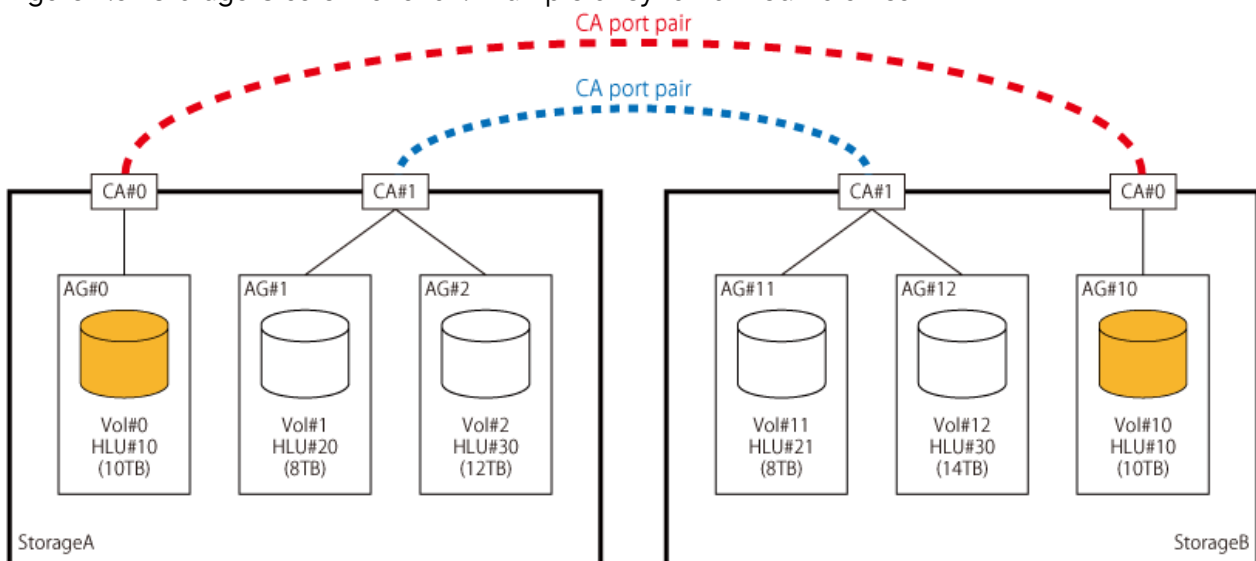

The above figure represents the following matters:

- A pair of Vol#0 of Storage A and Vol#10 of Storage B is the same in HLU number and size, so that they are synchronized (failover enabled) volumes.
- A pair of Vol#1 of Storage A and Vol#11 of Storage B is different in HLU number, so that they cannot be synchronized.
- A pair of Vol#2 of Storage A and Vol#12 of Storage B is different in size, so that they cannot be synchronized.

Trying to make a pair of CA ports correlated to the volumes that are the same in HLU number but different in size terminates the processing abnormally.

- Refer to "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)" for the status of TFO group.

When the operations up to this point are completed, proceed to "[9.4.2.1.5 Recognition of iSCSI IP Address to Business Server due to Manual Failover and Manual Failback](#)".

9.4.2.1.5 Recognition of iSCSI IP Address to Business Server due to Manual Failover and Manual Failback

Use this procedure for iSCSI connection environments and when using Storage Cluster with a different iSCSI IP address.

The following procedure describes how to recognize the iSCSI IP address of the Secondary Storage in the business server.

1. Recognize the iSCSI IP address of the Primary Storage in the business server.
If the business server has already recognized it, this procedure is not required.
2. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
3. On the Main pane, click the Name of a target ETERNUS Disk storage system.
4. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
5. On the Main pane, select a TFO group created with a different iSCSI IP address. After it, click **Failover** on the Action pane.
The warning dialog box is displayed.
6. Click **OK**.
7. Recognize the iSCSI IP address of the Secondary Storage in the business server.
8. On the Main pane, select a TFO group created with a different iSCSI IP address. After it, click **Failback** on the Action pane.
The warning dialog box is displayed.
9. Click **OK**.

9.4.2.2 Updating TFO Group Status

The TFO group status is automatically updated.

Perform the following procedure when you need to update it to its most recent state right away.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Action pane, click **Update** under **TFO Group Status**.
A dialog box is displayed. Click **Done**.

When this operation is performed, the TFO status of the other device paired with the selected device is also updated.

Note

If communication is disabled between paired devices, the operation terminates abnormally with error status. Even in this case, the TFO status of the selected device is updated.

See

Refer to "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)" for details of the TFO group status and its meaning.

9.4.2.3 Adding and Deleting Business Volume

To change a volume enabled with the Storage Cluster function, delete that volume, add a new volume, or do both. Either of the following methods can be performed for the work.

- [Method for simultaneously performing the work for the Affinity/LUN Group in both devices of the Primary Storage and Secondary Storage](#)

This method can be performed for "[9.4.2.1 Allocating Business Volume](#)" if the affinity/LUN group is created following the procedure in "[9.4.2.1.2 Configuring Access Path \(when performing the procedure from a new volume creation with the Primary/Secondary Storage\)](#)".

- [Method for performing the work for each device of the Primary Storage and Secondary Storage](#)

The following describes the work procedure for each method.

Method for simultaneously performing the work for the Affinity/LUN Group in both devices of the Primary Storage and Secondary Storage

1. Confirm that the volume is in a state in which an addition/deletion operation can be performed.

- When adding a volume

Confirm that the TFO group where the volume is to be added has the following state.

- Primary Storage side: The **Active/Standby** column is "Active".
- Secondary Storage side: The **Active/Standby** column is "Standby".

- When deleting a volume

To continue using a volume that is not enabled with the Storage Cluster function and without using the Storage Cluster function, make sure all the following conditions are satisfied.

- The TFO group phase is "Normal".
- In the session information of the TFO pair related to the volume, the session status is "Active" and the session phase is "Equivalent".

See

For details of the TFO group status, refer to "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)" and for details of the TFO pair session information, refer to "[9.4.2.10 Confirming the Status on the TFO Group Details Screen](#)".

2. Change Affinity/LUN groups.

Note

In the procedure described here, for both devices of the Primary Storage and Secondary Storage, an affinity/LUN group that satisfies all the conditions of "[Required Conditions for Affinity/LUN Groups]" can be selected/set.

[Required Conditions for Affinity/LUN Groups]

- Corresponding volumes between the Primary Storage and the Secondary Storage have the same host LUN No. (HLU).
- Corresponding volumes between the Primary Storage and the Secondary Storage have the same volume capacity.
- Corresponding volumes between the Primary Storage and the Secondary Storage have the same volume type.

Note that for either of the following, all the requirements described in "[Required Conditions for Affinity/LUN Groups]" are satisfied, so the procedure here can be performed.

- In "9.4.2.1 Allocating Business Volume", when the Affinity/LUN group is created following the procedure in "9.4.2.1.2 Configuring Access Path (when performing the procedure from a new volume creation with the Primary/Secondary Storage)"
- In "9.4.2.1 Allocating Business Volume", when the Affinity/LUN group is created without following the procedure in "9.4.2.1.2 Configuring Access Path (when performing the procedure from a new volume creation with the Primary/Secondary Storage)", but an Affinity/LUN group with the same name is created in both the Primary Storage and Secondary Storage, and when a setting that satisfies all the requirements described in "[Required Conditions for Affinity/LUN Groups]" is performed and the following requirements are satisfied
 - When a business volume is added to an Affinity/LUN group, although a volume with the same name as the volume to be added to the Primary Storage side is created on the Secondary Storage side, the created volume is not assigned to the Affinity/LUN group on the Secondary Storage side
 - When a business volume is deleted from the Affinity/LUN group, the volume with the same name as the volume to be deleted on the Primary Storage side must be assigned to the Affinity/LUN group on the Secondary Storage side

If the requirements described in "[Required Conditions for Affinity/LUN Groups]" are not satisfied, the procedure here cannot be performed. Perform the procedure in "Method for performing the work for each device of the Primary Storage and Secondary Storage".

- a. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
- b. On the Main pane, click the Name of the ETERNUS Disk storage system to specify as the Primary Storage.
- c. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
- d. On the Main pane, select the TFO group whose setting is to be changed. And then, click **Modify Affinity/LUN Group** under **Allocating Business Volume** on the Action pane.
The information input screen is displayed.
- e. In the [Port] drop-down on the left side of the screen, the ports on the Primary Storage side that are paired in the selected TFO group are displayed. Select the port with the access path setting to the affinity/LUN group to be changed.
If the port is selected, the paired port of the Secondary Storage is displayed for the selected port.
- f. After a port is selected, a list of affinity/LUN groups with the access path setting to the selected port is displayed in the [Name] drop-down. Select the target affinity/LUN group to change in the Primary Storage and Secondary Storage.

Point

- If the affinity/LUN group name on the Primary Storage side is the same as the corresponding affinity/LUN group name on the Secondary Storage side

For the volume that has the same name as the volume selected on the Primary Storage side, volume selection is omitted on the Secondary Storage side and the volume with the same name on the Primary Storage side is automatically selected.

If the **Modify the same Affinity/LUN Group as that of the Primary Storage** checkbox is checked, the volume information that is selected on the Primary Storage is applied on the Secondary Storage side.

- For cases other than the above

The volumes in each affinity/LUN group of the Primary Storage and Secondary Storage must be selected.

- g. To add a volume to the affinity/LUN group, select the volume to assign and click **Add**. In the list of "Assigned Volumes", confirm that the selected volume is displayed.

To delete a volume from the affinity/LUN group, select the volume to delete from the list of "Assigned Volumes" and then click **Remove**.

Note

If a port or an Affinity/LUN group on the Primary Storage side is reselected while a volume is selected, the volume selection of the Primary Storage and Secondary Storage returns to the state before transitioning to this screen. If it returns to the that state, the procedure must be started over from the volume selection.

- h. Click **Next**.

The information confirmation screen is displayed.

- i. Confirm the information, and then click **Modify**.

3. If a volume of the Secondary Storage that is not enabled with the Storage Cluster function is continued to be used without using the Storage Cluster function, use ETERNUS CLI to revert the information of that volume to the state prior to the data synchronization.

Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used.

Note

If this procedure is not performed, the volume information of the Secondary Storage may conflict with the volume information of the Primary Storage and data corruption may occur.

After changing a volume enabled with the Storage Cluster function, it takes a certain period of time for volumes to be synchronized and for failover to be enabled.

Refer to "[9.4.2.1.4 Confirming Configuration](#)" in "[9.4.2.1 Allocating Business Volume](#)" for the procedure to see if the volume synchronization is completed and failover can be executed.

Note

- There is an upper limit to the number of volumes that can be defined to one Affinity/LUN group. Refer to the manual for the ETERNUS Disk storage system in use for the upper limit.
- The format of a volume enabled with the Storage Cluster function is not supported.
- The following volumes cannot be added:
 - The volume type is "SDV" or "SDPV".

- Volumes that are used for the Non-disruptive Storage Migration.
- Volumes whose External LU Information is "Inherited".
- Volumes in which the **Usage** column in the screen of Web Console is "Veeam"
- Volumes for which Advanced Copy is running.

Method for performing the work for each device of the Primary Storage and Secondary Storage

1. Confirm that the volume is in a state in which an addition/deletion operation can be performed.

- When adding a volume

Confirm that the TFO group where the volume is to be added has the following state.

- Primary Storage side: The **Active/Standby** column is "Active".
- Secondary Storage side: The **Active/Standby** column is "Standby".

- When deleting a volume

To continue using a volume that is not enabled with the Storage Cluster function and without using the Storage Cluster function, make sure all the following conditions are satisfied.

- The TFO group phase is "Normal".
- In the session information of the TFO pair related to the volume, the session status is "Active" and the session phase is "Equivalent".



See

For details of the TFO group status, refer to ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#) and for details of the TFO pair session information, refer to ["9.4.2.10 Confirming the Status on the TFO Group Details Screen"](#).

2. Change Affinity/LUN groups for Primary and Secondary ETERNUS Disk storage systems.

The procedure to see which Affinity/LUN group to change is as follows:

- a. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
- b. On the Main pane, click the Name of a target ETERNUS Disk storage system.
- c. On the Category pane, click **Connectivity**.
The items on the Category pane switch to those associated with Connectivity.
- d. On the Category pane, click **Host Affinity**.
A list of host affinities is displayed on the Main pane.
Check in the **Port** column, host affinity including ports specified as pairs in TFO groups. The Affinity/LUN group configured to the host affinity must be changed.



See

Refer to "Change Affinity/LUN Group Settings" in the *Web Console Guide* for the procedure to change Affinity/LUN group.

3. If a volume of the Secondary Storage that is not enabled with the Storage Cluster function is continued to be used without using the Storage Cluster function, use ETERNUS CLI to revert the information of that volume to the state prior to the data synchronization.

Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used.

Note

If this procedure is not performed, the volume information of the Secondary Storage may conflict with the volume information of the Primary Storage and data corruption may occur.

After changing a volume enabled with the Storage Cluster function, it takes a certain period of time for volumes to be synchronized and for failover to be enabled.

Refer to "[9.4.2.1.4 Confirming Configuration](#)" in "[9.4.2.1 Allocating Business Volume](#)" for the procedure to see if the volume synchronization is completed and failover can be executed.

Note

- There is an upper limit to the number of volumes that can be defined to one Affinity/LUN group. Refer to the manual for the ETERNUS Disk storage system in use for the upper limit.
- The format of a volume enabled with the Storage Cluster function is not supported.
- The following volumes cannot be added:
 - The volume type is "SDV" or "SDPV".
 - Volumes that are used for the Non-disruptive Storage Migration.
 - Volumes whose External LU Information is "Inherited".
 - Volumes in which the **Usage** column in the screen of Web Console is "Veeam"
 - Volumes for which Advanced Copy is running.

9.4.2.4 Expanding Business Volume Capacity

To expand the capacity of volumes enabled with the Storage Cluster function, all the following conditions must be satisfied:

- The target volumes for the capacity expansion are in pairs.
- The session status of the TFO pair is "Active".

See

For details of the TFO pair session information, refer to "[9.4.2.10.2 Session Information of TFO Pairs](#)".

Point

- If the session status of the TFO pair is not "Active", the following causes are possible:
 - Temporary session pending by a failover or a failback
 - REC path close
 - Occurrence of a RAID failure, a RAID close, or a bad sector

Check the status of the ETERNUS Disk storage system, and then perform the steps in "[9.5 Maintenance](#)" as required.

- Only one volume pair can be specified for a single capacity expansion operation.
- To provide against the unexpected, it is recommended that you expand the volume capacity after backing up the data of the target volumes.
- Note that when expanding the capacity, a synchronization between paired volumes is temporarily desynchronized until the capacity expansion is completed. Upon completion of the capacity expansion, a synchronization between

the paired volumes is performed with the initial copy. Refer to "[Table 9.10 Time Required for Initial Copy \(Standard Value of 1 TB Physical Capacity Volume\)](#)" for the time required for an initial copy.

- After the capacities of the business volumes have been expanded, you must recognize the expanded volume capacities to the business server.



If the volume type is "Standard", expand the capacity of the business volumes with LUN Concatenation. A volume capacity expansion using LUN Concatenation can realize the following:

- Expanding the business volume capacity using free space in existing RAID groups
- Concatenating free space of at least 1 GB
- Creating business volumes of up to 128 TB
- Concatenating across multiple RAID groups
- All RAID levels are available for volumes concatenated to a concatenation source volume (Even if the RAID level of the volume differs from the concatenation source volume, they can be concatenated.)
- Concatenating up to 16 volumes to a concatenation source business volume

Note



- To expand the capacity of a business volume whose volume type is "Standard", all the following conditions must be satisfied:
 - Conditions for specifiable business volumes
 - Current volume capacity is 1 GB or more.
 - The capacity of the concatenated volumes is less than 128 TB.
 - The number of concatenated volumes is less than 16.
 - The volume status is neither "Broken" nor "Data Lost" nor "Not Ready" nor "Readying".
 - RAID migration is not running.
 - No Advanced Copy session exists in which "Totally" is specified for the copy range.
The following are the cases where "Totally" is specified for the copy range:
 - LUN to LUN copy of AdvancedCopy Manager CCM
 - Copy using ETERNUS SF AdvancedCopy Manager SRA
 - Copy using ETERNUS VSS Hardware Provider
 - SnapOPC+ that is set from ETERNUS Web GUI or ETERNUS CLI
 - Conditions for specifiable RAID groups
 - The number of concatenated volumes after an expansion is 16 or less.
 - The status of a RAID group is not "Broken".
 - Standard, WSV, SDP, or SDPV is registered in the RAID group or there are no volumes registered in the RAID group.
 - The RAID group does not belong to a Thin Provisioning Pool or a Flexible Tier Pool.
 - The RAID group is not registered as an Extreme Cache Pool.
 - The number of volumes that are registered in the RAID group is less than 128.
 - There is a free space of 1 GB or more in the RAID group.
 - The type of drive that constitutes the RAID groups to which the source volume belongs and the type of drive that constitutes the destination RAID groups are the same.

- A RAID close does not occur in the RAID group.
- To expand the capacity of a business volume whose volume type is "TPV" or "FTV", all the following conditions must be satisfied:
 - Current capacity is less than 128 TB.
 - If the target volume is TPV, a Thin Provisioning Volume balancing is not running.
 - If the target volume is FTV, a Tier pool balancing is not running.
 - RAID migration is not running.
 - The total capacity of all TPVs and all FTVs in the storage device does not exceed the maximum pool capacity of the storage device.

The total capacity of all TPVs and FTVs that can be created in a storage device depends on the maximum pool capacity of the storage device. Refer to the ETERNUS Disk storage system manuals for the maximum pool capacity that can be created.

- No Advanced Copy session exists in which "Totally" is specified for the copy range.

The following are the cases where "Totally" is specified for the copy range:

- LUN to LUN copy of AdvancedCopy Manager CCM
- Copy using ETERNUS SF AdvancedCopy Manager SRA
- Copy using ETERNUS VSS Hardware Provider
- SnapOPC+ that is set from ETERNUS Web GUI or ETERNUS CLI

If you perform a capacity expansion for the business volumes of either the Primary Storage or the Secondary Storage, the business volume capacity is expanded for both the Primary Storage and the Secondary Storage.

The procedure to expand the capacity of a business volume with Web Console is as follows:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, click the Name of a target TFO group.
The TFO group details screen is displayed on the Main pane.
5. On the Main pane, click the **Volume** tab.
The information for a pair of local volume and remote volume is displayed.
6. After checking the target volume checkbox to be expanded the capacity, click **Expand Capacity** under **TFOV** on the Action pane.
The **Expand TFOV** wizard screen is displayed.
7. Perform the following procedures according to the volume type.

For Standard

- a. Enter the expanded capacity in the **Post-Expansion Volume Capacity** field in the **Expand TFOV on Primary storage site** page.



The maximum number of characters that can be entered in the item field is 15 including a decimal point. If you select "MB" (megabytes) as the unit, the digits after the decimal point are rounded off. If you select "GB" (gigabytes) or "TB" (terabytes) as the unit, the digits after the decimal point of a value converted to megabytes are rounded off.

For the capacity, enter a value that is 2 GB or more, and less than the free space of the RAID group. Also, the maximum volume size of 128 TB must not be exceeded.

Entering the same capacity as **Maximum Free Space** of the RAID group with the same format (same number of digits in gigabytes or terabytes) adds the corrected capacity so that all the free space in the RAID group is used. If you want to add the entered capacity without making a correction, enter it in megabytes.

- b. Select a RAID group for which to secure capacity from a list of RAID groups in the Primary Storage.
- c. Click **Next**.
The **Expand TFOV on Secondary storage site** page is displayed.
- d. Select a RAID group for which to secure capacity from a list of RAID groups in the Secondary Storage.
- e. Click **Next**.
The **Confirm** page is displayed.
- f. After checking that the setting is correct, click **Expand**.

For TPV or FTV

- a. Enter the expanded capacity in the **Post-Expansion Volume Capacity** field in the **Expand TFOV (TPV/FTV)** page.

 **Point**

The maximum number of characters that can be entered in the item field is 15 including a decimal point. If you select "MB" (megabytes) as the unit, the digits after the decimal point are rounded off. If you select "GB" (gigabytes) or "TB" (terabytes) as the unit, the digits after the decimal point of a value converted to megabytes are rounded off.

For the capacity, enter a value between 25 MB and 128 TB.

- b. After checking that the setting is correct, click **Expand**.

9.4.2.5 Changing Total Capacity of TFOVs

The total capacity of TFOVs can be changed. Refer to "[Expanding Total Capacity of TFOVs](#)" for the procedure to change the total capacity of TFOVs.

 **Point**

If any paired TFO group exists, the total capacity of TFOVs cannot be reduced. If you reduce the total capacity of TFOVs, perform the following actions:

1. Perform the procedure in "[9.5.8 Releasing TFO Pair](#)" to release all TFO pairs.
2. Perform the procedure in "[9.4.2.3 Adding and Deleting Business Volume](#)" to delete unnecessary business volumes. Set the total capacity of all TFOVs to a value below the total capacity of TFOVs to be set in Step 3.
3. Change the total capacity of TFOVs.
4. If you continue to use Storage Cluster, perform the procedure in "[9.5.9 Recovering TFO Pair](#)" to recover all the TFO pairs that were released in Step 1.

9.4.2.6 Manual Failover/Failback

If Storage Cluster Controller is placed and Automated Failover is set when configuring TFO groups, any failure in ETERNUS Disk storage systems are detected and failover is automatically performed. In the case the Storage Cluster Controller is not placed or switchover is needed right now for switching test, failover can be done manually. When

performing Failover manually, Normal mode and Forced mode can be selected. Refer to "9.4.2.7 Force-Failover" for Forced mode.

When setting automatic Failback with a TFO group setting, after the Primary Storage ETERNUS Disk storage system has recovered, failback is performed automatically after detecting that it has moved into a state where failback is possible. When it is recovered from RAID failure and you wish to switchover at an arbitrary time, it is possible to perform manual failback.

Point

When performing a manual failover/failback, make sure that the operation can be performed and the data integrity is consistent by checking the status of the TFO group to switch and the session information of the TFO pair.

For details of the TFO group status, refer to "9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen" and for details of the TFO pair session information, refer to "9.4.2.10 Confirming the Status on the TFO Group Details Screen".

Note

- If a manual failover/failback is performed when the TFO group phase is not normal or when the session status of the TFO pair is not normal, the integrity of the data may become inconsistent.
- In an environment that uses the following storage devices, a failover/failback cannot be performed when the TFO group phase is "Maintenance". If an attempt is made, it results in an error.
 - ETERNUS DX S6 series
 - ETERNUS DX S5 series, ETERNUS DX8900 S4, or ETERNUS AF S3 series that has firmware version V11L40-5000 or later
 - ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4), or ETERNUS AF S2 series, AF series that has firmware version V10L90-1000 or later

The following is the procedure to perform a manual failover/failback. Failover/failback can be performed from either Primary/Secondary Storage.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. After confirming the status of the TFO group and the session information of the TFO pair, select a TFO group to enable failover or failback on the Main pane and click **Failover** or **Failback** on the Action pane.
A warning dialog box is displayed.
5. When enabling failover or failback, click **OK**.

Point

- If the Primary ETERNUS Disk storage system is down or removed and communication is not enabled with that storage system, Manual Failover is not possible. Make sure that the Primary disk storage system is stopped to execute Force-Failover.
- While a restore process from Veeam Storage Integration is running, a failover cannot be performed manually. After confirming that the restore process is completed, perform the failover manually.

9.4.2.7 Force-Failover

Execute Force-Failover by performing the following procedure only when instructed by your maintenance engineer when the Primary ETERNUS Disk storage system is down or removed and becomes inaccessible from business servers:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
Select a Primary ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, select a TFO group for which you want to enable Force-Failover and click **Force-Failover** on the Action pane.
A warning dialog box is displayed.
5. When executing Force-Failover, click **OK**.

Note

- If the ETERNUS Disk storage system as the Primary Storage is connected to business servers, do not execute this function.
If this function is executed, the Secondary ETERNUS Disk storage system is forced to be active. At this stage, if the Primary ETERNUS Disk storage system is connected to servers, both the Primary Storage and the Secondary Storage are caused to be active, possibly leading to data corruption due to access to both the Primary Storage and the Secondary Storage.
- If a recovery can be performed with the procedure described in "9.5 Maintenance", do not execute this function.
- Even if this function is executed, a normal mode failover may be executed depending on the state of the ETERNUS Disk storage system and the state of Primary Storage may become "Standby".

9.4.2.8 Failover/Failback Limited to the Maintenance State

Follow the instructions of your maintenance engineer and perform a failover (Maintenance state only) or a failback (Maintenance state only) using the following procedure only if a manual failover/failback must be performed while the TFO group phase is "Maintenance".

Point

- To perform the procedure in this section, the target storage device and the firmware version must satisfy the following conditions.

Storage Device	Firmware Version
ETERNUS DX S6 series	All versions
ETERNUS DX S5 series ETERNUS DX8900 S4 ETERNUS AF S3 series	V11L40-5000 or later
ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4) ETERNUS AF S2 series ETERNUS AF series	V10L90-1000 or later

- The procedure in this section can be performed for either the Primary Storage or the Secondary Storage.

Note

The procedure in this section has a risk of causing data corruption. Because of that, make sure to carefully follow the instructions of your maintenance engineer.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, click the Name of a target TFO group for which you want to failover or failback.
Information of the selected TFO group is displayed on the Main pane.
5. On the Action pane, click **Advanced Operations**.
The **Failover(Maintenance state only)** and **Failback(Maintenance state only)** are displayed on the Action pane.
6. On the Action pane, click **Failover(Maintenance state only)** or **Failback(Maintenance state only)**.
A warning dialog box is displayed. Check the contents displayed on the warning dialog box.
7. When enabling failover or failback, click **OK**.

9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen

The meaning and action plan of each status for TFO groups that are displayed on the Storage Cluster overview screen are as follows.

Phase

This displays the status of TFO group. The phase varies with the configuration of TFO groups, operation of failover/failback and state of volume synchronization.

Status	Meaning and Action Plan
Initial	Indicates that TFO group is configured but no volume is allocated. Refer to " 9.4.1 Installation " and " 9.4.2 Operation " to continue configuration.
Maintenance	Indicates that copy sessions between TFO port pairs and volumes are forcibly cleared. Perform the following actions: <ul style="list-style-type: none"> - When there is an abnormality in the TFO pair session Refer to "9.4.2.10.2 Session Information of TFO Pairs" and confirm whether there is an abnormality in the TFO pair session. When an abnormality occurs, take action according to the procedure that matches the applicable case described in "9.5 Maintenance". If there is no applicable case, perform the following operations. <ol style="list-style-type: none"> 1. To eliminate the abnormal state of the TFO pair session, perform the procedure in "9.5.8 Releasing TFO Pair" to release the TFO pair. 2. If necessary, eliminate the cause of the abnormal state in the TFO pair session. 3. Perform the procedure in "9.5.9 Recovering TFO Pair" to recover the TFO pair. - When there is a TFOV that is not set with a TFO pair within the TFO group Refer to "9.4.1 Installation" and "9.4.2 Operation" and review the setting status of the applicable TFOV. - When a restore process is executed from Veeam Storage Integration Wait until the restore process is completed. <p>If a failover/failback is performed when the TFO group phase is "Maintenance", note that the integrity of the data may become inconsistent.</p>

Status	Meaning and Action Plan
	In an environment that uses the following storage devices, a failover/failback cannot be performed when the TFO group phase is "Maintenance". If an attempt is made, it results in an error. Take action to recover from the "Maintenance" state. If a failover/failback must be performed for maintenance while the TFO group phase is "Maintenance", contact your maintenance engineer in advance. <ul style="list-style-type: none"> - ETERNUS DX S6 series - ETERNUS DX S5 series, ETERNUS DX8900 S4, or ETERNUS AF S3 series that has firmware version V11L40-5000 or later - ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4), or ETERNUS AF S2 series, AF series that has firmware version V10L90-1000 or later
Copying	Indicates that volumes are being synchronized from the Primary Storage to the Secondary Storage. Wait until the synchronization process is completed.
Normal	Indicates that volume synchronization is completed and failover is ready to be done.
Failovered	Indicates the status immediately after failover is completed. Update after a while.
Copying Back	Indicates that after recovery of the Primary Storage, volumes are being synchronized from the Secondary Storage to the Primary Storage. Wait until the synchronization process is completed.
Failback Ready	Indicates that after recovery of the Primary Storage, the volume synchronization process is completed and failback is ready to be done.
Failbacked	Indicates the status immediately after failback is completed. Update after a while.
Failed	This state indicates that the ETERNUS Disk storage system is down or the REC route is disconnected. During the failover/failback sequence, if this phase is displayed, wait a while before updating.
Attention (*1)	There is a phase inconsistency for the Primary TFO group and the Secondary TFO group. After confirming the Phase column value from the TFO group details screen for both the Primary Storage and the Secondary Storage, follow each direction on this table.
Unknown (*2)	Trouble with network is causing status update to fail. A disk storage switched due to a failure becomes "Unknown" because status update is sure to fail. Refer to " 9.4.2.2 Updating TFO Group Status " to update the status of TFO group.

*1: This is only displayed on the Storage Cluster overview screen.

*2: For the "Unknown" status, because a common meaning is shown in all the columns, the meaning is omitted in the columns that follow.

Status

This displays whether TFO group status is normal or error.

Status	Meaning and Action Plan
Halt	Indicates that there is a fault in TFO group. Refer to " Halt Factor " in " 9.4.2.10.1 TFO Group Information " to take action.
Normal	Indicates that TFO group is in normal status. No action is required.
Disruption (*1)	There is a phase inconsistency for the Primary TFO group and the Secondary TFO group. After confirming the Status column value from the TFO group details screen for both the Primary Storage and the Secondary Storage, follow each direction on this table.

*1: This is only displayed on the Storage Cluster overview screen.

TFO Mode

This displays the operational configuration of the TFO group. This item is displayed only for Group A devices in "[Table 9.1 Relationship between the Storage Device and the Operable TFO Group Configuration](#)".

Status	Meaning
Active-Active	Indicates that the TFO group is operated with the Active-Active configuration.
Active-Standby	Indicates that the TFO group is operated with the Active-Standby configuration.

Active/Standby

This displays whether the disk storage is connected to the server (active side) or not connected to the server (standby side).

Status	Meaning
Active	Indicates that the disk storage is currently connected to a server (active side).
Standby	Indicates that the disk storage is not connected to a server (standby side).

9.4.2.10 Confirming the Status on the TFO Group Details Screen

9.4.2.10.1 TFO Group Information

The meaning and action plan of each status for the TFO group details screen are as follows.

Active/Standby

The same statuses as the **Active/Standby** column of the Storage Cluster overview screen are displayed. Refer to "[Active/Standby](#)" in "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)"

Phase

The same statuses as the **Phase** column of the Storage Cluster overview screen are displayed. Refer to "[Phase](#)" in "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)"

Status

The same statuses as the **Status** column of the Storage Cluster overview screen are displayed. Refer to "[Status](#)" in "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)"

TFO Mode

The same statuses as the **TFO Mode** column of the Storage Cluster overview screen are displayed. Refer to "[TFO Mode](#)" in "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)"

Halt Factor

If there is any error in TFO group, its cause is displayed.

Status	Meaning and Action Plan
None	Indicates that TFO group is in normal status. No action is required.
TFO Group Disconnected	Indicates that the path to a destination device is blocked or the device is not started. Remove the factor of path blockage or start the destination device.
Version Mismatch	Indicates that a destination device does not support Storage Cluster function or the firmware version does not support Storage Cluster. If the firmware is not up-to-date, update the firmware.
TFO Group Setting Missing	TFO group settings of a destination device are not found. Refer to " 9.4.1 Installation " and " 9.4.2 Operation " to review the settings or reconfigure.
TFO Group Setting Mismatch	Indicates that data transfer of Storage Cluster is disabled at all the RA ports of the Secondary Storage or there are some inconsistencies in TFO group settings at a destination device. Take either of the following actions: <ul style="list-style-type: none"> - Review the port parameters for the Secondary Storage. - Refer to "9.4.1 Installation" and "9.4.2 Operation" to review the TFO group settings or reconfigure.

Status	Meaning and Action Plan
Monitoring Server Disconnected	Indicates that the path to Storage Cluster Controller is blocked or Storage Cluster Controller is not started. This status is displayed only when Storage Cluster Controller is set up. Take either of the following actions: <ul style="list-style-type: none"> - Review the communication path between Storage Cluster Controller and ETERNUS Disk storage system. - Refer to "9.6 Storage Cluster Controller" to review the settings or reconfigure.

Note

When any status other than those above is displayed, perform the following operations:

- After a while, perform "[9.4.2.2 Updating TFO Group Status](#)".
- Refer to "[9.4.1 Installation](#)" and "[9.4.2 Operation](#)" to review the settings or reconfigure.

If the problem is not solved, record the displayed status and contact Fujitsu Technical Support.

9.4.2.10.2 Session Information of TFO Pairs

The session information of the TFO pair is displayed in the **Volume** tab of the TFO group details screen. The meaning and action plan of each status are as follows.

Session status of volumes

Status	Meaning and Action Plan
Active	Volume synchronization is operating normally. No action is required.
Error Suspend	Volume synchronization is suspended due to an error. Refer to " 9.4.1 Installation " and " 9.4.2 Operation " to review the settings or reconfigure, or take action according to the procedure that matches the applicable case described in " 9.5 Maintenance ".
Suspend	Volume synchronization is suspended. The Standby side storage may be down. Check the state of the Standby side storage and perform the following actions. <ul style="list-style-type: none"> - When the Standby side storage is recoverable After recovering the storage, perform the following operations. <ol style="list-style-type: none"> 1. To eliminate the abnormal state of the TFO pair session, perform the procedure in "9.5.8 Releasing TFO Pair" to release the TFO pair. 2. Perform the procedure in "9.5.9 Recovering TFO Pair" to recover the TFO pair. - When a replacement of the Standby side storage is required Perform the procedure in "9.5.1 ETERNUS Disk Storage System Fault" to recover the Standby side storage.
Halt	Volume synchronization is in an abnormal state. Refer to " Halt Factor " in " 9.4.2.10.1 TFO Group Information " to take action.

Session phase of volumes

Status	Meaning and Action Plan
Copying	A volume is being synchronized from the Primary Storage to the Secondary Storage. Wait until the synchronization process is completed.
Equivalent	<ul style="list-style-type: none"> - When the session status of the volume is "Active" <p>The synchronization process of the volume is completed and the equivalency maintenance state is continued. No action is required.</p>

Status	Meaning and Action Plan
	<ul style="list-style-type: none"> - When the session status of the volume is not "Active" <p>The integrity of the data may be inconsistent. Refer to "Meaning and Action Plan" for the displayed status and perform the corrective action.</p>

9.5 Maintenance

This section describes the maintenance procedure for the Storage Cluster environment. This section, for the purpose of convenience, defines and explains the following names.

Defined Names Used in Explanation in This Section	Meaning of Defined Names
ETERNUS-A	Primary Storage
ETERNUS-B	Secondary Storage
ETERNUS-C	ETERNUS Disk storage system prepares to restructure the Storage Cluster environment after the Primary Storage or the Secondary Storage is removed

Point

- The TFO group status is automatically updated. Re-check it after waiting for a while or manually updating the TFO group status by referring to the following sections when the status which is different from the procedure is displayed.
 - When operating a TFO group with the Active-Active configuration: "[9.3.2.3 Updating TFO Group Status](#)"
 - When operating a TFO group with the Active-Standby configuration: "[9.4.2.2 Updating TFO Group Status](#)"
- Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used in the procedure.
- For the Advanced Copy maintenance contents when operating AdvancedCopy Manager, refer to "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" and "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)".

When the AdvancedCopy Manager Copy Control Module function is in use, refer to "Command References" in the *AdvancedCopy Manager Operation Guide for Copy Control Module* for information on the commands.

When the AdvancedCopy Manager replication management function is in use, refer to "Command References" in the *AdvancedCopy Manager Operation Guide* for information on the commands.

Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function

Maintenance Contents	Type of Copy Being Executed		
	OPC/QuickOPC	SnapOPC+	EC/REC
(a) Stopping the copy session	Confirm the copy session with the acopc query command and stop the copy session with the acopc cancel command. When using QuickOPC, specify the -force option for the acopc cancel command.	Confirm the copy session with the acsnap query command and stop the copy session with the acsnap cancel command.	Confirm the copy session with the acec query command and stop the copy session with the acec cancel command.
(b) Stopping copy sessions when the TFO status is in "Standby"	With the accopy query command, confirm the copy session in the ETERNUS Disk storage system where the TFO status is in "Standby". After that, stop the copy session with the accopy fcancel command.		

Maintenance Contents	Type of Copy Being Executed		
	OPC/QuickOPC	SnapOPC+	EC/REC
(c) Deleting AdvancedCopy Manager environment settings	Delete copy pairs with the <code>acpair remove</code> command.		
(d) Configuring the AdvancedCopy Manager environment	Add copy pairs with the <code>acpair add</code> command.		
(e) Starting a copy session	<ul style="list-style-type: none"> - When using OPC Start the copy session with the <code>acopc start</code> command. - When using QuickOPC Start the copy session with the <code>acopc start</code> command by specifying the <code>-auto</code> option. 	Start the copy session with the <code>acsnap start</code> command.	Start the copy session with the <code>acec start</code> command. <ul style="list-style-type: none"> - When using the Storage Cluster Continuous Copy function and when the copy session exists in the ETERNUS Disk storage system where the TFO status is in "Active", suspend EC temporarily with the <code>acec suspend</code> command and restart EC with the <code>acec resume</code> command.
(f) Checking the status of the copy session	Confirm the status of the copy session and recovery the copy session by referring to "When Recovering Storage Cluster Continuous Copy Function" in the <i>AdvancedCopy Manager Operation Guide for Copy Control Module</i> .		
(g) Stopping management service	Stop the management service with the <code>acservice stop</code> command.		

Table 9.12 When Using AdvancedCopy Manager Replication Management Function

Maintenance Contents	Type of Copy Being Executed		
	OPC/QuickOPC	SnapOPC+	EC/REC
(a) Stopping the copy session	Confirm the copy session with the <code>swsrpstat</code> command and stop the copy session with the <code>swsrpcancel</code> command.		
(b) Stopping copy sessions when the TFO status is in "Standby"	In the Management Server, confirm the copy session with the <code>accopy query</code> command and stop the copy session with the <code>accopy fcancel</code> command. The replication management function commands cannot execute for the storage device where the TFO status is in "Standby". For this reason, use the AdvancedCopy Manager Copy Control function commands only when stopping the copy session in the storage device where the TFO status is in "Standby".		
(c) Deleting AdvancedCopy Manager environment settings	Delete the replication volume information with the <code>swsrpdelv</code> command. When the copy session exists in the ETERNUS Disk storage system where the TFO status is in "Active", delete the replication volume information with the <code>swsrpdelv</code> command by specifying the <code>-e</code> option.		
(d) Configuring the AdvancedCopy Manager environment	Configure the AdvancedCopy Manager environment with the <code>swsrpsetvol</code> command.		

Maintenance Contents	Type of Copy Being Executed		
	OPC/QuickOPC	SnapOPC+	EC/REC
(e) Starting a copy session	<ul style="list-style-type: none"> - When using OPC Start the copy session with the swsrpmake command. - When using QuickOPC Start the copy session with the swsrpmake command by specifying the -T option. 	Start the copy session with the swsrpmake command by specifying the -C option or the -P option.	Start the copy session with the swsrpstartsync command. <ul style="list-style-type: none"> - When using the Storage Cluster Continuous Copy function and when the copy session exists in the ETERNUS Disk storage system where the TFO status in "Active", suspend EC temporarily with the swsrpmake command and restart EC with the swsrpstartsync command.
(f) Checking the status of the copy session	Confirm the status of the copy session and recovery the copy session by referring to "When Recovering Storage Cluster Continuous Copy Function" in the <i>AdvancedCopy Manager Operation Guide for Copy Control Module</i> .		

- When recovering, the initial copy takes place between the pair volumes. For an estimate of the initial copy required time, refer to the following sections.
 - When operating a TFO group with the Active-Active configuration: "[Table 9.9 Time Required for Initial Copy \(Standard Value of 1 TB Physical Capacity Volume\)](#)"
 - When operating a TFO group with the Active-Standby configuration: "[Table 9.10 Time Required for Initial Copy \(Standard Value of 1 TB Physical Capacity Volume\)](#)"
- In an environment that uses the following storage devices, if a failover/failback must be performed while the TFO group phase is "Maintenance", contact your maintenance engineer in advance.
 - ETERNUS DX S6 series
 - ETERNUS DX S5 series, ETERNUS DX8900 S4, or ETERNUS AF S3 series that has firmware version V11L40-5000 or later
 - ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4), or ETERNUS AF S2 series, AF series that has firmware version V10L90-1000 or later

9.5.1 ETERNUS Disk Storage System Fault

If such a trouble as requires storage device replacement occurs and an ETERNUS Disk storage system should be replaced, deconstruct the Storage Cluster environment by deleting TFO groups.

This section describes the maintenance procedure for replacing the ETERNUS Disk storage system for each cabinet.



See

For the execution method of "Manual Failover" that is described in this section, refer to the following.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.7 Manual Failover/Failback](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.6 Manual Failover/Failback](#)"

When replacing Primary Storage

1. If there is a TFO group that satisfies all the following conditions when ETERNUS-A fails, perform a Manual Failover to ETERNUS-B for that TFO group.
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-A side is "Active".
 - The Failover mode is "Manual".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. Remove the fiber channel cable connected to the CA port of ETERNUS-A. For iSCSI connection environments, remove the LAN cable.
3. If ETERNUS-A is being operated using the AdvancedCopy Manager Copy Control Module function, stop the management service of AdvancedCopy Manger CCM. Refer to "(g) Stopping management service" of "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" for the stop procedure of the management service.
4. Perform the procedure in "[9.5.12 Temporarily Deleting the Storage Cluster Environment for Recovery](#)" to delete all of the TFO groups.

When TFO groups are operated with the Active-Standby configuration in FC connection environments, in order to take over the logical WWPN/WWNN set in ETERNUS-B, check the **WWPN Handover** checkbox and delete all of the TFO groups.

When TFO groups are operated with the Active-Standby configuration in iSCSI connection environments or when TFO groups are operated with the Active-Active configuration, the **WWPN Handover** checkbox is displayed but grayed out.

Note

Do not reconnect ETERNUS-A after deleting the TFO group set in ETERNUS-B in this step. When TFO groups are operated with the Active-Standby configuration in FC connection environments, there is a possibility that data corruption may occur due to WWPN/WWNN duplication. For iSCSI connection environments, there is a possibility that data corruption may occur due to duplication of the iSCSI IP address.

5. Remove ETERNUS-A.
6. In ETERNUS-C, create the same business volume as ETERNUS-A that is in the process of being removed. At this time, do not hard wire the business server and ETERNUS-C.
7. Configure the Storage Cluster environment with ETERNUS-B as the Primary Storage and ETERNUS-C as the Secondary Storage.

For iSCSI connection environments, be sure to configure the CA port of ETERNUS-C after configuring a TFO group.
8. Connect the fiber channel disconnected in Step 2 to the CA port of ETERNUS-C and hard wire the connection to the business server. For iSCSI connection environments, connect the LAN cable and hard wire the connection to the business server.
9. After confirming that the phases of all of the TFO groups of ETERNUS-B are "Normal", perform a Manual Failover by selecting all of the TFO groups.
10. Remove the fiber channel cable connected to the CA port of ETERNUS-B. For iSCSI connection environments, remove the LAN cable.
11. Perform the procedure in "[9.5.12 Temporarily Deleting the Storage Cluster Environment for Recovery](#)" to delete all of the TFO groups.

When TFO groups are operated with the Active-Standby configuration in FC connection environments, in order to take over the logical WWPN/WWNN set in ETERNUS-C, check the **WWPN Handover** checkbox and delete all of the TFO groups.

When TFO groups are operated with the Active-Standby configuration in iSCSI connection environments or when

TFO groups are operated with the Active-Active configuration, the **WWPN Handover** checkbox is displayed but grayed out.

12. Configure the Storage Cluster environment with ETERNUS-B as the Secondary Storage and ETERNUS-C as the Primary Storage.
For iSCSI connection environments, be sure to configure the CA port of ETERNUS-B after configuring a TFO group.
13. Reconnect the business server to ETERNUS-B which was disconnected in Step 10.
An initial copy from ETERNUS-C to ETERNUS-B is completed, and it returns to former state of the operation.
14. When operating AdvancedCopy Manager, configure the AdvancedCopy Manager environment.
Refer to "(d) Configuring the AdvancedCopy Manager environment" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the configuration procedure.

When replacing Secondary Storage

1. Delete ETERNUS-B from the product and remove it so that it is not managed.
2. If ETERNUS-B is being operated using the AdvancedCopy Manager Copy Control Module function, stop the management service of AdvancedCopy Manger CCM.
Refer to "(g) Stopping management service" of "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" for the stop procedure of the management service.
3. Perform the procedure in "[9.5.12 Temporarily Deleting the Storage Cluster Environment for Recovery](#)" to delete all the TFO groups.
4. Register ETERNUS-C to the product as the new Secondary Storage.
5. Reconstruct the Storage Cluster environment by using ETERNUS-A and ETERNUS-C.
6. When operating AdvancedCopy Manager, configure the AdvancedCopy Manager environment.
Refer to "(d) Configuring the AdvancedCopy Manager environment" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the configuration procedure.



See

Execute Steps 4 and 5 in the Secondary Storage, referring to the following sections.

- When operating a TFO group with the Active-Active configuration: "[When adding Secondary Storage where only Primary Storage is used](#)" in "[9.2.1 Work Flow in Active-Active Configuration](#)"
- When operating a TFO group with the Active-Standby configuration: "[When adding Secondary Storage where only Primary Storage is used](#)" in "[9.2.2 Work Flow in Active-Standby Configuration](#)"

9.5.2 RAID Failure

Check on the following conditions whether any RAID failure is occurring in the Primary Storage or the Secondary Storage:

- The device status is not "Normal", and
- The RAID group status is "Broken".

This section describes the maintenance procedure when a RAID failure occurs.



See

For the execution method of "Manual Failover" and "Manual Failback" that are described in this section, refer to the following.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.7 Manual Failover/Failback"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.6 Manual Failover/Failback"](#)

When RAID failure of Primary Storage occurred

1. If there is a TFO group that satisfies all the following conditions when the RAID failure of ETERNUS-A occurs, perform a Manual Failover to ETERNUS-B for that TFO group.
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-A side is "Active".
 - The Failover mode is "Manual".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. If the Failback mode is operating in "Auto", as it is necessary to perform Failback after confirming the copy session status, change this to "Manual".
3. When operating AdvancedCopy Manager, stop the volume copy session belonging to the failed RAID. Refer to "(a) Stopping the copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session stop procedure. Additionally, if the copy session in ETERNUS-A is not stopped as a result of checking the copy session status, stop only the copy session in ETERNUS-A. When using the Storage Cluster Continuous Copy function and when Automatic Failover has been performed, it is possible to just stop copy sessions on the volume of ETERNUS-A. For the procedure for stopping the copy sessions of ETERNUS-A, refer to "(b) Stopping copy sessions when the TFO status is in "Standby" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#).
4. For ETERNUS-A, perform the procedure in ["9.5.8 Releasing TFO Pair"](#) to release the TFO pair.
5. Maintain the RAID of ETERNUS-A.
6. For ETERNUS-A, perform the procedure in ["9.5.9 Recovering TFO Pair"](#) to recover the TFO pair.
7. Wait for the initial copy from ETERNUS-B to ETERNUS-A to complete. After confirming that all the following conditions are satisfied, proceed to the next step.
 - On the Storage Cluster overview screen, the TFO group phase is "Failback Ready".
 - On the Storage Cluster TFO group details screen, the session status of the TFO pair is "Active" and the session phase is "Equivalent".

After checking that the TFO group phase is "Maintenance" on the Storage Cluster overview screen, refer to the following sections and perform the necessary corrective actions.

- When operating a TFO group with the Active-Active configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)



For details of the TFO group status, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)

For details of the TFO pair session information, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.11 Confirming the Status on the TFO Group Details Screen](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.10 Confirming the Status on the TFO Group Details Screen](#)"

-
8. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session start procedure.
 9. Check that the copy session status matches between ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.
 10. Perform a Manual Failback.
 11. If the Failback mode is changed to "Manual" in Step 2, change to "Auto".

When RAID failure of Secondary Storage occurred

1. If there is a TFO group that satisfies either of the following conditions when the RAID failure of ETERNUS-B occurs, perform a Manual Failback to ETERNUS-A for that TFO group.
 - Condition 1
 - The TFO group is operated with the Active-Active configuration.
 - The TFOG Role of the ETERNUS-B side is "Local".
 - Condition 2
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-B side is "Active".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. When operating AdvancedCopy Manager, stop the volume copy session belonging to the failed RAID.
Refer to "(a) Stopping the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
Additionally, if the copy session in ETERNUS-B is not stopped as a result of checking the copy session status, stop only the copy session in ETERNUS-B. When using the Storage Cluster Continuous Copy function and when the Manual Failback has not been performed in Step 1, it is possible to just stop copy sessions on the volume of ETERNUS-B.
For the procedure for stopping the copy sessions of ETERNUS-B, refer to "(b) Stopping copy sessions when the TFO status is in "Standby" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)".
3. For ETERNUS-B, perform the procedure in "[9.5.8 Releasing TFO Pair](#)" to release the TFO pair.
4. Maintain the RAID of ETERNUS-B.
5. For ETERNUS-B, perform the procedure in "[9.5.9 Recovering TFO Pair](#)" to recover the TFO pair.
6. Wait for the copy from ETERNUS-A to ETERNUS-B to complete.
After confirming that all the following conditions are satisfied, proceed to the next step.
 - On the Storage Cluster overview screen, the TFO group phase is "Normal".
 - On the Storage Cluster TFO group details screen, the session status of the TFO pair is "Active" and the session phase is "Equivalent".

After checking that the TFO group phase is "Maintenance" on the Storage Cluster overview screen, refer to the following sections and perform the necessary corrective actions.

- When operating a TFO group with the Active-Active configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)



See

For details of the TFO group status, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)

For details of the TFO pair session information, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.11 Confirming the Status on the TFO Group Details Screen"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.10 Confirming the Status on the TFO Group Details Screen"](#).

7. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session start procedure.
8. Check that the copy session status matches between ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session status confirmation procedure.

9.5.3 RAID Close

Check on the following conditions whether any RAID close is occurring in the Primary Storage or the Secondary Storage:

- The device status is not "Normal", and
- The RAID group status is "No Disk Path".

This section describes the maintenance procedure when a RAID close occurs.



See

For the execution method of "Manual Failover" and "Manual Failback" that are described in this section, refer to the following.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.7 Manual Failover/Failback"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.6 Manual Failover/Failback"](#)

When RAID close of Primary Storage occurred

1. If there is a TFO group that satisfies all the following conditions when the RAID close of ETERNUS-A occurs, perform a Manual Failover to ETERNUS-B for that TFO group.
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-A side is "Active".

- The Failover mode is "Manual".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. If the Failback mode is operating in "Auto", as it is necessary to perform Failback after confirming the copy session status, change this to "Manual".
3. When operating AdvancedCopy Manager, stop the copy sessions on the volume to which the closed RAID belongs.
Refer to "(a) Stopping the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
Additionally, if the copy session in ETERNUS-A is not stopped as a result of checking the copy session status, stop only the copy session in ETERNUS-A. When using the Storage Cluster Continuous Copy function and when the fail over has not been performed in Step 1, it is possible to just stop copy sessions on the volume of ETERNUS-A. For the procedure for stopping the copy sessions of ETERNUS-A, refer to "(b) Stopping copy sessions when the TFO status is in "Standby" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)".
4. For ETERNUS-A, perform the procedure in "[9.5.8 Releasing TFO Pair](#)" to release the TFO pair.
5. Maintain the RAID of ETERNUS-A.
6. For ETERNUS-A, perform the procedure in "[9.5.9 Recovering TFO Pair](#)" to recover the TFO pair.
7. Wait for the copy from ETERNUS-B to ETERNUS-A to complete.
After confirming that all the following conditions are satisfied, proceed to the next step.

- On the Storage Cluster overview screen, the TFO group phase is "Failback Ready".
- On the Storage Cluster TFO group details screen, the session status of the TFO pair is "Active" and the session phase is "Equivalent".

After checking that the TFO group phase is "Maintenance" on the Storage Cluster overview screen, refer to the following sections and perform the necessary corrective actions.

- When operating a TFO group with the Active-Active configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"
- When operating a TFO group with the Active-Standby configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)"

 See

.....
For details of the TFO group status, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)"

For details of the TFO pair session information, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.11 Confirming the Status on the TFO Group Details Screen](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.10 Confirming the Status on the TFO Group Details Screen](#)"

-
8. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session start procedure.

9. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.
10. Perform a Manual Failback.
11. If the Failback mode is changed to "Manual" in Step 2, change to "Auto".

When RAID close of Secondary Storage occurred

1. If there is a TFO group that satisfies either of the following conditions when the RAID close of ETERNUS-B occurs, perform a Manual Failback to ETERNUS-A for that TFO group.
 - Condition 1
 - The TFO group is operated with the Active-Active configuration.
 - The TFOG Role of the ETERNUS-B side is "Local".
 - Condition 2
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-B side is "Active".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. When operating AdvancedCopy Manager, stop the copy sessions on the volume to which the closed RAID belongs.
Refer to "(a) Stopping the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
Additionally, if the copy session in ETERNUS-B is not stopped as a result of checking the copy session status, stop only the copy session in ETERNUS-B. When using the Storage Cluster Continuous Copy function and when the Manual Failback has not been performed in Step 1, it is possible to just stop copy sessions on the volume of ETERNUS-B.
For the procedure for stopping the copy sessions of ETERNUS-B, refer to "(b) Stopping copy sessions when the TFO status is in "Standby" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)".
3. For ETERNUS-B, perform the procedure in "[9.5.8 Releasing TFO Pair](#)" to release the TFO pair.
4. Maintain the RAID of ETERNUS-B.
5. For ETERNUS-B, perform the procedure in "[9.5.9 Recovering TFO Pair](#)" to recover the TFO pair.
6. Wait for the copy from ETERNUS-A to ETERNUS-B to complete.
After confirming that all the following conditions are satisfied, proceed to the next step.
 - On the Storage Cluster overview screen, the TFO group phase is "Normal".
 - On the Storage Cluster TFO group details screen, the session status of the TFO pair is "Active" and the session phase is "Equivalent".

After checking that the TFO group phase is "Maintenance" on the Storage Cluster overview screen, refer to the following sections and perform the necessary corrective actions.

- When operating a TFO group with the Active-Active configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"
- When operating a TFO group with the Active-Standby configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)"



For details of the TFO group status, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen](#)"

For details of the TFO pair session information, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.11 Confirming the Status on the TFO Group Details Screen](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.10 Confirming the Status on the TFO Group Details Screen](#)"

7. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session start procedure.
8. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.

9.5.4 CA Port Linkdown

Check on the following conditions whether any failure is occurring in the CA ports belonging to the Primary TFO group due to CA port failure or connection failure during an operation with a TFO status of is "Active":

- The status of the port in the storage device is "Error", or
- The SNMP Trap notifying that a CA port of the storage device to which Primary TFO group belongs is linked down is displayed in the event log and the dashboard of Web Console.

This section describes the maintenance procedure when a CA port is linked down.



For the execution method of "Manual Failover" and "Manual Failback" that are described in this section, refer to the following.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.7 Manual Failover/Failback](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.6 Manual Failover/Failback](#)"

When using the Automatic Failover function triggered by CA Port Linkdown

If there is a TFO group that satisfies either of the following conditions when all the CA ports belonging to the Primary TFO group are linked down, Automatic Failover is performed.

- Condition 1
 - The TFO group is operated with the Active-Active configuration.
 - The TFOG Role of the Primary TFO group is "Local".
- Condition 2
 - The TFO group is operated with the Active-Standby configuration.

- The TFO status of the Primary TFO group is "Active".

Recover the environment according to the following procedure:

1. From the Storage Cluster overview screen of Web Console, check that the TFO group phase is "Failback Ready".
2. Maintain the CA port to recover the CA Port.
3. Perform a Manual Failback.

Note

If you perform a Manual Failback without recovering a closed CA port, Automatic Failover may be performed and business I/O may be stopped. For this reason, after maintaining the CA port, perform a Manual Failback.

See

For details of the Automatic Failover function triggered by CA Port Linkdown, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: "[Configuring TFO Group](#)" in "[9.3.1 Installation](#)".
- When operating a TFO group with the Active-Standby configuration: "[Configuring TFO Group](#)" in "[9.4.1 Installation](#)".

When not using the Automatic Failover function triggered by CA Port Linkdown

If all the CA ports belonging to the Primary TFO group are linked down during an operation with a TFO status of is "Active", Automatic Failover is not performed. Recover the environment according to the following procedure:

1. If the Failback mode is operating in "Auto", as it is necessary to perform Failback after recovering the closed CA ports, change this to "Manual".
2. Perform a Manual Failover. Upon completion of the failover, from the Storage Cluster overview screen of Web Console, check that the TFO group phase is "Failback Ready".
3. Maintain the CA port to recover the CA Port.
4. Perform a Manual Failback.
5. If the Failback mode is changed to "Manual" in Step 1, change to "Auto".

9.5.5 Bad Sectors

Check on the following conditions whether any bad sectors are occurring in the Primary Storage or the Secondary Storage:

- The following message is displayed in Overview of the ETERNUS Web GUI:

```
Bad Sector has occurred. Please check the details by the volume navigation.
```

The bad sector areas are recovered by performing the procedure described in "[9.5.9 Recovering TFO Pair](#)".

If the **Status** column on **Volume** tab of the TFO group details screen is set to anything other than "Active", contact a Fujitsu customer engineer.

This section describes the maintenance procedure when a bad sector occurs.

See

For the execution method of "Manual Failover" and "Manual Failback" that are described in this section, refer to the following.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.7 Manual Failover/Failback](#)"

- When operating a TFO group with the Active-Standby configuration: ["9.4.2.6 Manual Failover/Failback"](#)
-

When bad sector occurs in Primary Storage copy source

1. If there is a TFO group that satisfies either of the following conditions when a bad sector in ETERNUS-A occurs, perform a Manual Failover to ETERNUS-B for that TFO group.
 - Condition 1
 - The TFO group is operated with the Active-Active configuration.
 - The TFOG Role of the ETERNUS-A side is "Local".
 - Condition 2
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-A side is "Active".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. If the Failback mode is operating in "Auto", as it is necessary to perform Failback after confirming the copy session status, change this to "Manual".
3. When operating AdvancedCopy Manager, stop the copy session on volumes that have bad sectors. Refer to "(a) Stopping the copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session stop procedure. Additionally, if the copy session in ETERNUS-A is not stopped as a result of checking the copy session status, stop only the copy session in ETERNUS-A. When using the Storage Cluster Continuous Copy function, it is possible to just stop copy sessions on the volume of ETERNUS-A. For the procedure for stopping the copy sessions of ETERNUS-A, refer to "(b) Stopping copy sessions when the TFO status is in "Standby" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#).
4. For ETERNUS-A, perform the procedure in ["9.5.8 Releasing TFO Pair"](#) to release the TFO pair.
5. For ETERNUS-A, perform the procedure in ["9.5.9 Recovering TFO Pair"](#) to recover the TFO pair.
6. Wait for the copy from ETERNUS-B to ETERNUS-A to complete. After confirming that all the following conditions are satisfied, proceed to the next step.
 - On the Storage Cluster overview screen, the TFO group phase is "Failback Ready".
 - On the Storage Cluster TFO group details screen, the session status of the TFO pair is "Active" and the session phase is "Equivalent".

After checking that the TFO group phase is "Maintenance" on the Storage Cluster overview screen, refer to the following sections and perform the necessary corrective actions.

- When operating a TFO group with the Active-Active configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)



For details of the TFO group status, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)

For details of the TFO pair session information, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.11 Confirming the Status on the TFO Group Details Screen](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.10 Confirming the Status on the TFO Group Details Screen](#)".

-
7. Delete the bad sector information for the target LUN from the ETERNUS Web GUI.
 8. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session start procedure.
 9. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.
 10. Perform a Manual Failback.
 11. If the Failback mode is changed to "Manual" in Step 2, change to "Auto".

When bad sector occurs in Secondary Storage copy source

1. If there is a TFO group that satisfies either of the following conditions when a bad sector in ETERNUS-B occurs, perform a Manual Failback to ETERNUS-A for that TFO group.
 - Condition 1
 - The TFO group is operated with the Active-Active configuration.
 - The TFOG Role of the ETERNUS-B side is "Local".
 - Condition 2
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-B side is "Active".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. When operating AdvancedCopy Manager, stop the copy session on volumes on which there are bad sectors.
Refer to "(a) Stopping the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
Additionally, if the copy session in ETERNUS-B is not stopped as a result of checking the copy session status, stop only the copy session in ETERNUS-B. When using the Storage Cluster Continuous Copy function, it is possible to just stop copy sessions on the volume of ETERNUS-B.
For the procedure for stopping the copy sessions of ETERNUS-B, refer to "(b) Stopping copy sessions when the TFO status is in "Standby" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)".
3. For ETERNUS-B, perform the procedure in "[9.5.8 Releasing TFO Pair](#)" to release the TFO pair.
4. For ETERNUS-B, perform the procedure in "[9.5.9 Recovering TFO Pair](#)" to recover the TFO pair.
5. Wait for the copy from ETERNUS-A to ETERNUS-B to complete.
After confirming that all the following conditions are satisfied, proceed to the next step.
 - On the Storage Cluster overview screen, the TFO group phase is "Normal".
 - On the Storage Cluster TFO group details screen, the session status of the TFO pair is "Active" and the session phase is "Equivalent".

After checking that the TFO group phase is "Maintenance" on the Storage Cluster overview screen, refer to the following sections and perform the necessary corrective actions.

- When operating a TFO group with the Active-Active configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: "Meaning and Action Plan" for "Maintenance" in the "Phase" table of ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)



For details of the TFO group status, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)

For details of the TFO pair session information, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.11 Confirming the Status on the TFO Group Details Screen"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.10 Confirming the Status on the TFO Group Details Screen"](#).

6. Delete the bad sector information for the target LUN from the ETERNUS Web GUI.
7. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session start procedure.
8. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session status confirmation procedure.

9.5.6 When the Session Status of the TFO Pair is Error Suspend

If an event other than a RAID failure, RAID close, CA port Linkdown, or bad sectors occurs and the session status of the TFO pair becomes "Error Suspend", perform a recovery with this procedure.

Check the following conditions to determine whether the session status of the TFO pair is "Error Suspend".

- The TFO group phase is "Maintenance".
- The volume session information is "Error Suspend" in the TFO pair session information.



For details of the TFO group status, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.10 Confirming the Status on the Storage Cluster Overview Screen"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.9 Confirming the Status on the Storage Cluster Overview Screen"](#)

For details of the TFO pair session information, refer to the following sections.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.11 Confirming the Status on the TFO Group Details Screen"](#)
- When operating a TFO group with the Active-Standby configuration: ["9.4.2.10 Confirming the Status on the TFO Group Details Screen"](#).

For the execution method of "Manual Failover" and "Manual Failback" that are described in this section, refer to the following.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.7 Manual Failover/Failback"](#)
 - When operating a TFO group with the Active-Standby configuration: ["9.4.2.6 Manual Failover/Failback"](#)
-

When the session status of the TFO pair in the Primary Storage becomes error suspend due to an event

1. If there is a TFO group that satisfies all the following conditions when the session status of the TFO pair in ETERNUS-A becomes "Error Suspend", perform a Manual Failover to ETERNUS-B for that TFO group.
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-A side is "Active".
 - The Failover mode is "Manual".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. If the Failback mode is operating in "Auto", as it is necessary to perform Failback after confirming the copy session status, change this to "Manual".
3. When operating AdvancedCopy Manager, stop the copy session of the volume whose TFO pair session becomes "Error Suspend".
 Refer to "(a) Stopping the copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session stop procedure.
 Additionally, if the copy session in ETERNUS-A is not stopped as a result of checking the copy session status, stop only the copy session in ETERNUS-A. When using the Storage Cluster Continuous Copy function and when the fail over has not been performed in Step 1, it is possible to just stop copy sessions on the volume of ETERNUS-A. For the procedure for stopping the copy sessions of ETERNUS-A, refer to "(b) Stopping copy sessions when the TFO status is in "Standby" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#).
4. For ETERNUS-A, perform the procedure in ["9.5.8 Releasing TFO Pair"](#) to release the TFO pair.
5. Depending on the phenomenon, maintain ETERNUS-A.
6. For ETERNUS-A, perform the procedure in ["9.5.9 Recovering TFO Pair"](#) to recover the TFO pair.
7. Wait for the copy from ETERNUS-B to ETERNUS-A to complete.
 After confirming that all the following conditions are satisfied, proceed to the next step.
 - On the Storage Cluster overview screen, the TFO group phase is "Failback Ready".
 - On the Storage Cluster TFO group details screen, the session status of the TFO pair is "Active" and the session phase is "Equivalent".

After checking that the TFO group phase is "Maintenance" on the Storage Cluster overview screen, check the TFO pair session information and resolve the problem events of the TFO pair sessions that are not in the "Active" status.

8. When operating AdvancedCopy Manager, start the copy session.
 Refer to "(e) Starting a copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session start procedure.
9. Check that the copy session status matches between ETERNUS-A and ETERNUS-B.
 Refer to "(f) Checking the status of the copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#).

Control Module Function" or in "Table 9.12 When Using AdvancedCopy Manager Replication Management Function" for the copy session status confirmation procedure.

10. Perform a Manual Failback.
11. If the Failback mode is changed to "Manual" in Step 2, change to "Auto".

When the session status of the TFO pair in the Secondary Storage becomes error suspend due to an event

1. If there is a TFO group that satisfies either of the following conditions when the session status of the TFO pair in ETERNUS-B becomes "Error Suspend", perform a Manual Failback to ETERNUS-A for that TFO group.
 - Condition 1
 - The TFO group is operated with the Active-Active configuration.
 - The TFOG Role of the ETERNUS-B side is "Local".
 - Condition 2
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-B side is "Active".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. When operating AdvancedCopy Manager, stop the copy session of the volume whose TFO pair session becomes "Error Suspend".

Refer to "(a) Stopping the copy session" in "Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function" or in "Table 9.12 When Using AdvancedCopy Manager Replication Management Function" for the copy session stop procedure.

Additionally, if the copy session in ETERNUS-B is not stopped as a result of checking the copy session status, stop only the copy session in ETERNUS-B. When using the Storage Cluster Continuous Copy function and when the Manual Failback has not been performed in Step 1, it is possible to just stop copy sessions on the volume of ETERNUS-B.

For the procedure for stopping the copy sessions of ETERNUS-B, refer to "(b) Stopping copy sessions when the TFO status is in "Standby" in "Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function" or "Table 9.12 When Using AdvancedCopy Manager Replication Management Function".

3. For ETERNUS-B, perform the procedure in "9.5.8 Releasing TFO Pair" to release the TFO pair.
4. Depending on the phenomenon, maintain ETERNUS-B.
5. For ETERNUS-B, perform the procedure in "9.5.9 Recovering TFO Pair" to recover the TFO pair.

6. Wait for the copy from ETERNUS-A to ETERNUS-B to complete.

After confirming that all the following conditions are satisfied, proceed to the next step.

- On the Storage Cluster overview screen, the TFO group phase is "Normal".
- On the Storage Cluster TFO group details screen, the session status of the TFO pair is "Active" and the session phase is "Equivalent".

After checking that the TFO group phase is "Maintenance" on the Storage Cluster overview screen, check the TFO pair session information and resolve the problem events of the TFO pair sessions that are not in the "Active" status.

7. When operating AdvancedCopy Manager, start the copy session.

Refer to "(e) Starting a copy session" in "Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function" or in "Table 9.12 When Using AdvancedCopy Manager Replication Management Function" for the copy session start procedure.

8. Check that the copy session status matches between ETERNUS-A and ETERNUS-B.

Refer to "(f) Checking the status of the copy session" in "Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function" or in "Table 9.12 When Using AdvancedCopy Manager Replication Management Function" for the copy session status confirmation procedure.

9.5.7 Single-system Operation

This section describes the maintenance procedure when running temporarily with a single system, such as when updating the firmware version.



See

.....
For the execution method of "Manual Failover" and "Manual Failback" that are described in this section, refer to the following.

- When operating a TFO group with the Active-Active configuration: ["9.3.2.7 Manual Failover/Failback"](#)
 - When operating a TFO group with the Active-Standby configuration: ["9.4.2.6 Manual Failover/Failback"](#)
-

When maintaining the Primary Storage

1. Change to "Manual" when operating the Failback mode in "Auto".
2. If there is a TFO group that satisfies either of the following conditions when maintaining ETERNUS-A, perform a Manual Failover to ETERNUS-B for that TFO group.
 - Condition 1
 - The TFO group is operated with the Active-Active configuration.
 - The TFOG Role of the ETERNUS-A side is "Local".
 - Condition 2
 - The TFO group is operated with the Active-Standby configuration.
 - The TFO status of the ETERNUS-A side is "Active".

This procedure is not required for TFO groups that do not satisfy the above conditions.

3. Maintain ETERNUS-A.
When stopping ETERNUS-A and when ETERNUS-A is being operated using the AdvancedCopy Manager Copy Control Module function, stop ETERNUS-A first and then stop the management service of AdvancedCopy Manager CCM.
Refer to "(g) Stopping management service" of ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) for the stop procedure of the management service.
4. Check that the TFO group operating status is "Failback Ready".
5. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in ["Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.12 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session status confirmation procedure.
6. Perform a Manual Failback.
7. If the Failback mode is changed to "Manual" in Step 1, change to "Auto".

When maintaining the Secondary Storage

1. If there is a TFO group that satisfies either of the following conditions when maintaining ETERNUS-B, perform a Manual Failback to ETERNUS-A for that TFO group.
 - Condition 1
 - The TFO group is operated with the Active-Active configuration.
 - The TFOG Role of the ETERNUS-B side is "Local".
 - Condition 2
 - The TFO group is operated with the Active-Standby configuration.

- The TFO status of the ETERNUS-B side is "Active".

This procedure is not required for TFO groups that do not satisfy the above conditions.

2. Maintain ETERNUS-B.
When stopping ETERNUS-B and when ETERNUS-A is being operated using the AdvancedCopy Manager Copy Control Module function, stop ETERNUS-B first and then stop the management service of AdvancedCopy Manager CCM.
Refer to "(g) Stopping management service" of "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" for the stop procedure of the management service.
3. Check that the TFO group operating status is "Normal".
4. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.

When updating the firmware version

1. Change to "Manual" when operating the Failback mode in "Auto".
2. Perform a Manual Failover to ETERNUS-B for all of the Primary TFO groups of ETERNUS-A.
3. Restart ETERNUS-A after applying the firmware to ETERNUS-A.
4. Perform a Manual Failback to ETERNUS-A for all of the Secondary TFO groups of ETERNUS-B.
5. Perform a Manual Failover to ETERNUS-A for all of the Primary TFO groups of ETERNUS-B.
6. Restart ETERNUS-B after applying the firmware to ETERNUS-B.
7. Perform a Manual Failback to ETERNUS-B for all of the Secondary TFO groups of ETERNUS-A.
8. If the Failback mode is changed to "Manual" in Step 1, change to "Auto".

9.5.8 Releasing TFO Pair

The operation to release a TFO pair is used for maintenance work when a RAID failure, a RAID close, or a bad sector occurs, or when the session status of the TFO pair becomes "Error Suspend".

After releasing the TFO pair to stop synchronization between volumes, perform a maintenance.

The procedure to release a TFO pair is as follows. This operation can be performed from both the Primary Storage and the Secondary Storage.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, click the Name of a target TFO group.
The TFO group details screen is displayed on the Main pane.
5. On the Main pane, click the **Volume** tab.
The information for pairs of local volume and remote volume is displayed.
6. After checking the target volume checkbox to be released the TFO pair, click **Release Pair** under **TFOV** on the Action pane.
The information confirmation screen is displayed.
7. After checking the displayed information, click **Release**.

Point

Release the TFO pairs of all TFOVs that belong to the failed RAID group so that the RAID group can be maintained.

9.5.9 Recovering TFO Pair

As with the operation to release a TFO pair, the operation to recover a TFO pair is used for maintenance work when a RAID failure, a RAID close, or a bad sector occurs, or when the session status of the TFO pair becomes "Error Suspend". After resolving the incident, recover the TFO pair to restart the synchronization of the volumes.

Point

Recover the TFO pairs of all TFOVs that belong to the failed RAID group. By recovering the TFO pairs, a synchronization between the paired volumes are performed with the initial copy. For the time required for an initial copy, refer to the following tables.

- When operating a TFO group with the Active-Active configuration: "[Table 9.9 Time Required for Initial Copy \(Standard Value of 1 TB Physical Capacity Volume\)](#)"
- When operating a TFO group with the Active-Standby configuration: "[Table 9.10 Time Required for Initial Copy \(Standard Value of 1 TB Physical Capacity Volume\)](#)"

Note

Synchronization with initial copy are performed from volumes of copy source storage device to volumes of copy destination storage device.

For the TFO group with the Active-Active configuration, the storage device side that the TFOG Role is "Local" is copy source and the storage device side that the TFOG Role is "Remote" is copy destination.

For the TFO group with the Active-Standby configuration, the storage device side that the TFO status is "Active" is copy source and the storage device side that the TFO status is "Standby" is copy destination.

Before performing the work in this section, confirm that the direction of the initial copy is correct.

The procedure to recover a TFO pair is as follows. This operation can be performed from both the Primary Storage and the Secondary Storage.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
4. On the Main pane, click the Name of a target TFO group.
The TFO group details screen is displayed on the Main pane.
5. On the Main pane, click the **Volume** tab.
The information for pairs of local volume and remote volume is displayed.
6. After checking the target volume checkbox to be recovered the TFO pair, click **Recover Pair** under **TFOV** on the Action pane.
The information confirmation screen is displayed.
7. After checking the displayed information, click **Recover**.

9.5.10 Changing the TFO Group Settings

This section describes the maintenance procedure for changing the operation mode or port pair for the set TFO group.

1. To delete all the port pairs that are already set and add new port pairs, check the status of the TFO group whose settings are to be changed.

When operating a TFO group with the Active-Active configuration, confirm that the value of the **TFOG Role** column for the Primary Storage is "Local" and the value of the **TFOG Role** column of the Secondary Storage is "Remote".

When operating a TFO group with the Active-Standby configuration, confirm that the value of the **Active/Standby** column for the Primary Storage is "Active" and the value of the **Active/Standby** column of the Secondary Storage is "Standby".

Note

For the operation in the TFO group Configuration screen that is described in Step 8, if all the port pairs that are already set are deleted at the same time as adding new port pairs, this product reconfigures the TFO group after the TFO group settings are temporarily deleted. Temporarily deleting the TFO group interrupts the synchronization between the Primary/Secondary Storage devices, and reconfiguring the TFO group starts an initial copy from the Primary Storage to the Secondary Storage.

When this initial copy is executed, the data of the Secondary Storage is rewritten to the data of the Primary Storage and if the work in this section is performed while the Secondary Storage is copy source, data corruption of the Secondary Storage may occur.

For the TFO group with the Active-Active configuration, the storage device side that the TFOG Role is "Local" is copy source and the storage device side that the TFOG Role is "Remote" is copy destination.

For the TFO group with the Active-Standby configuration, the storage device side that the TFO status is "Active" is copy source and the storage device side that the TFO status is "Standby" is copy destination.

2. When deleting all the port pairs that are already set and adding new port pairs and when operating AdvancedCopy Manager, stop the copy session of volumes that belong to the TFO group to be changed. Refer to "(a) Stopping the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
3. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
4. On the Main pane, click the Name of a target ETERNUS Disk storage system.
5. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster function. Additionally, created TFO groups are displayed on the Main pane.
6. After selecting a TFO group for which you want to change the setting on the Main pane, click **Set** under **TFO Group** on the Action pane.
The TFO Group Configuration Wizard screen is displayed.
7. The Selection screen for ETERNUS Disk storage systems and options is displayed.
If you want to change the Failover mode and the Failback mode of the TFO group with the Active-Standby configuration, select the mode to be changed.
On completion of input, click **Next**.
The TFO Group Configuration screen is displayed.

Information

For the TFO group with the Active-Active configuration, the Failover mode cannot be changed.

8. Select from a list of ports for the Primary Storage and the Secondary Storage, one port for each storage to be paired and click **Add**. When deleting, select an unnecessary pair from the Port Pair List table to click **Delete**.

When deleting all the port pairs that are already set and adding new port pairs, after the completion of the change operation, an initial copy is performed from the Primary Storage to the Secondary Storage.

9. On completion of required configuration, click **Next**.
The Setting Confirmation screen is displayed.
10. If the information is correct, click **Set**.
A warning dialog box is displayed.
11. When changing the TFO group settings, click **OK**.
TFO group changes are performed with the set content.
If an initial copy from the Primary Storage to the Secondary Storage is performed, wait until the initial copy is completed. For an estimate of the initial copy required time, refer to the following tables.
 - When operating a TFO group with the Active-Active configuration: "[Table 9.9 Time Required for Initial Copy \(Standard Value of 1 TB Physical Capacity Volume\)](#)"
 - When operating a TFO group with the Active-Standby configuration: "[Table 9.10 Time Required for Initial Copy \(Standard Value of 1 TB Physical Capacity Volume\)](#)"
12. When deleting all the port pairs that are already set and adding new port pairs and when operating AdvancedCopy Manager, start a copy session.
Refer to "(e) Starting a copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session start procedure.
13. Check that the copy session status matches between the Primary Storage and the Secondary Storage.
Refer to "(f) Checking the status of the copy session" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.

9.5.11 Changing iSCSI IP Address

The procedure to change the iSCSI IP address when using Storage Cluster for iSCSI connection environments varies depending on the target box and the status of the iSCSI IP address setting in both boxes before and after the change.

Table 9.13 Work Required When the iSCSI IP Address Is Changed

Box for Changing iSCSI IP Address	Status of iSCSI IP Address Both Boxes Before Change	Status of iSCSI IP Address Both Boxes After Change	Required Additional Work for Changing iSCSI IP Address
Both boxes	Matched	Matches	Work 1
		Does not match	Work 1 and Work 2
	Mismatched	Matches	Work 1
		Does not match	Work 1 and Work 2
Primary Storage only	Matched	Does not match	Work 1
	Mismatched	Matches	Work 1
		Does not match	Work 1
Secondary Storage only	Matched	Does not match	Work 2
	Mismatched	Matches	None
		Does not match	Work 2

Work 1 and Work 2 listed in the above table are as follows. When both are required, perform in the order of Work 1 and then Work 2.

Work 1

Check whether the business server recognizes the post-change iSCSI IP address on the Primary Storage.

If it is not recognized, make the business server recognize the iSCSI IP address of the Primary Storage after the change.

Work 2

Take the following steps:

1. Refer to "[9.4.2.6 Manual Failover/Failback](#)" to perform a Manual Failover.
2. Make the business server recognize the iSCSI IP address of the Secondary Storage after the change.
3. Refer to "[9.4.2.6 Manual Failover/Failback](#)" to perform a Manual Failback.



See

Refer to "Change FC/iSCSI/SAS Port Settings" in the *Web Console Guide* for information on how to change the iSCSI IP address of CA ports.

9.5.12 Temporarily Deleting the Storage Cluster Environment for Recovery

When temporarily deleting the Storage Cluster environment for maintenance work, delete the TFO groups. Deleting TFO groups clears the Storage Cluster operation, clearing the synchronization of volumes, too.

When a TFO group is operated with the Active-Standby configuration in FC connection environments and when removing the Primary Storage after failover to the Secondary Storage, the Storage Cluster operation must be canceled and the logical WWPN/WWNN set for the ports to the Secondary Storage must not be canceled but inherited. At that stage, specify **WWPN Handover** in Step 6.



Note

If the work in this section is performed when a TFO group is operated with the Active-Standby configuration, the WWPN/WWNN of the CA port in both the Primary Storage and the Secondary Storage has the same status. If the CA port of both devices become "Active" in that state, a conflict occurs with the WWPN/WWNN and a data corruption may occur. Because of that, observe the following for the work in this section.

- Do not perform the work in this section while the Primary Storage is connected.
- For iSCSI connection environments, after confirming that one of the following conditions is satisfied, perform the work in this section.
 - The storage device in the standby side or the storage device to be replaced is not connected to SAN.
 - The iSCSI IP address of the iSCSI port is not a duplicate in the same network.

The procedure to temporarily delete TFO groups for recovery is as follows.

1. When operating AdvancedCopy Manager, stop the copy session and delete the AdvancedCopy Manager environment.
Refer to "(a) Stopping the copy session" and "(c) Deleting AdvancedCopy Manager environment settings" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
2. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
3. On the Main pane, click the Name of a target ETERNUS Disk storage system.
4. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
5. Select the target TFO groups on the Main pane and click **Delete** under **TFO Group** on the Action pane.
The TFO Group Deletion Wizard screen is displayed.
6. The Option Selection/Confirmation screen is displayed.
When TFO groups are operated with the Active-Standby configuration in FC connection environments, check the

WWPN Handover checkbox.

When TFO groups are operated with the Active-Standby configuration in iSCSI connection environments or when TFO groups are operated with the Active-Active configuration, the **WWPN Handover** checkbox is displayed but grayed out.

7. Click **Delete**.

When TFO groups are operated with the Active-Standby configuration in FC connection environments, on completion of deletion, make sure on the FC Port List screen that WWPN is inherited. The procedure is as follows:

When TFO groups are operated with the Active-Standby configuration in iSCSI connection environments or when TFO groups are operated with the Active-Active configuration, the values set to the ports are kept as they are and no confirmation is required.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of the ETERNUS Disk storage system specified as the Secondary Storage for Storage Cluster.
3. On the Category pane, click **Connectivity**.
A list of port types is displayed on the Main pane.
4. On the Main pane, click **No. of Ports** whose type is FC.
A list of FC ports is displayed on the Main pane. When a value is displayed in the **Logical WWPN** column and the **TFO Status** column is "-" (hyphen), that port inherited the logical WWPN/WWNN when TFO group was deleted.

9.5.13 Deleting the Storage Cluster Environment When the Storage Cluster Operation Is Completed



If the work in this section is performed, the business server cannot connect to the storage and the business volume between the Primary Storage and Secondary Storage is out of sync. Perform the work after confirming that there are no problems with the completion of the operations that use the Storage Cluster function and that there are no problems even if the transactions for the business volume are stopped to perform the work.

To delete the Storage Cluster environment, perform the following procedure.

1. [Deleting Access Path](#)
2. [Deleting Business Volumes from Storage Cluster Environment](#)
3. [Deleting TFO Groups](#)
4. [Changing REC Path Configuration](#)
5. [Changing Port Configuration](#)

Deleting Access Path

For both the Primary Storage and the Secondary Storage, delete the access path using Web Console or the `storageadm zone` command.

Deleting Business Volumes from Storage Cluster Environment

Delete all the business volumes that are used by the Storage Cluster environment. Refer to the following sections for information on how to delete them.

- When operating a TFO group with the Active-Active configuration: "[9.3.2.4 Adding and Deleting Business Volume](#)"
- When operating a TFO group with the Active-Standby configuration: "[9.4.2.3 Adding and Deleting Business Volume](#)"

Deleting TFO Groups

After confirming that no TFO pair is registered in the TFO groups, use Web Console to delete all the TFO groups.

Note

- Do not specify **WWPN Handover** in Step 6.
- For iSCSI connection environments, after confirming that one of the following conditions is satisfied, perform the procedure.
 - The storage device in the standby side is not connected to SAN.
 - The iSCSI IP address of the iSCSI port is not a duplicate in the same network.

The procedure for deleting TFO groups is as follows.

1. When operating AdvancedCopy Manager, stop the copy session and delete the AdvancedCopy Manager environment.
Refer to "(a) Stopping the copy session" and "(c) Deleting AdvancedCopy Manager environment settings" in "[Table 9.11 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.12 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
2. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
3. On the Main pane, click the Name of a target ETERNUS Disk storage system.
4. On the Category pane, click **Storage Cluster**.
Created TFO groups are displayed on the Main pane.
5. Select the target TFO groups on the Main pane and click **Delete** under **TFO Group** on the Action pane.
The TFO Group Deletion Wizard screen is displayed.
6. The Option Selection/Confirmation screen is displayed.
When TFO groups are operated with the Active-Standby configuration in FC connection environments, do not check the **WWPN Handover** checkbox.
When TFO groups are operated with the Active-Standby configuration in iSCSI connection environments or when TFO groups are operated with the Active-Active configuration, the **WWPN Handover** checkbox is displayed but grayed out.
7. Click **Delete**.

When TFO groups are operated with the Active-Standby configuration in FC connection environments, on completion of deletion, make sure on the FC Port List screen that WWPN is inherited. The procedure is as follows:

When TFO groups are operated with the Active-Standby configuration in iSCSI connection environments or when TFO groups are operated with the Active-Active configuration, the values set to the ports are kept as they are and no confirmation is required.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of the ETERNUS Disk storage system specified as the Secondary Storage for Storage Cluster.
3. On the Category pane, click **Connectivity**.
A list of port types is displayed on the Main pane.
4. On the Main pane, click **No. of Ports** whose type is FC.
A list of FC ports is displayed on the Main pane. When both the **Logical WWPN** column and the **TFO Status** column are "-" (hyphen), the logical WWPN/WWNN is not inherited by those ports when the TFO group is deleted.

Changing REC Path Configuration

If necessary, use Web Console to change the REC path configuration that is being used by the Storage Cluster environment.

Changing Port Configuration

If necessary, use Web Console to change the port (the port for connecting to the business server and the port for the REC path) configuration that is being used by the Storage Cluster environment.

9.6 Storage Cluster Controller

This section describes Storage Cluster Controller.

9.6.1 Provided Function

Storage Cluster Controller performs the following services as parts of Storage Cruiser's agent functions:

- Monitor the life of ETERNUS Disk storage systems.
- Display monitored status.

9.6.2 Installation Steps

The following is a description of the procedure to install Storage Cluster Controller.

Install in the following steps:

1. [Setting up Device to Be Monitored](#)
2. [Enabling Monitoring Function of Storage Cluster Controller](#)
3. [Restarting Agent](#)
4. [Checking Monitored Status](#)

Setting up Device to Be Monitored

Configure in the TFOConfig.ini file the information for a monitored ETERNUS Disk storage system.

Refer to "[A.12 TFOConfig.ini Parameter](#)" for the configuration method.

Refer to "Upper Limit of Monitoring Function of Storage Cluster Controller" in the *Installation and Setup Guide* for the monitoring conditions of the Storage Cluster Controller.

Enabling Monitoring Function of Storage Cluster Controller

Edit the Correlation.ini file to enable the monitoring function of Storage Cluster Controller.

Refer to "[A.6 Correlation.ini Parameter](#)" for the configuration method.

Restarting Agent

To reflect settings, restart agent.

Checking Monitored Status

Use the [agtpatrol](#) command to check the status of a monitored ETERNUS Disk storage system.

If no entry of a monitored ETERNUS Disk storage system is output in the command execution result, refer to NOTE in [agtpatrol](#) command.

9.6.3 Operation Procedure

The following is a description of the procedure for operations performed when the Storage Cluster Controller is in use.

- Add and delete a monitored device.
- Change the IP address of a monitored device.

9.6.3.1 Add and Delete Monitored Device

Add and delete a monitored device in the following steps:

1. [Editing TFOConfig.ini File](#)
2. [Restarting Agent](#)
3. [Checking Monitored Status](#)

Editing TFOConfig.ini File

Edit the TFOConfig.ini file as follows:

- Add a monitored device
Add the information for a monitored ETERNUS Disk storage system.
- Delete a monitored device
Delete the information for an ETERNUS Disk storage system excluded from monitored targets.

Refer to "[A.12 TFOConfig.ini Parameter](#)" for the editing method.

Restarting Agent

To reflect settings, restart agent.

Checking Monitored Status

Use the [agtpatrol](#) command to check the status of a monitored ETERNUS Disk storage system. Check the following matters:

- When adding:
The entry of an added ETERNUS Disk storage system is displayed in the command execution result.
- When deleting:
The entry of a deleted ETERNUS Disk storage system is not displayed in the command execution result.

9.6.3.2 Change IP Address of Monitored Device

Change the IP address of a monitored device in the following steps:

1. [Changing IP Address](#)
2. [Editing TFOConfig.ini File](#)
3. [Restarting Agent](#)
4. [Check Monitored Status](#)

Changing IP Address

Change the IP address of monitored devices.

Editing TFOConfig.ini File

Edit the TFOConfig.ini file as follows:

- Delete pre-change ETERNUS Disk storage system information.
- Add post-change ETERNUS Disk storage system information.

Refer to "[A.12 TFOConfig.ini Parameter](#)" for the editing method.

Restarting Agent

To reflect settings, restart agent.

Check Monitored Status

Use the [agtpatrol](#) command to check the status of a monitored ETERNUS Disk storage system. Check the following matters:

- The entry of pre-IP address changed ETERNUS Disk storage system is not displayed in the command execution result.
- The entry of post-IP address changed ETERNUS Disk storage system is displayed in the command execution result.

Chapter 10 Maintenance of Devices to Be Managed

10.1 Windows Displayed in Event of Fault and Troubleshooting

If a fault occurs on a device, an error description of the fault is output to the event log in Web Console, the device status is also changed to [Error] or [Warning] if the support level of the device is A or B. The criteria of [Error] and [Warning] depends on the device definition. If this product can identify an access path affected by the fault, the access path status is changed to [Error].

For a device whose support level is I, an error description of a fault on the device is not output to the event log. The color of the device status also remains unchanged.

On Web Console, check for faults in the order shown below and take corrective actions as required.

For middleware errors not including server node HBA and multipath faults, only events are reported. To troubleshoot middleware errors, refer to the appropriate middleware manuals.

If ETERNUS Disk Storage System Is in [Error] or [Warning] State

1. On the global navigation tab, click **Storage**.
2. On the Main pane in the disk storage system overview screen, click the target name.
3. On the Main pane in the disk storage system details screen, click the target name.
4. The Maintenance screen for the ETERNUS Disk storage system is started. Find the failed component in the ETERNUS Disk storage system.
For replacement of failed components, contact a Fujitsu customer engineer.

To view the status of CE, DE, ports and disks in the ETERNUS Disk storage system, click **Component** in the Category pane of Web Console.

For devices that do not support automatic updates of the device component status, after performing the **Reload Conf.** operation for the ETERNUS Disk storage system, check the status.

For devices that support automatic updates of the device component status, you do not need to perform the **Reload Conf.** operation. For devices that support automatic updates of the device component status, refer to "[2.5 Monitoring Device Component Status](#)".

Refer to "[9.5 Maintenance](#)" when the Storage Cluster function is in use.

If Tape Library Is in [Error] or [Warning] State

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Tape Library**.
3. On the Main pane in the manually embedded tape library overview screen, click the target name.
4. On the Main pane in the tape library details screen, click the target name.
5. The Maintenance screen for the tape library is started. Find the failed component in the tape library.
For replacement of failed components, contact a Fujitsu customer engineer.

If Manually Embedded Disk Storage System Is in [Error] or [Warning] State

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Disk Array(Manual)**.
3. On the Main pane in the manually embedded disk storage system overview screen, click the target name.
4. On the Main pane in the manually embedded disk storage system details screen, click the target name.
5. The Maintenance screen for the disk storage system is started. Find the failed component in the disk storage system.
For replacement of failed components, contact a Fujitsu customer engineer.

When replacing adapters (CA), refer to "If the adapter (CA) of manually embedded disk storage system and manually embedded tape library is replaced" in "[10.3.3 Replacing Faulty Components of Manually Embedded Device](#)". Moreover, the replacement of failed components, contact a Fujitsu customer engineer as required.

If Manually Embedded Disk Storage System Is in [Unknown] State

- For NetApp FAS Series and FAS Series (with clustered Data ONTAP)

Review network environments and SNMP settings.

If the above action does not solve the fault, check the operation mode of the target device registered on the ETERNUS SF system. If the operation mode is wrong, delete the target device from the ETERNUS SF system once, and re-register it in a proper operation mode. To check operation mode, refer to "Display Storage Device" in the *Web Console Guide*. For operation mode to be registered on the ETERNUS SF system, refer to "[5.2.7 Registering Manually Embedded Device](#)".

- Devices other than those above

Review network environments and SNMP settings.

If Manually Embedded Tape Library Is in [Error] or [Warning] State

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Tape Library(Manual)**.
3. On the Main pane in the manually embedded tape library overview screen, click the target name.
4. On the Main pane in the manually embedded tape library details screen, click the target name.
5. The Maintenance screen for the tape library is started. Find the failed component in the tape library.
For replacement of failed components, contact a Fujitsu customer engineer.

When replacing adapters (CA), refer to "If the adapter (CA) of manually embedded disk storage system and manually embedded tape library is replaced" in "[10.3.3 Replacing Faulty Components of Manually Embedded Device](#)". Moreover, the replacement of failed components, contact a Fujitsu customer engineer.

If Fibre Channel Switch Is in [Error] or [Warning] State

1. On the global navigation tab, click **Network**.
2. On the Main pane in the switch overview screen, click the target name.
3. On the Main pane in the switch details screen, click the target name.
4. The Maintenance screen for the Fibre Channel switch is started. Find the failed component in the Fibre Channel switch.
For replacement of failed components, contact a Fujitsu customer engineer.

If any port is in Error state due to SFP failure, the status of the affected access path is displayed as [Error].

If an access path is defined in the access path settings of this product, the zoning setting of the Fibre Channel switch is defined as WWPN zoning. Therefore, if a Fibre Channel switch port fails, the Fibre Channel cable connected to it can be reconnected to another Fibre Channel switch port, and operation can be restarted.

Also, refer to the following sections as required.

Fibre Channel Switch in Use	Reference Section
Brocade Fibre Channel switch	" Warning for device is displayed " in " B.4.2.1 Brocade Fibre Channel Switch "
VDX series	" Warning for device is displayed " in " B.4.2.2 VDX series "

If Server Node Is in [Error] or [Warning] State

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.

3. Check the physical pathway of the access path with an [Error] state.
If no Error state device is on the route, check if a Fibre Channel cable along the route is disconnected. If you cannot identify the cause, contact a Fujitsu customer engineer.

On the server node where msdsm (the default Windows multipath driver) is set, the server node enters the [Warning] state even if the single path (an access path that does not have a redundancy configuration) exists. This depends on the msdsm specification. Because the information for the access path that corresponds to the [Error] state disappears from the OS, this product cannot be distinguished from a single path. If access path is configured with the single path, disable msdsm.

Also, refer to "[Warning for server node is displayed](#)" in "[B.4.1.1 Common to Server Nodes](#)" as required.

If Access Path Is in [Error] State

If an access path of multipath disk control, follow the procedure below:

1. Obtaining path statuses
Check the current path configuration and status.
2. I/O stop related to a failed access path
3. Replacement of failed components (if necessary) or action for the Error
To replace a failed component, contact a Fujitsu customer engineer.
4. I/O restart of a stopped access path

For an access path not configured using Multipath Disk Control, a job performed with the target used volume is affected. Stop the job and take the appropriate action to resolve the fault. To replace a failed component, contact a Fujitsu customer engineer.

When replacing an HBA, refer to "[10.3.1.1 Host Bus Adapter \(HBA\) Replacement of Server Node](#)".

Point

.....

In the case of an access path configured with multipath disk control, placing the access path offline causes the access path status to be [Error] and may display "Host Agent reports Access Path Status is degraded." as a message of access path failure.

In that case, put the access path back to online, and it returns to its former status.

.....

Actions to Perform after Component Replacement

For devices that do not support automatic updates of the device component status, perform the **Reload Conf.** operation for the device whose component has been replaced to refresh the current device status.

When the device status is recovered by performing a replacement, the device status returns to and is displayed as the "Normal" state.

For devices that support automatic updates of the device component status, you do not need to perform the **Reload Conf.** operation. For devices that support automatic updates of the device component status, refer to "[2.5 Monitoring Device Component Status](#)".

The status of ETERNUS AX/HX series, ETERNUS AB/HB series, NetApp FAS Series, NetApp FAS Series (with clustered Data ONTAP), NetApp AFF series, and devices registered manually is not automatically recovered. On completion of device recovery, use the following procedure to return the device to the "Normal" state:

1. On the Action pane for the manually embedded device, click **Modify** to open the modify screen of the device.
2. Select "Normal" from the **Status** list on the modify screen and click **Modify**.

10.2 Replacing Supported Device

If any device registered on this product has been replaced, even performing the **Reload Conf.** operation to the replaced device does not update to the new device information. Delete the replaced device once on Web Console to register it again.

For procedures required by each device, see the description below.

10.2.1 Replacing Server Node

When replacing a server node for each system, do it according to the operating system.

For Solaris OS

Before discovering a new server node on this product, delete all the access paths to the replaced server node to configure new access paths to the new server node.

For Operating Systems Other than Solaris OS

Use the following procedure to setting the access path:

1. Installing the Agent on the new server

For the new server assign a different IP address from that of the replaced server, then install the Agent.

If a new server cannot be configured with a different IP address from that of the replaced server, delete all the access paths to the replaced server before the new server is detected by this product and then specify new access paths for the new server.

2. Registering the new server to this product

1. On the global navigation tab, click **Server**.

2. On the Action pane, click **Register** under **Server**.

3. Register the new server.

Check that the new server is displayed on the server overview screen.

3. Deleting the access path

1. On the global navigation tab, click **Server**.

2. On the **Server** pane, click **Access Path**.

3. On the Main pane, select the checkbox of the access path set for the HBA on the replaced server.

4. On the Action pane, click **Delete** under **Access Path**.

5. Delete the access path.

On the access path overview screen, check that the access path set for the HBA on the replaced server has been deleted.

4. Adding an access path

1. On the global navigation tab, click **Server**.

2. On the **Server** pane, click **Access Path**.

3. On the Action pane, click **Add (ETERNUS)** under **Access Path**.

4. Register the access path. For access path definition, select the following:

- Port: Port assigned to the new server

- HBA: HBA loaded in the new server

- Affinity Group: Affinity Group assigned to the replaced server

On the access path overview screen, check that the access path using the HBA installed on the new server has been created.

5. Deleting the replaced server from this product
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, select the checkbox of the replaced servers.
 3. On the Action pane, click **Delete** under **Server**.
 4. Delete the replaced server.
On the server overview screen, check that the replaced server has been deleted.

10.2.2 Replacing ETERNUS Disk Storage System

When replacing the ETERNUS Disk storage system, use the following procedure to setting the access path. Refer to "9.5 Maintenance" when the Storage Cluster function is in use.

1. Integrating the configuration information
 1. Ensure that the configuration definition of the new device matches that of the replaced device.
 2. For the new device assign a different IP address from that of the replaced device.
If the new device cannot be configured with a different IP address from that of the replaced device, delete all the access paths to the replaced device before the new device is detected by this product and then specify new access paths for the new device.
2. Registering the new device to this product
 1. On the global navigation tab, click **Storage**.
 2. On the Action pane, click **Register** under **Storage**.
 3. Register the new device.
On the disk storage system overview screen, check that the new device is displayed.
3. Registering the license to the new device
 1. On the global navigation tab, click **Storage**.
 2. On the Main pane, click the new device name.
 3. On the Category pane, click **System**.
 4. On the Main pane, select the target license checkbox.
 5. On the Action pane, click **Register** under **License**.
 6. Register the license.
On the license overview screen, check the license registration status.
4. Deleting the access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Main pane, select the checkbox of the access path set for the replaced device.
 4. On the Action pane, click **Delete** under **Access Path**.
 5. Delete the access path.
On the access path overview screen, check that the access path set for the replaced device has been deleted.
5. Adding an access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Action pane, click **Add (ETERNUS)** under **Access Path**.

4. Register the access path. For access path definition, select the following:
 - Port: Port assigned to the new device
 - HBA: HBA logical connection to the replaced device
 - Affinity Group: Affinity Group that matches the replaced device and to be assigned to the new device

On the access path overview screen, check that the access path using the port assigned to the new device has been created.

6. Deleting the license of the replaced device

1. On the global navigation tab, click **Storage**.
2. On the Main pane, check the replaced device name.
3. On the Category pane, click **System**.
4. On the Main pane, select the target license checkbox.
5. On the Action pane, click **Delete** under **License**.
6. Delete the license.
On the license overview screen, check the license registration status.

7. Deleting the replaced device from this product

1. On the global navigation tab, click **Storage**.
2. On the Main pane, select the replaced device checkbox.
3. On the Action pane, click **Delete** under **Storage**.
4. Delete the replaced device.
On the disk storage system overview screen, check that the replaced device has been deleted.

8. Subsequent operation

The server node must be restarted for server nodes that do not support hot swapping configuration changes after creation of the access path is complete.

On the server nodes that support hot swapping configuration changes, it is necessary to execute commands to perform the hot swapping configuration changes for OS and HBA drivers. For example, when the HBA driver is Fujitsu PCI Fibre Channel, `chgfcctl` or `clchgfc` must be executed.

10.2.3 Replacing Fibre Channel Switch

This section explains the replacement procedure for Fibre Channel switch (hereafter, refer to as switch) registered in this product.

Also, the procedure differs according to pre-replaced and post-replaced switch models and any change in IP address.

- If the pre-replaced and post-replaced switch models and the IP address are the same
 1. Record the settings of threshold monitoring. (if thresholds are monitored)
 2. On completion of device replacement, perform the **Reload Conf.** operation on Web Console.
 3. Based on the settings at step 1, start to monitor thresholds. (if thresholds are monitored)
- If the pre-replaced switch model and the post-replaced switch model are different
 1. Stopping the performance monitoring of the switch to be replaced (when it is not a monitored device, this operation is unnecessary).
If threshold monitoring is also set, stop the threshold monitoring first and then stop the performance monitoring.
 1. On the global navigation tab, click **Network**.
 2. On the Main pane, click the switch to be replaced.

3. On the Category pane, click **Performance**.
 4. On the **Performance** pane, click **Configuration**.
 5. On the Action pane, click **Stop** under **Performance**.
Check that the monitored status of the switch to be replaced is "Stop".
2. Deleting the replaced switch from this product
 1. On the global navigation tab, click **Network**.
 2. On the Main pane, select the checkbox of the replaced switches.
 3. On the Action pane, click **Delete** under **Switch**.
 4. Delete the replaced switch.
On the switch overview screen, check that the replaced switch is not displayed.
 3. Physical replacement of old and new switches
For device replacement, contact a Fujitsu customer engineer and perform the replacement according to the maintenance procedure manual for the device.

When replacing a switch that is not connected in cascade, you may have to manually perform zoning settings again if the switch configuration information (configUpload file) has not been stored. After registering the new switch in this product, perform step 6, "Setting of switch zoning" below. Refer to the manual that comes with this device for the switch configuration information (configUpload file).
 4. Registering a new switch to this product
Refer to "Register FC Switch" in the *Web Console Guide* for information on how to register a switch. Refer to "[5.2.3 Registering Device](#)" for information required when registering a switch.
 5. Refreshing the access path status
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Action pane, click **Refresh** under **Access Path Status**.
On the access path overview screen, check that the access path status has been refreshed.
 6. Setting the switch zoning
Since the zoning information specified for newly replaced switches that are managed by this product does not exist, access paths are displayed as definition inconsistency (Changed). Therefore, manually reset the zoning.

If no zoning is set for replaced switches or switches that are connected in a cascade, zoning resetting is not required.

If there is configuration information (the configUpload file), refer to the maintenance manual for the device.

Note

.....

If the switch zoning information is as follows, the zoning access paths are not displayed regardless of pre- or post-switch replacement.

- Zoning other than HBA to CA access pathway managed by this product (HBA to HBA, CA to CA, HBA to UnknownFC, CA to UnknownFC, UnknownFC to UnknownFC)

Therefore, even after switch replacement, no Warning is displayed against the access path definition inconsistency such as between HBA and CA.

If any zoning other than access path between HBA and CA is configured to a switch to be replaced, use Web Tools or CLI for the switch to configure the zoning.

.....

7. Starting the performance monitoring of the new switch (when it is not a monitored device, this operation is unnecessary).
 1. On the global navigation tab, click **Network**.
 2. On the Main pane, click the target switch name.
 3. On the Category pane, click **Performance**.
 4. On the **Performance** pane, click **Configuration**.
 5. On the Action pane, click **Start** under **Performance**.
Check that the monitored status of the new switch is "Monitoring".

Perform the threshold monitoring setting again once the threshold monitoring setting has been performed.

Note

If the configuration information has been customized, then check the content of the configuration settings file before starting performance monitoring.
Refer to "[A.9 Explanation of Configuration Settings File](#)" for details.

10.2.4 Replacing Manually Embedded Device

When replacing manually embedded device for each device, use the following the procedure provided below to resetting the access path.

1. Registering the new manually embedded device to this product.
 - In the case of manually embedded disk storage system
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Disk Array(Manual)**.
 3. On the Action pane, click **Register** under **Storage**.
 4. Register the new manually embedded disk storage system.
Check that the new manually embedded disk storage system is displayed on the manually embedded disk storage system overview screen.
 - In the case of manually embedded tape library
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Tape Library(Manual)**.
 3. On the Action pane, click **Register** under **Tape Library**.
 4. Register the new manually embedded tape library.
Check that the new manually embedded tape library is displayed on the manually embedded tape library overview screen.
2. Registering a post-replaced adapter (CA) of a manually embedded device.
 - For a manually embedded disk storage system
 1. On the Main pane in the manually embedded disk storage system overview screen, click the target name.
 2. On the **Storage** pane, click **Port**.
 3. On the Action pane, click **Add** under **Port**.
 4. Registration of new port.
Check that the new port is displayed on the port overview screen of the manually embedded disk storage system.

- For a manually embedded tape library
 1. On the Main pane in the manually embedded tape library overview screen, click the target name.
 2. On the **Storage** pane, click **Port**.
 3. On the Action pane, click **Add** under **Port**.
 4. Register the new port.
Check that the new port is displayed on the port overview screen of the manually embedded tape library.

3. Deleting zoning

1. On the global navigation tab, click **Network**.
2. On the Main pane, click the target switch name.
3. On the Category pane, click **Zoning**.
4. On the Main pane, select the checkbox of the WWPN zoning of the replaced device.
5. On the Action pane, click **Delete** under **Zoning**.
6. Delete zoning.
On the zoning overview screen, check that the WWPN zoning of the replaced device has been deleted.



Note

If you are not using "one to one" zoning, ensure that other security settings are not affected.

4. Adding an access path

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Action pane, click **Add (Other)** under **Access Path**.
4. Register the access path. For access path definition, select the following:
 - Port: Port assigned to the new manually embedded device
 - HBA: HBA logical connection to the new manually embedded device

On the zoning overview screen, check that the WWPN zoning of the new manually embedded device has been created.

5. Deleting the replaced device from this product

- For a manually embedded disk storage system
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Disk Array(Manual)**.
 3. On the Main pane, select the checkbox of the manually embedded disk storage system that has been replaced.
 4. On the Action pane, click **Delete** under **Storage**.
 5. Delete the manually embedded disk storage system that has been replaced.
On the manually embedded disk storage system overview screen, check that the manually embedded disk storage system that has been replaced has been deleted.
- For a manually embedded tape library
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Tape Library(Manual)**.

3. On the Main pane, select the checkbox of the replaced manually embedded tape library.
4. On the Action pane, click **Delete** under **Tape Library**.
5. Delete the manually embedded tape library that has been replaced.
On the manually embedded tape library overview screen, check that the manually embedded tape library that has been replaced has been deleted.

6. Subsequent operation

After configuration, restart the server node if it does not support active configuration.

10.2.5 Replacing Storage Cluster Controller

When replacing the Storage Cluster Controller, reinstall Storage Cruiser's agent and reconfigure the Storage Cluster Controller.

Also, if the server to be replaced is managed server of Storage Cruiser, perform "[10.2.1 Replacing Server Node](#)" together.

10.3 Replacing Supported Device Components

The following explains how to replace the components of a supported device managed by this product.

For procedures required by each device, see the description below.

Type of Device	Replacing Faulty Components
Server node	<ul style="list-style-type: none"> - For HBA replacement Perform "10.3.1 Replacing Server Node Components". - For other component replacement Perform the Reload Conf. operation after component replacement.
ETERNUS Disk storage system	Perform the Reload Conf. operation after component replacement. Also, refer to " 10.3.2 Replacing Faulty Components of ETERNUS Disk Storage Systems ".
Fibre Channel switch	Perform the Reload Conf. operation after component replacement.
Manually embedded server node	<ul style="list-style-type: none"> - For HBA replacement Perform "10.3.3 Replacing Faulty Components of Manually Embedded Device". - For other component replacement Perform the Reload Conf. operation after component replacement.
Manually embedded disk storage system Manually embedded tape library	<ul style="list-style-type: none"> - For Adapter (CA) replacement Perform "10.3.3 Replacing Faulty Components of Manually Embedded Device". - For other component replacement Perform the Reload Conf. operation after component replacement.

10.3.1 Replacing Server Node Components

This section describes the procedure required for HBA replacement on the server nodes registered on this product.



- Before executing access path inheritance, select **Network** from the global navigation tab on Web Console, and verify that all Fibre Channel switches cascaded to the Fibre Channel switch related to access path setting are

correctly recognized in the current status. Once an access path is changed in a state where a Fibre Channel switch is temporarily disconnected from the cascade connection, the old cascade connection cannot easily be recovered. In this event, execute `cfgClear` to delete the zoning information for the Fibre Channel temporarily disconnected from the cascade connection. This enables cascade reconnection.

- The basic conditions under which this product can recognize HBA replacement on a server node are as follows:
 - The agent has been installed in the server nodes.
 - HBA is exchanged on a server node same slot (physical port number).
 - The server node is registered in this product.
 - Access path is set to the pre-replaced HBA.
- When inheriting access path to HBA on this product, notice the following points:
 - Zoning configuration should be one-to-one WWPN zoning.

In the environment using the following zoning configuration, access path inheritance is not allowed:

- Port zoning
- World Wide Port Name (WWPN) zone setting not being one-to-one.

If the port zoning is used, change it to one-to-one WWPN zoning temporarily before inheriting the access path to HBA. Refer to "[6.2.6 Managing Fibre Channel Switch That Has Already Set in Port Zoning](#)" for information on the change procedure. Upon completion of the access path inheritance, configure the switch directly to return to the port zoning. After that, delete the WWPN zoning that was set temporarily and perform the **Reload Conf.** operation for the switches and the servers on Web Console.

- The zoning configuration of the following devices is not allowed to be inherited:
 - Tape library unit
 - Other than ETERNUS Disk storage system
- The host number of host registration information is not allowed to be inherited. Host name is allowed to be inherited.
- If inheritance is done toward the access paths for which no zoning is configured, skip zoning creation and perform only host registration and host affinity configuration.
- For access path inheritance in environments that use the FC routing functionality, the settings for the LSAN zone that is required in the FC routing functionality cannot be modified using this product.

Before using access path inheritance, manually modify the required LSAN zone settings on the server nodes, Fibre Channel switches, and storage devices.

- For VMware vSphere, perform either of the following steps after access path inheritance:
 - Reboot the VM host
 - For the HBA in which the access path inheritance is performed, rescan from VMware vCenter Server or VMware vSphere Client.
- When you log in to the device that is registered in this product, such as a switch or a server, and change the access path settings, after the **Reload Conf.** operation is performed for the device to reflect the settings to this product, replace the HBA.
- For the ETERNUS DX S2 series, you must not be logged into ETERNUS Web GUI. Make sure you perform the operation after logging off from ETERNUS Web GUI.

10.3.1.1 Host Bus Adapter (HBA) Replacement of Server Node

When replacing HBA on a server node, do it according to the operating system.

10.3.1.1.1 [For Solaris OS Server Node] Host Bus Adapter (HBA) Replacement

When replacing HBA on a Solaris server node, take the following procedure.

HBA Replacement with Server Node Shut Down

For a server node that does not support the hot system replacement function, turn off the server node in order to replace the HBA. Do not restart or shut down the server node in reconfigure mode during replacement. (This is because the special file name is changed if the `reboot -r` command, `boot -r` command, or other such command is executed.)

1. Shutting down the server node.

Confirm that the `/reconfigure` file does not exist, and shut down the device.

```
# ls /reconfigure
/reconfigure: No such file or directory
```

If the `/reconfigure` file exists, take the following procedure:

- a. To delete the "reconfigure" file, enter the following command.

```
# rm /reconfigure
```

- b. Execute the `ls` command to re-check the presence of the `/reconfigure` file.

- c. Do not reconfigure but shut down.

```
# /usr/sbin/shutdown -y -i0 -g0
```

Re-create the `/reconfigure` file after replacement operation. Afterward, restart the server node.

2. Replacing the HBA

To replace a failed component, contact a Fujitsu customer engineer.

3. Activating the server node

Activate the server node.

No access path, however, is recovered here. This is because the zoning is based on old HBA information is defined on the storage system and Fibre Channel switch.

4. Perform the **Reload Conf.** operation for the server node from this product.

5. Inheriting access paths (resetting security)

Follow the process of "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)" from this product, and define the zoning setting so that the method of access based on the new HBA information can be the same as that for the previous access path of the storage system and Fibre Channel switch.

6. Reactivating the server node

Reboot the server node without reconfiguration (`reboot -r`, `boot -r`, etc. are prohibited.)

```
# /usr/sbin/shutdown -i6
```

The access paths and the paths of Multipath Disk Control are recovered.

HBA Replacement without Shutting Down Server Node

On the server node that supports the hot system replacement function, HBA replacement is allowed without shutting down the server node. Refer to the appropriate device manuals for information on the hot system replacement.

1. HBA replacement without shutting the server node

Refer to the device manual to replace HBA without shutting the server node.

To replace a failed component, contact a Fujitsu customer engineer.

2. Perform the **Reload Conf.** operation for the server node from this product.

3. Inheriting access paths (resetting security)

Follow the process of "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)" from this product, and define the zoning setting so that the method of access based on the new HBA information can be the same as that for the previous access path of the storage system and Fibre Channel switch.

10.3.1.1.2 [For Operating Systems Other than Solaris OS] Host Bus Adapter (HBA) Replacement

When replacing HBA on a other than Solaris server node, take the following procedure.

HBA Replacement with Server Node Shut Down

For a server node that does not support the hot system replacement function, turn off the server node in order to replace the HBA.

1. Shutting down the server node
2. Replacing the HBA
3. Starting the server node

No access path is recovered here. This is because zoning based on old HBA information is defined on the storage and Fibre Channel switch.

4. Perform the **Reload Conf.** operation for the server node from this product.
5. Inheriting access paths (resetting security)

Follow the process of "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)" from this product, and define the zoning setting so that the method of access based on the new HBA information can be the same as that for the previous access path of the storage system and Fibre Channel switch.

6. Reactivating the server node

HBA Replacement without Shutting Down Server Node

On the server node that supports the hot system replacement function, HBA replacement is allowed without shutting down the server node. Refer to the appropriate device manuals for information on the hot system replacement.

1. Replacing the HBA without shutting down the server node

Refer to the device manual to replace HBA without shutting the server node.

To replace a failed component, contact a Fujitsu customer engineer.

2. Perform the **Reload Conf.** operation for the server node from this product.
3. Inheriting access paths (resetting security)

Follow the process of "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)" from this product, and define the zoning setting so that the method of access based on the new HBA information can be the same as that for the previous access path of the storage system and Fibre Channel switch.

10.3.1.2 Access Path Inheritance after HBA Replacement

Inheriting the HBA access path requires that all steps for the target operating system in "[10.3.1.1 Host Bus Adapter \(HBA\) Replacement of Server Node](#)" through "Perform the **Reload Conf.** operation for the server node from this product" be completed. Make sure that preparatory work has been done, and perform proper operation in accordance with the HBA status.

- When the HBA status becomes "Changed"
Perform the operation mentioned in "[10.3.1.2.1 Post-replaced HBA State Is "Changed"](#)".
- When the HBA status does not become "Changed"
Perform the operation mentioned in "[10.3.1.2.2 Post-replaced HBA State Is "Unknown"](#)".

Note

- Whether the HBA status becomes "Changed" or not cannot be determined before the **Reload Conf.** operation is performed from Web Console after HBA replacement.

10.3.1.2.1 Post-replaced HBA State Is "Changed"

In this product, after HBA replacement on an agent installed server node, if the **Reload Conf.** operation is performed for the server node, it recognizes the HBA replacement and changes the HBA state displayed on the server detail screen of the Main pane to "Changed". This is detected when an HBA that has a different WWPN is installed in the same slot (physical port number) of the host.

The procedure for access path inheritance at this time is provided below.

Point

Before performing the procedures below, refer to the Notes in "[10.3.1 Replacing Server Node Components](#)".

1. Checking the inherited HBA state
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, check the server.
 3. On the Main pane, confirm that the HBA state is "Changed".
2. Inheriting access path
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, click the target server name.
 3. On the Main pane, select the checkbox of the HBA whose state is "Changed".
 4. On the Action pane, click **Inherit** under **Access Path**.
3. Checking the access path inheritance
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. Using the HBA of replacement destination, check if the access path has been set.

10.3.1.2.2 Post-replaced HBA State Is "Unknown"

This product may not be able to set the "Changed" state for an HBA. According to the following status, execute this procedure.

HBA Replacement on Manually Embedded Server Node

Refer to "[10.3.3 Replacing Faulty Components of Manually Embedded Device](#)".

In Cases Other than Above

Change access path by following procedure provided below.

If the device requires server node-side settings, the settings must be defined manually.

Point

Before performing the procedures below, refer to the Notes in "[10.3.1 Replacing Server Node Components](#)".

1. Detecting the replaced destination HBA

Reload the configuration of the target server to detect the replaced destination HBA.

1. On the global navigation tab, click **Server**.
2. On the Main pane, select the target server checkbox.
3. On the Action pane, click **Reload Conf.** under **Server**.

2. Checking the replaced destination HBA

1. On the global navigation tab, click **Server**.
2. On the Main pane, click the server name.
3. On the Main pane, check that the HBAs of replacement source and replacement destination are displayed.

3. Changing the access path

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Main pane, select the changed target access path checkbox.
4. On the Action pane, click **Modify** under **Access Path**.
5. Change the setting of access path.

4. Checking the access path changing

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. Using the replaced destination HBA, check whether access path has been set.

5. Subsequent operation

After configuration, restart the server node if it does not support active configuration.

10.3.2 Replacing Faulty Components of ETERNUS Disk Storage Systems

ETERNUS Disk storage systems do not require the access path inheritance because the WWPN is not changed for the replacement of an adapter (CA) etc.

10.3.3 Replacing Faulty Components of Manually Embedded Device

If WWPN is changed because of a faulty component of a manually embedded device such as an HBA or adapter (CA) is replaced, the replacement device is not automatically detected by this product. Perform the following procedures to set the access path after components of the device are exchanged.

If HBA of Manually Embedded Server Node Is Replaced

1. Detecting the replaced destination HBA

Adding the HBA to the target server.

1. On the global navigation tab, click **Server**.
2. On the Main pane, click the target server name.
3. On the Action pane, click **Add** under **HBA**.
4. Register the HBA of replacement destination.

2. Checking the HBA of replacement destination

1. On the global navigation tab, click **Server**.

2. On the Main pane, click the target server name.
 3. On the Main pane, check that the HBAs of pre-replacement and replacement destination are displayed.
3. Changing the access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Main pane, select the target access path checkbox.
 4. On the Action pane, click **Modify** under **Access Path**.
 5. Change the access path settings.
 4. Checking the access path changes
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. For the replaced destination HBA, check if the access path has been set.
 5. Deleting the pre-replacement HBA
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, click the target server name.
 3. On the Main pane, select the checkbox of the pre-replacement HBA.
 4. On the Action pane, click **Delete** under **HBA**.
 5. Delete the pre-replacement HBA.
 6. Subsequent operation

After configuration change, restart any server node if it does not support the hot system replacement function.

If Adapter (CA) of Manually Embedded Disk Storage System and Manually Embedded Tape Library Is Replaced

1. Registering the post-replaced adapter (CA) of manually embedded device
 - For a manually embedded disk storage system
 1. On the manually embedded disk storage system overview screen, click the manually embedded disk storage system name.
 2. On the **Storage** pane, click **Port**.
 3. On the Action pane, click **Add** under **Port**.
 4. Register the new port.
Check that the new port is displayed on the port overview screen of the manually embedded disk storage system.
 - For a manually embedded tape library system
 1. On the manually embedded tape library system overview screen, click the manually embedded tape library system name.
 2. On the **Storage** pane, click **Port**.
 3. On the Action pane, click **Add** under **Port**.
 4. Register the new port.
Check that the new port is displayed on the port overview screen of the manually embedded tape library.

2. Deleting zoning

1. On the global navigation tab, click **Network**.
2. On the Main pane, click the switch name.
3. On the Category pane, click **Zoning**.
4. On the Main pane, select the checkbox of the WWPN zoning of the manually embedded device.
5. On the Action pane, click **Delete** under **Zoning**.
6. Delete zoning.
On the zoning overview screen, check that the WWPN zoning of the manually embedded device has been deleted.



Note

.....
If you are not using "one to one" zoning, ensure that other security settings are not affected.
.....

3. Adding an access path

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Action pane, click **Add (Other)** under **Access Path**.
4. Register the access path. For access path definition, select the following:
 - Port: Port assigned to the new manually embedded device
 - HBA: HBA logical connection to the manually embedded device

On the zoning overview screen, check that the WWPN zoning of the new manually embedded device has been created.

4. Deleting the pre-replacement adapter (CA) of manually embedded device

- For a manually embedded disk storage system
 1. On the manually embedded disk storage system overview screen, click the manually embedded disk storage system name.
 2. On the **Storage** pane, click **Port**.
 3. On the Main pane, select the checkbox of the pre-replacement port.
 4. On the Action pane, click **Delete** under **Port**.
 5. Delete the replaced port.
Check that the new manually embedded tape library is not displayed on the manually embedded tape library overview screen.
- For a manually embedded tape library
 1. On the manually embedded tape library system overview screen, click the manually embedded tape library system name.
 2. On the **Storage** pane, click **Port**.
 3. On the Main pane, select the checkbox of the pre-replacement port.
 4. On the Action pane, click **Delete** under **Port**.
 5. Delete the replaced port.
Check that the replaced port is not displayed on the port overview screen.

5. Subsequent operation

After configuration, restart the server node if it does not support active configuration.

10.4 Adding Supported Device Components

10.4.1 Adding ETERNUS LT270 S2 Extended Cabinet

When adding an extended cabinet for ETERNUS LT270 S2, if a cabinet-through rail is installed, remove the drive in the base cabinet and install it in the extended cabinet. Use the following procedure to change the port of the drive and reconfigure the access path:

1. Deleting zoning

1. On the global navigation tab, click **Network**.
2. On the Main pane, click the switch name.
3. On the Category pane, click **Zoning**.
4. On the Main pane, select the checkbox of the WWPN zoning of the removed drive.
5. On the Action pane, click **Delete** under **Zoning**.
6. Delete zoning.
On the zoning overview screen, check that the WWPN zoning of the removed drive has been deleted.



If you are not using "one to one" zoning, ensure that other security settings are not affected.

2. Deleting the port of the drive

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Tape Library(Manual)**.
The registered tape libraries are displayed on the Main pane.
3. On the Main pane, click the target tape library name.
4. On the Category pane, click **Device**.
The devices registered on the tape library are displayed on the Main pane.
5. On the Main pane, click the target device name.
The details of the device are displayed on the Main pane.
6. On the Main pane, select the checkbox of the port of the target device.
7. On the Action pane, click **Delete** under **Port**.
The information confirmation screen is displayed.
8. Confirm the information, and then click **Delete**.

3. Adding an extended cabinet

Add an extended cabinet for ETERNUS LT270 S2.

4. Adding a port of the drive

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Tape Library(Manual)**.
The registered tape libraries are displayed on the Main pane.
3. On the Main pane, click the target tape library name.

4. On the Category pane, click **Device**.
The devices registered on the tape library are displayed on the Main pane.
5. On the Main pane, click the target device name.
The details of the device are displayed on the Main pane.
6. On the Action pane, click **Add** under **Port**.
7. Enter the necessary information, and then click **Next**.
The information confirmation screen is displayed.
8. Confirm the information, and then click **Add**.

Point

The interface type that allows ports to be added is only FC.

5. Adding an access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Action pane, click **Add (Other)** under **Access Path**.
 4. Register the access path. For access path definition, select the following:
 - HBA: Logically connected to a replaced device.
 - Port: to the drive whose installed position was changed.
 5. Confirm the information on the information confirmation screen, and then click **Add**.
6. Subsequent operation
After configuration, restart the server node if it does not support active configuration.

Chapter 11 Maintenance of Administrative Environment

This chapter explains how to maintain databases, and it describes the appropriate action to take for troubleshooting.

11.1 Maintenance of Manager

11.1.1 Maintenance of Manager

11.1.1.1 Collecting Data for Troubleshooting

If any problem occurs in a system that uses this software, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.1.1.2 Backup of Manager

Back up (save) the environment for the Storage Cruiser's manager if an error has occurred in the Management Server. All of the tasks for backup of Manager are performed in the Management Server.

11.1.1.2.1 Backup of Solaris OS/Linux Manager

Perform the procedure below to save the environment for the Storage Cruiser's manager.



Information

Notation in Procedure:

- "\$BAK_DIR" signifies the backup destination directory.

1. Stop the ETERNUS SF Manager Tomcat Service.

Execute the following shell script to stop the service.

```
# /opt/FJSVesfcm/bin/stop-webservice.sh
```

2. Create the backup data.

- a. Execute the following command to create the backup destination directory.

```
# mkdir -p $BAK_DIR/Common
```

- b. Execute the following command to create the backup data. If you have not changed the port number, specify the default value 15432 to *portNumber*. If you have changed the port number, specify the changed port number to *portNumber*. The file name of the created backup data is *fileName*.

```
# /opt/FJSVesfcm/postgres/bin/pg_dump -U esfpostgres -C --attribute-inserts  
-p portNumber -f $BAK_DIR/Common/fileName esfdb
```

The prompt is displayed, and waiting for input. Input the following strings.

```
master01!
```

3. Execute the following shell script to stop ETERNUS SF Manager services.

```
# /opt/FJSVesfcm/bin/stopesf.sh
```


Information

When the shell script is executed, the message that ETERNUS SF Manager Web Service has been already stopped is displayed many times. Ignore because there is no problem.

4. Back up files related to the performance management function.

This step can be skipped if you are not using the performance management function. A backup is not required if there are no subdirectories or files.

Point

If a large amount of files related to the performance management function exists, calculate the backup time according to the amount of files.

a. Execute the following commands to create the backup destination directories.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/perfconf
# mkdir -p $BAK_DIR/var/opt/FJSVssmgr/current/perf
```

b. Execute the following commands to copy the subdirectories and files to their backup destination directories.

```
# cp -p /etc/opt/FJSVssmgr/current/perf.conf $BAK_DIR/etc/opt/FJSVssmgr/current/
# cp -Rp /etc/opt/FJSVssmgr/current/perfconf/* $BAK_DIR/etc/opt/FJSVssmgr/current/perfconf/
# cp -Rp /var/opt/FJSVssmgr/current/perf/* $BAK_DIR/var/opt/FJSVssmgr/current/perf/
```

5. Back up files related to the capacity management function.

Backup is not required if there are no subdirectories or files.

Point

If a large amount of files that are related to the capacity graph exists, calculate the backup time according to the amount of files.

a. Execute the following commands to create the backup destination directories.

```
# mkdir -p $BAK_DIR/var/opt/FJSVssmgr/current/thinprovisioning
# mkdir -p $BAK_DIR/var/opt/FJSVssmgr/current/flexibletier
# mkdir -p $BAK_DIR/var/opt/FJSVssmgr/current/nas
```

b. Execute the following commands to copy the subdirectories and files to their backup destination directories.

```
# cp -Rp /var/opt/FJSVssmgr/current/thinprovisioning/* $BAK_DIR/var/opt/FJSVssmgr/current/
thinprovisioning/
# cp -Rp /var/opt/FJSVssmgr/current/flexibletier/* $BAK_DIR/var/opt/FJSVssmgr/current/
flexibletier/
# cp -Rp /var/opt/FJSVssmgr/current/nas/* $BAK_DIR/var/opt/FJSVssmgr/current/nas/
```

6. Back up the other files which can be customized.

It is unnecessary to back up the files or the directories which do not exist.

a. Execute the following commands to create the backup destination directories.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/eventmail
```

- b. Execute the following commands to copy the subdirectories and files to their backup destination directories.

```
# cp -p /etc/opt/FJSVssmgr/current/sanma.conf $BAK_DIR/etc/opt/FJSVssmgr/current/  
# cp -p /etc/opt/FJSVssmgr/current/ssmgr.conf $BAK_DIR/etc/opt/FJSVssmgr/current/  
# cp -p /etc/opt/FJSVssmgr/current/trapop.sh $BAK_DIR/etc/opt/FJSVssmgr/current/  
# cp -Rp /etc/opt/FJSVssmgr/current/eventmail/* $BAK_DIR/etc/opt/FJSVssmgr/current/  
eventmail/
```

7. Back up the SNMP Trap XML definition files.

This step can be skipped if you have not customized the SNMP Trap XML definition files.

Below is an example for if the SNMP Trap XML definition file "1_3_6_1_1588_2_1_1_1.xml" has been customized. As shown in this example, back up each customized file one at a time.

- a. Execute the following command to create the backup destination directory.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/snmpth
```

- b. Execute the following command to copy the file to its backup destination directory.

```
# cp -p /etc/opt/FJSVssmgr/current/snmpth/1_3_6_1_1588_2_1_1_1.xml $BAK_DIR/etc/opt/  
FJSVssmgr/current/snmpth/
```

8. Back up the device polling setting files.

This step can be skipped if you have not customized the device polling setting files.

Below is an example for if the device polling setting file "DP_config.xml" has been customized. As shown in this example, back up each customized file one at a time.

- a. Execute the following command to create the backup destination directory.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/devicepolling
```

- b. Execute the following command to copy the file to its backup destination directory.

```
# cp -p /etc/opt/FJSVssmgr/current/devicepolling/DP_config.xml $BAK_DIR/etc/opt/FJSVssmgr/  
current/devicepolling/
```

9. Back up the polling service setting file.

This step can be skipped if you have not customized the polling service setting file. If you have customized the polling service setting file "pollingService.xml", back up this file using the step shown below.

- a. Execute the following command to create the backup destination directory.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/polling
```

- b. Execute the following command to copy the file to its backup destination directory.

```
# cp -p /etc/opt/FJSVssmgr/current/polling/pollingService.xml $BAK_DIR/etc/opt/FJSVssmgr/  
current/polling/
```

10. Back up files related to the definition of copy groups and copy pairs.

This step is required only if you are using the Advanced Copy function.

- a. Execute the following commands to create the backup destination directories.

```
# mkdir -p $BAK_DIR/CCM/etc  
# mkdir -p $BAK_DIR/CCM/etc/db  
# mkdir -p $BAK_DIR/CCM/etc/db/cg  
# mkdir -p $BAK_DIR/CCM/etc/prop  
# mkdir -p $BAK_DIR/CCM/var/micc/database
```

- b. Execute the following commands to copy the subdirectories and files to their backup destination directories.

```
# cp -p /etc/opt/FJSVccm/db/eternus.xml $BAK_DIR/CCM/etc/db
# cp -p /var/opt/FJSVccm/micc/database/DeviceRegList.xml $BAK_DIR/CCM/var/micc/database
# cp -p /etc/opt/FJSVccm/prop/user.properties $BAK_DIR/CCM/etc/prop
# cp -p /etc/opt/FJSVccm/acc/etx/stxc.alias $BAK_DIR/CCM/etc
# cp -p /etc/opt/FJSVccm/acc/etx/stxc_ext.alias $BAK_DIR/CCM/etc
# cp -p /etc/opt/FJSVccm/acc/etx/stxcvolinf $BAK_DIR/CCM/etc
# cp -Rp /etc/opt/FJSVccm/db/cg/* $BAK_DIR/CCM/etc/db/cg
```

11. Back up the license management database.

- a. Execute the following command to create the backup destination directory.

```
# mkdir -p $BAK_DIR/LM
```

- b. Execute the following command. The backup data is created using the file name specified in *fileName*.

```
# /opt/FJSVesflm/bin/esflm backup $BAK_DIR/LM/fileName
```

12. Back up files related to the Reporting function. (for the Reporting function only)

- a. Execute the following commands to create the backup destination directories.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVesfcm/conf/report
# mkdir -p $BAK_DIR/etc/opt/FJSVesfcm/conf/scheduler
# mkdir -p $BAK_DIR/var/opt/FJSVesfcm/report
```

- b. Execute the following commands to copy the subdirectories and files to their backup destination directories.

```
# cp -p /etc/opt/FJSVesfcm/conf/report/* $BAK_DIR/etc/opt/FJSVesfcm/conf/report/
# cp -p /etc/opt/FJSVesfcm/conf/scheduler/* $BAK_DIR/etc/opt/FJSVesfcm/conf/scheduler/
# cp -Rp /var/opt/FJSVesfcm/report/* $BAK_DIR/var/opt/FJSVesfcm/report/
```

13. Back up files related to the Automated Storage Tiering function.

Backup is not required if there are no subdirectories or files.

- a. Execute the following commands to create the backup destination directories.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVssast/data
# mkdir -p $BAK_DIR/var/opt/FJSVssast/data
```

- b. Execute the following commands to copy the subdirectories and files to their backup destination directories.

```
# cp -Rp /etc/opt/FJSVssast/data/* $BAK_DIR/etc/opt/FJSVssast/data/
# cp -Rp /var/opt/FJSVssast/data/* $BAK_DIR/var/opt/FJSVssast/data/
```

14. Back up the Quality of Service Management Option environment. (for the Quality of Service Management Option only)

- a. Execute the following command to create the backup destination directory.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVesfcm/conf/qos
```

- b. Execute the following command to copy the subdirectories and files to its backup destination directory.

```
# cp -p /etc/opt/FJSVesfcm/conf/qos/* $BAK_DIR/etc/opt/FJSVesfcm/conf/qos/
```

15. Execute the following shell script to start the ETERNUS SF Manager services.

```
# /opt/FJSVesfcm/bin/startesf.sh
```

11.1.1.2.2 Backup of Solaris OS/Linux Manager (Cluster Environment)

In a cluster environment, perform the procedure below to save the environment for the Storage Cruiser's manager.

1. Stop all cluster services which the Manager belongs to.

Refer to "Cluster Transaction and Local Transaction" in the *Cluster Environment Setup Guide* for details about cluster transaction.

2. Mount the shared disk on the primary node.

3. Start the ETERNUS SF Manager Postgres service.

Execute the following command to start the ETERNUS SF Manager Postgres service:

- For Solaris environments

```
# /etc/init.d/startSFmanager start-postgres
```

- For Linux environments

```
# /opt/FJSVesfcm/bin/startSFmanager start-postgres
```

4. Perform step 2 and step 4 to 14 of "[11.1.1.2.1 Backup of Solaris OS/Linux Manager](#)" on the primary node.

5. Stop the ETERNUS SF Manager Postgres service.

Execute the following command to stop the ETERNUS SF Manager Postgres service:

- For Solaris environments

```
# /etc/init.d/startSFmanager stop-postgres
```

- For Linux environments

```
# /opt/FJSVesfcm/bin/startSFmanager stop-postgres
```

6. Unmount the shared disk mounted in step 2.

7. Start all cluster transactions which the Manager belongs to.

11.1.1.2.3 Backup of Windows Manager

Perform the procedure below to save the environment for the Storage Cruiser's manager.



Information

Notation in Procedure:

- \$BAK_DIR means the backup destination directory.
- \$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.
- \$ENV_DIR means "Environment Directory" specified at the ETERNUS SF Manager installation.
- \$TMP_DIR means "Work Directory" specified at the ETERNUS SF Manager installation.

1. Stop the ETERNUS SF Manager Tomcat Service.

Open Service Control Manager and stop the following service.

- ETERNUS SF Manager Tomcat Service

2. Create the backup data.

- a. Using Explorer or a similar program, create the following backup destination directory.

- \$BAK_DIR\Common

- b. Execute the following command to create the backup data. If you have not changed the port number, specify the default value 15432 to *portNumber*. If you have changed the port number, specify the changed port number to *portNumber*. The backup data is created with the name specified in *fileName*.

```
> $INS_DIR\Common\sys\postgres\bin\pg_dump -U esfpostgres -C --attribute-inserts
-p portNumber -f $BAK_DIR\Common\fileName esfdb
```

The prompt is displayed, and waiting for input. Input the following strings.

```
master01!
```

3. Execute the following batch to stop the ETERNUS SF Manager services.

```
> $INS_DIR\Common\bin\Stop_ESFservice.bat
```

Information

When the batch is executed, the message that ETERNUS SF Manager Tomcat Service has been already stopped is displayed many times. Ignore because there is no problem.

4. Back up files related to the performance management function.

This step can be skipped if you are not using the performance management function. If there is no subdirectories or files, you do not need to back up.

Point

If a large amount of files related to the performance management function exists, calculate the backup time according to the amount of files.

- a. Using Explorer or a similar program, create the following backup destination directories.
 - \$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current
 - \$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perfconf
 - \$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\perf
- b. Using Explorer or a similar program, copy the following backup source file to its backup destination directory.

Backup Source File	Backup Destination Directory
\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perf.conf	\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current

- c. Using Explorer or a similar program, copy the subdirectories and files under the following backup source directories to their backup destination directories.

Backup Source Directory	Backup Destination Directory
\$TMP_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perfconf	\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perfconf
\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\perf	\$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\perf

5. Back up files related to the capacity management function.

Backup is not required if there are no subdirectories or files.

If a large amount of files that are related to the capacity graph exists, calculate the backup time according to the amount of files.

- a. Using Explorer or a similar program, create the following backup destination directories.
 - \$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\thinprovisioning
 - \$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\flexibletier
 - \$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\nas
- b. Using Explorer or a similar program, copy the subdirectories and files under the following backup source directories to their backup destination directories.

Backup Source Directory	Backup Destination Directory
\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\thinprovisioning	\$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\thinprovisioning
\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\flexibletier	\$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\flexibletier
\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\nas	\$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\nas

6. Back up the other files which can be customized.

It is unnecessary to back up the files or the directories which do not exist.

- a. Using Explorer or a similar program, create the following backup destination directories.
 - \$BAK_DIR\ESC\Manager\opt\FJSVssmgr\bin
 - \$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current
 - \$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\eventmail
- b. Using Explorer or a similar program, copy the following backup source files to their backup destination directory.

Backup Source File	Backup Destination Directory
\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\sanma.conf	\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current
\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\ssmgr.conf	
\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\trapop.bat	

- c. Using Explorer or a similar program, copy the subdirectories and files under the following backup source directory to their backup destination directory.

Backup Source Directory	Backup Destination Directory
\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\eventmail	\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\eventmail

7. Back up the role group configuration file.

This step can be skipped if you have not customized the role group configuration file or if the file does not exist.

- a. Using Explorer or a similar program, create the following backup destination directory.
 - \$BAK_DIR\Common\etc\authentication

- b. Using Explorer or a similar program, copy the file in the following backup source directory to its backup destination directory.

Backup Source Directory	Backup Destination Directory
\$ENV_DIR\Common\etc\authentication	\$BAK_DIR\Common\etc\authentication

8. Back up the SNMP Trap XML definition files.

This step can be skipped if you have not customized the SNMP Trap XML definition files.

Below is an example for if the SNMP Trap XML definition file "1_3_6_1_1588_2_1_1_1.xml" is being customized. As in this example, back up each file one at a time.

- a. Using Explorer or a similar program, create the following backup destination directory.
- \$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\snmpth
- b. Using Explorer or a similar program, copy the following backup source file to its backup destination directory.

Backup Source File	Backup Destination Directory
\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\snmpth\1_3_6_1_1588_2_1_1_1.xml	\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\snmpth

9. Back up the device polling setting files.

This step can be skipped if you have not customized the device polling setting files.

Below is an example for if the device polling setting file "DP_config.xml" is being customized. As in this example, back up each file one at a time.

- a. Using Explorer or a similar program, create the following backup destination directory.
- \$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\devicepolling
- b. Using Explorer or a similar program, copy the following backup source file to its backup destination directory.

Backup Source File	Backup Destination Directory
\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\devicepolling\DP_config.xml	\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\devicepolling

10. Back up the polling service setting file.

This step can be skipped if you have not customized the polling service setting file. If customizing the polling service setting file "pollingService.xml", back up it using the step shown below.

- a. Using Explorer or a similar program, create the following backup destination directory.
- \$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\polling
- b. Using Explorer or a similar program, copy the following backup source file to its backup destination directory.

Backup Source File	Backup Destination Directory
\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\polling\pollingService.xml	\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\polling

11. Back up the registry.

- a. Using Explorer or a similar program, create the following backup destination directory.
 - \$BAK_DIR\ACM\etc
- b. Using Explorer or a similar program, copy the following backup source files to their backup destination directory.

Backup Source File	Backup Destination Directory
\$ENV_DIR\ACM\etc\swnode.ini	\$BAK_DIR\ACM\etc
\$ENV_DIR\ACM\etc\device.ini	

12. Back up files related to the definition of copy groups and copy pairs.

This step is required only if you are using the Advanced Copy function.

- a. Using Explorer or a similar program, create the following backup destination directories.
 - \$BAK_DIR\CCM\etc
 - \$BAK_DIR\CCM\etc\db
 - \$BAK_DIR\CCM\etc\db\cg
 - \$BAK_DIR\CCM\etc\prop
 - \$BAK_DIR\CCM\var\micc\database
- b. Using Explorer or a similar program, copy the following backup source files to their backup destination directories.

Backup Source File	Backup Destination Directory
\$ENV_DIR\CCM\etc\db\eternus.xml	\$BAK_DIR\CCM\etc\db
\$TMP_DIR\CCM\var\micc\database\DeviceRegList.xml	\$BAK_DIR\CCM\var\micc\database

- c. If the following backup source files exist, copy them to their backup destination directories using Explorer or a similar program.

Backup Source File	Backup Destination Directory
\$ENV_DIR\CCM\etc\prop\user.properties	\$BAK_DIR\CCM\etc\prop
\$ENV_DIR\CCM\etc\stxc.alias	\$BAK_DIR\CCM\etc
\$ENV_DIR\CCM\etc\stxc_ext.alias	
\$ENV_DIR\CCM\etc\stxcvolinf	

- d. Using Explorer or a similar program, copy files under the following backup source directory to their backup destination directory.

Backup Source Directory	Backup Destination Directory
\$ENV_DIR\CCM\etc\db\cg	\$BAK_DIR\CCM\etc\db\cg

13. Back up the license management database.

- a. Using Explorer or a similar program, create the following backup destination directory.
 - \$BAK_DIR\LM
- b. Execute the following command. The backup data is created with the file name specified in *fileName*.

```
> $INS_DIR\LM\bin\esflm backup $BAK_DIR\LM\fileName
```


14. Back up files related to the Reporting function. (for the Reporting function only)

a. Using Explorer or a similar program, create the following backup destination directories.

- \$BAK_DIR\Common\etc\report
- \$BAK_DIR\Common\etc\scheduler
- \$BAK_DIR\Common\var\report

b. Using Explorer or a similar program, copy files under the following backup source directories to their backup destination directories.

Backup Source Directory	Backup Destination Directory
\$ENV_DIR\Common\etc\report	\$BAK_DIR\Common\etc\report
\$ENV_DIR\Common\etc\scheduler	\$BAK_DIR\Common\etc\scheduler

c. Using Explorer or a similar program, copy files under the following backup source directory to their backup destination directory.

Backup Source Directory	Backup Destination Directory
\$TMP_DIR\Common\var\report	\$BAK_DIR\Common\var\report

15. Back up files related to the Automated Storage Tiering function.

Backup is not required if there are no subdirectories or files.

a. Using Explorer or a similar program, create the following backup destination directories.

- \$BAK_DIR\AST\Manager\etc\opt\FJSVssast\data
- \$BAK_DIR\AST\Manager\var\opt\FJSVssast\data

b. Using Explorer or a similar program, copy the subdirectories and files under the following backup source directories to their backup destination directories.

Backup Source Directory	Backup Destination Directory
\$ENV_DIR\AST\Manager\etc\opt\FJSVssast\data	\$BAK_DIR\AST\Manager\etc\opt\FJSVssast\data
\$TMP_DIR\AST\Manager\var\opt\FJSVssast\data	\$BAK_DIR\AST\Manager\var\opt\FJSVssast\data

16. Back up the Quality of Service Management Option environment. (for the Quality of Service Management Option only)

a. Using Explorer or a similar program, create the following backup destination directory.

- \$BAK_DIR\Common\etc\qos

b. Using Explorer or a similar program, copy files under the following backup source directory to their backup destination directory.

Backup Source Directory	Backup Destination Directory
\$ENV_DIR\Common\etc\qos	\$BAK_DIR\Common\etc\qos

17. Execute the following batch to start ETERNUS SF Manager services.

```
> $INS_DIR\Common\bin\Start_ESFservice.bat
```

11.1.1.2.4 Backup of Windows Manager (Cluster Environment)

In a cluster environment, perform the procedure below to save the environment for the Storage Cruiser's manager.

1. Stop all cluster services which the Manager belongs to.
Refer to "Cluster Transaction and Local Transaction" in the *Cluster Environment Setup Guide* for details about cluster transaction.
2. Mount the shared disk on the primary node.
3. Start the ETERNUS SF Manager Postgres service.
Open Service Control Manager to start the following service:
 - ETERNUS SF Manager Postgres Service
4. Perform the step 2 and steps from 4 to 16 of "[11.1.1.2.3 Backup of Windows Manager](#)" on the primary node.
Directory description in "[11.1.1.2.3 Backup of Windows Manager](#)" are replaced to the following directories.
 - \$BAK_DIR means the backup destination directory.
 - \$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.
 - \$ENV_DIR means "Environment Directory" specified at the ETERNUS SF Manager installation.
 - \$TMP_DIR means "Work Directory" as specified during installation.
5. Stop the ETERNUS SF Manager Postgres service.
Open Service Control Manager to stop the following service:
 - ETERNUS SF Manager Postgres Service
6. Unmount the shared disk mounted in the step 2.
7. Start all cluster transactions which the Manager belongs to.

11.1.1.3 Restoring Manager

Restore the environment for the Storage Cruiser's manager if an error has occurred in the Management Server.
All of the tasks for restoring Manager are performed in the Management Server.

11.1.1.3.1 Restoring Solaris OS/Linux Manager

Perform the procedure below to restore the environment for the Storage Cruiser's manager.

For restoration after reinstalling Manager, be sure to complete installation and setup before performing the procedure below. Refer to "Installation of ETERNUS SF Manager" and "Setup of ETERNUS SF Manager" in the *Installation and Setup Guide* for the procedure of installation and setup.



Information

Notation in Procedure:

- "\$BAK_DIR" signifies the backup destination directory.

1. Reconfigure Storage Cruiser's manager.

Install the ETERNUS SF Manager and set it up as Storage Cruiser's manager.

Refer to "Installation of ETERNUS SF Manager" and "Setup of ETERNUS SF Manager" in the *Installation and Setup Guide* for installation and setup.

2. Stop the ETERNUS SF Manager Tomcat Service.

Execute the following shell script to stop the service.

```
# /opt/FJSVesfcm/bin/stop-webservice.sh
```

3. Restore the backup data.

- a. Execute the following command. If you have not changed the port number, specify the default value 15432 to *portNumber*. If you have changed the port number, specify the changed port number to *portNumber*.

```
# /opt/FJSVesfcm/postgres/bin/psql -U esfpostgres -p portNumber postgres
```

The prompt is displayed, and waiting for input. Input the following strings in order.

```
master01!  
drop database esfdb;  
\q
```

- b. Execute the following command to restore the backup data. If you have not changed the port number, specify the default value 15432 to *portNumber*. If you have changed the port number, specify the changed port number to *portNumber*. For *fileName*, input the file name which was specified when the backup data was created.

```
# /opt/FJSVesfcm/postgres/bin/psql -U esfpostgres -p portNumber  
-f $BAK_DIR/Common/fileName postgres
```

The prompt is displayed, and waiting for input. Input the following strings.

```
master01!
```

4. Execute the following shell script to stop the ETERNUS SF Manager services.

```
# /opt/FJSVesfcm/bin/stopesf.sh
```

 Information

When the shell script is executed, the message that ETERNUS SF Manager Web Service has been already stopped is displayed many times. Ignore because there is no problem.

5. Restore files related to the performance management function.

This step can be skipped if you are not using the performance management function or if you are not backing up files related to the performance management function.

- a. Delete the subdirectories and files under the restore destination directory "/etc/opt/FJSVssmgr/current". However, do not delete the restore destination directory itself.

```
# rm -f /etc/opt/FJSVssmgr/current/perf.conf  
# rm -rf /etc/opt/FJSVssmgr/current/perfconf/*  
# rm -rf /var/opt/FJSVssmgr/current/perf/*
```

If the restore destination directory does not exist, create it with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS, Linux	root (superuser)	root	755

- b. Execute the following commands to copy the subdirectories and files in the backup locations to their restore destination directories.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/perf.conf /etc/opt/FJSVssmgr/current/  
# cp -Rp $BAK_DIR/etc/opt/FJSVssmgr/current/perfconf/* /etc/opt/FJSVssmgr/current/perfconf/  
# cp -Rp $BAK_DIR/var/opt/FJSVssmgr/current/perf/* /var/opt/FJSVssmgr/current/perf/
```

6. Restore files related to the capacity management function.

This step can be skipped if you are not backing up files related to the capacity management function.

- a. Delete the subdirectories and files under the restore destination directory "/var/opt/FJSVssmgr/current". However, do not delete the restore destination directory itself.

```
# rm -rf /var/opt/FJSVssmgr/current/thinprovisioning/*
# rm -rf /var/opt/FJSVssmgr/current/flexibletier/*
# rm -rf /var/opt/FJSVssmgr/current/nas/*
```

If the restore destination directory does not exist, create it with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS, Linux	root (superuser)	root	755

- b. Execute the following commands to copy the subdirectories and files in the backup locations to their restore destination directories.

```
# cp -Rp $BAK_DIR/var/opt/FJSVssmgr/current/thinprovisioning/* /var/opt/FJSVssmgr/current/thinprovisioning/
# cp -Rp $BAK_DIR/var/opt/FJSVssmgr/current/flexibletier/* /var/opt/FJSVssmgr/current/flexibletier/
# cp -Rp $BAK_DIR/var/opt/FJSVssmgr/current/nas/* /var/opt/FJSVssmgr/current/nas/
```

7. Restore the other files which can be customized.

It is unnecessary to restore the files or the directories which have not been backed up.

- a. Check whether the "/etc/opt/FJSVssmgr/current/eventmail" directory exist.
If the directory does not exist, create it with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS	root (superuser)	sys	755
Linux	root (superuser)	root	755

- b. Execute the following commands to copy the subdirectories and files in the backup locations to their restore destination directories.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/sanma.conf /etc/opt/FJSVssmgr/current/
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/ssmgr.conf /etc/opt/FJSVssmgr/current/
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/trapop.sh /etc/opt/FJSVssmgr/current/
# cp -Rp $BAK_DIR/etc/opt/FJSVssmgr/current/eventmail/* /etc/opt/FJSVssmgr/current/eventmail/
```

8. Restore the SNMP Trap XML definition files.

It is unnecessary to restore the files which have not been backed up.

- a. Check whether the "/etc/opt/FJSVssmgr/current/snmpth" directory exist.
If the directory does not exist, create it with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS, Linux	root (superuser)	sys	755

- b. Execute the following command to copy files in the backup location to their restore destination directory.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/snmpth/*.xml /etc/opt/FJSVssmgr/current/snmpth/
```

9. Restore the device polling setting files.

It is unnecessary to restore the files which have not been backed up.

- a. Check whether the "/etc/opt/FJSVssmgr/current/devicepolling" directory exist.
If the directory does not exist, create it with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS, Linux	root (superuser)	sys	755

- b. Execute the following command to copy files in the backup location to their restore destination directory.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/devicepolling/*.xml /etc/opt/FJSVssmgr/current/devicepolling/
```

10. Restore the polling service setting file.

It is unnecessary to restore the files which have not been backed up.

- a. Check whether the "/etc/opt/FJSVssmgr/current/polling" directory exist.
If the directory does not exist, create it with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS, Linux	root (superuser)	sys	755

- b. Execute the following command to copy the file in the backup location to its restore destination directory.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/polling/*.xml /etc/opt/FJSVssmgr/current/polling/
```

11. Restore files related to the definition of copy groups and copy pairs.

This step is required only if you are using the Advanced Copy function.

- a. Delete the subdirectories and files under the restore destination directories "/etc/opt/FJSVccm/db/cg", "/etc/opt/FJSVccm/prop", and "/etc/opt/FJSVccm/accc/etc".

```
# rm -rf /etc/opt/FJSVccm/db/cg/*
# rm -f /etc/opt/FJSVccm/prop/user.properties
# rm -f /etc/opt/FJSVccm/accc/etc/stxc.alias
# rm -f /etc/opt/FJSVccm/accc/etc/stxc_ext.alias
# rm -f /etc/opt/FJSVccm/accc/etc/stxcvolinf
```

If the restore destination directories do not exist, create them with the following owner, group, and access privilege.

OS Type	Restore Destination Directory	Owner	Group	Access Privilege
Solaris OS	/var/opt/FJSVccm/micc/database	root (superuser)	root	755
	Other than above	root (superuser)	bin	755
Linux	/etc/opt/FJSVccm/accc/etc	root (superuser)	root	644
	Other than above	root (superuser)	root	755

- b. Execute the following commands to copy the subdirectories and files in the backup locations to their restore destination directories.

```
# cp -p $BAK_DIR/CCM/etc/db/eternus.xml /etc/opt/FJSVccm/db
# cp -p $BAK_DIR/CCM/var/micc/database/DeviceRegList.xml /var/opt/FJSVccm/micc/database
# cp -p $BAK_DIR/CCM/etc/prop/user.properties /etc/opt/FJSVccm/prop
# cp -p $BAK_DIR/CCM/etc/stxc.alias /etc/opt/FJSVccm/accc/etc
# cp -p $BAK_DIR/CCM/etc/stxc_ext.alias /etc/opt/FJSVccm/accc/etc
# cp -p $BAK_DIR/CCM/etc/stxcvolinf /etc/opt/FJSVccm/accc/etc
# cp -Rp $BAK_DIR/CCM/etc/db/cg/* /etc/opt/FJSVccm/db/cg
```

12. Restore the license management database.

Execute the following command. For *fileName*, input the file name which was specified when the backup data was created.

```
# /opt/FJSVesflm/bin/esflm restore $BAK_DIR/LM/fileName
```

13. Restore files related to the Reporting function. (for the Reporting function only)

This step can be skipped if you are not backing up files related to the Reporting function.

- a. Delete the subdirectories and files under the restore destination directories `/etc/opt/FJSVesfcm/conf/report`, `/etc/opt/FJSVesfcm/conf/scheduler`, and `/var/opt/FJSVesfcm/report`. However, do not delete the restore destination directories themselves.

```
# rm -f /etc/opt/FJSVesfcm/conf/report/*
# rm -f /etc/opt/FJSVesfcm/conf/scheduler/*
# rm -rf /var/opt/FJSVesfcm/report/*
```

If the restore destination directories do not exist, create them with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS, Linux	root (superuser)	root	755

- b. Execute the following commands to copy the subdirectories and files in the backup locations to their restore destination directories.

```
# cp -p $BAK_DIR/etc/opt/FJSVesfcm/conf/report/* /etc/opt/FJSVesfcm/conf/report/
# cp -p $BAK_DIR/etc/opt/FJSVesfcm/conf/scheduler/* /etc/opt/FJSVesfcm/conf/scheduler/
# cp -Rp $BAK_DIR/var/opt/FJSVesfcm/report/* /var/opt/FJSVesfcm/report/
```

14. Restore files related to the Automated Storage Tiering function.

Restore is not required if there are no subdirectories or files.

- a. Delete the subdirectories and files under the restore destination directories `/etc/opt/FJSVssast/data` and `/var/opt/FJSVssast/data`. However, do not delete the restore destination directories themselves.

```
# rm -rf /etc/opt/FJSVssast/data/*
# rm -rf /var/opt/FJSVssast/data/*
```

If the restore destination directories do not exist, create them with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS	root (superuser)	sys	755
Linux	root (superuser)	root	755

- b. Execute the following commands to copy the subdirectories and files in the backup locations to their restore destination directories.

```
# cp -Rp $BAK_DIR/etc/opt/FJSVssast/data/* /etc/opt/FJSVssast/data/
# cp -Rp $BAK_DIR/var/opt/FJSVssast/data/* /var/opt/FJSVssast/data/
```

15. Restore the Quality of Service Management Option environment. (for the Quality of Service Management Option only)

- a. Delete the subdirectories and files under the restore destination directory "/etc/opt/FJSVesfcm/conf/qos". However, do not delete the restore destination directory itself.

```
# rm -f /etc/opt/FJSVesfcm/conf/qos/*
```

If the restore destination directory does not exist, create it with the following owner, group, and access privilege.

OS Type	Owner	Group	Access Privilege
Solaris OS, Linux	root (superuser)	root	755

- b. Execute the following command to copy the subdirectories and files in the backup location to their restore destination directory.

```
# cp -p $BAK_DIR/etc/opt/FJSVesfcm/conf/qos/* /etc/opt/FJSVesfcm/conf/qos/
```

16. Execute the following shell script to start ETERNUS SF Manager services.

```
# /opt/FJSVesfcm/bin/startesf.sh
```

11.1.1.3.2 Restoring Solaris OS/Linux Manager (Cluster Environment)

In a cluster environment, perform the procedure below to restore the environment for the Storage Cruiser's manager.

For restoration after reinstalling Manager, be sure to complete installation and customization before performing the procedure below. Refer to the *Cluster Environment Setup Guide* for the procedure of installation and customization.

1. Stop all cluster transaction which the Manager belongs to.

Refer to "Cluster Transaction and Local Transaction" in the *Cluster Environment Setup Guide* for details about cluster transaction.

2. Mount the shared disk on the primary node.

3. Start the ETERNUS SF Manager Postgres service.

Execute the following command to start the ETERNUS SF Manager Postgres service:

- For Solaris environments

```
# /etc/init.d/startSFmanager start-postgres
```

- For Linux environments

```
# /opt/FJSVesfcm/bin/startSFmanager start-postgres
```

4. Perform steps 3 and step 5 to 15 of "[11.1.1.3.1 Restoring Solaris OS/Linux Manager](#)" on the primary node.

5. Stop the ETERNUS SF Manager Postgres service.

Execute the following command to stop the ETERNUS SF Manager Postgres service:

- For Solaris environments

```
# /etc/init.d/startSFmanager stop-postgres
```

- For Linux environments

```
# /opt/FJSVesfcm/bin/startSFmanager stop-postgres
```

6. Unmount the shared disk mounted in step 2.

7. Start all cluster transactions which the Manager belongs to.

11.1.1.3.3 Restoring Windows Manager

Perform the procedure below to restore the environment for Storage Cruiser's manager.

For restoration after reinstalling Manager, be sure to complete installation and setup before performing the procedure below. Refer to "Installation of ETERNUS SF Manager" and "Setup of ETERNUS SF Manager" in the *Installation and Setup Guide* for the procedure of installation and setup.

Information

Notation in Procedure:

- \$BAK_DIR means the backup destination directory.
- \$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.
- \$ENV_DIR means "Environment Directory" specified at the ETERNUS SF Manager installation.
- \$TMP_DIR means "Work Directory" specified at the ETERNUS SF Manager installation.

1. Reconfigure Storage Cruiser's manager.

Install ETERNUS SF Manager and set it up as Storage Cruiser's manager.

Refer to "Installation of ETERNUS SF Manager" and "Setup of ETERNUS SF Manager" in the *Installation and Setup Guide* for installation and setup procedures.

2. Stop the ETERNUS SF Manager Tomcat Service.

Open the Service Control Manager and stop the following service.

- ETERNUS SF Manager Tomcat Service

3. Stop the ETERNUS VASA Provider if it is being used.

Open the Service Control Manager and stop the following service.

- ETERNUS Information Provider

4. Restore the backup data.

- a. Execute the following command. If you have not changed the port number, specify the default value 15432 to *portNumber*. If you have changed the port number, specify the changed port number to *portNumber*.

```
> $INS_DIR\Common\sys\postgres\bin\psql -U esfpostgres -p portNumber postgres
```

The prompt is displayed, and waiting for input. Input the following strings in order.

```
master01!  
drop database esfdb;  
\q
```

- b. Execute the following command to restore the backup data. If you have not changed the port number, specify the default value 15432 to *portNumber*. If you have changed the port number, specify the changed port number to *portNumber*. For *fileName*, input the file name which was specified when the backup data was created.

```
> $INS_DIR\Common\sys\postgres\bin\psql -U esfpostgres -p portNumber  
-f $BAK_DIR\Common\fileName postgres
```

The prompt is displayed, and waiting for input. Input the following strings.

```
master01!
```

5. Execute the following batch to stop the ETERNUS SF Manager services.

```
> $INS_DIR\Common\bin\Stop_ESFservice.bat
```


Information

When the batch is executed, the message that ETERNUS SF Manager Tomcat Service has been already stopped is displayed many times. Ignore because there is no problem.

6. Restore files related to the performance management function.

This step can be skipped if you are not using the performance management function or if you are not backing up files related to the performance management function.

- a. Using Explorer or a similar program, delete the subdirectories and files under the following restore destination directories.

However, do not delete the restore destination directories themselves.

- \$TMP_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perfconf
- \$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\perf

If the restore destination directories do not exist, create them.

- b. Using Explorer or a similar program, copy the following restore source file to its restore destination directory.

Restore Source File	Restore Destination Directory
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perf.conf	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current

- c. Using Explorer or a similar program, copy the subdirectories and files under the following restore source directories to their restore destination directories.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perfconf	\$TMP_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perfconf
\$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\perf	\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\perf

7. Restore files related to the capacity management function.

This step can be skipped if you are not backing up files related to the capacity management function.

- a. Using Explorer or a similar program, delete the subdirectories and files under the following restore destination directories.

However, do not delete the restore destination directories themselves.

- \$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\thinprovisioning
- \$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\flexibletier
- \$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\nas

If the restore destination directories do not exist, create them.

- b. Using Explorer or a similar program, copy the subdirectories and files under the following restore source directories to their restore destination directories.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\thinprovisioning	\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\thinprovisioning
\$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\flexibletier	\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\flexibletier

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\ESC\Manager\var\opt\FJSVssmgr\current\nas	\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current\nas

8. Restore the other files which can be customized.

It is unnecessary to restore the files or the directories which have not been backed up.

- a. Using Explorer or a similar program, copy the following restore source files to their restore destination directory.

Restore Source File	Restore Destination Directory
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\nasma.conf	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\ssmgr.conf	
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\trapop.bat	

- b. Check whether the \$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\eventmail directory exist. If the directory does not exist, create it.
- c. Using Explorer or a similar program, copy the subdirectories and files under the following restore source directory to their restore destination directory.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\eventmail	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\eventmail

9. Restore the role group configuration file.

If the role group configuration file is not backed up, this step is unnecessary.

- a. Check whether the following restore destination directory exist. If the directory does not exist, create it.
 - \$ENV_DIR\Common\etc\authentication
- b. Using Explorer or a similar program, copy the file in the following restore source directory to its restore destination directory.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\Common\etc\authentication	\$ENV_DIR\Common\etc\authentication

10. Restore the SNMP Trap XML definition files.

It is unnecessary to restore the files which have not been backed up.

- a. Check whether the \$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\nsmph directory exist. If the directory does not exist, create it.
- b. Using Explorer or a similar program, copy the following restore source files to their restore destination directory.

Restore Source File	Restore Destination Directory
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\nsmph*.xml	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\nsmph

11. Restore the device polling setting files.

It is unnecessary to restore the files which have not been backed up.

- a. Check whether the \$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\devicepolling directory exist. If the directory does not exist, create it.
- b. Using Explorer or a similar program, copy the following restore source file to its restore destination directory.

Restore Source File	Restore Destination Directory
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\devicepolling\DP_config.xml	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\devicepolling

12. Restore the polling service setting file.

It is unnecessary to restore the files which have not been backed up.

- a. Check whether the \$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\polling directory exist. If the directory does not exist, create it.
- b. Using Explorer or a similar program, copy the following restore source file to its restore destination directory.

Restore Source File	Restore Destination Directory
\$BAK_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\polling\pollingService.xml	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\polling

13. Restore the registry.

Using Explorer or a similar program, copy the following restore source files to their restore destination directory.

Restore Source File	Restore Destination Directory
\$BAK_DIR\ACM\etc\swnode.ini	\$ENV_DIR\ACM\etc
\$BAK_DIR\ACM\etc\device.ini	

14. Restore files related to the definition of copy groups and copy pairs.

This step is required only if you are using the Advanced Copy function.

- a. Using Explorer or a similar program, delete files under the following restore destination directory.

- \$ENV_DIR\CCM\etc\db\cg

Delete the following files if they exist.

- \$ENV_DIR\CCM\etc\prop\user.properties
- \$ENV_DIR\CCM\etc\stxc.alias
- \$ENV_DIR\CCM\etc\stxc_ext.alias
- \$ENV_DIR\CCM\etc\stxcvolinf

- b. Check whether the following restore destination directories exist.

If the directories do not exist, create them.

- \$ENV_DIR\CCM\etc
- \$ENV_DIR\CCM\etc\db
- \$ENV_DIR\CCM\etc\db\cg
- \$ENV_DIR\CCM\etc\prop
- \$TMP_DIR\CCM\var\micc\database

- c. Using Explorer or a similar program, copy the following restore source files to their restore destination directories.

Restore Source File	Restore Destination Directory
\$BAK_DIR\CCM\etc\db\eternus.xml	\$ENV_DIR\CCM\etc\db
\$BAK_DIR\CCM\var\micc\database\DeviceRegList.xml	\$TMP_DIR\CCM\var\micc\database

- d. If the following restore source files exist, copy them to their restore destination directories using Explorer or a similar program.

Restore Source File	Restore Destination Directory
\$BAK_DIR\CCM\etc\prop\user.properties	\$ENV_DIR\CCM\etc\prop
\$BAK_DIR\CCM\etc\stxc.alias	\$ENV_DIR\CCM\etc
\$BAK_DIR\CCM\etc\stxc_ext.alias	
\$BAK_DIR\CCM\etc\stxcvolinf	

- e. Using Explorer or a similar program, copy files under the following restore source directory to their restore destination directory.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\CCM\etc\db\cg	\$ENV_DIR\CCM\etc\db\cg

15. Restore the license management database.

Execute the following command. For *fileName*, input the file name which was specified when the backup data was created.

```
> $INS_DIR\LM\bin\esflm restore $BAK_DIR\LM\fileName
```

16. Restore files related to the Reporting function. (for the Reporting function only)

This step can be skipped if you are not backing up files related to the Reporting function.

- a. Delete the subdirectories and files under the following restore destination directory. However, do not delete the restore destination directory itself.

- \$TMP_DIR\Common\var\report

If the restore destination directory does not exist, create it.

- b. Check whether the following restore destination directories exist.

If the directories do not exist, create them.

- \$ENV_DIR\Common\etc\report

- \$ENV_DIR\Common\etc\scheduler

- c. Using Explorer or a similar program, copy files under the following restore source directories to their restore destination directories.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\Common\etc\report	\$ENV_DIR\Common\etc\report
\$BAK_DIR\Common\etc\scheduler	\$ENV_DIR\Common\etc\scheduler

- d. Using Explorer or a similar program, copy files under the following restore source directory to their restore destination directory.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\Common\var\report	\$TMP_DIR\Common\var\report

17. Restore files related to the Automated Storage Tiering function.

Restore is not required if there are no subdirectories or files.

- a. Delete the subdirectories and files under the following restore destination directories. However, do not delete the restore destination directories themselves.

- \$ENV_DIR\AST\Manager\etc\opt\FJSVssast\data
- \$TMP_DIR\AST\Manager\var\opt\FJSVssast\data

If the restore destination directories do not exist, create them.

- b. Using Explorer or a similar program, copy the subdirectories and files under the following restore source directories to their restore destination directories.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\AST\Manager\etc\opt\FJSVssast\data	\$ENV_DIR\AST\Manager\etc\opt\FJSVssast\data
\$BAK_DIR\AST\Manager\var\opt\FJSVssast\data	\$TMP_DIR\AST\Manager\var\opt\FJSVssast\data

18. Restore the Quality of Service Management Option environment. (for the Quality of Service Management Option only)

- a. Check whether the following restore destination directory exists. If the directory does not exist, create it.

- \$ENV_DIR\Common\etc\qos

- b. Using Explorer or a similar program, copy files under the following restore source directory to their restore destination directory.

Restore Source Directory	Restore Destination Directory
\$BAK_DIR\Common\etc\qos	\$ENV_DIR\Common\etc\qos

19. Execute the following batch to start ETERNUS SF Manager services.

```
> $INS_DIR\Common\bin\Start_ESFservice.bat
```

20. Start the ETERNUS VASA Provider if it is used.

Open the Service Control Manager and start the following service.

- ETERNUS Information Provider

21. Restore the VMware vSphere Virtual Volumes environment.

This step is required only if you use the VMware vSphere Virtual Volumes function.

- a. Reloading the configuration of ETERNUS Disk Storage system
Perform the **Reload Conf.** operation for all of the ETERNUS Disk storage systems using the VMware vSphere Virtual Volumes function from Web Console.
- b. Retrieving the ETERNUS Disk storage system configuration Information
Execute the following command to retrieve the configuration information related to the VMware vSphere Virtual Volumes function from the ETERNUS Disk storage system.

```
> $INS_DIR\Common\bin\esfadm esfdata restore -all
```

This command may take some time to complete.

11.1.1.3.4 Restoring Windows Manager (Cluster Environment)

In a cluster environment, perform the procedure below to restore the environment for the Storage Cruiser's manager.

For restoration after reinstalling Manager, be sure to complete installation and customization before performing the procedure below. Refer to the *Cluster Environment Setup Guide* for the procedure of installation and customization.

1. Stop all cluster transactions which the Manager belongs to.

Refer to "Cluster Transaction and Local Transaction" in the *Cluster Environment Setup Guide* for details about cluster transaction.

2. Mount the shared disk on the primary node.

3. Start the ETERNUS SF Manager Postgres service.

Open Service Control Manager to start the following service:

- ETERNUS SF Manager Postgres Service

4. Perform the step 4 and steps from 6 to 18 of "[11.1.1.3.3 Restoring Windows Manager](#)" on the primary node.

Directory description in "[11.1.1.3.3 Restoring Windows Manager](#)" are replaced to the following directories.

- \$BAK_DIR means the backup destination directory.
- \$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.
- \$ENV_DIR means "Environment Directory" specified at the ETERNUS SF Manager installation.
- \$TMP_DIR means "Work Directory" specified at the ETERNUS SF Manager installation.

5. Stop the ETERNUS SF Manager Postgres service.

Open Service Control Manager to stop the following service:

- ETERNUS SF Manager Postgres Service

6. Unmount the shared disk mounted in step 2.

7. Start all cluster transactions which the Manager belongs to.

8. Perform the step 21 of "[11.1.1.3.3 Restoring Windows Manager](#)".

Execute the `esfadm esfdata` command on the primary node.

11.1.2 Changing Operating Environment

11.1.2.1 Changing IP Address of Management Server

Refer to "Changing IP Address of Management Server" in the *AdvancedCopy Manager Operation Guide*.

11.1.2.2 Changing IP Address of Server Node

Perform the procedure below to change the IP address of a server node.

- Changing the IP address of a server node for which Agent is installed
 1. Change the system IP address on the server node.
 2. Stop the server node Agent on the server node.
 3. Execute the `setagtip` command on the server node to change the start IP of the server node Agent.
 4. Restart the server node Agent on the server node.
 5. Change the IP address of the server node from Web Console.
- Changing the IP address of a VM host for which Agent is not installed
 1. Change the IP address of the VM host.
 2. Change the IP address information of the VM host from Web Console.
- Changing the IP address of a guest OS for which Agent is not installed
 1. Change the IP address of the guest OS.

2. Change the IP address information of the VM guest from Web Console.

 **Point**

.....
Refer to "Changing IP Address of Managed Server" in the *AdvancedCopy Manager Operation Guide* when you install the AdvancedCopy Manager's agent in a server node.
.....

11.1.2.3 Changing Server Name of Management Server

Refer to "Changing Server Name of Management Server Transaction or Managed Server Transaction" in the *AdvancedCopy Manager Operation Guide*.

11.1.2.4 Changing Name of Server Node

Perform the procedure below to change the name of a server node.

- Changing the name of a server node on which the Agent is installed
 1. Change the server node name on the server node.
 2. Stop the server node Agent on the server node.
 3. Execute the `setagtip` command on the server node to change the setting of the server node Agent.
 4. Restart the server node Agent on the server node.
 5. With Web Console, perform the **Reload Conf.** operation on the server node.
- Changing the host name of a VM host on which an Agent is not installed
 1. Change the host name of the VM host.
 2. With Web Console, perform [Reload of setting] for the VM host.
- Changing the virtual machine name of a VM guest or the host name of a guest OS, on which an Agent is not installed
 1. Change the virtual machine name of the VM guest or the host name of a guest OS.
 2. With Web Console, perform the **Reload Conf.** operation for the VM host that has the target VM guest.

 **Point**

.....
Refer to "Changing Server Name of Management Server Transaction or Managed Server Transaction" in the *AdvancedCopy Manager Operation Guide* when you install the AdvancedCopy Manager's agent in a server node.
.....

11.1.2.5 Changing Port Numbers of Management Server

Changing The Port Number of Sscruisera

sscruisera uses port number 4917 as standard.

Change the port number in the following steps:

1. Open the following files by a text editor or the like:
 - For Manager in a Windows environment
`%SystemRoot%\system32\drivers\etc\services`
 - For Manager in a Solaris or Linux environment
`/etc/services`

2. Change the port number.

Enter a port number between 1024 and 65535. When changing a port number, a number between 5001 and 32768 is recommended.

```
# <service name> <port number>/<protocol> [aliases...] [#<comment>]
#
sscruisera      4917/tcp
```

3. Save the file opened at Step 1 and close it.
4. Restart Manager.

Changing Port Numbers Other Than Those Above

For Manager in a Windows environment, refer to "Changing Port Numbers (Windows)" in the *Express Operation Guide*, and for Manager in a Solaris or Linux environment, refer to "Changing Port Numbers (Linux)" in the *Express Operation Guide*.

In addition, Read "Express" as "Storage Cruiser".

11.1.2.6 Changing IP Address, SNMP Setting or Engine ID of Supported Device

When changing the IP address, the SNMP setting or the engine ID of the support level A or B device that is registered in this product, perform the following procedure:

Changing IP Address of Supported Device

1. Change the IP address of each target device.
2. Record the settings of threshold monitoring. (if thresholds are monitored)
3. Change the IP address of the target device using Web Console. (If thresholds are being monitored, threshold monitoring is stopped by this operation.)
4. Based on the settings at step 2, start to monitor thresholds. (if thresholds are monitored)

Changing SNMP Setting of Supported Device

1. Change the SNMP setting of each target device.
2. Record the settings of threshold monitoring. (if thresholds are monitored)
3. Perform steps 1 - 6 in "Change SNMP Communication Settings" in the *Web Console Guide*. (If thresholds are being monitored, threshold monitoring is stopped by this operation.)
4. Based on the settings at step 2, start to monitor thresholds. (if thresholds are monitored)

Changing Engine ID of Supported Device

1. Change the engine ID of each target device.
2. Perform steps 1 - 4 in "Change SNMP Communication Settings" in the *Web Console Guide*, and click **Modify**. (This operation makes the engine ID of each target device available and reflected to this product.)



.....
Refer to "[Chapter 4 Environment Configuration](#)" for the SNMP setting of each target device.
.....

Note

To change the SNMP Trap community name at a Linux Manager, refer to "[A.10 snmptrapd.conf Configuration File](#)" and also change the snmptrapd.conf settings.

11.1.2.7 Changing Operation Management of Clustered System (Node Name Takeover)

Refer to "Changing IP Address of Management Server" in the *AdvancedCopy Manager Operation Guide*.

11.1.2.8 Changing Configuration of Supported Devices

For Changing Device Configuration

If the following change, the update of the set up information is needed in the support device:

- Upgrade of firmware with support device
- Configuration change by increase/decrease of hardware (in case of storage device, its CM, CA, CE, DE, disk, port)
- Addition/deletion/change in composition (in the case of a disk storage system, its RAID Group, LogicalVolume, etc.) in device

Method of updating set up information is as follows:

- For FC switches, all firmware versions of the ETERNUS DX60 S2, and firmware versions earlier than V10L40 of the ETERNUS DX S2 series (excluding the ETERNUS DX60 S2)
 - Perform the **Reload Conf.** operation for the relevant device to update the information for the target device.
 - Refer to "[7.2.9 Updating Configuration Information](#)" to update the configuration information of the performance management function. (when using the performance management function)
- For other devices

- When using the performance management function and "Partial" is specified for the scope of monitoring volumes

Refer to "[7.2.9 Updating Configuration Information](#)" to update the configuration information of the performance management function.

- When using the performance management function and "All" is specified for the scope of monitoring volumes

Because the configuration information of the performance management function is updated automatically, no action is required. However, when the firmware is being updated, the update may take some time to be completed. Refer to "[7.2.9 Updating Configuration Information](#)" for details.

- When not using the performance management function

No action is required.

For Applying Model Upgrade Options for ETERNUS Disk Storage System

The device configuration is changed when applying Model upgrade options for ETERNUS Disk storage system. Perform the following operation after applying Model upgrade options for ETERNUS Disk storage system.

Before Applying Model Upgrade Options	After Applying Model Upgrade Options	Operation
ETERNUS DX60 S5	ETERNUS DX100 S5	Perform the procedure of "Operation on Model Upgrade from DX60 S5 to DX100 S5, from DX100 S5 to DX200 S5, from DX500 S5 to DX600 S5, from DX60 S4 to DX100 S4, from DX100 S4 to DX200 S4, from DX500 S4 to DX600 S4, from DX60 S3 to DX100 S3, from DX100 S3 to DX200
ETERNUS DX100 S5	ETERNUS DX200 S5	
ETERNUS DX500 S5	ETERNUS DX600 S5	
ETERNUS DX60 S4	ETERNUS DX100 S4	

Before Applying Model Upgrade Options	After Applying Model Upgrade Options	Operation
ETERNUS DX100 S4	ETERNUS DX200 S4	S3, from DX500 S3 to DX600 S3, from DX8700 S3 to DX8900 S3, from AF150 S3 to AF250 S3" of "Operation on Model Upgrade for ETERNUS Disk Storage System" in the <i>Web Console Guide</i> . When using the performance management function, update the configuration information of the performance management function in reference to " 7.2.9 Updating Configuration Information " after performing the procedure above.
ETERNUS DX500 S4	ETERNUS DX600 S4	
ETERNUS DX60 S3	ETERNUS DX100 S3	
ETERNUS DX100 S3	ETERNUS DX200 S3	
ETERNUS DX500 S3	ETERNUS DX600 S3	
ETERNUS DX8700 S3	ETERNUS DX8900 S3	
ETERNUS AF150 S3	ETERNUS AF250 S3	
ETERNUS DX200 S5	ETERNUS DX500 S5	Perform the procedure of "Operation on Model Upgrade from DX200 S5 to DX500 S5, from DX200 S4 to DX500 S4, from DX200 S3 to DX500 S3, from AF250 S3 to AF650 S3" of "Operation on Model Upgrade for ETERNUS Disk Storage System" in the <i>Web Console Guide</i> .
ETERNUS DX200 S4	ETERNUS DX500 S4	
ETERNUS DX200 S3	ETERNUS DX500 S3	
ETERNUS AF250 S3	ETERNUS AF650 S3	
ETERNUS DX80 S2	ETERNUS DX90 S2	Perform the procedure of "Operation on Model Upgrade from DX80 S2 to DX90 S2, from DX410 S2 to DX440 S2" of "Operation on Model Upgrade for ETERNUS Disk Storage System" in the <i>Web Console Guide</i> . When using the performance management function, update the configuration information of the performance management function in reference to " 7.2.9 Updating Configuration Information " after performing the procedure above.
ETERNUS DX410 S2	ETERNUS DX440 S2	
ETERNUS DX80 S2/DX90 S2	ETERNUS DX410 S2/DX440 S2	Perform the procedure of "Operation on Model Upgrade from DX80 S2/DX90 S2 to DX410 S2/DX440 S2" of "Operation on Model Upgrade for ETERNUS Disk Storage System" in the <i>Web Console Guide</i> .

11.1.2.9 Changing Password of Supported Devices

Change the passwords for the following devices registered to this product to take the following conduction:

Objected Device	Conduction
Brocade Fibre Channel switch PRIMERGY fibre channel switch blade	Change the account information for management of the device in Web Console.
VDX series PRIMERGY BX Ethernet Fabric Switch	
VMware vSphere	
ETERNUS DX series ETERNUS AF All-Flash Arrays	

Except for the devices described above, there is no necessary to do any deal with this software when change the device's password.

11.1.2.10 Changing SNMP Communication Protocol of Management Server

On Management Server that executes fault monitoring on devices using SNMPv1 protocol alone, when making the following operational environment changes, it is required to change SNMP Trap daemon settings.

- Add a device on which fault monitoring is executed with SNMPv3 protocol.
- Change the communication protocol of a fault monitoring executed device from SNMPv1 to SNMPv3.

For Windows environments

1. Take the following steps to stop Storage Cruiser's manager.
 - a. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** screen.
 - b. Select the service "ETERNUS SF Manager Tomcat Service", and click **Stop**.
2. Take the following steps to stop the trap monitoring service.
 - a. Open the **Services** screen.
 - b. Select the service "SNMP Trap monitoring service", and click **Stop**.
3. Refer to either of the following sections in "When Using ETERNUS SF SNMP Trap Monitoring Service" in "SNMP Trap Setting (for Windows)" in "Setup of Storage Cruiser's Manager" in the *Installation and Setup Guide* to set up an environment.
 - Step 2 or later in "When Other Applications (Systemwalker Centric Manager, ServerView Resource Orchestrator, etc.) Using SNMP Traps Do Not Coexist".
 - Step 2 or later in "When Other Applications (Systemwalker Centric Manager, ServerView Resource Orchestrator, etc.) Using SNMP Traps Coexist".
4. After changing the SNMP Trap daemon settings, it is required to register SNMPv3 user information and set up SNMP v3 user to a managed device. Refer to "SNMPv3" in "[3.1.2 SNMP Communication Authentication](#)" for setting method.

For Linux environments

Refer to the following section in "SNMP Trap Setting (for Linux)" in "Setup of Storage Cruiser's Manager" in the *Installation and Setup Guide* to set up an environment. Also, if a monitored device uses IPv6 address, this setting is not required.

- When Using ETERNUS SF SNMP Trap Monitoring Daemon

After changing the SNMP Trap daemon settings, it is required to register SNMPv3 user information and set up SNMP v3 user to a managed device. Refer to "SNMPv3" in "[3.1.2 SNMP Communication Authentication](#)" for setting method.

For Solaris environments

It is required to register SNMPv3 user information and set up SNMP v3 user to a managed device. Refer to "SNMPv3" in "[3.1.2 SNMP Communication Authentication](#)" for setting method.

It is not necessary to change the SNMP Trap daemon settings.

11.1.2.11 SSL Version Settings for Communicating with Supported Devices

To have Storage Cruiser's manager communicate with the following monitoring target devices, the Maintenance-Secure TLSv1.2 or later protocol must be enabled in the SSL version setting for communication on the monitoring target devices. Make sure that the Maintenance-Secure TLSv1.2 or later protocol is enabled and if it is not enabled, enable it.

- ETERNUS DX S6/S5/S4/S3 series
- ETERNUS AF All-Flash Arrays

11.1.2.12 Changing the VMware Server Node

VM Host

- When the hostname or IP address is changed

After changing the IP address or host name of the VM host, perform the **Reload Conf.** operation for the target device on Web Console.

- When the user name or password is changed

After changing the user name or password, set the new username or password for this software using Web Console.

VM Guest

- When the virtual machine name or host name of the guest OS is changed

After changing the virtual machine name of the VM guest or host name of the guest OS, perform the **Reload Conf.** operation for the VM host where the target device exists, on Web Console.

- When the IP address of the guest OS is changed

After changing the IP address of the guest OS, perform the **Modify** operation for the target device on Web Console.

11.2 [Solaris OS Version] Maintenance of Agent

11.2.1 Action to Take for Troubleshooting

Provided are the main examples for problems and their troubleshooting methods.

- If a new HBA has been added and the agent detected an environment error (during a time besides replacement of the HBA)

It is possible the server node has not started up in re-configuration mode after the HBA was added. In this sort of situation, restart the node in re-configuration mode.

- If a new HBA driver has been installed and the agent has detected an environment error

It is possible the server node was not started up in re-configuration mode after the installation of the driver. In this sort of situation, restart the node in re-configuration mode.

11.2.2 Collecting Data for Troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.2.3 Changing Administrative Environment

11.2.3.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)".

11.2.3.2 Changing Port Numbers of Server Node

When Storage Cruiser's Agent is Installed

Change the port number in the following steps:

1. Change the port number.

Refer to "Port Number Setting" in "Setup of Storage Cruiser's Agent" in the *Installation and Setup Guide* to change port numbers.

2. Restart the Storage Cruiser's agent.

Manually Registering

A manually registered server node does not use any port, so that change of port number is not required.

11.2.3.3 SSL Version Settings for Communicating with Supported Devices

To have Storage Cruiser's agent that is used as the Storage Cluster controller communicate with the following monitoring target devices, the Maintenance-Secure TLSv1.2 or later protocol must be enabled in the SSL version setting for communication on the monitoring target devices. Make sure that the Maintenance-Secure TLSv1.2 or later protocol is enabled and if it is not enabled, enable it.

- ETERNUS DX S6/S5/S4/S3 series (excluding the ETERNUS DX60 S5/S4/S3)
- ETERNUS AF All-Flash Arrays

11.3 [Windows Version] Maintenance of Agent

11.3.1 Action to Take for Troubleshooting

Major errors related to Agent running on a Windows server node and the corrective action to be taken are explained below. In the Event viewer or the GUI window, confirm the occurrence of the errors described below.

Manager Cannot Detect Agent.

- If all access paths under multipath control have been deleted by mistake, perform the recovery procedure below.
 - Restart the Windows server node.
After an access path is deleted, multipath control no longer controls the path, and the related device is not recognized.
 - For the respective devices deleted by mistake on the access path, perform the **Reload Conf.** operation.
 - Set the access path that was deleted by mistake.

- Too many devices are connected to the Windows server node.

If too many devices are recognized by the Windows server node, Agent cannot perform processing within the response time, leading to a communication failure. In this event, check the connection configuration, and reduce the number of devices recognized by the Windows server node.

Access paths can be set for approximately 100 devices per one Windows server node, but the number of devices varies depending on the server node environment.

GUI Window Contents Differ from Physical Configuration.

- An access path from an Emulex HBA cannot be drawn.
The Topology value in a driver parameter in the registry may be incorrect.
This caused by values in the registry being reset to default values, which occurs at either of the times: when a driver is re-installed; and when a driver is automatically re-installed because of the installation a new HBA having a different model number from that of a HBA already installed in a Windows machine (e.g., LP9802 and LP1050).
Using the registry editor, check the driver parameters of the HBA, correct any incorrect value that you find, and then select **Reload Conf.**
Refer to "[4.1.2 Windows Server Node](#)" for information about driver parameters.

11.3.2 Collecting Data for Troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.3.3 Changing Administrative Environment

11.3.3.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)".

11.3.3.2 Changing Port Numbers of Server Node

Refer to "[11.2.3.2 Changing Port Numbers of Server Node](#)".

11.3.3.3 SSL Version Settings for Communicating with Supported Devices

Refer to "[11.2.3.3 SSL Version Settings for Communicating with Supported Devices](#)".

11.4 [Linux Version] Maintenance of Agent

11.4.1 Collecting Data for Troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.4.2 Changing Administrative Environment

11.4.2.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)".

11.4.2.2 Changing Port Numbers of Server Node

Refer to "[11.2.3.2 Changing Port Numbers of Server Node](#)".

11.4.2.3 SSL Version Settings for Communicating with Supported Devices

Refer to "[11.2.3.3 SSL Version Settings for Communicating with Supported Devices](#)".

11.5 [HP-UX Version] Maintenance of Agent

11.5.1 Collecting data for troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.5.2 Changing Administrative Environment

11.5.2.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)".

11.5.2.2 Changing Port Numbers of Server Node


Refer to "[11.2.3.2 Changing Port Numbers of Server Node](#)".

Chapter 12 Linkage to Other Software

This chapter describes the operating methods conducting centralized administration in Systemwalker Centric Manager and other administrative software.

12.1 Linkage with Systemwalker Centric Manager

Linkage with Systemwalker Centric Manager enables it to be used for centralized monitoring of storage devices. In addition, linkage through window operations enables smooth troubleshooting of storage devices.

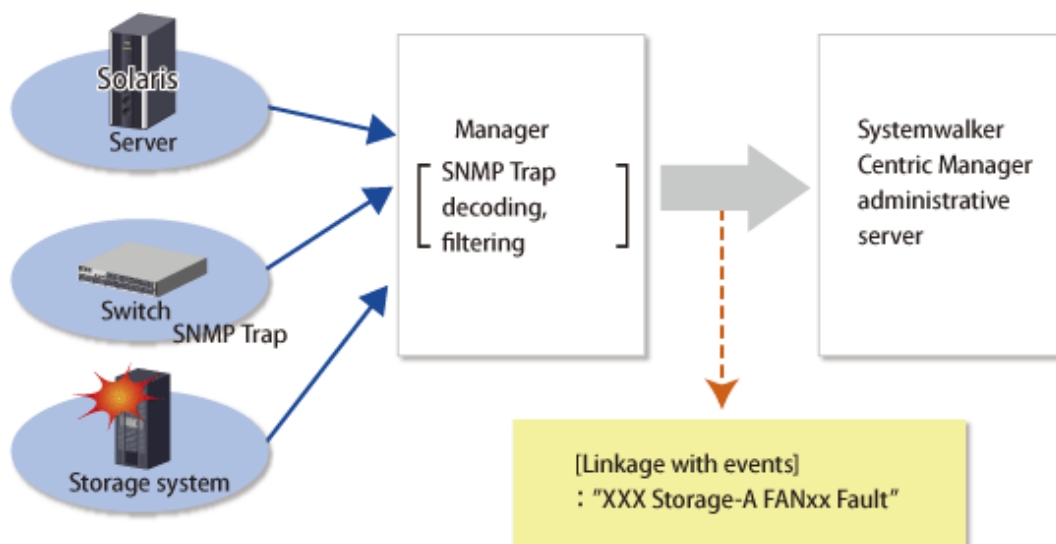

Note

Event Linkage is done not through the system log or event log on the operating system.

12.1.1 Linkage Function with Systemwalker Centric Manager

Centralized Event Monitoring

Icons of the devices managed by this software are displayed in the monitoring window of the Systemwalker Centric Manager administrative client.

When an SNMP Trap is received from a monitored device, this software obtains only an event related to a fault and decodes it appropriately. This event is sent to Systemwalker Centric Manager to display the event. As a result, Systemwalker Centric Manager can be used to integrate existing server node management and storage device monitoring of this software. Moreover, functions such as Systemwalker Centric Manager E-mail and pager can then be used for fault monitoring of the server node and storage devices.

By directly managing the storage equipment from Systemwalker Centric Manager, easier setup is achieved and more comprehensible troubleshooting reports are produced.

The icon for a device where a fault has occurred is indicated by "X" in Systemwalker Centric Manager, and information about the fault is displayed as event contents. When the event content is checked and action is taken for the fault, "Action" is marked for the event. This operation clears the "X" state. The "X" state is not restored automatically by recovery from the fault.

"SSC" is indicated in the message for an event linked by this function to Systemwalker Centric Manager.

Linkage Through Window Operations

On the Systemwalker Centric Manager monitoring window, select a menu item that was added to this software from the pop-up menu of a node of the faulty storage device, and then start it. This facilitates troubleshooting of the faulty storage device.

12.1.2 Required Versions

Linkage of Systemwalker Centric Manager with this software requires one of the following versions of Systemwalker Centric Manager:

- Windows
SystemWalker Centric Manager-M EE/SE V11 or later
- Linux or Solaris OS
SystemWalker Centric Manager GEE V11 or later
SystemWalker Centric Manager-M EE/SE V11 or later

12.1.3 Preparations


Preparations for linkage of Systemwalker Centric Manager with this software are described below.

- Register the storage devices to be managed with this software before setting up a link with Systemwalker Centric Manager.
- So that the names of the devices registered in this software can be resolved, either register the IP address and host name information for each device in the DNS server that is referenced by the Management Server, or define them in the /etc/hosts file on the Management Server.
- To detect node names and achieve software linkage, the Systemwalker Centric Manager administrative server and the Management Server of this software should both be managed by the DNS server, and have the same /etc/hosts definition. Confirm the settings.
- The Systemwalker Centric Manager administrative server must be the same server, or Systemwalker Centric Manager Agent must be installed on the Management Server of this software.
Also, the Systemwalker Centric Manager administrative server or Systemwalker Centric Manager Agent on the same server must be operating during the linkage operation.

12.1.4 Setup Procedure

Follow the procedure below on the Systemwalker Centric Manager operation management client.
Log in to the administrative client with a user name belonging to the Administrators group of the local group.

12.1.4.1 Setup on Systemwalker Centric Manager Administrative Client

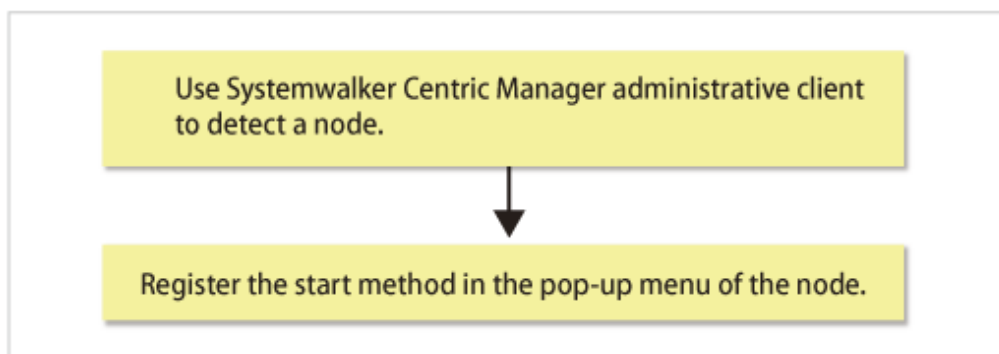

1. On the Systemwalker Centric Manager administrative client, perform the procedure to detect a node in a subnet that contains storage devices.

2. Register the window start method in the pop-up menu of the node.

Register the start method of this software in the pop-up menu of the node of the storage device, using the "mpapreg" command of Systemwalker Centric Manager. Specify the following arguments for the -m option or -c option of the "mpapreg" command.

Option	Description of the Arguments to Specify
-m	Specify "ESC". If "ESC" is being used by another application, specify a string that is not being used.
-c	Specify "\" <i>Web browser execution path</i> >\\" \"https:// <i>ipAddress</i> : <i>portNumber</i> /\"". <ul style="list-style-type: none"> - <i>Web browser execution path</i> When using Microsoft Edge, specify the absolute path of "msedge.exe". When using Chrome, specify the absolute path of "chrome.exe". - <i>ipAddress</i> Specify the IP address or Fully Qualified Domain Name (FQDN) of the Management Server of this software. - <i>portNumber</i> Specify the port number of "Web Console service (ETERNUS SF Manager Apache service)" of this software. Default is 9855.



Refer to the Systemwalker Centric Manager manuals for information on the "mpapreg" command.



- The operating environment must be set up in such a way that the Management Server of this software recognizes the association between "Name" and "IP address" in case that Systemwalker Centric Manager detects the added storage device node by "Name", but not "IP address". Check that the device name can be resolved by the DNS on the Management Server of this software. Software linkage from this software to Systemwalker Centric Manager fails if the Management Server of this software does not recognize the association between an IP number and a node name.
- Perform this operation each time a new storage device is added.
- When the event that is displayed as Info in the status item of the event log window is reported to Systemwalker Centric Manager, it is regarded as "Display Mode: general" and is not displayed on the monitoring window. If you want to display it, execute [Display Mode in the Monitored Viewer] from **Action > Action Setting > Message** on the Systemwalker Centric Manager menu. Refer to the Systemwalker Centric Manager manual for details about [Display Mode in the Monitored Viewer].
- If the starting method of the Management Server of this software is changed, execute the "mpapreg" command to delete the registered menu, and register it again.
- Confirm the content of registration by the following commands when the icon of this software is not displayed in the pop-up menu of the storage device node though the menu addition by the "mpapreg" command has normally.
- After completing the procedure, restart the Systemwalker Centric Manager administrative client, and execute "node detection" in the monitoring area. Updating of registered icons is enabled in the display.
- A parameter error (swsag5101) occurs if the mpapreg command contains an invalid parameter when starts from the batch file.

12.1.4.2 Action to Be Taken If Systemwalker Centric Manager Administrative Server and This Software Management Server Are Same Server

If the Systemwalker Centric Manager administrative server and the Management Server of this software are the same server, both Systemwalker Centric Manager and this software receive and display SNMP Traps from devices. Perform the following task to prevent Systemwalker Centric Manager from directly receiving and displaying SNMP Traps from devices:

Suppressing Systemwalker Centric Manager Reception of SNMP Traps from Devices Managed by This Software


If one server node has the Systemwalker Centric Manager administrative server and Management Server of this software, the following steps prevent Systemwalker Centric Manager from direct reception of SNMP Traps of devices managed by this software. As a result, SNMP Traps would be received and decoded by this software and only SNMP Traps necessary for fault monitoring would be posted to Systemwalker Centric Manager. Consequently, when the SNMP Trap display function supported by Systemwalker Centric Manager is used, multiple traps appear for a single event or unnecessary SNMP Traps are displayed.

Information

These settings are not required if the Systemwalker Centric Manager-supported SNMP Trap display function is enabled.

1. From a Systemwalker Centric Manager administrative client, select [Event] - [Action Definition] in "System Monitoring."


The Monitored Event Table dialog appears.

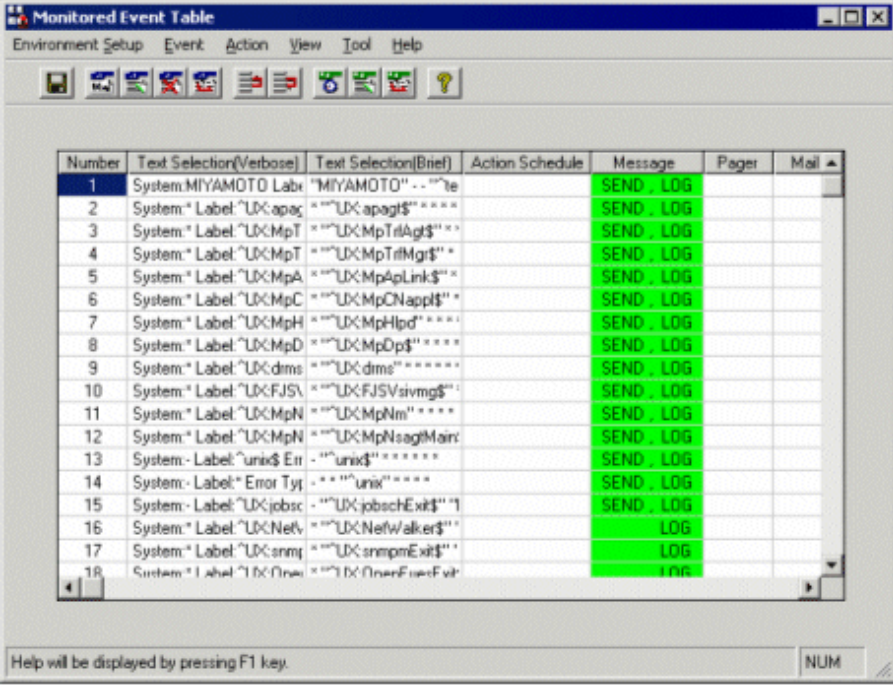

Number	Text Selection (Verbose)	Text Selection (Brief)	Action Schedule	Message	Pager	Mail
1	System:MIYAMOTO Labr	"MIYAMOTO" -- ""te		SEND, LOG		
2	System* Label:~UX:apac	"~UX:apact\$"" "" ""		SEND, LOG		
3	System* Label:~UX:MpT	"~UX:MpTnlAgt\$"" ""		SEND, LOG		
4	System* Label:~UX:MpT	"~UX:MpTnlMgt\$"" ""		SEND, LOG		
5	System* Label:~UX:MpA	"~UX:MpAplLink\$"" ""		SEND, LOG		
6	System* Label:~UX:MpC	"~UX:MpCNappt\$"" ""		SEND, LOG		
7	System* Label:~UX:MpH	"~UX:MpHpd\$"" "" ""		SEND, LOG		
8	System* Label:~UX:MpD	"~UX:MpDps\$"" "" ""		SEND, LOG		
9	System* Label:~UX:dms	"~UX:dms\$"" "" "" ""		SEND, LOG		
10	System* Label:~UX:FJS\	"~UX:FJSVsvimg\$"" ""		SEND, LOG		
11	System* Label:~UX:MpN	"~UX:MpNm\$"" "" ""		SEND, LOG		
12	System* Label:~UX:MpN	"~UX:MpNagMain\$"" ""		SEND, LOG		
13	System - Label:~unix\$ Err	"~unix\$"" "" "" ""		SEND, LOG		
14	System - Label:~Error Typ	"~"" "" "" "" ""		SEND, LOG		
15	System - Label:~UX:jobsc	"~UX:jobscExit\$"" "" ""		SEND, LOG		
16	System* Label:~UX:Netv	"~UX:Netwalker\$"" ""		LOG		
17	System* Label:~UX:snmq	"~UX:snmqExit\$"" ""		LOG		
18	System* Label:~UX:Onw	"~UX:OnwFunctExit\$"" ""		LOG		

2. Select [Event] - [Event Addition] in the Monitored Event Table dialog.

The Event Definition dialog appears.

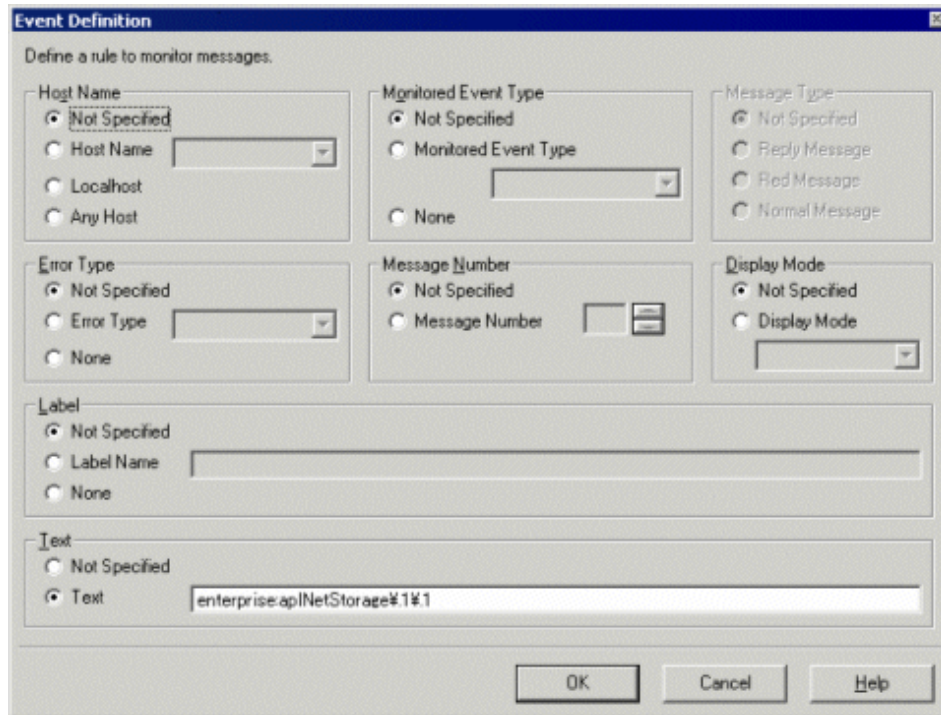

Define the following items:

Host Name

Check "Not specified".

Monitored Event Type

Check "Not specified".

Error Type

Check "Not specified".

Message Number

Check "Not specified".

Display Mode (Only for Systemwalker Centric Manager 5.1 or Later)

Check "Not specified".

Label

Check "Not specified".

Text

Specify one of the values shown below for an event definition.

Be sure to define this item only when individual devices are being managed. Otherwise, the item need not be defined.

Table 12.1 Lists of Text

Device	Value
ETERNUS DX series ETERNUS AF All-Flash Arrays	enterprise:ap\NetStorage\1 or enterprise:enterprises\.211\4\1\1\126\1 (*1)
ETERNUS LT20 S2	enterprise:enterprises\.20884\10893\2\101\3


Device	Value
HP Surestore	enterprise:enterprises\11\2\3\9\7\1 enterprise:enterprises\11\2\3\9\7\2
ETERNUS LT140/LT260	enterprise:enterprises\20884\3
ETERNUS LT270 S2	enterprise:aplNetStorage\3\6 or enterprise:enterprises\211\4\1\1\126\3\6 (*1)
ETERNUS AX/HX series NetApp FAS Series NetApp FAS Series (with clustered Data ONTAP) NetApp AFF series	enterprise:enterprises\789
ETERNUS AB/HB series	enterprise:enterprises\789\1123\2\500
Brocade Fibre Channel switch PRIMERGY Fibre Channel switch blade VDX series PRIMERGY BX Ethernet Fabric Switch	enterprise:enterprises\1588\2\1\1
Performance Agent trap Device polling	enterprise:aplSANMgr or enterprise:enterprises\211\4\1\3\21 (*1)
Brocade Fibre Channel switch, PRIMERGY Fibre Channel switch blade common	enterprise:experimental\94 (*2)
ETERNUS CS2000	enterprise:enterprises\231\2\48\2\0

*1: Specify it when Systemwalker Centric Manager cannot recognize "aplNetStorage" or "aplSANMgr".

*2: The device not supported with Storage Cruiser includes the device which reports on SNMP Trap of this experimental\94 and the event of those devices is controlled.

3. Select [Action] - [Action Setting] for the event set in step 2.

The Action Definition dialog appears.

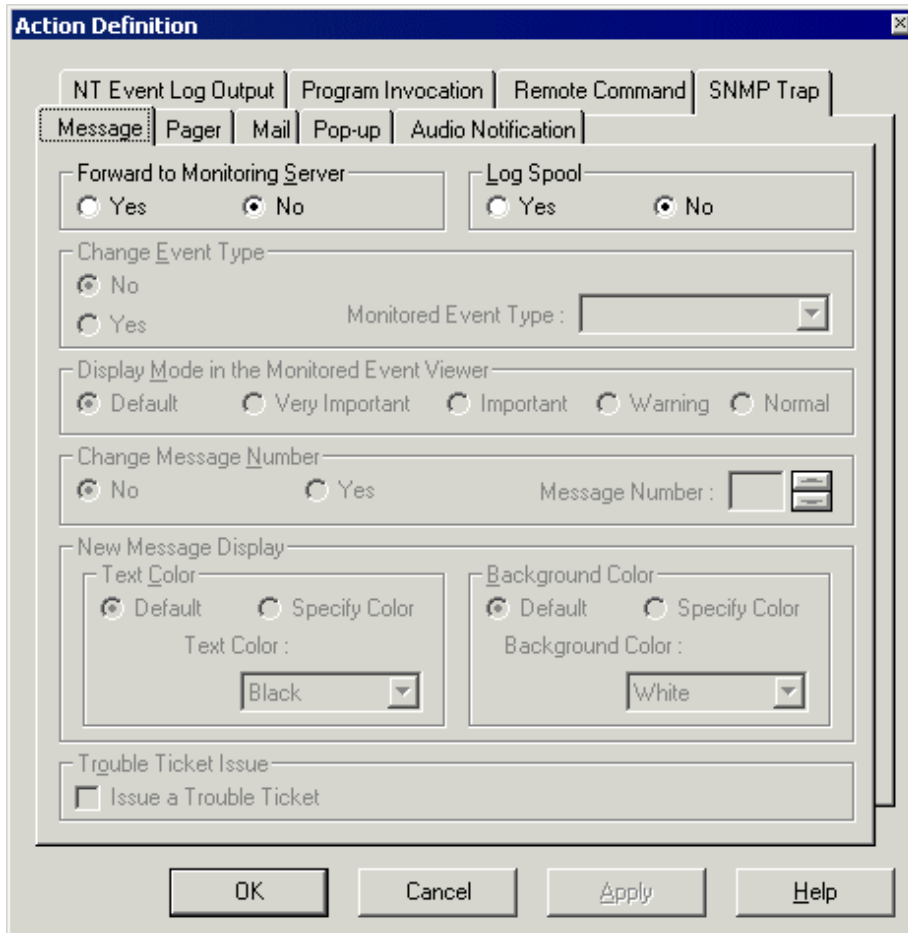

Select the [Message] tab, and define the following items:

Forward to Monitoring Server

Check "No"

Log Spool


Check "No"

4. Repeat steps 1 to 3 for each of the text messages in the "Table 12.1 Lists of Text".
If the SNMP standard trap is reported as an event from a storage device, refer to the above description, and suppress transmission of the SNMP standard trap according to your operation mode.

12.1.4.3 Setting Confirmation Test

If the management device is an ETERNUS DX series, an ETERNUS AF All-Flash Arrays, or an Fibre Channel switch device, a procedure and command are provided which allow you to check if the Systemwalker Centric Manager linkage is correctly set. Execute the "5.3 Checking SNMP Trap Settings" to check if it is properly running.

The figure below shows an example of the Systemwalker Centric Manager window displayed during event linkage with Systemwalker Centric Manager.

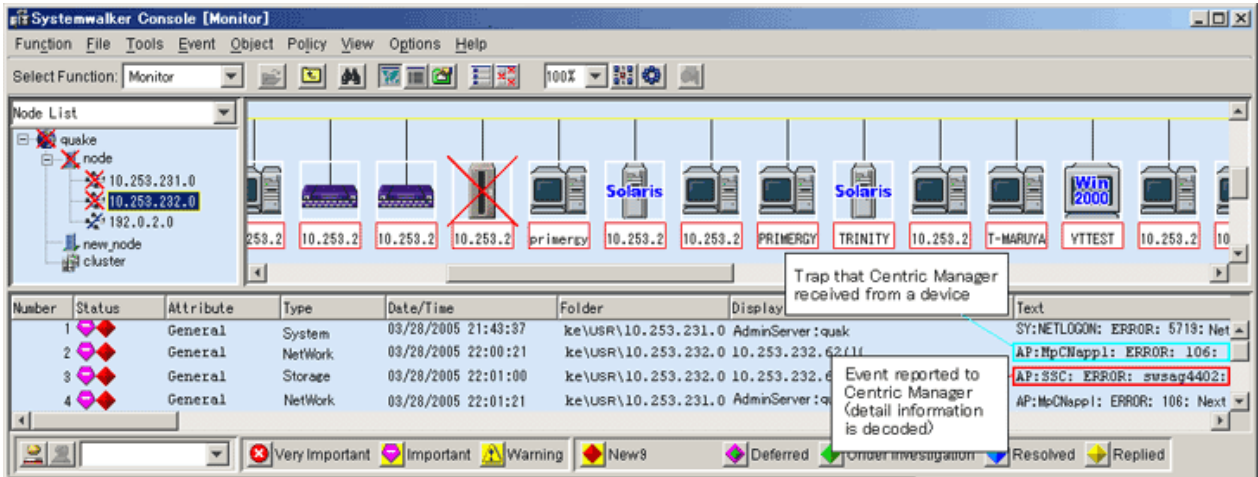

12.2 Linkage with Systemwalker Service Quality Coordinator

Linkage with Systemwalker Service Quality Coordinator, Systemwalker Service Quality Coordinator can make use of performance information of storage devices and Fibre Channel switches.

Refer to the *Systemwalker Service Quality Coordinator User's Guide* or the *Systemwalker Service Quality Coordinator User's Guide* for the procedure for linkage.

Items That Can Be Linked to Systemwalker Service Quality Coordinator

Fibre Channel Switch

	Performance Information (Unit)
Port	Transfer rates of send/receive data (MB/S)
	Number of CRC errors

ETERNUS Disk Storage Systems

	Performance Information (Unit)
LUN Logical volume RAID group	Read/Write count (IOPS)
	Read/Write data transfer rate (MB/S)
	Read/Write response time (msec)
	Read/Pre-fetch/Write cache hit rate (%)
Disk drive	Disk busy rate (%)
CM	Load (CPU usage) rate (%)



Note

- The performance information that can be managed depends on the version of Systemwalker Service Quality Coordinator.
- The CM load (CPU usage) rate for the ETERNUS DX400 S2 series, DX8000 S2 series includes the ROE load (CPU usage) rate.



Information

After the performance information for the storage devices and the Fibre Channel switches is displayed by this product, it can be used with Systemwalker Service Quality Coordinator. The time required to display the performance

information with this product varies depending on the model of the device and the number of logical volumes whose performance is maintained. Refer to the following table for details.

Monitoring Condition		Time Required to Display the Performance Information
Device Model Name	Number of Logical Volumes Whose Performance Is Maintained	
ETERNUS DX60 S5/S4/S3 ETERNUS DX100 S5/S4/S3 ETERNUS DX200 S5/S4/S3 ETERNUS AF150 S3 ETERNUS AF250 S3/S2 ETERNUS AF250	1,472 or less	60 seconds or less
	1,473 to 3,200	90 seconds or less
	3,201 or more	300 seconds or less
ETERNUS DX500 S5/S4/S3 ETERNUS DX600 S6/S5/S4/S3 ETERNUS AF650 S3/S2 ETERNUS AF650	1,024 or less	60 seconds or less
	1,025 to 2,752	90 seconds or less
	2,753 to 11,072	300 seconds or less
	11,073 or more	600 seconds or less
ETERNUS DX900 S6/S5 ETERNUS DX8900 S6 ETERNUS DX8000 S4/S3 series	3,200 or less	60 seconds or less
	3,201 to 12,416	90 seconds or less
	12,417 or more	300 seconds or less
ETERNUS DX60 S2	128 or less	10 seconds or less
	129 to 2,048	60 seconds or less
	2,049 or more	90 seconds or less
ETERNUS DX80 S2 ETERNUS DX90 S2	No limitation	60 seconds or less
ETERNUS DX400 S2 series ETERNUS DX8100 S2	1,024 or less	60 seconds or less
	1,025 or more	90 seconds or less
ETERNUS DX8700 S2	1,024 or less	90 seconds or less
	1,025 to 8,192	300 seconds or less
	8,193 to 16,384	600 seconds or less
Brocade series	-	10 seconds or less

Method to Identify CM or CM CPU of ETERNUS Disk Storage System from Performance Information Collected by Systemwalker Service Quality Coordinator

Based on the string "0x300nn" included in the resource ID of the performance information collected by Systemwalker Service Quality Coordinator, identify the CM or CM CPU of the target ETERNUS Disk storage system from the following correspondence table.

Storage Device Name	String Indicating CM or CM CPU Included in Resource ID	CM or CM CPU
ETERNUS DX600 S6	0x30010	CM#0
ETERNUS DX100 S5/DX200 S5	0x30011	CM#1
ETERNUS DX500 S5/DX600 S5	0x30012	CM#2
ETERNUS DX100 S4/DX200 S4	0x30013	CM#3
ETERNUS DX500 S4/DX600 S4	0x30014	CM#4
ETERNUS DX100 S3/DX200 S3	0x30015	CM#5
ETERNUS DX500 S3/DX600 S3		

Storage Device Name	String Indicating CM or CM CPU Included in Resource ID	CM or CM CPU
ETERNUS DX60 S2/DX80 S2/DX90 S2 ETERNUS AF All-Flash Arrays	0x30016	CM#6
	0x30017	CM#7
ETERNUS DX900 S6/S5 ETERNUS DX8900 S6/S4 ETERNUS DX8000 S3 series	0x30010	CE#0 CM#0
	0x30011	CE#1 CM#0
	0x30012	CE#2 CM#0
	0x30013	CE#3 CM#0
	0x30014	CE#4 CM#0
	0x30015	CE#5 CM#0
	0x30016	CE#6 CM#0
	0x30017	CE#7 CM#0
	0x30018	CE#8 CM#0
	0x30019	CE#9 CM#0
	0x3001a	CE#A CM#0
	0x3001b	CE#B CM#0
	0x30020	CE#0 CM#1
	0x30021	CE#1 CM#1
	0x30022	CE#2 CM#1
	0x30023	CE#3 CM#1
	0x30024	CE#4 CM#1
	0x30025	CE#5 CM#1
	0x30026	CE#6 CM#1
	0x30027	CE#7 CM#1
0x30028	CE#8 CM#1	
0x30029	CE#9 CM#1	
0x3002a	CE#A CM#1	
0x3002b	CE#B CM#1	
ETERNUS DX400 S2 series ETERNUS DX8000 S2 series	0x30010	CM#0 CPU#0
	0x30011	CM#1 CPU#0
	0x30012	CM#2 CPU#0
	0x30013	CM#3 CPU#0
	0x30014	CM#4 CPU#0
	0x30015	CM#5 CPU#0
	0x30016	CM#6 CPU#0
	0x30017	CM#7 CPU#0
	0x30018	CM#0 CPU#1
	0x30019	CM#1 CPU#1
	0x3001a	CM#2 CPU#1
	0x3001b	CM#3 CPU#1
	0x3001c	CM#4 CPU#1

Storage Device Name	String Indicating CM or CM CPU Included in Resource ID	CM or CM CPU
	0x3001d	CM#5 CPU#1
	0x3001e	CM#6 CPU#1
	0x3001f	CM#7 CPU#1

12.3 Linkage with Other Administrative Software

Events can be sent to other administrative software.

The Shell/bat linkage function is used for such linkage. Refer to "[6.3 Event Display and Linkage](#)" for details.

Chapter 13 Command References

This chapter explains how to use commands.

For the values that the commands in this chapter output, if the "0x" is added to the beginning of the numeric value, it is a hexadecimal number. If the "0x" is not added, the numeric value is a decimal number.

13.1 Manager Commands

This section explains command operations on the Management Server.

13.1.1 Commands for Operating Environment Management

The following sub sections explain the commands for managing the operating environment.

13.1.1.1 sanadmsh chtraprcvip (SNMP Trap Transmission Place IP Address Change Command)

NAME

sanadmsh chtraprcvip - changes SNMP Trap transmission place IP address

SYNOPSIS

- For Windows environments

```
sanadm chtraprcvip -h
```

```
sanadm chtraprcvip -all -oldip oldIpAddr [-newip newIpAddr]
```

```
sanadm chtraprcvip deviceID -oldip oldIpAddr [-newip newIpAddr]
```

- For Solaris or Linux environments

```
sanadmsh chtraprcvip -h
```

```
sanadmsh chtraprcvip -all -oldip oldIpAddr [-newip newIpAddr]
```

```
sanadmsh chtraprcvip deviceID -oldip oldIpAddr [-newip newIpAddr]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\bin\sanadm chtraprcvip
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/bin/sanadmsh chtraprcvip
```

DESCRIPTION

After the IP address of the Management Server is changed, delete the old IP address of the Management Server that is the SNMP Trap transmission place from the devices registered with this software, and add the new IP address.

In a Windows environment, only a user of the Administrators group can execute this command.

In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

Although the SNMP Trap transmission place setting for a device may be changed with the Management Software on the device, this software provides this command to facilitate changing.

This command is only valid on devices using SNMPv1.

OPERANDS

deviceID

Applies SNMP Trap transmission place setting to the limited devices. Specify the device type according to the following tables. Afterwards, specify how to recognize the device.

Device Type	Device Recognition Method
-host -storage -library -switch	One of which must be specified. - ip:IP address of a device - sysname:SysName name of a device SNMP setting

OPTIONS

-h

Displays help about the argument format of this command.

-all

Applies SNMP Trap transmission place setting to all devices managed by this software. Executing the command specified with this argument outputs device names and execution results in execution order to the standard output. If the Management Server has more than one IP address, for example, the Management Server is connected to multiple subnets, a device may not be set with the correct SNMP Trap transmission place. After this setting is performed, check whether the correct Management Server address is set as the SNMP Trap transmission place setting on the device side.

-oldip *oldIpAddr*

Specify the old IP address of the Management Server for *oldIpAddr*. Delete this IP address from the SNMP transmission place address of managed devices.

-newip *newIpAddr*

Specify the new IP address of the Management Server for *newIpAddr*. Add this IP address to the SNMP transmission place address.

If this option is omitted, the new IP address of the new Management Server is automatically specified. It is recommended to specify this option considering the Management Server that has multiple IP addresses.

USAGE

Execute the command after changing the IP address of Manager. The command may be executed for all devices managed by this software by the one command or for a specific device.

Devices that can be targets of the command are devices for which SNMP Trap transmission place settings can be defined automatically from this software.

The status of every target device must be Normal.

EXAMPLES

The following are the examples of executed commands in a Solaris or Linux environment:

- Execute the SNMP Trap transmission place change on all managed devices that can automatically execute SNMP Trap transmission place setting.

```
> sanadmsh chtraprcvip -all -oldip 192.0.2.10 -newip 192.0.2.11
```

- Execute the SNMP Trap transmission place change on server nodes that sysname is defined in "host1".

```
> sanadmsh chtraprcvip -host sysname:host1 -oldip 192.0.2.10 -newip 192.0.2.11
```

13.1.1.2 swtraptest (SNMP Trap Test for Fibre Channel Switch)

NAME

swtraptest - tests of SNMP Trap

SYNOPSIS

```
swtraptest ipAddr
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\bin\swtraptest
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/bin/swtraptest
```

DESCRIPTION

This command checks whether this software can receive an SNMP Trap correctly, display an event, and cooperate with Systemwalker Centric Manager and Shell/Bat.

A simulated Fibre Channel switch SNMP Trap (FC Port fault) is created and issued to the Management Server.

This command is only valid on devices using SNMPv1.

OPERANDS

ipAddr

Specify the IPv4 address of the Fibre Channel switch which is to check the SNMP Trap setting by this command. IPv6 address cannot be specified.

The Fibre Channel switch must be a device managed by this software.

OPTIONS

None.

EXAMPLES

- Executing this command for the Fibre Channel switch whose IP address is 192.0.2.11.

```
> swtraptest 192.0.2.11
```

NOTES

- Even the input IP address is not for a Fibre Channel switch device, this command can be executed. In this case, it executes as the event of device which IP address is input.
- Following Fibre Channel switches can be tested by using this command.
 - Brocade series
 - PRIMERGY switch blade
 - VDX series
 - PRIMERGY BX Ethernet Fabric Switch
- The SNMP Trap community name that is issued using this command, is fixed to "public".

13.1.1.3 grtraptest (SNMP Trap Test for ETERNUS Disk Storage System)

NAME

grtraptest - tests of SNMP Trap

SYNOPSIS

```
grtraptest ipAddr
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\bin\grtraptest
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/bin/grtraptest
```

DESCRIPTION

This command checks whether this software can receive an SNMP Trap correctly, display an event, and cooperate with Systemwalker Centric Manager and Shell/Bat.

A simulated SNMP Trap (FAN fault) for the ETERNUS Disk storage system is created within the Management Server and is issued to the Management Server itself.

This command is only valid on devices using SNMPv1.

OPERANDS

ipAddr

Specify the IPv4 address of the ETERNUS Disk storage system which is to check the SNMP Trap settings. IPv6 address cannot be specified.

The ETERNUS Disk storage system must be a device managed by this software.

OPTIONS

None.

EXAMPLES

- Executing this command for the ETERNUS Disk storage system whose IP address is 192.0.2.12.

```
> grtraptest 192.0.2.12
```

NOTES

- This command can be executed even if you have input the IP address for a device other than an ETERNUS Disk storage system.
In that case, the command is executed as an event of the device corresponding to the designated IP address.
- The SNMP Trap community name that is issued using this command, is fixed to "public".

13.1.1.4 storageadm zone (Host Affinity and Zoning Operation Command)

NAME

storageadm zone - operates the host affinity and zoning

SYNOPSIS

```
storageadm zone add -storage cawwpn,affinityGroup -hba hbawwpn [-ipaddr ipAddr[,ipAddr]] [-hostrsp hostResponse] [-update all] [-f [-s]]
```

```
storageadm zone delete -storage cawwpn,affinityGroup -hba hbawwpn [-ipaddr ipAddr[,ipAddr]] [-update all] [-s]
```

```
storageadm zone info [-ipaddr ipAddr[,ipAddr,...]] [-check]] [-fast] [-csv] [-hex] [-hostrsp] [-tfo]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm zone
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm zone
```

DESCRIPTION

This command is used to set/delete/display the storage device host affinity and Fibre Channel switch zoning. In a Windows environment, only a user of the Administrators group can execute this command. In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

Specify the storage device CA WWPN, affinity group, and WWPN of the set HBA in the command parameter to set/delete the storage device host affinity and Fibre Channel switch zoning. The set host affinity and zoning is also displayed.

The target storage device and Fibre Channel switch must be devices managed by this software.

If Storage Cluster is configured for CA of the storage device, no zoning is set or deleted for WWPN whose TFO status is "Standby".

OPERANDS

add

This sets the host affinity and zoning.

delete

This deletes the host affinity and zoning.

info

This displays the host affinity and zoning.

OPTIONS

Options of "add" Operand

-storage *cawwpn,affinityGroup*

Designate the WWPN and affinity group number for the CA of the storage device for which host affinity is being set.

The CA WWPN is specified with a 16-character long hexadecimal number or a 23-character long hexadecimal number with each two digits separated by a colon (:). For example, if separating the characters with colons, the WWPN is written in a manner such as "11:11:11:11:11:11".

The affinity group number is specified by a decimal or hexadecimal number. For example, specify affinity group number 16 as either "-storage 11111111111111,16" in decimal notation or "-storage 11111111111111,0x10" in hexadecimal notation.

If Storage Cluster is configured, specify CA_WWPN displayed by the storageadm zone info command for *cawwpn*.

-hba *hbawwpn*

Specify the WWPN for the HBA to be set to the host affinity and zoning.

The WWPN for the HBA is written with a 16-character long hexadecimal number or a 23-character long hexadecimal number with each two digits separated by a colon (:). For example, if separating the characters with colons, the WWPN is written in a manner such as "22:22:22:22:22:22:22:22".

-ipaddr *ipAddr*[,*ipAddr*]

Set the IP address of a storage device and/or Fibre Channel switch. To specify the IP addresses of both devices, separate the two IP addresses with a comma (,). The two IP addresses can be specified in either order.

Specified Device	Command Action
Storage device	The command checks that the status allows for setting the host affinity to the affinity group of the CA for the storage device designated with the -storage option. The command sets the host affinity to the storage device only if the status allows the setting. If the status does not allow for the setting to be made, the command terminates with an error.
Fibre Channel switch	The command checks that the status allows for setting the WWPN and zoning for the HBA specified with the -hba option within the fabric which includes the Fibre Channel switches connected to the CA of the storage device specified with the -storage option (i.e. all Fibre Channel switches connected in a cascade connection). The command sets the zoning to the Fibre Channel switch only if the status allows the setting. If the status does not allow the setting, the command terminates with an error.
Both storage device and Fibre Channel switch	The command checks that the status allows you to set the host affinity or zoning to the respective devices. The command sets the host affinity and zoning only if the status allows for the settings to be made for both devices. If the status is such that the setting cannot be made to either of the devices, the command terminates with an error.

-hostrsp *hostResponse*

Specify the host response being used by the HBA.

If this option is omitted, the storage device's default host response is set.

-update all

Specify this option to update the information this software is managing to the latest information after the completion of the setup.

If this option is omitted, information managed by this software is not updated. To update the information, be sure to execute the "info" operand without specifying the -fast option.

This option is effective for when there are few settings needing to be updated. The "info" operand is effective for updating information after performing multiple settings at one time.

-f

Specify this option if forcibly setting WWPN zoning to a Fibre Channel switch in a status of not having zoning set up.

Check the security settings for the Fibre Channel switch when specifying this option. Specify this option only if setting WWPN zoning.

Moreover, if you specify this option under the conditions described below, the command is executed the same as if this option is omitted.

- If only a storage device is specified for the -ipaddr option
- If zoning is already set for the Fibre Channel switch to which you intend to set the zoning

-s

Continues the processing without a confirmation message being output.
This option can be specified only when the -f option is specified.

Options of "delete" Operand

-storage *cawwpn,affinityGroup*

Designate the WWPN and affinity group number for the CA of the storage device for which host affinity is being deleted.

The CA WWPN is specified with a 16-character long hexadecimal number or a 23-character long hexadecimal number with each two digits separated by a colon (:). For example, if separating the characters with colons, the WWPN is written in a manner such as "11:11:11:11:11:11".

The affinity group number is specified by a decimal or hexadecimal number. For example, specify affinity group number 16 as either "-storage 11111111111111,16" in decimal notation or "-storage 11111111111111,0x10" in hexadecimal notation.

If Storage Cluster is configured, specify CA_WWPN displayed by the storageadm zone info command for *cawwpn*.

-hba *hbawwpn*

Specify the WWPN for the HBA from which the host affinity and zoning to be deleted.

The WWPN for the HBA is written with a 16-character long hexadecimal number or a 23-character long hexadecimal number with each two digits separated by a colon (:). For example, if separating the characters with colons, the WWPN is written in a manner such as "22:22:22:22:22:22:22".

-ipaddr *ipAddr[,ipAddr]*

Set the IP address of a storage device and/or Fibre Channel switch. To specify the IP addresses of both devices, separate the two IP addresses with a comma (,). The two IP addresses can be specified in either order.

Specified Device	Command Action
Storage device	The command checks that the status allows for deleting the host affinity from the affinity group of the CA for the storage device designated with the -storage option. The command deletes the host affinity from the storage device only if the status allows the deletion. If the status does not allow the deletion, the command terminates with an error.
Fibre Channel switch	The command checks that the status allows for deleting the WWPN and zoning for the HBA specified with the -hba option within the fabric which includes the Fibre Channel switches connected to the CA of the storage device specified with the -storage option (i.e. all Fibre Channel switches connected in a cascade connection). The command deletes the zoning to the Fibre Channel switch only if the status allows the deletion. If the status does not allow the deletion, the command terminates with an error.
Both storage device and Fibre Channel switch	The command checks that the status allows for deleting the host affinity or zoning from the respective devices. The command deletes the host affinity and zoning only if the status allows for the deletion for both devices. If the status is such that the deletion cannot be made to either of the devices, the command terminates with an error.

-update all

Specify this option to update the information this software is managing to the latest information after the completion of the setup.

If this option is omitted, information managed by this software is not updated. To update the information, be sure to execute the "info" operand without specifying the -fast option specified.

This option is effective for when there are few deletion. The "info" operand is effective for updating information after performing multiple deletions at one time.

-s

Processing continues without output of a confirmation message.

Options of "info" Operand

-ipaddr *ipAddr*[,*ipAddr*, ...]

Displays the zoning information for the Fibre Channel switches corresponding to the specified IP addresses or host affinity information for the host affinities set to the CA of the storage devices. To display information for multiple storage devices and Fibre Channel switches, specify the IP addresses separated by comma (,).

If this option is omitted, the command displays the information for all storage devices and Fibre Channel switches registered with this software.

-check

Checks that the devices specified with the **-ipaddr** option are storage devices or Fibre Channel switches which are registered to this software.

Checks that the status allows for display of the information. The information for the designated devices is displayed only if the status allows for it. If the status does not allow for information to be displayed or if the devices are not devices applicable to this display, the command terminates with an error.

This option can be specified when the **-ipaddr** option is specified.

-fast

Specify this to display storage device and Fibre Channel switch information from the existing information managed by this software.

If this option is omitted, the storage device and Fibre Channel switch information are displayed after the information managed by this software has been updated to the latest information.

This option is effective for displaying information after you have executed the "add" operand or the "delete" operand with the **-update all** option specified.

-csv

Displays the storage device and Fibre Channel switch information in CSV format.

If this option is omitted, the information is displayed in a table format.

-hex

Specify this to display the storage device and Fibre Channel switch information in hexadecimal format. If this option is specified, the affinity group numbers for storage devices are displayed in hexadecimal format.

-hostrsp

If this option is specified, the host response number used by the HBA and the host response's alias name are displayed.

If this option is omitted, the host response number and host response alias name, including the table border and column names are not displayed.

-tfo

The following items concerning Storage Cluster are output by the addition.

- Response WWPN
- TFO status

If this option is specified together with **-hostrsp** option at the same time, this item is displayed after host response information.

If not specified together with **-hostrsp** option at the same time, this item is displayed after HBA_WWPN.

EXAMPLES

- Adding the host affinity and zoning

```
> storageadm zone add -storage 1111111111111111,3 -hba 2222222222222222
```

- Deleting the host affinity and zoning

```
> storageadm zone delete -storage 1111111111111111,3 -hba 2222222222222222
```

- Adding the zoning

(when the IP address of a Fibre Channel switch is 192.0.2.1)

```
> storageadm zone add -storage 1111111111111111,3 -hba 2222222222222222 -ipaddr 192.0.2.1
```

- Displaying the host affinity and zoning

```
> storageadm zone info
<<< FC Switch Zone Information >>>
DEVICE_NAME(IP_ADDRESS)      ZONE_NAME      ZONE_WWPN
-----
Switch1(192.0.2.10)          SNM_0001       1111111111111111;2222222222222222
                               SNM_0002       3333333333333333;4444444444444444
-----
```

```
<<< FC CA Zone Information >>>
DEVICE_NAME(IP_ADDRESS)      CA_WWPN        AFFINITY_GROUP  HBA_WWPN
-----
E4000M300(192.0.2.11)        1111111111111111 3                2222222222222222
-----
```

- Displaying the host affinity and zoning in CSV format and in hexadecimal format.

```
> storageadm zone info -csv -hex
DEVICE_NAME(IP_ADDRESS),ZONE_NAME,ZONE_WWPN
Switch1(192.0.2.10),SNM_0001,1111111111111111;2222222222222222
,SNM_0002,3333333333333333;4444444444444444

DEVICE_NAME(IP_ADDRESS),CA_WWPN,AFFINITY_GROUP,HBA_WWPN
E4000M300(192.0.2.11),1111111111111111,0x0003,2222222222222222
```

- Host affinity and zoning including Storage Cluster information are displayed in table format.

```
> storageadm zone info -tfo
<<< FC Switch Zone Information >>>
DEVICE_NAME(IP_ADDRESS)      ZONE_NAME      ZONE_WWPN
-----
Switch1(192.0.2.10)          SNM_0001       1111111111111111;2222222222222222
                               SNM_0002       3333333333333333;4444444444444444
-----

<<< FC CA Zone Information >>>
DEVICE_NAME(IP_ADDRESS)      CA_WWPN        AFFINITY_GROUP  HBA_WWPN      TFO_WWPN
TFO_STATUS
-----
E4000M300(192.0.2.11)        1111111111111111 3                2222222222222222 1111111111111111
Active
-----
```

- Host affinity and zoning including Storage Cluster information are displayed in CSV format and hexadecimal notation.

```
> storageadm zone info -csv -hex -tfo
DEVICE_NAME(IP_ADDRESS),ZONE_NAME,ZONE_WWPN
Switch1(192.0.2.10),SNM_0001,1111111111111111;2222222222222222
,SNM_0002,3333333333333333;4444444444444444
```

```
DEVICE_NAME(IP_ADDRESS),CA_WWPN,AFFINITY_GROUP,HBA_WWPN,TFO_WWPN,TFO_STATUS
E4000M300(192.0.2.11),1111111111111111,0x0003,2222222222222222,1111111111111111,Active
```

NOTES

- This command cannot be used to register Fibre Channel switches if zoning has not been set. Create a temporary zone and then register the Fibre Channel switch with this software. Refer to "Zoning setting" in "Setting" of the target device of ["4.2 Fibre Channel Switch"](#) for details on creating a temporary zone. By specifying the -f option, you can forcibly set zoning even to those Fibre Channel switches for which zoning has not been set. However, if you have created a temporary zone or performed a forcible setting using the -f option, all accesses except to the zoning specified with the -f option are blocked. Therefore, be sure not to perform this task while the environment for the target Fibre Channel switch is operating. Perform this task either before starting the operation of the environment after the installation of the Fibre Channel switch environment or while the operation of the environment is stopped.
- The zoning for the Fibre Channel switch is set within the fabric which includes the Fibre Channel switches connected to the CA of the specified storage device (i.e. all Fibre Channel switches connected in a cascade connection) to the fibre switches equipped with the latest firmware.
- The Fibre Channel switch and storage device must be connected using a Fibre Channel cable. If the Fibre Channel cable is not connected, Fibre Channel switch zoning is not set. Connect the Fibre Channel cable, and then re-execute the command.
- Zone settings (AffinityGroup creation) must be configured in the ETERNUS Disk storage system in advance, using ETERNUS Web GUI.
- Only the Brocade Fibre Channel switch, PRIMERGY Fibre Channel switch blades, VDX series, and PRIMERGY BX Ethernet Fabric Switch are supported.
- A confirmation message is output in the situation below. Enter "y" to continue or "n" to cancel. The confirmation message can be surpass by specifying the -s option.
 - If the -f option is specified with the "add" operand but -s option is not specified.
 - If the -s option is not specified with the "delete" operand.

A confirmation message is as follows.

```
Are you sure? [y/n]:
```

- Host affinity cannot be operated for the Virtual Volume.
- Only a usual host affinity is deleted when both a usual host affinity and the host affinity for Virtual Volume for the specified HBA and CA are set, and neither the host affinity for Virtual Volume nor the zoning of the fiber channel switch are deleted.

13.1.1.5 storageadm iscsizone (Host Affinity Operation Command)

NAME

storageadm iscsizone - operates iSCSI host affinity

SYNOPSIS

```
storageadm iscsizone add -ipaddr ipAddr -storage {portIpAddr,portIscsiName,affinityGroup /
portID,affinityGroup} -server {serverPortIpAddr,serverPortIscsiName | serverPortIscsiName} [-salias
serverAlias] [-svname serverName] [-svhostrsp serverHostResponse] [-check]
```

```
storageadm iscsizone delete -ipaddr ipAddr -storage {portIpAddr,portIscsiName,affinityGroup /
portID,affinityGroup} -server {serverPortIpAddr,serverPortIscsiName | serverPortIscsiName} [-check]
[-s]
```

```
storageadm iscsizone info [-ipaddr ipAddr[,ipAddr,...] [-check]] [-csv] [-hex] [-expand]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm iscsizone
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm iscsizone
```

DESCRIPTION

This command is used to set, delete, and display the host affinity of the storage device iSCSI. In a Windows environment, only a user of the Administrators group can execute this command. In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

In the command operands, specify the IP address and iSCSI name of the storage device iSCSI port, the affinity group, and the IP address and iSCSI name of the server being set. Use these operands to set and delete the host affinity of the storage device and to display the host affinity that is set.

The targeted storage device must be a device managed by this software.

OPERANDS

add

This sets the host affinity.

delete

This deletes the host affinity.

info

This displays the host affinity.

OPTIONS

Options of "add" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-storage {*portIpAddr,portIscsiName,affinityGroup* | *portID,affinityGroup*}

Specify the iSCSI port IP address and iSCSI name of the storage device for which the host affinity is set and the affinity group number, or specify the port ID and the affinity group number.

Specify the affinity group number as a decimal or hexadecimal number. Specification example is as follows:

```
[Decimal specification]
-storage 192.0.2.38,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,3
[Hexadecimal specification]
-storage 192.0.2.38,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,0x3
```

For the ETERNUS DX60 S2, the port ID is the CM number and the port number entered.

For the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5), DX S4 series (excluding the ETERNUS DX8900 S4), DX S3 series (excluding the ETERNUS DX8000 S3 series), DX S2 series (excluding the ETERNUS DX60 S2), or the ETERNUS AF All-Flash Arrays, the port ID is the CM number, the CA number, and the port number entered.

For the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, the port ID is the CE number (hexadecimal), the CM number, the CA number, and the port number entered. Specification example is as follows:

```
[To specify CM number 1, CA number 2, port number 1, and affinity group number 6]
-storage 121,6
```

```
[To specify CE number 3, CM number 1, CA number 2, Port number 1, and affinity group number 6]
-storage 3121,6
```

-server {*serverPortIpAddr,serverPortIscsiName* | *serverPortIscsiName*}

Specify the iSCSI port IP address and the iSCSI name of the server for which the host affinity is set.

If the device supports non-setting of the iSCSI host IP address, the server can be specified with the iSCSI host IP address omitted.

-svalias *serverAlias*

This specifies the iSCSI alias of the server being set for the host affinity.

If this option is omitted, an alias is not set.

-svname *serverName*

This specifies the host alias of the server being set for the host affinity.

If this option is omitted, an alias is set automatically.

-svhostrsp *serverHostResponse*

This specifies the host response number of the server being set for the host affinity.

If this option is omitted, then host response number #0 is set.

-check

This checks whether the server specified in the **-server** option is already set as the host affinity setting for the device at the IP address specified in the **-ipaddr** option. If it is not already set as the host affinity, processing continues and the host affinity is set. If it is already set as the host affinity, an error occurs.

If this option is omitted, processing continues without checking.

Options of "delete" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-storage {*portIpAddr,portIscsiName,affinityGroup* | *portID,affinityGroup*}

Specify the iSCSI port IP address and iSCSI name of the storage device for which the host affinity is being deleted and the affinity group number, or specify the port ID and the affinity group number.

Specify the affinity group number as a decimal or hexadecimal number. Specification example is as follows:

```
[Decimal specification]
-storage 192.0.2.38,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,3
[Hexadecimal specification]
-storage 192.0.2.38,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,0x3
```

For the ETERNUS DX60 S2, the port ID is the CM number and the port number entered.

For the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5), DX S4 series (excluding the ETERNUS DX8900 S4), DX S3 series (excluding the ETERNUS DX8000 S3 series), DX S2 series (excluding the ETERNUS DX60 S2), or the ETERNUS AF All-Flash Arrays, the port ID is the CM number, the CA number, and the port number entered.

For the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, the port ID is the CE number (hexadecimal), the CM number, the CA number, and the port number entered. Specification example is as follows:

```
[To specify CM number 1, CA number 2, port number 1, and affinity group number 6]
-storage 121,6
[To specify CE number 3,CM number 1, CA number 2, Port number 1, and affinity group number 6]
-storage 3121,6
```

-server {*serverPortIpAddr,serverPortIscsiName* | *serverPortIscsiName*}

Specify the iSCSI port IP address and the iSCSI name of the server for which the host affinity is being deleted.

If the device supports non-setting of the iSCSI host IP address, the server can be specified with the iSCSI host IP address omitted.

-check

This checks whether the server specified in the -server option is already set as the host affinity setting for the device at the IP address specified in the -ipaddr option. If it is not already set as the host affinity, an error occurs. If it is already set as the host affinity, processing continues and the setting is deleted. If this option is omitted, processing continues without checking.

-s

Processing continues without output of a confirmation message.

Options of "info" Operand

-ipaddr *ipAddr*

This displays the host affinity information of the storage device at the specified IP address. To display information of multiple storage devices, specify the IP addresses successively, separated by commas (,).

If this option is omitted, information is displayed for all the storage devices registered with this software.

-check

This checks whether the devices at the IP address specified in the -ipaddr option are storage devices registered with this software. If all devices at the specified IP address are registered with this software, processing continues and the setting information is displayed. If at least one device at the specified IP address is not registered with this software, an error occurs.

If this option is omitted, processing continues without checking.

This option can be specified only when the -ipaddr option is specified.

-csv

Output is in CSV format.

-hex

The affinity group number is displayed as a hexadecimal number.

-expand

This adds the following to the host affinity information to display:

- IPv6 link local address
- IPv6 connection IP address
- TFO status

Added information depends on the version of this software. If this software is upgraded, displayed information may be increased.

When this option is omitted, a list of host affinities is displayed.

EXAMPLES

- Add a host affinity.

```
> storageadm iscsizone add -ipaddr 192.0.2.4 -storage 192.0.2.38,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,3 -server 192.0.2.198,eui.2222222222222222 -svalias alias2222 -svname
name2222 -svhostrsp 2
INFO:swsag0001:Command terminated normally.
```

- Delete a host affinity.

```
> storageadm iscsizone delete -ipaddr 192.0.2.4 -storage 192.0.2.38,iqn.
2000-09.com.fujitsu:storage-system.e2000:0000000029,3 -server 192.0.2.198,eui.2222222222222222
INFO:swsag0001:Command terminated normally.
```

- Display the host affinity in table format.

```
> storageadm iscsizone info -ipaddr 192.0.2.4,192.0.2.5
<<< iSCSI CA Zone Information >>>
```

DEVICE NAME(IP ADDRESS)	PORT ID	ISCSI CA IP ADDRESS	ISCSI CA ISCSI NAME	AFFINITY SERVER GROUP	SERVER IP ADDRESS	SERVER ISCSI NAME
DX60S4(192.0.2.4)	00	192.0.2.38	iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029	6	192.0.2.198	eui.2222222222222222
	01	192.0.2.39	iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029	6	192.0.2.198	eui.2222222222222222
	01	192.0.2.39	iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029	6	192.0.2.199	eui.3333333333333333
	10	192.0.2.40	iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029	- - -		
	11	192.0.2.41	iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029	- - -		
E4000(192.0.2.5)	000	192.0.2.38	iqn.2000-09.com.fujitsu:storage-system.e4000:0000000001	3	192.0.2.198	eui.2222222222222222
	120	192.0.2.40	iqn.2000-09.com.fujitsu:storage-system.e4000:0000000001	3	192.0.2.158	eui.4444444444444444

INFO:swsag0001:Command terminated normally.

- Display the host affinity in CSV format.

```
> storageadm iscsizone info -ipaddr 192.0.2.4,192.0.2.5 -csv
DEVICE NAME(IP ADDRESS),PORT ID,ISCSI CA IP ADDRESS,ISCSI CA ISCSI NAME,AFFINITY GROUP,SERVER IP ADDRESS,SERVER ISCSI NAME
DX60S4(192.0.2.4),00,192.0.2.38,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,6,192.0.2.198,eui.2222222222222222,01,192.0.2.39,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,6,192.0.2.198,eui.2222222222222222,01,192.0.2.39,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,6,192.0.2.199,eui.3333333333333333,10,192.0.2.40,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,-,-,11,192.0.2.41,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,-,-,E4000(192.0.2.5),000,192.0.2.38,iqn.2000-09.com.fujitsu:storage-system.e4000:0000000001,3,192.0.2.198,eui.2222222222222222,120,192.0.2.38,iqn.2000-09.com.fujitsu:storage-system.e4000:0000000001,3,192.0.2.158,eui.4444444444444444
```

- Display the host affinity in table format including additional information.

```
> storageadm iscsizone info -expand
<<< iSCSI CA Zone Information >>>
DEVICE NAME(IP ADDRESS) PORT ISCSI CA ISCSI CA AFFINITY SERVER
SERVER ISCSI CA LINK LOCAL IP ADDRESS ISCSI CA CONNECT IP ADDRESS TFO
STATUS ID IP ADDRESS ISCSI NAME GROUP IP ADDRESS ISCSI NAME
-----
DX60S4(192.0.2.4) 00 192.0.2.38 iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029 6 192.0.2.198 eui.2222222222222222 fe80::128c:24d8:3016:250a:56ff:fe67:a524 2001:100a:ab13:cd24:ef3f:db72:fe11:cd21 -
01 192.0.2.39 iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029 6 192.0.2.198 eui.2222222222222222 fe80::128c:24d8:3016:250a:56ff:fe67:a525 2001:100a:ab13:cd24:ef3f:db72:fe11:cd22 -
01 192.0.2.39 iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029 6 192.0.2.199 eui.3333333333333333 fe80::128c:24d8:3016:250a:56ff:fe67:a525 2001:100a:ab13:cd24:ef3f:db72:fe11:cd22 -
10 192.0.2.40 iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029 - - - -
11 192.0.2.41 iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029 - - - -
```

```

E4000(192.0.2.5)          000 192.0.2.38      iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001 3 192.0.2.198 eui.22222222222222222222 fe80::254b:781a:4b35:c531:1a3d:198e:
30c6 2001:100a:451f:fd32:230b:12ac:dd2a:a2e5 -
                                120 192.0.2.40      iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001 3 192.0.2.158 eui.44444444444444444444 fe80::254b:781a:4b35:c531:1a3d:198e:
30d5 2001:100a:451f:fd32:230b:12ac:dd2a:a289 -
DX600(192.0.2.6)        010 192.0.2.50      iqn.2000-09.com.fujitsu:storage-
system.e6000:0000000011 4 192.0.2.200 eui.88888888888888888888 fe80::0200:0e50:da80:0414 2001:200a:
241f:fd55:210b:80ac:cc2a:a129 Active
DX600(192.0.2.7)        010 192.0.2.50      iqn.2000-09.com.fujitsu:storage-
system.e6000:0000000011 4 192.0.2.200 eui.88888888888888888888 fe80::0200:0e50:da80:0414 2001:200a:
241f:fd55:210b:80ac:cc2a:a129 Standby
-----
-----
-----

```

INFO:swsag0001:Command terminated normally.

- Display the host affinity in CSV format including additional information.

```

> storageadm iscsizone info -expand -csv
DEVICE NAME(IP ADDRESS),PORT ID,ISCSI CA IP ADDRESS,ISCSI CA ISCSI NAME,AFFINITY GROUP,SERVER IP
ADDRESS,SERVER ISCSI NAME, ISCSI CA LINK LOCAL IP ADDRESS,ISCSI CA CONNECT IP ADDRESS,TFO STATUS
DX60S4(192.0.2.4),00,192.0.2.38,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,6,192.0.2.198,eui.22222222222222222222,fe80::128c:24d8:3016:250a:
56ff:fe67:a524,2001:100a:ab13:cd24:ef3f:db72:fe11:cd21,-
DX60S4(192.0.2.4),01,192.0.2.39,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,6,192.0.2.198,eui.22222222222222222222,fe80::128c:24d8:3016:250a:
56ff:fe67:a525,2001:100a:ab13:cd24:ef3f:db72:fe11:cd22,-
DX60S4(192.0.2.4),01,192.0.2.39,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,6,192.0.2.199,eui.33333333333333333333,fe80::128c:24d8:3016:250a:
56ff:fe67:a525,2001:100a:ab13:cd24:ef3f:db72:fe11:cd22,-
DX60S4(192.0.2.4),10,192.0.2.40,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,-,-,-,-,-
DX60S4(192.0.2.4),11,192.0.2.41,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,-,-,-,-,-
E4000(192.0.2.5),000,192.0.2.38,iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001,3,192.0.2.198,eui.22222222222222222222,fe80::254b:781a:4b35:c531:1a3d:198e:
30c6,2001:100a:451f:fd32:230b:12ac:dd2a:a2e5,-
E4000(192.0.2.5),120,192.0.2.38,iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001,3,192.0.2.158,eui.44444444444444444444,fe80::254b:781a:4b35:c531:1a3d:198e:
30d5,2001:100a:451f:fd32:230b:12ac:dd2a:a289,-
DX600(192.0.2.6),010,192.0.2.50,iqn.2000-09.com.fujitsu:storage-system.e6000:0000000011,4,
192.0.2.200,eui.88888888888888888888,fe80::0200:0e50:da80:0414,2001:200a:241f:fd55:210b:
80ac:cc2a:a129,Active
DX600(192.0.2.7),010,192.0.2.50,iqn.2000-09.com.fujitsu:storage-system.e6000:0000000011,4,
192.0.2.200,eui.88888888888888888888,fe80::0200:0e50:da80:0414,2001:200a:241f:fd55:210b:
80ac:cc2a:a129,Standby

```

NOTES

- Storage devices must be registered with this software in order to add, delete, and display settings.
- Zone settings (Affinity group creation) must be configured in the ETERNUS Disk storage system in advance, using ETERNUS Web GUI.
- The message below is displayed when the "delete" operand is specified. Enter "y" to continue, or "n" to cancel. Note that this message is not displayed if the -s option is specified.

```
Are you sure? [y/n]:
```

- Host affinity cannot be operated for the Virtual Volume.
- Only a usual host affinity is deleted when both a usual host affinity and the host affinity for Virtual Volume for the specified HBA and CA are set, and the host affinity for Virtual Volume is not deleted.

13.1.1.6 storageadm perfdata (Performance Information Operation Command)

NAME

storageadm perfdata - operates the performance information

SYNOPSIS

```
storageadm perfdata export outDirName -ipaddr ipAddr [-date startTime[-endTime]]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm perfdata
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm perfdata
```

DESCRIPTION

This command outputs the performance information of the storage devices and Fibre Channel switches. In a Windows environment, only a user of the Administrators group can execute this command. In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

By specifying the IP address of the device that outputs the performance information and the date in the command operand, the storage device and Fibre Channel switch performance information is output in CSV format.

The target storage device and Fibre Channel switch must be devices managed by this software when performance monitoring is either still running or already completed.

The supported devices are as follows:

- ETERNUS DX series, ETERNUS AF All-Flash Arrays
- Fibre Channel switches and Fibre Channel switch blades which support the performance monitoring

The details of CSV files are as follows:

Port Information of Fibre Channel Switch

Items	Explanation
File name	PORT.csv
Header line	Date,PortX - Tx Throughput, PortX - Rx Throughput, PortX - CRC Error, ...
Data line	<i>date,port0s,port0r,port0e, ... ,portNs,portNr,portNe</i> The following information is output for each field. After <i>date</i> , the information is repeated for the actual number of ports. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>port0s</i> : Port0 Transfer rates of send data at <i>date</i> (Decimal notation. The unit is MB/S.) <i>port0r</i> : Port0 Transfer rates of receive data at <i>date</i> (Decimal notation. The unit is MB/S.) <i>port0e</i> : Port0 Number of CRC errors at <i>date</i> (Decimal notation. The unit is Count.) <i>portNs</i> : PortN Transfer rates of send data at <i>date</i> (Decimal notation. The unit is MB/S.) <i>portNr</i> : PortN Transfer rates of receive data at <i>date</i> (Decimal notation. The unit is MB/S.) <i>portNe</i> : PortN Number of CRC errors at <i>date</i> (Decimal notation. The unit is Count.)

CM Performance Information of Storage Device

For the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5), DX S4 series (excluding the ETERNUS DX8900 S4), DX S3 series (excluding the ETERNUS DX8000 S3 series), DX60 S2/DX80 S2/DX90 S2, or the ETERNUS AF All-Flash Arrays

Items	Explanation
File name	CM.csv
Header line	Date, CM0xX - CPU Use Rate, CM0xX - Copy Remain, ...
Data line	<p><i>date,CM0u,CM0r, ...,CMNu,CMNr</i></p> <p>The following information is output for each field. After <i>date</i>, the information is repeated for the actual number of CMs.</p> <p><i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>CM0u</i> : CM0x0 CPU Load at <i>date</i> (Decimal notation. The unit is %.) <i>CM0r</i> : CM0x0 CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.) <i>CMNu</i> : CM0xN CPU Load at <i>date</i> (Decimal notation. The unit is %.) <i>CMNr</i> : CM0xN CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.)</p>

For the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series

Items	Explanation
File name	CM.csv
Header line	Data, CE0xXCM0xX - CPU Use Rate, CE0xXCM0xX - Copy Remain, ...
Data line	<p><i>date,CE0CM0u,CE0CM0r, ...,CENCMNu,CENCMNr</i></p> <p>The following information is output for each field. After <i>date</i>, the information is repeated for the actual number of CMs.</p> <p><i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>CE0CM0u</i> : CE0x0CM0x0 CPU Load at <i>date</i> (Decimal notation. The unit is %.) <i>CE0CM0r</i> : CE0x0CM0x0 CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.) <i>CENCMNu</i> : CE0xNCM0xN CPU Load at <i>date</i> (Decimal notation. The unit is %.) <i>CENCMNr</i> : CE0xNCM0xN CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.)</p>

For the ETERNUS DX400 S2 series, DX8000 S2 series

Items	Explanation
File name	<p><i>CM/nnnn.csv</i></p> <p>(<i>nnnn</i> indicates the CM number by hexadecimal notation. CM numbers are assigned in ascending order, starting with 0000 for the lowest CM CPU number in the device. CM0x0 CPU0 is 0000, CM0x0 CPU1 is 0001, CM0x1 CPU0 is 0002, CM0x1 CPU1 is 0003, : CM0x7 CPU0 is 000E, CM0x7 CPU1 is 000F.)</p>
Header line	Date, CM0xX:CPUX - CPU Use Rate, CM0xX:CPUX(ROE) - CPU Use Rate, CM0xX:CPUX - Copy Remain
Data line	<p><i>date,cpu,roe,remain</i></p> <p>The following information is output for each field.</p> <p><i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>cpu</i> : CM0xX:CPUX CPU Load at <i>date</i> (Decimal notation. The unit is %.)</p>

Items	Explanation
	<i>roe</i> : CM0xX:CPUX ROE Load at <i>date</i> (Decimal notation. The unit is %.)
	<i>remain</i> : CM0xX:CPUX CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.)

Logical Volume Performance Information of Storage Device

Items	Explanation
File name	LogicalVolume/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the LogicalVolume number by hexadecimal notation.)
Header line	Date, LogicalVolume0xXXXX - Read IOPS, LogicalVolume0xXXXX - Write IOPS, LogicalVolume0xXXXX - Read Throughput, LogicalVolume0xXXXX - Write Throughput, LogicalVolume0xXXXX - Read Response Time, LogicalVolume0xXXXX - Write Response Time, LogicalVolume0xXXXX - Read Cache Hit Rate, LogicalVolume0xXXXX - Write Cache Hit Rate, LogicalVolume0xXXXX - Prefetch Cache Hit Rate, LogicalVolume0xXXXX - Read Cache Hit Rate(Extreme Cache), LogicalVolume0xXXXX - Read Cache Hit Rate(DRAM + Extreme Cache), LogicalVolume0xXXXX - Read QoS Delay Time, LogicalVolume0xXXXX - Write QoS Delay Time
Data line	<i>date,read,write,through-r,through-w,resp-r,resp-w,hit-r,hit-w,fetch, hit-r-extreme-cache,hit-r-dram-extreme-cache,delay-r-qos,delay-w-qos</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time. (YYYY/MM/DD hh:mm:ss format) <i>read</i> : Read Count at <i>date</i> . (Decimal notation. The unit is IOPS.) <i>write</i> : Write Count at <i>date</i> . (Decimal notation. The unit is IOPS.) <i>through-r</i> : Read data transfer rate at <i>date</i> . (Decimal notation. The unit is MB/S.) <i>through-w</i> : Write data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.) <i>resp-r</i> : Read Response Time at <i>date</i> . (Decimal notation. The unit is msec.) <i>resp-w</i> : Write Response Time at <i>date</i> . (Decimal notation. The unit is msec.) <i>hit-r</i> : Read Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>hit-w</i> : Write Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>fetch</i> : Read Pre-fetch Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>hit-r-extreme-cache</i> : Read Cache Hit Rate at <i>date</i> . (Extreme Cache) (Decimal notation. The unit is %.) (*1, *2) <i>hit-r-dram-extreme-cache</i> : Read Cache Hit Rate at <i>date</i> . (DRAM + Extreme Cache) (Decimal notation. The unit is %.) (*1, *2) <i>delay-r-qos</i> : Read QoS Delay Time at <i>date</i> . (Decimal notation. The unit is msec.) (*3, *4) <i>delay-w-qos</i> : Write QoS Delay Time at <i>date</i> . (Decimal notation. The unit is msec.) (*3, *4)

*1: When this function is disabled for a device that supports Extreme Cache performance information, "0" is output.

```
Example: For a device that supports Extreme Cache performance information (function disabled)
...,hit-r-extreme-cache,hit-r-dram-extreme-cache
...,0,0
```

*2: For a device that does not support Extreme Cache performance information, a value is not output and instead a series of commas are output.

```
Example: For a device that does not support Extreme Cache performance information
...,hit-r-extreme-cache,hit-r-dram-extreme-cache
,,,,,
```

*3: When this function is disabled for a device that supports Host-LU QoS performance information (QoS Delay Time), "0" is output.

```
Example: For a device that supports Host-LU QoS performance information (function disabled)
...,delay-r-qos,delay-w-qos
...,0,0
```

*4: For a device that does not support Host-LU QoS performance information (QoS Delay Time), a value is not output and instead a series of commas are output.

```
Example: For a device that does not support Host-LU QoS performance information
...,delay-r-qos,delay-w-qos
,,,,,
```

RAID Group Performance Information of Storage Device

Items	Explanation
File name	RAIDGroup/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the RAID group number by hexadecimal notation.)
Header line	Date, RAIDGroup0xXXXX - Read IOPS, RAIDGroup0xXXXX - Write IOPS, RAIDGroup0xXXXX - Read Throughput, RAIDGroup0xXXXX - Write Throughput, RAIDGroup0xXXXX - Read Response Time, RAIDGroup0xXXXX - Write Response Time, RAIDGroup0xXXXX - Read Cache Hit Rate, RAIDGroup0xXXXX - Write Cache Hit Rate, RAIDGroup0xXXXX - Prefetch Cache Hit Rate, RAIDGroup0xXXXX - Read Cache Hit Rate(Extreme Cache), RAIDGroup0xXXXX - Read Cache Hit Rate(DRAM + Extreme Cache), RAIDGroup0xXXXX - Read QoS Delay Time, RAIDGroup0xXXXX - Write QoS Delay Time
Data line	<i>date,read,write,through-r,through-w,resp-r,resp-w,hit-r,hit-w,fetch,hit-r-extreme-cache,hit-r-dram-extreme-cache,delay-r-qos,delay-w-qos</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time. (YYYY/MM/DD hh:mm:ss format) <i>read</i> : Read Count at <i>date</i> . (Decimal notation. The unit is IOPS.) <i>write</i> : Write Count at <i>date</i> . (Decimal notation. The unit is IOPS.) <i>through-r</i> : Read data transfer rate at <i>date</i> . (Decimal notation. The unit is MB/S.) <i>through-w</i> : Write data transfer rate at <i>date</i> . (Decimal notation. The unit is MB/S.) <i>resp-r</i> : Read Response Time at <i>date</i> . (Decimal notation. The unit is msec.) <i>resp-w</i> : Write Response Time at <i>date</i> . (Decimal notation. The unit is msec.) <i>hit-r</i> : Read Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>hit-w</i> : Write Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>fetch</i> : Read Pre-fetch Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>hit-r-extreme-cache</i> : Read Cache Hit Rate at <i>date</i> . (Extreme Cache) (Decimal notation. The unit is %.) (*1, *2) <i>hit-r-dram-extreme-cache</i> : Read Cache Hit Rate at <i>date</i> . (DRAM + Extreme Cache) (Decimal notation. The unit is %.) (*1, *2) <i>delay-r-qos</i> : Read QoS Delay Time at <i>date</i> . (Decimal notation. The unit is msec.) (*3, *4) <i>delay-w-qos</i> : Write QoS Delay Time at <i>date</i> . (Decimal notation. The unit is msec.) (*3, *4)

*1: When this function is disabled for a device that supports Extreme Cache performance information, "0" is output.

```
Example: For a device that supports Extreme Cache performance information (function disabled)
...,hit-r-extreme-cache,hit-r-dram-extreme-cache
...,0,0
```

*2: For a device that does not support Extreme Cache performance information, a value is not output and instead a series of commas are output.

Example: For a device that does not support Extreme Cache performance information
 ...,hit-r-extreme-cache,hit-r-dram-extreme-cache

*3: When this function is disabled for a device that supports Host-LU QoS performance information (QoS Delay Time), "0" is output.

Example: For a device that supports Host-LU QoS performance information (function disabled)
 ...,delay-r-qos,delay-w-qos
 ...,0,0

*4: For a device that does not support Host-LU QoS performance information (QoS Delay Time), a value is not output and instead a series of commas are output.

Example: For a device that does not support Host-LU QoS performance information
 ...,delay-r-qos,delay-w-qos

Disk Performance Information of Storage Device

Items	Explanation
File name	Disk/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the DE number by hexadecimal notation.)
Header line	- For disk mounted on CE: Date, CE(DE0x00):DiskX - busy time, ... - For disk mounted on DE: Date, DE0xXX:DiskX - busy time, ...
Data line	<i>date</i> , <i>Disk0</i> , ... , <i>DiskN</i> The following information is output for each field. After <i>date</i> , the information is repeated for the actual number of Disks. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>Disk0</i> : Disk0 Disk busy rate at <i>date</i> (Decimal notation. The unit is %.) <i>DiskN</i> : DiskN Disk busy rate at <i>date</i> (Decimal notation. The unit is %.)

CA/CM Port Performance Information of Storage Device

For the ETERNUS DX series (excluding the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series), or the ETERNUS AF All-Flash Arrays

Items	Explanation
File name	Port/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the CA/CM Port number by hexadecimal notation. CA/CM port numbers are assigned in ascending order, starting with 0000 for the lowest CA/CM port number in the device. CM0x0 CA0x0 Port0 is 0000, CM0x0 CA0x0 Port1 is 0001, : CM0x7 CA0x3 Port2 is 007E, CM0x7 CA0x3 Port3 is 007F.)
Header line	- Case of CA Port Date, CM0xX:CA0xX:PortX - Read IOPS, CM0xX:CA0xX:PortX - Write IOPS, CM0xX:CA0xX:PortX - Read Throughput, CM0xX:CA0xX:PortX - Write Throughput - Case of CM Port Date, CM0xX:PortX - Read IOPS, CM0xX:PortX - Write IOPS, CM0xX:PortX - Read Throughput, CM0xX:PortX - Write Throughput
Data line	<i>date</i> , <i>read</i> , <i>write</i> , <i>through-r</i> , <i>through-w</i>

Items	Explanation
	The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>read</i> : Read Count at <i>date</i> (Decimal notation. The unit is IOPS.) <i>write</i> : Write Count at <i>date</i> (Decimal notation. The unit is IOPS.) <i>through-r</i> : Read data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.) <i>through-w</i> : Write data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.)

For the ETERNUS DX900 S6/S5, DX8900 S6/S4, or DX8000 S3 series

Items	Explanation
File name	Port/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the CA Port number by hexadecimal notation. CA Port numbers are assigned in ascending order, starting with 0000 for the lowest CA Port number in the device. CE0x0 CM0x0 CA0x0 Port0 is 0000, CE0x0 CM0x0 CA0x0 Port1 is 0001, : CE0x3 CM0x1 CA0x3 Port2 is 007E, CE0x3 CM0x1 CA0x3 Port3 is 007F)
Header line	Date, CE0xX:CM0xX:CA0xX:PortX - Read IOPS, CE0xX:CM0xX:CA0xX:PortX - Write IOPS, CE0xX:CM0xX:CA0xX:PortX - Read Throughput, CE0xX:CM0xX:CA0xX:PortX - Write Throughput
Data line	<i>date,read,write,through-r,through-w</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>read</i> : Read Count at <i>date</i> (Decimal notation. The unit is IOPS.) <i>write</i> : Write Count at <i>date</i> (Decimal notation. The unit is IOPS.) <i>through-r</i> : Read data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.) <i>through-w</i> : Write data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.)

Note: According to the port mode of the target CA/CM Port, the following is added at the end of each port name in the header line.

Port Mode	FC	iSCSI
CA	-	(iSCSI-CA)
RA	(FC-RA)	(iSCSI-RA)
CA/RA	(FC-CA/RA)	(iSCSI-CA/RA)
Initiator	(FC-Initiator)	-

The performance information of the FC-Initiator ports is displayed only for the ETERNUS DX S6/S5 series, DX8900 S4, or the ETERNUS AF S3 series, or for the ETERNUS DX S4/S3 series (excluding the ETERNUS DX8900 S4), or the ETERNUS AF S2 series, AF series that has a firmware version of V10L80 or later.

Number of Active Disks Performance Information of Storage Device

Items	Explanation
File name	ACTIVE_DISK.csv
Header line	Date, Total Disks, Active Disks
Data line	<i>date,total,active</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>total</i> : Overall number of loaded disk devices at <i>date</i> (Decimal notation. The unit is Disk.) <i>active</i> : Overall number of active disk devices at <i>date</i> (Decimal notation. The unit is Disk.)

Power Consumption Performance Information of Storage Device

Items	Explanation
File name	SYSTEM_POWER_CONSUMPTION.csv
Header line	Date, System Power Consumption
Data line	<i>date, power</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>power</i> : Power used by the device as a whole at <i>date</i> (Decimal notation. The unit is Watt.)

Temperature Performance Information of Storage Device

Items	Explanation
File name	SYSTEM_TEMPERATURE.csv
Header line	Date, System Temperature
Data line	<i>date, temperature</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>temperature</i> : Air intake temperature at device at <i>date</i> (Decimal notation. The unit is degrees Centigrade.)

Storage Device NAS System Performance Information

Items	Explanation
File name	NAS/System/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the CM number by hexadecimal notation.)
Header line	Date, CM0xX - CPU Use Rate, CM0xX - CIFS Operations, CM0xX - NFS Operations
Data line	<i>date, CMuse, CMcifs, CMnfs</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>CMuse</i> : CPU usage rate within the CM at <i>date</i> (Decimal notation. The unit is %.) <i>CMcifs</i> : Number of CIFS processes within CM at <i>date</i> (Decimal notation. The unit is ops/s.) <i>CMnfs</i> : Number of NFS processes within CM at <i>date</i> (Decimal notation. The unit is ops/s.)

Storage Device NAS Volume Performance Information

Items	Explanation
File name	NAS/LogicalVolume/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the LogicalVolume number by hexadecimal notation.)
Header line	Date, LogicalVolume0xXXXX - Read Throughput, LogicalVolume0xXXXX - Write Throughput
Data line	<i>date, through-r, through-w</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>through-r</i> : Read data transfer rate at <i>date</i> (Decimal notation. The unit is MB/s.) <i>through-w</i> : Write data transfer rate at <i>date</i> (Decimal notation. The unit is MB/s.)

Storage Device Compression Performance Information (for the ETERNUS DX900 S6/S5, DX8900 S6/S4 only) and Storage Device Deduplication/Compression Performance Information (for the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5) and the ETERNUS AF S3 series only)

Items	Explanation
File name	DataReduction/LogicalVolume/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the LogicalVolume number by hexadecimal notation.) (*1, *2)
Header line	Date, LogicalVolume0xXXXX - Data Compression Rate, LogicalVolume0xXXXX - Unaligned I/O Rate
Data line	<i>date,data-compression-rate,unaligned-io-rate</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>data-compression-rate</i> : Data compression rate at <i>date</i> (Decimal notation. The unit is %) (*3) <i>unaligned-io-rate</i> : Unaligned I/O rate at <i>date</i> (Decimal notation. The unit is %)

*1: The directory is created only when Deduplication/Compression is enabled in the storage device.

*2: A CSV file is output only when Deduplication/Compression is enabled for the volume.

*3: This information is not displayed when Deduplication only is enabled for the volume.

OPERANDS


`export`

Outputs performance information for the specified date in the CSV format.

`outDirName`

Specify the directory that outputs performance information. The full path of an existing directory must be specified in `outDirName`.

Performance information is output to the `outDirName` directory based on the following configuration.

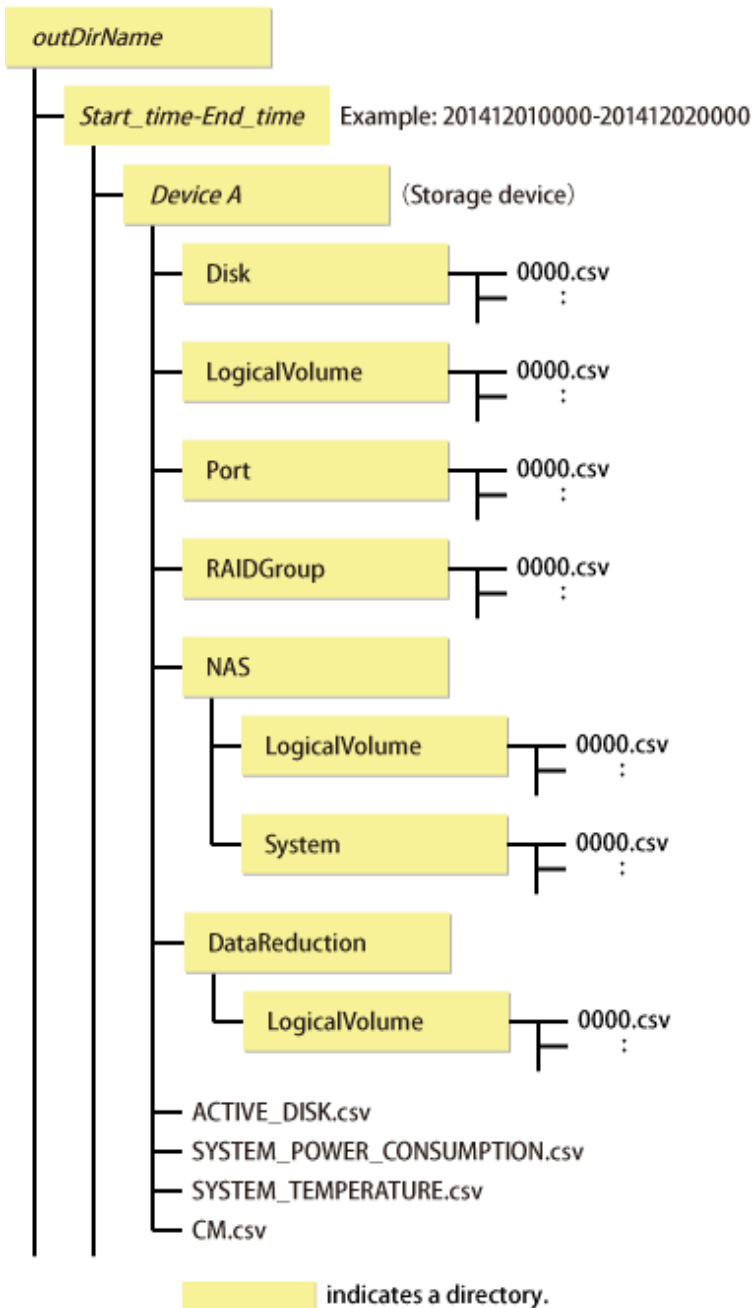

OPTIONS

`-ipaddr ipAddr`

Specify the IP address of the device that outputs performance information.

The output target device must satisfy the following conditions:

- The device is registered with this software, and it is one of the following performance monitoring targets:
 - ETERNUS DX series, ETERNUS AF All-Flash Arrays
 - Fibre Channel switches and Fibre Channel switch blades which support the performance monitoring

Refer to "[7.2.2 Instruction for Performance Management](#)" for the settings of performance monitoring.

`-date startTime[-endTime]`

Specify the start and end times for the output of performance information in YYYYMMDDhhmm format. The start and end times must be concatenated using a hyphen (-), as follows.

```
YYYYMMDDhhmm-YYYYMMDDhhmm
```

If a hyphen (-) and end time are omitted, the command execution time is the end time.

The time that is specified for the -date option start time must be earlier than the end time. Additionally, the time that is specified for the start and end times must be later than 00:00 on 01/08/2001, and earlier than the command execution time.

If this option is omitted, a time 30 minutes before the command execution time is the start time, and the command execution time is the end time.

EXAMPLES

- For Windows environments
 - Output of performance information from 00:00 on 01/01/2012 to 23:59 on 01/01/2012 for a device with IP address 192.0.2.10 to the c:\work directory:

```
> storageadm perfdata export "C:\work" -ipaddr 192.0.2.10 -date 201201010000-201201012359
```
 - Output of performance information from 00:00 on 01/01/2012 to now for a device with IP address 192.0.2.10 to the c:\work directory:

```
> storageadm perfdata export "C:\work" -ipaddr 192.0.2.10 -date 201201010000
```
- For Solaris or Linux environments
 - Output of performance information from 00:00 on 01/01/2012 to 23:59 on 01/01/2012 for a device with IP address 192.0.2.10 to the /var/tmp/work directory:

```
> storageadm perfdata export /var/tmp/work -ipaddr 192.0.2.10 -date 201201010000-201201012359
```
 - Output of performance information from 00:00 on 01/01/2012 to now for a device with IP address 192.0.2.10 to the /var/tmp/work directory:

```
> storageadm perfdata export /var/tmp/work -ipaddr 192.0.2.10 -date 201201010000
```

13.1.1.7 storageadm spindle (Disk Control command)

NAME

storageadm spindle - controls disk drives

SYNOPSIS

```
storageadm spindle start -ipaddr ipAddr {-raid raidGroupNumber[,raidGroupNumber,...] | -server} [-sync [-time timeout]]
```

```
storageadm spindle stop -ipaddr ipAddr {-raid raidGroupNumber[,raidGroupNumber,...] | -server} [-sync [-time timeout]] [-s] [-f]
```

```
storageadm spindle info -ipaddr ipAddr [{-raid raidGroupNumber[,raidGroupNumber,...] | -server}]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm spindle
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm spindle
```

DESCRIPTION

The spindle rotation of disk drives making up RAID of the storage device and the power of disk drives are controlled. In a Windows environment, only a user of the Administrators group can execute this command. In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

If the storage device is specified when status is displayed, the spindle rotation status of disk drives making up RAID and the power status of disk drives are displayed.

If a server was specified, the storage device RAID group number and volume number used by the server are displayed.

The rotation of configured disk drives and the power of disk drives are controlled.

Specifying the server IP address controls the rotation of disk drives of the storage device used by the server and the power of those disk drives.

The target storage device and server must be devices managed by this software.

OPERANDS

start

Starts the disk drive that is used to configure the storage device RAID group.

stop

Stops the disk drive that is used to configure the storage device RAID group.

info

Displays the storage device RAID group Eco-mode information, or the storage device information used by the server.

OPTIONS

Options of "start" Operand

`-ipaddr ipAddr`

Specify the storage device or server IP address.

`-raid raidGroupNumber[,raidGroupNumber,...]`

Specify the start target RAID group number using hexadecimal notation.

If more than one RAID group number is specified, separate each number using a comma (,).

Specify this option when the storage device IP address has been specified in the `-ipaddr` option.

`-server`

The disk drive of the storage device used by the specified server is started.

Specify this option when the server IP address has been specified in the `-ipaddr` option.

`-sync`

There is no return until processing is complete, or the time specified in the `-time` option has elapsed.

`-time timeout`

Specify the timeout value (unit: seconds) if the `-sync` option has been specified. Specify a number from 1 to 86400.

If this option is omitted, the timeout value is 600 seconds.

Options of "stop" Operand

`-ipaddr ipAddr`

Specify the storage device or server IP address.

`-raid raidGroupNumber[,raidGroupNumber,...]`

Specify the stop target RAID group number using hexadecimal notation.

If more than one RAID group number is specified, separate each number using a comma (,).

Specify this option when the storage device IP address has been specified in the `-ipaddr` option.

-server

The disk drive of the storage device used by the specified server is stopped.
Specify this option when the server IP address has been specified in the -ipaddr option.

-sync

There is no return until processing is complete, or the time specified in the -time option has elapsed.

-time *timeout*

Specify the timeout value (unit: seconds) if the -sync option has been specified. Specify a number from 1 to 86400.
If this option is omitted, the timeout value is 600 seconds.

-s

Processing continues without the output of a confirmation message.

-f

Related RAID group disk drives are forcibly stopped.

Options of "info" Operand

-ipaddr *ipAddr*

Specify the storage device or server IP address.

-raid *raidGroupNumber*[,*raidGroupNumber*,...]

Specify the status display target RAID group number using hexadecimal notation.
If more than one RAID group number is specified, separate each number using a comma (.).
Specify this option when the storage device IP address has been specified in the -ipaddr option.

If this option is omitted, the information for all RAID groups in the specified storage device is displayed.

-server

The storage device RAID group Eco-mode information and volume number used by the specified server are displayed.
Specify this option when the server IP address has been specified in the -ipaddr option.

EXAMPLES

- Starting the disk drive that is used to configure the RAID group by specifying the storage device IP address and RAID group number:

```
> storageadm spindle start -ipaddr 192.0.2.10 -raid 0x0000,0x0001
```

- Stopping the disk drive that is used to configure the RAID group by specifying the storage device IP address and RAID group number:

```
> storageadm spindle stop -ipaddr 192.0.2.10 -raid 0x0001
```

- Stopping the disk drive that is used by the server by specifying the server:

```
> storageadm spindle stop -ipaddr 192.0.2.11 -server
```

- Displaying the Eco-mode status of all RAID groups in a storage device:

```
> storageadm spindle info -ipaddr 192.0.2.10
<<< ECO Mode RAID Group Information >>>
RAIDGROUP_NUMBER(NAME)  MODE  DISK_STATUS          CONTROL  SCHEDULE
-----
0x0000(data1)           ON    Idle                  OFF      External
0x0001(data2)           ON    in the boot process  ON       01-NAME0001
0x0002                  OFF   Active                -
0x0003                  -     Active                -
-----
```

The explanation of the information displayed in each field is as follows:

Field Title	Explanation
RAIDGROUP_NUMBER(NAME)	Displays the RAID group number by the hexadecimal number of four digits. When the name is set on the RAID group, its name is displayed by enclosing in ().
MODE	Displays the Eco-mode status that is set on the RAID group. <ul style="list-style-type: none"> - "ON": Eco-mode is enabled. (Spindle rotation is stopped.) - "ON(power off)": Eco-mode is enabled. (Disk drives are powered off.) - "OFF": Eco-mode is disabled. - "-"(hyphen): Eco-mode cannot be set.
DISK_STATUS	Displays the status of disk drives that compose the RAID group. <ul style="list-style-type: none"> - "Active": Spindle is rotating. - "Idle": Spindle rotation is stopped. - "Power off": Disk drive power is OFF. - "In the boot process": Disks start in progress. (*1) - "In the stop process": Disks stop in progress. (*2)
CONTROL	Displays the disk drive control status set on the RAID group. <ul style="list-style-type: none"> - "ON": Disk starting is requested. - "OFF": Disk stopping is requested. - "-"(hyphen): Uncontrollable.
SCHEDULE	Displays the Eco-mode schedule set on RAID group by the following format. The schedule name of External is displayed as "External". number-name The "number" is displayed in decimal number, and "name" is displayed in eight characters or less.

*1: Spindle rotation of disk drives or the power of disk drives is started.

*2: Spindle rotation of disk drives or the power of disk drives is stopped.

- Displaying the storage device RAID group number and volume number that are used by the server:

```
> storageadm spindle info -ipaddr 192.0.2.11 -server
<<< ECO Mode RAID GROUP information for Server >>>
IP_ADDRESS      RAID   MODE  DISK_STATUS      CONTROL  STOP
-----
192.0.2.10      0x0000 ON   Idle             OFF
                  0x0001 ON   Active           ON      *
-----

<<< Disk use information on Server >>>
IP_ADDRESS      RAID   VOLUME
-----
192.0.2.10      0x0000 0x0000,0x0001,0x0002,0x0003,0x0004,0x0005,0x0006,0x0007,
                  0x0008,0x0009,0x000A,0x000B,0x000C,0x000D,0x000E,0x000F
                  0x0001 0x0010,0x0011,0x0012,0x0013,0x0014,0x0015,0x0016,0x0017,
                  0x0018,0x0019,0x001A,0x001B,0x001C,0x001D,0x001E,0x001F
-----
```

The explanation of the information displayed in each field is as follows:

- <<< ECO Mode RAID GROUP information for Server >>> information

Field Title	Explanation
IP_ADDRESS	Displays the IP address of the storage device connected with the specified server.
RAID	Displays the RAID group number by the hexadecimal number of four digits. The RAID group including the volume used from the specified server is displayed.
MODE	Displays the Eco-mode status that is set on the RAID group. <ul style="list-style-type: none"> - "ON": Eco-mode is enabled. (Spindle rotation is stopped.) - "ON(power off)": Eco-mode is enabled.(Disk drives are powered off.) - "OFF": Eco-mode is disabled. - "-"(hyphen): Eco-mode cannot be set.
DISK_STATUS	Displays the status of disk drives that compose the RAID group. <ul style="list-style-type: none"> - "Active": Spindle is rotating. - "Idle": Spindle rotation is stopped. - "Power off": Disk drive power is OFF. - "In the boot process": Disks start in progress. (*1) - "In the stop process": Disks stop in progress. (*2)
CONTROL	Displays the disk drive control status set on the RAID group. <ul style="list-style-type: none"> - "ON": Disk starting is requested. - "OFF": Disk stopping is requested. - "-"(hyphen): Uncontrollable.
STOP	Although the stopping the disk drives used from the specified server is directed, when any disk drives in this RAID group are used from other server or this RAID group cannot be stopped because of any following states, displays "*". <ul style="list-style-type: none"> - The RAID group for which the system disk is included - The RAID group for which it is set in the NAS area - The RAID group for which the mainframe volumes, MVV volumes, or MVV Concatenation volumes are registered

*1: Spindle rotation of disk drives or the power of disk drives is started.

*2: Spindle rotation of disk drives or the power of disk drives is stopped.

- <<< Disk use information on Server >>> information

Field Title	Explanation
IP_ADDRESS	Displays the IP address of the storage device connected with the specified server.
RAID	Displays the RAID group number by the hexadecimal number of four digits. The RAID group including the volume used from the specified server is displayed.
VOLUME	Displays the volume number by the hexadecimal number of four digits. The volumes used from the specified server are displayed.

NOTES

- Storage devices that control the spindle rotation and power of disk drives and display statuses must be registered to this product.

- There are RAID groups that cannot do the Eco-mode operation. Refer to "[Uncontrollable RAID Groups](#)" in "6.1.6.1 Concerns in Storage System Operation When Using Eco-mode".
- To start or stop RAID group, set Eco-mode of RAID group to ON or ON(power off). For the procedure, refer to "6.1.6 How to Control Eco-mode".
- When specifying the server IP address to control the rotation and power of disk drives, do not change the connection with the storage system.
- In the following cases, the rotation and power of disk drives cannot be discontinued by specifying the server IP address:
 - If one or more share disks are contained on the stopped disk drives.
Check the status of all servers that use their share disks, and judge whether share disks can be stopped or not. If share disks can be stopped, specify the -f option.
 - If the disk drives used from other server are included in the RAID group that stop target disk drive exists.
Specify the server IP address for all the servers that use the disk drives of the target RAID group or specify -f option. When specifying -f option, check the status of all the associated servers to judge whether or not to stop disk drives. One to one configuration of server and RAID group is recommended.
 - If the RAID group including unused disk drives.
Re-execute either specify the -f option or specify the RAID group.
 - If the RAID group including the stop target disk drive is any of "[Uncontrollable RAID Groups](#)".
- If the volume that belongs to the specified stop target RAID group is concatenated with a different RAID group using the LUN Concatenation functionality, the disk drive is not stopped even if the "stop" operand is specified. To stop all related RAID group disk drives, either specify all of the related RAID groups, or specify the -f option. However, if the related RAID group is any of "[Uncontrollable RAID Groups](#)", the disk control cannot be executed.
- The message below is output when the "stop" operand is specified. To continue, enter "y". To cancel, enter "n". This message is not output when the -s option is specified.

```
Are you sure? [y/n]:
```

- The information of storage device that can control disks is displayed on the storage device information used by the server. The information of storage device that cannot control disks is not displayed. When both the disk controllable storage device and the disk uncontrollable storage device are connected with the server, the information of disk controllable storage device is only displayed.
- The disk drive does not stop when the RAID group status is as follows:
 - Part of the CM in the storage device and the module for the disk drive access route contain a fault.
 - The disk drive that was used to configure the RAID group is faulty.
 - There is a copy data of Advanced Copy.
 - There is an EC/REC session (including when there is no copy data. However, the disk stops when the EC/REC status is Suspend).
 - There is a QuickOPC/SnapOPC session (including when there is no copy data).

13.1.1.8 storageadm remcs (REMCS Notification Command)

NAME

storageadm remcs - REMCS notification (for Windows environments only)

SYNOPSIS

```
storageadm remcs send -ipaddr ipAddr -type type
```

COMMAND PATH

- For Windows environments

`$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm remcs`

(`$INS_DIR` means "Program Directory" specified at the ETERNUS SF Manager installation.)

DESCRIPTION

This command is used to send REMCS notification of Fibre Channel switch which is registered with this software.

OPERANDS

send

As for REMCS notification of the Fibre Channel switch whose IP address is specified, sends a test mail.

OPTIONS

Options of "send" Operand

`-ipaddr ipAddr`

Specify the IP address of Fibre Channel switch.

`-type type`

Specify the type of the sending mail.

Make sure to specify "test".

EXAMPLES

- Send a test mail.

```
> storageadm remcs send -ipaddr 192.0.2.10 -type test
```

NOTES

- The Fibre Channel switch to be specified must be registered with this software.
- The settings for REMCS notification must be done in advance.

13.1.1.9 esfsnap (Troubleshooting Information Collection of Manager)

NAME

esfsnap - Collects the troubleshooting information of Manager

SYNOPSIS

```
esfsnap -dir dirName [-all]
```

COMMAND PATH

- For Windows environments

`$INS_DIR\Common\bin\esfsnap`

(`$INS_DIR` means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

`/opt/FJSVesfcm/bin/esfsnap`

DESCRIPTION

Collect information of the Manager on the Management Server.
Only OS administrator user can execute this command.

The esfsnap is the command used to collect information on the Management Server when a problem occurs. Submit its information to Fujitsu Technical Support.

OPTIONS

-dir *dirName*

Specify the directory that stores the troubleshooting information for *dirName*.

In a Windows environment, specify the full path name that starts from the drive letter for *dirName*. The maximum length that can be specified for *dirName* is 70 bytes.

In a Solaris or Linux environment, specify the full path name for *dirName*.

The collected information is output with the name that starts by "esfsnap_". Before executing this command, confirm that *dirName* directory has the following free space.

Collected Information	Required Free Space
Initial investigation information	more than 40 MB
All troubleshooting information	more than "80 + (2 * <i>numberOfRegisteredDevices</i>)" MB

-all

Collects all troubleshooting information on servers. Data includes lots of information, which increases the size of the data. This option is not necessary for initial investigation.

EXAMPLES

- For Windows environments

- Collecting the troubleshooting information for initial investigation on the "D:\temp" directory.

```
> esfsnap -dir D:\temp
```

- For Solaris or Linux environments

- Collecting the troubleshooting information for initial investigation on the "/var/tmp" directory.

```
> esfsnap -dir /var/tmp
```

13.1.1.10 esfadm esfdata (Configuration Information Operation Command)

NAME

esfadm esfdata - Operates the configuration information

SYNOPSIS

```
esfadm esfdata backup -ipaddr ipAddr [-s]
```

```
esfadm esfdata restore -all [-s]
```

```
esfadm esfdata delete -all
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\Common\bin\esfadm esfdata
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

`/opt/FJSVesfcm/bin/esfadm esfdata`

DESCRIPTION

This command backs up the various configuration information stored by this product to the ETERNUS Disk storage system and restores from the ETERNUS Disk storage system to the repository of this product. Further, this command delete the configuration information related to the ETERNUS Disk storage system that has been deleted from the repository.

OPERANDS

backup

Backs up the configuration information to the ETERNUS Disk storage system.

restore

Restores the configuration information from the ETERNUS Disk storage system to the repository of this product.

delete

Deletes the configuration information related to the ETERNUS Disk storage system that has been deleted.

OPTIONS

Options of "backup" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-s`

Processing continues without output of a confirmation message.

Options of "restore" Operand

`-all`

Restores from all registered ETERNUS Disk storage systems.

`-s`

Processing continues without output of a confirmation message.

Options of "delete" Operand

`-all`

Deletes all configuration information related to the ETERNUS Disk storage system that has been deleted.

EXAMPLES

- Backs up the configuration information.

```
> esfadm esfdata backup -ipaddr 192.0.2.10
Are you sure? [y/n]: y
esfadm00000 The command ended normally.
```

- Restores the configuration information.

```
> esfadm esfdata restore -all
Are you sure? [y/n]: y
esfadm00000 The command ended normally.
```

- Deletes the configuration information.

```
> esfadm esfdata delete -all
Are you sure? [y/n]: y
esfadm00000 The command ended normally.
```

NOTES

- Use the `esfadm esfdata restore` command when the repository of this product has been corrupted or when restoring using the backup.
- Use the `esfadm esfdata backup` command only when the configuration information saved on the ETERNUS Disk storage system has been corrupted due to an ETERNUS Disk storage system failure. After Fujitsu Technical Support completes saving the ETERNUS Disk storage system, use this command after following the instructions set by Fujitsu Technical Support.
- Use the `esfadm esfdata delete` command only when deleting the ETERNUS Disk storage system and when there is nothing to reuse. Do not use this when temporarily deleting, such as for maintenance purposes.
- This command relates to VVOL metadata and VVOL datastore configuration information.
- In a VMware vSphere Virtual Volumes environment, the processing time depends on the number of created Virtual Volumes.

13.1.2 Commands for Storage Management

The following sub sections explain the commands for managing the storage device.

In a Windows environment, only a user of the Administrators group can execute this command.

In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

The following table shows the relationship between commands and the storage devices where they can be used. The storage device must be registered with this software.

Command Name	ETERNUS DX series (excluding the ETERNUS DX60 S2), ETERNUS AF All-Flash Arrays	ETERNUS DX60 S2
storageadm disk	Available	Available
storageadm raid	Available (*2)	Available
storageadm volume	Available	Available
storageadm affinity	Available	Available
storageadm ecomode	Available (*3)	Available
storageadm port	Available	Available
storageadm iscsiport	Available	Available (*1)
storageadm progress	Available	Available

*1: Only iSCSI model device is supported.

*2: The "ecomode" operand does not support the ETERNUS AF All-Flash Arrays.

*3: This command does not support the ETERNUS AF All-Flash Arrays.

13.1.2.1 storageadm disk (Disk Management Command)

NAME

`storageadm disk` - Manages disks

SYNOPSIS

```
storageadm disk info -ipaddr ipAddr [-csv]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm disk
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm disk
```

DESCRIPTION

This command displays information of disks in the ETERNUS Disk storage system that is registered with this software.

OPERANDS

info

Displays detail information of disks in the ETERNUS Disk storage system that is registered with this software.

OPTIONS

Options of "info" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-csv

Displays the disk information in the CSV format.

If this option is omitted, it is displayed in the table format.

EXAMPLES

- Displaying the disk information in the table format.

```
> storageadm disk info -ipaddr 192.0.2.10
<<< Disk Information >>>
NUMBER DE   SLOT USAGE           STATUS   RGNO   SIZE  DISKTYPE MOTOR
-----
0      0x00 0    System Disk   Available 0x0002 300GB SAS   Active
1      0x00 1    System Disk   Available 0x0001 300GB SAS   Idle
2      0x00 2    System Disk   Available 0x0002 300GB SAS   In the boot process
3      0x00 3    System Disk   Available 0x0003 300GB SAS   In the stop process
4      0x00 4    Data Disk     Available 0x0003 300GB SAS   Active
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the disk information in the CSV format.

```
> storageadm disk info -ipaddr 192.0.2.10 -csv
NUMBER,DE,SLOT,USAGE,STATUS,RGNO,SIZE,DISKTYPE,MOTOR
0,0x00,0,System Disk,Available,0x0002,300GB,SAS,Active
1,0x00,1,System Disk,Available,0x0001,300GB,SAS,Idle
2,0x00,2,System Disk,Available,0x0002,300GB,SAS,In the boot process
3,0x00,3,System Disk,Available,0x0003,300GB,SAS,In the stop process
4,0x00,4,Data Disk,Available,0x0003,300GB,SAS,Active
```

NOTES

The External Drives used for the Non-disruptive Storage Migration are not displayed.

13.1.2.2 storageadm raid (RAID Management Command)

NAME

storageadm raid - Manages RAID groups

SYNOPSIS

```
storageadm raid add -ipaddr ipAddr -disk
DE_number:slotNumber,DE_number:slotNumber[,DE_number:slotNumber,...] -level raidLevel [-name
aliasName] [-cm assignedCM | -assignedcmm assignedCM] [-fr-consist diskConfiguration] [-csv]

storageadm raid delete -ipaddr ipAddr -raidgroup raidGroupNumber [-f] [-s]

storageadm raid info -ipaddr ipAddr [-raidgroup raidGroupNumber | -expand] [-remote boxID] [-csv]

storageadm raid ecomode -ipaddr ipAddr -raidgroup raidGroupNumber[,raidGroupNumber,...] -on [-type
ecoModeSetting] | -off [-s]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm raid
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm raid
```

DESCRIPTION

This command is used to create/delete/display and sets the Eco-mode for a RAID group in the ETERNUS Disk storage system that is registered with this software.

OPERANDS

add

Creates a RAID group

delete

Deletes a RAID group

info

Displays a RAID group information

ecomode

Sets the Eco-mode for the RAID group

OPTIONS

Options of "add" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-disk *DE_number:slotNumber,DE_number:slotNumber[,DE_number:slotNumber,...]*

Specify DE numbers and slot numbers for the storage device using either decimal or hexadecimal notation, placing a colon (:) in the middle of each DE number and slot number pair, and using commas (,) to separate pairs. For example, two pairs can be specified as "-disk 1:1,1:2" in decimal notation or "-disk 0x1:0x1,0x1:0x2" in

hexadecimal notation.

Be sure to specify at least two DE number/slot number pairs.

-level *raidLevel*

Specify the RAID level by the minuscule as follows:

Characters That Can Be Specified	Created RAID Level
raid0	RAID0
raid1	RAID1
raid1+0	RAID1+0
raid5	RAID5
raid5+0	RAID5+0
raid6	RAID6
raid6-fr	RAID6-FR

-fr-consist *diskConfiguration*

Specify RAID6-FR disk configuration. If "raid6-fr" is specified by -level option, this option must be specified.

Specifiable String	No. of Disks	RAID6-FR Disk Configuration
(3D+2P)*2+1HS	11	RAID6(3+2)*2, HS*1
(6D+2P)*2+1HS	17	RAID6(6+2)*2, HS*1
(9D+2P)*2+1HS	23	RAID6(9+2)*2, HS*1
(12D+2P)*2+1HS	29	RAID6(12+2)*2, HS*1
(5D+2P)*4+1HS	29	RAID6(5+2)*4, HS*1
(13D+2P)*2+1HS	31	RAID6(13+2)*2, HS*1
(3D+2P)*6+1HS	31	RAID6(3+2)*6, HS*1
(4D+2P)*2+1HS	13	RAID6(4+2)*2, HS*1
(4D+2P)*5+1HS	31	RAID6(4+2)*5, HS*1
(8D+2P)*3+1HS	31	RAID6(8+2)*3, HS*1

-name *aliasName*

Specify an alias for the RAID group to be created.

Only alphanumeric characters (a to z, A to Z and 0 to 9) and the following symbols can be used for aliases: !@#\$%^&*()-= ` _ + | ~ [] { } ; : " ' . / < > ?. However, "?" is not supported for storage devices other than the ETERNUS DX60 S2. If the alias contains a space, enclose the entire alias in double quotes (e.g., -name "123 567").

If this option is omitted, an alias name is set automatically.

-cm *assignedCM*

Specify the assigned CM number for the RAID group using two digits, as in the following table. When the target storage device is the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, this option cannot be specified. If this option is omitted, the assigned CM number is set up automatically ("auto" is specified).

Storage Device	Assigned CM	Characters to Be Specified	Remarks
ETERNUS DX600 S6 ETERNUS DX S5 series (excluding the ETERNUS DX900 S5) ETERNUS DX S4 series (excluding the ETERNUS DX8900 S4)	CM#0	00	For the first digit, enter the assigned CM number. For the second
	CM#1	10	

Storage Device	Assigned CM	Characters to Be Specified	Remarks
ETERNUS DX S3 series (excluding the ETERNUS DX8000 S3 series) ETERNUS DX60 S2/DX80 S2/DX90 S2 ETERNUS AF All-Flash Arrays			character, always enter "0".
ETERNUS DX400 S2 series ETERNUS DX8000 S2 series	CM#0 CPU#0	00	For the first digit, enter the assigned CM number. For the second digit, enter the number of the CPU within the CM entered for the first digit.
	CM#0 CPU#1	01	
	CM#1 CPU#0	10	
	CM#1 CPU#1	11	
	:	:	
	CM#7 CPU#0	70	
	CM#7 CPU#1	71	

-assignedcm *assignedCM*

Specify the CM number in charge of a RAID group in the form of "ce" + CE number (hexadecimal) + "cm" + CM number. It is case-insensitive.

When the target storage device is only the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, this option can be specified.

If this option is omitted, the assigned CM number is set up automatically ("auto" is specified). Specification example is as follows.

```
[To specify CE number 0, CM number 0]
-assignedcm ce0cm0
[To specify CE number 1, CM number 1]
-assignedcm ce1cm1
[To specify CE number 2, CM number 0]
-assignedcm ce2cm0
[To specify CE number 3, CM number 1]
-assignedcm ce3cm1
```

-csv

Displays the RAID group number in the CSV format.

If this option is omitted, it is displayed in the table format.

Options of "delete" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-raidgroup *raidGroupNumber*

Specify the RAID group number to be deleted, using either decimal or hexadecimal notation. For example, RAID group number 16 can be specified as "-raidgroup 16" in decimal notation or "-raidgroup 0x10" in hexadecimal notation.

-s

Processing continues without the output of a confirmation message.

-f

If there are volumes within the RAID group, the volumes are deleted before the RAID group is deleted. However, the command terminates with an error without deleting the volumes if any of the following conditions apply to the RAID group:

- The volumes in the RAID group have been mapped
- There are volumes other than open volumes

- There are LUN concatenated volumes
- There are ODX Buffer Volumes

Options of "info" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-raidgroup *raidGroupNumber*

Specify the RAID group number for which detailed information is to be displayed, using either decimal or hexadecimal notation. For example, RAID group number 16 can be specified as "-raidgroup 16" in decimal notation or "-raidgroup 0x10" in hexadecimal notation.

-expand

Add and display the following matters to RAID group information.

Item	Explanation
STRIPE_SIZE	Displays the stripe size of RAID group.
STRIPE_DEPTH	Displays the stipe depth of RAID group.
FAST_RECOVERY_CONFIGURATION	Displays RAID6-FR disk configuration.

Displayed information depends on the version of this software. If this software is upgraded, displayed information may be increased.

If this option is specified, the -raidgroup option cannot be specified.

-remote *boxID*

Specify a Box ID for the remote site ETERNUS Disk storage system. Specify it when you display the RAID group information of the remote site ETERNUS Disk storage system.

-csv

Displays the RAID group information in the CSV format.
If this option is omitted, it is displayed in the table format.

Options of "ecomode" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-raidgroup *raidGroupNumber*[,*raidGroupNumber*,...]

Specify the RAID group number for which detailed information is to be displayed, using decimal and/or hexadecimal notations. For example, RAID group number 16 can be specified as "-raidgroup 16" in decimal notation or "-raidgroup 0x10" in hexadecimal notation.

The more than one RAID group number can be specified.

-on

Set the Eco-mode to ON for the specified RAID group.
This option cannot be specified at the same time as the -off option.
This option cannot be set if the Eco-mode cannot be set for any one of the specified RAID groups.

-type *ecoModeSetting*

If -on option is specified, this option can be specified.

If -on option is specified and -type option is omitted, set Eco-mode that stops spindle rotation of disk drives to ON.

Enter Eco-mode in lower-case letters as shown below.

Specifiable String	Explanation
motoroff	Sets Eco-mode that stops spindle rotation of disk drives to ON.
poweroff	Sets Eco-mode that powers off disk drives to ON.

-off

Set the Eco-mode to OFF for the specified RAID group.
This option cannot be specified at the same time as the -on option.

-s

Continues processing without asking for confirmation.

EXAMPLES

- Creating a RAID group and displaying the created RAID group in the table format.

```
# /opt/FJSVssmgr/sbin/storageadm raid add -ipaddr 192.0.2.4 -disk 1:10,1:11,1:12,1:13,1:14,1:15 -
level raid5
<<< RAID ADD >>>
RGNO
-----
0x0000
-----
INFO:swsag0001:Command terminated normally.
```

- Creating a RAID group and displaying the created RAID group in the CSV format.

```
# /opt/FJSVssmgr/sbin/storageadm raid add -ipaddr 192.0.2.4 -disk 1:10,1:11,1:12,1:13,1:14,1:15 -
level raid5 -csv
RGNO
0x0000
```

- Deleting a RAID group.

```
# /opt/FJSVssmgr/sbin/storageadm raid delete -ipaddr 192.0.2.4 -raidgroup 16
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

- Displaying the RAID group information in the table format.

```
# /opt/FJSVssmgr/sbin/storageadm raid info -ipaddr 192.0.2.4
<<< RAID Information >>>
RGNO  NAME  USAGE      LEVEL  STATUS  CM          TOTAL_CAPACITY  FREE_CAPACITY
-----
0x0000  Open, System RAID5  Available  CM0CPU0  407775  0
0x0001  Open, SDV   RAID5  Available  CM1CPU0  410880  285440
0x0002  Open       RAID1  Available  CM0CPU1  136960  345367
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the RAID group information in the CSV format.

```
# /opt/FJSVssmgr/sbin/storageadm raid info -ipaddr 192.0.2.4 -csv
RGNO,NAME,USAGE,LEVEL,STATUS,CM,TOTAL_CAPACITY,FREE_CAPACITY
0x0000,, "Open, System", RAID5, Available, CM0CPU0, 407775, 0
0x0001,, "Open, SDV", RAID5, Available, CM1CPU0, 410880, 285440
0x0002,, Open, RAID1, Available, CM0CPU1, 136960, 345367
```

- Displaying the RAID group detail information in the table format.

```
# /opt/FJSVssmgr/sbin/storageadm raid info -ipaddr 192.0.2.4 -raidgroup 0x0000
<<< RAID Information >>>
RGNO  NAME  USAGE      LEVEL  STATUS  CM          TOTAL_CAPACITY  FREE_CAPACITY
-----
```

```
0x0000      Open,System RAID5  Available CM0CPU0  407775      0
```

NO	CONCATENATION	NAME	TOTAL_CAPACITY	ALLOCATED CAPACITY	STATUS	TYPE
0x0001	1/3	sample	102400	102400	Available	Open
0x0001	2/3	sample	1024	1024	Available	Open
Free	-		2048	2048		
0x0004	-		1536	1536	Available	Open

```
INFO:swsag0001:Command terminated normally.
```

- Displaying the RAID group detail information in the CSV format.

```
# /opt/FJSVssmgr/sbin/storageadm raid info -ipaddr 192.0.2.4 -raidgroup 0x0000 -csv
RGNO,NAME,USAGE,LEVEL,STATUS,CM,TOTAL_CAPACITY,FREE_CAPACITY,NO,CONCATENATION,NAME,TOTAL_CAPACITY
,ALLOCATED_CAPACITY,STATUS,TYPE
0x0000,"Open,System",RAID5,Available,CM0CPU0,407775,0,0x0001,1/3,sample,
102400,102400,Available,Open
0x0000,"Open,System",RAID5,Available,CM0CPU0,407775,0,0x0001,2/3,sample,1024,1024,Available,Open
0x0000,"Open,System",RAID5,Available,CM0CPU0,407775,0,Free,-,,2048,2048,,
0x0000,"Open,System",RAID5,Available,CM0CPU0,407775,0,0x0004,-,,1536,1536,Available,Open
```

- Setting Eco-mode that stops spindle rotation of disk drives of RAID group to ON.

```
# /opt/FJSVssmgr/sbin/storageadm raid ecomode -ipaddr 192.0.2.4 -raidgroup 0x0000 -on
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

- Setting Eco-mode that powers off disk drives of RAID group to ON.

```
> storageadm raid ecomode -ipaddr 192.0.2.4 -raidgroup 0x0000 -on -type poweroff
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

- RAID group Eco-mode set to OFF.

```
# /opt/FJSVssmgr/sbin/storageadm raid ecomode -ipaddr 192.0.2.4 -raidgroup 0x0000 -off
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

NOTES

- The message below is output if the -s option is not specified with the "delete" operand. Enter "y" to continue or "n" to cancel.
This message can be suppressed by specifying the -s option.

```
Are you sure? [y/n]:
```

- Setting the Eco-mode for a RAID group with an Eco-mode schedule already set results in the following:
 - RAID group Eco-mode set to ON -> Eco-mode ON overwrites the RAID group eco-mode schedule.
 - RAID group Eco-mode set to OFF -> An error occurs (unless the Eco-mode schedule is software-controlled).
- If the Eco-mode operation is not possible for the specified RAID group, then the command terminates with an error. Refer to "[Uncontrollable RAID Groups](#)" in "[6.1.6.1 Concerns in Storage System Operation When Using Eco-mode](#)" for information on the RAID groups for which the Eco-mode operation is not possible.
- You can use the -remote option only when using the Dynamic LUN Mirroring function of ServerView Resource Orchestrator.
- Temporary volumes are displayed as unknown volumes.
- You cannot create a new volume from RAID group with temporary volumes.

- ODX Buffer Volumes are not displayed.
- The External RAID Groups used for the Non-disruptive Storage Migration cannot be operated or displayed.

13.1.2.3 storageadm volume (Volume Management Command)

NAME

storageadm volume - Manages volumes

SYNOPSIS

```
storageadm volume add -ipaddr ipAddr -size volumeCapacity -raidgroup raidGroupNumber [-name aliasName] [-csv]
```

```
storageadm volume delete -ipaddr ipAddr [-volume volumeNumber[,volumeNumber,...]] [-remote boxID -remote-volume volumeNumber [-remote-force]] [-s]
```

```
storageadm volume format -ipaddr ipAddr -volume volumeNumber[,volumeNumber,...] [-s]
```

```
storageadm volume info -ipaddr ipAddr [-volume volumeNumber,...] [-remote boxID] [-csv]
```

```
storageadm volume nomapping -ipaddr ipAddr [-volume volumeNumber,...] [-remote boxID] [-csv]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm volume
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm volume
```

DESCRIPTION

This command is used to create/delete/format/display volumes in the ETERNUS Disk storage system that is registered with this software.

OPERANDS

add

Creates a volume.

delete

Deletes volumes.

format

Formats volumes.

info

Displays volume information.

nomapping

Displays the information of volumes that are not mapped to affinity group.

OPTIONS

Options of "add" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-size volumeCapacity`

Specify the size of the volume to be created in MB or GB. 1 GB is equivalent to 1024 MB. For example, 1024 MB is specified as `"-size 1024MB"` or `"-size 1GB"`.

`-raidgroup raidGroupName`

Specify the RAID group number for which a volume is to be created, using either decimal or hexadecimal notation. For example, RAID group number 16 can be specified as `"-raidgroup 16"` in decimal notation or `"-raidgroup 0x10"` in hexadecimal notation.

`-name aliasName`

Specify an alias for the volume to be created.

Only alphanumeric characters (a to z, A to Z and 0 to 9) and the following symbols can be used for aliases: `!@#$%^&*()-= `~+|~[]{};:'./<>?`. However, `"?"` is not supported for storage devices other than the ETERNUS DX60 S2. If the alias contains a space, enclose the entire alias in double quotes (e.g., `-name "123 567"`).

If this option is omitted, an alias name is set automatically.

`-csv`

Displays the created volume number in the CSV format.
if this option is omitted, it is displayed in the table format.

Options of "delete" or "format" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-volume volumeNumber[,volumeNumber,...]`

Specify the numbers for the volumes to be deleted or formatted, using either decimal or hexadecimal notation. If multiple volume numbers are specified, use commas (,) to separate volume numbers. For example, specify volumes 10 and 16 as either `"-volume 10,16"` in decimal notation or `"-volume 0xa,0x10"` in hexadecimal notation.

`-remote boxID`

Specify a Box ID for the remote site ETERNUS Disk storage system. Specify it when you display the RAID group information of the remote site ETERNUS Disk storage system.

`-remote-volume volumeNumber`

Specify the number for the volume to be deleted from the remote site ETERNUS Disk storage system using either a decimal or hexadecimal number. Multiple volume numbers cannot be specified. If multiple volume numbers are specified, only the first one is used.

Volumes which may be currently used cannot be deleted.

`-remote-force`

Specify this option to forcibly delete volumes, which may be currently used, from the remote site ETERNUS Disk storage system.

`-s`

Processing continues without the output of a confirmation message.

Options of "info" or "nomapping" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-volume volumeNumber[,volumeNumber,...]`

Specify the numbers for the volumes to be output for which information is to be output, using either decimal or hexadecimal notation.

If multiple volume numbers are specified, use commas (,) to separate volume numbers. For example, specify volumes 10 and 16 as either `"-volume 10,16"` in decimal notation or `"-volume 0xa,0x10"` in hexadecimal notation.

If this option is omitted, information is displayed for all target volumes.

`-remote boxID`

Specify a Box ID for the remote site ETERNUS Disk storage system. Specify it when you display the RAID group information of the remote site ETERNUS Disk storage system.

`-csv`

Displays the volume information in the CSV format.

If this option is omitted, it is displayed in the table format.

EXAMPLES

- Creating a volume and displaying the created volume in the table format.

```
> storageadm volume add -ipaddr 192.0.2.4 -size 1024MB -raidgroup 16
<<< Volume ADD >>>
NUMBER
-----
0x0001
-----
INFO:swsag0001:Command terminated normally.
```

- Creating a volume and displaying the created volume in the CSV format.

```
> storageadm volume add -ipaddr 192.0.2.4 -size 1024MB -raidgroup 16 -csv
NUMBER
0x0001
```

- Deleting a volume.

```
> storageadm volume delete -ipaddr 192.0.2.4 -volume 16
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Formatting a volume.

```
> storageadm volume format -ipaddr 192.0.2.4 -volume 16
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Displaying the volume information in the table format.

```
> storageadm volume info -ipaddr 192.0.2.4
<<< Volume Information >>>
NUMBER  NAME      TOTAL_CAPACITY STATUS    TYPE      CONCATENATION  RGNO  ENCRYPT
-----  -
Unknown  0          Available F6427G -      0x0001 -
0x0001   100        Available SDV    -      0x0000 -
0x0002   425        Available Open  -      0x0002 -
Unknown  1166       Available MVV(G) -      0x0001 -
Unknown  2332       Available MVV(G) 2      0x0001 -
0x0005   150        Available Open  -      0x0002 -
0x0006   4700       Available Open  3      0x0000,0x0002 -
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the volume information in the CSV format.

```
> storageadm volume info -ipaddr 192.0.2.4 -csv
NUMBER,NAME,TOTAL_CAPACITY,STATUS,TYPE,CONCATENATION, RGNO, ENCRYPT
Unknown,,0,Available,F6427G,-,0x0001,-
0x0001,,100,Available,SDV,-,0x0000,-
0x0002,,425,Available,Open,-,0x0002,-
Unknown,,1166,Available,MVV(G),-,0x0001,-
Unknown,,2332,Available,MVV(G),2,0x0001,-
0x0005,,150,Available,Open,-,0x0002,-
0x0006,,4700,Available,Open,3,"0x0000,0x0002",-
```

- Displaying the unused volume information in the table format.

```
> storageadm volume nomapping -ipaddr 192.0.2.4
<<< Volume Information >>>
NUMBER  NAME      TOTAL_CAPACITY STATUS    TYPE      CONCATENATION  RGNO  ENCRYPT
-----  -
Unknown  0          Available F6427G -      0x0001 -
0x0001  100       Available SDV      -      0x0000 -
0x0002  425       Available Open    -      0x0002 -
Unknown  1166     Available MVV(G) -      0x0001 -
Unknown  2332     Available MVV(G) 2      0x0001 -
0x0005  150       Available Open  -      0x0002 -
0x0006  4700     Available Open  3      0x0000,0x0002 -
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the unused volume information in the CSV format.

```
> storageadm volume nomapping -ipaddr 192.0.2.4 -csv
NUMBER,NAME,TOTAL_CAPACITY,STATUS,TYPE,CONCATENATION, RGNO, ENCRYPT
Unknown,,0,Available,F6427G,-,0x0001,-
0x0001,,100,Available,SDV,-,0x0000,-
0x0002,,425,Available,Open,-,0x0002,-
Unknown,,1166,Available,MVV(G),-,0x0001,-
Unknown,,2332,Available,MVV(G),2,0x0001,-
0x0005,,150,Available,Open,-,0x0002,-
0x0006,,4700,Available,Open,3,"0x0000,0x0002",-
```

NOTES

- Only open volumes can be created.
- The volumes that are created are formatted automatically.
- The message below is output if the -s option is not specified when either the "delete" operand or the "format" operand is specified. Enter "y" to continue or "n" to cancel.
This message can be suppressed by specifying the -s option.

```
Are you sure? [y/n]:
```

- Volumes cannot be deleted by specifying the volume numbers for volumes that are not open volumes.
- Volumes that have been mapped to an affinity group cannot be deleted.
- The Thin Provisioning Volume is not able to create. However, it possible to remove.
- You can use the -remote, the -remote-volume and the -remote-force options only when using the Dynamic LUN Mirroring function of ServerView Resource Orchestrator.
- Temporary volumes are displayed as unknown volumes.
- You cannot create a new volume from RAID group with temporary volumes.
- You cannot delete temporary volumes.

- You cannot create, delete, or format Wide Striping Volumes.
- You cannot create, delete, format, or display ODX Buffer Volumes.
- NAS Volumes are displayed but do not distinguished from other volumes. Confirm the NAS volumes by using Web Console.
- A NAS volume on which a shared folder exists cannot be deleted.
- A NAS backup volume that is mounted cannot be deleted.
- Although NAS volumes and NAS backup volumes can be formatted, do not perform this process other than for the purpose of recovery when a volume malfunctions.
- A NAS system volume cannot be deleted or formatted.
- Extreme Cache Pool volumes cannot be created, deleted or formatted.
- Container volumes used with Deduplication cannot be deleted.
- Block Map volumes used with Deduplication cannot be deleted or formatted.
- You cannot operate Virtual Volumes. However, as an exception, Virtual Volumes with an "Unknown" VVOL type can be deleted.
When deleting multiple Virtual Volumes, each one must be deleted individually since a batch delete is not possible.
- The volumes used for the Non-disruptive Storage Migration cannot be created or formatted.
- The volumes used for the Non-disruptive Storage Migration are displayed as "Ext" in the RGNO field.

13.1.2.4 storageadm affinity (AffinityGroup Management Command)

NAME

storageadm affinity - Manages affinity groups

SYNOPSIS

```
storageadm affinity add -ipaddr ipAddr -volume volumeNumber[,volumeNumber,...] [-lun lunNumber] [-affinitygroup affinityGroupNumber] [-name aliasName] [-csv]
```

```
storageadm affinity delete -ipaddr ipAddr -affinitygroup affinityGroupNumber [-s]
```

```
storageadm affinity update -ipaddr ipAddr -affinitygroup affinityGroupNumber {-add -volume volumeNumber[,volumeNumber,...] [-lun lunNumber[,lunNumber,...]] | -delete [-volume volumeNumber[,volumeNumber,...] | -lun lunNumber[,lunNumber,...]]} [-s]
```

```
storageadm affinity info -ipaddr ipAddr [-affinitygroup affinityGroupNumber] [-csv]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm affinity
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm affinity
```

DESCRIPTION

This command is used to create/delete/modify/display affinity groups in the ETERNUS Disk storage system that is registered with this software.

OPERANDS

add

Creates an affinity group.

delete

Deletes an affinity group.

update

Updates the configuration of an affinity group.

info

Displays the affinity group information.

OPTIONS

Options of "add" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-volume volumeNumber[,volumeNumber,...]`

Specify the numbers of the volumes to be set to an affinity group, using either decimal or hexadecimal notation. If multiple volume numbers are specified, use commas (,) to separate volume numbers. For example, specify volumes 16, 17 and 18 as either "-volume 16,17,18" in decimal notation or "-volume 0x10,0x11,0x12" in hexadecimal notation.

`-lun lunNumber,...`

Specify the LUN number to be allocated to the volume, using either decimal or hexadecimal notation. The number of LUN numbers specified must be the same as the number of volumes specified using the `-volume` option, and the LUN numbers must also be listed in the same order as their corresponding volume numbers.

If multiple LUN numbers are specified, use commas (,) to separate LUN numbers. For example, specify LUN numbers 16, 17 and 18 as either "-lun 16,17,18" in decimal notation or "-lun 0x10,0x11,0x12" in hexadecimal notation.

If this option is omitted, LUN numbers are allocated in order, starting from 0.

`-affinitygroup affinityGroupName`

Specify the affinity group number to be created, using either decimal or hexadecimal notation. For example, specify affinity group number 16 as either "-affinitygroup 16" in decimal or "-affinitygroup 0x10" in hexadecimal.

If this option is omitted, the affinity group numbers that can be created within the target storage device are allocated automatically.

`-name aliasName`

Specify an alias for the affinity group to be created.

Only alphanumeric characters (a to z, A to Z and 0 to 9) and the following symbols can be used for aliases: !@#\$%^&*()-= `~|~[]{};:~"/<>?. However, "?" is not supported for storage devices other than the ETERNUS DX60 S2. If the alias contains a space, enclose the entire alias in double quotes (e.g., `-name "123 567"`).

This option must be specified for the ETERNUS DX60 S2.

This option can be omitted for storage devices other than the ETERNUS DX60 S2. If this option is omitted, alias names are set automatically.

`-csv`

Displays the created affinity group number in the CSV format.

If this option is omitted, it is displayed in the table format.

Options of "delete" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-affinitygroup affinityGroupName`

Specify the number of the affinity group to be deleted, using either decimal or hexadecimal notation. For example, specify affinity group number 16 as either `"-affinitygroup 16"` in decimal or `"-affinitygroup 0x10"` in hexadecimal.

`-s`

Processing continues without the output of a confirmation message.

Options of "update" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-affinitygroup affinityGroupName`

Specify the number of the affinity group whose configuration is to be changed, using either decimal or hexadecimal notation. For example, specify affinity group number 16 as either `"-affinitygroup 16"` in decimal or `"-affinitygroup 0x10"` in hexadecimal.

`-add`

Adds volumes in the affinity group.

When the number for the allocated volume/LUN is specified, this command terminates abnormally.

`-delete`

Deletes volumes from an affinity group.

The command terminates abnormally if a volume number or LUN number of a volume that has not been mapped is specified, or if deleting the specified mapping means that there are no more mappings.

`-volume volumeNumber[,volumeNumber,...]`

Specify the volume number of the volume to be added to or deleted from an affinity group, using either decimal or hexadecimal notation.

If multiple volume numbers are specified, use commas (,) to separate volume numbers. For example, specify volumes 16, 17 and 18 as either `"-volume 16,17,18"` in decimal notation or `"-volume 0x10,0x11,0x12"` in hexadecimal notation.

This option cannot be specified together with the `-lun` option when deleting volumes from an affinity group. Delete volumes by specifying either this option or the `-lun` option, not both together.

`-lun lunNumber[,lunNumber,...]`

Specify the LUN number to be allocated to a volume or released from a volume, using either decimal or hexadecimal notation. The number of LUN numbers specified must be the same as the number of volumes specified using the `-volume` option, and the LUN numbers must also be listed in the same order as their corresponding volume numbers.

If multiple LUN numbers are specified, use commas (,) to separate LUN numbers. For example, specify LUN numbers 16, 17 and 18 as either `"-lun 16,17,18"` in decimal notation or `"-lun 0x10,0x11,0x12"` in hexadecimal notation.

If this option is omitted when LUN numbers are being allocated, LUN numbers are automatically allocated, starting with the smallest free LUN number.

When LUN numbers are being released from volumes, this option cannot be specified together with the `-volume` option. Release LUN numbers by specifying either this option or the `-volume` option, but not both together.

`-s`

Processing continues without the output of a confirmation message.

Options of "info" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-affinitygroup affinityGroupName`

Specify the number of the affinity group for which detailed information is to be displayed, using either decimal or hexadecimal notation. For example, specify affinity group number 16 as either "-affinitygroup 16" in decimal or "-affinitygroup 0x10" in hexadecimal.

If this option is omitted, a list of affinity groups is displayed.

`-csv`

Displays the affinity group information in the CSV format.
If this option is omitted, it is displayed in the table format.

EXAMPLES

- Creating an affinity group and displaying the created affinity group in the table format.

```
> storageadm affinity add -ipaddr 192.0.2.4 -volume 16,17,18 -lun 0,1,2 -affinitygroup 16
<<< AffinityGroup ADD >>>
NUMBER
-----
0x0010
-----
INFO:swsag0001:Command terminated normally.
```

- Creating an affinity group and displaying the created affinity group in the CSV format.

```
> storageadm affinity add -ipaddr 192.0.2.4 -volume 16,17,18 -lun 0,1,2 -affinitygroup 16 -csv
NUMBER
0x0010
```

- Deleting an affinity group.

```
> storageadm affinity delete -ipaddr 192.0.2.4 -affinitygroup 16
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Adding a LUN in the affinity group.

```
> storageadm affinity update -ipaddr 192.0.2.4 -affinitygroup 16 -add -volume 19 -lun 3
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Deleting a LUN from the affinity group.

```
> storageadm affinity update -ipaddr 192.0.2.4 -affinitygroup 16 -delete -volume 19
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Displaying the affinity group lists in the table format.

```
> storageadm affinity info -ipaddr 192.0.2.4
<<< AffinityGroup Information >>>
NUMBER NAME
-----
0x0000 AG00
0x0001 AG01
0x0002 AG02
0x0003 AG03
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the affinity group lists in the CSV format.

```
> storageadm affinity info -ipaddr 192.0.2.4 -csv
NUMBER,NAME
0x0000,AG00
```

```
0x0001,AG01
0x0002,AG02
0x0003,AG03
```

- Displaying the affinity group detail information (mapping) in the table format.

```
> storageadm affinity info -ipaddr 192.0.2.4 -affinitygroup 16
<<< AffinityGroup Information >>>
NUMBER NAME          LUN    VOLUME  VOLUME NAME
-----
0x0010 abcd          0x0000 0x0001  sample
                          0x0002 0x0004
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the affinity group detail information (mapping) in the CSV format.

```
> storageadm affinity info -ipaddr 192.0.2.4 -affinitygroup 16 -csv
NUMBER,NAME,LUN,VOLUME,VOLUME NAME
0x0010,abcd,0x0000,0x0001,sample
0x0010,abcd,0x0002,0x0004,
```

- Displaying the linked affinity group detail information (mapping) in the table format.

```
> storageadm affinity info -ipaddr 192.0.2.4 -affinitygroup 16
<<< AffinityGroup Information >>>
NUMBER NAME          LUN    VOLUME  VOLUME NAME
-----
0x0010,0x011 abcd    0x0000 0x0001  sample
                          0x0002 0x0004
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the linked affinity group detail information (mapping) in the CSV format.

```
> storageadm affinity info -ipaddr 192.0.2.4 -affinitygroup 16 -csv
NUMBER,NAME,LUN,VOLUME,VOLUME NAME
"0x0010,0x011",abcd,0x0000,0x0001,sample
"0x0010,0x011",abcd,0x0002,0x0004,
```

NOTES

- The message below is output if the -s option is not specified when either the "delete" operand or the "update" operand is specified. Enter "y" to continue or "n" to cancel. This message can be suppressed by specifying the -s option.

```
Are you sure? [y/n]:
```

- The command terminates abnormally if the -delete option is specified with the "update" operand in such a way that there are no items of mapping information for the affinity group.
- The command terminates abnormally if the "add" operand or the "update" operand contains the number of a volume that cannot be set to an affinity group, such as:
 - Volume Numbers that does not exist in the storage device
 - Volume Numbers that is not open
 - Volume Numbers of ODX Buffer Volume
 - Volume Numbers of NAS volumes
 - Volume Numbers of Extreme Cache Pool Volumes
 - Volume Numbers for Container Volumes used with Deduplication
 - Volume Numbers for Block Map Volumes used with Deduplication

- To display a concatenated affinity group when the "info" operand is specified, specify the concatenated source affinity group in the -affinitygroup option.
- If this command is executed by specifying the -volume option for the "add" operand or the "update" operand, the maximum number of characters that can be specified in the command line is exceeded and errors may occur depending on the operating system of the Management Server. In that case, perform the operation from Web Console or reduce the number of characters specified in the command line and repeat the execution until successful.

13.1.2.5 storageadm ecomode (Eco-mode Management Command)

NAME

storageadm ecomode - Operates the Eco-mode

SYNOPSIS

```
storageadm ecomode on -ipaddr ipAddr
storageadm ecomode off -ipaddr ipAddr [-s]
storageadm ecomode info -ipaddr ipAddr [-csv]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm ecomode
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm ecomode
```

DESCRIPTION

This command toggles and displays Eco-mode information for ETERNUS Disk storage systems registered with this product.

OPERANDS

on

Sets the Eco-mode to ON.

off

Sets the Eco-mode to OFF.

info

Displays the Eco-mode status.

OPTIONS

Options of "on" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

Options of "off" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-s

Continues processing without asking for confirmation.

Options of "info" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-csv

Displays the Eco-mode status of the ETERNUS Disk storage system in the CSV format. if this option is omitted, it is displayed in the table format.

EXAMPLES

- Setting the Eco-mode to ON:

```
> storageadm ecomode on -ipaddr 192.0.2.4
INFO:swsag0001:Command terminated normally.
```

- Setting the Eco-mode to OFF:

```
> storageadm ecomode off -ipaddr 192.0.2.4
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

- Displaying the Eco-mode information:

```
> storageadm ecomode info -ipaddr 192.0.2.4

<<< EcoMode Information>>
STATUS
-----
ON
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the Eco-mode information in CSV format:

```
> storageadm ecomode info -ipaddr 192.0.2.4 -csv
STATUS
ON
```

NOTES

- If the "off" operand is specified without the -s option, then the following message is displayed:
Enter "y" to continue or "n" to cancel.
This message can be suppressed by specifying the -s option.

```
Are you sure? [y/n]:
```

- If the device Eco-mode settings are as follows, the command terminates with an error:
 - The processing to switch Eco-mode on is executed when the Eco-mode is already on.

13.1.2.6 storageadm port (Port Management Command)

NAME

storageadm port - Collects a list of port information

SYNOPSIS

```
storageadm port info -ipaddr ipAddr [-tfo] [-csv]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm port
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm port
```

DESCRIPTION

This command displays the port information of the ETERNUS Disk storage systems registered with this software.

OPERANDS

info

Displays a list of port information.

OPTIONS

Options of "info" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-tfo

Additionally output the following items regarding Storage Cluster:

- Response address
- TFO status

-csv

Displays the port information in the CSV format.

If this option is omitted, it is displayed in the table format.

EXAMPLES

- Displaying port information in table format.

```
# /opt/FJSVssmgr/sbin/storageadm port info -ipaddr 192.0.2.4
<<< port Information >>>
PORT ID  PORT NAME  STATUS  TYPE      AFFINITY  PORT ADDRESS  SUPPLEMENT INFORMATION
-----
000  CM0CA0Port0  Online  FC-CA     On        1234567890ABCDEE -
001  CM0CA0Port1  Online  FC-CA     On        1234567890ABCDEF -
100  CM1CA0Port0  Online  iSCSI-CA On        192.0.2.10   iqn.iscsi.name
101  CM1CA0Port1  Online  iSCSI-CA On        192.0.2.11   iqn.iscsi.name
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying port information in CSV format.

```
# /opt/FJSVssmgr/sbin/storageadm port info -ipaddr 192.0.2.4 -csv
PORT ID,PORT NAME,STATUS,TYPE,AFFINITY,PORT ADDRESS,SUPPLEMENT INFORMATION
000,CM0CA0Port0,Online,FC-CA,On,1234567890ABCDEE,-
001,CM0CA0Port1,Online,FC-CA,On,1234567890ABCDEF,-
100,CM1CA0Port0,Online,iSCSI-CA,On,192.0.2.10,iqn.iscsi.name
101,CM1CA0Port1,Online,iSCSI-CA,On,192.0.2.11,iqn.iscsi.name
```

- Displaying port information including Storage Cluster information in table format:

```
> storageadm port info -ipaddr 192.0.2.4 -tfo
<<< port Information >>>
PORT PORT NAME    STATUS    TYPE      AFFINITY PORT ADDRESS    SUPPLEMENT    TFO ADDRESS    TFO
STATUS
ID
INFORMATION
-----
000 CM0CA0Port0 Online    FC-CA    On        1234567890ABCDEE -                1234567890ABCDEE
Active
001 CM0CA0Port1 Online    FC-CA    On        1234567890ABCDEF -                -                -
100 CM1CA0Port0 Online    iSCSI-CA On        192.0.2.10    iqn.iscsi.name -                -
Active
101 CM1CA0Port1 Online    iSCSI-CA On        192.0.2.11    iqn.iscsi.name -                -
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying port information including Storage Cluster information in CSV format.

```
> storageadm port info -ipaddr 192.0.2.4 -tfo -csv
PORT ID,PORT NAME,STATUS,TYPE,AFFINITY,PORT ADDRESS,SUPPLEMENT INFORMATION,TFO ADDRESS,TFO STATUS
000,CM0CA0Port0,Online,FC-CA,On,1234567890ABCDEE,-,1234567890ABCDEE,Active
001,CM0CA0Port1,Online,FC-CA,On,1234567890ABCDEF,-,-,-
100,CM1CA0Port0,Online,iSCSI-CA,On,192.0.2.10,iqn.iscsi.name,-,Active
101,CM1CA0Port1,Online,iSCSI-CA,On,192.0.2.11,iqn.iscsi.name,-,-
```

NOTES

- SAS port information is not displayed.
- For SAS model devices of an ETERNUS DX60 S2, the command terminates with an error.

13.1.2.7 storageadm iscsiport (iSCSI Port Management Command)

NAME

storageadm iscsiport - Operates iSCSI ports

SYNOPSIS

```
storageadm iscsiport set -ipaddr ipAddr -port portID {[-portipaddr portIpAddr] [-netmask portNetmask]
[-gateway gatewayIpAddr] [-isns iSNS_serverIpAddr] [-iscsi iscsiName] [-alias aliasName] [-affinity
{on | off}] [-ipv4 {on | off}] [-ipv6localip localIpAddr] [-ipv6connip connectIpAddr] [-ipv6gateway
v6gatewayIpAddr] [-ipv6 {on | off}]} [-s]
```

```
storageadm iscsiport info -ipaddr ipAddr [-port portID [-expand]] [-csv]
```

```
storageadm iscsiport ping -ipaddr ipAddr -port portID -target targetIpAddr [-count pingCount] [-csv]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm iscsiport
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm iscsiport
```

DESCRIPTION

This command displays the iSCSI port settings and information of the ETERNUS Disk storage systems registered with this software.

Specify the storage device IP address and the iSCSI port setting information in the command parameters in order to set the iSCSI port settings and to display the set iSCSI port information and the IP reachability status of the iSCSI network to which the storage device is connected.

OPERANDS

set

Sets iSCSI port information.

info

Displays a list of iSCSI port information.

If `-port` is specified, detailed information concerning the specified iSCSI port is displayed.

If both `-port` option and `-expand` option are specified at the same time, the extended information for iSCSI port is displayed.

ping

Issues a ping to check the IP reachability status of the iSCSI network to which the storage device is connected and displays the result.

OPTIONS

Options of "set" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-port portID`

Specify the port ID of the iSCSI port.

For the ETERNUS DX60 S2, the port ID is the CM number and the port number entered.

For the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5), DX S4 series (excluding the ETERNUS DX8900 S4), DX S3 series (excluding the ETERNUS DX8000 S3 series), DX S2 series (excluding the ETERNUS DX60 S2), or the ETERNUS AF All-Flash Arrays, the port ID is the CM number, the CA number, and the port number entered.

For the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, the port ID is the CE number (uppercase hexadecimal), the CM number, the CA number, and the port number entered.

`-portipaddr portIpAddr`

Specify the IP address of the iSCSI port.

`-netmask portNetmask`

Specify the subnet mask of the iSCSI port.

`-gateway gatewayIpAddr`

Specify the IP address of the gateway server for the iSCSI port.

Specify the following if delete the gateway server setting.

```
-gateway ""
```

`-isns iSNS_serverIpAddr`

Specify the IP address of the iSNS server for the iSCSI port.

Specify the following if delete the iSNS server settings.

```
-isns ""
```


If IPv4 configuration for the iSCSI port is invalid, IPv4 address cannot be specified.
If IPv6 configuration for the iSCSI port is invalid, IPv6 address cannot be specified.

-iscsi *iscsiName*

Specify the iSCSI name of the iSCSI port.

Specify the following if you want to set default iSCSI name.

```
-iscsi ""
```

-alias *aliasName*

Specify the alias of the iSCSI port.

-affinity {on | off}

Specify the security setting for the iSCSI port. If set to ON, specify as "-affinity on". If set to OFF, specify as "-affinity off".

-ipv4 {on | off}

Specify IPv4 setting for the iSCSI port. To enable IPv4 setting, specify "-ipv4 on" and to disable it, specify "-ipv4 off". If "-ipv4 off" is specified, IP address, subnet mask and gateway server settings are all deleted from the iSCSI port.

"-ipv4 off" cannot be specified together with the following options and their values:

- -portipaddr
- -netmask
- -gateway
- -ipv6 off

-ipv6localip *localIpAddr*

Set the IPv6 link local address of the iSCSI port.

-ipv6connip *connectIpAddr*

Specify the IPv6 connection IP address of the iSCSI port.

When deleting the IPv6 connection IP address setting, specify as below:

```
-ipv6connip ""
```

-ipv6gateway *v6gatewayIpAddr*

Specify the IPv6 gateway address of the iSCSI port.

When deleting the IPv6 gateway address setting, specify as below:

```
-ipv6gateway ""
```

-ipv6 {on | off}

Specify IPv6 settings of the iSCSI port. To enable IPv6 settings, specify "-ipv6 on" and to disable it, specify "-ipv6 off". If "-ipv6 off" is specified, IPv6 link local address, IPv6 connected IP address and IPv6 gateway address settings are all deleted from the iSCSI port.

"-ipv6 off" cannot be specified together with the following options and their values:

- -ipv6localip
- -ipv6connip
- -ipv6gateway
- -ipv4 off

-s

Causes processing to continue without output of a confirmation message.

Options of "info" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-port *portID*

Displays detailed information concerning the iSCSI ports. If this option is omitted, a list of iSCSI ports is displayed.

For the ETERNUS DX60 S2, the port ID is the CM number and the port number entered.

For the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5), DX S4 series (excluding the ETERNUS DX8900 S4), DX S3 series (excluding the ETERNUS DX8000 S3 series), DX S2 series (excluding the ETERNUS DX60 S2), or the ETERNUS AF All-Flash Arrays, the port ID is the CM number, the CA number, and the port number entered.

For the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, the port ID is the CE number (uppercase hexadecimal), the CM number, the CA number, and the port number entered.

-csv

Displays the port information in the CSV format.

If this option is omitted, it is displayed in the table format.

-expand

Add the following to iSCSI port information to display:

- IPv6 link local address
- IPv6 connection IP address
- IPv6 gateway
- TFO status

Added information depends on the version of this software. If this software is upgraded, displayed information may be increased.

This option can be specified only when the -port option is specified.

Options of "ping" Operand

-ipaddr *ipAddr*

Specify the IP address of the storage device.

-port *portID*

Specify the port ID of the iSCSI port.

For the ETERNUS DX60 S2, the port ID is the CM number and the port number entered.

For the ETERNUS DX600 S6, DX S5 series (excluding the ETERNUS DX900 S5), DX S4 series (excluding the ETERNUS DX8900 S4), DX S3 series (excluding the ETERNUS DX8000 S3 series), DX S2 series (excluding the ETERNUS DX60 S2), or the ETERNUS AF All-Flash Arrays, the port ID is the CM number, the CA number, and the port number entered.

For the ETERNUS DX900 S6/S5, DX8900 S6/S4, DX8000 S3 series, the port ID is the CE number (uppercase hexadecimal), the CM number, the CA number, and the port number entered.

-target *targetIpAddr*

Specify the IP address of the server that checks the IP reachability status.

-count *pingCount*

Specify a value between 1 and 10 for the number of pings issued to check the IP reachability status. A failure is displayed if an error response is returned at least once. A success is displayed if normal responses are returned for all pings.

If this option is omitted, the ping execution count is 1.

-csv

Displays the port information in the CSV format.
If this option is omitted, it is displayed in the table format.

EXAMPLES

- Setting iSCSI port information.

```
> storageadm iscsiport set -ipaddr 192.0.2.4 -port 000 -portipaddr 192.0.2.1
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Displaying a list of iSCSI port information in table format.

```
> storageadm iscsiport info -ipaddr 192.0.2.4
<<< iSCSI Port Information >>>
PORT NAME          STATUS TYPE      AFFINITY ISCSI NAME          IP ADDRESS
ID
-----
00  CM0Port0      Online iSCSI-CA On          iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029
192.0.2.38
01  CM0Port1      Online iSCSI-CA Off          iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029
192.0.2.39
10  CM1Port0      Online iSCSI-CA On          iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029
192.0.2.40
11  CM1Port1      Online iSCSI-CA On          iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029
192.0.2.41
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying a list of iSCSI port information in CSV format.

```
> storageadm iscsiport info -ipaddr 192.0.2.4 -csv
PORT ID,NAME,STATUS,TYPE,AFFINITY,ISCSI NAME,IP ADDRESS
00,CM0Port0,Online,iSCSI-CA,On,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,192.0.2.38
01,CM0Port1,Online,iSCSI-CA,Off,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,192.0.2.39
10,CM1Port0,Online,iSCSI-CA,On,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,192.0.2.40
11,CM1Port1,Online,iSCSI-CA,On,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,192.0.2.41
```

- Displaying detailed iSCSI port information in table format.

```
> storageadm iscsiport info -ipaddr 192.0.2.4 -port 000
<<< iSCSI Port Information >>>
PORT NAME          TYPE      IP ADDRESS      SUBNET      GATEWAY      ISNS  ISNS SERVER  ISCSI
NAME ALIAS NAME TRANSFER BANDWIDTH MTU  AFFINITY HOST      HOST      HOST      RESET RESERVE
ID
ADDRESS          RATE      LIMIT      SIZE MODE    RESPONSE  RESPONSE  SERVER IP  SPECIFIC
SCOPE CANCEL AT
-----
-----
-----
NUMBER      NAME      MODE      CHIP RESET
-----
000  CM0CA0Port0  iSCSI-CA  192.0.2.38    255.255.255.0  -          Off      -          iqn.
2000-09.com.fujitsu:storage-system.eternus-dxm:00040000  1Gbit/s Auto - - On - - - I_T_L Off
-----
-----
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying detailed iSCSI port information in CSV format.

```
> storageadm iscsiport info -ipaddr 192.0.2.4 -port 000 -csv
PORT ID,NAME,TYPE,IP ADDRESS,SUBNET MASK,GATEWAY,ISNS SERVER,ISNS SERVER IP ADDRESS,ISCSI
NAME,ALIAS NAME,TRANSFER RATE,BANDWIDTH LIMIT,MTU SIZE,AFFINITY MODE,HOST RESPONSE NUMBER,HOST
RESPONSE NAME,HOST SPECIFIC MODE,RESET SCOPE,RESERVE CANCEL AT CHIP RESET
000,CM0CA0Port0,iSCSI-CA,192.0.2.38,255.255.255.0,-,Off,-,iqn.2000-09.com.fujitsu:storage-
system.eternus-dxm:00040000,,1Gbit/s Auto,-,-,On,-,-,-,I_T_L,Off
```

- Displaying detailed iSCSI port information in table format including additional information.

```
> storageadm iscsiport info -ipaddr 192.0.2.4 -port 000 -expand
<<< iSCSI Port Information >>>
PORT NAME          TYPE      IP ADDRESS      SUBNET          GATEWAY          ISNS   ISNS SERVER      ISCSI
NAME ALIAS NAME TRANSFER BANDWIDTH MTU  AFFINITY HOST      HOST            HOST            RESET RESERVE    LINK
LOCAL IP ADDRESS                                CONNECT IP ADDRESS                                IPV6 GATEWAY
ADDRESS
TFO STATUS

ID                                     MASK                                     SERVER IP
ADDRESS                                RATE   LIMIT   SIZE MODE   RESPONSE  RESPONSE  SPECIFIC
SCOPE CANCEL AT

                                     NUMBER   NAME      MODE          CHIP RESET
-----
000 CM0CA0Port0 iSCSI-CA 192.0.2.38 255.255.255.0 192.0.2.1 Off - iqn.
2000-09.com.fujitsu:storage-system.eternus-dxm:00040000e2000:0000000029 cm0ca0port0 Auto - - Off
0x000F hresp00F Normal Mode I_T_L Off fe80::128c:24d8:3016:250a:56ff:fe67:a524
2001:100a:ab13:cd24:ef3f:db72:fe11:cd21 2001:1101:cfcl:b4d2:ef73:3f9c:2d11:ca34 Active
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying detailed iSCSI port information in CSV format including additional information.

```
> storageadm iscsiport info -ipaddr 192.0.2.4 -port 000 -expand -csv
PORT ID,NAME,TYPE,IP ADDRESS,SUBNET MASK,GATEWAY,ISNS SERVER,ISNS SERVER IP ADDRESS,ISCSI
NAME,ALIAS NAME,TRANSFER RATE,BANDWIDTH LIMIT,MTU SIZE,AFFINITY MODE,HOST RESPONSE NUMBER,HOST
RESPONSE NAME,HOST SPECIFIC MODE,RESET SCOPE,RESERVE CANCEL AT CHIP RESET,LINK LOCAL IP
ADDRESS,CONNECT IP ADDRESS,IPV6 GATEWAY ADDRESS,TFO STATUS
000,CM0CA0Port0,iSCSI-CA,192.0.2.38,255.255.255.0,192.0.2.1,Off,-,iqn.
2000-09.com.fujitsu:storage-system.eternus-dxm:00040000e2000:0000000029,cm0ca0port0,Auto,-,-,Off,
0x000F,hresp00F,Normal Mode,I_T_L,Off,fe80::128c:24d8:3016:250a:
56ff:fe67:a524,2001:100a:ab13:cd24:ef3f:db72:fe11:cd21,2001:1101:cfcl:b4d2:ef73:3f9c:
2d11:ca34,Active
```

- Displaying the IP reachability status of the iSCSI network in table format.

```
> storageadm iscsiport ping -ipaddr 192.0.2.4 -port 000 -target 192.0.2.1
<<iSCSI Port Ping Status>>
PORT NAME          TARGET IP      RESULT
ID                ADDRESS
-----
000 CM0CA0Port0 192.0.2.38    Success
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the IP reachability status of the iSCSI network in CSV format.

```
> storageadm iscsiport ping -ipaddr 192.0.2.4 -port 000 -target 192.0.2.1 -csv
PORT ID,NAME,TARGET IP ADDRESS,RESULT
000,CM0CA0Port0,192.0.2.38,Success
```

NOTES

- The message below is displayed when the "set" operand is specified. Enter "y" to continue, or "n" to cancel. Note that this message is not displayed if the -s option is specified.

```
Are you sure? [y/n]:
```

- If you set BS2000 Mode to Host Specific Mode of Host Response when the iSCSI port is displayed in detail, it is displayed as "Normal Mode" to HOST SPECIFIC MODE.
- The IP address, link local IP address, connection IP address, iSCSI name, and iSCSI alias name of the iSCSI port might not be able to be registered by duplicating with other iSCSI port settings. Refer to [Note] in "[6.1.5 Connectivity Management](#)" for details.

13.1.2.8 storageadm progress (Progress Display Command)

NAME

storageadm progress - Displays progress information

SYNOPSIS

```
storageadm progress volumeformat -ipaddr ipAddr { [-volume volumeNumber[,volumeNumber...]] | [-all] }
[-csv]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm progress
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm progress
```

DESCRIPTION

This command displays progress information concerning the formatting of volumes on ETERNUS Disk storage systems registered with this software.

Specify the storage device IP address and the volume number in the command parameters in order to display volume formatting progress information.

OPERANDS

volumeformat

Displays the formatting progress.

OPTIONS

Options of "volumeformat" Operand

-ipaddr ipAddr

Specify the storage device IP address.

`-volume volumeNumber[,volumeNumber,...]`

Specify the numbers for the volumes to be output, using either decimal or hexadecimal notation.

If multiple volume numbers are specified, use commas (,) to separate volume numbers. For example, specify volumes 10 and 16 as either `-volume 10,16` in decimal notation or `-volume 0xa,0x10` in hexadecimal notation.

This displays formatting progress information (including format completion and formatting not yet being implemented) concerning the specified volume.

An error does not occur if the specified volume does not exist, but information is not displayed for that volume.

If this is omitted, progress information is displayed for all volumes for which formatting is in progress. However, if the `-all` option is specified, the progress information includes volumes not currently being formatted (formatting completed or not yet implemented).

This option cannot be specified at the same time as the `-all` option.

`-all`

Includes information concerning volumes not currently being formatted (formatting completed or not yet implemented) in the display.

If this option is omitted, progress information is displayed only for volumes for which formatting is in progress.

This option cannot be specified at the same time as the `-volume` option.

`-csv`

This option displays the formatting progress information in the CSV format.

If this option is omitted, it is displayed in the table format.

The table below shows the contents displayed when different combinations of `-volume` and `-all` options are specified.

-volume Option	-all Option	
	Specified	Not Specified
Specified	(Cannot be specified.)	The display target is the specified volume, and volumes for which formatting is completed or not yet executed are included in the display.
Not specified	The display target is all volumes on the device, and volumes for which formatting is completed or not yet executed are included in the display.	The display target is all volumes on the device, but the display includes only the volumes for which formatting is in progress.

EXAMPLES

- Displaying the formatting progress information for all volumes in table format.

```
> storageadm progress volumeformat -ipaddr 192.0.2.4 -all
<<< Volume Format Progress Information >>>
NUMBER  NAME                TYPE  STATUS      PROGRESS
-----
0x0000  Volume0x0000        Open  Available   100
0x0001  Open                Open  Available   70
0x0002  Open                Open  Readyng     0
0x0003  Open                Open  Available   -
0x0004  SDV                 Open  Available   100
0x0005  SDPV                Open  Available   100
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the formatting progress information for all volumes in CSV format.

```
> storageadm progress volumeformat -ipaddr 192.0.2.4 -all -csv
NUMBER,NAME,TYPE,STATUS,PROGRESS
0x0000,Volume0x0000,Open,Available,100
```

```
0x0001, ,Open,Available,70
0x0002, ,Open,Readying,0
0x0003, ,Open,Available,-
0x0004, ,SDV,Available,100
0x0005, ,SDPV,Available,100
```

NOTES

- Formatting progress information is displayed for open volumes, SDV volumes, and SDPV volumes, but is not displayed for other volumes.
- If volume formatting fails, the "STATUS" field is as shown below, and 0 to 100 is displayed as the "PROGRESS" field.
 - Broken
 - Data Lost
 - Not Ready
- ODX Buffer Volumes are not displayed.

13.1.2.9 storageadm perfctl (Performance Monitoring Command)

NAME

storageadm perfctl - Performs monitoring operations

SYNOPSIS

```
storageadm perfctl start -ipaddr ipAddr [-interval time]
```

```
storageadm perfctl stop -ipaddr ipAddr
```

```
storageadm perfctl status -ipaddr ipAddr
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm perfctl
```

(*\$INS_DIR* means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm perfctl
```

DESCRIPTION

This command starts and stops performance monitoring for the NetApp FAS Series and displays the performance monitoring status.

OPERANDS

start

Starts performance monitoring.

stop

Stops performance monitoring.

status

Displays the performance monitoring status.

OPTIONS

Options of "start" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

`-interval time`

Specify either 10, 30, 60, or 300 (seconds unit) as the performance monitoring interval.

If a value other than 10, 30, 60, or 300 is set, the actual interval is set according to the table below (an error occurs if it is set to a negative value or a value greater than or equal to 2,147,483,648):

Specified Value	Monitoring Interval (in secs)
<code>time = 0</code>	30
<code>0 < time <= 10</code>	10
<code>10 < time <= 30</code>	30
<code>30 < time <= 60</code>	60
<code>60 < time</code>	300

If this option is omitted, monitoring is performed at 30 second intervals.

Options of "stop" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

Options of "status" Operand

`-ipaddr ipAddr`

Specify the IP address of the storage device.

EXAMPLES

- Starting performance monitoring at 60-second intervals.

```
> storageadm perfctl start -ipaddr 192.0.2.4 -interval 60
```

- Stopping performance monitoring.

```
> storageadm perfctl stop -ipaddr 192.0.2.4
```

- Displaying the performance monitoring status.

```
> storageadm perfctl status -ipaddr 192.0.2.4
<<< Performance Monitor Status>>
DEVICE_NAME(IP_ADDRESS)          STATUS          INTERVAL[SEC]
-----
NR1000F(192.0.2.4)              Monitoring      60
-----
```

```
INFO:swsag0001:Command terminated normally.
```

The explanation of the information displayed in each field is as follows:

Title	Explanation
DEVICE_NAME(IP_ADDRESS)	Displays the device name and its IP address.
STATUS	Displays the monitoring status. <ul style="list-style-type: none"> - "Monitoring": Normal monitoring is in progress. - "Stop": Performance monitoring is stopped.

Title	Explanation
	<ul style="list-style-type: none"> - "Recovering": Retry is in progress, after communication was interrupted or an attempt failed. - "Error": Stopped with an error, after an unsuccessful retry. Collect the information required for troubleshooting and contact Fujitsu Technical Support. Refer to "B.1 Collecting Troubleshooting Information" for details.
INTERVAL[sec]	Displays the performance monitoring interval (seconds).

NOTES

- The NetApp FAS Series must be registered with this product.
- This command does not support NetApp FAS Series (with clustered Data ONTAP).

13.1.2.10 storageadm device (Device Management Command)

NAME

storageadm device - Operation of devices

SYNOPSIS

```
storageadm device unlock -ipaddr ipAddr [-s]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm device
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVssmgr/sbin/storageadm device
```

DESCRIPTION

This command unlocks the storage device.

OPERANDS

unlock

Unlocks the storage device.

OPTIONS

Options of "unlock" Operand

-ipaddr ipAddr

Specify the IP address of the storage device.

-s

Continues the processing without a confirmation message being output.

EXAMPLES

- Unlock the storage device.

```
> storageadm device unlock -ipaddr 192.0.2.4
Are you sure? [y/n]: y
```

NOTES

- You can release only locks which are locked by using this software.
- If you release the lock, do not perform other operations by using this software.

13.2 Agent Commands

This section explains command operations on the Managed Server.

13.2.1 setagtip (Agent Information Change Command)

NAME

setagtip - Changes the Storage Cruiser's agent information

SYNOPSIS

```
setagtip [-i ipAddr]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Agent\bin\setagtip
```

(\$INS_DIR means "Program Directory" specified at the Storage Cruiser's agent installation.)

- For Solaris, Linux, or HP-UX environments

```
/opt/FJSSVssage/bin/setagtip
```

DESCRIPTION

This command sets Storage Cruiser's agent information.

In a Windows environment, only a user of the Administrators group can execute this command.

In a Solaris, Linux, or HP-UX environment, only OS administrator (root) user can execute this command.

When you want to change the start IP address of Storage Cruiser's agent or when you want to change the host name, specify the IP address to set information.

OPTIONS

-i ipAddr

Specify the IP address of the server node that can communicate from the Management Server. The start IP address of the Storage Cruiser's agent is set to the specified IP address. Also, a host name corresponding to the specified IP address is set as a host name recognized by Storage Cruiser's agent.

If this option is omitted, the current setting information is displayed.

When specifying IPv6 address, specify a global address.

As for IPv6 address display format, Web Console displays IP addresses with reference to RFC5952. For this reason, they may be different from those specified by this command.

EXAMPLES

- Displaying the Storage Cruiser's agent information

```
> setagtip
```
- Setting the Storage Cruiser's agent IP address to 192.0.2.14

```
> setagtip -i 192.0.2.14
```

NOTES

If the host name cannot be resolved from the specified IP address, the messages shown below is displayed. Check for an error in the specified IP address or network definition (hosts, DNS, etc.), and re-execute the command.

```
IP Address = ipAddr : Host's Name is not found.
```

13.2.2 traptest (SNMP Trap Test for Server Node Agent)

NAME

traptest - tests of SNMP Trap

SYNOPSIS

```
traptest [ipAddr]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Agent\bin\traptest
```

(\$INS_DIR means "Program Directory" specified at the Storage Cruiser's agent installation.)

- For Solaris, Linux, or HP-UX environments

```
/opt/FJSVssage/bin/traptest
```

DESCRIPTION

This command checks whether SNMP Trap is correctly transmitted to the Management Server from a server node agent, display an event, and check the linkage with Shell/Bat. The Centric Manager linkage is not operated by this command.

If you change the action for SNMP Trap, refer to "[A.5 SNMP Trap XML Definition File](#)".

OPERANDS

ipAddr

Only in the environment where the host holds two or more IP addresses (including loopback IP address, IPv4/IPv6 dual stack), specify a server node's IP address (start IP address of the Storage Cruiser's agent) which the Storage Cruiser's manager recognizes.

When specifying IPv6 address, specify a global address.

As for IPv6 address display format, Web Console displays IP addresses with reference to RFC5952. For this reason, they may be different from those specified by this command.

OPTIONS

None.

EXAMPLES

- SNMP Trap is transmitted from the server node agent of IP address 192.0.2.11.
> traptest 192.0.2.11

NOTES

- If the SNMP Trap destination address is not set to the server node when execute the command, the following results are output.

```
Target Host Nothing
SNMPTrap error
```

- If the server node that input in the command is not registered, re-execute the command after registering the server node.
- Execute the same action in case where the server node is not registered after deletion of the server node.
- The SNMP Trap community name that is issued using this command, is fixed to "public".
- If there is any error in the specified IP address format, the following result is output. Specify a valid IP address to re-execute the action.

```
Invalid parameter: specifiedIpAddress
SNMPTrap error
```

13.2.3 agentsnap (Troubleshooting Information Collection of Agent)

NAME

agentsnap - Collects the troubleshooting information of Agent

SYNOPSIS

- For Windows environments
agentsnap -dir *dirName* [-all]
- For Solaris or Linux environments
agentsnap [-dir *dirName*] [-all]

COMMAND PATH

- For Windows environments
\$INS_DIR\Agent\sbin\agentsnap
(*\$INS_DIR* means "Program Directory" specified at the Storage Cruiser's agent installation.)
- For Solaris or Linux environments
/opt/FJSVssage/sys/agentsnap

DESCRIPTION

This command collects the troubleshooting information of the Storage Cruiser's agent. In a Windows environment, only a user of the Administrators group can execute this command. In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

Execute this command to collect the troubleshooting information when a problem occurs on the Storage Cruiser's agent, and submit its information to Fujitsu Technical Support.

OPTIONS

`-dir dirname`

Corrects the troubleshooting information on *dirName* directory.

In a Windows environment, specify the full path name that starts from the drive letter for *dirName*. The maximum length that can be specified for *dirName* is 100 bytes.

In a Solaris environment, specify the full path name for *dirName*. If this option is omitted, the troubleshooting information is stored on `/var/tmp` directory.

In a Linux environment, specify the full path name for *dirName*. If this option is omitted, the troubleshooting information is stored on `/tmp` directory.

The collected information is gathered in the file that its name starts by "agentsnap_". Before executing this command, confirm that *dirName* directory has the following free space.

Collected Information	Required Free Space
Initial investigation information	more than 10 MB
All troubleshooting information	more than 30 MB

`-all`

Collects all troubleshooting information on servers. Data includes lots of information, which increases the size of the data. This option is not necessary for initial investigation.

EXAMPLES

- For Windows environments
 - Collecting the troubleshooting information for initial investigation on the "D:\temp" directory.
> `agentsnap -dir D:\temp`
- For Solaris or Linux environments
 - Collecting the troubleshooting information for initial investigation.
> `agentsnap`

13.2.4 agtpatrol (Monitored Status Display Command)

NAME

`agtpatrol` - Displays the monitored status of storage devices monitored by Storage Cruiser's agent.

SYNOPSIS

```
agtpatrol
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\ESC\Agent\bin\agtpatrol
```

(\$INS_DIR means "Program Directory" specified at the Storage Cruiser's agent installation.)
- For Solaris or Linux environments

```
/opt/FJSSVssage/bin/agtpatrol
```

DESCRIPTION

This command displays the monitored status of storage devices monitored by Storage Cruiser's agent.

In this command, the following can be confirmed while operating the Storage Cluster Controller.

- Whether information on the device specified for the monitoring target is correct or not?
- State of communication between monitored devices and Storage Cluster Controller
- Monitoring interval of monitored devices

OPERANDS

None.

OPTIONS

None.

Output Information

The information output by this command is as follows:

Table 13.1 Output Information of agt patrol Command

Title	Displayed Content
INTERVAL	Monitoring interval (millisecond) of monitored devices is displayed.
TARGET IP	IP address of monitored storage device is displayed. IP address is output in the format described in the definition file (TFOConfig.ini).
TARGET TFO GROUP	Information of a monitored TFO Group is output. For details about output information, refer to " Table 13.2 Output Information of TARGET TFO GROUP ".

The information output in TARGET TFO GROUP is as follows:

Table 13.2 Output Information of TARGET TFO GROUP

Title	Displayed Content
IP ADDRESS	IP address of monitored storage device is displayed. IP address is output in the format described in the definition file (TFOConfig.ini).
GROUP NAME	Name of TFO Group is displayed.
TYPE	Type of TFO Group is displayed. Primary: Primary TFO Group Secondary: Secondary TFO Group
PAIR IP ADDRESS	IP address of the storage device that becomes a pair is displayed. IP address is output in the format described in the definition file (TFOConfig.ini).
PAIR GROUP NAME	The name of TFO Group that becomes a pair is displayed.
STATUS	Monitored status of TFO Group is displayed. Normal: Monitored status is normal. Unknown: Device information cannot be collected due to disconnected communication pathway.
INTERVAL	Monitoring interval (millisecond) set to TFO Group is displayed. Minimum value of this item is a monitoring interval of monitored device.
UPDATE TIME	Date and time is displayed when Storage Cluster Controller communicated to storage device last.

EXAMPLES

Check monitored status.

```

> agtpatrol
-----
INTERVAL=1000

TARGET IP:
    192.0.2.10
    192.0.2.11
-----

TARGET TFO GROUP:

IP ADDRESS=192.0.2.10
GROUP NAME=TFOG#0
TYPE=Primary
PAIR IP ADDRESS=192.0.2.11
PAIR GROUP NAME=TFOG#0
STATUS=Normal
INTERVAL=1000
UPDATE TIME=Mon Apr 24 13:59:21 CEST 2017

IP ADDRESS=192.0.2.11
GROUP NAME=TFOG#0
TYPE=Secondary
PAIR IP ADDRESS=192.0.2.10
PAIR GROUP NAME=TFOG#0
STATUS=Normal
INTERVAL=1000
UPDATE TIME=Mon Apr 24 13:59:21 CEST 2017
>

```

NOTES

- If no entry of monitored ETERNUS Disk storage systems is output in the command execution result, take the following actions:
 - Check whether Storage Cruiser's agent is started.
If it is stopped, start it.
 - Check whether the monitoring function of Storage Cluster Controller is enabled.
If it is disabled, enable the monitoring function.
 - Check whether the IP address of the ETERNUS Disk storage system listed in the TFOConfig.ini file is correct.
If any error in writing, enter a correct IP address. Restart Storage Cruiser's agent.
 - Check that communication can be done with the ETERNUS Disk storage system listed in the TFOConfig.ini file.
Subsequently, restart Storage Cruiser's agent.
Refer to "[3.1.1 Network Requirements](#)" for network requirements.

13.2.5 setagtsnmp (SNMP Settings Command of Agent)

NAME

setagtsnmp - SNMP settings of Storage Cruiser's agent

SYNOPSIS

- For Windows environments

```
powershell -ExecutionPolicy Unrestricted $INS_DIR\ESC\Agent\bin\setagtsnmp.ps1 -l
```

```
powershell -ExecutionPolicy Unrestricted $INS_DIR\ESC\Agent\bin\setagtsnmp.ps1 -t 1
```

```
powershell -ExecutionPolicy Unrestricted $INS_DIR\ESC\Agent\bin\setagtsnmp.ps1 -t 3 parameterFile
```

(\$INS_DIR means "Program Directory" specified at the Storage Cruiser's agent installation.)

- For Solaris or Linux environments

```
/opt/FJSVssage/bin/setagtsnmp -l
```

```
/opt/FJSVssage/bin/setagtsnmp -t 1
```

```
/opt/FJSVssage/bin/setagtsnmp -t 3 parameterFile
```

DESCRIPTION

Set the SNMP Traps to be sent from Storage Cruiser's agent or display the set status.

OPERANDS

parameterFile

Specify the file that describes the SNMPv3 user setting information.

Specify a text file described in "name=value" format.

Lines where the first column starts with "#" are seen as comments.

The user information set in this file can be used for sending SNMPv3 Traps. You must match the user information that is set on the ETERNUS SF Manager side to receive traps.

Table 13.3 File Specification Format

Name	Value
user.name	Specify the user name for SNMP communication. The character string can be specified with up to 32 alphanumeric characters and symbols. However, this excludes double quotation (") and single quotation ('). The character string is case sensitive. This parameter must be specified.
authentication.protocol	Specify the authentication algorithm. Either of the following can be specified: <ul style="list-style-type: none">- MD5- SHA This parameter is optional. Specify this parameter when performing an authentication.
authentication.password	Specify the password to be used for authentication. The character string can be specified with eight to 64 alphanumeric characters and symbols. However, this excludes double quotation (") and single quotation ('). The character string is case sensitive. This parameter must be specified when specifying the [authentication.protocol].
privacy.protocol	Specify the encryption algorithm. Any of the following can be specified: <ul style="list-style-type: none">- DES- 3DES- AES- AES192- AES256 This parameter is optional. Specify this parameter when specifying the [authentication.protocol] and when performing an encryption.
privacy.password	Specify the encryption password. The character string can be specified with eight to 64 alphanumeric characters and

Name	Value
	symbols. However, this excludes double quotation (") and single quotation ('). The character string is case sensitive. This parameter must be specified when specifying the [privacy protocol].

When using the default trap receiving user (esfagent) on the ETERNUS SF Manager side, you do not need to specify an authentication algorithm and encryption algorithm.

OPTIONS

-l

Displays the current settings in CSV format.

-t 1

Outputs traps in SNMPv1 format.

-t 3

Outputs traps in SNMPv3 format. The setting information follows the information specified by the *parameterFile* operand.

EXAMPLES

- Displays the current SNMP settings.

```
> setagtsnmp -l
version,user.name,authentication.protocol, privacy.protocol
"3","esfagent","MD5","DES"
```

```
> setagtsnmp -l
version,user.name,authentication.protocol, privacy.protocol
"1",,,
```

- Sets the SNMP Traps that are output by the agent to the SNMPv3 format (when the user name is "esfuser", the authentication algorithm is "SHA", and the authentication password is "abcd@123").

```
> setagtsnmp -t 3 parameter_file
```

```
#Parameter_file content:
user.name=esfuser
authentication.protocol=SHA
authentication.password=abcd@123
```

13.3 Starting and Stopping Manager

This section explains how to start and stop the Storage Cruiser's manager.

13.3.1 Starting and Stopping Services (Windows Environment)

13.3.1.1 Starting and Stopping the SNMP Trap Monitoring Service

The procedure for starting/stopping the SNMP Trap monitoring service of the Management Server differs depending on the protocol used with the device fault monitoring.

Combination of Protocols Used with Device Fault Monitoring			Procedure for Starting/Stopping the SNMP Trap Monitoring Service
SNMPv1	SNMPv2c	SNMPv3	
Y	N	N	Refer to " For OS-standard SNMP Trap Monitoring Service ".

Combination of Protocols Used with Device Fault Monitoring			Procedure for Starting/Stopping the SNMP Trap Monitoring Service
SNMPv1	SNMPv2c	SNMPv3	
N	Y	N	Refer to " For ETERNUS SF SNMP Trap Monitoring Service ".
Y	Y	N	
N	N	Y	
Y	N	Y	
N	Y	Y	
Y	Y	Y	
Y	Y	Y	

Y: Used, N: Not used

For OS-standard SNMP Trap Monitoring Service

- Starting the SNMP Trap monitoring service
 1. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** window.
 2. Select the SNMP Trap monitoring service, and click **Start**.
- Stopping the SNMP Trap monitoring service
 1. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** window.
 2. Select the SNMP Trap monitoring service, and click **Stop**.
- Checking the SNMP Trap monitoring service
 1. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** window.
 2. Check that the **Status** column of the SNMP Trap monitoring service status is "Started".

Note

The SNMP Trap monitoring service is an OS standard service. Do not stop the SNMP Trap monitoring service unless there is a special reason, because it affects other products such as ServerView AlarmService and ServerView Resource Coordinator VE.

For ETERNUS SF SNMP Trap Monitoring Service

When ETERNUS SF SNMP Trap service is set to be used in "SNMP Trap Setting (for Windows)" in "Setup of Storage Cruiser's Manager" in the *Installation and Setup Guide*, the procedure for starting/stopping the ETERNUS SF SNMP Trap service is as follows.

- Starting the SNMP Trap monitoring service
 1. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** window.
 2. Select the ETERNUS SF SNMP Trap Service, and click **Start**.
- Stopping the SNMP Trap monitoring service

Note

In an environment where other software using SNMP Traps such as Systemwalker Centric Manager and ServerView Resource Orchestrator coexists on a target server, if you stop the ETERNUS SF SNMP Trap Service, other software using SNMP Traps cannot perform the fault monitoring. Make sure that even if the fault monitoring cannot be performed, no problem is caused, and perform the following procedure.

1. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** window.
2. Select the ETERNUS SF SNMP Trap Service, and click **Stop**.

- Checking the SNMP Trap monitoring service

1. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** window.
2. Check that the **Status** column of the ETERNUS SF SNMP Trap Service status is "Started".

13.3.1.2 Starting and Stopping the ETERNUS SF Manager Services



Point

.....

If the procedure for starting/stopping services of the Management Server has already been completed according to "Starting and Stopping Services" in the *AdvancedCopy Manager Operation Guide (for Windows)*, it is not necessary to perform the following procedure.

.....

Starting the services

- When the Management Server is not used for a cluster operation
 1. If the ETERNUS Information Provider service has started, stop it from the Windows services screen.
 2. Start the ETERNUS SF Manager services.
From the Windows services screen, start the following four services in the order shown below.
 - a. ETERNUS SF Manager Apache Service
 - b. ETERNUS SF Manager Tomcat Service
 - c. ETERNUS SF Storage Cruiser Optimization Option (Only if not already started)
 - d. AdvancedCopy Manager COM Service (Only if not already started)
 3. To use the SNMP Trap function and the ETERNUS SF SNMP Trap service, start the ETERNUS SF SNMP Trap service from the Windows services screen.
 4. To use the ETERNUS VASA Provider function, start the ETERNUS Information Provider service from the Windows services screen.
- When the Management Server is used for a cluster operation
 1. Start the ETERNUS SF Manager services.
Use the Failover Cluster Manager to start the transactions of ETERNUS SF Manager.
 2. To use the SNMP Trap function and the ETERNUS SF SNMP Trap service, start the ETERNUS SF SNMP Trap service from the Windows services screen.

Stopping the services

- When the Management Server is not used for a cluster operation
 1. If the ETERNUS VASA Provider function is used, stop the ETERNUS Information Provider service from the Windows services screen.
 2. Stop the ETERNUS SF Manager services.
From the Windows services screen, stop the following five services in the order shown below.
 - a. ETERNUS SF Manager Apache Service
 - b. ETERNUS SF Manager Tomcat Service
 - c. ETERNUS SF Manager Postgres Service
 - d. ETERNUS SF Storage Cruiser Optimization Option

- e. AdvancedCopy Manager COM Service
- 3. If the SNMP Trap function and the ETERNUS SF SNMP Trap service are used, stop the ETERNUS SF SNMP Trap service from the Windows services screen.
- When the Management Server is used for a cluster operation
 1. Stop the ETERNUS SF Manager services.
Use the Failover Cluster Manager to stop the transactions of ETERNUS SF Manager.
 2. If the SNMP Trap function and the ETERNUS SF SNMP Trap service are used, stop the ETERNUS SF SNMP Trap service from the Windows services screen.

13.3.2 Starting and Stopping Daemons (Solaris Environment)

This sub section explains how to start and stop the Storage Cruiser's manager in a Solaris environment.

13.3.2.1 Starting and Stopping the SNMP Trap Monitoring Daemon

Only OS administrator (root) user can execute following commands.

- Starting the SNMP Trap monitoring daemon

Execute the following command.

```
# /opt/FJSVswstt/bin/mpnm-trapd start
```

- Stopping the SNMP Trap monitoring daemon

Execute the following command.

```
# /opt/FJSVswstt/bin/mpnm-trapd stop
```

- Checking the SNMP Trap monitoring daemon

Execute the following command.

```
# /bin/ps -ef | grep nwsnmp-trapd | grep -v grep
```

13.3.2.2 Starting and Stopping the ETERNUS SF Manager Daemons

This sub section explains how to start and stop the ETERNUS SF Manager daemons. If the following procedure is performed, the SNMP Trap monitoring daemon also starts or stops.



Point

.....
 If the procedure for starting/stopping daemons of the Management Server has already been completed according to "Starting and Stopping Daemons" in the *AdvancedCopy Manager Operation Guide (for Solaris)*, it is not necessary to perform the following procedure.

Only OS administrator (root) user can execute following commands.

- Starting the daemons
 - When the Management Server is not used for a cluster operation

Execute the following command.

```
# /opt/FJSVesfcm/bin/startesf.sh
```

- When the Management Server is used for a cluster operation

Start the cluster application (transaction) to which ETERNUS SF Manager belongs. Refer to the relevant cluster software manuals for information on how to start the cluster application.

- Stopping the daemons
 - When the Management Server is not used for a cluster operation

Execute the following command.

```
# /opt/FJSVesfcm/bin/stopesf.sh
```

- When the Management Server is used for a cluster operation

Stop the cluster application (transaction) to which ETERNUS SF Manager belongs. Refer to the relevant cluster software manuals for information on how to stop the cluster application.

Information

In an environment in which the SAN administration manager in SystemWalker/StorageMGR-M V5.1/V10 or Softek SANView4.1 CD-ROM sub-directory is installed, the SNMP Trap monitoring daemon is controlled by SystemWalker/StorageMGR-M (SAN administration manager in Softek SANView4.1 CD-ROM sub-directory), so only the ETERNUS SF Manager daemons are started and stopped by the above commands.

Note

If the ETERNUS SF Manager daemons are stopped, other ETERNUS SF products that share the daemons cannot be operated.

13.3.3 Starting and Stopping Daemons (Linux Environment)

This sub section explains how to start and stop the Storage Cruiser's manager in a Linux environment.

13.3.3.1 Starting and Stopping the SNMP Trap Monitoring Daemon

The procedure for starting/stopping the SNMP Trap monitoring daemon on the Management Server differs depending on the IP address of the managed device and the protocol used with the device fault monitoring.

IP Address of Managed Device	Combination of Protocols Used with Device Fault Monitoring			Procedure for Starting/Stopping the SNMP Trap Monitoring Daemon
	SNMPv1	SNMPv2c	SNMPv3	
IPv4 address only	Y	N	N	Refer to " For OS-standard SNMP Trap Monitoring Daemon ".
Either of the following: - IPv4 address only - IPv4 address and IPv6 address	N	Y	N	Refer to " For ETERNUS SF SNMP Trap Monitoring Daemon ".
	Y	Y	N	
	N	N	Y	
	Y	N	Y	
	N	Y	Y	
	Y	Y	Y	

Y: Used, N: Not used.

For OS-standard SNMP Trap Monitoring Daemon

Only OS administrator (root) user can execute following commands.

- Starting the SNMP Trap monitoring daemon

Execute the following command:

```
# systemctl start snmptrapd.service
```

Note

Restart the snmptrapd daemon and trpsrvd daemon for environments using the ServerView trap transfer program.

- Stopping the SNMP Trap monitoring daemon

Execute the following command:

```
# systemctl stop snmptrapd.service
```

Note

Do not stop the daemon unless there is a special reason, because it affects other software using snmptrapd.

- Checking the SNMP Trap monitoring daemon

Execute the following command to see whether the service is running:

```
# systemctl status snmptrapd.service
```

For ETERNUS SF SNMP Trap Monitoring Daemon

When performing a configuration to use the ETERNUS SF SNMP Trap monitoring daemon in the following sections of the *Installation and Setup Guide*, the method to start/stop the SNMP Trap daemon is as follows:

- "SNMP Trap Setting (for Linux)" in "Setup of Storage Cruiser's Manager"

Only OS administrator (root) user can execute following commands.

- Starting the SNMP Trap monitoring daemon

Execute the following command:

```
# systemctl start startsc-snmpttrapd.service
```

- Stopping the SNMP Trap monitoring daemon

Execute the following command:

```
# systemctl stop startsc-snmpttrapd.service
```

- Checking the SNMP Trap monitoring daemon

Execute the following command to see whether the service is running:

```
# systemctl status startsc-snmpttrapd.service
```

13.3.3.2 Starting and Stopping the ETERNUS SF Manager Daemons

This sub section explains how to start and stop the ETERNUS SF Manager daemons.

Point

If the procedure for starting/stopping daemons of the Management Server has already been completed according to "Starting and Stopping Daemons" in the *AdvancedCopy Manager Operation Guide (for Linux)*, it is not necessary to perform the following procedure.

Only OS administrator (root) user can execute following commands.

- Starting the daemons
 - When the Management Server is not used for a cluster operation

Execute the following command.

```
# /opt/FJSVesfcm/bin/startesf.sh
```

- When the Management Server is used for a cluster operation

Start the cluster application (transaction) to which ETERNUS SF Manager belongs. Refer to the relevant cluster software manuals for information on how to start the cluster application.

- Stopping the daemons

- When the Management Server is not used for a cluster operation

Execute the following command.

```
# /opt/FJSVesfcm/bin/stopesf.sh
```

- When the Management Server is used for a cluster operation

Stop the cluster application (transaction) to which ETERNUS SF Manager belongs. Refer to the relevant cluster software manuals for information on how to stop the cluster application.

Information

If the settings are configured to monitor devices using an IPv6 address, the SNMPv2c protocol, or the SNMPv3 protocol as described in the following *Installation and Setup Guide* section, the SNMP Trap monitoring daemon is also started or stopped at the same time.

- "SNMP Trap Setting (for Linux)" in "Setup of Storage Cruiser's Manager"

Note

If the ETERNUS SF Manager daemons are stopped, other ETERNUS SF products that share the daemons cannot be operated.

13.4 Starting and Stopping Agent

This section explains how to start and stop the service/daemon of the Storage Cruiser's agent.

13.4.1 Starting and Stopping Services (Windows Environment)

Start or stop the service of the Storage Cruiser's agent.

- Starting the service

1. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** window.
2. Select the service "ETERNUS SF Storage Cruiser Agent", and click **Start**.

- Stopping the service

1. Click **Control Panel > System and Security > Administrative Tools > Services** to open the **Services** window.
2. Select the service "ETERNUS SF Storage Cruiser Agent", and click **Stop**.

13.4.2 Starting and Stopping Daemons (Solaris, Linux, or HP-UX Environment)

Only OS administrator (root) user can execute following commands.

- Starting the daemon

Execute the following command.

```
# /opt/FJSVssage/bin/sstorageagt
```

- Stopping the daemon

Execute the following command.

```
# /opt/FJSVssage/bin/pstorageagt
```

13.5 Commands for Reporting Function

The commands for Reporting function are as follows:

Command Name	Explanation
esfadm report collect	Information for the report is collected.
esfadm report create	A report is created.

The exclusive relationship of these commands is as follows:

	While Executing esfadm report collect Command	While Executing esfadm report create Command
When the esfadm report collect command has been executed	Not Available (Error. The same command cannot be executed at the same time, recover error.)	Available (Standby. Execute the esfadm report collect command after completing the esfadm report create command)
When the esfadm report create command has been executed	Available (Standby. Execute the esfadm report create command after completing the esfadm report collect command)	Not Available (Error. The same command cannot be executed at the same time, recover error.)

13.5.1 esfadm report collect (Report Information Collection Command)

NAME

esfadm report collect - Collect the report information

SYNOPSIS

```
esfadm report collect -all [-test]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\Common\bin\esfadm report collect
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVesfcm/bin/esfadm report collect
```

DESCRIPTION

Collect the report information for the storage device for which the Reporting function is enabled on Web Console to store in the information stack file.

In a Windows environment, only a user of the Administrators group can execute this command.

In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

OPTIONS

-all

This option is required.

-test

In relation to the volume of which the report information is collected, confirm whether the information collection command ends without errors. For this reason, the report information is not accumulated in the information accumulation file.

Specify this option when confirming the storage of which information is collected, or when confirming whether the process can be completed without error after dealing with an error that has occurred.

OUTPUT INFORMATION

- Accumulate the collected report information in the information stack file

The information regarding the volume is output to the information stack file.

- Output the message to the command execution screen

The message including the name of the storage of which the report information was collected is output.

- Operation History of ETERNUS SF

The following information in regard to operation is output.

Output Items	Output Contents
Date	Date and time when the operation was executed
User ID	User name that performed the operation
Action	Collect Report Information (CLI)
State	Submit, Start, or Complete
Result	Success, Failed, or Warning
Target	-
Detail	Detailed information
Message	Error message

EXIT STATUS

=0: Completed successfully

>0: Terminated abnormally

EXAMPLES

- When the storages subject to collection are Storage1 and Storage2

```
> esfadm report collect -all
esrpt00002 The storage information was collected. Storage=Storage1,Storage2
```

- When the `-test` option is specified and the storages subject to collection are Storage1 and Storage2

```
> esfadm report collect -all -test
esrpt00005 The report data does not collect for test command.
esrpt00002 The storage information was collected. Storage=Storage1,Storage2
```

NOTES

- When this command is executed while the `esfadm report create` command is being executed, this command is put in standby state. When the `esfadm report create` command executed earlier is completed, processing of this command continues.
- This command cannot be executed again while the command is already executing. The command executed later terminates with an error.
- In any of the following cases, this command collects only information-gathering time and ends normally:
 - There is no license existing on every storage device.
 - There is no storage device connected to server (host affinity is enabled).
 - There is no storage device for which the Reporting function is activated on Web Console.
- When this command ends with an error, the report information that was partly collected is discarded. (The information accumulation file is returned to its state prior to execution of the command.)

13.5.2 esfadm report create (Report Creation Command)

NAME

esfadm report create - Create the Report

SYNOPSIS

```
esfadm report create -start YYYYMMDDhhmm -end YYYYMMDDhhmm [-outputfile fileName]
```

COMMAND PATH

- For Windows environments

```
$INS_DIR\Common\bin\esfadm report create
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

- For Solaris or Linux environments

```
/opt/FJSVesfcm/bin/esfadm report create
```

DESCRIPTION

The report information of the period specified in the options is output to the report file.

In addition, based on the save period configured with the policies, old report information that has exceeded the save period of the information accumulation file is deleted.

(If there is report information in the information accumulation file, a report file is output.)

In a Windows environment, only a user of the Administrators group can execute this command.

In a Solaris or Linux environment, only OS administrator (root) user can execute this command.

OPTIONS

```
-start YYYYMMDDhhmm -end YYYYMMDDhhmm
```

Specify the period of the report to be created in the form of YYYYMMDDhhmm (local time). The maximum period from start to end is 1 year (365 days, or 366 days when including a leap year). The number of seconds is counted as 0 second.

In addition, in a time period switching from summer time to winter time, there are winter local time and summer local time. This command considers that local time as winter local time.

- *YYYY* indicates the year and a value of 0000~9999 can be specified.
- *MM* indicates the month and a value of 01~12 can be specified.
- *DD* indicates the day and a value of 01~31 can be specified.
- *hh* indicates the hour, and a value of 00~23 can be specified.
- *mm* indicates the minute, and a value of 00~59 can be specified.

In the following cases, errors occur:

- In the case the date and time later than the command executed date and time is specified at start or end.
- In the case the date and time earlier than the starting date and time is specified at end.
- In the case the date and time that does not exist is specified.

-outputfile *fileName*

Specify the file name for the report output. When a directory path is not included, the report is stored in the current directory. The supported directory paths are an absolute path and a relative path.

When this option is omitted, the report is created with the following file name under the current directory.

```
esfreport_manual_specified_YYYYMMDDhhmmss.xml
  YYYYMMDDhhmmss is the command execution date and time.
```

Use the local time for the execution time to output to the file name.

When a file or directory with the same name already exists on the output directory, an error is displayed.

Only ASCII letters are supported for the output directory name and the output directory.

The date and time information is included in the file name to prevent file names from being identical.

OUTPUT INFORMATION

- Store the report information of the specified range in the report file
Refer to "[8.4 Configuration of Report File](#)" for details on the report file.
- Output the message to the command execution screen
- Operation History of ETERNUS SF System

The following information is output as operation history.

Output Items	Output Contents
Date	Date and time when the operation was executed
User ID	User name that performed the operation
Action	Create Report (CLI)
State	Submit, Start, or Complete
Result	Success, Failed, or Warning
Target	-
Detail	Detailed information
Message	Error message

EXIT STATUS

- =0: Completed successfully
- >0: Terminated abnormally

EXAMPLES

- A report from 8:30 on February 1, 2012 up to 17:30 of February 1, 2012 is created. (Report information up to 17:30:00 of February 1, 2012 is subject to the report.)

```
> esfadm report create -start 201202010830 -end 201202011730 -outputfile C:\report\201202011730.xml  
esrpt00003 The report file was output. File=C:\report\201202011730.xml
```

NOTES

- When this command is executed while the `esfadm report collect` command is being executed, this command is put in a stand-by state. When the `esfadm report collect` command executed earlier is completed, processing of this command continues.
- This command cannot be executed again while the command is already executing. The command executed later terminates with an error.
- When there is no report information within the period specified for the report, a report file with only header information is output, and the process terminates without displaying an error.
- When an error occurs while the report is being created, a report file is not be created.
- When a server error occurs while the report is being created, a report file is not created and this command terminates with an error.
- If the ETERNUS SF Manager is stopped while this command is executing, an incomplete report file may be created. In this case, re-execute the command to recreate the report file.
- When configuration information has been changed during the period of the report being created, the report information changes from information before the configuration information was changed to information after the change.
- The date and time that is output to the report time is the local time of the ETERNUS SF system.
- The times that are specified for the `-start` option and the `-end` option are handled as follows:
 - The time that is specified for the `-start` option (hhmm) is handled at 0 seconds.
 - The time that is specified for the `-end` option (hhmm) is handled at 0 seconds.

As shown in the following example, although the first end time of the period for the report specified with this command overlaps with 17:30:00 of February 1 specified as the second start time, the period of the start time subtracted from the end time is 9 hours and 15 hours respectively.



First Report Period (total 9 hours): From 8:30:00 of February 1, 2012 through to 17:30:00 of February 1, 2012
Second Report Period (total 15 hours): From 17:30:00 of February 1, 2012 through to 8:30:00 of February 2, 2012.

Appendix A Customization

In this chapter, if the "0x" is added to the beginning of the numeric value, it is a hexadecimal number. If the "0x" is not added, the numeric value is a decimal number.

A.1 Overview

This software Manager and Agent control setting can be made by editing the appropriate definition files. Edit the files according to requirements. However, be sure not to edit values of parameters not discussed in this chapter.

sanma.conf (Definition File)

Indicates a detailed setting file of the storage management.

ssmgr.conf (Correlation Management Definition File)

Indicates a detailed setting file of the storage management for the correlation management.

perf.conf (Performance Management Definition File)

Indicates a detailed setting file of the storage performance management

SNMP Trap XML Definition File (Fault Management Definition File)

Indicates a file for defining the details of, for example, the processing method using the SNMP Trap.

Correlation.ini (Agent Definition File)

Indicates a detailed setting file of Agent.

policy.conf (Reporting Function Definition File)

Indicates a detailed setting file of the reporting function.

TFOConfig.ini (Storage Cluster Controller Definition File)

Indicates a setting file of Storage Cluster Controller, which exists only in Agent.

A.2 sanma.conf Parameter

This file is saved at the following location as a detailed setting file of the storage management:

Platform of Manager	Location
Windows	<code>\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\sanma.conf</code> (<code>\$ENV_DIR</code> means "Environment Directory" specified at the Manager installation.)
Solaris OS, Linux	<code>/etc/opt/FJSVssmgr/current/sanma.conf</code>

Reflecting Contents of Setting File

If the setting file is changed, execute re-read definition file by using Web Console, or reactivate the Manager. This reflects the settings on this software.

Customization

LOGICAL_MANAGER_IP

If the Management Server is clustered system which has physical IPs and logical IP, logical IP address must be specified in this parameter. For this parameter, specify only IPv4 format IP address.

```
Example:  
LOGICAL_MANAGER_IP="10.12.13.14";
```

This parameter is used to automatically configure an SNMP Trap destination address for a fault monitoring device when registering devices. Refer to "5.2.6 SNMP Trap Transmission Place Automatic Setting Function" for more information.

LOGICAL_MANAGER_V6IP

If the Management Server is clustered system which has physical IPs and logical IP, logical IP address must be specified in this parameter. For this parameter, specify only IPv6 format IP address.

```
Example:  
LOGICAL_MANAGER_V6IP="2001:db8::2:1";
```

This parameter is used to automatically configure an SNMP Trap destination address for a fault monitoring device when registering devices. Refer to "5.2.6 SNMP Trap Transmission Place Automatic Setting Function" for more information.

MANAGER_LAN_CARD_IP

This is specified if device detection and registration fail due to the environment having the Management Server which holds multiple IP addresses.

If specifying this parameter in a cluster environment, be sure to specify a logical IP address at the beginning.

For this parameter, specify only IPv4 format IP address.

```
Example:  
MANAGER_LAN_CARD_IP="10.12.13.14,100.101.102.103";
```

MANAGER_LAN_CARD_V6IP

This is specified if device detection and registration fail due to the environment having the Management Server which holds multiple IP addresses.

If specifying this parameter in a cluster environment, be sure to specify a logical IP address at the beginning.

For this parameter, specify only IPv6 format IP address.

```
Example:  
MANAGER_LAN_CARD_V6IP="2001:db8::2:1,2001:db8::2:2";
```

SET_SW_ZONING_ALWAYS

When an access path is set, if the zoning setting for the Fibre Channel switch need not be added because port zoning is set, this software does not generally set zoning for Fibre Channel. Specifying 1 in this parameter sets one-to-one WWPN zoning even in the above case (excluding cases in the No Security state):

```
Example:  
SET_SW_ZONING_ALWAYS=1; (Default: 0)
```

DISPLAY_SNMP_STANDARD_EVENT

Specify whether the SNMP Trap (Cold Start Trap etc.) common to devices from a device is indicated in the event log. Setting 1 for this parameter indicates the SNMP Trap common to devices. Setting 0 for this parameter does not indicate it. Default is 1 (indicate).

```
Example:  
DISPLAY_SNMP_STANDARD_EVENT = 0;
```

A.3 ssmgr.conf Parameter

This file is saved at the following location as a detailed setting file of the storage management for the correlation management:

Platform of Manager	Location
Windows	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\ssmgr.conf (\$ENV_DIR means "Environment Directory" specified at the Manager installation.)
Solaris OS, Linux	/etc/opt/FJSVssmgr/current/ssmgr.conf

Reflecting Contents of Setting File

If the setting file is changed, execute re-read definition file by using Web Console, or reactivate the Manager. This reflects the settings on this software.

Customization



Note that the memory or the disk capacity may become insufficient when the number of generations or the maximum capacity of each log file is increased. Operation may stop when the memory or the disk capacity becomes insufficient. Note when changing the number of generations or maximum capacity, secure the memory capacity and the disk capacity.

LOG_COUNT

The number of generations of log files (log.*) which is common to system is specified by an arbitrary decimal number.

Default is 4.

It circulates in the fourth generation (log.0, log.1, log.2 and log.3), when 4 is set.

```
Example for circulating in the fifth generation:
LOG_COUNT = 5;
```

Location of the log file

Platform of Manager	Location
Windows	\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\log (\$TMP_DIR means "Work Directory" specified at the Manager installation.)
Solaris OS, Linux	/var/opt/FJSVssmgr/log

LOG_LIMIT

The maximum capacity of log file (log.*) which is common to system is specified within the range of 0 - 2,147,483,647 (KB).

Default capacity is 512 (KB).

When 0 or a minus value is specified, the log is not output. Moreover, when the value larger than the maximum value is specified, it becomes a default value.

```
Example for setting the maximum capacity to 2MB:
LOG_LIMIT = 2048;
```

Refer to "[LOG_COUNT](#)" for location of the log files.

SYSTEMLOG_FACILITY (Valid only for Solaris OS Manager and Linux Manager)

Specify a facility name which has system log output destination information if a facility name is changed from the default ("daemon"). The facility name that is specified here must be defined by /etc/syslog.conf. Users can optionally change the system log output destination according to the specified facility name and the level.

Refer to online manuals of each operating system for syslog.conf definition.

A.4 perf.conf Parameter

This file is saved at the following location as a detailed setting file of the storage performance management:

Platform of Manager	Location
Windows	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perf.conf (\$ENV_DIR means "Environment Directory" specified at the Manager installation.)
Solaris OS, Linux	/etc/opt/FJSVssmgr/current/perf.conf

Reflecting Contents of Setting File

If the setting file is changed, execute re-read definition file by using Web Console, or reactivate the Manager. This reflects the settings on this software.

However, to reflect the settings related to displaying the additional event messages of the threshold monitoring alarm, reflect it during the "[How to Reflect the ALARM_MSG_EXP_DEC_NAME Parameter to This Product](#)" procedure.

Information

- In performance management, the setting file is referenced once every 4 hours so that changes are reflected even if the above procedure has not been performed.
- If the number of days to retain performance data is reduced, data retained that is older than the new number of days is deleted. When you execute re-read definition file by using Web Console, it may take a time to delete the performance data.

Customization

Note

- After starting operation, the program in this product may add/update/delete parameters that are not explained in this document for the "perf.conf" file. For this reason, do not edit/delete parameters that are not explained in this document.
- If the number of days performance data is kept is increased, the application may stop because of insufficient memory or disk space; therefore care must be taken to ensure space is sufficient. In particular, if 0 is set for PERF_DATA_KEEP_DAYS, processing to delete performance information stops, so check the memory or disk space regularly.
- If the number of generations of log files is increased, the application may stop because of insufficient memory or disk space, therefore care must be taken to ensure space is sufficient.
- When the performance management for number of active disks is performed, it may not be possible to obtain performance information inside the performance monitoring interval. Change the performance monitoring interval where necessary.

PERF_DATA_KEEP_DAYS

Specify the number of days during which performance management keeps performance data. The data is automatically deleted after the specified number of days elapse.

If 0 is specified, the data is not deleted. However, the number of days does not include the current day.

The default value is seven days and is defined as shown below. Change this value if necessary.

```
PERF_DATA_KEEP_DAYS = 7;
```


LOG_ROTATION

The number of generations of log files (perflog.*) related to performance is specified by an arbitrary decimal number. Default is 2. It circulates in the second generation of perflog.0 and perflog.1 when 2 is set.

```
Example for circulating in the fifth generation:  
LOG_ROTATION = 5;
```

Location of the log file

Platform of Manager	Location
Windows	\$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\log (\$TMP_DIR means "Work Directory" specified at the Manager installation.)
Solaris OS, Linux	/var/opt/FJSVssmgr/log

ENABLED_ECO_MODE

Specify whether to use the performance management for the active disks, power consumption, and temperature. To use the performance management for them, specify "true". If you do not want to use it, specify "false". The default is "true".

```
Example: When the performance management for the number of active disks, power consumption, and  
temperature is used:  
ENABLED_ECO_MODE = true;
```

ENABLED_PORT_ISCSI

Specify whether to use the performance management for iSCSI port on ETERNUS Disk storage system. To use the performance management for iSCSI port, specify "true". If you do not want to use it, specify "false". The default is "true".

```
Example: When the performance management for iSCSI port is used:  
ENABLED_PORT_ISCSI = true;
```

ALARM_MSG_EXP_DEC_NAME

Specify whether to display the decimal number and name of the monitoring target resource in the event message of the threshold monitoring alarm. Specify "true" to display the decimal number and name, otherwise specify "false". If the parameter is omitted, the default is "false".

```
Example for displaying the decimal number and name of the monitoring target resource:  
ALARM_MSG_EXP_DEC_NAME = true;
```

How to Reflect the ALARM_MSG_EXP_DEC_NAME Parameter to This Product

The method for reflecting the setting of the ALARM_MSG_EXP_DEC_NAME parameter to this product is as follows.

- When installing this product

Perform the following procedure before starting the performance monitoring of all the devices.

1. Edit the "perf.conf" file.

The following is an edited example to display the decimal number and name of the monitoring target resource.

```
ALARM_MSG_EXP_DEC_NAME = true;
```

2. With Web Console, perform to re-read the "perf.conf" file.

- When changing the setting during operation

Perform the following procedure.

1. Edit the "perf.conf" file.

The following is an edited example in which the value of the ALARM_MSG_EXP_DEC_NAME parameter is changed from "true" to "false".

```
ALARM_MSG_EXP_DEC_NAME = false;
```

The following is an edited example in which the value of the ALARM_MSG_EXP_DEC_NAME parameter is changed from "false" to "true".

```
ALARM_MSG_EXP_DEC_NAME = true;
```

2. Restart the Storage Cruiser's manager.

A.5 SNMP Trap XML Definition File

Use of this file enables customization of the fault monitoring method. Define the file on the Manager and Agent sides.

SNMP Trap XML Definition File on Manager Side

Event log messages and operations using linkage with Systemwalker Centric Manager, linkage with Shell/Bat and linkage with External Script can be defined for SNMP Traps received from individual device (including server node). Customize the contents of this file to change default values of this software on the Manager side according to the operating environment of the storage system used.

If a new SNMP Trap definition is added to the ETERNUS AX/HX series, NetApp FAS Series (with clustered Data ONTAP), or NetApp AFF series, and if that SNMP Trap must be monitored, customize this file to handle the added SNMP Trap.

SNMP Trap XML Definition File on Agent Side

It defines a fault monitoring method of an Agent server node. Customize its contents to change the monitoring method from default.

Reflecting Contents of Setting File

The setting file on the Manager side is dynamically read into this software and therefore no special reflection method is provided.

The setting file on the Agent side is read into this software statically and therefore the Agent needs to be restarted to reflect the contents of the setting file on this software.

Customization



Note

- If an error is detected in an XML definition file, a message in the format shown below is output to the event log. The fault level of notification is the information level. Linkage with Systemwalker Centric Manager and linkage with Shell/Bat are not used.

```
Message format: "XML parse error (detected trap: (SNMP Trap data character string))"
```

- Except for some devices, all swsag codes that are reported to Systemwalker Centric Manager are 4821.
- When customizing SNMP Trap processing, do not edit the definition file in the installation directory but edit the one in the customization directory.

Definition File Names and Storage Location on Manager Side

The SNMP Trap XML definition file is created for each device. It is then stored in the following directory when Manager is installed or upgraded.

Platform of Manager	Location
Windows	\$INS_DIR\ESC\Manager\opt\FJSVssmgr\lib\snmpth (\$INS_DIR means "Program Directory" specified at the Manager installation.)
Solaris OS, Linux	/opt/FJSVssmgr/lib/snmpth

When customizing SNMP Trap processing of Manager, copy the SNMP Trap XML definition file in the above directory to the customization directory shown below, and edit the copy of the file.

Platform of Manager	Customization Directory
Windows	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\snmpth (\$ENV_DIR means "Environment Directory" specified at the Manager installation.)
Solaris OS, Linux	/etc/opt/FJSVssmgr/current/snmpth

Manager operates as follows:

- When the SNMP Trap XML definition file exists in the customization directory
Manager operates in accordance with its file.
- When the SNMP Trap XML definition file does not exist in the customization directory
Manager operates in accordance with the definition file in the installation directory. (default)

In a trap of a device, the file name is enterprise code in which "." is replaced with "_".

Table A.1 Default SNMP Trap XML Definition Files on System Where This Software Is Implemented with Manager

Device Type	File Name
ETERNUS DX S6 series	1_3_6_1_4_1_211_4_1_1_126_1_154.xml
ETERNUS DX S5 series ETERNUS DX8000 S4 series ETERNUS AF S3 series	1_3_6_1_4_1_211_4_1_1_126_1_153.xml
ETERNUS DX S4 series (excluding the ETERNUS DX8000 S4 series) ETERNUS DX S3 series (excluding the ETERNUS DX8000 S3 series) ETERNUS AF S2 series ETERNUS AF series	1_3_6_1_4_1_211_4_1_1_126_1_150.xml
ETERNUS DX8000 S3 series	1_3_6_1_4_1_211_4_1_1_126_1_152.xml
ETERNUS DX60 S2	1_3_6_1_4_1_211_4_1_1_126_1_101.xml
ETERNUS DX80 S2/DX90 S2 ETERNUS DX400 S2 series	1_3_6_1_4_1_211_4_1_1_126_1_100.xml
ETERNUS DX8000 S2 series	1_3_6_1_4_1_211_4_1_1_126_1_102.xml
Brocade series PRIMERGY Fibre Channel switch blade VDX series PRIMERGY BX Ethernet Fabric Switch	1_3_6_1_4_1_1588_2_1_1_1.xml
ETERNUS LT140/LT260	1_3_6_1_4_1_20884_3.xml
ETERNUS LT270 S2	1_3_6_1_4_1_211_4_1_1_126_3_6.xml
Tape encryption device	1_3_6_1_4_1_2021_250_10.xml
Fibre Alliance MIB support device	1_3_6_1_3_94.xml

Device Type	File Name
ETERNUS AX/HX series NetApp FAS Series NetApp FAS Series (with clustered Data ONTAP) NetApp AFF series	1_3_6_1_4_1_789.xml
ETERNUS AB/HB series	1_3_6_1_4_1_789_1123_2_500.xml (*1)
ETERNUS LT20 S2	1_3_6_1_4_1_20884_10893_2_101_3.xml
ETERNUS CS2000	1_3_6_1_4_1_231_2_48_2_0.xml
Event from performance management	1_3_6_1_4_1_211_4_1_3_21_3.xml
Multipath-related event from Solaris OS Agent or Windows Agent	1_3_6_1_4_1_211_4_1_3_21_2.xml (*2)
PRIMECLUSTER GD or PRIMECLUSTER GFS series event from Solaris OS Agent	1_3_6_1_4_1_211_4_1_3_21_2_2.xml (*2, *3)
Multipath-related event from Solaris OS Agent	1_3_6_1_4_1_211_4_1_3_21_2_21.xml (*2, *3)
Multipath-related event from Windows Agent	1_3_6_1_4_1_211_4_1_3_21_2_5.xml (*2, *3)
MPIO event from Windows Agent	1_3_6_1_4_1_211_4_1_3_21_2_51.xml (*2, *3)
ETERNUS multipath driver event from Linux Agent	1_3_6_1_4_1_211_4_1_3_21_2_3.xml (*2, *3)
PRIMECLUSTER GD or PRIMECLUSTER GFS series event from Linux Agent	1_3_6_1_4_1_211_4_1_3_21_2_31.xml (*2, *3)
Device-Mapper Multipath event from Linux Agent	1_3_6_1_4_1_211_4_1_3_21_2_32.xml (*2, *3)
LVM(PV-Links) event from HP-UX Agent	1_3_6_1_4_1_211_4_1_3_21_2_4.xml (*2, *3)
HBA driver event from HP-UX Agent	1_3_6_1_4_1_211_4_1_3_21_2_41.xml (*2, *3)
Checking the settings for SNMP Traps from Agent	1_3_6_1_4_1_211_4_1_3_21_2_2.xml (*4)

*1: This file can be changed or added only Convert tag in "Definition File Format". Do not change other tags.

*2: This file can be changed only concerning the on/off setting of "linkage with Systemwalker Centric Manager" (only Shell/Bat linkage control can be done and Systemwalker Centric Manager linkage cannot be.) and "external script linkage 1" and "external script linkage 2" in "Operation definition" (the flag attributes) in "Definition Contents" of "Definition File Format". For "Fault level" and "Message," this file cannot be changed.

*3: When this file is updated, the file with the same name on the Agent side must also be updated so that their contents are the same.

*4: When SNMP Trap is used as a test, 1 is used for the Specific Trap Type number.

Definition File Name and Storage Location on Agent Side

The XML definition file for customizing the fault monitoring method of an Agent server node is saved at the following location:

Platform of Agent	Location
Windows	\$ENV_DIR\ESC\Agent\etc\snmpth (\$ENV_DIR means "Environment Directory" specified at the Agent installation.)
Solaris OS, Linux, HP-UX	/etc/opt/FJSVssage/snmpth

The file is read and used when Agent starts. Therefore, the restart of Agent is needed to operate according to the modified contents when the file is modified.

The file name is the enterprise code in a trap issued from Agent to Manager and in which "." is replaced with "_".

Table A.2 Default SNMP Trap XML Definition Files on System Where This Software Is Implemented with Agent

Server Node	File Name (*1)	Monitoring Target
Solaris OS	1_3_6_1_4_1_211_4_1_3_21_2_2.xml	PRIMECLUSTER GD, PRIMECLUSTER GFS series
	1_3_6_1_4_1_211_4_1_3_21_2_21.xml	ETERNUS multipath driver
	1_3_6_1_4_1_211_4_1_3_21_2_22.xml	EMC PowerPath
	1_3_6_1_4_1_211_4_1_3_21_2_23.xml	HITACHI JP1/HiCommand Dynamic Link Manager
	1_3_6_1_4_1_211_4_1_3_21_2_24.xml	Sun MPxIO
Windows	1_3_6_1_4_1_211_4_1_3_21_2_5.xml	ETERNUS multipath driver
Linux	1_3_6_1_4_1_211_4_1_3_21_2_3.xml	ETERNUS multipath driver
	1_3_6_1_4_1_211_4_1_3_21_2_31.xml	PRIMECLUSTER GD, PRIMECLUSTER GFS series
	1_3_6_1_4_1_211_4_1_3_21_2_32.xml	Device-Mapper Multipath
HP-UX	1_3_6_1_4_1_211_4_1_3_21_2_4.xml	PV-LINK (LVM function)
	1_3_6_1_4_1_211_4_1_3_21_2_41.xml	HBA driver

*1: When this file is updated, the file with the same name on the Manager side must also be updated so that their contents are the same.

Definition File Format


Definition Contents

Operations are defined by the following items for the Specific Trap Type in the definition file:

Item	Description
Operation definition	Whether to post a status change to a window Whether to output the event log Whether to implement linkage with Systemwalker Centric Manager and linkage with Shell/Bat Whether to enable external script linkage 1 Whether to enable external script linkage 2
Fault level	Notification levels of individual events and linkage with Systemwalker Centric Manager (Information/Warning/Error)
Message	Message output for event and linkage with Systemwalker Centric Manager

Node Hierarchy

The following figure shows the hierarchy of tag nodes:

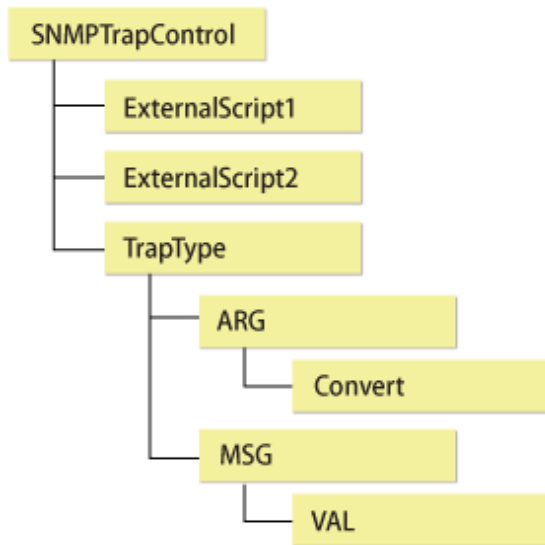

Tags and Attributes

SNMPTrapControl Tag

Attribute Name	Description
name	Device name
ver	Version of this definition file

ExternalScript1, ExternalScript2 Tag (Option)

This tag defines the script name when using external script linkage. ExternalScript1 indicates external script linkage 1 and ExternalScript2 indicates external script linkage 2. A script defined here is executed when the corresponding linkage bit is set on in the flag attribute of the TrapType tag or the Convert tag.

ExternalScript1 and ExternalScript2 tag must be defined in a line above the TrapType tag definition.

Attribute Name	Description
name	Executed script name (using full path name)

TrapType Tag

This tag defines trap analysis operations for each Specific Trap Type. Traps of types not defined by the TrapType tag are not analyzed and discarded.

Attribute Name	Description
type	"ST" + Specific Trap Type number (decimal)
flag	Control of event, linkage with Systemwalker Centric Manager, linkage with Script, and E-mail notification (in 9 bits binary) The "0" is interpreted as "off", the "1" is "on". bit8 ... (Cannot be changed) bit7 ... (Cannot be changed) bit6 ... E-mail notification of a information event (*1) bit5 ... external script linkage2 bit4 ... external script linkage1 bit3 ... Linkage with Systemwalker Centric Manager, Linkage with Shell/Bat (*2) bit2 ... Event log output bit1 ... (Cannot be changed) bit0 ... Status change notification

Attribute Name	Description
	For example, only linkage with Systemwalker Centric Manager is set to on flag="000001000". If you specify it only 4 bits length, the values of bit4 - bit8 are interpreted as "0". For example, flag="1111" is interpreted as flag="000001111".
level	Specify events and the levels that are posted to Systemwalker Centric Manager. (I: Information / W: Warning / E: Error)
msg	Messages displayed for events and linkage with Systemwalker Centric Manager, sending and linkage with Script. The following parameters can be included in messages: %d: Decimal number %x: Hexadecimal number %s: Character string As many ARG tags as the number of parameters included in a message must be defined as described in (4) below. If any character other than 'd', 'x', and 's' follows %, the % is handled as a character and displayed as is.

*1: Set it to on if you want to enable the E-mail notification of an information event or disable the E-mail notification of a warning event and an error event.

*2: Since events of the Agent are not reported to Systemwalker Centric Manager, only Shell/Bat linkage control can be done in the definition file of the Agent.

Point

.....

To handle the newly added SNMP Trap definitions in the ETERNUS AX/HX series, NetApp FAS Series (with clustered Data ONTAP), or NetApp AFF series, check the Specific Trap Type number of the target SNMP Trap from the MIB file that is included with this device and add the TrapType tag.

.....

ARG Tag

The ARG tag defines correspondence between a parameter specified in the msg attributes of the TrapType tag and a Variable Binding index in trap data. There are as many ARG tags as the number of parameters specified in the msg attributes must be defined.

Attribute Name	Description
index	Index number (0 or larger) of a parameter included in the msg attributes of the TrapType tag described in (3).
VBIndex	Index number (0 or larger) of Variable Binding in Trap data

Convert Tag (Option)

The Convert tag specifies how to express a character string for an INTEGER type or STRING type data value of a trap. Definition of this tag is optional. For example, to use Trap data value 0 to indicate the status of OK, specify <Convert val="0" name="OK"/> so that character string "OK" can be displayed instead of "0".

By specifying the flag attribute and level attribute (options), a fault level specified in the level attribute of the TrapType tag can be changed and posted. (If the msg attribute includes multiple ARGs and the flag or level attribute is specified in individual Convert tags, the values specified in the Convert tag of the last ARG are used.)

Attribute Name	Description
val	Numeric data value (decimal) of the INTEGER type in a Trap or monitoring keyword for the character string of the STRING type in a Trap (character string or regular expression)
flag (option)	Control of events, linkage with Systemwalker Centric Manager, linkage with Script, and E-mail notification (in 7-bit binary) Refer to " TrapType Tag " for values.
level (option)	Fault level "I", "W", or "E" This tag is given a higher priority than the TrapType tag.
name	Character string corresponding to val

If a value that does not exist in the definition is received, INTEGER type Traps are displayed as a numerical expression, but STRING type Traps are not displayed.

Point

.....

Definitions for data values of the STRING type are only available for the ETERNUS AB/HB series. Define monitoring keywords (such as "^Critical\$" and "^Info\$") for the Event Priority of a Trap that occurs from the device. To display a test trap, temporarily add a Convert tag with "^Info\$" as the monitoring keyword.

.....

MSG Tag

The MSG tag defines a monitoring keyword for Server Node Agent monitoring. It is valid only for Server Node Agent.

Windows Agent: Monitors with the id, src, and type attributes (ignores the key attribute).

Another Agent: Monitors with the key attribute (ignores the id, src, and type attributes).

Attribute Name	Description
key	Monitoring keyword for monitoring (required for a non-Windows Agent)
id	Event ID of the event to be monitored (required for a Window Agent)
src	Source name of the event to be monitored (required for a Windows Agent)
line	When a VAL tag is used (a substring of a monitored event is added to notification information), specify the number of monitored event lines for the line attribute. The line attribute can be omitted for a single line or when a Windows Agent is used.
type	Specify the type of event logs to be monitored. (Valid only for windows Agent) System: Monitor the system log. (Default) Application: Monitor the application log.

To change the monitoring keyword, change this keyword.

Regular expression can be specified to the monitoring keyword.

To add a monitoring keyword for monitoring, add the TrapType tag and later shown below. Be sure not to specify a Specific Trap Type number that is already specified.

VAL Tag (Option)

The VAL tag is used to define the method of retrieving a character string from the monitored event and adding it to notification information. The VAL tag is valid only for Server Node Agent.

Attribute Name	Description
ref	Specify the value to be added to notification information. Specify the value in parentheses () in regular expression.

ID Attribute Specification by DTD

During SNMP Trap control, the type attribute of the TrapType tag is used as the ID attribute for searches, so DTD must be described as follows in the XML definition file:

```
<!DOCTYPE SNMPTrapControl[
<!ATTLIST TrapType type ID #REQUIRED>
]>
```

Sample Definition File

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE SNMPTrapControl[
<!ATTLIST TrapType type ID #REQUIRED>
]>
<SNMPTrapControl name="SW3800" ver="1.0">
  <TrapType type="ST1" flag="111111" level="E" msg="Faulty reason: %d">
    <ARG index="0" VBIndex="0">
      <Convert val="0" flag="000110" level="I" name="sw-ok"/>
      <Convert val="1" name="sw-faulty"/>
    </ARG>
  </TrapType>
  <TrapType type="ST2" flag="000111" level="E" msg="%s: is currently in state %d">
    <ARG index="0" VBIndex="4"/>
    <ARG index="1" VBIndex="0">
      <Convert val="1" name="unknown"/>
      <Convert val="2" name="faulty"/>
      <Convert val="3" name="below-min"/>
      <Convert val="4" flag="000110" level="I" name="nominal"/>
      <Convert val="5" name="above-max"/>
      <Convert val="6" name="absent"/>
    </ARG>
  </TrapType>
</SNMPTrapControl>
```



Example

Method of Suppressing Brocade series FC Port Online/Offline Traps:

To suppress Brocade series FC port Online/Offline traps, change the following locations in the corresponding XML definition file.

The flag attribute is changed to "000000" in val="1" and val="2" of the Convert tag in <ARG index="1" VBIndex="0"> for which "ST3" is specified as the type attribute.

```
<Convert val="1" flag="000000" level="I" swsag="4203" name="Online"/>
<Convert val="2" flag="000000" level="I" swsag="4203" name="Offline"/>
```

A.6 Correlation.ini Parameter

This file is saved at the following location of the Server Node as a detailed setting file of Agent:

Platform of Agent	Location
Windows	\$ENV_DIR\ESC\Agent\etc\Correlation.ini (\$ENV_DIR means "Environment Directory" specified at the Agent installation.)

Platform of Agent	Location
Solaris OS, Linux, HP-UX	/etc/opt/FJSVssage/Correlation.ini

Reflecting Contents of Setting File

The file is read and used when Agent starts.

To operate according to the contents of the file the restart of Agent is needed.

Customization

PollingTime

Specify a period of time in seconds during which system messages are monitored. The default value is 10.

0 (not monitored) to 3600 (one hour)

```
PollingTime=time
```

HBAStatus (HP-UX Agent Does Not Support This Parameter)

Specify this parameter to collect HBA's status. The default value is ON.

```
HBAStatus= ON or OFF
```

- ON (status of HBA is collected.)
- OFF (status of HBA is suppressed.)

To unite states of HBA in the environment where the Storage Cruiser's agent of Solaris OS and Windows exist together with SSC agent, turn HBAStatus to OFF.

HBAMask (HP-UX Agent Does Not Support This Parameter)

Use this parameter to make HBA port be non-displayed.

Specify World Wide Port Name (WWPN) for the disabled HBA port with a 16-character long hexadecimal number (for example: 500000E0D4445884). If multiple HBA ports are specified, specify as many parameters as the number of HBA ports.

```
HBAMask=WWPN-of-HBA-port
```

The Warning status is displayed for HBA port when FC cable is not connected with it. To suppress the status of HBA because of unused or similar reason, use this parameter.

If HBA displayed in Web Console is specified, delete the relevant HBA in Web Console. If not delete, the relevant HBA remains displayed in Web Console.

StorageClusterController

Specify this parameter to enable the monitoring function of Storage Cluster Controller. The default value is OFF.

```
StorageClusterController=ON or OFF
```

- ON: Enables the monitoring function.
- OFF: Disables the monitoring function.

A.7 Device Polling Setting File

Editing these setting files can customize the default behavior of the device polling function. Two setting files are provided: one file is for defining the polling function behavior and the other file is for defining event linkage control. These files are described in XML.

Reflecting Contents of Setting File

Changed contents are automatically reflected at the next polling operation. (Manager checks the file contents every 30 seconds even while polling is stopped.) Even if executing "Definition File Re-read" using Web Console, be careful that the file may not be reflected.

Customization (Polling Function Behavior Setting File)



Note

- If an error is detected in an XML file, the event message shown below is output for each polling operation. In this event, the polling function operates with the default settings.

Message: "[Polling] XML File Format Error(XML file name)"

- Be sure not to delete the file itself even if no items are set. If the file is deleted, re-create the file according to the above sample.
- When customizing the polling function behavior setting file, do not edit the setting file in the installation directory but edit the one in the customization directory.

Setting File Name and Storage Location

The polling function behavior setting file is stored in the following location during Manager installation or upgrading:

Platform of Manager	Location
Windows	\$INS_DIR\ESC\Manager\opt\FJSVssmgr\lib\devicepolling\DP_config.xml (\$INS_DIR means "Program Directory" specified at the Manager installation.)
Solaris OS, Linux	/opt/FJSVssmgr/lib/devicepolling/DP_config.xml

When customizing the polling function behavior, copy the polling function behavior setting file in the above location to the customization location shown below, and edit the copy of the file.

Platform of Manager	Customization Location
Windows	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\devicepolling\DP_config.xml (\$ENV_DIR means "Environment Directory" specified at the Manager installation.)
Solaris OS, Linux	/etc/opt/FJSVssmgr/current/devicepolling/DP_config.xml

If the polling function behavior setting file exists in the customization location, Manager operates in accordance with the setting file. If not, it operates in accordance with the default setting file in the installation directory.


Setting File Format

Setting Contents

Item	Description
Polling interval	Polling operation interval (including during stoppage)
Device not subject to polling	Specify a device to exclude it from polling.

Node Hierarchy

The tag node hierarchy is shown below.

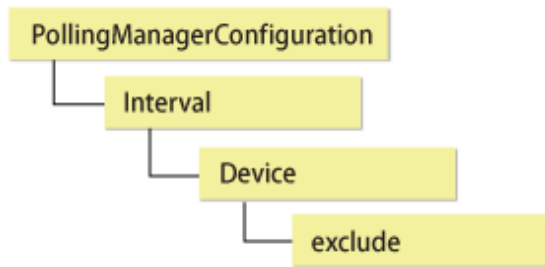

Tags and Attributes

Interval Tag

Attribute Name	Description
value	A polling operation interval is set in seconds (decimal). The minimum interval is 30 seconds. If a value less than 30 is specified, 30 seconds is used for polling. Specifying 0 stops polling.

Device/Exclude Tag

No attributes can be set in the Device tag. As many exclude tags as required can be set.

exclude Tag

Attribute Name	Description
address	Specify the IP address of a device to exclude it from polling operations. For IP address, IPv4 or IPv6 format can be specified.

Default Value

The default values of the parameters are as follows:

Polling interval: 60 seconds

Device not subject to polling: None

Sample Setting File

```

<?xml version="1.0" encoding="UTF-8" ?>
<PollingManagerConfiguration>
  <Interval value="60" />
  <Device>
    <exclude address="192.0.2.10" />
    <exclude address="192.0.2.11" />
  </Device>
</PollingManagerConfiguration>
  
```

Customization (Control Event Linkage Setting File)



Note

- The portions that can be changed are the name attribute values of the ExternalScript1 and ExternalScript2 tags and the flag attribute value of the Convert tag only. The other portions may not be modified since the changes can possibly cause an abnormal behavior of the polling function.
- Events involving the server node agent are not posted to Systemwalker Centric Manager. Use the monitoring function of Systemwalker Centric Manager to monitor operating status.

Setting File Name and Storage Location

The setting file is stored in the following directory:

Platform of Manager	Location
Windows	\$INS_DIR\ESC\Manager\opt\FJSVssmgr\lib\snmpth\1_3_6_1_4_1_211_4_1_3_21_1.xml (\$INS_DIR means "Program Directory" specified at the Manager installation.)
Solaris OS, Linux	/opt/FJSVssmgr/lib/snmpth/1_3_6_1_4_1_211_4_1_3_21_1.xml

Setting File Format

Setting Contents

Item	Description
External script name definition	Define the script name when using external script linkage.
Operation definition	Whether to display a posted status change Whether to output the event log Whether to implement linkage with Systemwalker Centric Manager and linkage with Shell/Bat Whether to implement external script linkage 1 Whether to implement external script linkage 2

Setting Method

- External Script name definition

When using external script linkage, define the script name in the name attribute of following definition lines (in full path specification).

Item	Definition Line
external script linkage 1	<ExternalScript1 name="c:\somedir\script1.bat" />
external script linkage 2	<ExternalScript2 name="c:\somedir\script2.bat" />

- Event linkage behavior definition

In the configuration file, there are following definition lines according to the events. To define Event linkage behavior, set in the flag attribute of each definition line.

Event	Definition Line
When the status becomes normal	<Convert val="0" name="" level="I" flag="001111" />
When the status becomes warning	<Convert val="1" name="" level="W" flag="001111" />
When the status becomes error	<Convert val="2" name="" level="E" flag="001111" />
When the status becomes timeout	<Convert val="3" name="" level="WT" flag="001111" />
When communication has been recovered	<Convert val="10" name="" level="IR" flag="001111" />

Flag Attribute is shown below.

Attribute Name	Description
flag	Control of event, linkage with Systemwalker Centric Manager, and linkage with Script (in 6-bits in binary) The "0" is interpreted as "off", the "1" is "on". bit5 ... External script linkage 2 bit4 ... External script linkage 1 bit3 ... Linkage with Systemwalker Centric Manager, Linkage with Shell/Bat bit2 ... Event log output

Attribute Name	Description
	bit1 ... (Cannot be changed) bit0 ... Status change notification For example, only linkage with Systemwalker Centric Manager is set to on "001000".

A.8 Polling Service Setting File

Editing this setting file can customize the following operations controlled by polling service. This setting file is described in XML.

Items That Can Be Customized	Explanation	Default Value
Thin Provisioning Pool threshold monitoring	The monitoring interval for the Thin Provisioning Pool threshold can be changed.	1 hour (3,600 seconds)
Capacity management for the Thin Provisioning Pool, TPV, and NAS file system	The execution time for the capacity information collection can be changed. However, the NAS file system information may be obtained 10 minutes earlier than the specified time.	1:00 A.M.
Capacity management for the Tier pool and FTV	The execution time for the capacity information collection can be changed.	1:30 A.M.
Event notification setting of SNMP Traps	The monitoring interval for the event notification setting of SNMP Traps can be changed.	1 hour (3,600 seconds)

Reflecting File

If the setting file is changed, execute re-read definition file by using Web Console, or reactivate the Manager. This reflects the settings on this software.

Customization



Note

- Do not delete the file, even if no items are specified.
- To customize the polling service, edit the file in the customization directory (not the one in the installation directory).

File Path and Name

When the Manager is installed or upgraded, the configuration file is stored in the directory below:

Platform of Manager	Absolute Path Name
Windows	\$INS_DIR\ESC\Manager\opt\FJSVsmgr\lib\polling\pollingService.xml (\$INS_DIR means "Program Directory" specified at the Manager installation.)
Solaris OS, Linux	/opt/FJSVsmgr/lib/polling/pollingService.xml

To customize the polling service, copy the configuration file in the directory above to the customization directory below, then edit it:

Platform of Manager	Absolute Path Name (for Customization)
Windows	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\polling\pollingService.xml (\$ENV_DIR means "Environment Directory" specified at the Manager installation.)
Solaris OS, Linux	/etc/opt/FJSVssmgr/current/polling/pollingService.xml

If there is a configuration file in the customization directory, then the Manager uses it, otherwise it uses the default configuration file in the installation directory.


File Format

Contents

Item	Content
Polling interval	<p>This item specifies the following operation interval:</p> <ul style="list-style-type: none"> - Monitoring interval for the Thin Provisioning Pool threshold - Monitoring interval for the event notification setting of SNMP Traps <p>The following operations also can be stopped:</p> <ul style="list-style-type: none"> - Thin Provisioning Pool threshold monitoring - Capacity management for the Thin Provisioning Pool, TPV, and NAS file system - Capacity management for the Tier pool and FTV
Polling execution time specification	<p>This item specifies the following execution time:</p> <ul style="list-style-type: none"> - Execution time of the capacity information collection for the Thin Provisioning Pool, TPV, and NAS file system - Execution time of the capacity information collection for the Tier pool and FTV

Node Hierarchy

The tag node hierarchy for is displayed below:

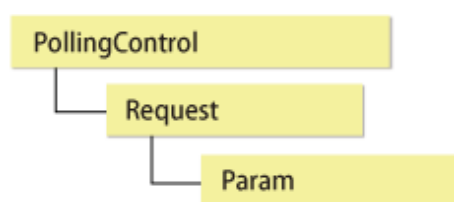

Tags and Attribute Types

Request Tag

Attribute Name	Content
interval	<p>Polling interval in seconds (in decimal format).</p> <p>The minimum value is 30 - specifying shorter values results in this value being used.</p> <p>The maximum value is 9,223,372,036,854,775 - specifying larger values results in this value being used.</p> <p>Note that values larger than 9,223,372,036,854,775,807 causes an error.</p> <p>Specifying 0 causes the polling to not be executed.</p> <p>If the "exectime" attribute is specified at the same time, polling is executed by default.</p>

Attribute Name	Content
exectime	<p>Polling execution time (in hh:mm:ss format - example: 21:15:00)</p> <p>hh has a valid range of 0 to 23, and mm and ss have a valid range of 0 to 59.</p> <p>If the "interval" attribute is specified at the same time, polling is executed by default.</p>

Param Tag

None.

Sample Configuration File

```
<?xml version="1.0" encoding="UTF-8" ?>
<PollingControl name="Default" ver="1.0">
  <Request name="WatchAlarm"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolAlarm" interval="3600" />
  <param key="Warning" value="pool status changed: Warning" />
  <param key="Caution" value="pool status changed: Caution" />
  <param key="Normal" value="pool status changed: Normal" />
  <Request name="WatchCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolCapacity"
exectime="01:00:00" />
  <Request name="WatchTierPoolCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchTierPoolCapacity"
exectime="01:30:00" />
  <Request name="DeviceSetting"
className="com.fujitsu.storagesoft.services.polling.method.DeviceSetting" interval="3600" />
</PollingControl>
```

Example

Change Method at Intervals That Observes Threshold of Thin Provisioning Pool:

Change the following part when you change the threshold watch interval of Thin Provisioning Pool.

The name attribute changes the interval attribute of the Request tag of "WatchAlarm". It specifies it at the second. Interval attribute is changed to "1800" when changing every 30 minutes.

```
<Request name="WatchAlarm"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolAlarm" interval="1800" />
```

To stop monitoring Thin Provisioning Pool threshold, change the interval attribute to "0".

```
<Request name="WatchAlarm"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolAlarm" interval="0" />
```

Example

Change Method of Capacity Information Acquisition Time for Thin Provisioning Pool, TPV, and NAS file system:

Change the following part when you change acquisition time of capacity information on Thin Provisioning Pool, TPV, and NAS file system.

The name attribute changes the exectime attribute of the Request tag of "WatchCapacity". The value is time (hh): (mm): It specifies it by second (ss). The exectime attribute is changed to "12:00:00" when changing at 12:00.

```
<Request name="WatchCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolCapacity" exectime="12:00:00" />
```

To stop collecting the capacity information for the Thin Provisioning Pool, TPV, and NAS file system, delete the exectime attribute and add an interval attribute with "0".


```
<Request name="WatchCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolCapacity" interval="0" />
```

Example

How to change Capacity Information Collection for Tier pool and FTV

When changing the capacity information collection time for the Tier pool and FTV, change the following locations:

For the Request tag whose name attribute is "WatchTierPoolCapacity", change the exectime attribute. Specify the value in hour (hh): minute (mm): second (ss). When changing to 23:00, change the exectime attribute to 23:00:00.

```
<Request name="WatchTierPoolCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchTierPoolCapacity"
exectime="23:00:00" />
```

To stop collecting the capacity information for the Tier pool and FTV, delete the exectime attribute and add an interval attribute with "0".

```
<Request name="WatchTierPoolCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchTierPoolCapacity" interval="0" />
```

A.9 Explanation of Configuration Settings File

The configuration file of devices targeted by the performance management function can be configured by editing the configuration settings file.

The following devices can be customized:

- Fibre Channel switches and Fibre Channel switch blades that support performance monitoring

Reflecting File

If the file has been changed, then either start performance monitoring of targeted devices, or reactivate the Manager. This reflects the contents of the file to this product.

Customization

Note

To restore the contents, the configuration file must be updated. Refer to "[7.2.9 Updating Configuration Information](#)" for details.

File Path and Name

A separate configuration settings file must be created for each device for which you want to change the configuration file.

Platform of Manager	Absolute Path Name
Windows	\$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perfconf\IP address.xml (\$ENV_DIR means "Environment Directory" specified at the Manager installation.)
Solaris OS, Linux	/etc/opt/FJSVssmgr/current/perfconf/IP address.xml

Specify the following for file name:

IP Address Set to Device	File Name
IPv4 address	":" in the IP address set to device is replaced with "_".
IPv6 address	":" in the IP address displayed in FC switch list is replaced with "_". Refer to "Display FC Switch" in the <i>Web Console Guide</i> for the procedure to display FC switch list.

Example

If IPv4 Address Is 192.0.2.10:

```
192_0_2_10.xml
```

If IPv6 Address Displayed in FC Switch List Is 2001:0:0:1::1:

```
2001_0_0_1__1.xml
```

port-baud-rate-X

Specify the port number in the X part of the property name (port-baud-rate-X).

Specify a port transfer rate value between 0 and 25 (Unit: Gbps).

Note

- Performance monitoring and threshold value monitoring cannot be used if 0 is set as the transfer rate of the port.
- The graph display function cannot be used if 0 is set as the transfer rate of the port.
- When the performance values are displayed as a graph, 0 is displayed as the performance value for intervals in which 0 is set as the transfer rate.
- If the specified transfer rate is invalid range, then the following values are displayed:

Transfer Rate	Explanation
Less than 0	0 Gbps is set.
Greater than 25	25 Gbps is set.

Example

Setting 8 Gbps as Transfer Rate for Ports 1 and 2:

```
port-baud-rate-1=8
port-baud-rate-2=8
```

Point

The maximum transfer rate for the VE port of the Fibre Channel switch is set to the default of 1 Gbps.

If the FCIP trunking function or the FCIP data compression function are enabled and a transfer quantity of 1 Gbps or more occurs for the VE port, then you must change the VE port transfer rate.

Use the formula below to calculate the transfer rate:

```
Transfer rate = Compression ratio set for the VE port * Total bandwidth set for the VE port
```

Example

Method for Calculating Transfer Rate of VE Ports:

For the environment below:

- Compression ratio (4:1)
- Four FCIP circuits each with a bandwidth of 0.5 Gbps set for the VE port

```
Transfer rate = Compression ratio (4:1) * Total bandwidth (0.5 Gbps * 4 circuits)
              = 4 * (0.5 * 4)
              = 8(Gbps)
```

A.10 snmptrapd.conf Configuration File

In order for the Linux Manager to use SNMP Traps for fault monitoring, customize snmptrapd.conf (the configuration file included in the OS standard net-snmp package).

Platform of Manager	Location
Linux	/etc/snmp/snmptrapd.conf
	/usr/share/snmp/snmptrapd.conf

Reflecting File

If the file has been changed, then restart snmptrapd:

```
# systemctl stop snmptrapd.service
# systemctl start snmptrapd.service
```

Note

Restart the snmptrapd daemon and trpsrvd daemon for environments using the ServerView trap transfer program.

Customization

disableAuthorization

Set as shown below if you want to disable access control.

If not set, access control is enabled.

```
disableAuthorization yes
```

Note

- Check both /etc/snmp/snmptrapd.conf and /usr/share/snmp/snmptrapd.conf.
- If there are no requests from other products, then disable access control by setting this parameter to "yes".

authCommunity

This parameter can be customized if access control is enabled.

The format is displayed below:

```
authCommunity TYPES COMMUNITY [SOURCE [OID | -v VIEW ]]
```

```
TYPES: log, execute, net
COMMUNITY: Community name of monitoring target SNMP trap
```

TYPES can be set to log, execute, or net. COMMUNITY must be set to the SNMP Trap community name of the monitoring target device. Do not set SOURCE, OID, or VIEW.

Set as shown below.

```
Example:
authCommunity net public
authCommunity net SANMA
```

If a device with an SNMP Trap community name other than "public" or "SANMA" is to be monitored, add an authCommunity entry. For example, if the device to be monitored has the community name "common", set this parameter as below. Note that the "public" and "SANMA" entries are mandatory.

```
Example:
authCommunity net public
authCommunity net SANMA
authCommunity net common
```

If authCommunity log or authCommunity execute has already been set by another product, in the TYPES field, then add "net", preceded by a comma. For example, set as shown below if authCommunity execute public is already set:

```
Example:
authCommunity execute,net public
```

Note

Check /etc/snmp and /usr/share/snmp, and edit snmptrapd.conf in the file that already has authCommunity set by another product. If there is no setting in either file, then edit /etc/snmp/snmptrapd.conf.

forward

Make sure that the following is set in /etc/snmp/snmptrapd.conf:

```
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

Examples

- If access control is disabled:

```
disableAuthorization yes
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

- If access control is enabled:

```
authCommunity net public
authCommunity net SANMA
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

- Monitoring a device that has SNMP Trap community name "common":

```
authCommunity net public
authCommunity net SANMA
authCommunity net common
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

- If authCommunity execute public has already been set:

```
authCommunity execute,net public
authCommunity net SANMA
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

Note

After `snmptrapd.conf` is customized, if an application (such as ServerView AlarmService) that uses `snmptrapd` is installed or uninstalled, or if settings are changed, then make sure that the customized contents of `snmptrapd.conf` have not been changed.

A.11 `policy.conf` Parameter

It is a detailed configuration file of the Reporting function, and is stored in the following location.

Platform of Manager	Absolute Path Name
Windows	<code>\$INS_DIR\Common\etc\report</code> (<code>\$INS_DIR</code> means "Program Directory" specified at the Manager installation.)
Solaris OS, Linux	<code>/etc/opt/FJSVesfcm/conf/report</code>

Reflecting Contents of Setting File

There is no special reflection method because of being read when the `esfadm report create` command is executed.

Customization

Format of Set Item

The preservation period of collected report information is specified.

Initialization is three months (`retention_period =0000-03-00`).

The date when the `esfadm report create` command was executed is the starting point, and the preservation period is specified in the form of "YYYY-MM-DD". Only one of YYYY, MM, and DD can be specified.

- YYYY: The preservation period is specified in number of years. Years that can be specified are from 0000 to 0010.
- MM: The preservation period is specified in number of months. Months that can be specified are from 00 to 12.
- DD: The preservation period is specified in number of days. Days that can be specified are from 00 to 31.

The message `esrpt00221` is output when two or more are specified, and the command terminates abnormally.

Examples

Preservation periods

- Policy setting
 - Example 1: `retention_period =0001-00-00`
 - Example 2: `retention_period =0000-01-00`
 - Example 3: `retention_period =0000-00-01`
- Execution date and time of command
 - 8:00 on March 31, 2012
- Handling at preservation period
 - Example 1: The preservation period is one year from 8:00 on March 31, 2011 to 8:00 on March 31, 2012.
 - Example 2: The preservation period is one month from 8:00 on February 29, 2012 to 8:00 on March 31, 2012.
 - Example 3: The preservation period is one day from 8:00 on March 30, 2012 to 8:00 on March 31, 2012.

A.12 `TFOConfig.ini` Parameter

This file is saved at the following location of the Server Node as a setting file of Storage Cluster Controller:

Platform of Agent	Location
Windows	\$ENV_DIR\ESC\Agent\etc\TFOConfig.ini (\$ENV_DIR means "Environment Directory" specified at the Agent installation.)
Solaris OS, Linux	/etc/opt/FJSVssage/TFOConfig.ini

Reflecting Contents of Setting File

The file is read and used when Agent starts.

To operate according to the contents of the file the restart of Agent is needed.

Customization

IP

Specify the IP address of a monitored storage device.

In IP address, IPv4 or IPv6 address can be entered.

Specify the IP address of one device in one row. If there are a number of monitored devices, enter their IP addresses in as many rows as monitored devices.

```
IP=<IP address of monitored storage device>
```

Note

- IPv6 address supports global addresses alone.
- If the specified IP address format is not correct, ignore the specification and continue the operation.
- If the same IP address is specified, do not regard it as error but monitor the specified IP address.
- Storage Cluster Controller operates on the following OSs:
 - Windows (Restricted to OSs where Storage Cruiser's agent can operate)
 - Red Hat Enterprise Linux 7 or later
 - Oracle Solaris 11
 - Oracle Solaris 10

Other than for the OSs listed above, the definition of this parameter is ignored.

Examples

- When monitoring storage devices whose IP address is 192.0.2.10 and 192.0.2.11:

```
IP=192.0.2.10
IP=192.0.2.11
```

Appendix B Troubleshooting

This appendix explains the most common problems that might be encountered during the operation of this software. Further, it explains basic troubleshooting and also provides information on where to find further help.

B.1 Collecting Troubleshooting Information

If a failure occurs in this software, the following troubleshooting information is required.

Information for Initial Investigation

It is the information required for the initial analysis of problems.

Collect troubleshooting information immediately when a problem occurs. Sometimes, important information is lost over time.

Information for Further Investigation

The information for initial investigation can sometimes determine the cause of problems. However, some problems might require further, detailed troubleshooting information. Therefore, in case the cause of a problem cannot be determined from an initial investigation alone, it is required to collect more detailed information.

Collect information for further investigation and submit it to Fujitsu Technical Support if requested.

Note

- Sometimes, important information is lost over time. Collect troubleshooting information immediately when a problem occurs.
- When using the following to store the collected information, check if there is enough space in the filesystem to ensure system resources are not depleted or any effect is had on system operation.

Platform	File system Which Attention is Necessary for Use
Windows	filesystem configured in the environment variable TEMP
Solaris OS, Linux, HP-UX	"/", "/var", and "/tmp"

Also, be careful about space when a different directory is specified with the command option. Ensure there is sufficient space in the directory.

- As a material for investigation, information reaches 200 KB - 5 MB (the maximum size is 30 MB with "-all" option). Also, it is necessary to reserve 5 - 30 MB (30 - 80 MB with the "-all" option) for a temporary directory to store the information. The space required varies depending on operating environment, and the data described above is for reference.
- In a clustered system, execute the command to collect troubleshooting information on all the nodes making up the clustered system.

B.2 Information for Initial Investigation

When a system failure occurs, determine and analyze the cause of the problem as soon as possible.

This section explains information required for initial investigation.

Advantage

The information used for initial problem analysis can be acquired immediately, and is small enough.

B.2.1 Collecting Information from Management Server (Solaris OS)

Export the initial investigation information by using Web Console.

If the export fails or Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

Point

In cluster configurations, collect information on both the primary and secondary nodes of the Management Server.

1. Make a note of the error code (swsagXXXX), if an error dialog box is displayed.
2. Login to the Management Server.

Perform the operation with OS administrator permissions (root) after login.

3. Execute the esfsnap command.

```
# /opt/FJSVesfcm/bin/esfsnap -dir directory
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.2.2 Collecting Information from Management Server (Linux)

Export the initial investigation information by using Web Console.

If the export fails or Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

Point

In cluster configurations, collect information on both the primary and secondary nodes of the Management Server.

1. Make a note of the error code (swsagXXXX), if an error dialog box is displayed.
2. Login to the Management Server.

Perform the operation with OS administrator permissions (root) after login.

3. Execute the esfsnap command.

```
# /opt/FJSVesfcm/bin/esfsnap -dir directory
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.2.3 Collecting Information from Management Server (Windows)

Export the initial investigation information by using Web Console.

If the export fails or Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

1. Make a note of the error code (swsagXXXX), if an error dialog box is displayed.
2. Login to the Management Server with the user of an Administrators group.
OS administrator permissions are required to collect the information.
3. Execute the esfsnap command. The \$INS_DIR means "Program Directory" specified at the Manager installation.

```
C:\> $INS_DIR\Common\bin\esfsnap -dir directory
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.2.4 Collecting Information on Managed Server Node (Solaris OS)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node where you perform the operation.
Perform the operation with OS administrator permissions (root) after login.
2. Execute the agentsnap command.

```
# /opt/FJSVssage/sys/agentsnap [-dir directory]
```

It is possible to change a directory to save the information by specifying -dir option. If the option is omitted, information is saved in /var/tmp.

B.2.5 Collecting Information on Managed Server Node (Windows)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node with the user of an Administrators group.
OS administrator permissions are required to collect the information.
2. Execute the agentsnap command. The \$INS_DIR means "Program Directory" specified at the Agent installation.

```
C:\> $INS_DIR\ESC\Agent\sbin\agentsnap -dir directory
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

3. Collect event log of Windows by Event Viewer which is a standard application of Windows.
Run "Event Viewer", select **Action** > **Save Log File As**, and save the following event log files.
 - System files
 - Application files

B.2.6 Collecting Information on Managed Server Node (Linux)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node where you perform the operation.
Perform the operation with OS administrator permissions (root) after login.
2. Execute the agentsnap command.

```
# /opt/FJSVssage/sys/agentsnap [-dir directory]
```

It is possible to change a directory to save the information by specifying -dir option. If the option is omitted, information is saved in /tmp.

B.2.7 Collecting Information on Managed Server Node (HP-UX)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

Collect information directly by cp command.

1. Collect system log files.
Collect all files from the directory below.
 - /var/adm/syslog/syslog.log
 - /var/adm/syslog/OLDsyslog.log (If exists)
2. Collect trace log files.
Collect all files from /var/opt/FJSVssage directory. (including sub-directories)

3. Collecting setting files.
Collect all files from /etc/opt/FJSVssage directory. (including sub-directories)
4. Collect core file, if it exists on the root directory "/".

B.3 Information for Further Investigation

If it is not possible to determine the cause of the problem in the initial investigation, further detailed information may be needed.

This section explains how to collect required information to resolve the problem.

Data Feature

As there is various information required in order to determine the cause of the problem, the size of the data is greater than that used for the initial investigation.

B.3.1 Collecting Information from Management Server (Solaris OS)

Export the initial investigation information by using Web Console.

If the export fails or Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.



Point

.....
In cluster configurations, collect information on both the primary and secondary nodes of the Management Server.
.....

1. Login to the Management Server.

Perform the operation with OS administrator permissions (root) after login.

2. Execute the esfsnap command and the fjsnap command.

Execute both commands. If the fjsnap command cannot be executed for some reason, use only the esfsnap command.

- How to use the esfsnap command

Specify the directory to save the information with the -dir option (The -dir option cannot be omitted).

```
# /opt/FJSVesfcm/bin/esfsnap -dir directory -all
```

- How to use the fjsnap command

Replace the variable *output* with the name of the output medium or specific file name to save the collected information.

```
# /opt/FJSVsnap/bin/fjsnap -a output
```

B.3.2 Collecting Information from Management Server (Linux)

Export the initial investigation information by using Web Console.

If the export fails or Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.



Point

.....
In cluster configurations, collect information on both the primary and secondary nodes of the Management Server.
.....

1. Login to the Management Server.

Perform the operation with OS administrator permissions (root) after login.

2. Execute the esfsnap command and the fjsnap command.

Execute both commands. If the fjsnap command cannot be executed for some reason, use only the esfsnap command.

- How to use the esfsnap command

Specify the directory to save the information with the -dir option (The -dir option cannot be omitted).

```
# /opt/FJSVesfcm/bin/esfsnap -dir directory -all
```

- How to use the fjsnap command

Replace the variable *output* with the name of the output medium or specific file name to save the collected information.

```
# /opt/FJSVsnap/bin/fjsnap -a output
```

B.3.3 Collecting Information from Management Server (Windows)

Export the initial investigation information by using Web Console.

If the export fails or Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

1. Login to the Management Server with the user of an Administrators group.

OS administrator permissions are required to collect the information.

2. Execute the esfsnap command. The \$INS_DIR means "Program Directory" specified at the Manager installation.

```
C:\> $INS_DIR\Common\bin\esfsnap -dir directory -all
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.3.4 Collecting Information on Managed Server Node (Solaris OS)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node where you perform the operation.

Perform the operation with OS administrator permissions (root) after login.

2. Execute the agentsnap command.

```
# /opt/FJSVssage/sys/agentsnap [-dir directory] -all
```

It is possible to change a directory to save the information by specifying -dir option. If the option is omitted, information is saved in /var/tmp.

B.3.5 Collecting Information on Managed Server Node (Windows)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node with the user of an Administrators group.

OS administrator permissions are required to collect the information.

2. Execute the agentsnap command. The \$INS_DIR means "Program Directory" specified at the Agent installation.

```
C:\> $INS_DIR\ESC\Agent\sbin\agentsnap -dir directory -all
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.3.6 Collecting Information on Managed Server Node (Linux)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node where you perform the operation.
Perform the operation with OS administrator permissions (root) after login.
2. Execute the agentsnap command.

```
# /opt/FJSVssage/sys/agentsnap [-dir directory] -all
```

It is possible to change a directory to save the information by specifying -dir option. If the option is omitted, information is saved in /tmp.

B.3.7 Collecting Information on Managed Server Node (HP-UX)

Collect the information which is required by Fujitsu Technical Support, and submit the file to them.

B.4 Troubleshooting Errors That Occur in Devices

B.4.1 Troubleshooting Errors That Occur in Server Nodes

B.4.1.1 Common to Server Nodes

Warning for server node is displayed

- If the Brocade Fibre Channel switch has been used for connections to the server node, refer to "[Error in access path is displayed](#)" in "[B.4.2.1 Brocade Fibre Channel Switch](#)".
- If the VDX series has been used for connections to the server node, refer to "[Error in access path is displayed](#)" in "[B.4.2.2 VDX series](#)".

B.4.1.2 VMware Server Node

VM Guest

When the host name of the guest OS is not displayed

- Check whether VMware Tools is running. If VMware Tools is not running, the virtual machine name is displayed in the [Name] for VM guests.

When the OS information of the guest OS is not displayed

- Check whether VMware Tools is running. If VMware Tools is running, the name and the version of the guest OS are displayed in the [OS]. (The OS version is not displayed in the [OS Level].) If VMware Tools is not running, the system name and the version number of VMware are displayed in the [OS] and [OS Level].

When the status of the guest OS is displayed as "Stop" even though it is running

- Check whether VMware Tools is running. If VMware Tools is stopped, the status of the guest OS is displayed as "Stop" (even if the guest OS is running). If VMware Tools has not been installed, then the [Status] of VM guests is "Normal" if the virtual machine is running and "Stop" if the virtual machine is stopped, regardless of the [Status] of the guest OS.

When the status of the guest OS is displayed as "Warning"

- Check whether a wrong username or password causes a communication failure with the VM host.

When a DAG IP address is displayed for the IP address of the VM guest

- Add a new network adaptor to the VM guest, and set IP address for the management of the VM guest to it again. Perform the **Reload Conf.** operation with Web Console after setting.

B.4.2 Troubleshooting Errors That Occur in Fibre Channel Switches

B.4.2.1 Brocade Fibre Channel Switch

Device cannot be detected

- Check whether the SNMP settings on the device side agree with the settings of this software. Refer to "[SNMP Setting](#)" in "[4.2.1.1 Setting](#)" for details.
- Check whether the SNMP MIB settings on the device side match the settings of this product. Refer to "[SNMP-MIB Setting](#)" in "[4.2.1.1 Setting](#)" for details.
- For devices that do not support [Detect device in subnet] as described in "[1.1 Support Levels](#)", use the IP address assignment.
- Check whether the Ethernet port communication speed has been set correctly.
- When setting the SNMP access control list, confirm the access from the manager is permitted.

Warning for device is displayed

- Check whether a hardware error (FC port, FAN, power supply, temperature, etc.) has occurred.
- Confirm whether or not the password is changed on the device side. If the password is changed on the device side, refer to "[User Name and Password for Fibre Channel Switch Control](#)" in "[4.2.1.1 Setting](#)" and change the registration information of this software.
- When the device is powered on or rebooted, initialization is performed in the device. If you perform the **Reload Conf.** operation for the relevant device with Web Console while the initialization is being performed, a Warning message for the device may appear. If no error occurs on the device, perform the **Reload Conf.** operation for the relevant device using Web Console after device initialization. The display then becomes Normal.

Recovering for performance monitoring status of device is displayed

- For devices installed with VE ports that are used for the FCIP function, set the transfer rate of the VE ports to 0 to prevent a performance monitoring or a threshold monitoring. Refer to "[A.9 Explanation of Configuration Settings File](#)" for information on how to set 0 for the transfer rate.

Warning for access path is displayed

- There is no zoning setting for configuring the access path.
- Check whether all the Fibre Channel switches connected in cascade are registered in this software. If all the Fibre Channel switches have not been registered, register them.
- If a Warning is displayed on the screen, refer to "[Warning for device is displayed](#)" in this section.

Error in access path is displayed

- Check whether all the Fibre Channel switches connected in cascade are registered in this software. If all the Fibre Channel switches have not been registered, register them.
- Make sure that the device in an access path is powered on and there is no problem with the LAN connection. Furthermore, check whether the SNMP settings on the device side agree with the settings of this software. Refer to "[SNMP Setting](#)" in "[4.2.1.1 Setting](#)" for details.
If the network communication is disabled because of device replacement or maintenance, the physical connection line is not displayed.

When changing device SNMP settings

- Refer to "[SNMP Setting](#)" in "[4.2.1.1 Setting](#)".

When changing password of device

- Refer to "[User Name and Password for Fibre Channel Switch Control](#)" in "[4.2.1.1 Setting](#)".

When PG-FCD101 or PG-FCD102 is not displayed

- Check whether there are zoning settings in the Fibre Channel switch that is connected to PG-FCD101 or PG-FCD102. If there are no zoning settings, refer to "[Zoning Setting](#)" in "[4.2.1.1 Setting](#)" and then create a temporary zoning.

B.4.2.2 VDX series

Device cannot be detected

- Check whether the SNMP settings on the device side agree with the settings of this software. Refer to "[SNMP Setting](#)" in "[4.2.3.1.1 Setting](#)" for details.
- Check whether the Ethernet port communication speed has been set correctly.

Warning for device is displayed

- Check whether a hardware error (FC port, FAN, power supply, temperature, etc.) has occurred.
- Confirm whether or not the password is changed on the device side. If the password is changed on the device side, refer to "[User Name and Password for Fibre Channel Switch Control](#)" in "[4.2.3.1.1 Setting](#)" and change the registration information of this software.
- When the device is powered on or rebooted, initialization is performed in the device. If you perform the **Reload Conf.** operation for the relevant device with Web Console while the initialization is being performed, a Warning message for the device may appear. If no error occurs on the device, perform the **Reload Conf.** operation for the relevant device using Web Console after device initialization. The display then becomes Normal.

Warning for access path is displayed

- There is no zoning setting for configuring the access path.
- Check whether all the Fibre Channel switches connected in cascade are registered in this software. If all the Fibre Channel switches have not been registered, register them.
- If a Warning is displayed on the screen, refer to "[Warning for device is displayed](#)" in this section.

Error in access path is displayed

- Check whether all the Fibre Channel switches connected in cascade are registered in this software. If all the Fibre Channel switches have not been registered, register them.
- Make sure that the device in an access path is powered on and there is no problem with the LAN connection. Furthermore, check whether the SNMP settings on the device side agree with the settings of this software. Refer to "[SNMP Setting](#)" in "[4.2.3.1.1 Setting](#)" for details.
At the registration process, check whether the device user name and password is changed or not. For more information, refer to "[User Name and Password for Fibre Channel Switch Control](#)" in "[4.2.3.1.1 Setting](#)".
If network communication is disabled due to the maintenance of device replacement, this error occurs.

When changing device SNMP settings

- Refer to "[SNMP Setting](#)" in "[4.2.3.1.1 Setting](#)".

When changing password of device

- Refer to "[User Name and Password for Fibre Channel Switch Control](#)" in "[4.2.3.1.1 Setting](#)".

B.4.3 Troubleshooting Errors That Occur in ETERNUS DX series or ETERNUS AF All-Flash Arrays

Unable to detect the ETERNUS DX Series or the ETERNUS AF All-Flash Arrays

- This software uses SNMP communication to find devices. Therefore, a storage device whose SNMP function is inactive cannot be detected. The storage device's SNMP function must be started.

- This software may be unable to automatically detect the device if SNMP Trap transmissions are set to a specific server but a server which has Manager operating on it is not set as the SNMP Trap transmission destination. Check the settings for the SNMP Trap transmission destination.
- If the SNMP Community name is changed and the Manager is in a cluster environment, the settings on the storage device side may be incorrect. Refer to step 1 in "4.3.1.1 Setting".
- Check that there are no problems with the settings for the storage device and its network environment. This includes network environment settings, access permission settings, transmission mode settings, and so on. Refer to "4.3.1.1 Setting" for network settings. For transmission mode settings, if transmission mode on one side of the connection is "Auto Negotiation" and "FULL (full duplex)" on the other, transmissions may be unable to be sent or slow down, so make sure that the transmission mode is set correctly.

Changing SNMP setting

- When changing the SNMP settings, you must configure storage device side. Refer to step 1 or step 2 in "4.3.1.1 Setting".

Timeout occurs in communication

- Check that there are no problems with the settings for transmission mode in the storage device and its network environment. For transmission mode settings, if transmission mode on one side of the connection is "Auto Negotiation" and "FULL (full duplex)" on the other, transmissions may be unable to be sent or slow down, so make sure that the transmission mode is set correctly.

Status displayed by this software differs from actual status of device

- When the device is under the maintenance, the status displayed with this software might be different from an actual status of the device.
- If the redundant copy function was running on the ETERNUS DX60 S2, the overall status on ETERNUS Web GUI is "Error", but "Warning" is displayed by this software.

B.4.4 Workaround When the ETERNUS SF Manager Tomcat Daemon Stops (Non-Clustered Environments and Solaris Environments Only)

If the ETERNUS SF Manager Tomcat daemon stops for some reason during operation, restart the daemon.

This product provides a shell script (check_esfservice.sh) that detects and automatically restarts the ETERNUS SF Manager Tomcat daemon if the daemon stops. A workaround can be implemented for the stoppage of the ETERNUS SF Manager Tomcat daemon by executing this shell script. To use the shell script, perform the following procedure.

Procedure for executing the shell script to automatically restart the ETERNUS SF Manager Tomcat daemon

1. Log in to the server as a superuser.
2. While the ETERNUS SF Manager Tomcat daemon is running, execute the shell script.

Example

An execution example of the shell script is as follows. In this execution example, the shell script continues to run even after you log out from the server.

```
# nohup /opt/FJSSvesfcm/bin/check_esfservice.sh > /dev/null 2>&1 &
```

Point

- Execute the shell script by specifying the absolute path as shown in the execution example. Arguments do not need to be specified.

- The shell script can be stopped using one of the following methods:
 - By using the kill command of the OS to stop the shell script process and its child processes
 - By performing the stop operation of the ETERNUS SF Manager daemon
Refer to "[13.3.2.2 Starting and Stopping the ETERNUS SF Manager Daemons](#)" for information on how to stop the daemon.
- If the OS is shut down while the shell script is running, the shell script is stopped. After restarting the OS, re-execute the shell script as required.

 **Information**

In a clustered environment, because the ETERNUS SF Manager Tomcat daemon is restarted according to the cluster application, the workaround in this section is not required.

Appendix C How to Check Product Version

This appendix describes how to check version of installed Storage Cruiser.

Point

- Storage Cruiser can be operated even if a different version of the agent and manager. Therefore, Storage Cruiser to determine the exact use of the environment, you must determine the version of each component.
- How to check version is different for each platform. Storage Cruiser check from the platform of the system components are installed, read how to determine the appropriate platform.
- Although the Storage Cruiser's manager is compatible with some lower version agents, not all Storage Cruiser features maybe available.

C.1 Checking Product Version in Windows Operating System

Check the product version according to the procedure shown below.

1. Logon to Windows operating system, ETERNUS SF Storage Cruiser component is installed.
2. From the Control Panel, open the [Programs and Features] screen.
3. Select ETERNUS SF Storage Cruiser component on "Add or Remove Programs" window.

The following is ETERNUS SF Storage Cruiser component and program name.

Component Name	Program Name
Manager	ETERNUS SF Manager
Agent	ETERNUS SF Storage Cruiser Agent

4. Confirm the version information, displayed in the [Programs and Features] screen.

C.2 Checking Product Version in Solaris OS

Check the product version according to the procedure shown below.

1. Logon to Solaris OS, ETERNUS SF Storage Cruiser component is installed.
The root (superuser) privileges are not required.
2. Perform the check version according to the command shown below.

- To check Manager version

```
# pkginfo -l FJSVssmge
```

- To check agent version

```
# pkginfo -l FJSVssage
```

3. The pkginfo command output that results from, VERSION verify information.

The version information is output in the form of "x.y.z" (x, y, and z are digit). Check the version of the Storage Cruiser components according to the following table.

Output String	Version of Storage Cruiser Components
16.10.0	16.9.1
Others	The x.y part of the x.y.z format is the version of the component. For example, if "16.9.0" is output, the version of the component is 16.9.

C.3 Checking Product Version in Linux

Check the product version according to the procedure shown below.

1. Logon to Linux, ETERNUS SF Storage Cruiser component is installed.
The root (superuser) privileges are not required.
2. Perform the check version according to the command shown below.

- To check Manager version

```
# rpm -qi FJSVssmge
```

- To check agent version

```
# rpm -qi FJSVssage
```

3. The rpm command output that results from, VERSION verify information.

The version information is output in the form of "x.y.z" (x, y, and z are digit). Check the version of the Storage Cruiser components according to the following table.

Output String	Version of Storage Cruiser Components
16.10.0	16.9.1
Others	The x.y part of the x.y.z format is the version of the component. For example, if "16.9.0" is output, the version of the component is 16.9.

Information

In the version of Agent, the Version information is output like "16.10.0_rh9". In this case, check the part before the underscore with the above table to determine the version.

C.4 Checking Product Version in HP-UX

Check the product version according to the procedure shown below.

In addition, HP-UX running on ETERNUS SF Storage Cruiser is the only component of the agent and explained to the agent.

1. Logon to HP-UX, ETERNUS SF Storage Cruiser component is installed.
The root (superuser) privileges are not required.
2. Perform the check version according to the command shown below.

```
# /usr/sbin/swlist | grep FJSVssage
```

3. The result of command execution, output is as follows.

```
# /usr/sbin/swlist | grep FJSVssage
FJSVssage      15.1.0      ETERNUS SF Storage Cruiser Agent
#
```

The version information is output in the second column.

Appendix D Operations Other Than Operations on Switches within System Managed on Storage Cruiser

This section explains the operation points in cases when managing the system configuration storage devices and servers including switches not supported by Storage Cruiser.

- Register all devices that are supported by Storage Cruiser in Storage Cruiser.
- There are limits to the capabilities that can be used with access path management. Refer to the following for details.

Access Path Management

Access Path Setting/Deletion/Inheritance

Login to the switch on the access path route and perform the setting/deletion/inheritance operation on the access path after setting or deleting the zoning information.

Access Path Status

The access path status cannot be managed on Storage Cruiser. Manage other management software. When checking the access path status with Web Console, the access path status is always "Warning".