



FUJITSU Storage ETERNUS SF Storage Cruiser V16.2

Operation Guide

B1FW-6007-03ENZO(02)
July 2015

Preface

Purpose

This manual describes the FUJITSU Storage ETERNUS SF Storage Cruiser used by the following products:

- FUJITSU Storage ETERNUS SF Express (hereafter abbreviated as "Express")
- FUJITSU Storage ETERNUS SF Storage Cruiser (hereafter abbreviated as "Storage Cruiser")
- FUJITSU Storage ETERNUS SF AdvancedCopy Manager (hereafter abbreviated as "AdvancedCopy Manager")

Intended Readers

The manual is intended for operations managers who use Storage Cruiser for storage management.

The procedure used for actual system configuration assumes that the reader knows the basic configuration procedure for the installation target server, storage units, and their network.

Organization

This manual is composed as follows:

Chapter 1 Overview

Explains the ETERNUS SF Storage Cruiser.

Chapter 2 Fault Monitoring

Explains how to detect errors occurring in the devices making up a storage system, the screen displayed for them, and how to respond to them.

Chapter 3 Operation Design

Explains LAN connections.

Chapter 4 Environment Configuration

Provides the settings and notes required for devices to be managed.

Chapter 5 Startup and Setting

Provides device definitions and operation flowcharts required for operating this product software.

Chapter 6 Operation

Explains how to use each view of the resource view and Correlation window.

Chapter 7 Performance Management

Explains performance management functions.

Chapter 8 Reporting Function

Explains reporting functions.

Chapter 9 Storage Cluster Function

Explains Storage Cluster functions.

Chapter 10 Maintenance of Devices to Be Managed

Explains the screen displayed at the occurrence of a device error and how to respond to it.

Chapter 11 Maintenance of Administrative Environment

Explains how to maintain databases and the troubleshooting required if a problem occurs.

Chapter 12 Linkage to Other Software

Explains how to link with other software.

[Chapter 13 Command References](#)

Explains how to use each command.

[Appendix A Customization](#)

Explains how to customize definition files.

[Appendix B Troubleshooting](#)

Explains basic troubleshooting and also provides information on where to find further help.

[Appendix C How to Check Product Version](#)

Explains how to check version of installed ETERNUS SF Storage Cruiser.

[Appendix D Operations Other Than Operations on Switches within System Managed on Storage Cruiser](#)

Explains the operation points in cases when managing the system configuration storage devices and servers including switches not supported by Storage Cruiser.

Notation

The names, abbreviations, and symbols shown below are used in this manual.

Operating Systems

| Formal Name | Abbreviation | |
|--|------------------------|---------|
| Microsoft(R) Windows Server(R) 2003, Standard Edition Microsoft(R) Windows Server(R) 2003, Standard x64 Edition Microsoft(R) Windows Server(R) 2003, Enterprise Edition Microsoft(R) Windows Server(R) 2003, Enterprise x64 Edition Microsoft(R) Windows Server(R) 2003 R2, Standard Edition Microsoft(R) Windows Server(R) 2003 R2, Standard x64 Edition Microsoft(R) Windows Server(R) 2003 R2, Enterprise Edition Microsoft(R) Windows Server(R) 2003 R2, Enterprise x64 Edition | Windows Server 2003 | Windows |
| Microsoft(R) Windows Server(R) 2008 Standard (32-bit)(64-bit) Microsoft(R) Windows Server(R) 2008 Standard without Hyper-V(TM) (32-bit)(64-bit) Microsoft(R) Windows Server(R) 2008 Enterprise (32-bit)(64-bit) Microsoft(R) Windows Server(R) 2008 Enterprise without Hyper-V(TM) (32-bit)(64-bit) Microsoft(R) Windows Server(R) 2008 Datacenter (32-bit)(64-bit) Microsoft(R) Windows Server(R) 2008 Datacenter without Hyper-V(TM) (32-bit)(64-bit) | Windows Server 2008 | |
| Microsoft(R) Windows Server(R) 2008 R2 Foundation Microsoft(R) Windows Server(R) 2008 R2 Standard Microsoft(R) Windows Server(R) 2008 R2 Enterprise Microsoft(R) Windows Server(R) 2008 R2 Datacenter | Windows Server 2008 R2 | |
| Microsoft(R) Windows Server(R) 2012 Standard Microsoft(R) Windows Server(R) 2012 Datacenter | Windows Server 2012 | |
| Microsoft(R) Windows Server(R) 2012 R2 Standard Microsoft(R) Windows Server(R) 2012 R2 Datacenter | Windows Server 2012 R2 | |
| Windows Vista(R) Home Basic Windows Vista(R) Home Premium Windows Vista(R) Business Windows Vista(R) Enterprise Windows Vista(R) Ultimate | Windows Vista | |
| Windows(R) 7 Home Basic Windows(R) 7 Home Premium Windows(R) 7 Professional | Windows 7 | |

| Formal Name | Abbreviation | |
|--|------------------------------------|--------------------------|
| Windows(R) 7 Enterprise Windows(R) 7 Ultimate | | |
| Windows(R) 8 Windows(R) 8 Pro | Windows 8 | |
| Windows(R) 8.1 Windows(R) 8.1 Pro | Windows 8.1 | |
| Solaris(TM) 9 Operating System | Solaris 9 | Solaris or Solaris OS |
| Oracle Solaris 10 | Solaris 10 | |
| Oracle Solaris 11 | Solaris 11 | |
| Red Hat(R) Enterprise Linux(R) 5 (for x86) Red Hat(R) Enterprise Linux(R) 5 (for Intel64) | RHEL5 | Linux |
| Red Hat(R) Enterprise Linux(R) 6 (for x86) Red Hat(R) Enterprise Linux(R) 6 (for Intel64) | RHEL6 | |
| Red Hat(R) Enterprise Linux(R) 7 (for Intel64) | RHEL7 | |
| SUSE(R) Linux Enterprise Server 11 for x86 SUSE(R) Linux Enterprise Server 11 for EM64T | SUSE Linux Enterprise Server 11 | |
| HP-UX 11i v1 HP-UX 11i v2 HP-UX 11i v3 | HP-UX | |
| AIX(R) V6.1 AIX(R) V7.1 | AIX | |
| VMware vSphere(R) 4 | VMware vSphere 4 | VMware |
| VMware vSphere(R) 5 | VMware vSphere 5 | |
| VMware vSphere(R) 6 | VMware vSphere 6 | |

Oracle Solaris might be described as Solaris, Solaris Operating System, or Solaris OS.

FUJITSU Storage ETERNUS

| Formal Name | Abbreviation | |
|---|--------------------------|---|
| FUJITSU Storage ETERNUS DX60 FUJITSU Storage ETERNUS DX80 FUJITSU Storage ETERNUS DX90 | - | - |
| FUJITSU Storage ETERNUS DX410 FUJITSU Storage ETERNUS DX440 | ETERNUS DX400 series | ETERNUS DX series or ETERNUS Disk storage system |
| FUJITSU Storage ETERNUS DX8100 FUJITSU Storage ETERNUS DX8400 FUJITSU Storage ETERNUS DX8700 | ETERNUS DX8000 series | |
| FUJITSU Storage ETERNUS DX60 S2 FUJITSU Storage ETERNUS DX80 S2 FUJITSU Storage ETERNUS DX90 S2 | - | |
| FUJITSU Storage ETERNUS DX410 S2 FUJITSU Storage ETERNUS DX440 S2 | ETERNUS DX400 S2 series | |
| FUJITSU Storage ETERNUS DX8100 S2 FUJITSU Storage ETERNUS DX8700 S2 | ETERNUS DX8000 S2 series | |

| Formal Name | Abbreviation | |
|--|--------------------------|----------------------|
| FUJITSU Storage ETERNUS DX60 S3 FUJITSU Storage ETERNUS DX100 S3 FUJITSU Storage ETERNUS DX200 S3 | - | ETERNUS DX S3 series |
| FUJITSU Storage ETERNUS DX500 S3 FUJITSU Storage ETERNUS DX600 S3 | - | |
| FUJITSU Storage ETERNUS DX8700 S3 FUJITSU Storage ETERNUS DX8900 S3 | ETERNUS DX8000 S3 series | |
| FUJITSU Storage ETERNUS DX200F | - | |
| FUJITSU Storage ETERNUS LT20/LT20 S2 FUJITSU Storage ETERNUS LT40/LT40 S2 FUJITSU Storage ETERNUS LT60/LT60 S2 FUJITSU Storage ETERNUS LT200 FUJITSU Storage ETERNUS LT210 FUJITSU Storage ETERNUS LT220 FUJITSU Storage ETERNUS LT230 FUJITSU Storage ETERNUS LT250 FUJITSU Storage ETERNUS LT260 FUJITSU Storage ETERNUS LT270/LT270 S2 | ETERNUS Tape library | |
| FUJITSU Storage ETERNUS Multipath Driver | ETERNUS Multipath Driver | |

Each individual device name in this document is listed with "FUJITSU Storage" omitted from it.

NetApp FAS Series and V-Series are abbreviated as follows.

| Firmware Version | String Included in Firmware Name | Abbreviation |
|----------------------------------|----------------------------------|--|
| Data ONTAP 6.x Data ONTAP 7.x | (Any string) | NetApp FAS Series NetApp V-Series |
| Data ONTAP 8 - 8.2.x | 7-Mode | |
| Data ONTAP 8 - 8.2.x | Cluster-Mode | NetApp FAS Series (with clustered Data ONTAP) NetApp V-Series (with clustered Data ONTAP) |
| Data ONTAP 8.3 or later | (Any string) | |

Software Products

| Formal Name | Abbreviation |
|--|---|
| Windows(R) Internet Explorer(R) | Internet Explorer |
| Mozilla(R) Firefox(R) | Firefox |
| Microsoft(R) Cluster Service | MSCS |
| Microsoft(R) Windows Server(R) Failover Clustering | WSFC |
| Microsoft(R) Exchange Server | Exchange Server |
| Microsoft(R) SQL Server(R) | SQL Server |
| VMware(R) ESX(R) | VMware ESX |
| VMware(R) ESXi(TM) | VMware ESXi |
| VMware(R) vCenter(TM) Server | VMware vCenter Server or vCenter Server |
| FUJITSU Software PRIMECLUSTER Global Disk Services | GDS |
| FUJITSU Software PRIMECLUSTER Global File Services | GFS |

| Formal Name | Abbreviation |
|---|--|
| Trend Micro Storage Security for FUJITSU Storage ETERNUS DX100 S3 | Trend Micro Storage Security for FUJITSU Storage ETERNUS DX S3 series or TMSS for ETERNUS DX S3 series |
| Trend Micro Storage Security for FUJITSU Storage ETERNUS DX200 S3 | |
| Trend Micro Storage Security for FUJITSU Storage ETERNUS DX500 S3 | |
| Trend Micro Storage Security for FUJITSU Storage ETERNUS DX600 S3 | |

Manuals

| Formal Name | Abbreviation |
|--|---|
| FUJITSU Storage ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Quick Reference | ETERNUS SF Quick Reference |
| FUJITSU Storage ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Release Notes | ETERNUS SF Release Notes |
| FUJITSU Storage ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Installation and Setup Guide | ETERNUS SF Installation and Setup Guide |
| FUJITSU Storage ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Migration Guide | ETERNUS SF Migration Guide |
| FUJITSU Storage ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Web Console Guide | ETERNUS SF Web Console Guide |
| FUJITSU Storage ETERNUS SF Storage Cruiser / AdvancedCopy Manager Cluster Environment Setup Guide | ETERNUS SF Cluster Environment Setup Guide |
| FUJITSU Storage ETERNUS SF Storage Cruiser / AdvancedCopy Manager Operation Guide for VMware vSphere Virtual Volumes | ETERNUS SF Operation Guide for VMware vSphere Virtual Volumes |
| FUJITSU Storage ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Messages | ETERNUS SF Messages |
| FUJITSU Storage ETERNUS SF Express / Storage Cruiser Event Guide | ETERNUS SF Event Guide |
| FUJITSU Storage ETERNUS SF Express / Storage Cruiser / AdvancedCopy Manager Glossary | ETERNUS SF Glossary |

Besides the above-mentioned, each individual manual name in this document is listed with "FUJITSU Storage" omitted from it.

Others

- "Fibre Channel switch" includes "Converged Switch".
- ETERNUS SF Web Console is abbreviated as "Web Console".
- Quality of Service is abbreviated as "QoS".
- It is described when showing bringing the following products together as "Windows Server 2012".
 - Windows Server 2012
 - Windows Server 2012 R2
- In this document, unless there is a special explanatory note, ETERNUS Disk storage system includes ETERNUS DX200F All Flash Arrays.
However, the following functions are not supported in ETERNUS DX200F All Flash Arrays:
 - Energy saving operation for storage device
 - NAS operation for storage device
 - Automated Storage Tiering operation at multiple tiers (two or more)

Export Controls

Exportation/release of this document may require necessary procedures in accordance with the regulations of your resident country and/or US export control laws.

Trademarks

- Microsoft, Windows, Windows Server, Windows Vista and Internet Explorer are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.
- UNIX is a registered trademark of The Open Group in the United States and other countries.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.
- Linux is a registered trademark of Linus Torvalds.
- Red Hat and RPM are registered trademarks of Red Hat, Inc. in the U.S. and other countries.
- SUSE is a registered trademark of Novell, Inc., in the United States and other countries.
- HP-UX is a trademark of Hewlett-Packard Company in the United States and other countries.
- AIX is a trademark or a registered trademark of International Business Machines Corporation in the United States and other countries.
- VMware, VMware logo, Virtual SMP, and vMotion are the registered trademarks or trademarks of VMware, Inc. in the United States and other countries.
- Trend Micro, Trend Micro Storage Security are the registered trademarks or trademarks of Trend Micro, Inc. in the United States and other countries.
- All other brand and product names are trademarks or registered trademarks of their respective owners.

Shipment Date and Revision History

| Shipment Date | Revision | Document Part Number | |
|---------------|----------|----------------------|----------------------|
| | | PDF | HTML |
| December 2013 | 1 | B1FW-6007-01ENZ0(00) | B1FW-6007-01ENZ2(00) |
| March 2014 | 1.1 | B1FW-6007-01ENZ0(01) | B1FW-6007-01ENZ2(01) |
| April 2014 | 1.2 | B1FW-6007-01ENZ0(02) | B1FW-6007-01ENZ2(02) |
| May 2014 | 1.3 | B1FW-6007-01ENZ0(03) | B1FW-6007-01ENZ2(03) |
| June 2014 | 2 | B1FW-6007-02ENZ0(00) | B1FW-6007-02ENZ2(00) |
| July 2014 | 2.1 | B1FW-6007-02ENZ0(01) | B1FW-6007-02ENZ2(01) |
| January 2015 | 3 | B1FW-6007-03ENZ0(00) | B1FW-6007-03ENZ2(00) |
| March 2015 | 3.1 | B1FW-6007-03ENZ0(01) | B1FW-6007-03ENZ2(01) |
| July 2015 | 3.2 | B1FW-6007-03ENZ0(02) | B1FW-6007-03ENZ2(02) |

Notes

- No part of this manual may be reproduced without permission.
- This manual is subject to change without advance notice.

Copyright

Copyright 2013-2015 FUJITSU LIMITED

Update History

| Content of Update | Updated Section | Revision |
|--|--|----------|
| Notes when creating a NAS interface are added. | 6.6.3.2 | 1.1 |
| Notes when setting up an authentication server are added. | 6.6.3.3 | |
| The access method by CIFS protocol is changed. | 6.6.4 | |
| Operating environment is changed. | 6.6.1.3 | 1.2 |
| The information related to ETERNUS DX200F is described. | "Others" in Preface, 1.2.5, 6.6, 6.6.1.3, 7.1.1, 13.1.1.6, 13.1.2 | 1.3 |
| Storage Cluster function is added. | 1.1, 1.2, 1.3, 3.1.1, 4.1.2, Chapter 9, 10.2.2, 10.2.6, 12.2.4, A.1, A.6, A.12 | 2 |
| Description of Eco Mode is modified. | 1.2.5, 6.1.6, 7.1.1, 12.1.1.7, 12.1.2.2 | |
| Port number used for Manager communication is changed. | 3.1.1 | |
| SSH login is added. | 3.1.1, 4.2.1.1, 4.2.1.3, 4.2.3.3, 5.2.2, 6.2.6, 10.2.4 | |
| Zoning setting example is deleted. | 4.2.1.2 | |
| Zoning setting is modified. | 4.2.5.1 | |
| Action (FAQ) is added. | 4.2.5.3 | |
| Description of invalid password status of ETERNUS system is deleted. | 4.3.1.1, 13.1.1.4, 13.1.1.5, 13.1.1.7, 13.1.2 | |
| Operating systems to be searched with IPv4 address alone are specified. | 5.2.1 | |
| Notes when deleting devices are added. | 5.2.3 | |
| Notes are added. | 6.1.2, 6.1.3, 6.1.5 | |
| Considerations are added. | 6.2.3.1 | |
| Capacity management of Tier pool is added. | 6.5, A.8 | |
| Function is added to the NAS management. | 6.6 | |
| "RAID6-FR" is added to type of RAIDGroup. | 8.4 | |
| Target devices are added to replacement of fibre channel switch devices. | 10.2.4 | |
| Backup/restore procedure of Manager for Windows/Solaris in cluster environment is changed. | 11.1.1.2.2, 11.1.1.2.6, 11.1.1.3.2, 11.1.1.3.6 | |
| Backup/restore of Windows Manager are deleted. | 11.1.1.2.5, 11.1.1.3.5 | |
| Method to change port numbers of Management Server/Server node is added. | 11.1.2.5, 11.2.3.2, 11.3.3.2, 11.4.2.2, 11.5.2.2 | |
| Error in command name is corrected. | 13.1.1.1 | |
| Command output result is added. | 13.1.1.4 | |
| Examples in Solaris/Linux environments are changed. | 13.1.1.6, 13.1.1.9 | |
| Description when -dir option is omitted in Solaris environment is changed. | 13.2.3 | |
| Notes when collecting troubleshooting information in a cluster configuration system are added. | B.1 | |

| Content of Update | Updated Section | Revision |
|--|--|----------|
| Note is added. | 6.6 | 2.1 |
| The number of NAS volumes and NAS backup volumes creatable on one ETERNUS Disk storage system is changed. | 6.6.1.2.1 | |
| Note is added when data inconsistency is found in a snapshot. | 6.6.1.3.1, 6.6.4.12 | |
| Point is added to "NAS Environment Quota Management". | 6.6.1.4.1 | |
| Point is added to "Events Notified by Quota Management". | 6.6.1.4.2 | |
| Note is added to "Registration of User/Group". | 6.6.2.2 | |
| Note when using quota management function and snapshot function is added. | 6.6.2.4, 6.6.3.1, 6.6.4.10, 6.6.4.15 | |
| "NAS Volume Number to Which to Create Shared Folder" is added. Method for specifying time to collect snapshots is added. | 6.6.3.1 | |
| Suffix of volume name is changed. The limit to the number of volume name characters is deleted. | 6.6.3.1, 6.6.4.9 | |
| Mode number is added. Point is added to "Port Bonding". Note is added to "NAS Interface (Network)". Note is added to "VLAN ID". | 6.6.3.2 | |
| Point is added to "Removing Authentication Server". | 6.6.4.21 | |
| Antivirus server is added. | "Software Products" in Preface | 3 |
| Information related to the ETERNUS DX200F is modified or added. | "Others" in Preface, 1.2.6 to 1.2.8, 3.1, 3.2, 4.3.1, 4.3.1.1, 4.3.1.2, 5.2.1, 5.2.2, 5.3, 6.1.5, 6.2.1, 6.2.3, 6.2.3.1, 6.6.1.5, 7.1.1, 7.2.3, 8.2, 11.1.2.9, 12.1.4.2, 12.1.4.3, 13.1.1.5, 13.1.1.6, 13.1.2, 13.1.2.2 to 13.1.2.4, 13.1.2.7, A.5 | |
| Information related to ETERNUS DX60 S3 is described. | "Notation" in Preface, 1.2.5, 1.2.6, 3.1.1, 4.3.1.1, 4.3.1.2, 5.2.1, 5.2.2, 6.1.5, 6.2.3.1, 7.1.1, 7.2.3, 8.2, 13.1.1.5, 13.1.1.6, 13.1.2, 13.1.2.2 to 13.1.2.4, 13.1.2.7, A.5 | |
| Information related to the ETERNUS LT260 is added. | "Notation" in Preface, 1.2.9, 4.7.2, 12.1.4.2, A.5 | |
| An explanation of VMware Virtual Volumes is added. | 1.1, 1.2.8, 4.1.7.1, 6.2.1, 11.1.1.3.3~11.1.1.3.4, 13.1.1.4, 13.1.1.9, 13.1.2.3 | |
| The information related to Red Hat(R) Enterprise Linux(R) AS v.4 and Red Hat(R) Enterprise Linux(R) ES v.4 is deleted. | 3.2, 5.2.1 | |
| The information related to Red Hat(R) Enterprise Linux(R) 7 is added. | 3.2, 13.3.3.1, A.10 | |
| An explanation of the switch management is added. | 3.3, 4.2.1.1, 4.2.3.1, 4.2.5.1, 5.2.2, Appendix E | |

| Content of Update | Updated Section | Revision |
|--|--|----------|
| The description related to the community setting in SNMP (Agent) environment settings is modified. | 4.3.1.1 | |
| An operation is added to resource management. | 6.1.2, 6.1.3, 6.1.9, 13.1.2.2, 13.1.2.3, 13.1.2.4, 13.1.2.6 | |
| Notes on the host group and the port group are added. | 6.2.1 | |
| Start/stop of Tier pool balancing is added. | 6.5.1.4, 6.5.1.5 | |
| Antivirus are added to the NAS environment. | 6.6.1.1.2, 6.6.1.5, 6.6.1.6, 6.6.2.4, 6.6.4.18, 6.6.4.19, 6.6.4.20, 6.6.4.24 | |
| Performance management is added to NAS volume and NAS system. | 6.6.1.1.2, 6.6.4.21, 7.1.1, 7.2.6.6, 13.1.1.6 | |
| "Copy Table Size Settings" is added. | 6.6.2.5 | |
| The SMB encryption of the data access and the enumeration based on the access permission setting is added. | 6.6.3.1, 6.6.4.2 | |
| "Access Using NFS Protocol" is changed. | 6.6.4.1 | |
| Note on the "Deleting Shared Folder" is added. | 6.6.4.24 | |
| Table in case of ETERNUS Disk storage system is adjusted. | 7.1.1 | |
| Attention regarding display of performance information is changed. | 7.1.1 | |
| The description related to the method of selecting the scope of monitoring volumes is added. | 7.2.2, 7.2.9 | |
| "Failover mode" is added. Input conditions for TFO Group name are described. The conditions for the REC Path interface type are described. | 9.2 | |
| Operation of the Storage Cluster function is added. | 9.2, 9.4.1, 9.4.2.1, 9.4.2.2, 9.4.2.4, 9.4.2.6 | |
| Description of the Storage Cluster function is corrected. | 9.4.1, 9.4.2.1, 9.4.2.6, 9.4.3 | |
| Procedure for confirming settings when allocating the business volume is corrected. Reference to access state data synchronizing is added. | 9.4.2.1 | |
| The description related to backup/restoring of Storage Cruiser's manager is modified. | 11.1.1.2.1, 11.1.1.2.5, 11.1.1.3.1, 11.1.1.3.3 | |
| The explanative article on the -ipaddr option of the setagtip command is changed. | 13.2.1 | |
| The example of outputting VERSION verify information is changed. | C.2, C.3 | |
| The term "VMware Virtual Volumes" is changed to "VMware vSphere Virtual Volumes" according to the terms used by VMware, Inc. | Throughout this manual | 3.1 |
| Information related to VMware vSphere(R) 6 is added. | "Notation" in Preface | |
| The explanation of "VMware Server Node" is added. | 4.1.7 | |
| The method to deal with changed environment is modified. | 4.1.7.2 | |
| The description of access paths that should be removed separately is added. | 5.2.3 | |
| The description of devices targeted for encryption is deleted. | 6.1.2 | |
| "Encryption Mode Management" is added. | 6.1.9 | |
| "Virtual Machine Management" is added. | 6.1.10 | |

| Content of Update | Updated Section | Revision |
|---|--|----------|
| The explanation of VMware vSphere Virtual Volumes Environment Access Path is modified. | 6.2.1 | |
| The explanation of a VVOL metadata stored volume is added. | 7.1, 7.2.2 | |
| Note is modified. | 7.2.2 | |
| Procedure for backup/restoring of Storage Cruiser's manager is modified. | 11.1.1.2.1, 11.1.1.2.3, 11.1.1.3.1, 11.1.1.3.3, 11.1.1.3.4 | |
| Note is added. | A.4 | |
| Information related to ETERNUS DX8700 S3/DX8900 S3 is added. | "Notation" in Preface, 1.2.5, 3.1.1, 7.1.1, 7.2.3, 13.1.1.5, 13.1.1.6, 13.1.2.2, 13.1.2.7, Appendix A | 3.2 |
| Information related to NetApp FAS Series and V-Series is added. | "Notation" in Preface, 1.2.9, 4.4, 5.2.6, 10.1, 12.1.4.2, 13.1.2.9, A.5 | |
| The explanation of the Tier pool setting is modified. | 6.5.1 | |
| The description of the upper limit of Tier pools that can be managed by Automated Storage Tiering is added. | 6.5.5 | |
| Method to identify CM or CM CPU of ETERNUS Disk storage system from performance information collected by Systemwalker Service Quality Coordinator is described. | 12.2 | |

Manual Organization and Reading Suggestions

Manual Organization

The following table describes the Manual organization of Express, Storage Cruiser and AdvancedCopy Manager.

| When to Read | Related Manuals (Abbreviated) | Related Products (*1) | | | Explanation |
|---------------------|---------------------------------|-----------------------|-----|-----|--|
| | | EXP | SC | ACM | |
| Before installation | Quick Reference | Yes | Yes | Yes | This manual is common for all products. |
| | Release Notes | Yes | Yes | Yes | This manual is common for all products. |
| | Overview | - | - | Yes | This manual is unique for the product. |
| During installation | Installation and Setup Guide | Yes | Yes | Yes | This manual is common for all products. |
| | Cluster Environment Setup Guide | - | Yes | Yes | This manual is common for Storage Cruiser and AdvancedCopy Manager. |
| | Migration Guide | Yes | Yes | Yes | This manual is common for all products. |
| During operation | Operation Guide | Yes | Yes | Yes | This manual is unique for each product. The following manuals are available: <ul style="list-style-type: none"> - Express Operation Guide - Storage Cruiser Operation Guide - Storage Cruiser Operation Guide for Optimization Function |

| When to Read | Related Manuals (Abbreviated) | Related Products (*1) | | | Explanation |
|--------------|-------------------------------|-----------------------|-----|-----|---|
| | | EXP | SC | ACM | |
| | | | | | <ul style="list-style-type: none"> - AdvancedCopy Manager Operation Guide (for Windows) - AdvancedCopy Manager Operation Guide (for Solaris) - AdvancedCopy Manager Operation Guide (for Linux) - AdvancedCopy Manager Operation Guide (for HP-UX) - AdvancedCopy Manager Operation Guide (for AIX) - AdvancedCopy Manager Operation Guide for Copy Control Module - Storage Cruiser / AdvancedCopy Manager Operation Guide for VMware vSphere Virtual Volumes |
| | Web Console Guide | Yes | Yes | Yes | This manual is common for all products. |
| Anytime | Event Guide | Yes | Yes | - | This manual is common for Express and Storage Cruiser. |
| | Messages | Yes | Yes | Yes | This manual is common for all products. |
| | Glossary | Yes | Yes | Yes | This manual is common for all products. |

*1: "EXP" indicates Express, "SC" indicates Storage Cruiser and "ACM" indicates AdvancedCopy Manager.

How to Read Manuals

Please use the following table to find the most useful information in the Express, Storage Cruiser and AdvancedCopy Manager manuals to answer your inquiry.

| Purpose | Manual | Main Contents | How to Read |
|--|-------------------------------|--|--|
| Acquiring a product overview and basic operation knowledge | Quick Reference | <ul style="list-style-type: none"> - Product overview - Installation decision - Overview of the necessary tasks from installation to first use | Please read if you want to acquire a fundamental knowledge of the product and its operation in order to decide to install it or not. |
| | AdvancedCopy Manager Overview | <ul style="list-style-type: none"> - Main functions - Linkable applications - Procedure overview for Advanced Copy of ETERNUS Disk storage system | |
| Confirming the updated contents | Release Notes | <ul style="list-style-type: none"> - New function overview - Incompatibilities with previous version - Fixed bugs | Please read if you want to know the updated contents from a previous version and if you perform the upgrade. |

| Purpose | Manual | Main Contents | How to Read |
|---|--|--|---|
| Deciding if a version upgrade is required | Migration Guide | <ul style="list-style-type: none"> - Notes and cautions about version upgrade - Version upgrade procedure | Please read if you want to upgrade from a previous version. |
| Installing and correctly operating the product Setting up operating environment depending on purpose | Installation and Setup Guide | <ul style="list-style-type: none"> - Operating environment - Installation procedure - Setup procedure - Uninstallation procedure | Please read if you want to install and setup the product. |
| | Cluster Environment Setup Guide | <ul style="list-style-type: none"> - Supported cluster software - Installation procedure for a clustered system - Setup procedure for a clustered system - Uninstallation procedure for a clustered system | Please read if you want to install and setup the product on a clustered system. |
| Administration and operation of the installed system | Express Operation Guide | <ul style="list-style-type: none"> - Starting and stopping the software - Device monitoring - Data copy inside the storage system - Necessary tasks after an architectural modification of the system as well as product maintenance | Please read if you want to start or shutdown the system, monitor the operation status, do backup/restore operations, etc. |
| | Storage Cruiser Operation Guide | <ul style="list-style-type: none"> - Starting and stopping the software - Device monitoring - Necessary tasks after an architectural modification of the system as well as product maintenance - Command reference | |
| | Storage Cruiser Operation Guide for Optimization Function | <ul style="list-style-type: none"> - Operating environment construction - Operating status monitoring - Necessary tasks after an architectural modification of the system as well as product maintenance - Command reference | |
| | AdvancedCopy Manager Operation Guide (for Windows) AdvancedCopy Manager Operation Guide (for Solaris) | <ul style="list-style-type: none"> - Starting and stopping the software - Data backup/restore inside the storage system | |

| Purpose | Manual | Main Contents | How to Read |
|---|---|---|---|
| | AdvancedCopy Manager Operation Guide (for Linux) | <ul style="list-style-type: none"> - Necessary tasks after an architectural modification of the system as well as product maintenance - Command reference | |
| | AdvancedCopy Manager Operation Guide (for HP-UX) | | |
| | AdvancedCopy Manager Operation Guide (for AIX) | | |
| | AdvancedCopy Manager Operation Guide for Copy Control Module | | |
| | Storage Cruiser / AdvancedCopy Manager Operation Guide for VMware vSphere Virtual Volumes | <ul style="list-style-type: none"> - Operating environment construction - Virtual machine operation using a virtual volume - Backup/restore of the virtual machine - Necessary tasks after an architectural modification of the system as well as product maintenance | |
| | Web Console Guide | <ul style="list-style-type: none"> - Operating environment - Screen layout description | Please read if you want to understand the ETERNUS SF Web Console. |
| Dealing with messages issued by the software | Messages | <ul style="list-style-type: none"> - Messages and their explanations - Parameter (variable information) description - System action - Countermeasures | Please read if you want a practical way of investigating and dealing with messages issued by the software. |
| Dealing with events issued by the software | Event Guide | <ul style="list-style-type: none"> - Phenomenon of event - Countermeasures | Please read if you need to find a practical way of investigating and dealing with events. |
| Researching the meaning of specific terms related to the products and other important terms | Glossary | <ul style="list-style-type: none"> - Product specific terminology explanation - Explanation of important terminology appearing in the manual - Synonyms and related terms - Proper form of abbreviated terms | Please read if you want to learn the meaning of important terms, product specific terms or abbreviations used in the manuals. |

Contents

| | |
|--|----|
| Chapter 1 Overview..... | 1 |
| 1.1 Product Features..... | 1 |
| 1.2 Summary of Each Function..... | 2 |
| 1.2.1 Configuration Management..... | 2 |
| 1.2.2 Fault Management..... | 2 |
| 1.2.3 Performance Management..... | 3 |
| 1.2.4 Reporting Function..... | 3 |
| 1.2.5 Energy-saving Operation for Storage Device..... | 7 |
| 1.2.6 Storage Capacity Virtualization Operation..... | 9 |
| 1.2.7 Storage Cluster Function..... | 10 |
| 1.2.8 Support for VMware vSphere Virtual Volumes Function..... | 10 |
| 1.2.9 Support Levels..... | 11 |
| 1.3 Storage Cruiser Configuration..... | 13 |
| Chapter 2 Fault Monitoring..... | 15 |
| 2.1 Receiving SNMP Traps..... | 15 |
| 2.2 Analyzing SNMP Traps..... | 16 |
| 2.3 Device Polling..... | 17 |
| 2.4 Setting Event Levels..... | 18 |
| Chapter 3 Operation Design..... | 19 |
| 3.1 LAN Connections..... | 19 |
| 3.1.1 Network Requirements..... | 19 |
| 3.1.2 SNMP Community..... | 20 |
| 3.2 Server Node Middleware for Which Management Is Possible..... | 21 |
| 3.3 Switch Management..... | 22 |
| 3.3.1 Support Level A and B for Switch Management..... | 22 |
| Chapter 4 Environment Configuration..... | 24 |
| 4.1 Server Node..... | 24 |
| 4.1.1 Solaris OS Server Node..... | 24 |
| 4.1.1.1 SNIA HBA API Library Settings..... | 24 |
| 4.1.1.2 N-port Settings..... | 24 |
| 4.1.2 Windows Server Node..... | 25 |
| 4.1.2.1 SNIA HBA API Library Settings..... | 25 |
| 4.1.2.2 N-port Settings..... | 25 |
| 4.1.3 Linux Server Node..... | 26 |
| 4.1.3.1 SNIA HBA API Library Settings..... | 26 |
| 4.1.3.2 Using udev Device..... | 27 |
| 4.1.4 HP-UX Server Node..... | 27 |
| 4.1.5 AIX Server Node..... | 28 |
| 4.1.6 Other Server Nodes (Supported OS or Solaris OS/Windows/Linux/HP-UX/AIX without Agent)..... | 28 |
| 4.1.7 VMware Server Node..... | 29 |
| 4.1.7.1 Setting..... | 29 |
| 4.1.7.2 Problem-handling (FAQ)..... | 29 |
| 4.2 Fibre Channel Switch..... | 30 |
| 4.2.1 SN200 (Brocade) Fibre Channel Switch..... | 30 |
| 4.2.1.1 Setting..... | 30 |
| 4.2.1.2 Zoning..... | 32 |
| 4.2.1.3 Problem-handling (FAQ)..... | 33 |
| 4.2.2 PRIMERGY Fibre Channel Switch Blade..... | 35 |
| 4.2.3 Brocade VDX Series..... | 35 |

| | |
|--|----|
| 4.2.3.1 Setting..... | 36 |
| 4.2.3.2 Zoning..... | 37 |
| 4.2.3.3 Problem-handling (FAQ)..... | 38 |
| 4.2.4 PRIMERGY BX Ethernet Fabric Switch..... | 39 |
| 4.3 Disk Array and All Flash Arrays..... | 40 |
| 4.3.1 ETERNUS DX Series, ETERNUS DX200F..... | 40 |
| 4.3.1.1 Setting..... | 40 |
| 4.3.1.2 Problem-handling (FAQ)..... | 42 |
| 4.4 NetApp FAS Series, FAS Series (with clustered Data ONTAP), V-Series, and V-Series (with clustered Data ONTAP) Network Disk Storage System..... | 43 |
| 4.5 ETERNUS VS850 Virtualization Storage..... | 44 |
| 4.6 ETERNUS CS800 De-dupe Appliance..... | 44 |
| 4.7 Tape Library Device..... | 45 |
| 4.7.1 Tape Library Device ETERNUS LT250/LT270..... | 45 |
| 4.7.2 Tape Library Device ETERNUS LT20/LT20 S2/LT40/LT40 S2/LT60/LT60 S2/LT200/LT210/LT220/LT230/LT260/LT270 S2..... | 45 |
| 4.7.3 Virtual Tape Appliance ETERNUS CS2000..... | 46 |
| Chapter 5 Startup and Setting..... | 47 |
| 5.1 Opening and Closing..... | 47 |
| 5.2 Registering Device..... | 47 |
| 5.2.1 Device Search..... | 47 |
| 5.2.2 Registering Device..... | 49 |
| 5.2.3 Deletion..... | 51 |
| 5.2.4 Function for Setting Event Notification Destinations..... | 52 |
| 5.2.5 SNMP Trap Transmission Place Automatic Setting Function..... | 52 |
| 5.2.6 Registering Manually Embedded Device..... | 53 |
| 5.3 Checking Management Status..... | 53 |
| Chapter 6 Operation..... | 56 |
| 6.1 Resource Management..... | 56 |
| 6.1.1 RAID Group Management..... | 56 |
| 6.1.2 Volume Management..... | 56 |
| 6.1.3 Thin Provisioning Management..... | 57 |
| 6.1.4 Advanced Copy Management..... | 57 |
| 6.1.5 Connectivity Management..... | 57 |
| 6.1.6 How to Control Eco-mode..... | 59 |
| 6.1.7 End to End List Display..... | 59 |
| 6.1.8 Extreme Cache Management..... | 62 |
| 6.1.9 Encryption Mode Management..... | 62 |
| 6.1.10 Virtual Machine Management..... | 62 |
| 6.2 Access Path Management..... | 63 |
| 6.2.1 What Is Access Path?..... | 63 |
| 6.2.2 Access Path Display (Display of Logical Relationship Between Server Node and Storage Systems)..... | 64 |
| 6.2.2.1 Access Path Status Display..... | 65 |
| 6.2.3 Access Path Setting..... | 66 |
| 6.2.3.1 Preparations..... | 68 |
| 6.2.3.2 Setting..... | 69 |
| 6.2.4 Deleting Access Path..... | 72 |
| 6.2.4.1 Preparations..... | 72 |
| 6.2.4.2 Setting..... | 72 |
| 6.2.5 Access Path Inheritance..... | 74 |
| 6.2.6 Managing Fibre Channel Switch That Has Already Set in Port Zoning..... | 74 |
| 6.3 Event Display and Linkage..... | 75 |
| 6.4 Thin Provisioning Management..... | 78 |

| | |
|--|-----|
| 6.4.1 Threshold Monitoring..... | 78 |
| 6.4.2 Capacity Management..... | 79 |
| 6.4.2.1 Capacity Graph Window Types..... | 79 |
| 6.5 Automated Storage Tiering Management..... | 79 |
| 6.5.1 Configure One Layer Tier Pool..... | 80 |
| 6.5.1.1 Create One Layer Tier Pool..... | 81 |
| 6.5.1.2 Change One Layer Tier Pool..... | 81 |
| 6.5.1.3 Delete One Layer Tier Pool..... | 82 |
| 6.5.1.4 Expand Sub-Pool Capacity in One Layer Tier Pool..... | 82 |
| 6.5.1.5 Balancing of One Layer Tier Pool..... | 82 |
| 6.5.2 Capacity Management of One Layer Tier Pool..... | 84 |
| 6.5.2.1 Type of Capacity Graph..... | 84 |
| 6.5.3 Configure FTV..... | 84 |
| 6.5.3.1 Create FTV..... | 85 |
| 6.5.3.2 Change FTV..... | 85 |
| 6.5.3.3 Format FTV..... | 85 |
| 6.5.3.4 Delete FTV..... | 85 |
| 6.5.4 Measures to Be Taken When Tier Pool Configuration Has Been Changed with Managed Devices..... | 85 |
| 6.5.5 Change to Multiple Layer Tier Pool..... | 86 |
| 6.6 NAS Management..... | 86 |
| 6.6.1 Overview of Functions..... | 86 |
| 6.6.1.1 About NAS Management..... | 86 |
| 6.6.1.1.1 Basic System Configuration..... | 87 |
| 6.6.1.1.2 Support Features..... | 88 |
| 6.6.1.1.3 Configuration Items of NAS File System..... | 89 |
| 6.6.1.2 Backup of NAS Environment..... | 91 |
| 6.6.1.2.1 Backup/Restoration of NAS Volume..... | 92 |
| 6.6.1.2.2 Mounting/Unmounting NAS Backup Volume..... | 93 |
| 6.6.1.3 NAS Environment Snapshot..... | 93 |
| 6.6.1.3.1 NAS Snapshot..... | 93 |
| 6.6.1.3.2 Snapshot Capture Stop/Start..... | 95 |
| 6.6.1.4 About NAS Environment Quota Management..... | 95 |
| 6.6.1.4.1 NAS Environment Quota Management..... | 95 |
| 6.6.1.4.2 Events Notified by Quota Management..... | 96 |
| 6.6.1.5 About Antivirus for NAS Environment..... | 97 |
| 6.6.1.5.1 Antivirus for NAS Environment..... | 97 |
| 6.6.1.5.2 Event Notified by Antivirus..... | 99 |
| 6.6.1.6 Operating Environment..... | 99 |
| 6.6.2 Required Setup Configuration..... | 100 |
| 6.6.2.1 ETERNUS Disk Storage System Configuration..... | 100 |
| 6.6.2.2 Authentication Server Setup..... | 100 |
| 6.6.2.3 Prior Configuration of DNS Server..... | 101 |
| 6.6.2.4 Pre-configuration of Antivirus Server..... | 101 |
| 6.6.2.5 Prior Configuration of Operation Management Server..... | 101 |
| 6.6.3 Installation Steps..... | 104 |
| 6.6.3.1 Creating Shared Folder..... | 104 |
| 6.6.3.2 Creating NAS Interface..... | 109 |
| 6.6.3.3 NAS File System Environment Settings..... | 112 |
| 6.6.4 Operation Method..... | 113 |
| 6.6.4.1 Access to Shared Folder..... | 113 |
| 6.6.4.2 Changing Shared Folder..... | 115 |
| 6.6.4.3 Changing NAS Interface..... | 115 |
| 6.6.4.4 Changing NAS Server Name..... | 116 |

| | |
|--|-----|
| 6.6.4.5 Changing DNS Server..... | 116 |
| 6.6.4.6 Changing Authentication Server..... | 116 |
| 6.6.4.7 Activating Sharing..... | 117 |
| 6.6.4.8 Stopping Sharing..... | 117 |
| 6.6.4.9 Configuring NAS Backup..... | 117 |
| 6.6.4.10 Setting/Changing/Disabling NAS Snapshot..... | 118 |
| 6.6.4.11 Snapshot Reference..... | 119 |
| 6.6.4.12 Restoring from Snapshot..... | 119 |
| 6.6.4.13 Start Snapshot Capture..... | 120 |
| 6.6.4.14 Stop Snapshot Capture..... | 120 |
| 6.6.4.15 Adding Quota Settings..... | 120 |
| 6.6.4.16 Changing Quota Settings..... | 120 |
| 6.6.4.17 Deleting Quota Settings..... | 121 |
| 6.6.4.18 Antivirus Server Settings..... | 121 |
| 6.6.4.19 Enabling Antivirus Function..... | 121 |
| 6.6.4.20 Disabling Antivirus Function..... | 121 |
| 6.6.4.21 Performance Management for NAS Volume and NAS System..... | 122 |
| 6.6.4.22 Capacity Management of Thin Provisioning Pool..... | 122 |
| 6.6.4.23 Expansion of NAS File System..... | 122 |
| 6.6.4.24 Deleting of NAS Environment..... | 124 |
| Chapter 7 Performance Management..... | 128 |
| 7.1 Overview..... | 128 |
| 7.1.1 Performance Information Types..... | 128 |
| 7.1.2 Performance Graph Window Types..... | 130 |
| 7.1.3 Threshold Monitoring Types..... | 131 |
| 7.2 Flow of Performance Management..... | 131 |
| 7.2.1 Checking Disk Space on Management Server..... | 132 |
| 7.2.2 Instruction for Performance Management..... | 132 |
| 7.2.3 Setting Monitoring Intervals..... | 133 |
| 7.2.4 Displaying Performance Information of Selected Device..... | 135 |
| 7.2.5 Displaying Fibre Channel Switch Performance Information..... | 135 |
| 7.2.6 Displaying Storage Performance Information..... | 135 |
| 7.2.6.1 Displaying Logical Volume and RAID Group Performance Information..... | 135 |
| 7.2.6.2 Displaying Disk (Physical Drive) Performance Information..... | 135 |
| 7.2.6.3 Displaying CM Performance Information..... | 135 |
| 7.2.6.4 Displaying CA and CM Port Performance Information..... | 135 |
| 7.2.6.5 Displaying Number of Active Disks, Power Consumption, and Temperature Performance Information..... | 136 |
| 7.2.6.6 Displaying Performance Information of NAS Volume and NAS System..... | 136 |
| 7.2.7 Examples of Use of Performance Management..... | 136 |
| 7.2.8 Instruction for Stopping Performance Management..... | 136 |
| 7.2.9 Updating Configuration Information..... | 136 |
| 7.2.10 Performance Data..... | 137 |
| 7.3 Flow of Threshold Monitoring..... | 138 |
| 7.3.1 Checking Disk Space on Management Server..... | 138 |
| 7.3.2 Instruction for Threshold Management..... | 138 |
| 7.3.3 Setting Threshold Monitoring Hours..... | 138 |
| 7.3.4 Setting Threshold Monitoring Information..... | 138 |
| 7.3.5 Instruction for Stopping Threshold Monitoring..... | 139 |
| 7.4 Evaluation Criteria for Thresholds in Threshold Monitoring..... | 139 |
| 7.5 Definition File..... | 140 |
| 7.6 Examples of Threshold Monitoring..... | 140 |
| Chapter 8 Reporting Function..... | 145 |

| | |
|---|-----|
| 8.1 Overview..... | 145 |
| 8.1.1 Set Policy..... | 146 |
| 8.1.2 Collect Report Information..... | 146 |
| 8.1.3 Create Report..... | 147 |
| 8.2 Supported Device..... | 149 |
| 8.3 Operation..... | 149 |
| 8.3.1 Design..... | 150 |
| 8.3.1.1 Define Charging Method..... | 150 |
| 8.3.1.2 Concept of Volume Allocation Period..... | 151 |
| 8.3.1.3 Define Report Information Retention Period..... | 153 |
| 8.3.2 Setup..... | 154 |
| 8.3.2.1 Obtain and Setup License..... | 154 |
| 8.3.2.2 Setup Policy..... | 154 |
| 8.3.2.3 Setup Periodic Command Execution..... | 154 |
| 8.3.2.4 Create Accounting Application..... | 155 |
| 8.3.3 Operation..... | 156 |
| 8.3.3.1 Create Invoice..... | 156 |
| 8.3.4 Maintain..... | 156 |
| 8.3.4.1 Backup/Restore of Report Related Files..... | 156 |
| 8.3.4.2 Error When Running Report Information Collection Command..... | 157 |
| 8.3.4.3 Error When Running Report Creation Command..... | 157 |
| 8.4 Configuration of Report File..... | 157 |
| Chapter 9 Storage Cluster Function..... | 164 |
| 9.1 Overview..... | 164 |
| 9.2 Operation Overview..... | 165 |
| 9.3 Work Flow..... | 173 |
| 9.4 Operation Method..... | 176 |
| 9.4.1 Installation..... | 176 |
| 9.4.2 Operation..... | 182 |
| 9.4.2.1 Allocating Business Volume..... | 182 |
| 9.4.2.2 Updating TFO Group Status..... | 187 |
| 9.4.2.3 Adding and Deleting Business Volume..... | 187 |
| 9.4.2.4 Manual Failover/Failback..... | 188 |
| 9.4.2.5 Force-Failover..... | 188 |
| 9.4.2.6 Status of TFO Group..... | 189 |
| 9.4.3 Maintenance..... | 190 |
| 9.4.3.1 ETERNUS Disk Storage System Fault..... | 193 |
| 9.4.3.2 RAID Failure..... | 194 |
| 9.4.3.3 RAID Blocking..... | 195 |
| 9.4.3.4 Bad Sectors..... | 196 |
| 9.4.3.5 Single-system Operation..... | 198 |
| 9.4.3.6 Deleting Storage Cluster Environment..... | 199 |
| 9.5 Storage Cluster Controller..... | 199 |
| 9.5.1 Provided Function..... | 199 |
| 9.5.2 Installation Steps..... | 200 |
| 9.5.3 Operation Procedure..... | 200 |
| 9.5.3.1 Add and Delete Monitored Device..... | 200 |
| 9.5.3.2 Change IP Address of Monitored Device..... | 201 |
| Chapter 10 Maintenance of Devices to Be Managed..... | 202 |
| 10.1 Windows Displayed in Event of Fault and Troubleshooting..... | 202 |
| 10.2 Replacing Supported Device..... | 204 |
| 10.2.1 Replacing Server Node..... | 204 |

| | |
|--|-----|
| 10.2.2 Replacing ETERNUS Disk Storage System..... | 205 |
| 10.2.3 Replacing ETERNUS LT250/LT270..... | 207 |
| 10.2.4 Replacing Fibre Channel Switch..... | 208 |
| 10.2.5 Replacing Manually Embedded Device..... | 210 |
| 10.2.6 Replacing Storage Cluster Controller..... | 211 |
| 10.3 Replacing Supported Device Components..... | 211 |
| 10.3.1 Replacing Server Node Components..... | 212 |
| 10.3.1.1 Host Bus Adapter (HBA) Replacement of Server Node..... | 213 |
| 10.3.1.1.1 [For Solaris OS Server Node] Host Bus Adapter (HBA) Replacement..... | 213 |
| 10.3.1.1.2 [For Operating Systems Other than Solaris OS] Host Bus Adapter (HBA) Replacement..... | 214 |
| 10.3.1.2 Access Path Inheritance after HBA Replacement..... | 215 |
| 10.3.1.2.1 Post-replaced HBA State Is "Changed"..... | 215 |
| 10.3.1.2.2 Post-replaced HBA State Is "Unknown"..... | 216 |
| 10.3.2 Replacing Faulty Components of ETERNUS Disk Storage Systems, ETERNUS LT250/LT270..... | 216 |
| 10.3.3 Replacing Faulty Components of Manually Embedded Device..... | 217 |
| 10.4 Adding Supported Device Components..... | 219 |
| 10.4.1 Adding ETERNUS LT270 S2 Extended Cabinet..... | 219 |
| Chapter 11 Maintenance of Administrative Environment..... | 221 |
| 11.1 Maintenance of Manager..... | 221 |
| 11.1.1 Maintenance of Manager..... | 221 |
| 11.1.1.1 Collecting Data for Troubleshooting..... | 221 |
| 11.1.1.2 Backup of Manager..... | 221 |
| 11.1.1.2.1 Backup of Solaris OS/Linux Manager..... | 221 |
| 11.1.1.2.2 Backup of Solaris OS/Linux Manager (Cluster Environment)..... | 224 |
| 11.1.1.2.3 Backup of Windows Manager..... | 225 |
| 11.1.1.2.4 Backup of Windows Manager (Cluster Environment)..... | 229 |
| 11.1.1.3 Restoring Manager..... | 229 |
| 11.1.1.3.1 Restoring Solaris OS/Linux Manager..... | 230 |
| 11.1.1.3.2 Restoring Solaris OS/Linux Manager (Cluster Environment)..... | 232 |
| 11.1.1.3.3 Restoring Windows Manager..... | 233 |
| 11.1.1.3.4 Restoring Windows Manager (Cluster Environment)..... | 238 |
| 11.1.2 Changing Operating Environment..... | 238 |
| 11.1.2.1 Changing IP Address of Management Server..... | 238 |
| 11.1.2.2 Changing IP Address of Server Node..... | 238 |
| 11.1.2.3 Changing Server Name of Management Server..... | 239 |
| 11.1.2.4 Changing Name of Server Node..... | 239 |
| 11.1.2.5 Changing Port Numbers of Management Server..... | 239 |
| 11.1.2.6 Changing IP Address or SNMP Community Name of Supported Device..... | 240 |
| 11.1.2.7 Changing Operation Management of Clustered System (Node Name Takeover)..... | 240 |
| 11.1.2.8 Changing Configuration of Supported Devices..... | 240 |
| 11.1.2.9 Changing Password of Supported Devices..... | 241 |
| 11.2 [Solaris OS Version] Maintenance of Agent..... | 241 |
| 11.2.1 Action to Take for Troubleshooting..... | 241 |
| 11.2.2 Collecting Data for Troubleshooting..... | 242 |
| 11.2.3 Changing Administrative Environment..... | 242 |
| 11.2.3.1 Changing IP Address of Server Node..... | 242 |
| 11.2.3.2 Changing Port Numbers of Server Node..... | 242 |
| 11.3 [Windows Version] Maintenance of Agent..... | 242 |
| 11.3.1 Action to Take for Troubleshooting..... | 242 |
| 11.3.2 Collecting Data for Troubleshooting..... | 243 |
| 11.3.3 Changing Administrative Environment..... | 243 |
| 11.3.3.1 Changing IP Address of Server Node..... | 243 |
| 11.3.3.2 Changing Port Numbers of Server Node..... | 243 |

| | |
|---|-----|
| 11.4 [Linux Version] Maintenance of Agent..... | 243 |
| 11.4.1 Collecting Data for Troubleshooting..... | 243 |
| 11.4.2 Changing Administrative Environment..... | 243 |
| 11.4.2.1 Changing IP Address of Server Node..... | 243 |
| 11.4.2.2 Changing Port Numbers of Server Node..... | 243 |
| 11.5 [HP-UX Version] Maintenance of Agent..... | 243 |
| 11.5.1 Collecting data for troubleshooting..... | 243 |
| 11.5.2 Changing Administrative Environment..... | 243 |
| 11.5.2.1 Changing IP Address of Server Node..... | 243 |
| 11.5.2.2 Changing Port Numbers of Server Node..... | 243 |
| 11.6 [AIX Version] Maintenance of Agent..... | 244 |
| 11.6.1 Collecting Data for Troubleshooting..... | 244 |
| 11.6.2 Changing Administrative Environment..... | 244 |
| 11.6.2.1 Changing IP Address of Server Node..... | 244 |
| 11.6.2.2 Changing Port Numbers of Server Node..... | 244 |
| Chapter 12 Linkage to Other Software..... | 245 |
| 12.1 Linkage with Systemwalker Centric Manager..... | 245 |
| 12.1.1 Linkage Function with Systemwalker Centric Manager..... | 245 |
| 12.1.2 Required Versions..... | 246 |
| 12.1.3 Preparations..... | 246 |
| 12.1.4 Setup Procedure..... | 246 |
| 12.1.4.1 Setup on Systemwalker Centric Manager Administrative Client..... | 246 |
| 12.1.4.2 Action to Be Taken IF Systemwalker Centric Manager Administrative Server and This Software Management Server Are Same Server..... | 247 |
| 12.1.4.3 Setting Confirmation Test..... | 251 |
| 12.2 Linking with Systemwalker Service Quality Coordinator..... | 252 |
| 12.3 Linkage with Other Administrative Software..... | 253 |
| Chapter 13 Command References..... | 254 |
| 13.1 Manager Commands..... | 254 |
| 13.1.1 Commands for Operating Environment Management..... | 254 |
| 13.1.1.1 sanadmsh chtraprcvip (SNMP Trap Transmission Place IP Address Change Command)..... | 254 |
| 13.1.1.2 swtrapstest (SNMP Trap Test for Fibre Channel Switch)..... | 255 |
| 13.1.1.3 grtrapstest (SNMP Trap Test for ETERNUS Disk Storage System)..... | 256 |
| 13.1.1.4 storageadm zone (Host Affinity and Zoning Operation Command)..... | 257 |
| 13.1.1.5 storageadm iscsizone (Host Affinity Operation Command)..... | 263 |
| 13.1.1.6 storageadm perfdata (Performance Information Operation Command)..... | 268 |
| 13.1.1.7 storageadm spindle (Disk Control command)..... | 276 |
| 13.1.1.8 storageadm remcs (REMCS Notification Command)..... | 281 |
| 13.1.1.9 esfsnap (Troubleshooting Information Collection of Manager)..... | 282 |
| 13.1.1.10 esfadm esfdata (Configuration Information Operation Command)..... | 283 |
| 13.1.2 Commands for Storage Management..... | 285 |
| 13.1.2.1 storageadm disk (Disk Management Command)..... | 286 |
| 13.1.2.2 storageadm raid (RAID Management Command)..... | 287 |
| 13.1.2.3 storageadm volume (Volume Management Command)..... | 293 |
| 13.1.2.4 storageadm affinity (AffinityGroup Management Command)..... | 297 |
| 13.1.2.5 storageadm ecomode (Eco-mode Management Command)..... | 302 |
| 13.1.2.6 storageadm port (Port Management Command)..... | 303 |
| 13.1.2.7 storageadm iscsiport (iSCSI Port Management Command)..... | 305 |
| 13.1.2.8 storageadm progress (Progress Display Command)..... | 311 |
| 13.1.2.9 storageadm perfctl (Performance Monitoring Command)..... | 313 |
| 13.1.2.10 storageadm device (Device Management Command)..... | 314 |
| 13.2 Agent Commands..... | 315 |

| | |
|---|-----|
| 13.2.1 setagtip (Agent Information Change Command)..... | 315 |
| 13.2.2 traptest (SNMP Trap Test for Server Node Agent)..... | 316 |
| 13.2.3 agentsnap (Troubleshooting Information Collection of Agent)..... | 317 |
| 13.2.4 agtpatrol (Monitored Status Display Command)..... | 319 |
| 13.3 Starting and Stopping Manager..... | 320 |
| 13.3.1 Starting and Stopping Services (Windows Environment)..... | 320 |
| 13.3.1.1 Starting and Stopping SNMP Trap Monitoring Service..... | 321 |
| 13.3.1.2 Starting and Stopping Service..... | 321 |
| 13.3.2 Starting and Stopping Daemons (Solaris Environment)..... | 322 |
| 13.3.2.1 Starting and Stopping SNMP Trap Monitoring Daemon..... | 322 |
| 13.3.2.2 Starting and Stopping Daemons at Specific Times..... | 322 |
| 13.3.3 Starting and Stopping Daemons (Linux Environment)..... | 323 |
| 13.3.3.1 Starting and Stopping SNMP Trap Monitoring Daemon..... | 323 |
| 13.3.3.2 Starting and Stopping Daemon..... | 324 |
| 13.4 Starting and Stopping Agent..... | 325 |
| 13.4.1 Starting and Stopping Services (Windows Environment)..... | 325 |
| 13.4.2 Starting and Stopping Daemons (Solaris, Linux, HP-UX, or AIX Environment)..... | 325 |
| 13.5 Commands for Reporting Function..... | 325 |
| 13.5.1 esfdm report collect (Report Information Collection Command)..... | 326 |
| 13.5.2 esfdm report create (Report Creation Command)..... | 327 |
| Appendix A Customization..... | 331 |
| A.1 Overview..... | 331 |
| A.2 sanma.conf Parameter..... | 331 |
| A.3 ssmgr.conf Parameter..... | 332 |
| A.4 perf.conf Parameter..... | 333 |
| A.5 SNMP Trap XML Definition File..... | 335 |
| A.6 Correlation.ini Parameter..... | 342 |
| A.7 Device Polling Setting File..... | 343 |
| A.8 Polling Service Setting File..... | 347 |
| A.9 Explanation of Configuration Settings File..... | 350 |
| A.10 snmptrapd.conf Configuration File..... | 352 |
| A.11 policy.conf Parameter..... | 354 |
| A.12 TFOConfig.ini Parameter..... | 354 |
| Appendix B Troubleshooting..... | 356 |
| B.1 Collecting Troubleshooting Information..... | 356 |
| B.2 Information for Initial Investigation..... | 356 |
| B.2.1 Collecting Information from Management Server (Solaris OS)..... | 357 |
| B.2.2 Collecting Information from Management Server (Linux)..... | 357 |
| B.2.3 Collecting Information from Management Server (Windows)..... | 357 |
| B.2.4 Collecting Information on Managed Server Node (Solaris OS)..... | 358 |
| B.2.5 Collecting Information on Managed Server Node (Windows)..... | 358 |
| B.2.6 Collecting Information on Managed Server Node (Linux)..... | 358 |
| B.2.7 Collecting Information on Managed Server Node (HP-UX)..... | 358 |
| B.2.8 Collecting Information on Managed Server Node (AIX)..... | 359 |
| B.3 Information for Further Investigation..... | 359 |
| B.3.1 Collecting Information from Management Server (Solaris OS)..... | 359 |
| B.3.2 Collecting Information from Management Server (Linux)..... | 360 |
| B.3.3 Collecting Information from Management Server (Windows)..... | 360 |
| B.3.4 Collecting Information on Managed Server Node (Solaris OS)..... | 360 |
| B.3.5 Collecting Information on Managed Server Node (Windows)..... | 361 |
| B.3.6 Collecting Information on Managed Server Node (Linux)..... | 361 |
| B.3.7 Collecting Information on Managed Server Node (HP-UX)..... | 361 |

| | |
|---|-----|
| B.3.8 Collecting Information on Managed Server Node (AIX)..... | 361 |
| Appendix C How to Check Product Version..... | 362 |
| C.1 Checking Product Version in Windows Operating System..... | 362 |
| C.2 Checking Product Version in Solaris OS..... | 362 |
| C.3 Checking Product Version in Linux..... | 363 |
| C.4 Checking Product Version in HP-UX..... | 363 |
| C.5 Checking Product Version in AIX..... | 364 |
| Appendix D Operations Other Than Operations on Switches within System Managed on Storage Cruiser..... | 365 |
| Index..... | 366 |

Chapter 1 Overview

1.1 Product Features

This software stands behind the stable operation of a multi-vendor storage system environment such as a SAN, a DAS, and a NAS using the configuration that provide integrated management of storage-related resources and functions of connection, fault and performance management, and reporting function.

Configuration Management Realizing Total Management of Devices in Entire System

This function displays the status of each device in a current entire storage system and the status of physical connection between devices graphically on the Web Console. You can drill down from an icon of each device to the detail window to get detail information which part of the device (for example, a Fibre Channel switch port) is connected to which part.

Correlation Management Realizing Total Management of Small-sized Resources of All Devices

This function not only manages detailed configurations within the storage devices but also automatically obtains the physical paths from disks and related server node configuration information, and then displays information correlating to this data on a single window.

It used to be very hard to recognize the correlation between entities because those entities were supported by their own management tools and were displayed in various formats respectively. In this software, the correlation of entities can be displayed in a common display format on a single window, and consequently the entire configuration can simply be grasped and an error can be detected if any configuration error should exist.

Fault Management Function for Facilitating to Locate of Failed Parts and Affected Areas

Failures that occur on devices are properly displayed in an understandable way.

Error information can be automatically reported to Systemwalker, integrated administrative software, and other vendors' Management Software, and centralized management of the system becomes available.

Optimal Environment Delivery via Performance Information Management

Performance information of managed devices can be managed and displayed. Performance information of devices are stored on the Management Server, past performance information can be accessed as well as real-time performance information. Additionally, because performance information can be viewed in a graphic format, you can simply see the picture of the performance statuses and load statuses of devices.

In addition, threshold values can be set on devices so that alarms are reported when those threshold values are exceeded. The bottleneck causes and locations can be identified, and as a result, the configuration of devices is improved and the operation in the optimal environment is delivered.

Performance information can be viewed from the Report window of Systemwalker Service Quality Coordinator.

Reporting Function

This function collects capacity and usage time information for volumes connected to servers. This provides the required information for you to charge fees based on volume utilization.

Storage Cluster Function

If one storage device is down between two storage devices connected to a server, this function fails over to the other storage device transparently. This function enables business to continue.

Support for VMware vSphere Virtual Volumes Function

The VMware vSphere Virtual Volumes function is a function to perform the VM disk (VMDK) operations that were performed on the Virtual Machine File System (VMFS) on the storage device. This function simplifies the performance design and performance analysis for the ETERNUS Disk storage system. Further, a backup can be taken for each VM guest. If it is within the same device, the ETERNUS

Disk storage system Advanced Copy function can be used to achieve VMware standard snapshot and clone, and Storage vMotion processing at high speed.

1.2 Summary of Each Function

This section explains the function that this software provides for storage systems.

1.2.1 Configuration Management

Connection Status Management

This function displays on the Web Console the status of physical connections between devices. This makes it possible to get a grasp of the access points for the parts of each device (for example, the Fibre Channel switch ports).

Also, since this function displays on the Web Console information correlating with the connections within the storage device and with the servers, it is possible to get a grasp of the entire configuration by looking at one screen.

The Web Console utilizes a web browser for operation and is used for the Storage Cruiser.

Access Path Management

This function manages and sets access paths automatically by performing integrated management of security functions provided from the server node side, Fibre Channel switch side, and storage side.

An access path can be automatically recognized and displayed from the binding/zoning information that has already been set in a device. Access paths are managed based on the security information from all registered devices. Even if a physical Fibre Channel cable or a SAN route that forms an access path is disconnected, the access path will be displayed with Error status.

For access paths managed by this software, the configuration definition of a device can be changed manually as well as automatically from this software. In such cases, it can check whether the manual configuration changes were performed correctly.



.....

Devices subject to storage management must be registered with this software. To register a device, the IP address of the device is required. In addition, a user ID and password for management are required for the Fibre Channel switch.

.....

1.2.2 Fault Management

The fault management function of this software has the three features described below.

The fault management function starts monitoring through the registration of the target device to the manager and continues monitoring processing during start up of the manager.



.....

Fault monitoring is performed via LAN. As such, it is not possible to perform fault monitoring for devices which cannot be connected by LAN.

.....

Asynchronous Fault Event Monitoring Using Event Notification from Devices

This software processes an SNMP Trap from a device and monitoring information from Agent, properly decodes them, and displays them as an asynchronous event.

Since the displayed contents of the event are more detailed and easier to understand than decodes generated by a normal SNMP MIB compiler, they support smooth operation.

The display format (show, hide) for events can be customized in detail by using an XML file. Therefore, operation can be made suitable for the environment used. In addition, fault management of a device not supported by this software is dynamically enabled by adding and editing the XML file.

Since events can be linked to the Systemwalker Centric Manager linkage and Shell files that can be edited as desired by users, operation can be made suitable for the environment used.



See

.....
Refer to "A.5 SNMP Trap XML Definition File" for details of customization.
.....

Fault Monitoring Using Device Polling Function (Automatic Operation by Manager)

The device polling function is a function for this software to observe regularly the state of all devices connected with LAN by using SNMP, ping or unique protocol. When the SNMP Trap from the device cannot be received, the change in the state of the device can be detected and the network error between each device and the Management Server of this software can be detected by this function.

The state change is reflected in the event log and the icon color.

This function is effective to the manual embedded device.

Fault Monitoring by Checking Current Status of Devices (Manual Operation Performed by Users)

The icon color of a device changes depending on the current status of the device by acquiring latest information.

If a problem occurs, a device status changes the display corresponding to its status.

1.2.3 Performance Management

When the performance information reservation command is issued from the Main View, Domain view or SAN view for devices from which performance information is to be obtained, the performance management part of this software uses SNMP to obtain performance information from the devices and saves the obtained information on the Management Server. The information can be displayed and managed in the Web Console.

Performance control functionality supports the Fibre Channel switch and ETERNUS Disk storage systems. This function can be used to obtain the detailed operational status and load status of a device. Additionally, by knowing the number of active disks, it is possible to verify the Eco-mode status of the ETERNUS Disk storage system.

In addition, a threshold can be set for particular information. The function can detect a potential bottleneck and be used to address the problem.

The performance information can be referenced using Systemwalker Service Quality Coordinator. For details, refer to the Systemwalker Service Quality Coordinator manual.



See

.....
Refer to "1.2.9 Support Levels" for details about supported devices.
.....

Information Available for Performance Management

The information managed by the performance control is different for the fibre channel switch and ETERNUS Disk storage systems. Refer to "7.1.1 Performance Information Types" for details.

Information Available for Threshold Monitoring

The information managed by the threshold monitoring is different for the fibre channel switch and ETERNUS Disk storage systems. Refer to "7.1.3 Threshold Monitoring Types" for details.


1.2.4 Reporting Function

The Reporting function collects the information associated with volumes connected to servers and outputs the information required for charging such as capacity information and usage time.

What Is Information Required for Charging?

To collect information required for charging, the following points should be made clear:

- Who used it?
- What and how much was used?
- In which period was it used?

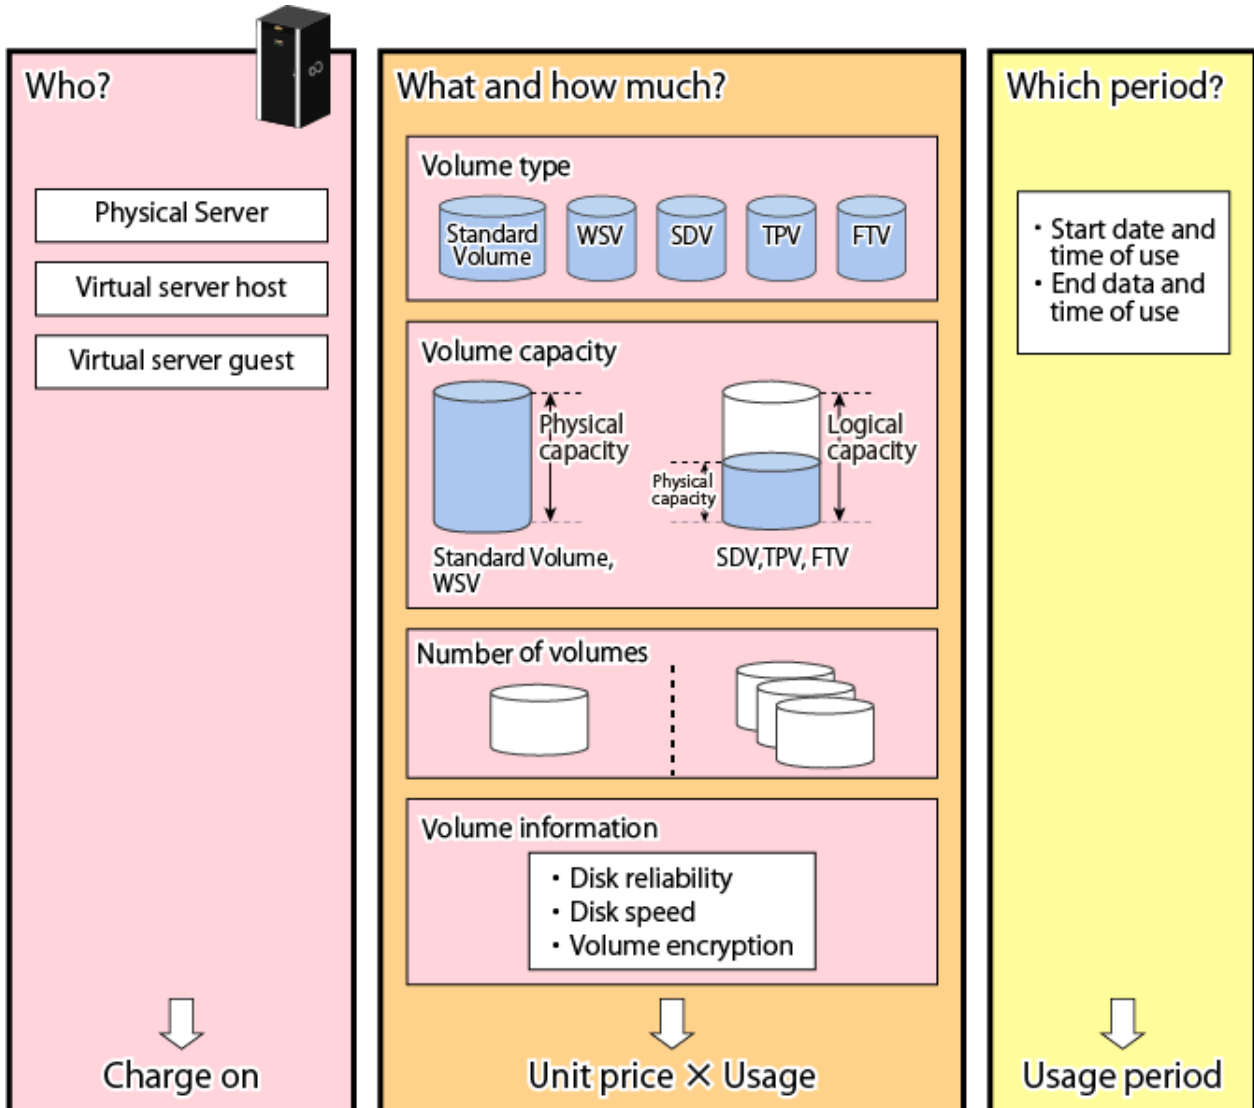

Information Collectable by Reporting Function

The information collectable by the Reporting function is as follows:

Table 1.1 Information Collectable by Reporting Function

| Information Collectable by Reporting Function | |
|---|--------------------------------------|
| Unit of counting servers | Physical server |
| | Virtual server host |
| Volume type and capacity | Physical capacity of Standard Volume |
| | Physical capacity of WSV |
| | Logical capacity of SDV |

| Information Collectable by Reporting Function | |
|---|---------------------------------|
| | Logical capacity of TPV |
| | Logical capacity of FTV |
| Usage period | Start date and time of use |
| | End date and time of use |
| Volume information | RAID level |
| | Disk type: SAS, SSD, SED-SAS |
| | Volume encryption |

 **Information**

The following information cannot be collected by the Reporting function:

- Virtual server guest
- Physical capacity of SDV
- Physical capacity of TPV
- Physical capacity of FTV

Required Operation for Charging

For the center administrator to make an invoice, the following operation is required:



Center Administrator

Prepare

- Determine a policy for charging.
- Create an accounting application.
(Set Charged items and unit price)

Range of Reporting Function

Collect Report Information

- Collect report information (required for charging) per minimum unit of charged period.
(e.g.: When charging by the day, collect information once a day.)

Create Report File

- Tally up report information within charged period to create a report file per charged period.
(e.g.: If charged period is one month, create a report file once a month)

Make Invoice

- Input report file and make an invoice from accounting application.



Center User

1. Prepare
Determine charged items, unit price, charged period and minimum unit of charged period.
2. Collect Report Information
Collect the information required for charging.

3. Create Report File
Collected information is totaled.
4. Make Invoice
Make an invoice through an accounting application from the report file.

 **Point**

.....
 The center administrator can create an accounting application with customized charged items and unit prices from a report file. This allows the center administrator to respond to various charging requirements.

1.2.5 Energy-saving Operation for Storage Device

Eco Mode based on MAID (Massive Arrays of Idle Disks) can be configured for ETERNUS Disk storage systems.

Performing either of the following controls during a period of time of not accessing disk drives can reduce power consumption, leading to the reduction of loads on environments.

- a. Spindle rotation control of disk drives
- b. Power control of disk drives

The above "b" is recommended. It can reduce power consumption more effectively than the above "a".

The devices that support "b" are shown in "[Table 1.2 Devices That Support Power Control of Disk Drives](#)".

Table 1.2 Devices That Support Power Control of Disk Drives

| Storage Device Name | Firmware Version |
|--|------------------|
| ETERNUS DX60 S3 | All versions |
| ETERNUS DX100 S3/DX200 S3 ETERNUS DX500 S3/DX600 S3 | V10L20 or later |
| ETERNUS DX8700 S3/DX8900 S3 | All versions |

In this software, the following functionality is provided for ETERNUS Disk storage systems.

 **Note**

.....
 Eco-mode operation cannot be performed on ETERNUS DX200F. Performance information such as the number of active disks, power consumption and temperature can be displayed.

Controlling Eco-mode

The Eco-mode can be controlled via the Web Console or by executing the storageadm command in the Management Server.

 **See**

.....
 Refer to "[6.1.6 How to Control Eco-mode](#)" for details.

Displaying Performance Information for Number of Active Disks

Of the disk drives mounted on ETERNUS Disk storage systems, the following disk drive count is displayed as the number of active disks. For ETERNUS DX200F, all the disk drives are displayed as the number of active disks.

Table 1.3 Number of Active Disks

| Eco Mode Set to RAID Group to Which Disk Drives Belong | Number of Active Disks |
|--|---|
| Spindle rotation control of disk drives | Number of disk drives whose spindle is rotating |

| Eco Mode Set to RAID Group to Which Disk Drives Belong | Number of Active Disks |
|--|------------------------------------|
| Power control of disk drives | Number of powered disk drives |
| Eco-mode unset | Number of powered disk drives (*1) |

*1: The following ETERNUS Disk storage systems display the number of disk drives whose spindle is rotating as the "number of active disks":

| Storage Device Name | Firmware Version |
|--|------------------|
| ETERNUS DX60/DX80/DX90 ETERNUS DX S2 series | All versions |
| ETERNUS DX100 S3/DX200 S3 ETERNUS DX500 S3/DX600 S3 | Less than V10L20 |

By using the performance information for the number of active disks, the effects of energy-saving operations can be easily verified.



Refer to "7.2.6.5 Displaying Number of Active Disks, Power Consumption, and Temperature Performance Information" for details.

Displaying Power Consumption and Temperature Performance Information (ETERNUS DX60/DX80/DX90, DX S2 series, DX S3 series, ETERNUS DX200F Only)

The amount of power used by an ETERNUS Disk storage system device as a whole is displayed as "Power consumption".

The peripheral temperature (fan intake temperature) of an ETERNUS Disk storage system is displayed as "Temperature".

By using the performance information for power consumption, the effects of energy-saving operations can be easily verified.

By using the performance information for temperature, the air-conditioning effects at the device periphery can be easily verified.



Refer to "7.2.6.5 Displaying Number of Active Disks, Power Consumption, and Temperature Performance Information" for details.

Concerns in Storage System Operation When Using Eco-mode

There are following concerns when using Eco-mode in storage system operation.

Unit of Eco-mode Control

The Eco-mode can be controlled for each RAID group. Therefore, when different transactions (type, online time, etc.) use a RAID group, the disk drives of its RAID group may not be able to be stopped depending on the operating policy of the transaction. Consider the relation between RAID group and transactions in the design of the storage system operation using Eco-mode.

Uncontrollable RAID Groups

The Eco-mode is not available for the following RAID groups.

- A RAID group for which the system disk is included
- A RAID group for which it is set in the NAS area
- A RAID group for which the mainframe volumes, MVV volumes or MVV Concatenation volumes are registered
- A RAID group for which no volumes are registered
- A RAID group that includes an SSD
- A RAID group used by Thin Provisioning function

- A RAID group used by Flexible Tier
- A RAID group belonging to a REC disk buffer
- Temporary RAID group created while executing the Logical Device Expansion

Stopping Disk Drives

The ETERNUS Disk storage system stops a disk drive after confirming that its disk drive is not accessed within a certain period of time (30 minutes). Therefore, time more than its period is needed until the disk drive stops actually even if the "stop request" in this software is executed.

The ETERNUS Disk storage system does not stop a disk drive while the configuration of the RAID group or volume is changed and the Advanced Copy to access to its disk drive is done. Therefore, the disk drives may not be stopped even if the "stop request" in this software is executed. The disk drives will stop when the procedure is completed in the ETERNUS Disk storage system.

Starting Disk Drives

When it is accessed to the stopped disk drive, the ETERNUS Disk storage system starts its disk drive rotation. However, a few minutes (about three minutes) is needed until the disk drive becomes the accessible status.

Continuous Disk Drive Rotation

When the number of the starting disk drive rotation exceeds the number of certain times (three times), the ETERNUS Disk storage system judges that its disk drive is used with high frequency and does not stop its disk drive rotation. Therefore, even if the "stop request" in this software is executed, after the disk drive status changes from "Idle" to "Active" and there is no access to its disk drive, its disk drive status may not change to "Idle".

The number of the starting disk drive rotation per one day is cleared to zero when time of ETERNUS Disk storage system becomes 00:00.

1.2.6 Storage Capacity Virtualization Operation

The ETERNUS Disk storage systems below are equipped with a storage capacity virtualization function that uses Thin Provisioning technology.

| Storage Device Name | Firmware Version |
|--|------------------|
| ETERNUS DX400 series ETERNUS DX8000 series ETERNUS DX S2 series (DX60 S2 excluded) ETERNUS DX S3 series ETERNUS DX200F | All versions |

Thin provisioning technology virtualizes and allocates storage resources, thus enabling the physical capacity of the storage to be reduced. Environments where thin provisioning have been installed manage physical disks as a common disk pool, and allocations to servers are treated as allocations to a virtual volume. When writing to a virtual volume, physical disks are allocated from the disk pool in accordance with the size of the data being written. Physical disks can be extended in accordance with the disk pool busy rate without affecting the servers. This enables users to start operation using only a small physical disk capacity to make large capacity virtual disk allocations to servers, thus keeping the initial investment low (small start).

In this software, the following functionality is provided for the above ETERNUS Disk storage systems with Thin Provisioning.

Configuration Management

This function makes the associations between virtual volumes and physical disks visible. The Web Console displays the associations between the configuration that is virtualized by means of thin provisioning (disk pool and virtual volumes) and the physical configuration (RAID groups and physical disks). This function makes it easy to check the affected location when a physical disk fault or other problem occurs.

Threshold Monitoring

This function monitors the disk pool threshold values and performs capacity management. Threshold values are established for the physical disk pool and these values are monitored so that consumption of the physical capacity does not cause disk pool shortages. When the disk busy rate reaches the threshold value, an alarm notifies the user, thus preventing operation stoppages.



See

Refer to "6.4 Thin Provisioning Management" for details.

Notes on Storage Capacity Virtualization Operation

There are following concerns when managing storage capacity virtualization operations.

Operations That Are Not Possible

This product cannot perform the following operations related to thin provisioning and Flexible Tier:

- Performance monitoring of disk pools

1.2.7 Storage Cluster Function

If one storage device is down between two storage devices, the Storage Cluster function fails over transparently to the other storage device.

Configuration and Management of Storage Cluster

Storage Cluster and its settings can be configured and checked through the Web Console.

There are two ways of failover to storage device as follows:

- Automatic Failover
The life of storage devices is monitored and if any failure in one storage device, switchover to the other storage device is automatically done.
- Manual Failover
Failover is directed and performed through the Web Console.

1.2.8 Support for VMware vSphere Virtual Volumes Function

The VMware vSphere Virtual Volumes function is a function to perform the VM disk (VMDK) operations that were performed on the Virtual Machine File System (VMFS) on the storage device. This function simplifies performance design and performance analysis for ETERNUS Disk storage systems.

This product provides the following features to the operating environment using the VMware vSphere Virtual Volumes function:

- WOL Access Path Management
The access paths between VM host and WOL datastore can be managed.
- WOL Datastore Configuration Management
One WOL datastore can be comprised of one Tier pool or multiple combined Tier pools.
- Correlation Management
In the End to End view (VMware), the relationship from virtual machines to Virtual Volumes is displayed, and detailed information of the components of each related device can be displayed.
- Performance Management
Performance information for each Virtual Volume is collected from the ETERNUS Disk storage system, displayed in a graph, and the load status and performance analysis of each virtual machine is supported.
- VM Storage Policies
By defining various settings for Automated Storage Tiering, Automated QoS, and virtual machine backup functions as a policy, WOL datastores and Tier pools that satisfy the policy can be selected, and collective control can be enforced for created Virtual Volumes and virtual machines.

- Virtual Machine Backup

A backup can be taken for each VM guest. If it is within the same device, the ETERNUS Disk storage system Advanced Copy function can be used to achieve VMware standard snapshot and clone, and Storage vMotion processing at high speed.



See

Refer to the *ETERNUS SF Operation Guide for VMware vSphere Virtual Volumes* for details of each function that this product offers.

1.2.9 Support Levels

The scope of the storage management functions of this software that can be used varies with the storage device model being used. For this software, the scope of available functions is represented as support levels, which are used as settings of the fault monitoring function and for other purposes. The table below lists the support levels that can be selected.

Table 1.4 Support Levels

| Support Level | Typical Device Name | Device Detection | Fault Management | | | Management Window Linkage | Performance Management |
|---------------|--|------------------|----------------------|--------------------------------|-----------------------------|---------------------------|----------------------------------|
| | | | SNMP Trap Monitoring | Device Polling Monitoring (*1) | Acquisition of Device State | | |
| A | ETERNUS DX series ETERNUS DX200F ETERNUS SN200 (except model 250M) ETERNUS PRIMERGY BX600 Fibre Channel switch blade Brocade series Brocade VDX series (except VDX 8770-4/VDX 8770-8) (*5)(*8)(*9) PRIMERGY BX Ethernet Fabric Switch (*5)(*8) | Automatic (*2) | Y1 | Y1 | Y1 | Y1 | Y1 (*6) |
| B | Solaris OS, Windows, Linux, HP-UX, AIX server node on which Storage Cruiser's agent is already installed ETERNUS LT250/LT270 (*5) Brocade VDX 8770-4/VDX 8770-8 | Automatic (*2) | Y1 | Y1 | Y1 | Y1 | - |
| C | VMware vSphere 4 or later | Automatic (*2) | - | Y1 | Y1 | - | - |
| D | NetApp FAS Series NetApp V-Series | Manual | Y1 (*5) | Y1 | - | Manual setting | Y1 (*7 For data collection only) |
| E | ETERNUS LT20/LT20 S2 ETERNUS LT40/LT40 S2 ETERNUS LT60/LT60 S2 ETERNUS LT200 ETERNUS LT210 | Manual | Y1 (*5) | Y1 | - | Manual setting | - |

| Support Level | Typical Device Name | Device Detection | Fault Management | | | Management Window Linkage | Performance Management |
|---------------|--|------------------|----------------------|--------------------------------|-----------------------------|---------------------------|------------------------|
| | | | SNMP Trap Monitoring | Device Polling Monitoring (*1) | Acquisition of Device State | | |
| | ETERNUS LT220 ETERNUS LT230 ETERNUS LT260 ETERNUS LT270 S2 ETERNUS VS850 NetApp FAS Series (with clustered Data ONTAP) NetApp V-Series (with clustered Data ONTAP) | | | | | | |
| | ETERNUS CS800 ETERNUS CS2000 | Manual | Y1 (*5) | Y1 | - | - | - |
| H | ETERNUS SN200 model 250M | Manual | Y1 (*5) | Y1 | - | Manual setting | - |
| I | Other devices that are manually embedded | Manual | - (*3) | - (*4) | - | Manual setting | - |

Y1: Detail information on device internal elements can be displayed.

*1: The protocols using in the device polling are as follows:

| Typical Device Name | Protocol Name |
|---|---------------------------|
| ETERNUS DX series ETERNUS DX200F ETERNUS SN200 (except model 250M) PRIMERGY BX600 Fibre Channel switch blade Brocade series Brocade VDX series PRIMERGY BX Ethernet Fabric Switch NetApp FAS Series NetApp V-Series | SNMP |
| Server node on which Storage Cruiser's agent is already installed | unique protocol |
| VMware vSphere 4 or later | VMware dedicated protocol |
| Other than listed above | ping |

*2: The "Detect device in subnet" function is not supported by the devices below. Specify and register the IP addresses.

- The following devices that firmware version is V20L20 or later:
ETERNUS DX400 series, DX8000 series
- Solaris OS, Windows, Linux, HP-UX, AIX server node on which Storage Cruiser's agent is already installed
- VMware server node
- ETERNUS LT250,LT270
- The following switches may not be able to be detected in subnet depending on the firmware version, etc.
ETERNUS SN200 series, Brocade series, PRIMERGY BX600 Fibre Channel switch blade, Brocade VDX series, PRIMERGY BX Ethernet Fabric Switch

*3: For devices supporting SNMP Traps, this function is enabled by creating a SNMP Trap XML definition file.

*4: For devices supporting LAN, ping monitoring is enabled by specifying an IP address at manual embedding.

*5: SNMP Trap transmission must be set for each device. (This software does not automatically make said setting.)

*6: There are concerns in performance information. Refer to the Note in "[7.1.1 Performance Information Types](#)".

*7: For NetApp FAS Series only. To refer to the performance information that is collected on the NetApp FAS Series, must be linkage with Systemwalker Service Quality Coordinator. Contact Fujitsu Technical Support for details on performance information.

*8: Only as for devices whose firmware version number is 3.0.1 or later, the performance management function is supported.

*9: The automatic registration function is not supported for devices whose firmware version number is 4.0. Revise the firmware version or register manually.

1.3 Storage Cruiser Configuration

Storage Cruiser consists of the following programs: Manager function and Agent function.

This guide refers to devices on which respective programs were installed as the Management Server and the server node. These programs can be installed on a single device and operated as well. In that manner, there is no restriction on the order of installation of these programs.


Manager function (Management Server) is the central management part of Storage Cruiser that obtains and sets information about devices involved in the storage system on the LAN. Important data among those used for controls are stored in the database.

Agent function (server node) controls information about home software such as an HBA and a multipath driver on the server node using the storage and communicates with Manager function. When there are several server nodes, it must be installed on each of them.

The Manager function is accessed using the Web Console. It is possible to connect to one ESC Manager from the multiple Web Consoles.

Refer to "[Figure 9.1 Storage Cluster Function: Example of System Structure](#)" for the configuration of the Storage Cluster function.

Figure 1.1 Storage Cruiser Configuration

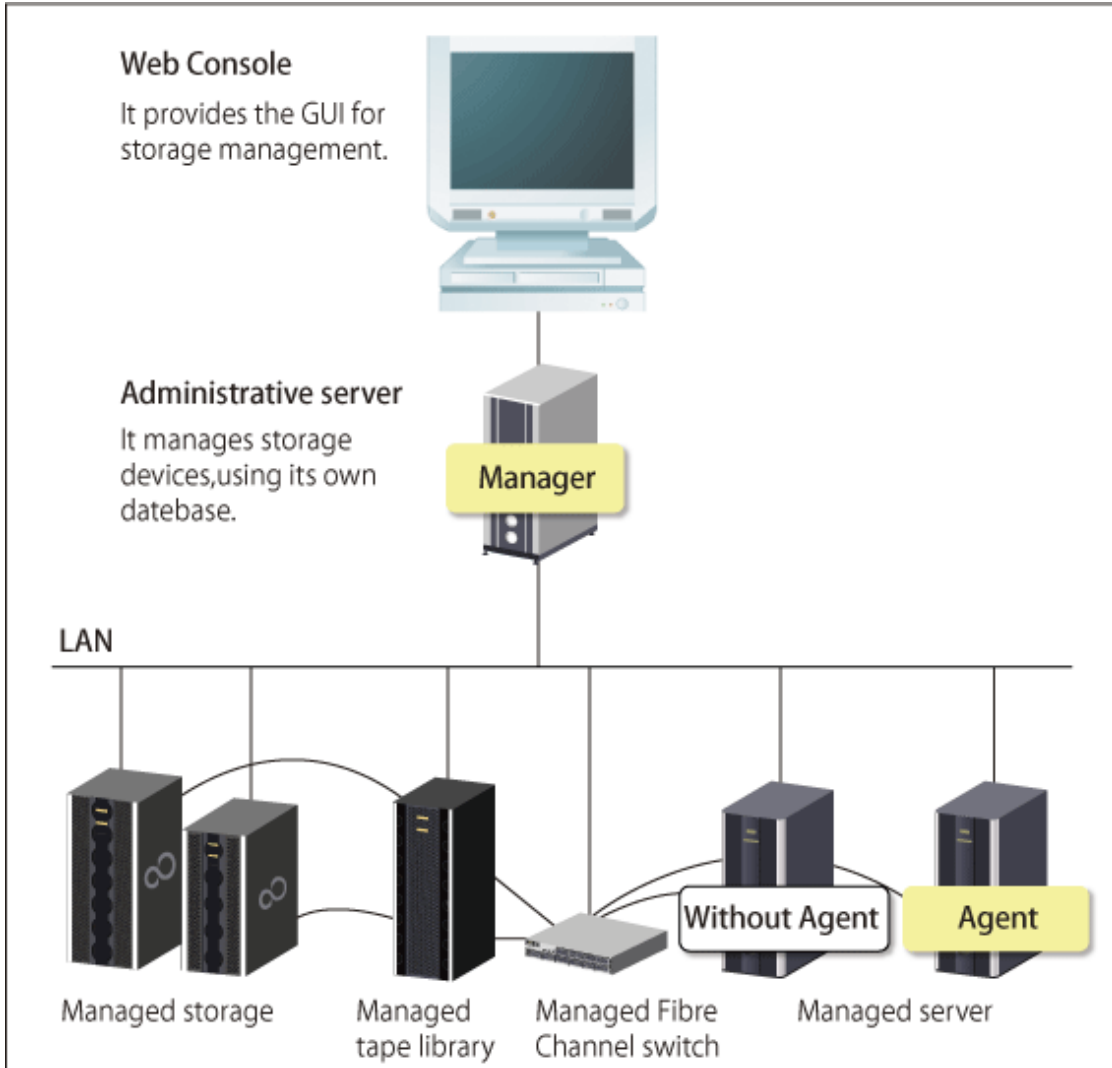

Chapter 2 Fault Monitoring

This chapter describes how this software monitors for faults in devices consisting of a storage system and explains the fault information displayed and actions to be taken if an error occurs.

 See


Refer to "1.2.2 Fault Management" for details on fault monitoring.

Refer to the *ETERNUS SF Event Guide* for details on events.

Refer to "1.2.9 Support Levels" for details on the support levels mentioned in this chapter.

This software performs the fault monitoring operation as explained below by processing events that are asynchronously reported by monitoring information from Agent and an SNMP Trap from each device. The SNMP Trap must be correctly set in the device that supports that SNMP Trap.

The Manager's event processing function is a resident function that is always when Manager is started (when the Management Server is started up). Therefore, a Web Console does not need to be started when a fault is only reported by Systemwalker Centric Manager linkage or Shell/bat linkage.

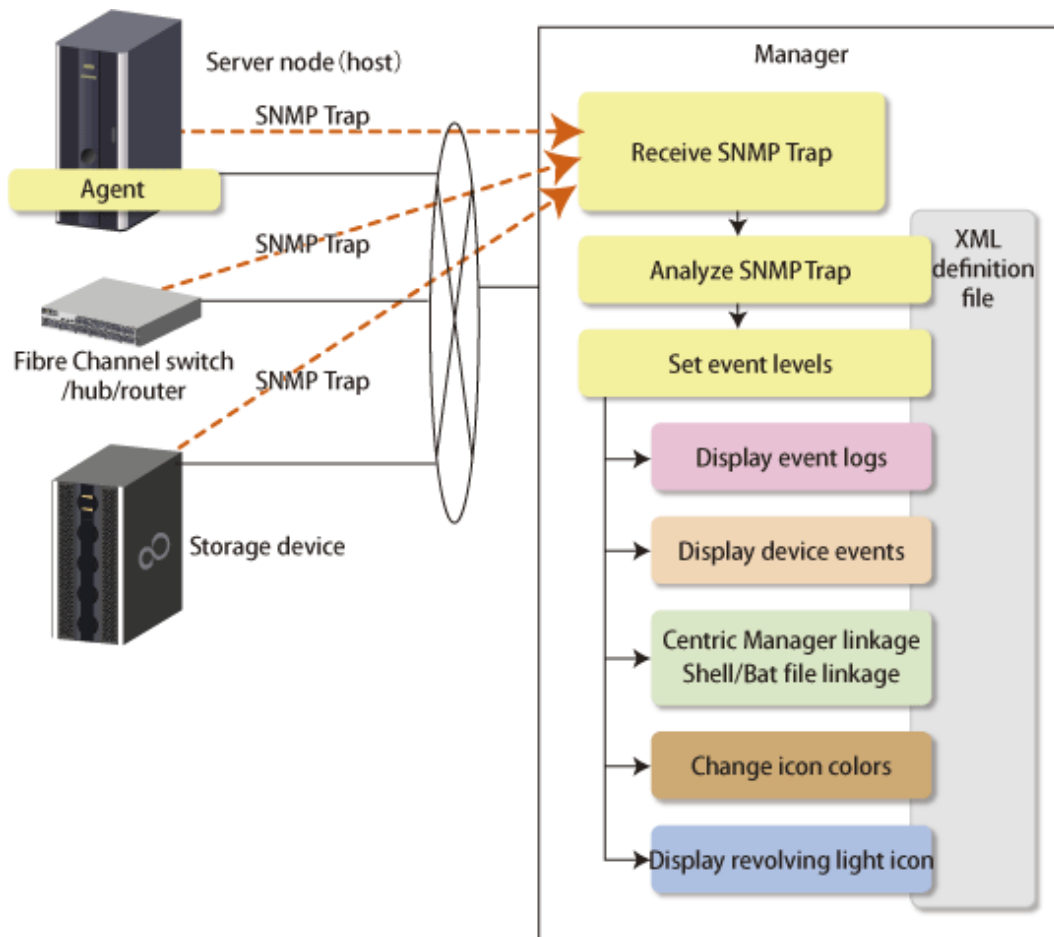

Manager processes event monitoring information from Agent in the same manner as for an SNMP Trap.

2.1 Receiving SNMP Traps

First, set up an environment in which devices can send SNMP Traps.

Server Node

SNMP Trap transmission place addresses are automatically set for the server node agent when this software registers devices.

If Manager operates across multiple networks, however, this software may not be able to set correct settings for the server node agent. In this event, check whether SNMP Trap transmission place addresses are correctly set for the server node agent. The files indicated below for the server nodes specify the SNMP Trap transmission place addresses of the server node agent. Check the addresses, and edit any address that must be corrected. To operate according to the contents of the file the restart of Agent is needed.

| Server Node OS | Place of File |
|--|--|
| Windows | \$TMP_DIR\ESCAgent\var\snm.ip (\$TMP_DIR means "Work Directory" specified at the Agent installation.) |
| Solaris OS, Linux, HP-UX, AIX | /var/opt/FJSSvsage/snm.ip |

Note

The SNMP Trap fault monitoring function is not supported for VMware vSphere 4 or later.

Support Levels A, B

When this software registers devices, SNMP Trap transmission place addresses are automatically set for devices to be managed.

However, if Manager operates across multiple networks, this software may not be able to set the correct setting for each device to be managed. In this case, check whether SNMP Trap transmission target addresses are correctly set for the managed devices.

In addition, if SNMP Trap transmission place addresses are automatically set, the SNMP Trap transmission send destination community name is fixed to "public".

Support Levels E, I (for Devices Supporting SNMP Traps)

The SNMP Trap transmission place address is set on a device to the Management Server. For details of this setting, refer to the operation manual of the device.

Support Level I (for Devices Not Supporting SNMP Traps)

Fault monitoring by the mechanism is disabled since said devices do not support the SNMP Trap function.

Other server nodes (including Solaris OS and Windows server nodes without an agent) do not support fault management.

Note

Check whether the SNMP Trap monitoring service is running. If not, start it. For details about checking and starting the service, refer to the following sections:

- For Windows environment
["13.3.1.1 Starting and Stopping SNMP Trap Monitoring Service"](#)
- For Solaris environment
["13.3.2.1 Starting and Stopping SNMP Trap Monitoring Daemon"](#)
- For Linux environment
["13.3.3.1 Starting and Stopping SNMP Trap Monitoring Daemon"](#)

2.2 Analyzing SNMP Traps

The Management Server processes SNMP Traps according to the support levels of the mechanism for devices, as described below.

- Server node agent

SNMP Traps are decoded.

- Support levels A, B and E

SNMP Traps are decoded. Incidentally, the only SNMP Traps decoded are those for which event display and linkage are required.

- Support level I (for devices supporting SNMP Traps)

Device-specific SNMP Traps are not decoded.

Note that SNMP Traps not supported by this software can be decoded, however, by creating a SNMP Trap XML definition file. For details, see "[A.5 SNMP Trap XML Definition File](#)".

Information

Methods of decoding SNMP Traps can be customized. Refer to "[A.5 SNMP Trap XML Definition File](#)" for details.

Note

If an Error or Warning level event is reported, update the corresponding storage system element status manually.

When the status of the storage system is recovered, also update the corresponding storage system element status manually.

The global status of the system containing the element is updated automatically.

Refer to "Reload ETERNUS Disk Storage System Configuration Information" in the *ETERNUS SF Web Console Guide* for details on the operation procedures.

2.3 Device Polling

The Manager checks the statuses of registered devices by using SNMP, ping or unique protocol at intervals of 60 seconds (default). It is as follows which polling method.

| Polling Method | Protocol | Devices |
|----------------------|------------------|--|
| Device status | SNMP | ETERNUS Disk storage system NetApp FAS Series and V-Series |
| Communication status | SNMP | ETERNUS SN200 series Fibre Channel switch PRIMERGY Fibre Channel switch blade Brocade Fibre Channel switch Brocade VDX series PRIMERGY BX Ethernet Fabric Switch |
| | unique protocol | server nodes for which Agent is installed |
| | private protocol | VMware vSphere 4 or later |
| | ping | Devices supporting automatic detection, other than the above devices. Manually embedded devices for which IP addresses are set. |

- Device status polling method

For devices using SNMP, the system obtains status information using the respective vendor's private MIB. If the status has been changed compared with that stored by Manager, an event is displayed depends on the change.

- Communication status polling method

Changes in device status cannot be detected. However, if an abnormality occurs in the device or in a network between the device and the Manager and there is no response to a communication (non-communicating state), then an event is displayed and the icon color changes to gray. The next time there is a response to polling, the previous state (the one before the non-communicating state) is restored.

For VMware vSphere 4 or later, this software uses a private protocol of VMware. The communication status polling method does not detect changes in the device status, but does detect the non-communicating status. The polling is performed only for VM hosts; VM guests are not polled. When the non-communicating state is detected for a VM host, this software judges that the VM host and all the VM guests included in it are in the non-communicating state.

With either SNMP or ping, Systemwalker Centric Manager linkage and Shell/bat linkage are enabled by default. The swsag code reported to Centric Manager is 4822. The linkage behavior can be modified. For information see "[A.7 Device Polling Setting File](#)".

Users can customize polling intervals, the time at which operation stops, the specification of devices to be excluded from polling operation, and other device polling functions. For details, see "[A.7 Device Polling Setting File](#)".

Note

- When the device polling detects a change in network or device status, any event of "Device Polling Event" in the *ETERNUS SF Event Guide* is displayed. However, when the state change of device is detected by performing the **Reload Conf.** operation, the following events are not displayed. Confirm the state from a Web Console.
- In a large-scale environment in which hundreds of devices targeted for polling are registered, not all the devices may be checked within 60 seconds (default). In that case, on the next polling cycle, the devices whose statuses were not checked on the last polling cycle are given priority. The polling interval can be changed. Refer to "[A.7 Device Polling Setting File](#)" for details.

2.4 Setting Event Levels

If Manager receives an SNMP Trap from a device, the device's status display on the Web Console is displayed as described below depending on the support level of the mechanism for the device.

There are three event levels: Error, Warning, and Information.

- Server node agent

The device status may or may not be changed.

For HBA faults and faults detected in the multipath driver, the device status will be changed to a status that is the same as the event level.

For faults detected in middleware besides the multipath driver, the device status is not reflected in the event-only display.

- Support levels A, B and E

The device status is changed to a status which is the same as the event level.

If you have performed the **Reload Conf.** operation after this, the device status for support levels A and B will be changed to the statuses read from the device.

- Support level I (for devices supporting SNMP Traps)

Status is not changed.

Information

The event level for individual SNMP Traps can be customized. Refer to "[A.5 SNMP Trap XML Definition File](#)" for details.

Chapter 3 Operation Design

3.1 LAN Connections

Manager manages devices, using the LAN I/Fs of a managed device.

Connect the LAN for management to all devices subject to management.

In this case, transactions affected by management can be minimized by separating the LAN for management from that for transaction.

3.1.1 Network Requirements

Communication with Manager

When a firewall is placed between Manager and a managed device, set the following port numbers to be able to pass the firewall.

| Transmission Destination Device | Port/Protocol | Transmission Start Direction | Function |
|--|---------------|------------------------------|--|
| Server node (Agent) | 4917/tcp | Manager -> device | Configuration management, Polling monitoring |
| | 162/udp | Device -> Manager | Fault management |
| Windows Server 2008 R2 (Hyper-V function installation environment) Windows Server 2012 (Hyper-V function installation environment) | 5985/tcp | Manager -> device | Configuration management |
| VMware vSphere 4 or later VMware vCenter Server 4 or later | 443/tcp | Manager -> device | Configuration management, Polling monitoring |
| Fibre Channel switches of Fabric OS V6.2 or earlier as follows: ETERNUS SN200 series Brocade Fibre Channel switch PRIMERGY Fibre Channel switch blade | 161/udp | Manager -> device | Configuration management, Performance management, Polling monitoring |
| | 23/tcp | Manager -> device | Configuration management |
| | 162/udp | Device -> Manager | Fault management |
| Fibre Channel switches of Fabric OS V6.3 or later as follows: ETERNUS SN200 series Brocade Fibre Channel switch PRIMERGY Fibre Channel switch blade | 161/udp | Manager -> device | Configuration management, Performance management, Polling monitoring |
| | 22/tcp | Manager -> device | Configuration management |
| | 162/udp | Device -> Manager | Fault management |
| Brocade VDX series PRIMERGY BX Ethernet Fabric Switch | 161/udp | Manager -> device | Configuration management, Performance management, Polling monitoring |
| | 830/tcp | Manager -> device | Configuration management |
| | 162/udp | Device -> Manager | Fault management |
| ETERNUS DX S2 series (DX60 S2 excluded) ETERNUS DX S3 series ETERNUS DX200F | 161/udp | Manager -> device | Configuration management, Performance management, Polling monitoring |
| | 22/tcp | Manager -> device | Configuration management, Performance management |
| | 1999/tcp (*1) | Manager -> device | Configuration management |

| Transmission Destination Device | Port/Protocol | Transmission Start Direction | Function |
|---|---------------|------------------------------|--|
| | 1372/tcp (*2) | Manager -> device | Configuration management, Performance management |
| | 162/udp | Device -> Manager | Fault management |
| ETERNUS DX60/DX60 S2/DX80/DX90 ETERNUS DX400 series ETERNUS DX8000 series | 161/udp | Manager -> device | Configuration management, Performance management, Polling monitoring |
| | 1999/tcp (*1) | Manager -> device | Configuration management |
| | 23/tcp | Manager -> device | Configuration management (For ETERNUS DX60/DX60 S2/DX80/DX90) |
| | 162/udp | Device -> Manager | Fault management |
| Disk Storage System other than listed above | 161/udp | Manager -> device | Configuration management, Polling monitoring |
| | 80/tcp | Manager -> device | Configuration management |
| | 1999/tcp (*1) | Manager -> device | Configuration management |
| | 162/udp | Device -> Manager | Fault management |
| ETERNUS LT250/LT270 | 161/udp | Manager -> device | Configuration management |
| | 162/udp | Device -> Manager | Fault management |
| | ping/icmp | Manager -> device | Polling monitoring |
| NetApp FAS Series and V-Series | 162/udp | Device -> Manager | Fault management |
| | 161/udp | Manager -> device | Polling monitoring |
| Manual embedding, and others | 162/udp | Device -> Manager | Fault management |
| | ping/icmp | Manager -> device | Polling monitoring |

*1: For Maintenance connection

*2: For Maintenance-Secure connection

Communication with Agent

To place Storage Cluster Controller, if a firewall is placed between Agent and a managed device, set the following port number to be able to pass the firewall.

| Transmission Destination Device | Port/Protocol | Transmission Start Direction | Function |
|---|---------------|------------------------------|--|
| ETERNUS DX100 S3/DX200 S3 ETERNUS DX500 S3/DX600 S3 ETERNUS DX8700 S3/DX8900 S3 ETERNUS DX200F | 1372/tcp (*1) | Agent -> device | Monitoring by Storage Cluster Controller |

*1: For Maintenance-Secure connection

3.1.2 SNMP Community

The SNMP Community names which the Manager uses for the managed devices and their SNMP transmissions are specified during device registration. The defaults for the managed device's SNMP Community names are as follows:

| Transmission Destination Device | Default | Access | Method of Settings |
|---|-------------------|--------------------|---|
| Fibre Channel switch ETERNUS SN200 series Brocade Fibre Channel switch PRIMERGY Fibre Channel switch blade | public private | read read/write | Refer to "4.2.1.1 Setting" for detailed settings. |
| Brocade VDX series PRIMERGY BX Ethernet Fabric Switch | public | read | Refer to "4.2.3.1 Setting" for detailed settings. |
| ETERNUS DX series ETERNUS DX200F | public | read | Refer to "4.3.1.1 Setting" for detailed settings. |

Information

The SNMP Community name can be changed with the Web Console.

3.2 Server Node Middleware for Which Management Is Possible

The server node middleware for which management is possible are as follows. Inquire for the latest support information.

| OS Platform | Type of Middleware | Product Name | Version No. | Fault Monitoring |
|------------------------------|--------------------|-----------------------------------|------------------|------------------|
| Solaris 9 | Multipath driver | ETERNUS Multipath driver | 2.0.1 or later | A |
| | Mirror disk driver | PRIMECLUSTER Global Disk Services | All versions | A |
| | File system | UFS | - | N/A |
| Solaris 10 (*1, *2) | Multipath driver | ETERNUS Multipath driver | 2.0.1 or later | A |
| | | MPxIO | - | A |
| | Mirror disk driver | PRIMECLUSTER Global Disk Services | 4.1A40 or later | A |
| | File system | UFS | - | N/A |
| | | ZFS | - | N/A |
| | | QFS | - | N/A |
| Solaris 11 (*1, *3) | Multipath driver | MPxIO | - | A |
| | Mirror disk driver | PRIMECLUSTER Global Disk Services | 4.3A10 or later | A |
| | File system | UFS | - | N/A |
| | | ZFS | - | N/A |
| Windows Server 2003 (x86) | Multipath driver | ETERNUS Multipath driver | V2.0L10 or later | A |
| | File system | NTFS | - | N/A |
| Windows Server 2003 (x64) | Multipath driver | ETERNUS Multipath driver | V2.0L11 or later | A |
| | File system | NTFS | - | N/A |
| Windows Server 2008 | Multipath driver | ETERNUS Multipath driver | V2.0L14 or later | A |
| | | msdsm (*4) | 6.0 or later | A |
| | File system | NTFS | - | N/A |
| Windows Server 2012 | Multipath driver | ETERNUS Multipath driver | V2.0L19 or later | A |
| | | msdsm (*4) | 6.2 or later | A |

| OS Platform | Type of Middleware | Product Name | Version No. | Fault Monitoring |
|------------------------------------|--------------------|--------------------------------|------------------|------------------|
| | File system | NTFS, ReFS | - | N/A |
| RHEL5 RHEL6 | Multipath driver | ETERNUS Multipath driver | V2.0L11 or later | A |
| | | Device-Mapper Multipath | - | A |
| | File system | ext2, ext3 | - | N/A |
| RHEL7 | Multipath driver | ETERNUS Multipath driver | V2.0L26 or later | A |
| | | Device-Mapper Multipath | - | A |
| | File system | ext2, ext3 | - | N/A |
| SUSE Linux Enterprise Server 11 | Multipath driver | ETERNUS Multipath driver | V2.0L11 or later | A |
| | | Device-Mapper Multipath | - | A |
| | File system | ext2, ext3, reiserfs | - | N/A |
| HP-UX 11i v1 HP-UX 11i v2 | Multipath driver | PV-LINK (LVM function) (*5) | - | A |
| | Mirror disk | LVM | - | N/A |
| HP-UX 11i v3 | Multipath driver | PV-LINK (LVM function) (*5) | - | A |
| | | Native multipath function (*5) | - | A |
| | Mirror disk | LVM | - | N/A |
| AIX | Multipath driver | MPIO | - | A |
| | File system | JFS, JFS2 | - | N/A |

*1: If using a zone with Solaris 10 or Solaris 11, the non-global zone is not supported for fault monitoring.

*2: If using a SUN-made HBA, only the file system (UFS, ZFS, and QFS) and the multipath driver (MPxIO) are supported.

*3: If using a SUN-made HBA, only the file system (UFS and ZFS) and the multipath driver (MPxIO) are supported.

*4: This is a multipath driver embedded as a standard in the Windows Server 2008 and later Windows operating systems.

*5: The [Mount Point] in the [End to End View] displays a hyphen ("-").

3.3 Switch Management

In this product, configuration management, fault management and performance management capabilities are supported in relation to the fiber channel switch.

3.3.1 Support Level A and B for Switch Management

The range of operating capabilities for the switch depends on the user's security level. Configure the user's settings accordingly.

- When management including setting and changing the configuration on the switch is operated using Storage Cruiser, specify a user with administrator permission security levels when registering devices on this product.
- When managing the settings and changing the configurations on the switch using equipment other than Storage Cruiser and when the switch status management such as fault management is performed using Storage Cruiser, specify a user with a security level other than a user with administrator permissions when registering devices on this product.

The operating capability differences, depending on the security level of the specified user, are as follows:

| Features | | User with Administrator Permissions (*1) | User with Permissions Other Than Administrator Permissions (*1) |
|---|---|--|---|
| Device detection, automatic registration, registration deletion | | Can be used | Can be used (*2) |
| Configuration Management | Acquire physical connection | Can be used | Can be used |
| | Access path management (status display) | Can be used | Can be used |
| | Operating Beacon | Can be used | Cannot be used |
| | Access path management (set/delete/inherit) | Can be used | Cannot be used (*3) |
| Fault Management | SNMP Trap monitoring | Can be used | Can be used |
| | Device polling monitoring | Can be used | Can be used |
| | Acquiring device status | Can be used | Can be used |
| | Setting the SNMP Trap destination address | Can be used | Cannot be used |
| Performance Management | | Can be used | Can be used |

*1: The operating capabilities differ according to the support level.

*2: After registering the device, change the SNMP Community name on the switch information change screen.

| Configuration Items | Configuration Details |
|-----------------------------|--|
| SNMP Community name (Write) | SNMP community name in the Write direction. The device registration is set to "private". Change this to "public". |

Refer to "Change FC Switch Information" in the *ETERNUS SF Web Console Guide* for the operation details.

*3: Zoning information cannot be set or deleted in relation to the switch. For this reason, when setting/deleting/inheriting the access path for this product, set/delete the zoning information in relation to the switch in advance. When the zoning information is not set/deleted in advance, an error will occur in the operation results. When an error occurs without the zoning information being set/deleted in advance, perform setting/deletion of zoning information in relation to the switches on the access path route and perform the **Reload Conf.** operation in relation to the relevant switches.

Chapter 4 Environment Configuration

This chapter provides settings and notes required for devices to be managed.

Flow of All Operations

Whether building a new storage system or using this software for an existing storage system, start the environment setup and operation according to the procedure indicated in the figure shown below. Software can be installed and set up on individual devices in any sequence.

Note that once this software is installed and devices to be managed are registered, regardless of the connection status from the Web Console, while the Management Server is starting up, the processing for when there is a fault/fault monitoring will be performed to the registered device. Also, for the device for which performance management is being performed, performance information will continue to be stored.

4.1 Server Node

4.1.1 Solaris OS Server Node

Two methods are used for managing Solaris OS server nodes: one method installs Agent on the host, and the other does not.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).



See

Refer to "[3.2 Server Node Middleware for Which Management Is Possible](#)" for information about products that can be monitored by Agent.



Note

Limitations When Solaris OS Server Nodes Are Managed Using Agent:

- If device files of more than one controller number are generated
If more than one device driver type is used to access storage of a different type from a single HBA, device files for at least 2 controller numbers may be generated for the single HBA. This software does not support this status.
If there is a problem with information gathering or display, manage the server nodes using the manual embedding function. Refer to "[5.2.6 Registering Manually Embedded Device](#)" for details on the manual embedding function.

4.1.1.1 SNIA HBA API Library Settings

To manage the HBAs that are installed at Solaris OS server nodes, the SNIA HBA API library that an HBA vendor distributes must be installed.

Refer to the *SNIA HBA API Library Installation Guide* at the following URL for details on how to install the HBA API library:

<http://storage-system.fujitsu.com/global/doc/sms/>

4.1.1.2 N-port Settings

N port setting is needed on the side of HBA when connecting with the Fibre Channel switch. The method of setting the port of HBA as N port depends on the HBA type. Each method for setting is shown below.

For Solaris OS Default emlxs Driver (Target HBA: XSEFC401AF, XSEFC402AF, SG-XPCIE2FC-EM4, SG-XPCIE2FC-EM8, and so on.)

Specify "2" for the emlxsX-topology parameter in the /kernel/drv/emlxs.conf file.

```
#
# +++ Fibre Channel specific parameters +++
#
# topology: link topology for initializing the Fibre Channel connection.
#
#         0 = attempt loop mode, if it fails attempt point-to-point mode
#         2 = attempt point-to-point mode only
#         4 = attempt loop mode only
#         6 = attempt point-to-point mode, if it fails attempt loop mode
#
# Set point-to-point mode if you want to run as an N_Port.
# Set loop mode if you want to run as an NL_Port.
#
# Range: Min:0 Max:6 Default:0
#
emlxs0-topology=2;
emlxs1-topology=2;
```

For Solaris OS Default qlc Driver (Target HBA: SE0X7F21F, SE0X7F22F, SG-XPCI1FC-QF4, SG-XPCIE2FC-QF8, and so on.)

N port settings are not required.

4.1.2 Windows Server Node

This software provides two methods for managing Windows hosts: one method installs Agent on the host, and the other does not.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).

To place Storage Cluster Controller, agent must be installed.



See

.....
Refer to "[3.2 Server Node Middleware for Which Management Is Possible](#)" for information about the products that can be observed by Agent.

Refer to "[9.5 Storage Cluster Controller](#)" for details of the Storage Cluster Controller and its operation method.
.....

4.1.2.1 SNIA HBA API Library Settings

To manage the HBAs that are installed in Windows server nodes, the SNIA HBA API library that an HBA vendor distributes must be installed.

Refer to the *SNIA HBA API Library Installation Guide* at the following URL for details on how to install the HBA API library:

<http://storage-system.fujitsu.com/global/doc/sms/>


4.1.2.2 N-port Settings

To connect Emulex Corporation LP7000, 8000, 9000, 9002L, 9802, 1050, 1050Ex, to a Fibre Channel switch, N-port settings are required on the HBA side.

To make up a SAN by connecting Emulex Corporation LP7000, 8000, 9000, 9002L, 9802, 1050, 1050Ex to the fibre channel switch, use the driver parameter in the registry to indicate explicitly that the topology is an N-port. The following indicates the procedure for setting the topology in the driver parameter:

1. Open the registry editor.
Select [Start] - [Run...] from the task bar, and then execute the following:
regedit.exe
2. Open the keyword of the following registry key, and then set the Topology value to 1:

```
HKEY_LOCAL_MACHINE\
System\
  CurrentControlSet\
    Services\
      lpxnds\
        Parameters\
          Device\
            "DriverParameter"      Topology=1
```

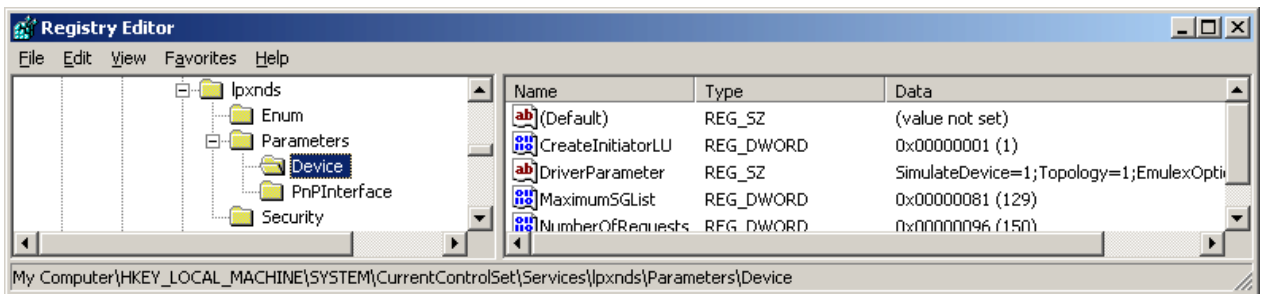

- The DriverParameter value depends on the version of the driver used. The Topology word may not exist depending on the driver version. In this event, the Topology word must be added. For details, refer to the readme file supplied with the driver or contact the HBA vendor.
- If the system accommodates more than one Emulex HBA and you want to connect them to Fibre Channel using different topologies, follow the above procedure for each HBA. For details, refer to the readme file supplied with the driver or contact the HBA vendor.
- The procedure involves changing the registry contents. Take particular care when carrying out the procedure because, if any part of the registry becomes corrupted as a result of an operation mistake or an operation that is not in the procedure, restarting the Windows system may not be possible.

4.1.3 Linux Server Node

This software provides Linux server nodes with two management methods. In one method Agent is installed and in the other method Agent is not installed.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).



See

Refer to "[3.2 Server Node Middleware for Which Management is Possible](#)" for information about the products that can be observed by Agent.

4.1.3.1 SNIA HBA API Library Settings

It is necessary to install the HBA API library that the HBA vendor distributes to manage HBA installed in the Linux server node.

Refer to the *SNIA HBA API Library Installation Guide* at the following URL for details on how to install the HBA API library:

<http://storage-system.fujitsu.com/global/doc/sms/>

4.1.3.2 Using udev Device

Information

- The udev device is a Linux function that always assigns a fixed device name, even if the hardware configuration is changed.

It assigns a device name that starts with "/dev/disk", unlike for existing device names, such as "/dev/sda".

"/dev/disk/by-path/xxxxxxx" xxxxxxx is information generated from the disk location information

"/dev/disk/by-id/yyyyyyy" yyyyyyy is information generated from the disk ID information

In the following explanations, device names that start with "/dev/disk/by-path" are shown as "by-path", and device names that start with "/dev/disk/by-id" are shown as "by-id". Existing device names, such as "/dev/sda", are shown as compatible device names.

If the Linux udev function is used for devices monitored using Storage Cruiser, use "by-id".

"by-id" is a symbolic link to "/dev/sd?name", therefore the relationship for "by-id" and the compatible device name displayed in this software can be checked by using the "ls -l /dev/disk/by-id" command.

Example

Method Shown below Checks "by-id" for "/dev/sdb"

```
# ls -l /dev/disk/by-id/  
Total 0  
lrwxrwxrwx 1 root root 9 April 3 21:28 scsi-1FUJITSU_300000690000 -> ../../sdb  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690000-part1 -> ../../sdb1  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690000-part2 -> ../../sdb2  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690000-part3 -> ../../sdb3  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690000-part7 -> ../../sdb7  
lrwxrwxrwx 1 root root 9 April 3 21:28 scsi-1FUJITSU_300000690001 -> ../../sdc  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690001-part1 -> ../../sdc1  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690001-part2 -> ../../sdc2  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690001-part3 -> ../../sdc3  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690001-part7 -> ../../sdc7  
lrwxrwxrwx 1 root root 9 April 3 21:28 scsi-1FUJITSU_300000690002 -> ../../sdd  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690002-part1 -> ../../sdd1  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690002-part2 -> ../../sdd2  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690002-part3 -> ../../sdd3  
lrwxrwxrwx 1 root root 10 April 3 21:28 scsi-1FUJITSU_300000690002-part7 -> ../../sdd7
```

Accordingly, it is possible to determine that "by-id" of "/dev/sdb" is "/dev/disk/by-id/scsi-1FUJITSU_300000690000".

Point

- "by-path" for the device that is connected to the Fibre Channel switch may change, therefore specify "by-id".
- Linux device nodes are displayed as compatible device name "sd?" in this software. The "by-id" and "by-path" are not displayed. Check the relationship using the command as shown above.

4.1.4 HP-UX Server Node

This software provides two methods for managing the HP-UX server node. In one method, Agent is installed on the node, in the other, it is not.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).



See

Refer to "3.2 Server Node Middleware for Which Management Is Possible" for information on products that can be monitored by Agent.

To manage the HBA mounted on an HP-UX server node, the HBA API library must be installed. When in doubt, contact your HBA sales representative.

4.1.5 AIX Server Node

This software provides two methods for managing the AIX server node. In one method, Agent is installed on the node, in the other, it is not.

There is a difference in functionality depending on whether the agent was installed or whether it was not installed (with registration performed by manual embedding).



See

Refer to "3.2 Server Node Middleware for Which Management Is Possible" for information on products that can be monitored by Agent.

To manage the HBAs that are installed in AIX server nodes, the HBA API contained OS standard FC driver must be installed. Refer to the AIX manuals for details.

Execute the following command to check that HBA API is installed.

```
# /usr/bin/lslpp -l | /usr/bin/egrep -c "devices.common.IBM.fc.hba-api"
```

When the execution result is "1" or more, HBA API is already installed.



Note

On an AIX agent installed server, the following problems may occur:

- It takes lots of time to register a server.
- It takes lots of time to reload configuration.
- The HBA port information for a target server may not be properly recognized.

If any of those mentioned above is seen, check all the HBA ports for proper connection. If there is any fibre channel device corresponding to an HBA port that is not connected, delete it if possible. To check HBA port-fibre channel device correspondence, refer to the AIX document. In addition, if the server is restarted, this operation may be needed again.

[Example of deleting unused fibre channel device fcs3]

```
# /usr/sbin/rmdev -Rdl fcs3
```

If a problem does not fall under those mentioned above, refer to "B.1 Collecting Troubleshooting Information" to collect analysis material and contact Fujitsu Technical Support.

4.1.6 Other Server Nodes (Supported OS or Solaris OS/Windows/Linux/HP-UX/AIX without Agent)

This software also provides a method for manually managing server nodes that are not supported by Agent or Solaris OS/Windows/Linux/HP-UX/AIX environments in which Agent is not installed.

Status inquiry or automatic reading of configuration data from a device cannot be performed, but the configuration can be changed by displaying the devices on the screen and manually editing the configuration.



See

Refer to "[5.2.6 Registering Manually Embedded Device](#)" for information on the procedure for registering the Managed Server without Agent.

4.1.7 VMware Server Node

This software supports VMware vSphere 4 or later.

If using End to End display for the VM host (VMware ESX or VMware ESXi) itself and any VM guests (virtual machines and guest operating systems) and storage devices can be supported by registering the VM host to the VMware vCenter Server.

It communicates directly with VMware ESX, VMware ESXi or VMware vCenter Server without using an Agent, and displays information about the VM host and VM guests.

4.1.7.1 Setting

IP addresses

It is recommended to set an IP address in the same format (IPv4 or IPv6) as the VM host.

If the IP address format (IPv4 or IPv6) of the VM guest is different from that of the VM host, the IP address of the VM guest is not displayed.

VMware Tools

It is recommended that VMware Tools be installed on the guest OS.

VMware Tools must be running on the guest OS in order to display information about the guest OS (such as the IP address, host name, and the name and version of the operating system). When VMware Tools is not installed on the guest OS, refer to "[4.1.7.2 Problem-handling \(FAQ\)](#)" for what is displayed in it.

To use the VMware vSphere Virtual Volumes function, install VMware Tools on the guest OS.

When operating an Exchange Server Database Availability Group (hereinafter referred to as "DAG") in the VM guest environment

Set the IP address for management of the VM guest and the IP address for the DAG to another network adapter each. Assign the IP address for management of the VM guest to the network adapter with the highest number.

If the VM guest is a single network adaptor environment, newly allocate the network adaptor to the VM guest, and operate the network adaptor separately for IP address for DAG and IP address for the management of the VM guest.

When displaying the End to End list for VM guest and storage device or in the VMware vSphere Virtual Volumes environment

Registration of the VMware vCenter Server to which the VM host was registered is also necessary. An IP address, user name, and password are required for registering the VMware vCenter Server.

When the VM host has been registered to the VMware vCenter Server using the IP address, specify the IP address registered to the VMware vCenter Server also when registering the VM host to this product.

If VMware vCenter Server is already registered to this product, reload VMware vCenter Server.

4.1.7.2 Problem-handling (FAQ)

VM Host

- When the hostname or IP address is changed
After changing the IP address or host name of the VM host, perform the **Reload Conf.** operation for the target device on the Web Console.
- When the user name or password is changed
After changing the user name or password, set the new username or password for this software using the Web Console.

VM Guest

- When the virtual machine name or host name of the guest OS is changed
After changing the virtual machine name of the VM guest or host name of the guest OS, perform the **Reload Conf.** operation for the VM host where the target device exists, on the Web Console.

- When the IP address of the guest OS is changed
After changing the IP address of the guest OS, perform the **Modify** operation for the target device on the Web Console.
- When the host name of the guest OS is not displayed
Check whether VMware Tools is running. If VMware Tools is not running, the virtual machine name is displayed in the [Name] for VM guests.
- When the OS information of the guest OS is not displayed
Check whether VMware Tools is running. If VMware Tools is running, the name and the version of the guest OS are displayed in the [OS]. (The OS version is not displayed in the [OS Level].) If VMware Tools is not running, the system name and the version number of VMware are displayed in the [OS] and [OS Level].
- When the status of the guest OS is displayed as "Stop" even though it is running
Check whether VMware Tools is running. If VMware Tools is stopped, the status of the guest OS is displayed as "Stop" (even if the guest OS is running). If VMware Tools has not been installed, then the [Status] of VM guests is "Normal" if the virtual machine is running and "Stop" if the virtual machine is stopped, regardless of the [Status] of the guest OS.
- When the status of the guest OS is displayed as "Warning"
Check whether a wrong username or password causes a communication failure with the VM host.
- When a DAG IP address is displayed for the IP address of the VM guest
Add a new network adaptor to the VM guest, and set IP address for the management of the VM guest to it again. Perform the **Reload Conf.** operation with the Web Console after setting.



Note

- If more than one network adapter is defined in the VM guest, an IP address of the VM guest is displayed only one. The IP address assigned to the network adapter with the highest number among the valid network adapters defined in the VM guest is displayed.

4.2 Fibre Channel Switch

4.2.1 SN200 (Brocade) Fibre Channel Switch

This software supports ETERNUS SN200 series Fibre Channel switch, and PRIMERGY Fibre Channel switch blade.

The settings that must be directly defined on the device side before this software manages these Fibre Channel switches are explained below. Refer to the manual supplied with the respective device for details.

4.2.1.1 Setting

IP Address, Subnet Mask, and Gateway Address (Required)

Define the IP address, subnet mask, and gateway address for a LAN. If the Fibre Channel switch is equipped with an operation panel, these settings can be defined from the operation panel. If the Fibre Channel switch is equipped with a serial port, define them by issuing the ipAddrSet command via the serial port.

User Name and Password for Fibre Channel Switch Control

For Fibre Channel switch control, this software is used to log in using telnet/SSH to the device. Set users with security levels according to the requirements of the system administrator. In the factory shipped configuration, users with an administrator security level shall have the user name "admin" and the password of "password".

If the password has been changed on the device side, when perform the **Reload Conf.** operation for the relevant device with the Web Console, this software recognizes the change and the device status becomes a Warning display.

In order for the setting to match the changed device setting, perform a change to the account information for device management using the Web Console.

For some types of devices, the change of the password on the device side cannot be recognized automatically. Change the device management account information in the Web Console for these devices.

When connected to a cascade, some types of devices cannot automatically recognize the changed password. In this case, delete the device and register it again. Refer to ["5.2 Registering Device"](#) for details on deleting and registering devices.

Depending on the firmware version, the communication method with devices varies. Enable the corresponding communication protocol function from settings to devices.

- Fabric OS v6.2 or earlier: telnet
- Fabric OS v6.3 or later: SSH

Domain Name

A domain name is a unique name defined for a Fibre Channel switch in a SAN. Such names are necessary for a cascade connection of multiple Fibre Channel switches. Since domain names are automatically defined by firmware built into the individual Fibre Channel switches, the name need not be considered during definition and management of access paths using this software.

However, the domain names are important elements in manual port zoning. In such cases, make sure that no identical value is set for any two Fibre Channel switches in the cascade connection. If a Fibre Channel switch is equipped with an operation panel, a domain name can be set from the operation panel. If a Fibre Channel switch is equipped with a serial port or if network settings are defined for the Fibre Channel switch, log in to the switch, and set a domain name by executing the configure command.

SysName (Recommended)

Register a switch name for Fibre Channel switch control. This software uses this switch name as SysName. SysName should be a name that is not identical to any other name registered with this software. If the Fibre Channel switch is equipped with an operation panel, a switch name can be set from the operation panel. If the Fibre Channel switch is equipped with a serial port or if the network settings are defined for the Fibre Channel switch, log in to the switch, and set a switch name by executing the switchName command.

Zoning Setting

Zoning is recommended.

No zoning may be set for Fibre Channel switches. When Fibre Channel switches that are not set the zoning are connected to server nodes or storage devices, they are placed in a state where their security levels are undefined (which makes all of the Fibre Channel switches accessible from every server node). To prevent inadvertent access from destroying data on the storage side, recommend to set the temporary zone as follows. By this setting, it is able to stop all access paths of the Fibre Channel switches. After defining this setting, connect the server node and storage device to the Fibre Channel switch, and set up an access path using this software. When setting up a cascade connection between the Fibre Channel switch and another Fibre Channel switch for which zoning is already set, you need not define this setting because zoning information is copied. The setting is also not necessary if the default of zoning mode is set to "No Access" on the Default Zone function of the Fibre Channel switch.

```
zoneCreate "SNM_0001" , "00:0B:00:00:0E:00:00:00;00:0C:00:00:0E:00:00:00"  
cfgCreate "SNM_BCSI" , "SNM_0001"  
cfgEnable "SNM_BCSI"  
cfgSave
```

If the Fibre Channel switches are to be cascaded for operation, cascade the switches before executing the above command. Execute this command on a Fibre Channel switch where the latest firmware has been installed.

Note

- If the temporary zone has been created, all accesses will be blocked. For this reason, do not implement this measure while the target Fibre Channel switch environment is operating. Implement this measure either immediately after the Fibre Channel switch environment has been installed and before operations have started (or while operations are paused).
- The [storageadm zone](#) command cannot be used for the following Fibre Channel switches. In this cases, set the temporary zone.
 - Fibre Channel switches that the temporary zone is not set
 - Fibre Channel switches that default of zoning mode is not set to "No Access" on the Default Zone function

SNMP Community Setting

This software handles fibre channel switches and SNMP transmissions.

The name of the SNMP Community used for SNMP transmission is specified when registering the switch. If the SNMP Community settings are at their defaults, this software communicates by using "public" or "private" for the SNMP Community name.

To change the SNMP Community name, change the device side, and then change the SNMP Community name in this software. It is possible to change the settings of this software from the Web Console.

SNMP-MIB Setting

For the SNMP-MIB setting of the Fibre Channel switch (except for ETERNUS SN200 model 250M and Brocade AP7420), set the following by specifying the "snmpConfig --set mibCapability" command or the "snmpMibCapSet" command. Specify "yes" for the "FE-MIB", "SW-MIB", "FA-MIB", "HA-MIB" and "SW-TRAP" items. Leave the other items unspecified. Simply press ENTER for these unspecified items.

```
sn200:admin> snmpConfig --set mibCapability
  The SNMP Mib/Trap Capability has been set to support
(omitted)
FE-MIB (yes, y, no, n): [yes] yes
SW-MIB (yes, y, no, n): [yes] yes
FA-MIB (yes, y, no, n): [yes] yes
FICON-MIB (yes, y, no, n): [yes]
HA-MIB (yes, y, no, n): [yes] yes
FCIP-MIB (yes, y, no, n): [no]
ISCSI-MIB (yes, y, no, n): [no]
SW-TRAP (yes, y, no, n): [yes] yes
  swFCPortScn (yes, y, no, n): [yes]
  swEventTrap (yes, y, no, n): [yes]
  swFabricWatchTrap (yes, y, no, n): [yes]
  swTrackChangesTrap (yes, y, no, n): [yes]
(omitted)
sn200:admin>
```

The output of the above command may depend on the firmware version of the Fibre Channel switch. Change the settings of only the "FE-MIB", "SW-MIB", "FA-MIB", "HA-MIB" and "SW-TRAP" items.

Note that if HA-MIB items are not displayed, HA-MIB settings are not required.

If "FE-MIB" and "SW-MIB" are not set to "yes", searching and registering devices fail.

If "FA-MIB" is not "yes", physical connection information, port zoning information, and port speed (transfer rate) information on each port of the Fibre Channel switch is erroneously recognized.

The fault monitoring function will only run if "SW-TRAP" is set to "yes".

The director performance management function will only run if HA-MIB is set to "yes".

4.2.1.2 Zoning

This software uses the one-to-one WWPN zoning of the Fibre Channel switch as the basis for setting up and removing access paths (logical paths). However, it also supports other types of zoning settings at their respective levels. The functions that it supports for the different types of zoning are as follows:

No Zoning Setting (with This Software, This Is Called "no security state".)

This is a state that has no zoning setting. In this state, the Fibre Channel switch permits access between all ports. It is the factory default setting. However, if a Fibre Channel switch is connected in cascade to another Fibre Channel switch with a zoning setting, the zoning setting information is copied when cascade connection communication is established.

This software can perform management normally for the Fibre Channel switches without a zoning setting. Also, when registering a Fibre Channel switch with this software, you can specify whether to set zoning in response to a subsequent software attempt to set up an access path.

With no zoning setting, the Fibre Channel switch operates with security management delegated to the binding and affinity capabilities of server nodes and storage devices.

WWPN Zoning Setting

The WWPN zoning setting is a method by which zoning is defined based on the WWPN of a Fibre Channel port. A WWPN value that is unique throughout the world is defined for each port. As a result, no wrong access path is created even if the port connection place of the Fibre Channel switch is changed.

All access path control functions of this software are effective for access paths defined in the one-to-one WWPN zoning setting. For other defined access paths, this software can read access and display path information, but it cannot delete and inherit the access paths. However, it is possible to delete only zoning setup.

Port Zoning Setting

The port zoning setting is a method by which zoning is defined based on the specification of the port connection place of the Fibre Channel switch. A new port zoning setting must be defined if the port connection place of the Fibre Channel switch is changed.

As for the access path control functions, this software can read information about access paths for which port zoning is set, display the paths, and manage their status, but it cannot delete and inherit the access paths. However, it is possible to delete only zoning setup.

WWNN Zoning Setting

The WWNN zoning setting is a method by which zoning is defined based on the WWNN of a Fibre Channel port. Though a WWNN can be shared by several Fibre Channel ports, its definition differs from company to company.

As for the access path control functions, this software cannot display or delete access paths for which WWNN zoning is set. However, it can perform fault management of the Fibre Channel switch.

Different types of zoning settings can be defined for the Fibre Channel switch. To allow this software to provide complete zoning security, however, changing the existing zoning setting to the one-to-one WWPN zoning setting is recommended.

The zoning setting can be defined in the Zone Administration window of WEBTOOLS of the Fibre Channel switch. Note that settings in WEBTOOLS are dependent on the device and firmware.

4.2.1.3 Problem-handling (FAQ)

Device Cannot Be Detected

- Check whether the SNMP Community settings on the device side agree with the settings of this software. Refer to "[SNMP Community Setting](#)" for details.
- Check whether the SNMP MIB settings on the device side match the settings of this product. Refer to "[SNMP-MIB Setting](#)" for details.
- For devices that do not support [Detect device in subnet] as described in "[1.2.9 Support Levels](#)", use the IP address assignment.
- Check whether the Ethernet port communication speed has been set correctly.
- When setting the SNMP access control list, confirm the access from the manager is permitted.

Warning for Device Is Displayed

- Check whether a hardware error (FC port, FAN, power supply, temperature, etc.) has occurred.
- Confirm whether or not the password is changed on the device side. If the password is changed on the device side, refer to "[User Name and Password for Fibre Channel Switch Control](#)" and change the registration information of this software.
- When the device is powered on or rebooted, initialization is performed in the device. If you perform the **Reload Conf.** operation for the relevant device with the Web Console while the initialization is being performed, a Warning message for the device may appear. If no error occurs on the device, perform the **Reload Conf.** operation for the relevant device using the Web Console after device initialization. The display then becomes Normal.

Warning for Access Path Is Displayed

- There is no zoning setting for configuring the access path.
- If a Warning is displayed on the screen, refer to "[Warning for Device Is Displayed](#)".

Error in Access Path Is Displayed

- Check whether all the Fibre Channel switches connected in cascade are registered in this software. Register all the Fibre Channel switches that have not been registered.
- Make sure that the device in an access path is powered on and there is no problem with the LAN connection. Furthermore, check whether the SNMP Community settings on the device side agree with the settings of this software. Refer to "[SNMP Community Setting](#)" for details.
If the network communication is disabled because of device replacement or maintenance, the physical connection line is not displayed.

Warning for Server Node Is Displayed (in Yellow)

- Refer to "[Error in Access Path Is Displayed](#)".

When Changing SNMP Community of Device

- Refer to "[SNMP Community Setting](#)".

When Changing Password of Device

- Refer to "[User Name and Password for Fibre Channel Switch Control](#)".

When PG-FCD101 or PG-FCD102 Is Not Displayed

- Check whether there are zoning settings in the Fibre Channel switch that is connected to PG-FCD101 or PG-FCD102. If there are no zoning settings, refer to "[Zoning Setting](#)" and then create a temporary zoning.



Note

- The ETERNUS SN200 series, Brocade Fibre Channel switch can define six monitoring device addresses (SNMP Trap transmission places) per device and a different SNMP Community name for each of these addresses. This software must be used by overwriting the entry where the name of SNMP Community is set in this public. If the device side is designed to change the name of SNMP Community of public and accordingly the settings of this software, the entry with the changed name of SNMP Community will be used.
- The ETERNUS SN200 series, Brocade Fibre Channel switch features the QuickLoop function that accomplishes FC-AL hub emulation. However, this software does not support Fibre Channel switches for which this function is enabled.
- This software communicates with the Fibre Channel switch using SNMP.
- This product communicates with the Fibre Channel switch with telnet or SSH. The communication protocol used varies with the device's firmware version.
 - Fabric OS v6.2 or earlier: telnet
 - Fabric OS v6.3 or later: SSH
- SN200 and Brocade Fibre Channel Switch supports the password-less login function by SSH public key authentication. However, this product does not provide this function.
- It is recommended of Fibre Channel switch redundancy (cascading).

At present, the Fibre Channel switch zoning information cannot be restored from the database of this software. Therefore, multiple Fibre Channel switches must be connected in cascade to prevent the zoning information stored on the Fibre Channel switches from being erased. The zoning information is stored separately on each of the Fibre Channel switches connected in cascade. Even if one of the Fibre Channel switches fails, the zoning information is stored by the other switches.

The Fibre Channel switch zoning information is changed using the access path setting. When cascade connection is not used, be sure to save the device configuration information (configUpload file) after making changes in the settings. Refer to the manuals that come with the device for details on storing configuration information.

However, cascade connections should not be implemented between two or more ETERNUS VS900 model 300.

- To manage Fibre Channel switches with this software, all the Fibre Channel switches that are connected in cascade must be registered with this software. If any Fibre Channel switch is connected in cascade but not registered with this software, the SAN environment cannot be correctly managed.

- In consideration of incompatibility of Fibre Channel switch firmware, this software checks the firmware version number. If this software detects firmware that it does not support, all functions including the configuration management is restricted. The following message is output to the event log. (XXXXXX is the version number of the detected firmware.)
"Unsupported Firmware Version XXXXXX"
Contact your Fujitsu CE or SE because patches need to be applied to this software.
- The FC routing function is not supported.
If a cascade is connected using the FC routing function, the cascade connection line is not displayed in the Web Console. For this reason, an error is displayed for the access path that goes through the cascade connection line, and a Warning is displayed for the server node that is used to configure the access path.
- To the GbE port, It may takes a time till SNMP Trap is notified.
Following SNMP Traps are displayed in the event log when execute disconnect/connect FC cable in a short time.
 - When the cable is disconnected : [Link Down Trap]
 - When the cable is connected : [Link Up Trap]

The port where the trouble occurs cannot be specified from the event log, also the event linkage function does not operate. Login to the Fibre Channel switch to specify the port where the trouble occurs, and confirm the state of the VE port and the GbE port.

* Also following event logs are displayed with above event log.

 - When the cable is disconnected : [FC Port No.214 Offline]
 - When the cable is connected : [FC Port No.214 Online]
- For GbE ports that are used in the FCIP tunneling function, virtual FC ports are displayed in the Web Console as follows:

| Device | Number of Virtual FC Ports |
|---|----------------------------|
| SN200 model 450M Brocade 7500 | 16 (*1) |
| Brocade 7800 | 8 |
| FCR/FCIP Blade (This is installed in SN200 model 540) | 16 (*1) |
| Extension Blade (FC 8Gbps) (This is installed in Brocade DCX series) | 20 |

*1: For firmware versions prior to v5.2.0, a Warning is displayed in the Web Console for the FC ports for which the FCIP tunneling function is disabled. Monitor the occurrence of errors using SNMP Trap.

- [1Gbit/s] is displayed as the VE port transfer speed.
- This software does not support the Administrative Domain (Admin Domain).

4.2.2 PRIMERGY Fibre Channel Switch Blade

Refer to "4.2.1 SN200 (Brocade) Fibre Channel Switch" for information on how to set up the environment.

4.2.3 Brocade VDX Series

This product supports the Brocade VDX series.

The following is a description of the items required to be preconfigured directly to the device side to manage the Brocade VDX series with this product. Refer to the manual provided with the device for details of those items.

4.2.3.1 Setting

Connecting to Network (Required)

Make the required settings for the Brocade VDX series which you use to connect to a network, and then connect to the network. Refer to the manuals provided with the respective devices for details on the setting method.

User Name and Password for Fibre Channel Switch Control

For Fibre Channel switch control, this software is used to log in using SSH to the device. Set users with security levels according to the requirements of the system administrator. In the factory shipped configuration, users with administrator security level shall have the user name "admin" and the password of "password".

If the password has been changed on the device side, when perform [Reload Conf.] for the relevant device with the Web Console, this software recognizes the change and the device status becomes a Warning display.

In order for the setting to match the changed device setting, perform a change to the account information for device management using the Web Console.

SysName (Recommended)

Register a host name for Fibre Channel switch control. This software uses this host name as SysName. SysName should be a name that is not identical to any other name registered with this software.

Refer to the manuals provided with the respective devices for details on the setting method.

Zoning Setting

Zoning is recommended.

No zoning may be set for Fibre Channel switches. When Fibre Channel switches that are not set the zoning are connected to server nodes or storage devices, they are placed in a state where their security levels are undefined (which makes all of the Fibre Channel switches accessible from every server node).

To prevent inadvertent access from destroying data on the storage side, recommend to set the temporary zone as follows:

By this setting, it is able to stop all access paths of the Fibre Channel switches. After defining this setting, connect the server node and storage device to the Fibre Channel switch, and set up an access path using this software.

When setting up a cascade connection between the Fibre Channel switch and another Fibre Channel switch for which zoning is already set, you need not define this setting because zoning information is copied.

The setting is also not necessary if the default of zoning mode is set to "No Access" on the Default Zone function of the Fibre Channel switch.

```
VDX-Sw# configure terminal
Entering configuration mode terminal
VDX-Sw(config)# zoning defined-configuration zone SNM_0001
VDX-Sw(config-zone- SNM_0001)# member-entry 00:0B:00:00:0E:00:00:00
VDX-Sw(config-zone-SNM_0001)# member-entry 00:0C:00:00:0E:00:00:00
VDX-Sw(config-zone-SNM_0001)# exit
VDX-Sw(config)# zoning defined-configuration cfg SNM_BCSI
VDX-Sw(config-cfg-SNM_BCSI)# member-zone SNM_0001
VDX-Sw(config-cfg-SNM_BCSI)# exit
VDX-Sw(config)# zoning enabled-configuration cfg-name SNM_BCSI
VDX-Sw Updating flash ...
VDX-Sw(config)# end
VDX-Sw#
```

If the Fibre Channel switches are to be cascaded for operation, cascade the switches before executing the above command.

Note

- If the temporary zone has been created, all accesses will be blocked. For this reason, do not implement this measure while the target Fibre Channel switch environment is operating. Implement this measure either immediately after the Fibre Channel switch environment has been installed and before operations have started (or while operations are paused).

- The `storageadm zone` command cannot be used for the following Fibre Channel switches. In this cases, set the temporary zone.
 - Fibre Channel switches that the temporary zone is not set
 - Fibre Channel switches that default of zoning mode is not set to "No Access" on the Default Zone function



SNMP Trap Settings

Although SNMP Trap is used in fault monitoring, the SNMP Trap send destination address automatic settings function is not supported for Brocade VDX series.

In order for SNMP Trap to be sent to the Management Server, log in to the device, execute the following commands in the given sequence, and then set the SNMP Trap send destination address.

If the Management Server is defined as a cluster, the logical IP address of the cluster needs to be set.

```
switch# configure terminal
switch(config)# snmp-server host [SNMP Trap send destination address] public version 1 udp-port 162
severity-level Warning
switch(config)# exit
```

Refer to the manuals provided with the respective devices for details on the setting method.

SNMP Community Setting

If the SNMP Community settings are at their defaults, this software communicates by using "public" for the SNMP Community name.

To change the SNMP Community name, change the device side, and then change the SNMP Community name in this software. It is possible to change the settings of this software from the Web Console.

4.2.3.2 Zoning

This software uses the one-to-one WWPN zoning of the Fibre Channel switch as the basis for setting up and removing access paths (logicalpaths). However, it also supports other types of zoning settings at their respective levels. The functions that it supports for the different types of zoning are as follows:

No Zoning Setting

This is a state that has no zoning setting.

In this situation, if the default zoning mode is set to All Access, access is permitted across all the ports of the fibre channel switch. (This product refers to this situation as No Security status)

If the default zoning mode is set to No Access, access is blocked across all the ports of the Fibre Channel switch.

In the case of "No Access" or "All Access", if a Fibre Channel switch is connected in cascade to another Fibre Channel switch with a zoning setting, the zoning setting information is copied when cascade connection communication is established.

This software can perform management normally for the Fibre Channel switches without a zoning setting. Also, when registering a Fibre Channel switch with this software, you can specify whether to set zoning in response to a subsequent software attempt to set up an access path. With no zoning setting, the Fibre Channel switch operates with security management delegated to the binding and affinity capabilities of server nodes and storage devices.

WWPN Zoning Setting

The WWPN zoning setting is a method by which zoning is defined based on the WWPN of a Fibre Channel port.

A WWPN value that is unique throughout the world is defined for each port. As a result, no wrong access path is created even if the port connection place of the Fibre Channel switch is changed.

All access path control functions of this software are effective for access paths defined in the one-to-one WWPN zoning setting. For other defined access paths, this software can read access and display path information, but it cannot delete and inherit the access paths.

However, it is possible to delete only zoning setup.

WWNN Zoning Setting

The WWNN zoning setting is a method by which zoning is defined based on the WWNN of a Fibre Channel port. Though a WWNN can be shared by several Fibre Channel ports, its definition differs from company to company.

As for the access path control functions, this software cannot display or delete access paths for which WWNN zoning is set.

Point

In Brocade VDX series, the WWNN zoning can be set. To allow this software to provide complete zoning security, however, changing the existing zoning setting to the one-to-one WWPN zoning setting is recommended.

4.2.3.3 Problem-handling (FAQ)

Device Cannot Be Detected

- Check whether the SNMP Community settings on the device side agree with the settings of this software. Refer to "[SNMP Community Setting](#)" for details.
- Check whether the Ethernet port communication speed has been set correctly.

Warning for Device Is Displayed

- Check whether a hardware error (FC port, FAN, power supply, temperature, etc.) has occurred.
- Confirm whether or not the password is changed on the device side. If the password is changed on the device side, refer to "[User Name and Password for Fibre Channel Switch Control](#)" and change the registration information of this software.
- When the device is powered on or rebooted, initialization is performed in the device. If you perform the **Reload Conf.** operation for the relevant device with the Web Console while the initialization is being performed, a Warning message for the device may appear. If no error occurs on the device, perform the **Reload Conf.** operation for the relevant device using the Web Console after device initialization. The display then becomes Normal.

Warning for Access Path Is Displayed

- There is no zoning setting for configuring the access path.
- If a Warning is displayed on the screen, refer to "[Warning for Device Is Displayed](#)".

Error in Access Path Is Displayed

- Check whether all the Fibre Channel switches connected in cascade are registered in this software. Register all the Fibre Channel switches that have not been registered.
- Make sure that the device in an access path is powered on and there is no problem with the LAN connection. Furthermore, check whether the SNMP Community settings on the device side agree with the settings of this software. Refer to "[SNMP Community Setting](#)" for details.

At the registration process, check whether the device user name and password is changed or not. For more information, refer to "[User Name and Password for Fibre Channel Switch Control](#)".

If network communication is disabled due to the maintenance of device replacement, this error occurs.

When Changing SNMP Community of Device

- Refer to "[SNMP Community Setting](#)".

When Changing Password of Device

- Refer to "[User Name and Password for Fibre Channel Switch Control](#)".

Note

- The connecting information is not displayed if connection type not supported by the device.
- This product manages the device with the use of SNMP protocol version 1, NETCONF. For fault monitoring by SNMP Trap, SNMP protocol version 1 is also used.

- This product supports only the operation mode in VCS modes. The standalone mode is not supported.
- The switches managed by this product are all managed as a Fibre Channel switch.
- This product manages RBridgeID as a domain ID.
- It is recommended of Fibre Channel switch redundancy (cascading).
At present, the Fibre Channel switch zoning information cannot be restored from the database of this software. Therefore, multiple Fibre Channel switches must be connected in cascade to prevent the zoning information stored on the Fibre Channel switches from being erased. The zoning information is stored separately on each of the Fibre Channel switches connected in cascade. Even if one of the Fibre Channel switches fails, the zoning information is stored by the other switches.
The Fibre Channel switch zoning information is changed using the access path setting. When cascade connection is not used, be sure to save the device configuration information after making changes in the settings. Refer to the manuals that come with the device for details on storing configuration information.
- To manage Fibre Channel switches with this software, all the Fibre Channel switches that are connected in cascade must be registered with this software. If any Fibre Channel switch is connected in cascade but not registered with this software, the connection cannot be correctly managed.
- The beacon function is not supported.
- If the user is logged on to the Fibre Channel switch using telnet or ssh, the Fibre Channel switch information cannot properly be obtained nor configured.
- The FC routing function is not supported.
If a cascade is connected using the FC routing function, the cascade connection line is not displayed in the Web Console. For this reason, an error is displayed for the access path that goes through the cascade connection line, and a Warning is displayed for the server node that is used to configure the access path.
- If the transfer speed of FC port is configured by the Auto Negotiation function, this product displays the maximum transfer speed of FC port configured by the Auto Negotiation function.
- FCoE port is not displayed.
- As for the Ethernet port and FC port number, the following values are displayed in the Web Console based on the Index value output by "show fabric islports" command of Brocade VDX series.
 - When index value starts from 0 : Index value + 1
 - When index value starts from 1 : Index value
- For Brocade VDX series firmware version 3.0.1 or later, if port disconnection or connection is done, the following SNMP Traps alone are displayed in the event log:
 - Cable disconnected : [Link Down Trap]
 - Cable connected : [Link Up Trap]

At this time, a failing port cannot be located from the event log. Also, the function in conjunction with event does not work. To locate the failing port, login to the Fibre Channel switch to check the port status.
- 1GbE RJ45 port is not displayed.
- If LC (Line Card) is moved or connection in Breakout mode is done on Brocade VDX 6740/VDX 6740T/VDX 8770-4/VDX 8770-8, even if a target is the same port in the same slot, a combination of the port number and its port information seen from the Web Console may be changed before and after the operation. To check whether the target is the same, log in to the Fibre Channel switch to see the slot number, port number and port connection status.
- If Access Gateway mode is specified, the port type of FC port is displayed as "F_Port".
- 100GbE Line Card is not supported.

4.2.4 PRIMERGY BX Ethernet Fabric Switch

Refer to "4.2.3 Brocade VDX Series" for information on how to set up the environment.

4.3 Disk Array and All Flash Arrays

4.3.1 ETERNUS DX Series, ETERNUS DX200F

4.3.1.1 Setting

To manage the ETERNUS DX series, ETERNUS DX200F with this software, set up devices while keeping in mind the points listed below.



See

Refer to the ETERNUS Web GUI manual supplied with the respective device for settings details.

1. Community setting in SNMP (Agent) environment settings

This product communicates with an ETERNUS Disk storage system using SNMP. The SNMP Community name that this product uses for SNMP communication is specified when the ETERNUS Disk storage system is registered. If the SNMP Community name setting is default, this product communicates with the ETERNUS Disk storage system by "Community name: public". Therefore, the Community name on the ETERNUS Disk storage system side should be set to either of the following step a and b. Also, the Community name can be changed to other than "public". When using other than the default Community name, follow step c below for the device and set the Community name for this product from the Web Console.

In addition, for ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F, set "ViewALL" in the MIB view to the Community name.

a. Community is not set. (default)

Many devices have "public" (Access: read Only, address: all hosts, and view: all Object) set as the default SNMP Community access.

However, the ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F have no default SNMP Community access. Access must be explicitly enabled. Enable access by following either step b or step c below.

b. Specify "public" for the Community name explicitly. (*1)

c. Specify other than "public" for the Community name explicitly. (*1)

*1: Select either of the following methods as an SNMP manager when the Community name is set:

- Specify the Management Server or select it.

Select this when permitting access from just the Management Server only.

When the Management Server is running in a clustered system, the Management Server communicates with ETERNUS Disk storage system by using the physical IP address of the clustered system. For this reason, add only the number of physical IP addresses as an SNMP manager.

- Specify 0.0.0.0 or keep it unselected.

Select this when permitting access from all the SNMP managers.



Example

"ssc" Is Specified Community Name for SNMP Communication with Management Server (IP Address: 10.10.10.10):

```
community ssc 10.10.10.10
```

"ssccom" Is Specified Community Name for SNMP Communication with Management Server Operating as Clustered System Operation (Physical IP_A: 10.10.10.11, Physical IP_B: 10.10.10.12):

```
community ssccom 10.10.10.11
community ssccom 10.10.10.12
```

2. Trap setting in SNMP Agent Configuration Setting

Since the manager's SNMP Trap receiving module has not judged this Community name, all SNMP Traps sent to the Management Server can be received. Even in an environment where the Community name is specified other than default, it is not necessary to change this Community name in trap setting. The Community name of the trap destination is recommended to be set as "public", not same as the Community name of SNMP Community under the consideration of security.

In the ETERNUS Disk Storage system, if the number of the SNMP Trap transmission destination is set to the maximum number of register, no new IP address can be added. Therefore, make sure that the number of SNMP Trap transmission destination is less than the maximum number.

3. Device name setting (SysName) in SNMP (Agent) environment settings

Register a nickname for storage management. This software uses this value as SysName.

When changing the device name while AdvancedCopy Manager CCM is in use, refer to "Changing Registered Information for ETERNUS Disk Storage System" in the *ETERNUS SF AdvancedCopy Manager Operation Guide for Copy Control Module* to change the registered information.

4. Network environment settings

If the Management Server resides outside the location indicated by the IP address, subnet mask, gateway, and subnet, the subnet of the Management Server must be registered as the destination network address.



When Management Server Is in Cluster:

If you specify the IP address of the Management Server as a destination network address, specify both physical IP address of each node on the Management Server in a cluster and IP address taken over.

5. Generation of SSH server key (ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F only)

Execute the generation of the SSH server key needed for the SSH communication between this software and the devices. The bit number of the SSH server keys is arbitrary.

6. Creation of Software role account (ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F only)

Create an account for this software to manage a device.

Note the following restrictions about the account.

- The root user cannot be used it to manage this software.
- The account should be a software role.
Select Software as the user level when creating the account
- Specify this account information when you register a device in this product.

If the user name and password are changed on the device side after having been registered to this product, the device information cannot be properly collected nor configured from this product.

Change the device management account information in the Web Console to make it match with the change in settings made on the device side.

7. SSL Certificate generation or registration (ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F only)

This product uses an HTTPS connection to manage the storage devices (default).

In order to be able to use a HTTPS connection with the storage devices, choose one of the following settings:

- Create Self-signed SSL Certificate Setting
- Register SSL Certificate Setting

8. Logoff

Be sure to log off from the ETERNUS Web GUI after completing the setup in the ETERNUS Web GUI.

You must be logged off from the ETERNUS Web GUI in order to perform registration of the device to this product.

9. ETERNUS Web GUI network settings (ETERNUS DX60/DX60 S2/DX80/DX90, DX400 series and DX8000 series only)

- For the ETERNUS DX60/DX60 S2/DX80/DX90

Under the ETERNUS Web GUI Global Settings tab, click **Setup Network Environment** in the Network Settings and check the settings for the following items:

- Check that "Enable" is specified for Maintenance connections.
- Check that "Disable" is specified for Maintenance-Secure connections.

- For the ETERNUS DX400 series, DX8000 series

Click **Various Settings > Network Environment Configuration (USER Port)** in the main menu for ETERNUS Web GUI and check the settings for the following items:

- Check that "Enable" is specified for Maintenance Port.
- Check that "Disable" is specified for Maintenance-Secure Port.

Information

For this software, the host access control function of ETERNUS Disk storage system is called "host affinity function", and zone numbers are called "AffinityGroup numbers".

To use this software to set the server node and storage access path (the SAN environment containing the Fibre Channel switch), refer to "[6.2.3.1 Preparations](#)". The following settings must also be configured in the device.

The following settings can be set up from this product, so it is not necessary to perform setup from the device side.

- RAID Settings
- Storage's AffinityGroup/Zone Settings
- Connection Configuration Settings
- Host Interface Settings
- HostWWN Definition
- HostWWN-AffinityGroup/Zone Definition

Date-time Settings

To set the date-time for the device, perform the procedure shown below. If the date-time is set during performance monitoring, briefly stop performance monitoring and then restart it.

1. Stop performance monitoring of the device for which date-time is set.
2. Set date-time for the device.
3. After the date-time settings are complete, restart performance monitoring of the device.

Device Configuration Changing

To change the configuration for the device, the device configuration information kept by performance management must be updated. Update the configuration information according to the procedure in "[7.2.9 Updating Configuration Information](#)".

4.3.1.2 Problem-handling (FAQ)

Unable to Detect ETERNUS DX Series, ETERNUS DX200F

- This software uses SNMP communication to find devices. Therefore, a storage device whose SNMP function is inactive cannot be detected. The storage device's SNMP function must be started.
- This software may be unable to automatically detect the device if SNMP Trap transmissions are set to a specific server but a server which has Manager operating on it is not set as the SNMP Trap transmission destination. Check the settings for the SNMP Trap transmission destination.

- If the SNMP Community name is changed and Manager is in the cluster environment, settings on the storage device side may be incorrect. Refer to "[Changing SNMP Community Name](#)" given below.
- Check that there are no problems with the settings for the storage device and its network environment. This includes network environment settings, access permission settings, transmission mode settings, and so on. Refer to the section "[4.3.1.1 Setting](#)" for network settings. For transmission mode settings, if transmission mode on one side of the connection is "Auto Negotiation" and "FULL (full duplex)" on the other, transmissions may being unable to be sent or slow down, so make sure that the transmission mode is set correctly.

Changing SNMP Community Name

- The name of the SNMP Community used for SNMP transmission is specified when registering the ETERNUS Disk Storage system. If the SNMP Community settings are at their defaults, this software implements SNMP communication using the Community name public by default. If "Set SNMP Agent Environment"- "Set Community" is not set at all for ETERNUS Disk Storage system other than ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F, "public" (access: readOnly, address: all hosts, view: all objects) has been set as the initial value. If at least one community is set, this software communicates with only the specified community settings.
When the SNMP Community name for the ETERNUS storage devices is to be changed, storage device settings are required. Refer to step 1 "Community setting in SNMP (Agent) environment setting" in "[4.3.1.1 Setting](#)".

Timeout Occurs in Communication

- Check that there are no problems with the settings for transmission mode in the storage device and its network environment. For transmission mode settings, if transmission mode on one side of the connection is "Auto Negotiation" and "FULL (full duplex)" on the other, transmissions may being unable to be sent or slow down, so make sure that the transmission mode is set correctly.

Status Displayed by This Software Differs from Actual Status of Device

- When the device is under the maintenance, the status displayed with this software might be different from an actual status of the device.
- If the redundant copy function was running on ETERNUS DX60/DX60 S2/DX80/DX90, the overall status on the ETERNUS Web GUI is "Error", but "Warning" is displayed by this software.

4.4 NetApp FAS Series, FAS Series (with clustered Data ONTAP), V-Series, and V-Series (with clustered Data ONTAP) Network Disk Storage System

This software supports fault management and linkage to the Management Software for NetApp FAS Series and V-Series. Embed a device and register its IP address by referring to "[5.2.6 Registering Manually Embedded Device](#)".

1. Connecting to the network

Make the required settings for the cache server NetApp FAS Series and V-Series to connect to a network, and then connect to the network.

Refer to the manual that comes with the NetApp FAS Series and V-Series unit for details on how to connect to a network.

2. Activating SNMP

Enable the SNMP function so that device information can be acquired using SNMP. Refer to the manual that comes with the NetApp FAS Series and V-Series unit for detailed information on making settings.

The device polling function uses SNMP to acquire the device status of the NetApp FAS Series and V-Series. If the SNMP Community name is default, this software uses the Community name "public." However, it is also possible to specify the Community name. It is possible to change the Community name this software uses for a device from the Web Console.

3. SNMP Trap setting

Make the required settings on the NetApp FAS Series and V-Series unit so that SNMP Traps of the NetApp FAS Series and V-Series unit will be sent to the Management Server.

If the Management Server is defined as a cluster, the logical IP address of the cluster needs to be set.

4. Management software cooperation

Use the attached management software for device management such as checking the detailed device status of the NetApp FAS Series and V-Series unit and the various settings. The management software can be called directly from the Web Console. As management software, setup the following IP address with the Web Console in advance:

- "http://device IP address/na_admin/"

4.5 ETERNUS VS850 Virtualization Storage

This product supports fault management for VS850. Refer to "[5.2.6 Registering Manually Embedded Device](#)" and register the device.

1. Network settings

At the VS850, enter the network connection settings to connect to the network. Refer to the manual provided with the VS850 for details.

2. Cluster Name settings

The Management Server uses the Cluster Name set at the VS850 to specify the device. Therefore, the Cluster Name set at the VS850 must be unique amongst all sites, including remote sites. When registering the VS850 at the Management Server, enter the Cluster Name as the device name.

3. SNMP Trap setting

Enter settings at the VS850 side in order to send VS850 SNMP Traps to the Management Server. If the Management Server is in a cluster configuration, the logical IP address of the Management Server cluster must be set.

4. Management software linkage

Use the management software provided for the VS850 to check device status details and to enter settings, including volume virtualization settings. The management software is called directly from the Web Console. As management software, setup the following IP address with the Web Console in advance. svconsoleip is the IP address of the server where the management software is executed.

- "http://svconsoleip:9080/ica"



Note

- The VS850 is handled as a server node by the Management Server. To perform access path operations, treat the VS850 fibre channel port as a server node HBA port.
- The VS850 is registered at the Management Server as a cluster unit comprised of VS850 nodes. Set the logical IP address of the cluster containing the VS850 nodes as the IP address to be registered at the Management Server.
- If the IP address is not registered during device registration, the device cannot be polled for fault monitoring. Ensure that the IP address is registered.
- If the Cluster Name set at the VS850 and the device name registered at the Management Server are different, fault monitoring using SNMP Traps cannot be performed. Ensure that the device name and the Cluster Name are the same.

4.6 ETERNUS CS800 De-dupe Appliance

This software supports fault management (SNMP Trap monitoring only) for the CS800.

1. Connecting to the network

Perform the setup for connecting the CS800 to the network. Refer to the manual which came with the device for details on how to perform the setup.

2. SNMP Trap setting

Perform the setup of the SNMP Trap transmission destination for the device so that SNMP Traps of the CS800 can be transmitted to the Management Server. If the Management Server is operated in a cluster configuration, set the logical IP address of the cluster as the destination.

3. Registering the device

Refer to "5.2.6 Registering Manually Embedded Device" for registering the device.
Specify the IP address of the device during the registration operation.

4.7 Tape Library Device

4.7.1 Tape Library Device ETERNUS LT250/LT270

This software supports all functions except for performance monitoring for ETERNUS LT250 and ETERNUS LT270.

Note that this software does not support automatic device detection function. To detect ETERNUS LT250 or ETERNUS LT270, enter the IP address for the device in a device search.

1. Connecting to the network

Make the required settings for ETERNUS LT250 or ETERNUS LT270 to connect to a network, and then connect to the network.
When connecting to the network, start up the SNMP Agent function.
Refer to the manual provided with the ETERNUS LT250 or ETERNUS LT270 for details on the setting method.

2. Community settings in SNMP environment settings

Specify "public" as the Community name (GET).
It is possible to change the Community name this software uses for a device from the Web Console.

3. Device name setting (SysName) in SNMP (Agent) environment settings

Register nicknames for managing ETERNUS LT250 or ETERNUS LT270.
This software uses this value as SysName.

4. SNMP Trap setting

Manager does not add the SNMP Trap send destination address to a device.
Set the SNMP Trap send destination address to the IP address for the Management Server on which this software is running, using management software for ETERNUS LT250 or ETERNUS LT270.
For the Management Server in a cluster configuration, the logical IP address of the cluster must be set.

5. Access path setting and display

This software does not set the Fibre Channel Interface for ETERNUS LT250 or ETERNUS LT270, but displays access paths by using SwitchZoning or StorageAffinity on the server node.
When setting the Fibre Channel Interface, use management software for ETERNUS LT250 or ETERNUS LT270.

4.7.2 Tape Library Device ETERNUS LT20/LT20 S2/LT40/LT40 S2/LT60/LT60 S2/LT200/LT210/LT220/LT230/LT260/LT270 S2

This software supports fault management and linkage to the management software, for ETERNUS LT20/LT20 S2/LT40/LT40 S2/LT60/LT60 S2/LT200/LT210/LT220/LT230/LT260/LT270 S2.

1. Connecting to the network

Make the required settings for a tape library device which you use to connect to a network, and then connect to the network.
Refer to the manuals provided with the respective devices for details on the setting method.

2. SNMP Trap setting

Set the SNMP Trap send destination address to the IP address for the Management Server on which this software is running, using management software for the tape library server you use.
For the Management Server in a cluster configuration, the logical IP address of the Management Server cluster must be set.
Restart the device after the setting.

3. Management software linkage

Use the management software provided with a tape library device for device management such as checking the detailed status of the tape library device and the various settings.

The management software can be called directly from the Web Console. In advance, setup the following as the management software on the Web Console:

```
http://device IP address/
```

4. Access path setting and display

This software does not set the Fibre Channel Interface, but displays access paths by using SwitchZoning or StorageAffinity on the server node.

When setting the Fibre Channel Interface, use management software for the tape library device.

4.7.3 Virtual Tape Appliance ETERNUS CS2000

This software supports fault management (SNMP Trap monitoring only) for the ETERNUS CS2000.

1. Connecting to the network

Make the required settings for a virtual tape appliance which you use to connect to a network, and then connect to the network. Refer to the manuals provided with the respective devices for details on the setting method.

2. SNMP Trap setting

Make the required settings on the CS console so that SNMP Traps of the ETERNUS CS2000 will be sent to the Management Server. If the Management Server is defined as a cluster, the logical IP address of the cluster needs to be set.

3. Registering the device

Refer to "[5.2.6 Registering Manually Embedded Device](#)" for registering the virtual tape appliance device. IP address of ETERNUS CS2000 must be set in "IP address" for the registration.

Chapter 5 Startup and Setting


This chapter explains device definitions and operation flowcharts required for operating this software.

5.1 Opening and Closing

The Storage Cruiser function is operated from the Web Console.

Refer to the *ETERNUS SF Web Console Guide* for start up and shutdown.

5.2 Registering Device

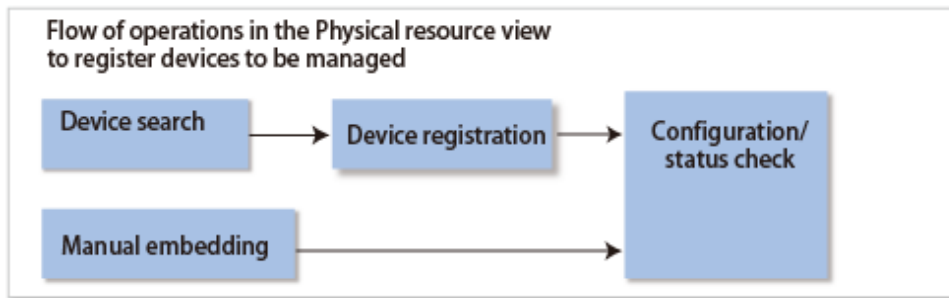

5.2.1 Device Search

For device management using this software, it is necessary to first conduct a device search. There are two methods for conducting a device search.

- [Detecting for Devices in Subnet Automatically](#)
- [Detecting Device by Specifying IP Address](#)

Information

- The following devices are automatically registered when they are found:
 - Storage Cruiser's agent
 - VM host and VM guest in VMware vSphere 4 or later
- Even when detected a server node, the host name may not be resolved. In this case, the host name is displayed in the format of "IP-IP address".
- Even if an IPv6 address exists in a server to be searched, the Storage Cruiser's agent running on the operating systems shown below supports only the search with IPv4 address.

| Platform | OS |
|----------|--|
| Windows | Windows Server 2003 R2, Standard Edition SP2 Windows Server 2003 R2, Standard x64 Edition SP2 Windows Server 2003 R2, Enterprise Edition SP2 Windows Server 2003 R2, Enterprise x64 Edition SP2 Windows Server 2003, Standard Edition SP2 Windows Server 2003, Standard x64 Edition SP2 Windows Server 2003, Enterprise Edition SP2 Windows Server 2003, Enterprise x64 Edition SP2 |
| Solaris | Solaris 9 |
| HP-UX | All versions |

| Platform | OS |
|----------|--------------|
| AIX | All versions |

Detecting for Devices in Subnet Automatically

To detect devices in a subnet automatically, specify the target subnet on the Web Console screen. Through detection of the devices within the subnet, the automatic detection-compatible devices supported by the Manager are displayed on the screen. SNMP-based broadcasting processes are performed internally, and the devices supported by this software are automatically displayed. Devices must have SNMP access enabled for the Manager.

Devices with IPv6 address are not searched. If any device registered with IPv6 address exists, this function is not available. When managing any device with IPv6 address, specify its IP address to search it.

Note

- Devices within subnets directly connected with the Management Server are subject to automatic detection regardless of the subnet being specified.
- An environment which has broadcast processing pass through the target subnet is required for SNMP-based broadcast processing to be performed internally.
- If the devices in the subnet cannot automatically be detected, check "[1.2.9 Support Levels](#)". For devices that do not support [Detect device in subnet] as described in "[1.2.9 Support Levels](#)", use the method described below "[Detecting Device by Specifying IP Address](#)".
- If the IP address of Slave CM in an ETERNUS Disk storage system is set, both IP addresses of Master CM and Slave CM are detected. Refer to "[5.2.2 Registering Device](#)" to specify the device with the IP address of Master CM. If the IP address of Slave CM is specified, the access path cannot be set.

Detecting Device by Specifying IP Address

- To detect Storage Cruiser's agent
Specify the IP address for the target device.
- To detect the VM host and VM guest (VMware vSphere 4 or later)
Specify the IP address for the VM Host. Also, input the username and password used during login to the VM Host.

Information

- By registering a VM host, all of the VM guests on the VM host are automatically registered.
- From the Web Console, perform the **Reload Conf.** operation for the VM host to detect VM guests created after the VM host was registered.

Note

- To register a VM host (and its VM guests) with this software, the IP address, login name and password of the VM host are required.
- It is not possible to specify and register only VM guests.
- To detect any device other than above devices
Specify the IP address and SNMP Community name for the target device

Note

- If such a search for a product in the ETERNUS DX series, ETERNUS DX200F fails, check the following items:
 - The SNMP environment has not been set up from ETERNUS Web GUI since installation of the device:
The SNMP agent of the device is not active. Set up the SNMP environment as instructed in "[4.3.1 ETERNUS DX Series, ETERNUS DX200F](#)".
 - In the case of ETERNUS DX60/DX80/DX90, DX S2 series, DX S3 series, ETERNUS DX200F
For the device detection, specify the IP address on the Master CM side. If the IP address on the CM slave side was specified for detection or registration, access path settings are not possible.
- If the search for Storage Cruiser's agent fails, check whether the Storage Cruiser's agent is activated and that its level is compatible. If not activate, Storage Cruiser's agent. If the level is not compatible, upgrade the Storage Cruiser's agent.
- If the search for ETERNUS SN200 Fibre Channel switch, Brocade Fibre Channel switch and PRIMERGY Fibre Channel switch blade fails, check the settings of SNMP MIB on the device side. Refer to "[SNMP-MIB Setting](#)" in "[4.2.1 SN200 \(Brocade\) Fibre Channel Switch](#)" for details.
- On an AIX agent installed server, the following problems may occur:
 - It takes lots of time to register a server.
 - It takes lots of time to reload configuration.
 - The HBA port information for a target server may not be properly recognized.

If any of those mentioned above is seen, check all the HBA ports for proper connection. If there is any fibre channel device corresponding to an HBA port that is not connected, delete it if possible. To check HBA port-fibre channel device correspondence, refer to the AIX document. In addition, if the server is restarted, this operation may be needed again.

[Example of deleting unused fibre channel device fcs3]

```
# /usr/sbin/rmdev -Rdl fcs3
```

If a problem does not fall under those mentioned above, refer to "[B.1 Collecting Troubleshooting Information](#)" to collect analysis material and contact Fujitsu Technical Support.

5.2.2 Registering Device

To make this product's managed device, it is necessary to register a device which has already been detected using the Web Console.

- User name and password

To manage the device, this software must recognize the user name and password associated with the device.

Since each device requires different information, the items displayed in the dialog change accordingly.

<Required information>

- For SN200 (Brocade) Fibre Channel switch, PRIMERGY Fibre Channel switch blade, Brocade VDX series and PRIMERGY BX Ethernet Fabric Switch a user name and password with administrator rights will be required.
- For the ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F, user name and password of Software roll will be required. For the ETERNUS Disk storage system other than stated above, a user name and password with administrator rights will be required.
- Check box of "Enable fault monitoring via SNMP Traps on this device"

When a device is registered, this software automatically sets the SNMP Trap transmission place address for the device so that it can monitor for faults by using the SNMP Trap. Refer to "[1.2.9 Support Levels](#)" for information about the device types for which the address automatic setting function can be used.

Information

- Refer to "5.2.4 Function for Setting Event Notification Destinations" for information about fault monitoring required for a registered device after the function is disabled. Refer to "5.2.5 SNMP Trap Transmission Place Automatic Setting Function" for a detailed explanation of the automatic setup.
- The check box of "Enable fault monitoring via SNMP Traps on this device" is invalid for the device which does not support the function of automatically setting SNMP Trap transmission place.

Note

When registering users with a security level other than an administrator level on the switch, remove the check here.
When requesting fault monitoring with this product, log in to the device and configure the destination of the SNMP Trap so that the SNMP Trap can be sent from the Management Server. For details on the configuration, refer to the manual attached to the device.

Table 5.1 Configuration Details on SNMP Trap Destination Address

| Item | Configuration Details |
|-----------------------|---|
| SNMP Trap destination | Management Server IP Address If the Management Server is clustered system, it is necessary to set the logical IP address of the cluster. |
| SNMP Community name | public |
| SNMP version | 1 |
| Port number | 162 |
| Level | Warning |

- Checkbox for enabling the zoning setting

When a fibre channel switch device is registered, this software sets up the device such that zoning setup can be done. Select this option if performing setup of the access path from this software. If you do not select this option, operations will start as is (i.e. with no security) for the fibre channel switch device which had no zoning setup performed (meaning this switch is in a No Security status).

Note

When registering users with a security level other than an administrator level on the switch, remove the check here.

Note

- If a device to be managed cannot be accessed, it cannot be registered.
- The devices in the following status could not be registered. It is recommended to log out and then register them.
 - Fibre Channel switch
 - Telnet or SSH is used to log in to a target device.
Action: Log out, and then perform the registration process.
 - ETERNUS DX series, ETERNUS DX200F
 - User is logged into the target device's ETERNUS Web GUI.
Action: Log out, and then perform the registration process.
- During the device registration process, if Brocade VDX series and PRIMERGY BX Ethernet Fabric Switch have already been manually registered, be sure to delete the manually registered devices first and then perform registration. If registration is performed when

manually registered devices remain registered, no information can be obtained from the Fibre Channel switch. In this case, delete target manually registered devices.

5.2.3 Deletion

This function cancels the registration of a device being managed by this software, thereby deleting that device from the range of management. It is used in such cases as when a device has been removed.

Information

Individual VM guests for VMware vSphere 4 or later can be deleted from the management target for this product by first deleting the VM guest using VMware management software and then deleting the VM guest using this procedure. If the VM guest is still on the VM host it will be registered again automatically.

Note

- You cannot delete a server which has volume definition(s) of Backup management of AdvancedCopy Manager or Replication Group definition(s) of Replication management of AdvancedCopy Manager. You should delete the volume definition(s) of Backup management of AdvancedCopy Manager or Replication Group definition(s) of Replication management of AdvancedCopy Manager before the server deletion.
- To delete a VM host (VMware vSphere 4 or later) from this product, delete all VM guests on the VM host to be deleted in advance.
- In this product, even if a SNMP Trap send destination address is not automatically set, when deleting a target device, if the IP address of the Management Server is set to the SNMP Trap send destination address of the device, its setting is deleted.

Execute the deletion of the device from the Web Console. The disk storage system's copy sessions are not deleted.

If the deleted device has been detected again by this software's automatic device detection it will be re-displayed.

It is also possible to delete only the access path existing between the Managed Server and the device that is the target for deletion.

Note

About Selection of **Remove Access Path** When Deleting Devices

- When **Remove Access Path** is selected.
The access path set to the device to be deleted is deleted.
As the zoning information is deleted from the switch on the access path route, perform the **Reload Conf.** operation for the switch on the access path route after deleting the device. The zoning information set for the switch will be changed.
The following access paths are not deleted even if **Remove Access Path** is specified when deleting the device:
When those access paths need to be deleted, delete them before deleting the device.
 - Access path of an iSCSI port
 - WOL access path of an iSCSI port
 - Access path of a SAS port
 - WOL access path that the virtual machine is operating
- When **Remove Access Path** is not selected.
The access path set to the device to be deleted is not deleted.
If you want to continue to operate the device to be deleted as a non-managed device for this product, or if it is necessary to leave the access path settings, do not select **Remove Access Path**.

5.2.4 Function for Setting Event Notification Destinations


If fault monitoring is required for a device after the SNMP Trap transmission place address automatic setting function is disabled for the device during the device registration process, it is possible to perform setup from the Web Console.

5.2.5 SNMP Trap Transmission Place Automatic Setting Function

The SNMP Trap transmission place automatic setting function, which is executed at the time of a device registration, and its accuracy are explained with the figures below.

Management Server with Only One IP Address

This software automatically identifies IP address A of the Management Server and sets "IP address A" as the SNMP Trap transmission place for each managed device.

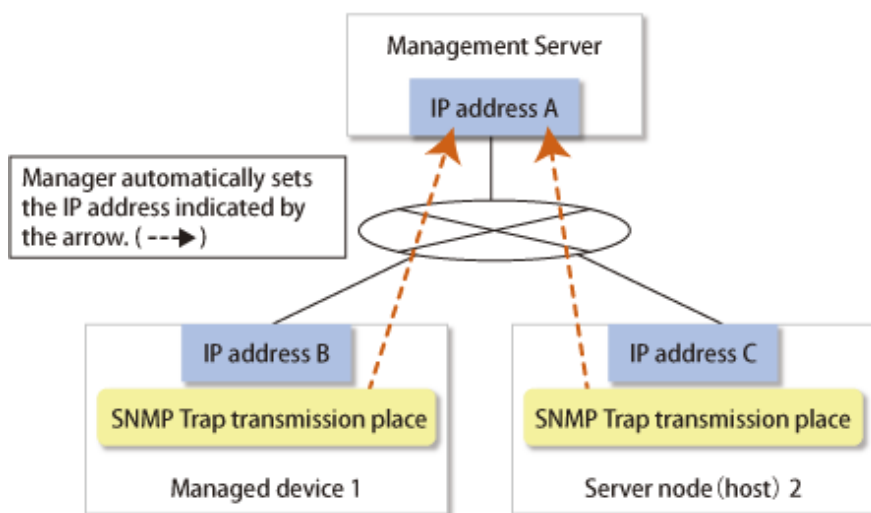


Management Server with Multiple IP Addresses

Such Management Server has a cluster or redundant LAN configuration or is connected to multiple subnets, and it has two or more IP addresses.

From the multiple IP addresses of the Management Server, this software selects the one that is most suitable as the transmission IP address for each device. However, this logic does not work in all cases. In the environment shown in the figure below, for example, this software may set "IP address D" as the SNMP Trap transmission place for Managed device 1. This is because addresses cannot be automatically detected in some cases due to the nature of current LAN technology. In such an environment, therefore, it is necessary to check the SNMP Trap transmission place setting of each device after the device registration process and, if required, set SNMP Trap transmission places directly on the device side.

In the figure below, specify "IP address A" as the SNMP Trap transmission place for Managed device 1, and "Logical IP address F" as the SNMP Trap transmission place for Server node 2. Refer to "2.1 Receiving SNMP Traps" for information about how to set SNMP Trap transmission place addresses of server nodes manually.

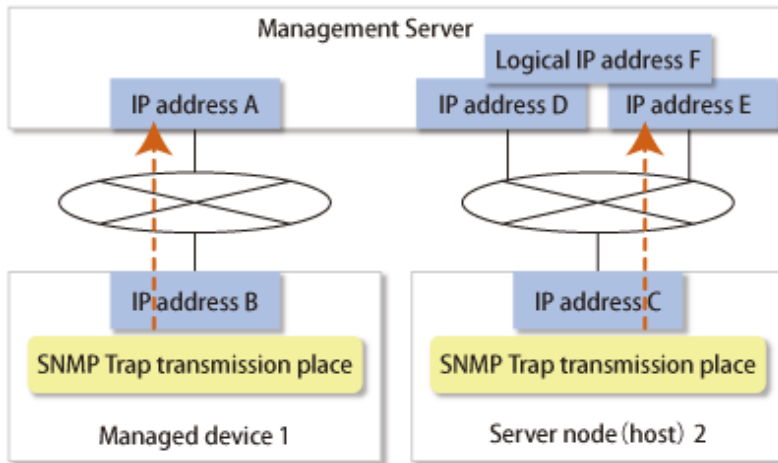

Point

In order for the server node to send the SNMP Trap, agent must be installed on the host.

5.2.6 Registering Manually Embedded Device

Some devices (such as Managed Servers without an agent, tape units, and NAS devices) cannot be retrieved by device search. Register these devices with this software by using the manual embedding function.

In the case of NetApp FAS Series, FAS Series (with clustered Data ONTAP), V-Series, and V-Series (with clustered Data ONTAP)

Specify an operation mode according to the firmware version number.

The registered operation mode can be viewed on Main pane of the Detail screen.

| Firmware Version Number | String Included in Firmware Name | Operation Mode |
|-------------------------|----------------------------------|----------------------|
| Data ONTAP 7.x | (Any string) | 7-Mode |
| Data ONTAP 8 - 8.2.x | 7-Mode | |
| Data ONTAP 8 - 8.2.x | Cluster-Mode | clustered Data ONTAP |
| Data ONTAP 8.3 or later | (Any string) | |

5.3 Checking Management Status

Check whether the setup is correct. Use the following steps to check the setup:

[Test 1] Check Whether Every Device (Excluding Server Node Agent) Can Correctly Receive SNMP Traps

This software receives generic traps 0 to 5, which are SNMP Traps not unique to a specific vendor, and it decodes their contents and displays information about each event (that does not use Systemwalker Centric Manager linkage or Shell/bat linkage.) As one of generic traps 0 to 5, a COLD START trap is issued by an ordinary device. When using this trap to test whether the software can correctly receive an SNMP Trap.

A device sends the COLD START trap and other traps by turning OFF and ON the device to be managed, performing a variety of setup tasks (setup of the SNMP environment for ETERNUS), doing other such work. Check whether the event is displayed with regard to the above operation and trap.

However, generic traps 0 to 5 are not normally required, so after the test is completed, you can disable display of generic traps 0 to 5 by using the following method:

Edit the following definition file:

| Platform of Manager | File Location |
|----------------------|--|
| Windows | \$ENV_DIR\Manager\etc\opt\FJSVssmgr\current\sanma.conf (\$ENV_DIR means "Environment Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /etc/opt/FJSVssmgr/current/sanma.conf |

Edit one description as follows (0=Hide, 1=Show): [DISPLAY_SNMP_STANDARD_EVENT](#) = 0;

Using the Web Console, execute re-read definition file and import the definition files into the program.

[Test 2] Check Whether Server Node (Agent) Can Correctly Receive SNMP Traps

The server node (Agent) provides the following command that issue SNMP Trap for the test.

| Platform of Agent | Command Location |
|--|---|
| Windows | \$INS_DIR\Agent\bin\traptest [<i>ipAddress</i>] (\$INS_DIR means "Program Directory" specified at the Agent installation.) |
| Solaris OS, Linux, HP-UX, AIX | /opt/FJSVsage/bin/traptest [<i>ipAddress</i>] |

Only in the environment where the host holds two or more IP addresses, a server node's IP (Agent start IP address) address which the manager recognizes is specified to ip-address.

Make sure the IP address input is correct, if the event cannot be received correctly.

If the device was set up normally, an event will be issued to the Web Console when this command is executed.

SNMP Trap test command cannot linkage to Shell/bat. Modify the SNMP definition if necessary.

To modify SNMP Trap definition, modify ESC agent SNMP Trap definition file which is located 1_3_6_1_4_1_211_4_1_3_21_2_2.xml. SNMP Trap test is defined as the first number of "Specific Trap Type". You may change the action for this trap. Refer to ["A.5 SNMP Trap XML Definition File"](#) for SNMP Trap definition file.

 **Information**

- For VMware vSphere 4 or later, it is unnecessary to execute this test because the fault monitoring function by receiving SNMP Traps is not supported.
- The community name of a test SNMP Trap is fixed to "public".

[Test 3] Check Systemwalker Centric Manager Linkage and Shell/Bat Linkage of Events

Events cannot be linked with Systemwalker Centric Manager or Shell/bat for the standard SNMP Trap. To test the Systemwalker Centric Manager linkage and Shell/bat linkage of an SNMP Trap from a device, execute a tentative SNMP Trap command for the test on the Management Server. This command changes internal information of an SNMP Trap so that the SNMP Trap seems to have been sent from a device being monitored, and it sends such an SNMP Trap to the system's own port for receiving the SNMP Trap. Since descriptions of events are linked to Systemwalker Centric Manager and Shell/bat, Systemwalker Centric Manager linkage and Shell/bat linkage can be tested. To test the Shell/bat linkage of an SNMP Trap of the server node agent, use the method described in [Test 2].

For the IP address of an argument, specify the IP address of a device (ETERNUS Disk storage systems or Fibre Channel switch) registered with this software. The contents of this simulated SNMP Trap are loaded into the event log.

The commands shown below are executed to generate a simulated SNMP Trap for the ETERNUS DX series, ETERNUS DX200F registered with this software. Using these commands, the manager creates the simulated trap, receives the same trap, and checks whether the displayed event and shell/bat linkage are correct. Here, the simulated trap is a fan fault with "public" as the Community name. This simulated trap has arbitrary test information that is distinct from actual trap information.

Also, the ETERNUS Disk storage systems can issue an SNMP Trap from the device by using the "SNMP Trap sending test" function of

ETERNUS Web GUI. Though the test uses a simulated trap, its results are the same as those from a test that sends a real trap and checks the response, since the trap is sent from an actual ETERNUS Disk storage systems.

| Platform of Manager | Command Location |
|----------------------|---|
| Windows | \$INS_DIR\Manager\opt\FJSVssmgr\bin\grtraptest <i>ipAddress</i> (\$INS_DIR means "Program Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /opt/FJSVssmgr/bin/grtraptest <i>ipAddress</i> |

The commands shown below are executed to generate a simulated SNMP Trap for a Fibre Channel switch registered with this software. (A simulated error that is a port fault is issued.):

| Platform of Manager | Command Location |
|----------------------|---|
| Windows | \$INS_DIR\Manager\opt\FJSVssmgr\bin\swtraptest <i>ipAddress</i> (\$INS_DIR means "Program Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /opt/FJSVssmgr/bin/swtraptest <i>ipAddress</i> |

Chapter 6 Operation

Configuration management is made by using the Web Console. This chapter explains how to use window.

6.1 Resource Management

For the device registered to this product, it is possible to use various functions via the Web Console.

6.1.1 RAID Group Management

With this product, it is possible to manage the storage device's RAID Groups. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with the Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Display RAID Group Status
- Create/Delete RAID Group
- RAID Group Eco-mode Settings

6.1.2 Volume Management

With this product, it is possible to manage the storage device's volume. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with the Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Create/Delete Volume
- Format Volume
- Expand Thin Provisioning Volume Capacity
- Delete Snap Data Pool Volume
- Encrypt Volume
- Equalize Thin Provisioning Volume
- Enabling/Disabling Extreme Cache (Read)
- Enabling/Disabling Thin Provisioning Volume Allocation
- Enabling/Disabling FTV Allocation



Note

- The number of maximum volumes that can be made with this product at a time is 128. Make them by dividing into two or more times when you make volumes that exceed 128.
- On the Web Console, the following operations cannot be performed:
 - Delete reservation of Snap Data Pool Volume.
 - Create, delete and format volumes of LUN concatenation.
 - Create, delete and format Wide Striping Volume.

Perform those operations on the ETERNUS Web GUI.

6.1.3 Thin Provisioning Management

With this product, it is possible to manage the storage device's Thin Provisioning. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with the Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Display the Thin Provisioning Pool
- Display the Thin Provisioning Pool status
- Change the Thin Provisioning Pool threshold value
- Create/Delete the Thin Provisioning Pool
- Display the Thin Provisioning Pool Capacity graph
- Expand the Thin Provisioning Pool Capacity
- Format the Thin Provisioning Pool
- Enabling/Disabling Thin Provisioning Pool Deduplication



.....

If the firmware version number of the following device is less than V10L20, a total capacity of Thin Provisioning pool exceeding 2TB cannot properly be displayed. When using a Thin Provisioning pool exceeding 2TB, the firmware version number must be V10L20 or later:

- ETERNUS DX80 S2/DX90 S2
-

6.1.4 Advanced Copy Management

With this product, it is possible to manage the storage device's Advanced Copy. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with the Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Display Advanced Copy
- Set Up Copy Parameters
- Set Up REC path
- Acquire REC path information
- Collect REC Device Information
- Measure REC Response Delay Time
- Set Up REC Multiplicity
- Set Up REC Buffer

6.1.5 Connectivity Management

With this product, it is possible to manage the storage device's connectivity. It is possible to operate with the same operability without being aware of restrictions according to type of storage device and model.

The target device is selected with the Web Console, and processing is selected from the Action pane.

The executable operations are as follows:

- Display Connectivity Status (Set Up Host, Set Up Port, Reset Group)

- Create/Delete Host Affinity
- Set Up FC Host/iSCSI Host/SAS Host
- Set Up FC Port/iSCSI Port/SAS Port
- Set Up Affinity Group
- LUN Mapping (direct connection) display

Note

- The iSCSI-RA port Transfer Rate cannot be changed in the Web Console. To change a transfer rate, do it on the ETERNUS Web GUI.
- Setting the IP address, link local IP address, connection IP address, iSCSI name, or iSCSI alias name of an iSCSI port the same as another iSCSI port may not be allowed. Refer to the following table for information on the duplicate registration:

| Storage Model Name | Duplicate Registration | | | | |
|---|------------------------|-----------------------|-----------------------|-----------------|------------------|
| | IP Address | Link Local IP Address | Connection IP Address | iSCSI Name (*1) | iSCSI Alias Name |
| ETERNUS DX S2 series (DX60 S2 excluded) ETERNUS DX S3 series ETERNUS DX200F | N/A | N/A | N/A | N/A | N/A |
| ETERNUS DX60/DX60 S2/DX80/DX90 ETERNUS DX400 series ETERNUS DX8000 series | N/A | - | - | N/A | N/A |

"A" indicates "Available", and "N/A" indicates "Not Available".

*1: If the default iSCSI name has been set, it is able to be registered by duplicating.

- Setting the IP address, iSCSI name, iSCSI alias name, and iSCSI host name of an iSCSI host the same as another iSCSI host may not be allowed. Refer to the following table for information on the duplicate registration:

| Storage Model Name | Duplicate Registration | | | |
|---|------------------------|------------|------------------|-----------------|
| | IP Address | iSCSI Name | iSCSI Alias Name | iSCSI Host Name |
| ETERNUS DX S2 series (DX60 S2 excluded) ETERNUS DX S3 series ETERNUS DX200F | A (*1) | A (*1) | N/A | N/A |
| ETERNUS DX60/DX60 S2/DX80/DX90 ETERNUS DX400 series ETERNUS DX8000 series | N/A | A | N/A | N/A |

"A" indicates "Available", and "N/A" indicates "Not Available".

*1: If both the IP address and the iSCSI name are duplicated, it is not available. If one either is not duplicated, it is available.

- The function of Multi-VLAN of iSCSI port is not supported.

On the Web Console, a basic IP address (#0) can be set or viewed. However, expanded virtual IP addresses (#1 through #15) cannot be set or viewed. Set and view the configuration information of expanded virtual IP addresses (#1 through #15) on the ETERNUS Web GUI.

6.1.6 How to Control Eco-mode

This product allows you to use Eco-mode. While checking the RAID group in use from the server, the spindle rotation of disk drive can be turned ON/OFF on a per RAID group basis and the power of the disk drive can be controlled.

There are "Eco-mode for Device" and "Eco-mode for RAID Group" in Eco-mode. "Eco-mode for Device" can be set to ON/OFF and "Eco-mode for RAID Group" can be set ON/ON(power off)/ OFF respectively.

When Eco-mode for Device is set to ON, Eco-mode for RAID Group can be ON/OFF controlled.

When Eco-mode for RAID group is set to ON and Schedule to External, the spindle rotation of disk drives making up the RAID group can be ON/OFF controlled. Also, when Eco-mode for RAID group is set to ON(power off) and Schedule to External, the power of disk drives making up the RAID group can be ON/OFF controlled. However, Eco-mode operation cannot be done toward the RAID groups listed in "[Uncontrollable RAID Groups](#)".

For the Eco-mode operation, the target device is selected with the Web Console and the operation is executed.

The executable operations are as follows:

- Setting the device's Eco-mode to ON
- Setting the device's Eco-mode to OFF
- Setting the RAID Group's Eco-mode to ON
- Setting the RAID Group's Eco-mode to ON(power off)
- Setting the RAID Group's Eco-mode to OFF
- Starting up the disk drive for which the RAID Group is configured
- Stopping the disk drive for which the RAID Group is configured



When the RAID group corresponds to either following conditions, the disk drive cannot be stopped from the Web Console. Stop the disk drive by the [storageadm spindle stop](#) command:

- The volume whose volume type is WSV exists in the target RAID group.
- The volumes in the target RAID group are concatenated with other RAID groups by the LUN Concatenation.

6.1.7 End to End List Display

For the End to End list display, correlating information from the storage to the server is displayed. Using the Web Console, select [Correlation].



- Only volumes that are connected by host affinity function are displayed at End to End list display.
- The [Mount Point] or the [Multipath Driver Device] is displayed only when you selected the [End to End View]. VMware and Hyper-V are not supported.
- When the Managed Server node OS is Windows or the installed Storage Cruiser's agent is version 15.0, a hyphen ("-") is displayed at the [Mount Point] and the [Multipath Driver Device].
- When the corresponding Multipath driver is not installed, a hyphen ("-") is displayed at the [Mount Point].



Refer to "[3.2 Server Node Middleware for Which Management Is Possible](#)" for the details on the corresponding Multipath drivers and file systems.

For VMware

To display the End to End list for VMware's VM guest and the storage device, register the VM host to the Management Server. It is also necessary to register to this software the VMware vCenter Server which manages the VM host registered to the Management Server.

Specify the following for registration of the VMware vCenter Server.

- IP address
- User name
- Password
- Communication port number of VMware vCenter Server (Default: 443)

Note

- The End to End list for VMware supports the display of information for storage devices connected to the VM host with FC, iSCSI and FCoE connections. Storage devices utilizing SAS connections, NPIV connections in an FC environment, and storage devices with the VM guests directly connected with iSCSI are not supported.
- When registering the VM host to the VMware vCenter Server using the host name, set it so that name lookup can be done on the Management Server for the VM host being registered to this product. Perform one of the following setups.
 - Register the IP address and host name for the VM host being set to the VMware vCenter Server to the DNS server which the Management Server references.
 - Define the IP address and host name for the VM host set to the VMware vCenter Server to the /etc/hosts file on the Management Server.
- The display of LUN used for VM guests supports the display of RawDeviceMapping and data store in VMFS format. The display of data store in NFS format is not supported.

For Hyper-V (Windows, Only for Manager)

To display the End to End list for the VM guest on the Hyper-V host, install the agent to the Hyper-V host and then register it to the Management Server.

Next, register the target Hyper-V host in the End to End View (Hyper-V).

Specify the following for registration of the Hyper-V host.

- User name
 - When Hyper-V host is participating in the ActiveDirectory environment:
Specify users with administrator privileges in the format of "Domain name\User name".
 - When Hyper-V host is not participating in the ActiveDirectory environment:
Specify users with administrator privileges in the format of "NetBIOS computer name\User name".

If the user name is not specified in the formats listed above, incorrect information may be displayed.

- Password

Also, implement the following settings to the Hyper-V host and the Management Server.

To make settings, users must have administrator privileges to log in.

- Set up Hyper-V host

Perform the following procedure to give permission for Hyper-V host that is performing End to End display to remote management.

1. Click **start > Administrative Tools > Server Manager** to run Server Manager. Click **Configure Server Manager Remote Management** in [Computer Information] on Server Manager.
If **Enable remote management of this server from other computers** checkbox is unchecked, check it and click **OK**.

2. Click **start > run**. Enter "cmd.exe" to click **OK**.
Execute the following command at the command prompt.

```
C:\Users\administrator> winrm quickconfig [Enter]
```

If the remote management is not set, enter "y".

For the End to End list display for Hyper-V with iSCSI connection, set up the advanced settings for the connection when connecting to a target detected from iSCSI initiator property. Specify the IP address for the Hyper-V host adpoter to the initiator IP in the advanced settings. If the settings are incorrect, the End to End list for Hyper-V is not displayed properly.

- Set up the Management Server

Click **start > run**. Enter "cmd.exe" to click **OK**.

Execute the winrm command below on the console of cmd, and check the value for TrustedHosts.

Execution example)

```
C:\Users\administrator> winrm get winrm/config/client
```

Specify "*" for TrustedHosts or, only if the IP address for the Hyper-V host for which the End to End list is to be displayed has not been set, execute the winrm command below to specify the value for TrustedHosts.

Execution example)

```
C:\Users\administrator> winrm set winrm/config/client @{TrustedHosts="ipAddr"} [Enter]
```

For *ipAddr*, specify as the value for the previously confirmed TrustedHosts and the IP address for the Hyper-V host for which the End to End list of the VM guests is to be displayed. If you specify multiple IP addresses, specify them with the addresses separated by commas (as in "*ipAddr1, ipAddr2,...*"). For IPv6 format, surround the IP address with brackets "[]".

Example: When registering 192.168.1.10,fcde:555:444:333:222::1027,fcde:555:444:333:222::1154 in Trusted Hosts:

```
TrustedHosts="192.168.1.10, [fcde:555:444:333:222::1027], [fcde:555:444:333:222::1154]"
```



Note

- To use this function, the following need to be installed on the Management Server:

- .NET Framework 2.0 or later
- PowerShell 2.0 or later
- WinRM2.0 or later

Note that the supported version of Hyper-V is 2.0 or later.

- The End to End list for Hyper-V supports the display of information for storage devices connected to the VM host with FC, iSCSI and FCoE connections. Storage devices utilizing SAS connections and storage devices with VM guests directly connected with iSCSI are not supported.
- For a multipath configuration, the End to End list for Hyper-V displays only one path.
A host name detected by the agent may not be consistent with a host name of the Hyper-V host displayed in the End to End list for Hyper-V. To be consistent with those host names, define the host name as a computer name in the /etc/hosts file of Hyper-V host.
- The information of virtual HBA on the Hyper-V guest is not displayed.
- If the same format (IPv4 or IPv6) IP address as the Hyper-V host is not set to its VM guests, the IP addresses of the VM guests are not displayed.

6.1.8 Extreme Cache Management

With this product, a storage device's Extreme Cache can be managed. Tasks can be performed with the same operability without having to be conscious of limitations due to the type or model of the storage device.

Operations regarding Extreme Cache can be executed to a storage device or volume. This section will explain the operations in relation to a storage device. Refer to "[6.1.2 Volume Management](#)" for information on operations in relation to a volume.

Select the target storage device with the Web Console, and select the operation from the Action pane.

The operations that can be executed are as follows:

- Extreme Cache Configuration
 - Enable/Disable
 - Size of Extreme Cache



In order to utilize the Extreme Cache function, it is required that configuration for the storage device is enabled.

When the configuration for the storage device is disabled, the Extreme Cache function cannot be utilized, regardless of the enabled / disabled configurations of each volume.

6.1.9 Encryption Mode Management

With this product, a storage device's encryption mode can be managed. Tasks can be performed with the same operability without having to be conscious of limitations due to the type or model of the storage device.

Operations regarding encryption mode can be executed to a storage device, Tier pool, or volume. This section will explain the operations in relation to a storage device.

Refer to "Creation of Tier Pool" in the *ETERNUS SF Storage Cruiser Operation Guide for Optimization Function* for information on operations in relation to a Tier pool. Refer to "[6.1.2 Volume Management](#)" for information on operations in relation to a volume.

Select the target storage device with the Web Console, and select the operation from the Action pane.

The operations that can be executed are as follows:

- Encryption Mode Configuration
 - Enable/Disable



- In order to utilize the encryption mode function, it is required that configuration for the storage device is enabled.

When the configuration for the storage device is disabled, the encryption mode function cannot be utilized, regardless of the enabled / disabled configurations of Tier pool or each volume.

- For the following models, management of encrypted volumes and configuration of the encryption mode cannot be performed with this product:
 - ETERNUS DX60/DX60 S2/DX80/DX90
 - ETERNUS DX400 series
 - ETERNUS DX8000 series

6.1.10 Virtual Machine Management

New creation of Virtual Machine

After creating a new VM guest, perform the **Reload Conf.** operation for the VM host where the VM guest exists.

In a VMware vSphere Virtual Volumes environment, when a VM guest created on the VVOL datastore is powered on, it is automatically registered on the ETERNUS SF system. Therefore, it is not required to perform the **Reload Conf.** operation for the VM guest.

Migration of Virtual Machine

When migrating VM guests between VM hosts using Storage vMotion function or vSphere HA function, this migration is not automatically detected by this product. The migrated VM guests are treated as non-communicating by this product. When migration of VM guests, regardless of whether it is automatic/manual, perform the following under the Web Console:

1. Delete the migrated VM guest from the VM host where the VM guest existed before migrating.
2. Perform the **Reload Conf.** operation for the VM host where the VM guest exists after migrating.

When the VM host where the VM guest existed before migrating is not registered on this product, just perform step 2.

When the VM host where the VM guest exists after migrating is not registered on this product, just perform step 1.

In a VMware vSphere Virtual Volumes environment, when the VM guest is migrated to the VVOL datastore, its migration is automatically recognized. If the VM guest is migrated with its power OFF, its migration is automatically recognized when the VM guest is powered on. Therefore, it is not required to perform the **Reload Conf.** operation for the migrated VM guest.

6.2 Access Path Management

6.2.1 What Is Access Path?

In this software, a logical path between a server node and a storage device is defined as an access path.

Access paths are generated by the following access control functions of the server node, Fibre Channel switch, and storage.

Fibre Channel Switch Zoning

Switch vendors provide Fibre Channel switch zoning. Information such as the WWN/port number used by Fibre Channel for the host bus adapter (HBA) on the server node side and the WWN/port number of channel adapters (CAs) on the storage side is combined in a zone unit, and access from ports other than the port defined for the zone are restricted.

Storage Host Affinity

Storage vendors provide storage host affinity. The storage side recognizes the WWPN of the HBA on the server node side in order to restrict access. Associations of WWPNs of HBAs with storage areas (AffinityGroup/Zone) can also be set.

ETERNUS DX series, ETERNUS DX200F refer to storage host affinity as "Set Affinity Group", "Set Host-Affinity Group".

Integrated Access Path Control

This software integrates and manages these functions to facilitate definition of settings that make use of the characteristics of SAN security and each function.

It controls access paths according to the functions and settings of individual devices.

Access Path in VMware Environment

This software does not support access path management for VM guests because it does not support HBA management.

In environments other than the VMware vSphere Virtual Volumes environment, when the access path environment modification (setting up, deleting and inheriting) is executed for the VM host, reboot the VM host or execute the following procedures by using VMware Infrastructure Client:

1. Select the **Configuration** tab.
2. Select **Storage Adapters** from Hardware lists.
3. From Hardware lists, select the device corresponding to HBA that the access path setting was changed.
At this time, select the device of the same name as logical HBA number displayed in the Web Console.
4. Execute **Rescan** from pop-up menu.

For access path management in a VMware vSphere Virtual Volumes environment, refer to "VVOL Access Path Management" in the *ETERNUS SF Operation Guide for VMware vSphere Virtual Volumes*.

Note

These are the following notes during a time when the host group and the CA port group of the ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, the ETERNUS DX200F are used.

- There is no need to be aware of the host group or CA port group for this product. The host group and CA port group are not displayed in the Web Console screen or command execution results for this product.
- Host affinities created with specifying the host group or CA port group are displayed as access path information on the Web Console.
- Host affinities with an access path created using the access path settings for this product are displayed on the ETERNUS Web GUI. However, the relevant host affinity host group and CA group columns will be "-".
- Hosts with an access path deleted using the access path deletion operation for this product is deleted from the host group but this does not affect behavior.
- When the host registered in a host group by deleting the relevant host does not exist, it is deleted from the relevant host group but this does not affect behavior.

6.2.2 Access Path Display (Display of Logical Relationship Between Server Node and Storage Systems)

This software gathers information from each device and displays the status of access paths or the status of logical access paths from the server node. This function is effective for verifying the validity of system configuration setup and recognizing the effect of a resource error because it enables the logical relationship in the more complicated SAN environment to be easily determined.

If the server node operates under a Solaris OS environment and the storage system is a library or tape device, the tape-type drivers for which access paths can be displayed are as follows:

st, ftla, fsct, IBMTape, mt, lb, sg, sgen

Note

The Solaris OS server node uses special file `/dev/rdisk/cXtX`, `/dev/rmt` to obtain WWPN binding information. For this reason, to recognize WWPN binding, this special file (device file) must be created in advance. If any unused special file is in `/dev/rdisk/`, `/dev/rmt`, it causes the access path display to be incorrect. If access path display by this software differs from that by system equipment, clarify the special files defined in the following operations:

- Solaris OS (For the environment which uses hard disk driver (HDDV), and does not use multipath control (ETERNUS Multipath Driver, MPLB, MPH))

```
# touch /reconfigure
# /usr/sbin/shutdown -y -i6 -g0 (server node restart processing)
```

After the server node has been restarted

```
# format (Loading processing to HDDV driver's kernel)
# disks -C
```

- Solaris OS (For the environment which uses both hard disk driver (HDDV) and multipath control (ETERNUS Multipath Driver, MPLB, MPH), uses only multipath control or uses neither.)

```
# touch /reconfigure
# /usr/sbin/shutdown -y -i6 -g0 (server node restart processing)
```




After the server node has been restarted


```
# disks -C
```

6.2.2.1 Access Path Status Display

You can check the access path status connected by the Fibre Channel on the **Status** column on the Access Path screen. The status of access paths are displayed as the following icons. When you click the each status, the corresponding error content message is displayed.

In addition, if you check the access path status, click **Refresh** on the Action pane to update the access path status.

| Access Path Status | Description | Action |
|---|---|--|
|  Normal | The access path is normal. | <p>None.</p> <p>However, for HBA shown below, you must take actions for making the operating system recognize LUN.</p> <ul style="list-style-type: none"> - If the HBA is XSEFC401AF, XSEFC402AF, SG-XPCIE2FC-EM4, or SG-XPCIE2FC-EM8: <ol style="list-style-type: none"> 1. In an environment connected to a Fibre Channel switch, configure the HBA N port settings. Refer to "4.1.1.2 N-port Settings", and check the N-port settings. If the settings are incorrect, correct them. 2. Check the storage Ap_id by executing <code>cfgadm -al</code> command, and make the OS recognize the LUN by executing <code>cfgadm-c configure Ap_id</code> command. For details about the commands, check the man command. - If the HBA is SE0X7F21F, SE0X7F22F, SG-XPCI1FCQF2, SG-XPCI2FC-QF2, SGXPCI1FC-QL2, SG-XPCI2FCQF2-Z, SG-XPCI1FC-QF4, or SGXPCIE2FC-QF8: <p>Check the storage Ap_id by executing <code>cfgadm -al</code> command, and make the OS recognize the LUN by executing <code>cfgadm-c configure Ap_id</code> command. For details about the commands, check the man command.</p> |
|  Warning | <p>The following possibilities are considered.</p> <ul style="list-style-type: none"> - The access path definition is inconsistent. - The Fibre Channel switch is not registered. | <ul style="list-style-type: none"> - When the access path definition is inconsistent: Click status to display the error content message. Refer to "Error Messages of Access Path" in the <i>ETERNUS SF Messages</i>, take actions according to the instructions for the error message. - When the Fibre Channel switch is not registered: Register the Fibre Channel switch. |
|  Error | <p>The following possibilities are considered.</p> <ul style="list-style-type: none"> - The access path is disconnected due to an error (if the multipath control mechanism is installed). - Another part failure caused an access path error. This state also occurs if a device in the access path is faulty. - The Fibre Channel cable on a route is disconnected. - The access path is set "Offline" by the user. | <p>Click status to display the error content message. Refer to "Error Messages of Access Path" in the <i>ETERNUS SF Messages</i>, take actions according to the instructions for the error message.</p> <p>In addition, if a part failure is suspected, click Reload Conf.:</p> <p>Reload the configuration to the device defined as an access path for identify whether a failure occurs or not. Replace the faulty part, and execute recovery processing.</p> <p>When the access path is set to "Offline", set it to "Online" as necessary.</p> <p>If HBA was reduced, delete the access path on the Access Path screen. Refer to "Delete Access Path" in the <i>ETERNUS SF Web Console Guide</i> for details on how to delete.</p> <p>If HBA was replaced, it is required to take corrective action that corresponds to the HBA status displayed on the Server Detail screen.</p> |

| Access Path Status | Description | Action |
|---|---|--|
| | <ul style="list-style-type: none"> - HBA was reduced or replaced. | <p>Perform the Reload Conf. operation as to the replaced HBA-installed device to perform the following steps:</p> <ul style="list-style-type: none"> - If the HBA status is "Changed": Perform access path modification operation. Refer to "10.3.1.2.1 Post-replaced HBA State Is "Changed"" for details on the inheritance operation. - If the HBA status is "Unknown": Perform access path modification operation. Refer to "10.3.1.2.2 Post-replaced HBA State Is "Unknown"" for details on the modification operation. |
|  Unknown | <p>The following possibilities are considered.</p> <ul style="list-style-type: none"> - The access path status needs to be updated. - Access path settings are incorrect. - HBA has been replaced. | <p>Click Refresh on the Action pane to update the access path status. "Unknown" is displayed in the following configurations below because the access path status cannot be obtained.</p> <ul style="list-style-type: none"> - The server is not registered on the Management Server. - Storage Cruiser's agent is not installed on the server (manually embedded server). <p>For displaying the access path status, install Storage Cruiser's agent and register the server on the Management Server.</p> <p>If HBA was replaced, it is required to take corrective action that corresponds to the HBA status displayed on the Server Detail screen. Perform the Reload Conf. operation as to the replaced HBA-installed device to perform the following steps:</p> <ul style="list-style-type: none"> - If the HBA status is "Changed": Perform access path modification operation. Refer to "10.3.1.2.1 Post-replaced HBA State Is "Changed"" for details on the inheritance operation. - If the HBA status is "Unknown": Perform access path modification operation. Refer to "10.3.1.2.2 Post-replaced HBA State Is "Unknown"" for details on the modification operation. |
| (-) hyphen | Access path cannot be displayed because the interface is iSCSI. | None. |

Note

- The access path status is not updated automatically. When you check the access path status, click **Refresh** on the Action pane to update the access path status.
- In an environment not connected to a Fibre Channel switch, the access path status is not displayed correctly.
- It may take a few minutes to update the access path status. You can check the completion of the process on the **Operation History** screen.

6.2.3 Access Path Setting

In a storage system where a Fibre Channel switch is between a server node and storage, this software automatically changes the security settings supported by each device and sets an access path, as shown in the figure below. If no security mechanism is provided on the device side, setting up security may not be possible. However, the security mechanisms of other devices create access paths. If none of the devices constituting these access paths is equipped with a security function, security cannot be set up but the access paths can be accessed from the server node.

P Point

You can set the access path concurrently with assigning volumes to the server using the Web Console. Refer to "Assign ETERNUS Disk Storage System Volumes to Server" in the *ETERNUS SF Web Console Guide* for details on the operation.

Note

Each storage system has requirements, such as HBA types used, for guaranteeing operation according to the mutual connection verification status. Set each access path so that these requirements are satisfied. For more information about the requirements, contact the respective storage system distributor.

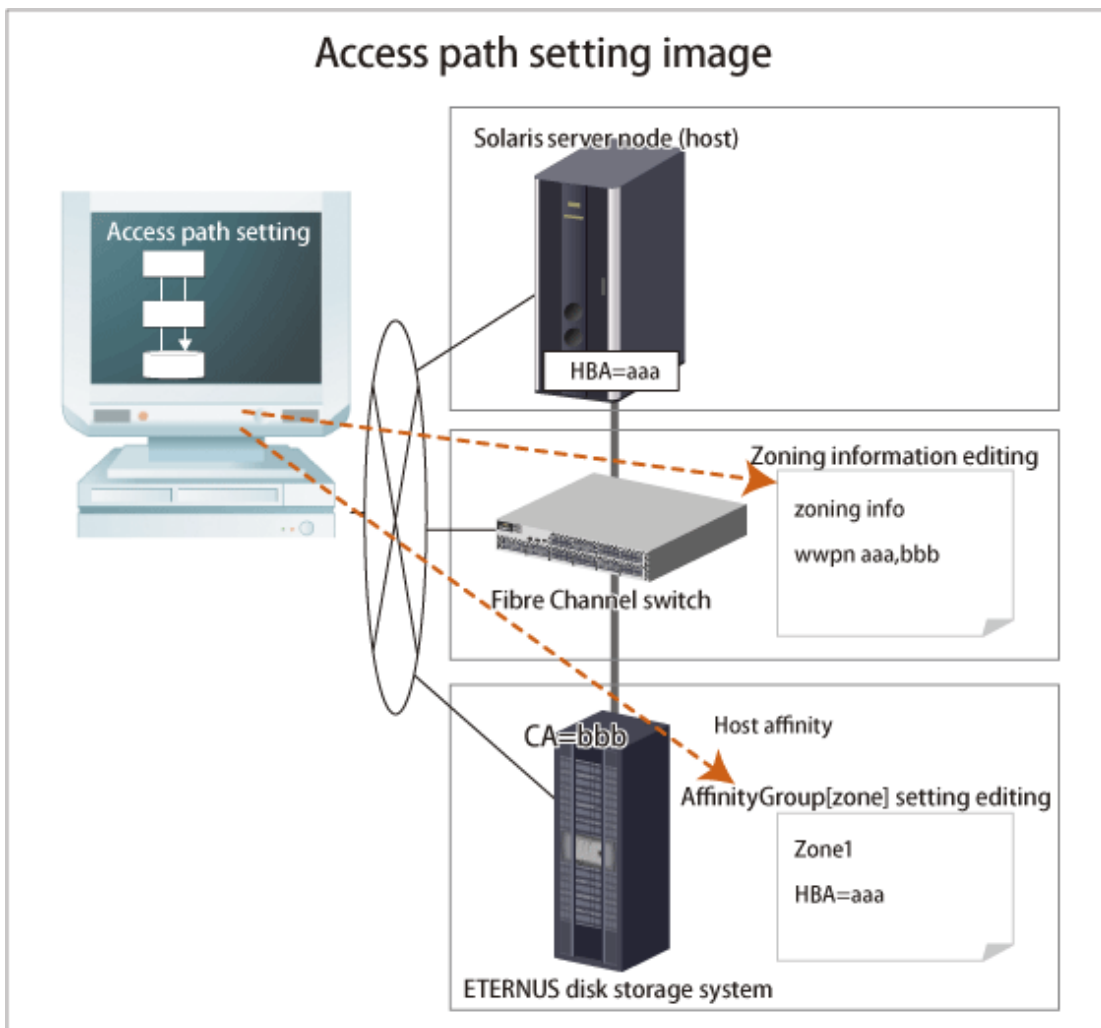


Table 6.1 Security Information That This Software Sets in Device When Setting Access Path

| Device Type | | Contents Set by This Software |
|---------------------|-----------------------------|-------------------------------|
| Solaris server node | Agent available/unavailable | No setting |
| Windows server node | Agent available/unavailable | No setting |
| Linux server node | Agent available/unavailable | No setting |
| HP-UX server node | Agent available/unavailable | No setting |
| AIX server node | Agent available/unavailable | No setting |

| Device Type | | Contents Set by This Software |
|-------------------------------------|------------------------------|--|
| Other server nodes | Agent unavailable | No setting |
| Fibre Channel switch | With zoning setting | WWPN one-to-one zoning is set. (However, this zoning is not set if the Fibre Channel switch side already has sufficient port zoning.) |
| | Without zoning setting | No setting |
| ETERNUS DX series ETERNUS DX200F | With security setting | Setting of HBA WWPN for security |
| | Host affinity (zone) setting | Setting of HBA WWPN to the affinity group (zone) |
| | Without security setting | No setting |
| Other storage/tapes | | No setting |

6.2.3.1 Preparations

Notes

- Only "System Administrator" account can set access paths.
- To change the specified AffinityGroup/zone name on the ETERNUS Disk storage system side of a set access path, delete the path and then set it again with a new zone.
- Verify that all Fibre Channel switches cascaded to the Fibre Channel switch associated with the access path setting are correctly recognized in the current status. Once an access path is changed because a Fibre Channel switch is temporarily disconnected from the cascade connection, the old cascade connection cannot easily be recovered. (In this event, execute the `cfgClear` command to delete zoning information for the Fibre Channel temporarily disconnected from the cascade connection. This enables cascade reconnection.)
- When setting an access path that is configured in the FC routing functionality LSAN zone in this software, manually set the LSAN zone in the device in advance.
- If a fibre channel switch existing on the configured access path is in No Security status, zoning is not done to the fibre channel switch. When configuring zoning to the fibre channel switch, enable "SAN Zoning Setting" on the Change screen for switch information. For the method to display the screen, refer to "Change FC Switch Information" in the ETERNUS SF Web Console Guide. Security status of fibre channel switch can be viewed on the Detail Information screen. For the method to display the screen, refer to "Display FC Switch" in the ETERNUS SF Web Console Guide.

Checking Storage Settings

Check the following settings on the storage side before setting an access path:

- ETERNUS DX series, ETERNUS DX200F:
By setting up the zone (host affinity) function, you can use storage areas efficiently on a storage area network. To use this zone (host affinity) function, you must set up a Affinity Group/zone on the storage side before setting an access path.
- ETERNUS DX60/DX80/DX90, DX S2 series, DX S3 series, ETERNUS DX200F:
If linked affinity groups are used, then the WWN settings of the server nodes to be used must be set in advance. Use ETERNUS Web GUI to set the WWN settings. When setting it, select a host response whose Host Specific Mode is in HP-UX Mode.

Connected State of FC Cable Between Devices

- When setting an access path, an HBA and CA must be physically connected via a Fibre Channel switch.

Device Status

- Each HBA must be connected to a Fibre Channel switch and operate as the N port or NL public.

- All of a Fibre Channel switch on the way of the access path setting, HBAs, server nodes, CAs and storages should be operating normally.

6.2.3.2 Setting

Set access paths for the Fibre Channel.

Access Path Setting Procedure

Configure the access path environment by installing additional storage and connecting a Fibre Channel cable, etc.

1. Preprocessing for the device driver definition file

- When ETERNUS Multipath Driver 2.0.1 or higher is used

No preprocessing needs to be performed.

- Solaris 9 OS

- This procedure changes the disk array control driver from sd to hddv when the grmpdautocon command is executed when the hot system expansion function (hddvadmM) is enabled for setting a hard disk driver (hereinafter abbreviated as hddv).

Check whether the hddv configuration information file (hddv.conf) has been created.

```
# ls /kernel/drv/hddv.conf
```

If the file is not found, execute the following command and create the hddv.conf file:

```
# hddvadm -M
```

When the file is found, check whether the file content is of class or parent type.

(Example)

Example of hddv.conf of the parent type

```
name="hddv" parent="scsi" target=16 lun=0;
```

Example of hddv.conf of the class type

```
name="hddv" class="scsi" target=16 lun=0;
```

The class type of file requires no preprocessing. (All hddv.conf files created by the hot system expansion command [hddvadm M] are of the class type.)

For the parent type of file, follow the instructions below to initialize the non-hot system expansion environment and move into the hot system expansion environment. To directly use the non-hot system expansion environment, follow the procedure for setting non-hot system expansion (hddvadm m).

1. Execute hddvadm -i.
2. Confirm that /kernel/drv/hddv.conf is not present.
3. Delete the entries made for recognizing the disk array device from the sd configuration information file (sd.conf).
4. Execute the following command and create an hddv configuration information file (hddv.conf):

```
# hddvadm -M
```

- In the MPLB2.0 or MPLB2.1 environment with non-hot system expansion specified (hddvadm -m) or in MPHD environment, the commands for adding and removing paths are not supported. Accordingly, the multipath configuration must be canceled once. Execute the destroy command of #iompadm to cancel the multipath configuration.

- In the multipath disk control (MPLB, MPHD, or HDDV) environment with non-hot system expansion is specified (hddvadm -m) or with normal setting (hddvadm-m), execute the following command on the target server node:

```
# hddvadm -i
```

By executing this hddvadm -i command, hddv.conf file moves to sd.conf and mphd.conf/mplb.conf file is saved. However, in the hot system expansion environment or in the hddvadm -M execution environment, hot system expansion can be performed without executing the hddvadm -i command. Therefore, this command need not be set.

2. Select the target server node and add an access path by using the Web Console.
3. [On a Solaris OS server node with multipath disk control (ETERNUS Multipath Driver 2.0.1 or later)] Execute the command below on the target server node to enable the server node to recognize the storage device.

- To automatically build a multipath device, execute the `grmpdautoconf` command. Refer to the driver manual for details on the command.

```
# /usr/sbin/grmpdautoconf
```

To automatically build a multipath device that uses the ETERNUS multipath driver and has a path passing through multiple Fibre Channel switches, execute the command after confirming path redundancy and specifying the "-X" option (because the `grmpdautoconf` command cannot check whether the redundancy of a path passing through multiple Fibre Channel switches is guaranteed).

```
# /usr/sbin/grmpdautoconf -X
```

4. [On a Solaris OS server node with multipath disk control (MPLB, MPHD, HDDV2.2 or later) and hot system expansion specified (`hddvadm -M` execution environment)] Execute the following command on the target server node so that the target server node recognizes the storage unit.

- In Solaris 9 OS, `hddv.conf` is edited if needed (refer to the multipath disk control (MPLB, MPHD, HDDV) various driver manuals). The following command is executed on the server node to fetch a storage device.

```
# update_drv -f hddv
```

With the above setting, the `hddv` driver can recognize the logical storage unit. If necessary, execute the command that builds an extension path to the multipath instance or the command that configures the multipath instance. Refer to the applicable driver manual for information about the commands (`mplbconfig/iompadm add/iompadm new`).

5. [On a Solaris OS server node, in the multipath disk control (MPLB, MPHD, HDDV) environment with non-hot system expansion is specified (`hddvadm -m`), or in the environment without multiple disk control] Execute the following command on the target server node to enable the server node to recognize the device:

| No. | Environment | Commands to Execute |
|-----|---|---|
| 1 | When using the following HBA: <ul style="list-style-type: none"> - SE0X7F21F - SE0X7F22F - XSEFC401AF - XSEFC402AF - SG-XPCI1FC-QF2 - SG-XPCI2FC-QF2 - SG-XPCI1FC-QL2 - SG-XPCI2FC-QF2-Z - SG-XPCI1FC-QF4 - SG-XPCIE2FC-QF8 - SG-XPCIE2FC-EM4 - SG-XPCIE2FC-EM8 | Check the storage <i>Ap_id</i> using the <code>cfgadm -al</code> command, and make the OS recognize the LUN using the <code>cfgadm -c</code> configure <i>Ap_id</i> command. For details about the commands, check the man command. |
| 2 | When using HBA other than item No.1 and when it is not a Multipath Disk Control (MPLB, MPHD, HHDDV) environment (including tape environments) | <pre># touch /reconfigure # /usr/sbin/shutdown -y -i6 -g0</pre> |

| No. | Environment | Commands to Execute |
|-----|---|--|
| 3 | When using HBA other than item No.1 and when it is a Multipath Disk Control(MPLB, MPHD, HHDDV) environment (hddvadm -m) | <pre># touch /reconfigure # /usr/sbin/shutdown -y -i6 -g0 # hddvadm -m (The required part of sd.conf is moved to hddv.conf, and the saved mphd.conf/mplb.conf file is restored.) # touch /reconfigure # /usr/sbin/shutdown -y -i6 -g0 (Existing instances for each driver (mplb/mphd/hddv) are configured when the definition file is restored. For new instances, hddv instances are configured.)</pre> |

According to the environment, execute the command that builds an extension path to the multipath instance or the command that configures the multipath instance. Refer to the applicable driver manual for information about the commands (mplbconfig/iompadm add/iompadm new).

6. [Solaris OS server node] Arrange the files in /dev/rdisk with # disks -C command.
7. [Windows] Restart the unit so that the device is recognized. Even if the device is automatically recognized by Windows 2003, it is recommended to restart the unit so that the device is recognized again.
8. [Linux server node] Restart the unit so that the device is recognized.
9. [HP-UX server node] Restart the unit to execute device recognition. After restart, check the connection of the device and search for the device file (for example, /dev/dsk/c5t1d0) with #ioscan -funC disk command. If the device file does not exist, create the device file by executing #insf-H <H/W pathname > -e command for H/W path in which the device file is not detected.
10. [AIX server node] Restart the unit to execute device recognition.
11. [Other server nodes] Perform operations for device recognition.

When the operating system is VMware vSphere 4 or later, reboot the VM host or, by using VMware Infrastructure Client, execute "Rescan" for the HBA that the access path has been set and perform the **Reload Conf.** operation for applicable server node by using this software. Refer to "[Access Path in VMware Environment](#)" in "[6.2.1 What Is Access Path?](#)" for the using method of VMware Infrastructure Client.

12. Check the access path from this software.
 - [For Solaris OS server node]

/dev/rdisk/cXtXdX is created on the server node side and the access path is displayed.
 - [Windows server node, Linux server node, HP-UX server node, or AIX server node]

A device is generated on the server node side, and the access path is displayed.

Note

Confirmation of the status of server node (HBA)-server node (HBA) and storage device (CA)-storage device (CA) access paths is performed by checking the zoning information for the fibre channel switch device using the Web Console. Deletion is performed by deleting the fibre channel switch device information in the Web Console.

Set the zoning shown below if the ETERNUS VS850 is operating. These are normally set during VS850 installation but can also be set on the Management Server.

- Host zone (zone between the host and the VS850)
- Storage zone (zone between the VS850 and storage)
- I/O group zone (zone for inter-node communication either within a VS850 I/O group or between I/O groups)
- Remote zone (zone for communication between different VS850 clusters)

These zonings are normally set during installation of the VS850, but for the storage zone, it is possible to set the switch device's zoning and the storage device's host affinity using this software's access path setting function. For zones besides the storage zone, set the zoning for the switch device manually.

6.2.4 Deleting Access Path

This software can delete access paths set by it and access paths for Fibre Channel switches.

Delete an access path for which one-to-one WWPN zoning is set for a Fibre Channel switch between server nodes (HBAs) or between storages (CAs) according to the zoning information in Fibre Channel switch properties.

The access path cannot be deleted to change the zone status of the switch to non-zoning (No Security). All the zoning settings of the switch are deleted when a user request to delete an access path is processed, this software creates a dummy zone. Although the loss of zone security as a result of deleting zoning can lead to inadvertent accessing of disk areas during operation, the dummy zone created prevents data destruction.

When changing the zone status of the switch to non-zoning (No Security), manually change the zone status of the switch to No Security. Note that this dummy zone will not be deleted even if access path addition processing is executed.

6.2.4.1 Preparations

Notes

- Only "System Administrator" account can delete access paths.
- You cannot delete access paths defined during setup other than for setting one-to-one WWPN zoning such as port zoning, WWNN zoning, or multi-port WWPN zoning in a Fibre Channel switch. (Only the one-to-one WWPN zoning setting is valid in this software.) In such cases, delete a zone from the zone information of Fibre Channel switch properties, or log in directly to the Fibre Channel, and change the setup.
- Verify that all Fibre Channel switches cascaded to the Fibre Channel switch associated with the access path setting can be correctly recognized in the current status. Once an access path is changed because a Fibre Channel switch is temporarily disconnected from the cascade connection, the old cascade connection cannot easily be recovered. (In this event, execute the `cfgClear` command to delete zoning information for the Fibre Channel temporarily disconnected from the cascade connection. This enables cascade reconnection.)
- When deleting an access path that is configured in the FC routing functionality LSAN zone in this software, manually delete the LSAN zone in the device in advance.

Server Node Setting

- If Fujitsu multipath disk control mechanism or `msdsm` on the Windows server node, be sure to shut down the server node before deleting an access path. If an access path is deleted while the server node is in operation, a very long time is required to shut down the server node later because of the operation of Windows path detection logic.
- To delete the access path of Fujitsu multipath disk control mechanism or `msdsm` on the same server node as the Management Server from this software, shut down the Management Server, disconnect the FC cable from the access path to be deleted, restart the admin server, and delete the access path.
- For Unix, execute `umount` for the access path to be deleted.

Physical Removal (Only for Solaris OS)

- When ETERNUS Multipath Driver 2.0.1 or higher is used and the access path to be deleted is physically connected to a Fibre Channel switch for which no zone is set, physically remove the access path in advance such as by disconnecting the cable for which access path deletion is to be executed.

6.2.4.2 Setting

Delete a set access path.

1. [Solaris OS (MPLB, MPHD environment)] Release the multipath setting.

Refer to the relevant driver's manual for information on the command and command parameters.

- If MPLB 2.2 and higher, execute the following command:

```
# mplbconfig (arguments are required, -d option)
```

- If MPLB 2.1 and former or MPHD, execute the following command:

```
# iompadm (arguments are required, destroy option)
```

MPLB2.1 or earlier and MPHD do not support the commands that add and remove paths. Delete the multipath instance by using the above command (iompadm destroy).

2. [Solaris OS (MPLB, MPHD, HDDV environment)] Release HDDV.

When the hot system expansion function of server node is disabled, execute the following commands:

```
# hddvadm -i
```

hddv.conf is moved to sd.conf, and the mphpd.conf/mplb.conf file is saved.

3. [Windows] If Fujitsu multipath disk control mechanism or msdsm is set, shut down the Windows server node. If the Windows server node is active in this environment, this software suppresses access path deletion.
4. Using the Web Console, execute the deletion of the target access path.
5. [ETERNUS Multipath Driver 2.0.1 or higher] Execute the grmpdautoconf command to implement path removal. (Refer to the *ETERNUS Multipath Driver User's Guide* for details of the command specifications.)
6. [Solaris OS] Follow the procedure below so that the server node recognizes the storage unit.

In the hot system expansion (hddvadm -M) environment of ETERNUS Multipath Driver 2.0.1 or higher, MPLB, MPHD, or HDDV, execute the command shown below. After path removal, the server must be restarted to enable the Fibre Channel card definition of the server node.

```
# /usr/sbin/shutdown -y -i6 -g0 (restarts the server)
# disks -C
```

In an environment using MPLB2.2 or later, MPHD, and HDDV with non-hot system expansion or normal specified (hddvadm -m), execute the following operations:

- #touch /reconfigure
- # /usr/sbin/shutdown -y -i5 -g0
- Start it in single user mode.
- # hddvadm -m (The required part of sd.conf is moved to hddv.conf, and the saved mphpd.conf/mplb.conf file is restored.)
- #touch /reconfigure
- #/usr/sbin/shutdown -y -i6 -g0 (Instances for each driver (mplb/mphpd/hddv) are configured when the definition file is restored.)
- # disks -C

In an environment using MPLB2.1 or earlier

- #touch /reconfigure
- # /usr/sbin/shutdown -y -i5 -g0
- Start it in single user mode.
- # hddvadm -m (The required part of sd.conf is moved to hddv.conf, and the saved mphpd.conf/mplb.conf file is restored.)
- #touch /reconfigure
- # /usr/sbin/shutdown -y -i6 -g0
- # disks -C

- Reconfigure the multipath by using the new #iompadm command.

In an environment where neither the hard disk driver (HDDV) nor multipath control (MPHD MPLB) is used

- #touch /reconfigure
- # /usr/sbin/shutdown -y -i6 -g0
- # disks -C

7. Check the access path from this software.
8. [Windows] Restart the device.
9. [Linux] Restart the device.
10. [HP-UX] Restart the device.
11. [AIX] Restart the device.
12. [Other server nodes] Perform operations for device deletion recognition.

When the operating system is VMware vSphere 4 or later, reboot the VM host or, by using VMware Infrastructure Client, execute "Rescan" for the HBA that the access path has been and perform the **Reload Conf.** operation for applicable server node by using this software. Refer to "[Access Path in VMware Environment](#)" in "[6.2.1 What Is Access Path?](#)" for the using method of VMware Infrastructure Client.

6.2.5 Access Path Inheritance

This software sets WWPN-based security settings on a device to form an access path. However, when the faulty part such as an adapter (controller) is replaced, the WWPN name may be changed because it is unique.

- Devices whose WWPNs are changed when the faulty part such as an adapter (controller) is replaced:
All HBAs and ETERNUS LT230, etc.
- Devices whose WWPNs are not changed when the faulty part such as an adapter (controller) is replaced:
ETERNUS Disk storage system, ETERNUS LT250/LT270, etc.

Operation can be performed as is if WWPNs are not changed. If WWPNs are changed because an adapter (controller) is replaced, security functions of the WWPNs constituting the access path must be changed to those of new WWPNs. This operation is defined as "access path inheritance" and it provides a function that changes the WWPN security settings managed by this software.

Refer to the following sections for the access path inheritance procedure after replacing the faulty parts.

- "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)"

6.2.6 Managing Fibre Channel Switch That Has Already Set in Port Zoning

One-to-one WWPN zoning setting is recommended in this software to realize the complete zoning security management as described in "[4.2.1 SN200 \(Brocade\) Fibre Channel Switch](#)", though port zoning is possible to be performed. The procedure to change into one-to-one WWPN zoning setting is as follows:

1. Confirm that all the monitored devices are connected with all the switch ports.
2. Change the sanma.conf. Refer to "[A.2 sanma.conf Parameter](#)" and specify 1 in "[SET_SW_ZONING_ALWAYS](#)".
Either perform an update to the setting file using the Web Console or restart Manager to reflect the content of this file.
3. In the Web Console, add an access path corresponding to the port zoning.
4. After adding of the access path is complete, check that WWPN zoning which indicates information identical to that of the port zoning is displayed on the Web Console, and then delete the specified port zoning.

Note

For the multiple ports zoning setting, do not delete the multiple ports zoning until WWPN zoning corresponding to each port zoning.

5. Repeat the procedure from steps 3 to 4.
6. If necessary, return the setting that is executed in step 2 to the former setting.

To change the zoning setting can be executed in zone administration window in WEBTOOLS in Fibre Channel switch and by CLI.

Point

The change to the zoning settings is performed on a Fibre Channel switch equipped with the latest firmware in the fabric (all of the Fibre Channel switches in the cascading connection) that contains the Fibre Channel switch selected when this properties window is opened.

6.3 Event Display and Linkage

This software receives and decodes an SNMP Trap that is sent from a device, and handles a device status change as an event for managing device errors.

The event is created based on the contents of SNMP Traps and user settings.

The processing described below is performed for generated events.

- [Displaying Event Logs](#)
- [Systemwalker Centric Manager Linkage](#)
- [Shell/Bat Linkage](#)
- [External Script Linkage](#)
- [E-mail Notification](#)

As for the following event, this software only displays event logs, and other processing are not performed.

- Trap events common to devices ("Trap Common to Devices" in "Notes about Common Traps for Devices" in the *ETERNUS SF Event Guide*)
- Start of performance data re-collection/Success of performance data re-collection event (Success of performance data re-collection, Success of performance data re-collection in "Performance Management Traps" in the *ETERNUS SF Event Guide*)
- Event that indicates when the state changes into error(red) in the device polling function ("When error occurs in the polling function" in "Device Polling Event" in the *ETERNUS SF Event Guide*)

See

Refer to "[Appendix A Customization](#)" for detailed information on how to customize SNMP Trap processing.

Displaying Event Logs

Generated events are displayed in the event log of the Web Console. Events are displayed shown as below.

| Displayed Items | Details |
|-----------------|--|
| type | Displays the level of a displayed event. |
| date | Displays time and date event occurred in Month DD, YYYY HH:MM:SS AM (or PM). |
| device | Displays the name of a device on which the event occurred. This may not be displayed for events by user operations. |

| Displayed Items | Details |
|-----------------|--|
| message | <p>Indicates the event ID and its details. Displays this ID when the event has the corresponding ID.</p> <p>This ID is defined in the manager that is monitoring the event. Refer to the <i>ETERNUS SF Event Guide</i> for details about events.</p> |

Note

If multiple SNMP Traps comprised of the same information are received from a device at the same time and date, only the first received SNMP Trap will be displayed on the event log.

Systemwalker Centric Manager Linkage

Also, generated events are reported to Systemwalker Centric Manager. Refer to "[12.1 Linkage with Systemwalker Centric Manager](#)" for information on settings required in advance. The importance levels of the events are also reported.

Note

Events of the server node agent is not reported to Systemwalker Centric Manager. (Shell/Bat linkage is operated.) Execute fault monitoring by message monitoring function of Systemwalker Centric Manager.

Shell/Bat Linkage

A generated event is specified in the call argument of the Shell file, such shown as below.

| Platform of Manager | File Name (Full Path) |
|----------------------|--|
| Windows | <code>\$ENV_DIR\ESCManager\etc\opt\FJSVssmgr\current\trapop.bat arg1 arg2 arg3 arg4 arg5 arg6</code> (\$ENV_DIR means "Environment Directory" specified at the Manager installation.) |
| Solaris OS, Linux | <code>/etc/opt/FJSVssmgr/current/trapop.sh arg1 arg2 arg3 arg4 arg5 arg6</code> |

The "arg1" is the fault detail for the target device.

The "arg2" is the IP address for the target device.

The "arg3" is the server node name (FQDN) for the target device (if the full domain name cannot be confirmed, the IP address is set).

The "arg4" is the number of milliseconds that have elapsed from 00:00:00 GMT 01 Jan 1970 ("zero") to the current time.

The "arg5" is the fault level ("INFO", "WARNING", "ERROR").

The "arg6" is the name for the target device.

Rewriting the content of these shell/bat files enables the E-mail linkage of fault information or other Management Software linkage (such as issuing commands to Management Software and writing information to a log file managed by Management Software).

Sample Shell/Bat files are installed in the directories shown below. Copy this sample and create Shell/Bat files for linkage.

| Platform of Manager | File Location |
|----------------------|---|
| Windows | <code>\$ENV_DIR\ESCManager\opt\FJSVssmgr\lib\sample\trapop.bat</code> (\$ENV_DIR means "Environment Directory" specified at the Manager installation.) |
| Solaris OS, Linux | <code>/opt/FJSVssmgr/lib/sample/trapop.sh</code> |

If the Shell/Bat linkage function is not used, there is no need to create these Shell/Bat files.

The following are examples of scripts output in the system log or event log if an event occurs:

For Windows:

```
@echo off
EVENTCREATE /L SYSTEM /ID 999 /SO StorageCruiser /T ERROR /D "%4 %5 %3 %2 %~1"
```

For Solaris OS or Linux:

```
#!/bin/sh
logger -- "$4 StorageCruiser $5 $3 $2 $1"
```

Note

- The IP address of a target device is included in the event message output in the system log or event log.
- Perform event output into in the system log or event log in a Manager environment that does not coexist with a server node agent. In the Manager and server node agent coexisting environment, a message may repeatedly be output.

External Script Linkage

Any external script other than trapop.sh/trapop.bat of Shell/Bat linkage can be executed. Up to two scripts can be defined in each SNMP Trap XML definition file. Arguments for calling such scripts are common to those for Shell/Bat linkage.

Refer to "[A.5 SNMP Trap XML Definition File](#)" for information about the methods for defining.

Note

- External script linkages must be defined in the SNMP Trap XML definition file. Therefore, they are not available on devices where XML definition files are not provided.
- For shell scripts or batch files in Shell/Bat linkages or external script linkages, do not output processing results and processing progress on the screen (for example, do not perform such a process as displaying a message with the echo command). Be sure to describe "@echo off" at the head under Windows.

E-mail Notification

A created event is notified by E-mail in the following format:

```
Subject: ETERNUS SF Event Mail
From: $1
To: $2

Severity: $3
Date: $4
Device IP: $5
Device Name: $6
Message: $7
```

\$1: Indicate E-mail address from where the notification is sent (You need to set it in advance.).

\$2: Indicates E-mail address where the notification is sent (You need to set it in advance.).

\$3: Indicates the fault level (Information, Warning, Error)

\$4: Indicates time and date when the event occurred.

\$5: Indicates IP address for the target device

\$6: Indicates a name of the target device

\$7: Indicates the fault detail

All Warning and Error events will be notified. For Information events, transition of the Thin Provisioning Pool using rate and reduction of Thin Provisioning Pool's capacity are notified. If you want to be notified other Information events, refer to "[A.5 SNMP Trap XML Definition File](#)".

Users can customize the displaying of events and descriptions of linkage for individual SNMP Traps. Refer to "[A.5 SNMP Trap XML Definition File](#)" for details.

Point

To perform Systemwalker Centric Manager linkage, Shell linkage, or external script linkage, either register the IP address and host name information for each device in the DNS server that is referenced by the Management Server, or define them in the /etc/hosts file on the Management Server so that the names of the devices registered in this software can be resolved.

6.4 Thin Provisioning Management

This product can manage storage capacity virtualization operations that use the Thin Provisioning function of the ETERNUS Disk storage system. The functions below are provided.

Threshold Monitoring

This function monitors the threshold values for the Thin Provisioning Pool capacity used. It can also change the threshold values.

Capacity Management

This function displays the changes in capacity used for the Thin Provisioning Pool graphically.

6.4.1 Threshold Monitoring

This function monitors the threshold values for the Thin Provisioning Pool capacity used.

Threshold Values and Threshold Monitoring Status

The values of the "Caution threshold value" and the "Warning threshold value" set for each Thin Provisioning Pool and the Threshold monitoring status are displayed. The "Caution threshold value" and the "Warning threshold value" are prepared at the disk storage system, and are the threshold values for Thin Provisioning Pool capacity used.

Threshold Value Settings

The initial values for the "Caution threshold value" and the "Warning threshold value" are set by the disk storage system when a Thin Provisioning Pool is created. If required, change the settings for the capacity threshold values.

Procedure for Setting Threshold Values

Set the threshold values by using the Web Console.

Action to Take When Threshold Values Are Exceeded

If threshold values are exceeded, then follow the procedures below:

- Detection of status change

When a threshold value is exceeded, the product displays an SNMP Trap in the event log, which notifies the change in Thin Provisioning Pool status at the disk storage system.

- Refreshing

After checking the displayed event, perform the **Reload Conf.** operation on the applicable storage system.

- Checking the status of the Thin Provisioning Pool

Start the Thin Provisioning Pool monitor window and check the Thin Provisioning Pool status. Extend disks or take other action in accordance with the exceeded threshold values.

See

If the SNMP Trap that notifies of changes in the Thin Provisioning Pool status is not received due to packet loss or other reason, then the product detects the change by polling the Thin Provisioning Pool information of the disk storage system. Since the polling interval is one hour, the time from status change to detection is within one hour. The polling intervals can be customized. Refer to "[A.8 Polling Service Setting File](#)" for details.

Information

Even if capacity reaches "Caution threshold value" which is set for each LogicalVolume, SNMP Trap will not be sent. "Caution threshold value" for LogicalVolume is a threshold value for unallocated capacity of LogicalVolume which is at the disk storage system.

6.4.2 Capacity Management

This function displays the Thin Provisioning Pool Capacity and its changes in the capacity used graphically to grasp the changes in the capacity used for the Thin Provisioning Pool.

This enables users to grasp the period to expand the size of the physical disk for the Thin Provisioning Pool, or to review the threshold setting according to the situation.

Information

The information of the Thin Provisioning Capacity and its capacity used is displaying in graph. The information is obtained everyday at 1:00:00.

You can change the time to obtain the information by using a polling service setting file. Refer to "[A.8 Polling Service Setting File](#)" for details.

6.4.2.1 Capacity Graph Window Types

It is possible to display the following graph.

One-month Graph window

The line graph displays data for the past 31 days from the present day.
The plot points are displayed on a daily basis.

One-year Graph window, One-decade Graph window

The line graph displays data for the past a year or a decade from the present day.
The plot points are displayed on a monthly basis.

6.5 Automated Storage Tiering Management

In this product, the Automated Storage Tiering function of the ETERNUS Disk storage system can be used by registering an optional license (ETERNUS SF Storage Cruiser Optimization Option). The Flexible Tier Volume (FTV) uses the Automated Storage Tiering function. However, FTV can be created and used without an optional license, by using the one layer Tier pool function explains in this section. If you register the optional license to use the Automated Storage Tiering in the future, using FTV according to the instruction in this section reduces the work procedure.

Until the option license is registered, FTV is available as a volume that has the Thin Provisioning function.

See

Refer to the *ETERNUS SF Storage Cruiser Operation Guide for Optimization Function* for more information on the Automated Storage Tiering function.

Point

Operate one layer architecture explains in this section with the same Management Server. It does not occasionally operate correctly when operating it with two or more Management Servers.

Enable One Layer Operation

Enable the one layer operation (status of Automated Storage Tiering).

Refer to "Enable/Disable Automated Storage Tiering" in the *ETERNUS SF Web Console Guide* to enable it.

Note

To disable the one layer operation, it is required to delete all Tier pools.

Configure Tier Pool (One Layer)

Create a one layer Tier pool. For the created Tier pool, the following operations are available:

- Change Warning/Caution Threshold of Pool
- Change sub-pool name
- Expand sub-pool capacity
- Delete Tier pool

Point

When using a one layer Tier pool, the ETERNUS SF Storage Cruiser Optimization Option license is not required.

Capacity Management

Changes in capacity and used capacity of a created one layer Tier pool are displayed in a graph.

Configure FTV

Create an FTV in an existing one layer Tier pool. The created FTV can be deleted/changed/formatted.

6.5.1 Configure One Layer Tier Pool

A one layer Tier pool is registered as a FTRP in a storage device.

Creating a Tier pool from the Web Console creates both FTRP and FTSP in the storage device. Moreover, it is also made possible to create an FTV in the storage device from the Web Console.

Specify Assigned CM

An Assigned CM can be specified when performing the following operations.

- When creating a one layer Tier pool
- When expanding the capacity of the sub-pool

It is possible to specify more than one Assigned CM, and by specifying an Assigned CM in relation to the Tier pool, it is possible to specify an Assigned CM of the entire Tier pool.

When multiple Assigned CMs are specified to the Tier pool, the Assigned CM is decided from the specified Assigned CMs using the round-robin method.

When creating a sub-pool in the Tier pool, it is possible to specify an Assigned CM of the sub-pool from the multiple Assigned CMs specified to the Tier pool.

When expanding the capacity of the sub-pool, take into account the Assigned CMs that have already been assigned to each sub-pool that has already been created, and assign an Assigned CM using the round-robin method. It is also possible to make a specification from the Assigned CM which is displayed in the Assigned CM list.

When a specification of an Assigned CM has been omitted, this will automatically be assigned according to the implementation of the storage device.

Table 6.2 CM Allocation Logic During New Creation in Storage Device Having 2 CMs

| Specified Tier Pool | Sub-Pool Specification | Assigned CM to Be Set | Description |
|---------------------|------------------------|-----------------------|---|
| CM#0 | - | CM#0 | Configure CM#0 according to specification of pool |

| Specified Tier Pool | Sub-Pool Specification | Assigned CM to Be Set | Description |
|---------------------|------------------------|-----------------------|---|
| CM#0, CM#1 | - | CM#0 | Configure CM#0 in round-robin method based on specified Tier pool |
| CM#0, CM#1 | CM#0 | CM#0 | Configure CM#0 according to specification of sub-pool |
| CM#0, CM#1 | CM#1 | CM#1 | Configure CM#1 according to specification of sub-pool |

Table 6.3 CM Allocation Logic During Capacity Expansion in Storage Device Having 2 CMs

| Specified Tier Pool | Set Assigned CM | Assigned CM Which Are Newly Assigned | Description |
|---------------------|-----------------|--------------------------------------|---|
| CM#0 | CM#0 | CM#0 | Configure CM#0 according to specification of pool |
| CM#0, CM#1 | CM#0 | CM#1 | Configure CM#1 that is not assigned |
| CM#0, CM#1 | CM#1 | CM#0 | Configure CM#0 that is not assigned |

Disk Auto-Selection

The disk can be automatically selected when performing the following operations.

- When creating a one layer Tier pool
- When expanding the capacity of the sub-pool

Specify the necessary physical capacity when selecting automatically. The disk can also be selected manually.

6.5.1.1 Create One Layer Tier Pool

Create a one layer Tier pool. Refer to "Create One Layer Tier Pool" in *the ETERNUS SF Web Console Guide* for information on how to create it.

6.5.1.2 Change One Layer Tier Pool

To change the operation of one layer Tier pool, change the definition of the Tier pool.

Changeable items are as shown in "[Table 6.4 Change One Layer Tier Pool](#)".

Table 6.4 Change One Layer Tier Pool

| Item | Meaning |
|---------------------------|--|
| Warning Threshold of Pool | This is the threshold (%) of the usage rate of the Tier pool in order to monitor the available capacity of the Tier pool. It is necessary to specify a value that is greater than Caution Threshold of Pool . When this threshold is exceeded, a warning will be notified by the SNMP Trap. |
| Caution Threshold of Pool | This is the threshold (%) of the usage rate of the Tier pool in order to monitor the available capacity of the Tier pool. It is necessary to specify a value that is smaller than Warning Threshold of Pool . When this threshold is exceeded, a caution will be notified by the SNMP Trap. It is also possible to not configure this item. |
| FTSP name | This is a name of the sub-pool. It is necessary that this is a name that will be unique in the storage device. |

Refer to "Display Tier Pool" in *the ETERNUS SF Web Console Guide* for information on how to display the current detailed information of a Tier pool.

Refer to "Change Tier Pool" in *the ETERNUS SF Web Console Guide* for information on how to change the Tier pool.

Point

- It is not possible to change the definition of multiple Tier pools at once. When changing the definition of multiple Tier pools, make changes to the each Tier pool at a time.
- The definition of a Tier pool in which Automated Storage Tiering has already been started cannot be changed.

6.5.1.3 Delete One Layer Tier Pool

Before operating the deletion, display the detailed information of the one layer Tier pool that you are about to delete and confirm that deleting this will not be a problem. Refer to "Display Tier Pool" in the *ETERNUS SF Web Console Guide* for information on how to display the detailed information of a Tier pool.

Refer to "Delete Tier Pool" in the *ETERNUS SF Web Console Guide* for information on how to delete a Tier pool.

Point

- Multiple Tier pools can be deleted at once.
- The following Tier pools cannot be deleted.
 - Tier pools on which any FTV is present
 - Tier pools that have Virtual Volumes
 - Tier pools in which Automated Storage Tiering has already been started
 - Tier pools that have configured VWOL datastores
 - Tier pools that have configured Clone backup VWOL datastores

6.5.1.4 Expand Sub-Pool Capacity in One Layer Tier Pool

It is possible to expand the capacity of the sub-pools which configure a one layer Tier pool. Refer to "Expand Capacity of SubPool in Tier Pool" in the *ETERNUS SF Web Console Guide* for information on how to expand the capacity of a sub-pool.

Note

- Expanding the capacity of the sub-pool leads to deviation of data in the sub-pool and differences in access performance may occur. Execute Tier pool balancing in order to resolve data deviation. Also execute the Tier pool balancing when expanding the capacity of the sub-pool. Refer to "Expand Capacity of Sub-Pool in Tier Pool" in the *ETERNUS SF Web Console Guide* for the setting method.
- Tier pool balancing can be started after expanding the capacity of the sub-pool. Refer to "Start/Stop Tier Pool Balancing" in the *ETERNUS SF Web Console Guide* for the method of starting.

See

Refer to "6.5.1.5 Balancing of One Layer Tier Pool" for details of one Tier pool balancing.

6.5.1.5 Balancing of One Layer Tier Pool

Tier pool balancing is a function that relocates the physically allocated areas for RAID groups within each sub-pool that makes up a Tier pool so that the usage capacity of each RAID Group becomes even balanced. Therefore, I/O access to the FTV is almost evenly distributed to RAID groups within the FTSP.

Perform a Tier pool balancing when you want to equalize the volumes used by the RAID groups within the FTSP. Tier pool balancing can be performed regardless of the balancing level. Normally, Tier pool balancing is performed to change the Tier pool balancing level from "Middle" or "Low" to "High".

The balancing level can be confirmed from **Balancing:Level** that is displayed in the Tier pool overview on the Automated Storage Tiering of the Web Console.

The Tier pool balancing processing can be stopped. The Tier pool balancing can be started/stopped for only one Tier pool within the device.



See

Refer to "Start/Stop Tier Pool Balancing" in the *ETERNUS SF Web Console Guide* for information on how to start/stop Tier pool balancing.

To perform a Tier pool balancing, the target one layer Tier pool must satisfy all of the following requirements:

- **Pool Status** of the target Tier pool is "Available", "Partially Ready", or "Exposed".
- The Tier pool balancing process for the target Tier pool is not running.
- **Balancing:Status** of the target Tier pool is "Stop".

To stop the Tier pool balancing process, target one layer Tier pool must satisfy the following requirement:

- **Balancing:Status** of the target Tier pool is "Active" or "Error".



Point

- Even when the business I/Os are occurring on the one layer Tier pool, a Tier pool balancing can be performed on the one layer Tier pool.
- The one layer Tier pool balancing level, sub-pool balancing level and balancing progress status can be confirmed with the Web Console. Refer to "Confirmation of Configuration Details of Tier Pool" in the *ETERNUS SF Storage Cruiser Operation Guide for Optimization Function* for details.



Note

- Tier pool balancing prioritizes FTVs with a low balancing level within the Tier pool and a maximum of 32 FTVs can be balanced at a time. For this reason, if there are many FTVs, there may be times when the balancing level does not become "High" even if a Tier pool balancing is performed. To make the balancing level "High", reperform a Tier pool balancing.
- If the balancing status is "Error", stop the Tier pool balancing process for that one layer Tier pool.
- Even if a Tier pool balancing is performed, the sub-pool that was physically allocated with the FTV is not changed.
- Tier pool balancing cannot be performed if any of the following conditions are satisfied:
 - **Operating Status** of the target Tier pool is "Start".
 - An FTV does not exist in the target Tier pool.
 - A Tier pool that is performing a Tier pool balancing exists within the storage device.
 - The maximum number of volumes is registered on storage device.
 - The number of sessions for a Thin Provisioning Volume balancing and RAID Migration is a combined 32 processes executing at the same time in the storage device.
 - The migration capacity for a Thin Provisioning Volume balancing and RAID Migration is a combined 128TB process executing at the same time in the storage device.
 - A RAID group diagnosis is being executed on the storage device.
 - A disk diagnosis is being executed on the storage device.

- The capacity is being optimized for all FTVs to be balanced that exist on the target Tier pool.
- ODX is being executed for all FTVs to be balanced that exist on the target Tier pool.
- The Tier pool balancing process cannot be stopped for the following cases:
 - The Tier pool performing the Tier pool balancing does not exist.
 - The Tier pool stopping the Tier pool balancing due to an error does not exist.
 - The Tier pool balancing process for the target Tier pool is completed.
- When creating, deleting, or configuring the FTV, the balancing level is not updated. Execute a status update of Automated Storage Tiering to update the balancing level.
- FTVs that satisfy any of the following conditions are not targets for the balancing process.
 - FTVs with a total capacity of 20GB or less
 - FTVs with a used capacity of 10GB or less

6.5.2 Capacity Management of One Layer Tier Pool

Displaying the changes in total capacity and used capacity of a one layer Tier pool in a graph can understand changes in one layer Tier pool used capacity. This helps you understand the time of increasing physical disks in the one layer Tier pool and review easily the settings of thresholds according to the usage status.

For the method to display capacity graph of a one layer Tier pool, refer to "Display Capacity Graph of Tier Pool" in the *ETERNUS SF Web Console Guide*.

Information

The information for total capacity and used capacity of a one layer Tier pool displayed in a graph is collected at 01:30:00 every morning. The collecting time is changeable in the polling service setting file. Refer to "[A.8 Polling Service Setting File](#)" for details.

6.5.2.1 Type of Capacity Graph

The following graphs are displayed:

- One-month graph
The data back to one month before the present time (for 31 days) is displayed in a line graph. Plot points are displayed by the day.
- One-year graph, Ten-year graph
The data back to one year or ten years before the present time is displayed in a line graph. Plot points are displayed by the month.

6.5.3 Configure FTV

Only FTVs can be created in a one layer Tier pool.

Configuration of FTV is performed with the Web Console. This cannot be performed with the ETERNUS Web GUI.

Note

Implement the changing / deletion / formatting of an FTV after updating the administration information of the FTV.

In order to update the administration information of an FTV, in relation to the ETERNUS Disk storage system of which the IP address thereof has been changed, perform the procedures listed under "Reload ETERNUS Disk Storage System Configuration Information" in the *ETERNUS SF Web Console Guide*.

6.5.3.1 Create FTV

Create an FTV.

Refer to "Create FTV" in the *ETERNUS SF Web Console Guide* for information on how to create an FTV.

6.5.3.2 Change FTV

The definition of an FTV is changeable.

Refer to "Change FTV" in the *ETERNUS SF Web Console Guide* for information on how to change it.

Point

- The current details of the definition of an FTV can be confirmed by following the procedures listed under "Display FTV" in the *ETERNUS SF Web Console Guide*.
- It is not possible to change the definition of multiple FTVs at once.

6.5.3.3 Format FTV

Refer to "Format FTV" in the *ETERNUS SF Web Console Guide* for information on how to format an FTV.

Furthermore, as an FTV is automatically formatted when being created, it is unnecessary to format a newly created FTV.

Point

- It is not possible to format multiple FTVs at once.
- Virtual Volumes cannot be formatted.

6.5.3.4 Delete FTV

Before operating the deletion, display the detailed information of the FTV that you are about to delete and confirm that deleting this will not be a problem. Refer to "Display FTV" in the *ETERNUS SF Web Console Guide* for information on how to display the detailed information of an FTV.

Refer to "Delete FTV" in the *ETERNUS SF Web Console Guide* for information on how to perform the deletion.

Point

- Multiple FTVs can be deleted at once.
- An FTV that is currently assigned to a server cannot be deleted.
- Virtual Volumes cannot be deleted.
As an exception, Virtual Volumes with an "Unknown" WVOL type can be deleted. When deleting multiple Virtual Volumes, each one must be deleted individually since a batch delete is not possible.

6.5.4 Measures to Be Taken When Tier Pool Configuration Has Been Changed with Managed Devices

When the configuration of the Tier pool to be managed is changed, there is a possibility that a difference will occur between the Tier pool information present on the ETERNUS SF Manager and the Tier pool information of the device. When status update of Automated Storage Tiering is performed while in a state where there is a difference, the esast3101 message will be output to the operation log.

When the esast3101 message has been output to the operation log, perform the following actions.

1. Execute the "esfast tierpool delete" command and delete only the information of the Tier pool subject to the esast3101 message.

```
> esfast tierpool delete -name name -mode file -s
```

For *name*, specify the name of the Tier pool subject to the esast3101 message.

2. In the Web Console, click **Automated Storage Tiering** > **Overview**, and click **Status Update** under **Automated Storage Tiering** on the Action pane.

Refer to "Command References" in the *ETERNUS SF Storage Cruiser Operation Guide for Optimization Function* for information on the "esfast tierpool delete" command.

6.5.5 Change to Multiple Layer Tier Pool

Registering the ETERNUS SF Storage Cruiser Optimization Option license allows changing a one layer Tier pool to a two layer or three layer Tier pool, and the Automated Storage Tiering can be operated.

The procedure for that is as follows:

1. Register the ETERNUS SF Storage Cruiser Optimization Option license.
Refer to "Register License" in the *ETERNUS SF Web Console Guide* for the registration procedure.
2. Change the layer number of the Tier pool, and operate the Automated Storage Tiering.
Refer to "Change Number of Layers of Tier Pool" in the *ETERNUS SF Storage Cruiser Operation Guide for Optimization Function* for information on how to change the layer number.



See

There is an upper limit to the number and capacity of Tier pools that can be managed by Automated Storage Tiering. Refer to "Upper Limit of Automated Storage Tiering" in the *ETERNUS SF Installation and Setup Guide* for details.

6.6 NAS Management

This product will manage ETERNUS Disk storage system models that are multi-protocol storage with a block access interface (SAN) and a file access interface (NAS). With the Web Console, various features for operation of the ETERNUS Disk storage system NAS file system can be utilized.

This section explains the following items necessary in order to perform NAS operation of the ETERNUS Disk storage system with this product.

- [Overview of Functions](#)
- [Required Setup Configuration](#)
- [Installation Steps](#)
- [Operation Method](#)



Note

- This function cannot be used for ETERNUS DX200F.
- Refer to the ETERNUS Disk storage system manuals for notes of NAS operation.

6.6.1 Overview of Functions


6.6.1.1 About NAS Management

NAS management of the ETERNUS Disk storage system will be explained.

6.6.1.1.1 Basic System Configuration

Basic system configurations required when operating NAS of the ETERNUS Disk storage system will be explained.

Figure 6.1 Basic System Configuration Diagram

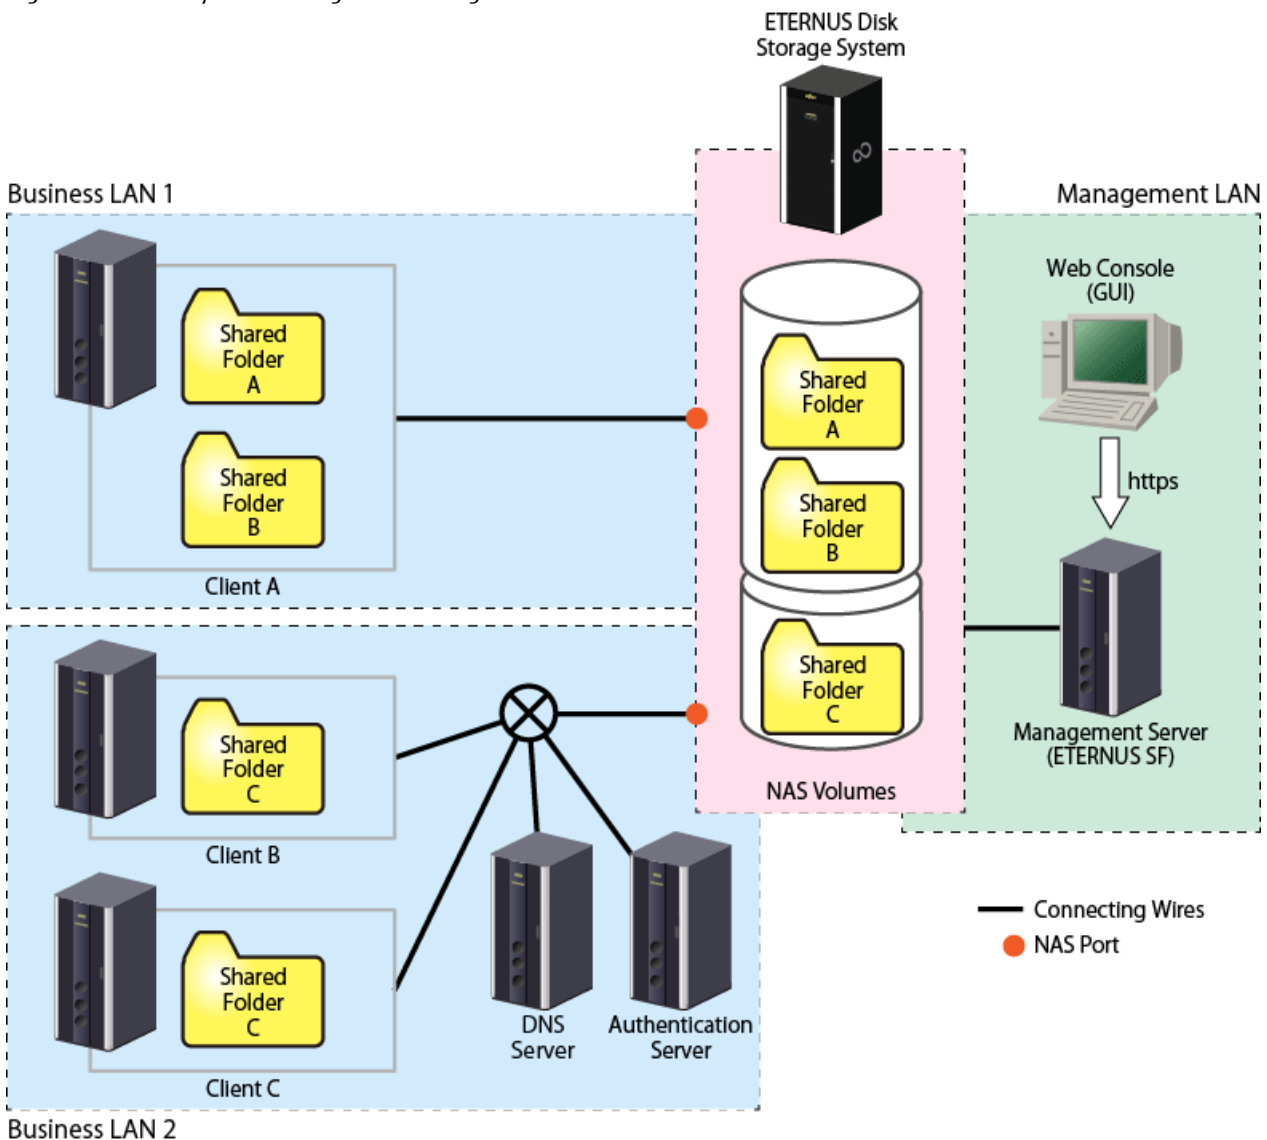

Configuration of NAS is performed from the Management Server.

Connect the Management Server and the ETERNUS Disk storage system with a management LAN. Access to the Management Server is performed from either the Management Server or the Web Console of a terminal within a network capable of HTTPS communication with the Management Server.

The NAS feature of the ETERNUS Disk storage system is accessed by a client through one or more business LANs. It is recommended that a business LAN include a DNS Server for name resolution and an Authentication Server for authenticating NAS accesses into the NAS file system.

Point

When an authentication system is not used for the NAS file system, it is unnecessary to setup an authentication server on the system. If an authentication system is not implemented then the NAS file system can be accessed from any clients connected to the business LAN. It is strongly recommended that an authentication server is properly configured and implemented.

6.6.1.1.2 Support Features

In order to perform NAS operation of the ETERNUS Disk storage system, this product is provided with the following features:

- [Easy Installation of NAS File System Using Wizard](#)
- [Display of Configuration Information and Fault Monitoring](#)
- [Block Level Capacity Monitoring](#)
- [Performance Management](#)
- [Backup/Restoration of NAS Volume](#)
- [Automatic Collection of NAS Volume Snapshot](#)
- [Quantity Consumed Upper Limit Management and Monitoring by User/Group \(Quota Management\)](#)
- [NAS Environment Antivirus](#)

Easy Installation of NAS File System Using Wizard

The "creating of a shared folder" and the "creating of a NAS interface" which are necessary when installing a NAS file system can be configured easily by using a wizard.

Display of Configuration Information and Fault Monitoring

The configuration information resources being used for ETERNUS Disk Storage system NAS can be confirmed with the Web Console. In addition, when a failure occurs, the details of the failure will be displayed in the event log of the Web Console.

Block Level Capacity Monitoring

Capacity monitoring of NAS file system in ETERNUS Disk storage system is implemented at a level similar to that for block volumes.

Performance Management

This enables performance monitoring of resources with the ETERNUS Disk storage system below.

- NAS volume
- NAS system

Information

- The performance monitoring and threshold monitoring functions cannot be used for NAS port.
- The threshold monitoring function cannot be used for NAS volume and NAS system.

Backup/Restoration of NAS Volume

Backup and restoration of a NAS volume utilizes QuickOPC and a NAS backup volume. The use of the NAS backup volume provides protection against loss or corruption of the active NAS volume. In addition, the NAS backup volume can be accessed Read-Only for file level recovery.

Automatic Collection of NAS Volume Snapshot

This is a function that follows the specified schedule and automatically collects snapshots. The capture of the NAS volume snapshot is achieved using SnapOPC+. The NAS volume snapshot for the specified generation can be stored, and files and folders from the snapshot can be recovered without administrators.

Quantity Consumed Upper Limit Management and Monitoring by User/Group (Quota Management)

This is a function for managing the upper limit of the quantity consumed by user or group. This prevents in advance the depletion of total resources due to large disk volume consumption by certain users or groups.

NAS Environment Antivirus

By registering the antivirus server provided by the antivirus security vendors, checking of access to files under the shared folder, detection of viruses and measures are performed automatically. This prevents data in the NAS environment being infected by viruses/illegal programs.

6.6.1.1.3 Configuration Items of NAS File System

Configure the following with the Web Console in order to perform NAS operation of the ETERNUS Disk storage system.

- [Shared Folder](#)
- [NAS Interface](#)
- [NAS File System Environment](#)

Shared Folder

The shared folder refers to a folder made public on the network as a NAS file system. With this product, by creating a shared folder and setting access controls, it is possible to capture a backup and snapshot.

When creating a shared folder from the Web Console, the following resources are also created simultaneously.

| Resources | Explanation |
|---------------------|--|
| NAS volume | A volume where the shared folder will be created. Multiple shared folders can be configured to a single NAS volume. |
| NAS backup volume | A volume for backup of the NAS volume. When configuring NAS backup is done by a new NAS backup volume, one is created for each NAS volume. Configuring NAS backup volume is optional. |
| NAS snapshot volume | This is a volume for the NAS volume snapshot. When using NAS snapshot, one is created for each generation. Configuring NAS snapshot is optional. |
| NAS system volume | System volumes are used to control NAS volumes. They are created when a new NAS volume is created. It is created in the same Thin Provisioning Pool as NAS volume. |
| Copy group | Copy group used to back up NAS volume. This is created only when a NAS backup volume is configured. |
| Copy pair | A copy pair of a NAS volume and a NAS backup volume. This is created only when a NAS backup volume is configured. |

The shared folder that is created with this product can be accessed using the following protocols. As it is possible to use the following protocols simultaneously, it is possible to access a single shared folder from both UNIX and Windows clients.

- CIFS
This protocol is a developed version of SMB which is used in Windows file sharing.
- NFS
This protocol is a protocol used between UNIX based OSs.

NAS Interface

A NAS interface refers to the definition information of a network interface that manages, over a business LAN, a public IP address for access to the shared folder and information of the port to which this IP address is assigned. When using the VLAN function, it is possible to configure multiple IP addresses for one port.



Information

There is no relation between the shared folder and the NAS interface. It is possible to reference the same shared folder from any NAS interface.

The NAS interface maybe assigned to a single port or 2 ports. The type of connections that can be configured are as follows:

- Active-Active connection

A method where 2 ports are used, and an IP address is configured to each. Both ports are enabled, and it is possible to access the shared folder from either port. In addition, 2 IP addresses can be publicized for clients, and it is possible to distribute the

bandwidth load. In the event that one port is down, as the IP address configuration can be passed on to the other port automatically, operation with the same IP address can be continued even after recovering from the down time.

Information

During the time one port is down, operation is limited to a single port. It is not possible to distribute the bandwidth load across 2 ports.

- Active-Standby connection

A method where 2 ports are used, and a single IP address is configured. Of the 2, only one port will be enabled (Active port), and the other port will be disabled (Standby port). When the Active port is down, the IP address configuration can be passed on to the Standby port which is automatically enabled, making it possible to continue operation with the same IP address even after recovering from the down time.

- Single connection

A method where 1 port is used, and a single IP address is configured. When the port goes down, it will not be possible to access the shared folder.

Information

In order to continue business when a port is down, it is recommended to configure either Active-Active or Active-Standby connection for redundancy.


Further, with the aim of increasing communication speed and becoming more fault-resilient, multiple physical ports can be bundled and handled as one logical port. Further, a NAS interface can be allocated for that logical port (bonding port). The method of determining communication ports of bonding port is to select an operating mode and hash policy.

- Increase Communication Speed

Networks are bundled to increase communication speed.

"Figure 6.2 Increase Communication Speed" is when three 100Mbps networks are bundled to communicate at maximum of 300Mbps.

Figure 6.2 Increase Communication Speed

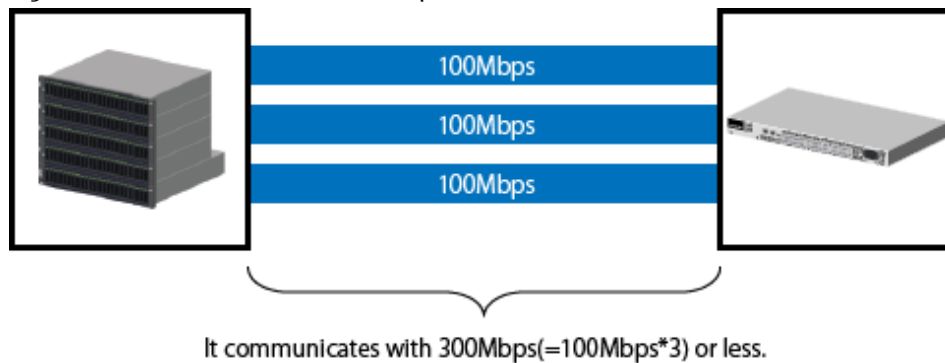


- Improved Fault-Resilience

When a communication fault occurs in any one of the bundled networks, the remaining networks can continue communication.

"Figure 6.3 Improved Fault-Resilience" is when one of 3 networks has a fault so the remaining 2 networks continue at a maximum speed of 200Mbps.

Figure 6.3 Improved Fault-Resilience

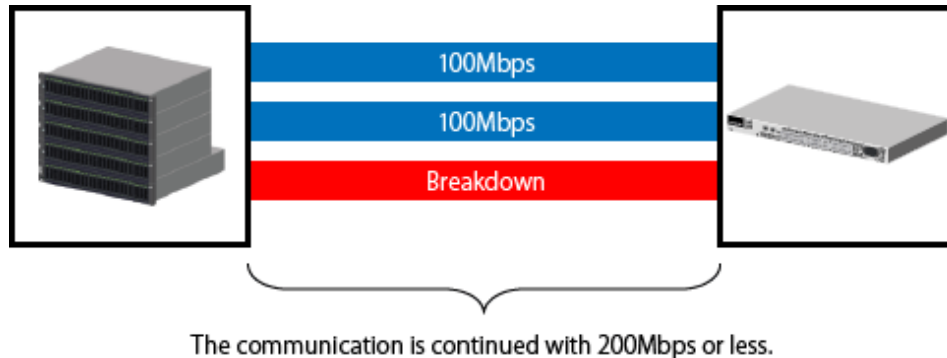

NAS File System Environment

- NAS server name

NAS server name is a unique name set within the ETERNUS Disk storage system.

By registering the NAS server name set within the ETERNUS Disk storage system and the DNS server, it is possible to set the NAS server name and access the CIFS protocol shared folder.

- DNS server

Sets the DNS server to use when operating NAS.

It is possible to set a maximum of 2 DNS Servers for IPv4 and IPv6 respectively.

- Authentication System

With this product, as access to the shared folder is controlled, an authentication system using a domain controller is provided. The domain controller centrally manages the account information of individual clients on the network, and conducts authentication in relation to each of these clients or permits access.

In case an authentication server goes down, it is possible to register a maximum of 3 authentication servers for each authentication method.

The authentication methods supported by this product are as follows:

- Kerberos Authentication Method with Active Directory

Kerberos is a network authentication protocol designed to provide strong authentication for client/server applications. A password received from a client is authenticated, and a ticket is issued. By utilizing the ticket, the client that has been authenticated is able to utilize the network service.

When accessing the shared folder with a CIFS protocol, and when managing access to directories and files, in order to perform authentication and access control using this authentication method, register an Active Directory domain controller.

- Authentication Method using LDAP

LDAP is a protocol for accessing the directory service. With the directory service, it is possible to easily use features such as the search function by centrally managing the account information of network equipment and clients.

When accessing the shared folder with the NFS protocol, and when performing access management to directories and files, in order to perform authentication and access control using this authentication method, register an LDAP server.

6.6.1.2 Backup of NAS Environment

An overview of backup of the NAS environment in the ETERNUS Disk storage system will be explained.




See

Refer to "Backup of NAS Environment" in the *ETERNUS SF AdvancedCopy Manager Operation Guide for Copy Control Module* for information on the backup operation for NAS environment.

6.6.1.2.1 Backup/Restoration of NAS Volume

It is possible to back up the entire NAS volume configured with the Web Console to a NAS backup volume. In addition, it is possible to restore the entire NAS volume from the NAS backup volume.

Figure 6.4 Backup/Restoration of NAS Volume

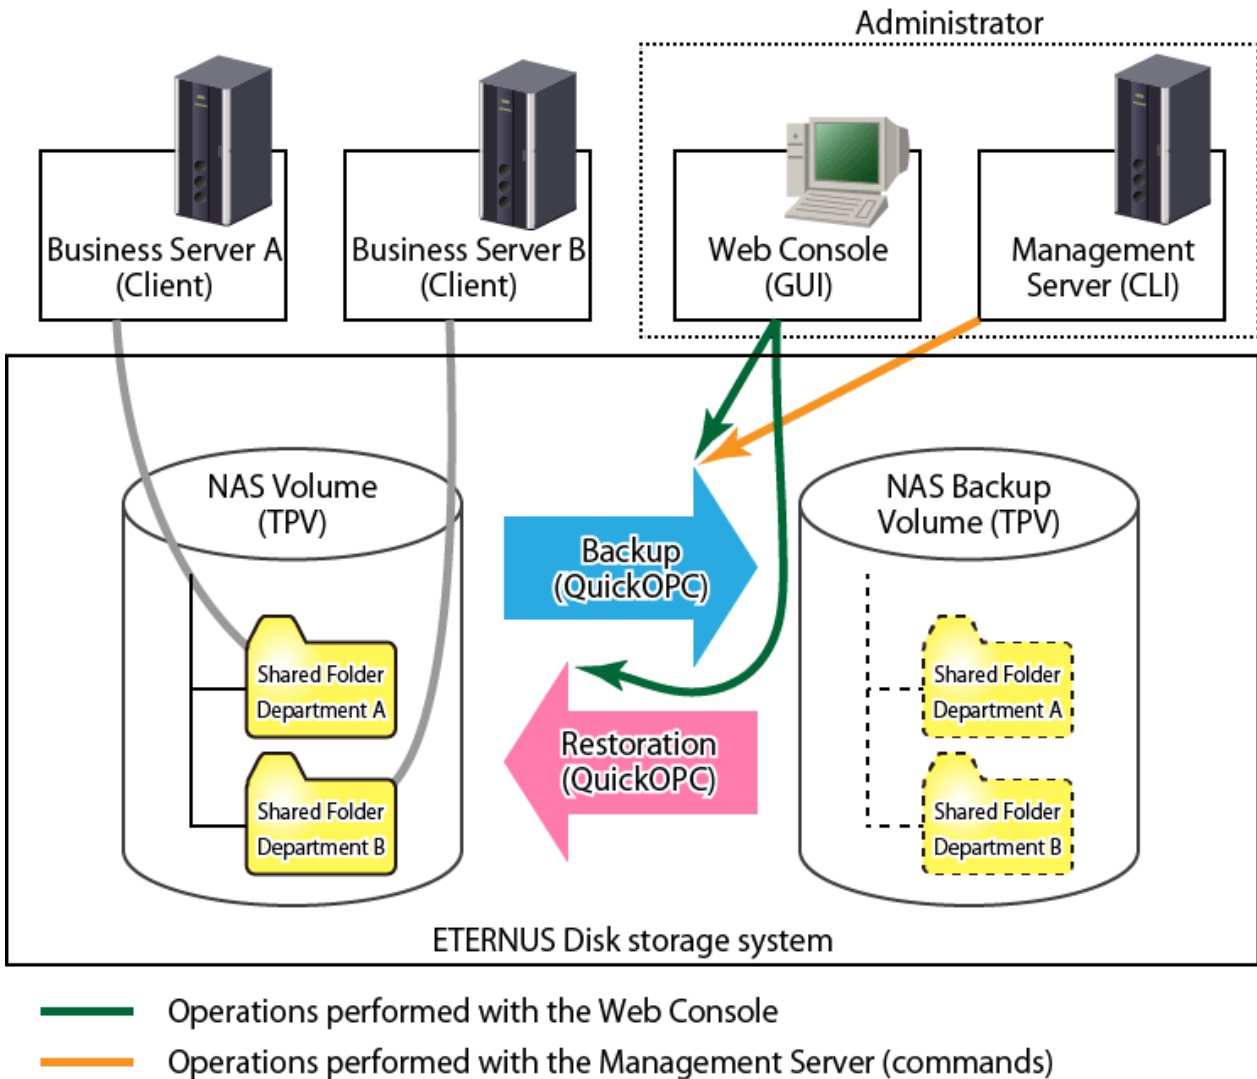


Information

- Backup of the NAS volume can either be executed with the Web Console, or be executed with commands from the Management Server. Restoration of the NAS volume can only be executed with the Web Console.
- When recovering individual files from the NAS backup volume, mount the NAS backup volume and manually copy the files.
- The number of NAS volumes and NAS backup volumes creatable on one ETERNUS Disk storage system varies with the device model and its firmware version. Refer to the ETERNUS Disk storage system manuals for details.

6.6.1.2.2 Mounting/Unmounting NAS Backup Volume

The NAS backup volume that is the backup destination of the NAS volume can be mounted onto the NAS environment as Read-Only. By mounting the NAS backup volume, users can recover files themselves. In addition, a mounted NAS backup volume can be unmounted when recovery has been completed.

Figure 6.5 Mounting/Unmounting the NAS Backup Volume

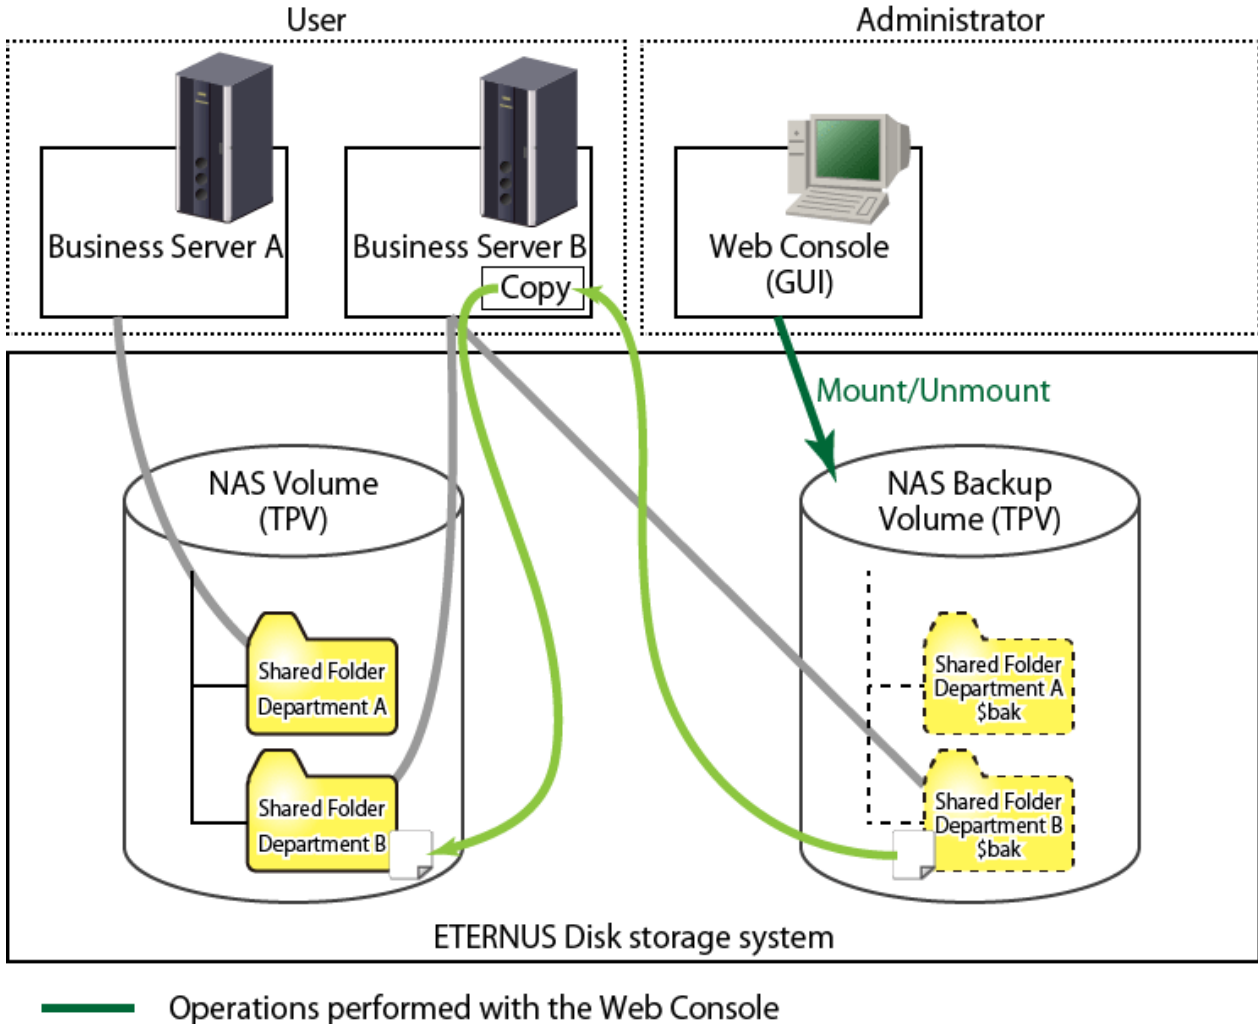

Information

- Mounting and unmounting of the NAS backup volume can be done from the Web Console.
- While the NAS backup volume is mounted, it is not possible to backup or restore the NAS volume.
- The name of the shared folder on the NAS backup volume after being mounted is the name of the shared folder at the time of backup + "\$bak". Furthermore, the name of the shared folder of the NAS backup volume will not be displayed on the Web Console.

6.6.1.3 NAS Environment Snapshot

This section provides an outline of the NAS environment snapshot function for the ETERNUS Disk storage system.

6.6.1.3.1 NAS Snapshot


With the NAS snapshot, the snapshot can be captured regularly at the desired timing and that snapshot can be referenced from the client. The NAS volume snapshot is achieved using SnapOPC+. This is provided for the purposes of NAS volume generation management and to be able to recover files and folders deleted due to operating errors.

The NAS snapshot feature can be used by configuring the snapshot from the Web Console.

The following items are configured.

- Snapshot generation number
Set the number of snapshot generations for the you want to own.
The number of configurable generations differs depending on the device model and firmware. See the manual accompanying the ETERNUS Disk storage system.
- Schedule configuration
Sets the schedule for capturing the snapshots. A snapshot is taken on the day set every week or the hour set every day.

Figure 6.6 Outline of NAS Snapshot

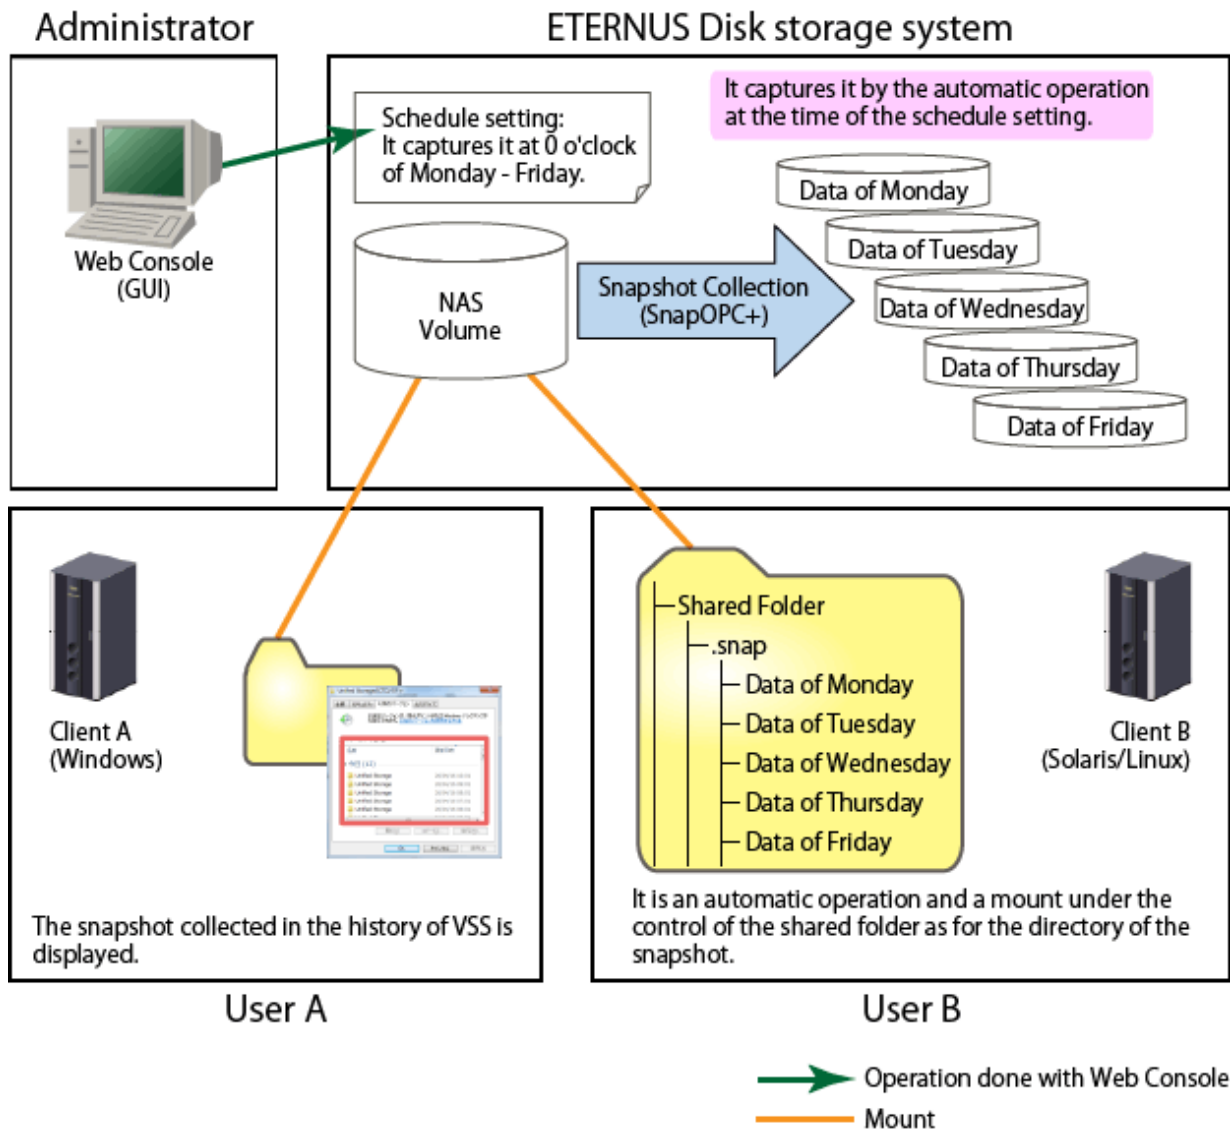

Note

If a snapshot is collected while accessing a volume from an application, a snapshot at a point in time at which half-done data was written to the volume could be created. In this case, the data consistency in the snapshot is not ensured, so that the operation of the file in the snapshot is made impossible or the file content becomes incomplete.


Generally, to collect a snapshot whose data is consistent, the application accessing a volume must be stopped beforehand.

Configure a schedule for snapshot collection and the number of generations in a snapshot so that correct data can be traced back through generations when data inconsistency is found in the snapshot.

6.6.1.3.2 Snapshot Capture Stop/Start

Where the NAS volume is temporarily not updated due to device maintenance period or long break, overwriting of past snapshots can be prevented by stopping the snapshot capture. When restarting the snapshot capture, execute snapshot capture start. Snapshot capture can be restarted carrying on with the snapshot before stopping.

Figure 6.7 Snapshot Capture Stop/Start

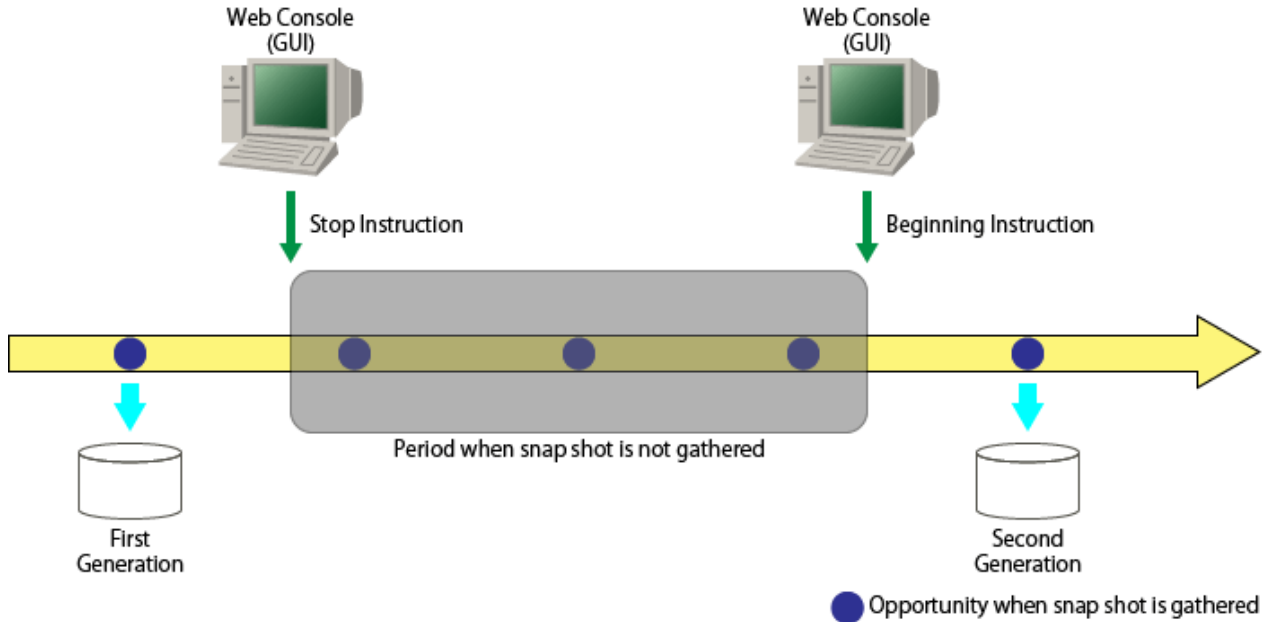

6.6.1.4 About NAS Environment Quota Management

This section provides an outline of NAS environment quota management for the ETERNUS Disk storage system.

6.6.1.4.1 NAS Environment Quota Management

With quota management, the amount of usable resources can be limited. This prevents in advance the depletion of total resources due to certain users wasting disk capacity.


Restrictions on the disk usable volume and number of files for the user who is the owner of the shared folder and groups can be set using the following 2 values.

- Limit value
This is the upper limit value actually used. When updating data that exceeds the limit value, there will be an error for the update.
- Warning value
This is the value for providing pre-notification before reaching the limit value. When updating data that has exceeded the warning value, an SNMP Trap and event shall be notified to the operation management server.

Point

- Even if a disk is used with a limit value exceeded, it may not cause any error. In this case, it is used up to disk use amount limitation value +2GB in the maximum.
- When a NAS volume to which quota is set is backed up, its quota setting information is backed up at the same time. For this reason, when it is restored, its quota setting information backed up is applied.

Figure 6.8 Quota Management Outline

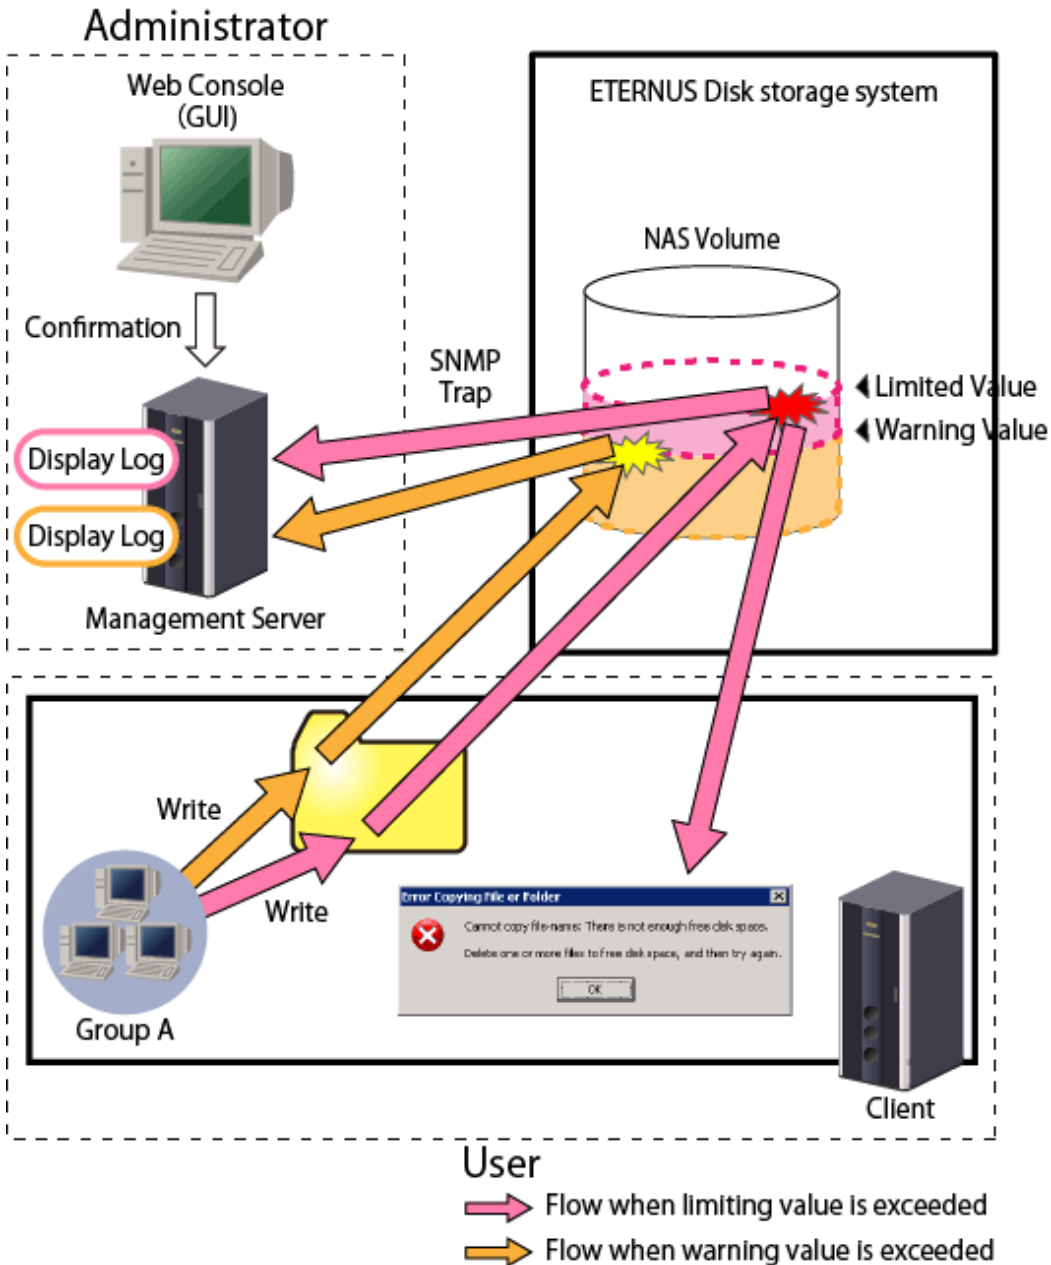

Information

- Sets a quota for the users and groups registered on the authentication server set in "6.6.3.3 NAS File System Environment Settings".
- By using mail notification and Systemwalker Centric Manager linkup feature, you are notified by E-mail when the quota management limit value or warning value are exceeded. Refer to "6.3 Event Display and Linkage" for details.

6.6.1.4.2 Events Notified by Quota Management

With quota management, an SNMP Trap is notified by the operation management server in the following cases.

- Error occurred when data update or file creation was attempted with the limit value reached (Limit value exceeded)
- Warning value exceeded (predicted)
- Returned below warning value

The notified event can be confirmed on the quota management log screen on the Web Console. Logs are stored for 30 days.

 See

Refer to "Display Quota Information" in the *ETERNUS SF Web Console Guide* for the procedure to display the Quota Management Log screen.

 Point

- Events are categorized by type; warning value exceeded, limit value exceeded, warning value removed, and notified every 10 minutes.
- The limit value exceeded event is notified when an error occurred because data update or file creation was attempted with a limit value reached.


6.6.1.5 About Antivirus for NAS Environment

This section provides an outline of the antivirus for the NAS environment on an ETERNUS Disk storage system.

6.6.1.5.1 Antivirus for NAS Environment

The antivirus function is linked to the antivirus server provided by the antivirus security vendor, and prevents data in the NAS environment being infected by viruses/illegal programs.

When the file is accessed from the client, the registered antivirus server checks the accessed file.

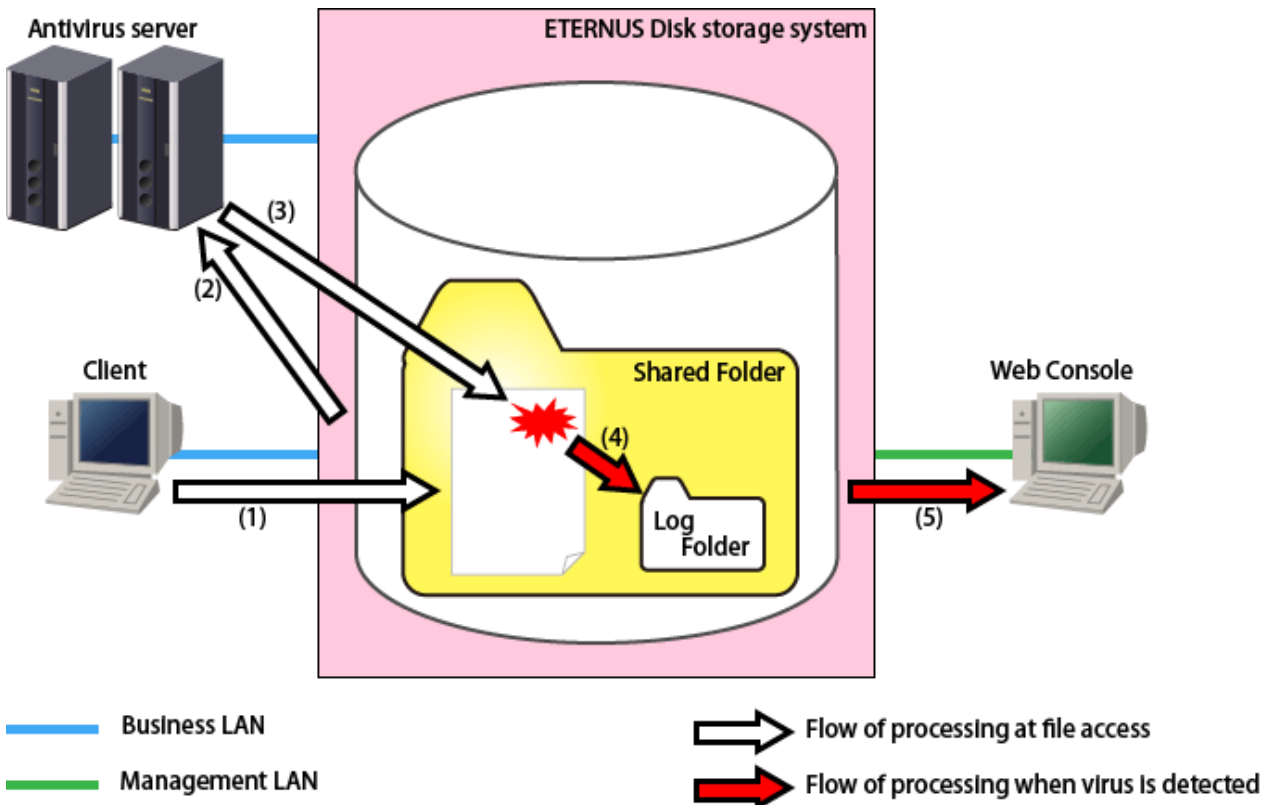

1. The client accesses files in the shared folder on the ETERNUS Disk storage system.
2. The ETERNUS Disk storage system instructs the antivirus server to perform a virus check on the accessed files.
3. The antivirus server checks the accessed files.

4. When it discovers a virus/illegal program, it outputs a detection log to the log folder.
5. When it discovers a virus/illegal program, the results of the detection are notified to the Web Console.

Point

- The antivirus function only applies to shared folders using the CIFS protocol.
- The NAS interface must be configured with the ETERNUS Disk storage system so that two CMs in the ETERNUS Disk storage system can communicate to the antivirus server.
- We recommend establishing multiple antivirus servers. If the ETERNUS Disk storage system cannot communicate with the antivirus server, the client will not be able to access files in the NAS environment.
Refer to the ETERNUS Disk storage system manuals for the number of the antivirus server that can be registered in the ETERNUS Disk storage system.
- Prepare an antivirus server activation code for each ETERNUS Disk storage system.
- The antivirus function is available for shared folders that have writing authority.
The shared folders that have no writing authority are not scanned.
- An IPv6 link local address is not available for the IP address of an antivirus server. When using IPv6, set an IPv6 global address.
When using FQDN, set it so that it is not converted to an IPv6 link local address.

If the antivirus server detects a virus it will deal with it automatically.

Please check the action taken by the antivirus server according to the following procedures:

1. Access the shared folder and check the logs are output to the following folder.

```
\\nasInterfaceIpAddress\sharedFolderName\.evscan\log
```

The log file names are as follows:

- Latest logs

```
viruslog_YYYY_MM.txt
```

YYYY: year, MM: month(1~12)

- Past logs

```
viruslog_YYYY_MM_partN.txt
```

YYYY: year, MM: month(1~12), N: control No.(decimal starting from 1)

See

Refer to the message output to the log for details of the log. Refer to the ETERNUS Disk storage system manuals for the action.

2. Check the action taken by the antivirus server from the content of the log.

If you want to check the detected content in detail, provide the log and relevant file to the vendor for confirmation.

Files quarantined by the antivirus server are in the following folder.

```
\\nasInterfaceIpAddress\sharedFolderName\.evscan\quarantine
```

Point

When the capacity of the log output destination is not sufficient, an SNMP Trap will be sent. When notified, perform the following to secure capacity.

- Extend the NAS volume.

- Delete unnecessary past logs and files in the .evscan\quarantine folder.
- When quota management is set, raise the limit value.

Logs in the .evscan\log folder are stored for 90 days.

6.6.1.5.2 Event Notified by Antivirus

As an antivirus, in the following cases an SNMP Trap will be notified to the Management Server.

- A virus is detected
- Pattern files that exceed 2 days are not updated.
- Scan engine is not up to date
- Pattern files/scan engine have been updated
- Unable to communicate with antivirus server
- Communication recovered with antivirus server
- The activation code expiry date is in the next 30 days.
- The activation code expiry date has expired.

Notified events can be confirmed on the Web Console antivirus log screen. Logs are stored for 90 days.



See

Refer to "Display Antivirus Information" in the *ETERNUS SF Web Console Guide* for the procedure to display the Antivirus Log screen.

6.6.1.6 Operating Environment

The functions of the NAS option of the ETERNUS Disk storage system can be used with the following environments.

Table 6.5 Operating Environment

| Object | Environment |
|------------------------------|--|
| Platform | Platforms on which the ETERNUS SF Manager can be operated. |
| Required licenses (software) | <ul style="list-style-type: none"> - ETERNUS SF Storage Cruiser Basic License (*1,*3) - ETERNUS SF Storage Cruiser Standard License (*1,*3) - ETERNUS SF AdvancedCopy Manager Local Copy License (*2) |
| ETERNUS Disk storage system | ETERNUS DX100 S3/DX200 S3/DX500 S3/DX600 S3 |
| Required options (hardware) | NAS Option |
| Agent | Storage Cruiser's agent is not required. |
| Authentication methods (*4) | [When accessing with the CIFS protocol] Active Directory [When accessing with the NFS protocol] LDAP |
| Antivirus server | Trend Micro Storage Security for FUJITSU Storage ETERNUS DX S3 series |

*1: Required to construct the NAS file system.

*2: Required to back up the NAS volumes.

*3: Required to register either one.

*4: Required when performing access control using an authentication server for the NAS file system. When no authentication server is configured, all access will be permitted.

6.6.2 Required Setup Configuration

Requirements for installing ETERNUS Disk storage system NAS management will be explained.

Table 6.6 Prior Configurations

| Subject of Configuration | Configuration Details |
|-----------------------------|---|
| ETERNUS Disk storage system | <ul style="list-style-type: none">- Application of NAS Option- Preparing ETERNUS for Registration to This Product |
| Authentication server | <ul style="list-style-type: none">- Registration of User/Group- Creating Redundant Authentication Servers |
| DNS server | <ul style="list-style-type: none">- NAS Server Name Registration |
| Antivirus Server | <ul style="list-style-type: none">- Preparing Antivirus Server |
| Management Server | <ul style="list-style-type: none">- Device Registration- License Registration- Creating Thin Provisioning Pool- Configuration of Connection Type of Advanced Copy- Creating RAID Groups- SDP Capacity Expansion- Copy Table Size Settings |

6.6.2.1 ETERNUS Disk Storage System Configuration

ETERNUS Disk storage system configuration will be explained.

The items to be configured are as follows:

- [Application of NAS Option](#)
- [Preparing ETERNUS for Registration to This Product](#)

Application of NAS Option

To apply the ETERNUS Disk storage system NAS option, refer to the ETERNUS Disk storage system manuals.

Skip this work if the NAS option has already been applied to the target ETERNUS Disk storage system.

Preparing ETERNUS for Registration to This Product

Prepare the ETERNUS Disk storage system to be registered to this product. Refer to "[4.3.1.1 Setting](#)" for details of the configuration.

Skip this work if the target ETERNUS Disk storage system has already been registered to this product.

6.6.2.2 Authentication Server Setup

Required configuration for the authentication server will be explained.

The items to be configured are as follows:

- [Registration of User/Group](#)
- [Creating Redundant Authentication Servers](#)

Registration of User/Group

On the domain controller or LDAP server, register the users and groups that have access to the shared folders. Refer to the LDAP or domain controller manuals for information on how to perform the registration.

Note

When using both protocols of CIFS and NFS, ensure uniqueness of user/group information between Active Directory authentication server and LDAP authentication server.

Mapping Windows security identifier (SID) and UNIX server's user ID (UID)/group ID (GID) can secure the uniqueness of user/group information.

When mapping user/group information, set the UID/GID of an LDAP authentication server based on the user ID/group ID of an Active Directory authentication server.

When registering a user/group on the LDAP authentication server, register as UID/GID the number that has 10,000,000 added to the end part of SID of the user/group registered on the Active Directory authentication server (e.g.: when the value of SID is S-1-5-21-xxxx-yyyy-zzzz-nnnn, nnnn is the end part).

Creating Redundant Authentication Servers

In this product, redundant authentication servers can be registered up to 3 units. Refer to the LDAP or domain controller manuals for information on how to create redundant configuration.

6.6.2.3 Prior Configuration of DNS Server

This section describes the pre-configuration of the DNS server.

The items to be configured are as follows:

- [NAS Server Name Registration](#)

NAS Server Name Registration

When the NAS server name is specified when accessing the shared folder, the NAS server can be registered on the DNS server using any name set uniquely in the ETERNUS Disk storage system.

Refer to the manual accompanying the DNS server for the registration method.

6.6.2.4 Pre-configuration of Antivirus Server

This section describes the pre-configuration of the antivirus server.

The items to be configured are as follows:

- [Preparing Antivirus Server](#)

Preparing Antivirus Server

Prepare the antivirus server. Refer to the manuals of the respective vendors for details.

| Vendor Name | Prior Configuration |
|-------------------|--|
| Trend Micro, Inc. | Install Trend Micro Storage Security for FUJITSU Storage ETERNUS DX S3 series. Refer to the Trend Micro Storage Security for FUJITSU Storage ETERNUS DX S3 series manuals for details. |

6.6.2.5 Prior Configuration of Operation Management Server

This section explains the prior setting of this product when installed in operation management servers.

The details to be configured are as follows:

- [Device Registration](#)
- [License Registration](#)
- [Creating Thin Provisioning Pool](#)
- [Configuration of Connection Type of Advanced Copy](#)
- [Creating RAID Groups](#)
- [SDP Capacity Expansion](#)

- [Copy Table Size Settings](#)

Device Registration

Register the ETERNUS Disk storage system to be managed with this product. Refer to "[5.2 Registering Device](#)" for information on how to register the device.

When a target ETERNUS Disk storage system has already been registered to this product, and when application of the addition of the NAS option has been performed with "[6.6.2.1 ETERNUS Disk Storage System Configuration](#)", perform the **Reload Conf.** operation for the ETERNUS Disk storage system.

 **Note**

When using the snapshot function or quota management function, enable SNMP Trap Setup when you register devices. If SNMP Trap Setup is not enabled, snapshot collection result and an alarm output when a quota threshold is exceeded are not notified.

 **See**

Refer to "Reload ETERNUS Disk Storage System Configuration Information" in the *ETERNUS SF Web Console Guide* for information on how to perform the **Reload Conf.** operation.

License Registration

Register the ETERNUS Disk storage system NAS license, and any other required license that is not already registered.

Refer to required licenses (software) of the "[6.6.1.6 Operating Environment](#)" for required and optional licenses.

Skip this work if the license of the object has already been registered in this product.

 **See**

Refer to "Register License" in the *ETERNUS SF Web Console Guide* for information on how to register the license.

Creating Thin Provisioning Pool

A Thin Provisioning Pool in which the NAS volume is created will be created.

Skip this work if the Thin Provisioning Pool for the NAS volume has already been made.

 **See**

Refer to "Create Thin Provisioning Pool" in the *ETERNUS SF Web Console Guide* for information on how to create a Thin Provisioning Pool.

 **Information**

For increased reliability, it is recommended to create the primary NAS volume and the backup NAS volume in separate Thin Provisioning Pools. When performing NAS volume backup, create two Thin Provisioning Pools; one for the primary NAS volume and one for the backup NAS volume.

Configuration of Connection Type of Advanced Copy

Configure the access connection type for Advanced Copy in order to define the NAS volume backup.

Skip this work if the backup is not being used for NAS environment or if the connection has been configured already.



See

Refer to "Configure Connection Type for ETERNUS Disk Storage System" in the *ETERNUS SF Web Console Guide* for information on how to perform the configuration.



Information

For the configuration of the connection type, select "Access through volumes" or "Access through network".

Creating RAID Groups

When using the NAS snapshot, a NAS snapshot volume is created on the RAID group. The capacity is calculated according to the following formula, and is required as free space within the RAID group.

```
RAID group free space = Total capacity of NAS volume for NAS snapshot * snapshot generation numbers * 0.001
```

Skip this work if not creating a NAS snapshot or if a NAS snapshot volume on the RAID group has already been created.



Note

As shown below, if the RAID group where the NAS snapshot volume is created is shared, it may not be possible to set the maximum number of snapshot generations.

- Where creating SDPV with "SDP Capacity Expansion"
- Where creating a NAS snapshot volume for other NAS volumes
- When creating volumes for SAN



See

For the RAID group creation procedure, Refer to "Create RAID Group" in the *ETERNUS SF Web Console Guide*.

SDP Capacity Expansion

SDP capacity may need to be expanded in order to use the NAS snapshot.

Skip this work when not using NAS snapshot.

The physical capacity allocated for the snapshot captured with NAS snapshot is provided by creating an SDPV. Create so that the total SDPV capacity becomes the capacity estimated below.

```
SDP additional capacity = total value for updated volume (*1) of NAS volumes for each generation
```

*1: NAS volume content that is changed between the time of one snapshot and the next snapshot.

When it is difficult to estimate size of the changed content, we recommend adding the following capacity. This is only a recommended value, so it should be modified according to the operational state.

```
SDP additional capacity = Total capacity of NAS volumes for NAS snapshot * a number between 0.3 and 0.5
```



Point

SDPV and SDP are shared with SAN AdvancedCopy.

For this reason, when using SAN AdvancedCopy and NAS snapshot on the ETERNUS Disk storage system simultaneously, prepare SDP capacity that is the total estimated volume for SAN and NAS.



Refer to "Create Volume" in the *ETERNUS SF Web Console Guide* for the SDPV creation procedure.

Copy Table Size Settings

In order to use NAS snapshot, configure the copy table size and resolution.



- Values that can be configured for the copy table size and resolution differ depending on the model of the storage device. Refer to the ETERNUS Disk storage system manuals for information on the specification of the copy table size.
- Refer to "Configure Copy Table Size for Advanced Copy" in the *ETERNUS SF Web Console Guide* for the copy table size configuration procedure. However, if an AdvancedCopy Manager license is not purchased, this cannot be configured from the Web Console. Configure from the ETERNUS Web GUI.

6.6.3 Installation Steps

The installation steps for performing ETERNUS Disk storage system NAS operation is explained.

Installation is implemented in the following order.

| Order | Installation Item | Title of Sections Listed in Web Console Guide | Optional/Required (*1) |
|-------|--|---|------------------------|
| 1 | Creating Shared Folder | Create Shared Folder | Required |
| 2 | Creating NAS Interface | Create NAS Interface | Required |
| 3 | NAS File System Environment Settings | Configure DNS Server | Optional |
| | | Configure Authentication Server | Optional |

*1: Tasks that must be performed in order to operate the NAS file system are "Required", while tasks that may be omitted are "Optional".



If an authentication system is not implemented then the NAS file system can be accessed from any clients connected to the business LAN. It is strongly recommended that an authentication server is properly configured and implemented.

6.6.3.1 Creating Shared Folder

Create a shared folder in order to configure the folder of the access destination of the NAS file system.

Configure the following for the shared folder:

Table 6.7 Create Shared Folder

| Subject of Configuration | Configuration Details |
|-------------------------------|---|
| Shared Folder | <ul style="list-style-type: none"> - Shared Folder Name - Protocol - Oplocks Setting |

| Subject of Configuration | Configuration Details |
|--------------------------|--|
| | <ul style="list-style-type: none"> - Data Access SMB Encryption - Enumeration Based on Access Permission Settings - Destination Volume to Which to Create Shared Folder - NAS Volume Capacity to Which to Create Shared Folder - NAS Volume Number to Which to Create Shared Folder |
| NAS Backup | <ul style="list-style-type: none"> - NAS Backup Volume |
| NAS Snapshot | <ul style="list-style-type: none"> - Number of Snapshot Generations - Schedule Configuration |
| Access settings | <ul style="list-style-type: none"> - Access Configurations of Shared Folder - Host Access Configurations of Shared Folder |

Shared Folder

Shared Folder Name

The name of the shared folder.

Protocol

The protocol to be used by the shared folder.

It is possible to select CIFS, NFS, or both of these protocols.

Oplocks Setting

This is the configuration of the Oplocks function that prevents concurrent file access.

It is possible to configure this only when using the CIFS protocol.

When the Oplocks function is enabled, although improvement of access performance from the client can be expected, it will become impossible to use the Alternate Data Stream. In addition, when selecting both protocols of CIFS and NFS, it is recommended that the Oplocks function is not enabled.

Data Access SMB Encryption

Settings that are for the SMB encryption function.

The settings can be configured only when using the CIFS protocol.

When the SMB encryption function is enabled, the communications between the client and the ETERNUS Disk storage system will be encrypted. In order to use this function, the client must support SMB 3.0.



Note

When data access encryption is enabled, clients that do not support SMB 3.0 cannot access the shared folder.

Enumeration Based on Access Permission Settings

This is the Access Based Enumeration (ABE) function settings.

The settings can be configured only when using the CIFS protocol.

When the ABE function is enabled, folders and files that cannot be referenced by users accessing the shared folder are not displayed.

Destination Volume to Which to Create Shared Folder

This is the volume where the shared folder is to be created.

When no NAS volumes are already defined, a new NAS volume will be created.

When NAS volumes are already defined, one of them may be selected, or a new NAS volume may be created.

NAS Volume Capacity to Which to Create Shared Folder

This is the capacity of the NAS volume.

This is only to be specified when creating a new NAS volume.

Information

For NAS volume, a system area of 300GB is reserved. For this reason, the area available as a file system is the value after subtracting the system area from the area specified for the NAS volume.

e.g.: If a NAS volume of 3TB is created, the user area is 2.7TB and the system area is 0.3TB.

NAS Volume Number to Which to Create Shared Folder

This is a NAS volume number.

Specify this number when execute the inter-box backup of NAS volumes.

The NAS volume number must be the same at ETERNUS Disk storage systems as backup source and backup destination respectively.

NAS Backup

This is set for the purpose of backing up the NAS volume data.

NAS Backup Volume

When there is no NAS backup volume, create a new NAS backup volume. Where there is a NAS backup volume, you can choose to either create a new NAS backup volume or use an existing NAS backup volume.

The NAS backup volume is created with the following details.

| | |
|--|----------------------------------|
| Volume Name | <i>nasVolumeName\$bak_N (*1)</i> |
| Capacity | Same as the source NAS volume. |
| Volume Type | Same as the source NAS volume. |
| Thin Provisioning Pool of the Creation Destination | User Selection |

*1: "N" is a sequential number from 0. The number of digits varies.

When a NAS backup volume is created, the following copy group and copy pair will be automatically created.

- Copy group

The copy group is a group of copy pairs. A copy pair is comprised of a source NAS volume and a destination NAS backup volume.

| | |
|-----------------|---|
| Copy Group Name | <i>NAS_QuickOPC_nasVolumeName_N (*1,*2)</i> |
| Copy Group Type | QuickOPC |

*1: "N" is a sequential number from 0. The number of digits varies.

*2: Characters other than those listed below in *nasVolumeName* are replaced with hash (#):

One-byte alphanumeric character, minus (-), underscore (_), hash (#), period (.), plus (+)

- Copy pair

The copy pair is a definition of a source NAS volume and a destination NAS backup volume. A copy pair is defined within a copy group.

In addition, it is also possible to configure NAS backup individually. Refer to "[6.6.4.9 Configuring NAS Backup](#)" for this procedure.

 **Point**

- For increased reliability, it is recommended to create Thin Provisioning Pools of the creation destination for the NAS backup volume and the NAS volume in separate Thin Provisioning Pools.
- When configuring NAS backup or backing up the NAS volume, an ETERNUS SF AdvancedCopy Manager Local Copy License is required.

NAS Snapshot

Sets the number of generations that the NAS snapshot has and the snapshot capture schedule. This can be configured only when setting a new NAS snapshot. When using an existing NAS snapshot, the existing setting is used. This cannot be modified.

Number of Snapshot Generations

Sets the number of snapshot generations owned.

However, the number of configurable generations differs according to the device model and firmware version number. Refer to the NAS snapshot specification described in the manual accompanying the ETERNUS Disk storage system.

Schedule Configuration

Sets the snapshot capture schedule. The following items are set.

| Item | Explanation |
|-------|--|
| Cycle | Selects the cycle for capturing snapshots. Daily: Snapshots captured every day at selected "Time". Weekly: Snapshots captured on the selected "Day" and "Time" of every week. |
| Day | Selects the days to capture the snapshot. This cannot be selected when Daily is selected for the [Cycle]. Check the check box of the days you wish to capture the snapshot. |
| Time | Selects the time to capture the snapshot. Check the check box of the time you wish to capture the snapshot. When an interval of capturing a snapshot is selected, the selected interval time is automatically checked from the start point of zero time. |

When configuring a new NAS snapshot, the NAS snapshot volume for the collected snapshot backup is automatically created. The NAS snapshot volume is created with the following content.

| | |
|--------------------|---|
| Volume Name | <i>nasVolumeName\$snap_N(*1)</i> |
| Capacity | Same as the NAS volume of the backup source |
| Volume Type | SDV |
| RAID Group Created | User Selection |

*1: "N" is a sequential number from 0. The number of digits varies.

 **Point**

- The snapshot is collected based on the time set for the ETERNUS Disk storage system.
- When a new NAS snapshot is configured, it automatically goes into start state.

Note

When using the snapshot function, enable SNMP Trap Setup. If SNMP Trap Setup is not enabled, snapshot collection result is not notified. Refer to "Change ETERNUS Disk Storage System Information" in the *ETERNUS SF Web Console Guide* for the procedure to change SNMP Trap Setup via the Web Console.

Access settings

Access Configurations of Shared Folder

The owner and group that will issue access rights in relation to the shared folder will be configured. For the owner and group, configure a user or group on the authentication server configured with "[6.6.3.3 NAS File System Environment Settings](#)". When root is configured as the owner and group that has the access rights of the shared folder, it will be possible to access the shared folder from all clients on the business LAN.

Point

- Set root to the owner and the group when making first time of the shared folder or the authentication server is a unsetting. Refer to "[6.6.4.2 Changing Shared Folder](#)" for the modification procedure when the access authority is given to a specific owner and the group after the authentication server is set.
- In order to perform detailed access control such as specifying Read-Only to individual users other than the owner, directly configure this in relation to the authentication server.

Host Access Configurations of Shared Folder

Configure host access, permitted and denials, to the shared folder. When a host to permit is not specified, access from all hosts will be permitted. Furthermore, it is possible to configure hosts to deny only when CIFS is specified for the protocol.

In addition, the following will be automatically configured when creating the shared folder.

- [Writing Authority of Shared Folder](#)
- [Shared Status of Shared Folder](#)

Writing Authority of Shared Folder

The state of whether writing to the shared folder is enabled or disabled will be displayed. The client can only write into a shared folder for which writing authority is enabled, or folders and files subordinate to such a shared folder.

When the shared folder is created, writing will be enabled by default.

Refer to "[6.6.4.2 Changing Shared Folder](#)" for information on how to change write authority.

Shared Status of Shared Folder

The state of whether the sharing of the shared folder is active (Online) or inactive (Offline) will be displayed. For a folder where sharing has been made active, the client will be able to access files via the NAS interface.

When the shared folder is created, sharing will be in an active state by default.

Refer to "[6.6.4.7 Activating Sharing](#)" or "[6.6.4.8 Stopping Sharing](#)" for information on how to change the shared status.

Shared folders can be created up to 256 folders per device.

See

Refer to "Create Shared Folder" in the *ETERNUS SF Web Console Guide* for information on how to create using the Web Console.

6.6.3.2 Creating NAS Interface

Create a NAS Interface in order to configure a public IP address and a port to access the shared folder.

The following can be configured with this function:

| Subject of Configuration | Configuration Details |
|--------------------------|---|
| NAS Interface (Port) | <ul style="list-style-type: none"> - RIP Setting Enable/Disable - Port for Access - Connection Access Method - Port Bonding |
| NAS Interface (network) | <ul style="list-style-type: none"> - IP Address for Access - VLAN ID |

NAS Interface (Port)

RIP Setting Enable/Disable

Configure whether to enable/disable RIP configuration.

When the RIP setting is enabled, its own routing table will be automatically generated based on the routing table broadcast from the router connected to the port, and the access route set in the NAS interface can be automatically selected.

When the RIP setting is disabled, there will be dynamic generation of the routing table.

Point

- When the RIP configuration is enabled, in order to dynamically create the routing table of the NAS interface, enable the RIP configuration of the router that is connected.
- When the RIP setting is disabled, the NAS interface cannot select its own access route. Set the routing table manually using the ETERNUS Disk storage system command.

Port for Access

Configure the Allocation port and the Redundant port of the NAS interface. The shared folder will be accessed via the port configured as the Allocation port.

When the Allocation port is down, the shared folder can be accessed via the port configured as the Redundant port. It is also possible to use a single port operation format where a Redundant port is not configured.

Point

- By setting the VLAN ID, 1 port can be allocated to multiple NAS interfaces.
- The following ports cannot be selected for the Allocation port:
 - Member ports of bonding port
- The following port cannot be selected for Redundant port:
 - Port of same CM as assignment Allocation port
 - Redundant port of other port
 - Member port of bonding port
- When a Redundant port is not configured, it will not be possible to access the shared folder when the Allocation port goes down. For this reason, it is recommended that a Redundant port be configured.

Connection Access Method

Configure the Allocation port and Redundant port for the shared folder access connection method.

The method for configuration of the connection type is as follows:

| Connection Settings | Configuration Method |
|---------------------------|---|
| Single connection | Specify only an Allocation port, and create a NAS interface. |
| Active-Standby connection | Specify an Allocation port and a Redundant port, and create a NAS interface. |
| Active-Active connection | <p>There are the two following configuration methods.</p> <ul style="list-style-type: none"> - Method 1 <ol style="list-style-type: none"> 1. Create a NAS interface of an Active-Standby connection. 2. Again, create a NAS interface. During this, specify the "Redundant port of the NAS interface" created in step 1 as the port. - Method 2 <ol style="list-style-type: none"> 1. Create a NAS interface of a Single connection. 2. Again, create a NAS interface. During this, specify the "port of the NAS interface" created in step 1 as the Redundant port. |

Port Bonding

The Allocation ports and the Redundant ports for the NAS interface can be set as operating mode of member port and bonding port.

Point

- The following ports cannot be selected for bonding ports.
 - Port of CM different from the master port
 - Port to which a NAS interface has already been assigned
 - Duplicated port

The operating mode that will be the method of determining the communication ports from the bonding ports can be selected from the following.

| Mode | Name | Explanation |
|------|---|--|
| 0 | Load distribution (round robin) | Performs load distribution using round robin. |
| 1 | Active backup | Communicates on one port, and when communication is not possible, switches over to other ports. This does not perform load distribution. |
| 2 | Load distribution (EXCLUSIVE OR) | Performs load distribution based on EXCLUSIVE OR of recipient/ sender |
| 4 | IEEE802.3ad | Performs load distribution following the IEEE802.3ad standard. As it communicates with the switch using Link Aggregation Control Protocol, an 802.3ad-compatible switch is required. |
| 5 | Load distribution (link speed[only transmit]) | Transmit performs load distribution in line with Link speed. Receive is only performed on one port. |

| Mode | Name | Explanation |
|------|---|---|
| 6 | Load distribution (link speed[transmit and receive]) | Transmit performs load distribution in line with Link speed. Receive allocates a communication ports as necessary for each communication partner. With IPv6, there is the same operation as mode 5. |

Further, when the operating mode is "load distribution (EXCLUSIVE OR)" or "IEEE802.3ad", has policy is set as the method of determining the port.

| Name | Explanation |
|----------------------------|--|
| MAC Address | This is determined using an EXCLUSIVE OR of the sender and recipient MAC addresses. |
| MAC Address and IP Address | This is determined using an EXCLUSIVE OR of the sender and recipient MAC addresses and IP addresses. |
| IP Address and Port Number | This is determined using an EXCLUSIVE OR of the sender and recipient IP addresses and port numbers. |

Point

- Specify "1" for Restriction on the number of detached ports of the switch. The number "1" is set by default. The Restriction on the number of detached ports indicates the allowable number of ports disconnected from members making up a bonding port. When the number of detached ports is less than the restriction number, the bonding port is disabled. For example, if number "1" is specified for the Restriction on the number of detached ports and 4 ports make up a bonding port, when all the 4 ports become unavailable, the bonding port is disabled. When all the ports are recovered, the bonding port gets enabled.
- The function required for LAN switch varies depending on the operating mode of bonding port. Refer to the ETERNUS Disk storage system manuals for the function required for switch by operating mode.

NAS Interface (network)

IP Address for Access

Sets the IP address used for the NAS interface. Either an IPv4 address, IPv6 address or both can be configured.

VLAN ID

Sets the tag VLAN ID configured for the NAS interface.

By setting the VLAN ID for the NAS interface, the NAS interface can be additionally allocated for ports that other NAS interfaces have allocated.

Note

- When multiple NAS interface are assigned to the same port using the VLAN ID, the NAS interface must all be in different subnets.
- Port VLAN is not supported for connection between ETERNUS Disk storage system and switch.

See

Refer to "Create NAS Interface" in the *ETERNUS SF Web Console Guide* for information on settings using the Web Console.

Note

- When the same subnet is assigned to the same CM, the behavior will be to communicate using only a specific port.
- Where the network is allocated in an Active-Active connection form, it is necessary to set the same network address between CM.
- To create a NAS interface, allocate a new NAS interface to NAS ports and then restart the service to access the shared folder by the CIFS protocol. Before the restart process is completed, the shared folder is not accessible from the existing NAS interface by the CIFS protocol. Wait a few moments to access it again.
- If Spanning Tree Protocol (STP) is implemented into the LAN switch for connecting to NAS ports, when the STP function is enabled, access to the shared folders may fail.
Take the following steps to disable the STP function:
 - When the STP function is not required for network configuration:
Disable the STP function of the LAN switch.
 - When the STP function is required for network configuration:
At only the NAS port connected part of the connection ports of the LAN switch, disable the STP function or configure Port-Fast.
- When using the antivirus function, create a NAS interface for each port with two CMs.

6.6.3.3 NAS File System Environment Settings

Configures the NAS file system environment settings

DNS Server

The ETERNUS Disk storage system NAS file system sets the DNS Server for performing name resolution.

The DNS Server is in both IPv4 and IPv6 formats. A primary DNS Server and secondary DNS Server can be registered for each.

Information

When Active Directory authentication Servers on which the DNS feature is enabled are registered in the ETERNUS Disk storage system, name resolution is performed using the DNS feature on the Active Directory authentication server. In this case, the DNS Server information can be displayed on the Web Console.

Authentication Server

Perform configuration of the authentication server to perform client access control to the NAS file system.

Depending on the type of protocol for access, specify the following for the authentication method:

Active Directory

Specify this when accessing the NAS file system using the CIFS protocol.

LDAP

Specify this when accessing the NAS file system using the NFS protocol.

Note

- The authentication methods that can be operated differ with each protocol. For this reason, when the shared folder is accessed with an authentication method that is not supported, the authentication system will not operate.
- In the operation using Active Directory, it is required to synchronize the time between the ETERNUS Disk storage system and the Active Directory installed authentication server. It is recommended to automatically correct the time by Network Time Protocol (NTP).

It is possible to register a maximum of 3 authentication servers for each authentication method.



See

Refer to "Configure Authentication Server" in the *ETERNUS SF Web Console Guide* for information on settings using the Web Console.

Set the access authority to the owner and the group if necessary for the shared folder made by "6.6.3.1 Creating Shared Folder" after setting the authentication server.

6.6.4 Operation Method

The operation method for performing ETERNUS Disk storage system NAS operations with this product will be explained.

The functions that can be executed during operation are as follows:

- [Access to Shared Folder](#)
- [Changing Shared Folder](#)
- [Changing NAS Interface](#)
- [Changing NAS Server Name](#)
- [Changing DNS Server](#)
- [Changing Authentication Server](#)
- [Activating Sharing](#)
- [Stopping Sharing](#)
- [Configuring NAS Backup](#)
- [Setting/Changing/Disabling NAS Snapshot](#)
- [Snapshot Reference](#)
- [Restoring from Snapshot](#)
- [Start Snapshot Capture](#)
- [Stop Snapshot Capture](#)
- [Adding Quota Settings](#)
- [Changing Quota Settings](#)
- [Deleting Quota Settings](#)
- [Antivirus Server Settings](#)
- [Enabling Antivirus Function](#)
- [Disabling Antivirus Function](#)
- [Performance Management for NAS Volume and NAS System](#)
- [Capacity Management of Thin Provisioning Pool](#)
- [Expansion of NAS File System](#)
- [Deleting of NAS Environment](#)

6.6.4.1 Access to Shared Folder

The access method to the shared folder is the following:

- [Access Using CIFS Protocol](#)
- [Access Using NFS Protocol](#)

Access Using CIFS Protocol

The shared folder is accessible by the Windows file sharing or network drive mapping.

Enter the following to the address bar or to the network drive mapping window:

```
\\nasInterfaceIpAddress\sharedFolderName
```

When authenticating by Active Directory, the operation method varies depending on the presence of setup of an authentication server.

- If Active Directory is configured as an authentication server:
Enter the user name and password registered to Active Directory.
When connecting from the client participating in Active Directory, authentication is not needed.
- If an authentication server is not set up:
Enter the user name and password described in the ETERNUS Disk storage system manuals.

Information

Entering the IP address for NAS interface in the address bar can view sharable folders.

Access Using NFS Protocol

The shared folder is accessible by performing the NFS mount from a UNIX server using the following procedure:

When authenticating through LDAP, there is no difference in operation method with the presence of setup of an authentication server. Make the UNIX server participate in the LDAP domain to perform the NFS mount.

1. Check the NFS export path for the shared folder.
The **NFS Export Path** displayed in the **Basic** tab of the Detail Shared Folder screen is the shared folder path.
Refer to "Display Shared Folder" in the *ETERNUS SF Web Console Guide* for the procedure to display the **Basic** tab of the Detail Shared Folder screen.
2. Log in to the UNIX server with administrator privileges.
3. Execute the mount command to mount the shared folder.
When executing the mount command, specify the following:

For Solaris

```
mount -F nfs nasInterfaceIpAddress:nfsExportPath mountDestinationDir
```

For Linux

```
mount -t nfs nasInterfaceIpAddress:nfsExportPath mountDestinationDir
```

Information

- Executing the showmount command on the UNIX server can view NFS mountable shared folders.

```
showmount -e nasInterfaceIpAddress
```

- The format for the *nfsExportPath* is as follows:

```
/mnt/nas/nvnasVolumeNumber/data/sharedFolderName
```

After NFS mounted, logging in to the UNIX server as the user registered to LDAP can access the shared folder with the owner/group permissions set to the shared folder.

When not authenticating through LDAP, logging in to the UNIX server can access the shared folder.

6.6.4.2 Changing Shared Folder

The values of the shared folder will be changed. The values that can be changed are as follows:

- Oplocks Configuration (when the protocol is CIFS or both CIFS and NFS)
- Data Access SMB Encryption (when the protocol is CIFS or both CIFS and NFS)
- Enumeration Based on Access Permission Settings (when the protocol is CIFS or both CIFS and NFS)
- Owner/Group of Shared Folder
- Writing Authority
- Hosts Permitted Access
- Hosts Denied Access (when the protocol is CIFS or both CIFS and NFS)

Note

- When the configuration of a shared folder is changed, sharing will temporarily be suspended and it will not possible to access the shared folder. When the changes to the shared folder are complete, sharing will be automatically resumed.
- When data access encryption is enabled, clients that do not support SMB 3.0 cannot access the shared folder.

See

Refer to "Change Shared Folder" in the *ETERNUS SF Web Console Guide* for information on how to make changes to the shared folder using the Web Console.

6.6.4.3 Changing NAS Interface

The values of the NAS interface will be changed.

The values that can be changed are as follows:

- IP Address
- RIP Setting
- Port
- Redundant port
- Member ports of bonding port
- Operating mode of bonding port

Information

- Only when a new port is set to the NAS interface to which the port is not set, the setting of the port can be changed.
- The following ports cannot be selected as the port:
 - Member ports of bonding port
- The following ports cannot be selected for Redundant ports:
 - Port of same CM as assignment Allocation port
 - Redundant port of other port
 - Member ports of bonding port

- The following ports cannot be selected as member ports of bonding port:
 - Port of CM different from the master port
 - Port to which a NAS interface has already been assigned
 - Duplicated port
 - Master ports of bonding port
- It is not possible to delete all member ports and disable port bonding.
- The NAS interface IP addresses allocated for the ports on which redundancy has been set cannot be changed.
- With ETERNUS SF, the same operating mode and hash policy are set for the ports and Redundant ports. When a different operating mode is set for the Redundant ports using the ETERNUS Disk storage system CLI etc, the Redundant port side operating mode shall be set to the same setting as the port side operating mode when an ETERNUS SF NAS interface operation takes place.



See

Refer to "Change NAS Interface" in the *ETERNUS SF Web Console Guide* for information on how to change NAS interface using the Web Console.



Note

When changing the settings of the Redundant port, access to the shared folder using the CIFS protocol shall become temporarily impossible.

6.6.4.4 Changing NAS Server Name

Changes the name of the NAS Server. It is also possible to return it to the same setting as when the ETERNUS Disk storage system was shipped.



See

Refer to "Change NAS Server Name" in the *ETERNUS SF Web Console Guide* for the procedure for configuring from the Web Console.



Note

When the Active Directory authentication Server is configured, delete the Active Directory authentication server before changing the name of the NAS Server. Refer to "[Deleting Authentication Server](#)" for how to delete the authentication server. Re-register the Active Directory Server, as well, after changing the NAS Server name.

6.6.4.5 Changing DNS Server

Change the DNS Server settings. The change procedure and values that can be changed are the same as when configuring the DNS Server. Refer to "[DNS Server](#)".

6.6.4.6 Changing Authentication Server

The values of the authentication server will be changed.

The steps for making changes and the values that can be changed are the same as those when configuring the authentication server. Refer to "[6.6.3.3 NAS File System Environment Settings](#)".

Point

When changing the domain administrator name of the authentication server, it is necessary to re-enter the password of the domain administrator. When changing items other than the domain administrator name, the password of the domain administrator is not required.

6.6.4.7 Activating Sharing

The sharing status of the shared folder will be activated.

When sharing is activated, it will be possible to access the shared folder via the NAS interface.

See

Refer to "Change NAS Interface" in the *ETERNUS SF Web Console Guide* for information on how to change NAS interface using the Web Console.

6.6.4.8 Stopping Sharing

The sharing status of the shared folder will be stopped.

When sharing is stopped, it will not be possible to access the shared folder.

See

Refer to "Start/Stop Sharing" in the *ETERNUS SF Web Console Guide* for information on the procedure using the Web Console.

6.6.4.9 Configuring NAS Backup

Configures the backup of NAS volume data.

For the NAS backup configuration, apart from creating a NAS backup volume, a copy group and copy pair will be configured.

If NAS backup is not set up, this function is enabled to create a NAS volume backup system.

Configure the following for the NAS backup volume:

- [NAS Backup Volume](#)
- [Copy Group](#)
- [Copy Pair](#)

NAS Backup Volume

This is the volume for backup of the data of the NAS volume.

When there is no NAS backup volume, create a new NAS backup volume. Where there is a NAS backup volume, you can choose to either create a new NAS backup volume or use an existing NAS backup volume.

The NAS backup volume is created with the following details.

| | |
|--|---|
| Volume Name | <i>nasVolumeName</i> \$bak_ <i>N</i> (*1) |
| Capacity | Same as the source NAS volume |
| Volume Type | Same as the source NAS volume |
| Thin Provisioning Pool of the Creation Destination | User Selection |

*1: "*N*" is a sequential number from 0. The number of digits varies.

Point

For increased reliability, it is recommended to create Thin Provisioning Pools of the creation destination for the NAS backup volume and the NAS volume in separate Thin Provisioning Pools.

Copy Group

This is a group for defining copy pairs of a NAS volume and a NAS backup volume.

If no copy group definition for backup exists, a copy group is automatically created with the following settings:

| | |
|-----------------|--|
| Copy Group Name | NAS_QuickOPC_nasVolumeName_ <i>N</i> (*1,*2) |
| Copy Group Type | QuickOPC |

*1: "*N*" is a sequential number from 0. The number of digits varies.

*2: Characters other than those listed below in nasVolumeName are replaced with hash (#):
One-byte alphanumeric character, minus (-), underscore (_), hash (#), period (.), plus (+)

Copy Pair

This is a copy pair of a source NAS volume and backup NAS volume.

It is created when creating a copy group.

See

Refer to "Set NAS Backup" in the *ETERNUS SF Web Console Guide* for information on how to configure steps using the Web Console.

Point

- When it is possible to execute this function from the Web Console, the NAS backup configuration is not setup or is incomplete. When constructing a backup system of the NAS volume, implement this task.
- When configuring NAS backup or backing up the NAS volume, an ETERNUS SF AdvancedCopy Manager Local Copy License is required.

6.6.4.10 Setting/Changing/Disabling NAS Snapshot

Configures the NAS snapshot settings. Disabling NAS snapshot also uses this operation. The values that can be set are as follows:

- Whether NAS snapshot is used
- Number of snapshot generations
- Schedule configuration (cycle, day, time)
- RAID group on which NAS snapshot volume created (can only be set when newly set)

Note

- When disabling the NAS snapshot settings, the snapshots already captured are discarded. The NAS snapshot volumes are also deleted.
- When using the snapshot function, enable SNMP Trap Setup. If SNMP Trap Setup is not enabled, snapshot collection result is not notified. Refer to "Change ETERNUS Disk Storage System Information" in the *ETERNUS SF Web Console Guide* for the procedure to change SNMP Trap Setup via the Web Console.

Point

- When a new NAS snapshot is set, a NAS snapshot volume is automatically created on the specified RAID group.
- The snapshot is collected based on the time set for the ETERNUS Disk storage system.
- The RAID group on which the NAS snapshot volume is created cannot be modified while the NAS snapshot is in use. Reconfigure after disabling the NAS snapshot settings.
- When a new NAS snapshot is configured, it automatically goes into start state.

See

Refer to "Set/Change/Release NAS Snapshot" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.

6.6.4.11 Snapshot Reference

The captured snapshot is referenced from the client in the following way.

- Where the client server is the Windows environment
The captured snapshot can be referenced as the "previous version" using the Windows OS VSS feature.
- Where the client server is the Linux/Solaris environment
The data in the shared folder when a snapshot was captured from ".snap" under the shared folder mounted on the client can be referenced. Each snapshot is in a directory named below:

| | |
|----------------|--|
| Directory Name | @GMT- <i>yyyy.mm.dd-hh.mm.00</i> (<i>yyyy.mm.dd-hh.mm</i> is the time that a snapshot was captured (Greenwich Mean Time). The second is rounded down.) |
|----------------|--|

Point

Users can access the ".snap" directory. However, since ".snap" is a virtual directory, it is not displayed. The following is the example of a directory content displayed by the ls command:

```
[root@esf nas]# ls -a
.  ..  dir1  dir2  nas.txt
[root@esf nas]# ls .snap
@GMT-2014.06.11-08.00.00 @GMT-2014.06.11-09.00.00 @GMT-2014.06.11-10.00.00
```

6.6.4.12 Restoring from Snapshot

It is possible to restore files and folders that have been modified/deleted due to operator error using the captured snapshot. The restore procedure is as follows:

- Where the client server is the Windows environment
The snapshot to be restored can be specified and executed from "Restoring a previous version" using the Windows OS VSS feature.
- Where the client server is the Linux/Solaris environment
There are directories for each snapshot in the ".snap" directory under the shared folder. Copy the files or directories you want to restore to the shared folder from the snapshots using the OS function.

Note

When data inconsistency is found in a snapshot, trace back the data through generations.

6.6.4.13 Start Snapshot Capture

Starts snapshot capture.



See

Refer to "Start/Stop Snapshot Collection" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.

6.6.4.14 Stop Snapshot Capture

Stops snapshot capture.



See

Refer to "Start/Stop Snapshot Collection" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.

6.6.4.15 Adding Quota Settings

Sets limits on the quantity consumed of disk/number of files for users/groups.

The following values are set:

- NAS volume
- Restricted users/groups
- Quantity consumed of disk (warning values, limit values)
- Number of files (warning values, limit values)



Point

Quotas can be set for users and groups that are registered on the authentication server.



See

Refer to "Add Quota Setting" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.



Note

- The users/groups that can be added with one quota configuration are as follows:
 - Total number of user name characters within 2048
 - Total number of group name characters within 2048

When exceeding the above described number of characters when configuring, please add quota configurations by dividing into multiple instances.

- When using the quota management function, enable SNMP Trap Setup. If SNMP Trap Setup is not enabled, an alarm is not notified when a quota threshold is exceeded. Refer to "Change ETERNUS Disk Storage System Information" in the *ETERNUS SF Web Console Guide* for the procedure to change SNMP Trap Setup via the Web Console.

6.6.4.16 Changing Quota Settings

Changes the quantity consumed of disk/file number limits for users/groups. The values that can be changed are as follows:

- Quantity consumed of disk (warning values, limit values)
- Number of files (warning values, limit values)



See

Refer to "Change Quota Setting" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.

6.6.4.17 Deleting Quota Settings

Disables the quantity consumed of disk/file number limits for users/groups.

After deleting, the quantity consumed of disk/file number limits for users/groups are "unlimited".



See

Refer to "Delete Quota Setting" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.

6.6.4.18 Antivirus Server Settings

Configures the antivirus server/activation code.



Point

- The NAS interface must be configured with the ETERNUS Disk storage system so that two CMs in the ETERNUS Disk storage system can communicate to the antivirus server.
- We recommend registering multiple antivirus servers on the ETERNUS SF system. If the ETERNUS Disk storage system cannot communicate with the antivirus server, the client will not be able to access files in the NAS environment.
- Prepare an activation code for each ETERNUS Disk storage system.
- When configuring a new antivirus server, the antivirus function will be automatically enabled.
- When deleting all of the registered antivirus servers or disabling the registered activation codes, the antivirus function will be automatically disabled.



See

Refer to "Add/Change/Delete Antivirus Server" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.

6.6.4.19 Enabling Antivirus Function

Enables the antivirus function.

If the antivirus function is enabled, virus detection and handling will be automatically executed on the files in the NAS environment.



See

Refer to "Enable/Disable Antivirus Function" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.

6.6.4.20 Disabling Antivirus Function

Disables the antivirus function

If the antivirus function is disabled, execution of virus detection and handling of files in the NAS environment will be automatically stopped.

Point

When the antivirus function is enabled and communication is impossible with any of the antivirus servers registered on the ETERNUS Disk storage system, the files residing in the NAS environment are not accessible from the client. In this case, disabling the antivirus function makes it possible to access the files residing in the NAS environment from the client. However, disabling the antivirus function increases security risk. Therefore, enable the antivirus function after recovery from communication trouble.

See

Refer to "Enable/Disable Antivirus Function" in the *ETERNUS SF Web Console Guide* for the procedure for setting via the Web Console.

6.6.4.21 Performance Management for NAS Volume and NAS System

The performance of NAS volume and NAS system can be managed.

Refer to "[Chapter 7 Performance Management](#)" for details.

See

Refer to "Operations for Performance Management of Storage Device" in the *ETERNUS SF Web Console Guide* for information on the procedure using the Web Console.

Information

- The performance monitoring and threshold monitoring functions cannot be used for NAS port.
- The threshold monitoring function cannot be used for NAS volume and NAS system.

6.6.4.22 Capacity Management of Thin Provisioning Pool

Capacity management for the Thin Provisioning Pool in which the NAS volume is created is implemented.

Refer to "[6.4 Thin Provisioning Management](#)" for details.

See

Refer to "Operations for Thin Provisioning" in the *ETERNUS SF Web Console Guide* for information on the procedure using the Web Console.

6.6.4.23 Expansion of NAS File System

Expansion of the NAS file system will be implemented.

- [Expansion of NAS Volume](#)
This is performed when there is a possibility that total free space on the NAS volume on which the NAS file system has been created may be insufficient.
- [Expansion of Thin Provisioning Pool](#)
This is implemented when there is a possibility that the used capacity of the Thin Provisioning Pool in which the NAS volume is created will exceed the total capacity.

Expansion of NAS Volume

NAS volume expansion is performed using the following procedure:

1. Confirms the total free capacity for the NAS volume.

Confirms the total free capacity of the NAS volume from the Web Console.
Expand the NAS volume capacity based on the size of the free capacity.



Refer to "Display Shared Folder" in the *ETERNUS SF Web Console Guide* for the procedure for displaying the total free capacity of the NAS volume from the Web Console.

2. Disables NAS backup settings.

When NAS backup has already been set for the NAS volume to be expanded, this releases the NAS backup settings. Delete the following resources in the description order and disable the NAS backup settings.

- a. Copy pair
- b. Copy group
- c. NAS backup volume



Refer to the following for how to delete resources:

- a. For deleting copy pairs, "[Deleting Copy Pair](#)"
- b. For deleting copy groups, "[Deleting Copy Group](#)"
- c. For deleting of the NAS backup volume, "[Deleting Volume for NAS](#)"

3. Disable NAS snapshot settings.

When NAS snapshot has already been set for the NAS volume to be expanded, this disables the NAS snapshot settings.



Refer to "[6.6.4.10 Setting/Changing/Disabling NAS Snapshot](#)" for how to delete NAS snapshot settings.

4. Expands NAS volume capacity.

Expands the NAS volume capacity using a new provisioning volume capacity extension function from the Web Console.



Refer to "Expand Capacity of Thin Provisioning Volume" in the *ETERNUS SF Web Console Guide* for the procedure for expanding capacity via the Web Console.



- The NAS volume cannot be expanded in the following cases.
 - Where there is a copy session on the NAS volume
 - A NAS snapshot is configured on the NAS volume
- NAS backup volume and NAS system volume cannot be expanded
- When NAS backup or NAS snapshot operation is continued after expansion of the NAS volume, reconfigure after expansion.

Expansion of Thin Provisioning Pool

Expansion of the Thin Provisioning Pool in which the NAS volume is created is implemented with the following steps.

1. Confirm the capacity of the Thin Provisioning Pool.
Confirm the capacity of the Thin Provisioning Pool in which the NAS volume is created.
Refer to "6.6.4.22 Capacity Management of Thin Provisioning Pool".
Depending on the size of the available capacity of the Thin Provisioning Pool, perform the expansion of the capacity of the Thin Provisioning Pool with the following steps.
2. Expand the capacity of the Thin Provisioning Pool.
Perform the expansion of the capacity of the Thin Provisioning Pool from the Web Console.



Refer to the "Expand Capacity of/Format/Change Threshold Value of/Delete Thin Provisioning Pool" in the *ETERNUS SF Web Console Guide* to expand capacity.

A disk that is not being used is necessary to expand the capacity of the Thin Provisioning Pool. Add more disks as needed before performing the extension of the capacity.
Refer to the manual included with the ETERNUS Disk storage system for information on how to add disks.

6.6.4.24 Deleting of NAS Environment

The steps for deleting the NAS environment will be explained.

The deletion is performed with the following steps.

Table 6.8 Dismantling of NAS Environment

| Order | Item | Title of Sections Listed in Web Console Guide |
|-------|--|---|
| 1 | Disable NAS Snapshot | Set/Change/Release NAS Snapshot |
| 2 | Deleting Authentication Server | Configure Authentication Server |
| 3 | Deleting DNS Server | Configure DNS Server |
| 4 | Deleting Antivirus Server | Add/Change/Delete Antivirus Server |
| 5 | Deleting NAS Interface | Delete NAS Interface |
| 6 | Deleting Copy Pair | Add/Display/Delete Copy Pair |
| 7 | Deleting Copy Group | Create/Display/Delete Copy Group |
| 8 | Deleting Shared Folder | Delete Shared Folder |
| 9 | Deleting Volume for NAS | Delete Volume |



When these steps are implemented, the NAS environment is deleted. All the data that had been stored on the NAS volume and the NAS backup volume will be deleted. Do not implement this step except when deleting the NAS environment.

Disable NAS Snapshot

Disables the settings for NAS snapshot.

When dismantling the NAS environment, disable the NAS snapshot settings for all of the NAS volumes. When disabling the NAS snapshot settings individually, specify the target NAS volume and delete.



Note

When disabling the NAS snapshot settings, the snapshots already captured are discarded. The NAS snapshot volumes are also deleted.

Deleting Authentication Server

The authentication server is deleted from the configuration.

Delete domain information and all authentication server information when you dismantle the NAS environment.



See

Refer to "Configure Authentication Server" in the *ETERNUS SF Web Console Guide* for the procedure with the Web Console.



Point

After deleting the authentication server, quota cannot be added, changed or deleted.

When a NAS volume targeted for quota management is deleted, the quota setting is also deleted.

Deleting DNS Server

Deletes the DNS Server.

When dismantling the NAS environment, delete all the information from the primary server and secondary server.



See

Refer to "Configure DNS Server" in the *ETERNUS SF Web Console Guide* for the delete procedure.

Deleting Antivirus Server

The setting of the antivirus server is deleted.

When dismantling the NAS environment, delete the activation codes and all antivirus servers.



See

Refer to "Add/Change/Delete Antivirus Server" in the *ETERNUS SF Web Console Guide* for information on how to delete.

Deleting NAS Interface

The NAS interface will be deleted.

When deleting the NAS environment, be sure to delete all NAS interfaces. In order to delete a specific NAS interface, specify the chosen NAS interface and execute the deletion.



See

Refer to "Delete NAS Interface" in the *ETERNUS SF Web Console Guide* for information on how to delete.



Point

When the following two conditions are met, the redundancy of ports is removed:

- All NAS interfaces are deleted from Allocation ports.
- A Redundant port is set to an Allocation port.

Deleting Copy Pair

The copy pair for NAS defined with the NAS volume and the NAS backup volume will be deleted.



Refer to "Add/Display/Delete Copy Pair" in the *ETERNUS SF Web Console Guide* for information on how to delete.



Even when all shared folders have been deleted, the copy pair automatically created for the NAS will not be deleted. When deleting the NAS backup configuration, delete the copy pair from the Web Console.

Deleting Copy Group

The copy group for NAS will be deleted.



Refer to "Create/Display/Delete Copy Group" in the *ETERNUS SF Web Console Guide* for information on how to delete.



Even when all shared folders have been deleted, the copy group automatically created for the NAS will not be deleted. When deleting the NAS backup configuration, delete the copy group from the Web Console.

Deleting Shared Folder

The shared folder will be deleted.

When deleting the NAS environment, be sure to delete all shared folders. In order to delete a specific shared folder, specify a shared folder of choice and execute the deletion.



Refer to "Delete Shared Folder" in the *ETERNUS SF Web Console Guide* for information on how to delete.



- Delete the files and the folders in the shared folders beforehand.
When the files or the folders are existed in the shared folder, it will be an error of the deletion the shared folders.
- The shared folder at the time of being accessed from the client might not be able to be deleted.
Delete this after stopping access to the shared folder.

Deleting Volume for NAS

The volume for NAS will be deleted.



See

Refer to "Delete Volume" in the *ETERNUS SF Web Console Guide* for information on how to delete.



Information

Even when all shared folders have been deleted, the volume for NAS will not be deleted. In order to delete the NAS volume, delete the NAS volume from the Web Console.



Point

In the following cases, the volume for NAS cannot be deleted from the Web Console.

- When a shared folder is present on the NAS volume
- When the NAS backup volume is mounted
- When the volume is a NAS system volume

Delete the NAS system volume from the ETERNUS Disk storage system. Refer to the ETERNUS Disk storage system manuals for the deletion procedure.

Chapter 7 Performance Management

7.1 Overview

This software supports performance management functionality for fibre channel switch and ETERNUS Disk storage systems. This functionality enables users to get details about the operation and load statuses of devices.

Additionally, by knowing the number of active disks, it is possible to verify the Eco-mode status of the ETERNUS Disk storage system.

In an environment using VMware vSphere Virtual Volumes, a VVOL metadata stored FTV, whose volume name is "\$VVOL_META", is excluded from performance management.



See

Refer to "1.2.9 Support Levels" for details about supported devices.



Note

- Do not execute performance monitoring for a single device from more than one Management Server (administrative server) at the same time. The Softek Storage Cruiser administrative servers, the ETERNUS SF Storage Cruiser Management Server or the Systemwalker Resource Coordinator administrative servers
- The performance management functionality always starts up when the Management Server starts up. For devices in which performance management settings have been configured, performance information collection starts in the background. Accordingly, performance information is collected regardless of whether the Web Console is started or not. To stop performance information collection, execute performance management stop processing.

7.1.1 Performance Information Types

The following information can be managed: Performance monitoring can be set at different intervals, refer to "7.2.3 Setting Monitoring Intervals" for the settings available for each device.

On the following tables, "A" indicates "Available", "N/A" indicates "Not Available".

- Fibre Channel switch

| | Performance Information (Unit) | Fibre Channel Switch |
|------|--|----------------------|
| Port | Transfer rates of send/receive data (MB/S) | A |
| | Number of CRC errors | A |

- ETERNUS Disk storage system

| | Performance Information (Unit) | ETERNUS DX400/DX400 S2 series, ETERNUS DX500 S3/DX600 S3, ETERNUS DX8000/DX8000 S2/DX8000 S3 series | ETERNUS DX60/DX60 S2/DX60 S3, ETERNUS DX80/DX80 S2, ETERNUS DX90/DX90 S2, ETERNUS DX100 S3/DX200 S3, ETERNUS DX200F |
|----------------------------|---|---|---|
| Logical Volume, RAID Group | Read/Write count (IOPS) | A | A |
| | Read/Write data transfer rate (MB/S) | A | A |
| | Read/Write response time (msec) | A | A |
| | Read/Pre-fetch/Write cache hit rate (%) | A | A |

| | Performance Information (Unit) | ETERNUS DX400/DX400 S2 series, ETERNUS DX500 S3/DX600 S3, ETERNUS DX8000/DX8000 S2/ DX8000 S3 series | ETERNUS DX60/DX60 S2/DX60 S3, ETERNUS DX80/DX80 S2, ETERNUS DX90/DX90 S2, ETERNUS DX100 S3/DX200 S3, ETERNUS DX200F |
|-----------------|--|--|---|
| | Read(Extreme Cache) cache hit rate (%) | A (ETERNUS DX500 S3/DX600 S3, DX8000 S3 series only) | A (ETERNUS DX100 S3/DX200 S3 only) |
| | Read(DRAM, Extreme Cache) cache hit rate (%) | A (ETERNUS DX500 S3/DX600 S3, DX8000 S3 series only) | A (ETERNUS DX100 S3/DX200 S3 only) |
| | Read QoS delay time (msec) | A (ETERNUS DX500 S3/DX600 S3, DX8000 S3 series only) | A (ETERNUS DX60 S3/DX100 S3/ DX200 S3, ETERNUS DX200F only) |
| | Write QoS delay time (msec) | A (ETERNUS DX500 S3/DX600 S3, DX8000 S3 series only) | A (ETERNUS DX60 S3/DX100 S3/ DX200 S3, ETERNUS DX200F only) |
| NAS Volume (*1) | Read/Write throughput (MB/s) | A (ETERNUS DX500 S3/DX600 S3 only) | A (ETERNUS DX100 S3/DX200 S3 only) |
| Disk drive | Disk busy rate (%) | A | A |
| CM | Load(CPU usage) rate (%) | A | A |
| | Copy remaining amount (GB) | A | A |
| CA | Read/Write count (IOPS) | A | N/A |
| | Read/Write data transfer rate (MB/S) | A | N/A |
| CM Port | Read/Write count (IOPS) | N/A | A |
| | Read/Write data transfer rate (MB/S) | N/A | A |
| Device | Number of active disks (Disk) | A | A |
| | Power consumption (W) | A (ETERNUS DX400 S2 series, DX500 S3/DX600 S3, DX8000 S2/ DX8000 S3 series only) | A |
| | Temperature (C) | A (ETERNUS DX400 S2 series, DX500 S3/DX600 S3, DX8000 S2/ DX8000 S3 series only) | A |
| NAS System (*1) | CPU usage rate (%) | A (ETERNUS DX500 S3/DX600 S3 only) | A (ETERNUS DX100 S3/DX200 S3 only) |
| | Number of CIFS/NFS processes (ops/s) | A (ETERNUS DX500 S3/DX600 S3 only) | A (ETERNUS DX100 S3/DX200 S3 only) |

*1: Performance information can be displayed only if the following conditions are satisfied:

- NAS Option is applied to the storage device.
- The firmware version is V10L21-0000 or later.

Note

- Do not simultaneously perform performance monitoring to a single device from multiple Management Server (administrative servers). The administrative server for Softek Storage Cruiser, the Management Server for ETERNUS SF Storage Cruiser, and the administrative server for Systemwalker Resource Coordinator are to be used for the performance monitoring.
- In order to prevent a discrepancy with the times shown on the performance graph due to a discrepancy in the internal clocks for the Management Server and the monitored device, it is recommended that you enable the NTP setting to the Management Server and the monitored device to synchronize the internal clocks.
- It is possible to reference performance information for the ETERNUS SF Storage Cruiser. However, there is some performance information which is not supported. Refer to the manual of Systemwalker Service Quality Coordinator for details.
- If the monitored device has been restarted while performance monitoring was in progress, you may be unable to acquire accurate performance data immediately after the restarting of the device. It is recommended that you first halt performance monitoring before performing any tasks which entail restarting the monitored device.
- Performance information about the ETERNUS Disk storage system main frame volume, MVV/SDV, and ODX Buffer Volume are not supported. The value for the performance information about the RAID Group containing SDV cannot be guaranteed. Performance information values for RAIDGroup, excluding Thin Provisioning and Flexible Tier, do not contain ODX Buffer Volume.
- Performance information of SAS ports and NAS ports, which are ETERNUS Disk storage system host interfaces, is not supported.
- Performance monitoring cannot be done for the ETERNUS Disk storage system which do not have LogicalVolume (LUN).
- Performance information for VE ports used by 10 GbE(XGE) ports is not supported, and the values in the displayed performance information are not guaranteed. It is recommended that 0 be set for the transfer rate for VE ports used by 10 GbE(XGE) ports, and that performance and threshold values should not be monitored. Refer to "[A.9 Explanation of Configuration Settings File](#)" for details on how to set this value.
- The CPU and ROE usage rates are displayed for the CM load (CPU usage) for ETERNUS DX400/DX400 S2 series and DX8000/DX8000 S2 series. For other ETERNUS Disk storage systems, the ROE usage rate is not displayed. Also, for ETERNUS Disk storage systems that do not have a ROE, the parity generation processing for RAID5, RAID6 and RAID6-FR, and encryption processing that would otherwise be performed by the ROE are performed by the CM and the CM-CPU.
- RDB performance information cannot be displayed in environments that use the REC Disk Buffered Consistency function.

7.1.2 Performance Graph Window Types

It is possible to display the following graphs.

One-hour Graph window

Based on the time selected as monitoring interval, a line graph for a one-hour period is displayed. For example, if the monitoring interval is 30 seconds, a line graph for a one-hour period with values obtained at an interval of 30 seconds is displayed.

One-day Graph window

Based on the mean values for 10-minute periods, a line graph for a one-day period is displayed.

One-week Graph window

Based on the mean values per hour, a line graph for a one-week period is displayed.

Information

- Following performance values are displayed as they are obtained from the device (not their mean values).
 - CM Copy remaining amount

- Number of active disks
- Power consumption
- Temperature
- If the summer time functionality of the operating system is enabled, a part of the graph that is supposed to show the data around the switch to summer time may not be displayed correctly.
- Each performance graph may not be able to be displayed at every monitoring interval, per 10-minutes and per 60-minutes, depending on the LAN traffic condition or network environment (e.g. the Management Server and target device of the performance monitoring exist in the different subnets).

7.1.3 Threshold Monitoring Types

Threshold monitoring is supported for Fibre Channel switch and ETERNUS Disk storage systems.

The threshold monitoring functionality sends an alarm or report when Fibre Channel switch or ETERNUS Disk storage systems performance value reaches a certain level (threshold value) under certain conditions in daily transaction operations.

The advantage of using the threshold monitoring is that the symptom of Fibre Channel switch or ETERNUS Disk storage systems performance drop caused by changes in data processing rates and transaction processing rates can be automatically and reliably detected in daily transaction operations.

The effect that can be expected from the threshold monitoring functionality is that operations in the most suitable environment are enabled. This is accomplished by preventing the adverse effect of performance drops through early detection of bottleneck locations, identification of their causes, and improvement of device configuration.

The threshold monitoring functionality can manage the following information: You can set multiple threshold values.

- Fibre Channel switch
 - Port throughput (%)

A port throughput value (MB/s) is monitored as the percentage (%) of an allowable tolerance to a maximum transfer capability (MB/s).
- ETERNUS Disk storage system
 - Response time (msec) of LogicalVolume (OLU)
 - Average use (busy) rate (%) of RAIDGroup (RLU, LUN_R)
 - CM load (CPU usage) rate (%)

Note

- The threshold monitoring function is always started when the Management Server is started, and the functionality starts threshold monitoring and obtaining performance information at the same time for a device for which performance management is specified. Accordingly, performance information is obtained and thresholds are monitored regardless of whether the Web Console is started or not. To end threshold monitoring, stop threshold monitoring from this software.
- For the CM load (CPU usage) rate, the ROE usage rate is not monitored.

7.2 Flow of Performance Management

When a user gives an instruction for performance management of a target device using the Web Console, the performance management unit for this product saves the device performance data for each device, and stores them as performance data to the Management Server. This performance data is displayed on a graph.

7.2.1 Checking Disk Space on Management Server

To conduct performance monitoring, sufficient disk space is required on the Management Server for performance data storage. Make sure that sufficient disk space is ensured referring to *ETERNUS SF Installation and Setup Guide*. This software is capable of deleting performance data overdue the specified holding period. The default is seven days and data exceeded this period are automatically deleted. This period can be modified. To change the number of days to store performance data refer to "7.5 Definition File".

7.2.2 Instruction for Performance Management

When performing performance management, configure and start the performance management by using the Web Console.

In ETERNUS Disk storage systems, enter the minimum and maximum values for the performance information securement target Logical Volume (LUN_V). Setting LogicalVolume can reduce the effect of obtaining performance information on disk areas where performance data is saved and reduce the load. Setting LogicalVolume prevents allocation of more space than necessary for Logical Volume. Consequently, the recommended entry for Logical Volume is the minimum value for obtaining performance data.

Operation by the specification of the scope of monitoring volumes is as follows:

- When "All" is selected for the scope of monitoring volumes:
The creation or deletion of volumes is detected and appropriate volumes are included in targets for performance management.

Note

- A monitoring interval is automatically changed with the number of volumes by the ETERNUS SF system. However, it will not be shorter than the monitoring interval specified when performance management was started. For the relationship between the number of volumes and the monitoring interval, refer to "7.2.3 Setting Monitoring Intervals".
Performance management stops temporarily while changing monitoring interval.
- When any volume has been created, it becomes a target volume whose performance information is obtained. Secure the disk space required for the Management Server.
- For the ETERNUS Disk storage systems shown below, the volumes existing in those systems when performance management is started are to be monitored. The volumes created or deleted after performance management has been started are not to be monitored.

| Device | Firmware Version |
|---|------------------|
| ETERNUS DX60/DX60 S2/DX80/DX90 ETERNUS DX400 series ETERNUS DX8000 series | All versions |
| ETERNUS DX S2 series (DX60 S2 excluded) | Less than V10L40 |

- When "Partial" is selected for the scope of monitoring volumes:
The volumes in the specified scope are targets for performance management. Even if any volume is created or deleted, it is not included in targets for performance management.
When including any created or deleted volume in targets for performance management, refer to "7.2.9 Updating Configuration Information" to update the configuration information.

In an environment using VMware vSphere Virtual Volumes, even if a VVOL metadata stored FTV, whose volume name is "\$VVOL_META", is included in the scope of monitored volumes, it is excluded from performance management. Also when specifying the scope of monitored volumes, the number larger than that of existing volumes cannot be specified except for the VVOL metadata stored FTV.

Information

Since performance information is obtained internally in units of 64 for Logical Volume, performance information in the neighboring area of the Logical Volume setting is also obtained.

For example, if a range of 70 to 80 is set for Logical Volume (LUN_V) on the screen, the information of Logical Volume between 64 and 127 is obtained internally.

After instructing it to start the performance management, the monitoring range which is displayed on the Web Console is not the value specified at the start time but the value converted to units of 64 for Logical Volume.

 **Point**

The maximum transfer rate for the Fibre Channel switch VE port is set as 1Gbps by default. If the FCIP trunking function or FCIP data compression function is enabled and a transfer rate of 1Gbps or more will occur for the VE port, then change the VE port transfer rate. Refer to "A.9 Explanation of Configuration Settings File" for details on how to set this value.

7.2.3 Setting Monitoring Intervals

Enter the interval at which performance information is secured in the ETERNUS Disk storage systems and Fibre Channel switch common settings. You can specify 5, 10, 30, 60, 300, or 600 seconds as the interval. However, intervals that can be specified vary depending on device models and the number of Logical Volumes indicating performance level being maintained.

| Monitoring Condition | | Specifiable Interval (Seconds) | | | | | |
|---|---|--------------------------------|-----|-----|-----|-----|-----|
| Device Model Name | Number of Logical Volumes Whose Performance Is Maintained | 5 | 10 | 30 | 60 | 300 | 600 |
| ETERNUS DX60/DX60 S2/DX80/DX90 | 128 or less | A | A | A | A | A | N/A |
| | 129 to 2,048 | N/A | N/A | A | A | A | N/A |
| | 2,049 or more | N/A | N/A | N/A | A | A | N/A |
| ETERNUS DX80 S2/DX90 S2 | No limitation | N/A | N/A | A | A | A | N/A |
| ETERNUS DX60 S3/DX100 S3/DX200 S3 ETERNUS DX200F | 1,472 or less | N/A | N/A | A | A | A | A |
| | 1,473 to 3,200 | N/A | N/A | N/A | A | A | A |
| | 3,201 or more | N/A | N/A | N/A | N/A | A | A |
| ETERNUS DX400 series ETERNUS DX8000 series | 256 or less | N/A | N/A | A | A | A | A |
| | 257 to 1,024 | N/A | N/A | N/A | A | A | A |
| | 1,025 to 8,192 | N/A | N/A | N/A | N/A | A | A |
| | 8,193 or more | N/A | N/A | N/A | N/A | N/A | A |
| ETERNUS DX400 S2 series ETERNUS DX8100 S2 | 1,024 or less | N/A | N/A | A | A | A | A |
| | 1,025 or more | N/A | N/A | N/A | A | A | A |
| ETERNUS DX500 S3/DX600 S3 | 1,024 or less | N/A | N/A | A | A | A | A |
| | 1,025 to 2,752 | N/A | N/A | N/A | A | A | A |
| | 2,753 to 11,072 | N/A | N/A | N/A | N/A | A | A |
| | 11,073 or more | N/A | N/A | N/A | N/A | N/A | A |
| ETERNUS DX8700 S2 | 1,024 or less | N/A | N/A | N/A | A | A | A |
| | 1,025 to 8,192 | N/A | N/A | N/A | N/A | A | A |
| | 8,193 to 16,384 | N/A | N/A | N/A | N/A | N/A | A |
| ETERNUS DX8000 S3 series | 3,200 or less | N/A | N/A | A | A | A | A |
| | 3,201 to 12,416 | N/A | N/A | N/A | A | A | A |
| | 12,417 or more | N/A | N/A | N/A | N/A | A | A |

| Monitoring Condition | | Specifiable Interval (Seconds) | | | | | |
|--|--|--------------------------------|----|----|----|-----|-----|
| Device Model Name | Number of LogicalVolumes Whose Performance Is Maintained | 5 | 10 | 30 | 60 | 300 | 600 |
| ETERNUS SN200 series Brocade series | - | A | A | A | A | N/A | N/A |

"A" indicates "Available", and "N/A" indicates "Not Available".

Point

In LAN traffic or cross-subnet (where there is a gateway between the performance monitoring target device and the Management Server) situations, it may not be possible to obtain the performance information inside the monitoring interval that was set. Please change the monitoring interval when you cannot acquire performance information on each monitoring interval.

Note

- The Fibre Channel switch and Fibre Channel switch blade as shown in the table below, set a monitoring interval according to the FC transfer rate. If this setting is incorrect, it might not be possible to obtain the correct performance value from the device.

| Device Model Name | Monitoring Interval | Transfer Rate |
|--|---------------------|---------------|
| ETERNUS SN200 series Fibre Channel switch | 5 seconds | 1-25Gbps |
| Brocade Fibre Channel switch (except for Brocade 6510, Brocade DCX8510-8/8510-4, and Brocade 6505) | 10 seconds | 1-12Gbps |
| | 30 seconds | 1-4Gbps |
| PRIMERGY Fibre Channel switch blade | 60 seconds | 1-2Gbps |

- On the performance information for the number of active disks, power consumption and temperature, the performance monitoring interval sets 60 seconds if its interval is set to shorter than 60 seconds.

Since the performance management unit is started as a daemon of the Management Server, the unit continues obtaining performance information while the Management Server is active, without starting the Web Console.

The logical configuration of the storage device is recognized, and the obtaining of performance information starts. At the start of obtaining performance information of the selected storage system, an amount of time (tens of seconds to several minutes) is spent to obtain the logical configuration before any performance information is actually obtained.

Performance monitoring status, description and action are described as follows:

| Performance Monitoring Status | Description | Action |
|-------------------------------|---|---|
| Monitoring | Shows that performance monitoring works normally. | No action is required. |
| Recovering | Shows that performance monitoring is in recovery state. | Management Server cannot communicate to devices. Check the network and device conditions. If logged on to the ETERNUS Web GUI, log off from it. |
| Error | Shows that performance monitoring is in error state. | It is possible that writing to performance information file failed. Check the write access to file and the file system capacity and then perform the following steps. Refer to " 7.2.10 Performance Data " for the location to store performance information file in: 1. Record the performance monitoring settings contents <Recorded settings contents> |

| Performance Monitoring Status | Description | Action |
|-------------------------------|-------------|--|
| | | <ul style="list-style-type: none"> - Interval before obtaining performance information (in seconds) - Performance monitoring targets (only for ETERNUS Disk storage system. Minimum LUN_V, Maximum LUN_V) <p>2. Stop performance monitoring</p> <p>Refer to "7.2.8 Instruction for Stopping Performance Management".</p> <p>3. Start performance monitoring based on the settings contents recorded in step 1</p> <p>Refer to "7.2.2 Instruction for Performance Management" and "7.2.3 Setting Monitoring Intervals".</p> <p>If despite of the above steps having been taken, any performance monitoring error is not resolved, internal error may be occurring. Contact Fujitsu Technical Support.</p> |

7.2.4 Displaying Performance Information of Selected Device

Confirm by displaying the graph using the Web Console.

In addition, the performance information can be output to the CSV format file by using the performance information operation command (storageadm perfdata).

7.2.5 Displaying Fibre Channel Switch Performance Information

Select a port whose performance information you want to display in graph.

7.2.6 Displaying Storage Performance Information

7.2.6.1 Displaying Logical Volume and RAID Group Performance Information

Select the number of LogicalVolume or RAID Group whose performance information you want to display in graph.



Note

Performance information about the ETERNUS Disk storage system main frame volume, MWV/SDV, and ODX Buffer Volume are not supported. The value for the performance information about the RAID Group containing SDV cannot be guaranteed. Performance information values for RAIDGroup, excluding Thin Provisioning and Flexible Tier, do not contain ODX Buffer Volume.

7.2.6.2 Displaying Disk (Physical Drive) Performance Information

Select the number of the disk whose performance information you want to display in graph.

7.2.6.3 Displaying CM Performance Information

Select the CM or CM CPU whose performance information you want to display in graph.

7.2.6.4 Displaying CA and CM Port Performance Information

Select the CA or CM Port from a list of ports whose performance information you want to display in graph.

7.2.6.5 Displaying Number of Active Disks, Power Consumption, and Temperature Performance Information

Select the performance information you want to display in graph.



When the specified ETERNUS Disk storage system has no Eco-mode function, the number of active disks, power consumption and temperature graph is not displayed. Refer to "[1.2.5 Energy-saving Operation for Storage Device](#)" for the ETERNUS Disk storage systems that have the Eco-mode function.

Before the displaying the performance information for the number of active disks, power consumption and temperature, it is necessary to upgrade to the firmware that supports the Eco-mode operation and change the composition of the device.

7.2.6.6 Displaying Performance Information of NAS Volume and NAS System

Select the performance information you want to display and display the graph.



If the ETERNUS Disk storage system does not support NAS functionality, performance information of NAS volumes and NAS systems is not displayed. Even if NAS functionality is supported, it is necessary to update to supported firmware (V10L21-0000 or later) and perform "[Required Setup Configuration](#)" in advance. In order to display performance information, after performing pre-configuration, it is necessary to perform "[Update Configuration Information](#)" and restart performance monitoring.

7.2.7 Examples of Use of Performance Management

If an I/O delay from the server node to a storage system occurs, the user can check for the cause in the storage system by using the methods described below. These are only examples, so all causes of I/O delays cannot be determined by use of these methods.

1. Identify the time when the I/O processing delay occurred and the access path where the delay occurred.
2. Use this software to check the Affinity Group number and Logical Volume number of the ETERNUS Disk storage system defined in the target access path.
3. Using performance management, display and check the target LogicalVolume performance values.
4. If a response of the LogicalVolume unit takes a long time, check RAID Group performance. If a response of RAID Group also takes a long time, find another Logical Volume belonging to RAID Group, and find the LUNs to which the Logical Volume is allocated. Check the I/O statuses of these Logical Volumes, and check for a heavy load on RAID Group. If there is a heavy load, move the appropriate LogicalVolume to another RAID Group, or take other appropriate action.

7.2.8 Instruction for Stopping Performance Management

Stop the performance management processing on the Web Console.

Refer to the following in the *ETERNUS SF Web Console Guide* for information on how to stop the processing:

- For storage devices
"Start/Change Settings of/Stop Performance Monitoring" in "Operations for Performance Management of Storage Device"
- For FC switches
"Start/Change Settings of/Stop Performance Monitoring" in "Operations for Performance Management of Network Device"

7.2.9 Updating Configuration Information

Device configuration information is independently maintained in the performance management functionality.

Point

- When "All" is specified for the scope of monitoring volumes when starting performance management, it is not required to change the information on device configuration using the procedure mentioned below.
Refer to "[7.2.2 Instruction for Performance Management](#)".
- If the scope of monitoring volumes has been changed, set the scope of monitoring volumes according to the change.

To change the device configuration, update the device configuration information that is maintained by the performance management functionality according to the procedure shown below. Also perform the update if the configuration for a device used to execute performance monitoring and threshold monitoring has been changed.

If the configuration for a device used to execute performance monitoring and threshold monitoring has been changed, the configuration information before the update is used for performance monitoring and threshold monitoring. Performance information and threshold monitoring, shown in the procedure below, cannot be guaranteed prior to the configuration information update.

<Configuration information update procedure>

1. Record the performance monitoring settings contents (if performance monitoring is used)

<Recorded settings contents>

- Range of Monitoring Volume No
- Minimum Monitoring Volume No (only for ETERNUS Disk storage system)
- Maximum Monitoring Volume No (only for ETERNUS Disk storage system)
- Monitoring Interval Time

2. Stop performance monitoring (if performance monitoring is used)

Refer to "[7.2.8 Instruction for Stopping Performance Management](#)".

3. Change the configuration of the supported device.

4. Start performance monitoring based on the settings contents recorded in step 1. (if performance monitoring is used).

<Setting contents>

- Range of Monitoring Volume No (when specifying Performance monitoring targets, select "Partial")
- Minimum Monitoring Volume No (only for ETERNUS Disk storage system)
- Maximum Monitoring Volume No (only for ETERNUS Disk storage system)
- Monitoring Interval Time
- Create Device Configuration File (Select "Yes")

Refer to "[7.2.2 Instruction for Performance Management](#)" and "[7.2.3 Setting Monitoring Intervals](#)".

7.2.10 Performance Data

Performance data is saved in CSV files in the following directory of the Management Server:

| Platform for Manager | Location |
|----------------------|---|
| Windows | \$TMP_DIR\Manager\var\opt\FJSVssmgr\current\perf (\$TMP_DIR means "Work Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /var/opt/FJSVssmgr/current/perf |

You can save these files by saving the entire directory as necessary, and you can display old information as necessary by recovering it in the same format.

However, the automatic deletion functionality operates in the performance data. When restoring, execute it after confirming days of the data retention duration. Refer to "A.4 perf.conf Parameter" for the data retention duration.



Example

Case of Solaris OS:

- Backup

```
# cd /var/opt/FJSVssmgr/current/perf/  
# tar -hcf - csv |compress -c > csv.backup.tar.Z
```

- Restore

```
# cd /var/opt/FJSVssmgr/current/perf/  
# uncompress -c /var/opt/FJSVssmgr/current/perf /csv.backup.tar.Z | tar -xvf -
```

7.3 Flow of Threshold Monitoring

When a user uses the Web Console to issue an instruction for threshold monitoring of the devices subject to performance management, this software then sequentially analyzes the performance data.

If a problem is detected from the performance information, it is displayed as an alarm in the Threshold Monitoring Alarms.



Information

When a problem is displayed as an alarm in the Threshold Monitoring Alarms, the event level is shown as [Warning].

7.3.1 Checking Disk Space on Management Server

To monitor thresholds, disk capacity is required for the Management Server. About 4 MB is required. Make sure that the server has sufficient disk space.

7.3.2 Instruction for Threshold Management

Enable the threshold monitoring on the target device. Then you can set the threshold monitoring condition. To do so, however, performance information of the device must have already been obtained by performance management.

7.3.3 Setting Threshold Monitoring Hours

Setting the threshold monitoring hours enables to set a time period for threshold monitoring. If no time period is set, thresholds are monitored and alarms are reported for all time periods.

7.3.4 Setting Threshold Monitoring Information

Define threshold setting information of the target device, and issue an instruction to start monitoring. You can set multiple thresholds setting information on each device. Incidentally, since the threshold monitoring unit is started as a daemon of the Management Server along with the performance management unit, the threshold monitoring unit continues threshold monitoring while the Management Server is active, regardless of the access from the Web Console.



Note

For the CM load (CPU usage) rate, the ROE usage rate is not monitored.

7.3.5 Instruction for Stopping Threshold Monitoring

Stop threshold monitoring for the target device. The Management Server continues to secure performance data from the device, but monitoring of the threshold is halted.

7.4 Evaluation Criteria for Thresholds in Threshold Monitoring

Storage Thresholds

Standard storage thresholds are listed below.

| | Online Response-oriented System | Batch Throughput-oriented System |
|------------------------|---------------------------------|----------------------------------|
| LogicalVolume Response | 30 ms or less | - |
| RAIDGroup Busy Rate | 60% or less | 80% or less |
| CM Busy Rate | 80% or less | 90% or less |

For a response-oriented system such as for online applications, implementing LogicalVolume responses within 30 ms is a standard for stress-free storage operation. To implement responses within 30 ms, suppress the RAIDGroup busy rate to 60% or less and the CM busy rate to 80% or less.

In a throughput-oriented system such as for batch applications, LogicalVolume responses are extended to a few milliseconds because sequential access increases the cache hit ratios. However, the cache hit ratios are greatly affected by application access and the values change a great deal. As a result, responses may vary from a few milliseconds to 50 ms or more. Thus, for batch applications, there is no standard threshold for LogicalVolume responses.

To improve throughputs for batch applications, users must optimize the use of storage resources. Note, however, that performance may deteriorate rapidly if the above threshold is exceeded. For this reason, make it a standard to suppress the RAIDGroup busy rate to 80% or less and the CM busy rate to 90% or less.

During hours in which advanced copy is processing, advanced copy processing itself increases the CM busy rate. For this case, set thresholds in consideration of execution of advanced copy.

Thresholds of Switch Ports

The threshold and lower limit value vary depending on the type of applicable switch (1 Gbps, 2 Gbps etc). When the switch type is 1 Gbps, the maximum value (100% use rate) is 100 MBps. When the switch type is 2 Gbps, the maximum value is 200 MBps. For the threshold, specify the allowable utilization (%) corresponding to the maximum value.

For instance, when 90% is specified for the threshold of a 2 Gbps type switch, the threshold of the throughput is:
 $200 \text{ MBps} \times 90\% = 180 \text{ MBps}$ (total of reception and transmission)

An alarm is given when the throughput reaches 180 MBps.

Switch port threshold monitoring is effective when there is a difference in the numbers of paths between the server and storage.

Figure A Application + backup system


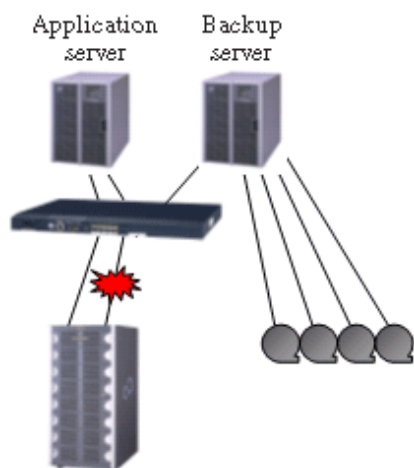


Figure B Cluster system (example: Oracle RAC)

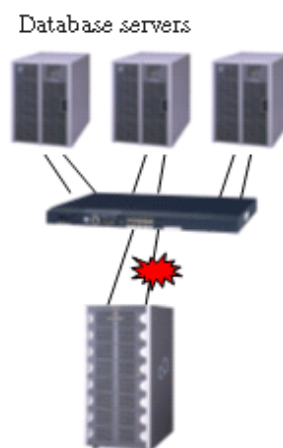

7.5 Definition File

The following items for performance management can be set up in perf.conf file.

- The number of days to retain performance data
- The number of generations of log files (perflog.*)
- Whether to use the performance management for the number of active disks, power consumption and temperature
- Whether to use the performance management for iSCSI port



See

Refer to "A.4 perf.conf Parameter" for the settings.

7.6 Examples of Threshold Monitoring

This section provides an overview of threshold monitoring in the form of key examples to enable users to determine what situations require thresholds and the types of thresholds that should be set for them.


Case 1: Online Application System of Company A

Material - System Operation Standard and Performance Requirements (Excerpt)

1. Online application service hours: 8:00 to 18:00 everyday.
2. Online application busy hours: 12:00 to 15:00 everyday.
3. This system requires that operator terminal operation be stress-free even with workload during the busy hours. Therefore, the target performance of I/O response shall be "30 msec or less," which is a general standard. The target I/O response performance in hours other than the busy hours shall be "10 msec or less," one third of 30 msec, according to the workload proportion (the workload in the busy hours is about three times higher than that in other hours).
4. During the busy hours, processing for data reference, updating, and addition may occur concurrently and continue for up to 60 minutes.
If a state in which an I/O response taking 30 msec or more occurs for a period equivalent to 10% (6 minutes) of the said continuous execution, operation at the operator terminal may undergo stress. Therefore, make the settings so that an alarm log will be displayed when such state occurs.

5. If I/O responses during the busy hours come down to 10 msec or less, the same as the performance target in other hours, the I/O response delays that occurred previously shall be deemed as instantaneous symptoms. Therefore, an alarm log need not be displayed when this state occurs.
6. The alarm log need not be displayed every time but can be displayed only once a day.

Figure 7.1 Illustration of Operational Status of Company A's Online Application System (Transition of LogicalVolume Responses)

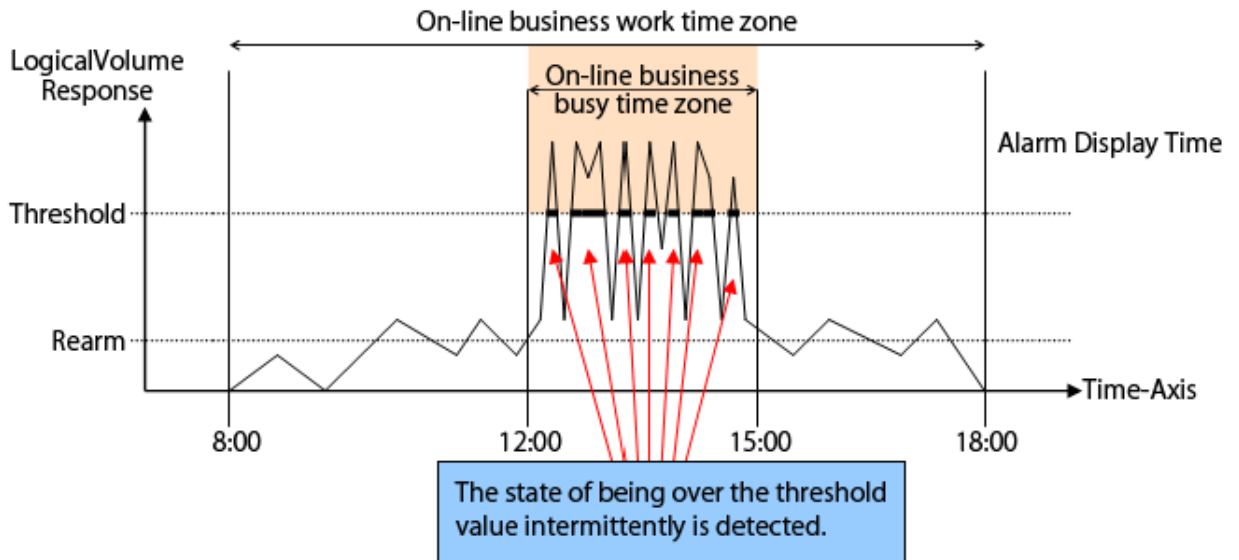

Example of Threshold Monitoring Setting for Company A's Online Application System

Table 7.1 "Time Setting" Threshold Monitoring Time

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|---------------|---------|
| 1 | Starting time | 8:00 |
| 1 | Shutdown time | 18:00 |

Table 7.2 "Time Setting" Alarm Display Time

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|---------------|------------|
| 1 | Starting time | 12:00 |
| 1 | Shutdown time | 15:00 |
| 5 | Frequency | Day by Day |

Table 7.3 "Volume Configuration" Threshold Monitoring Information


| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|-------------------------------|------------|
| 2 | Threshold | 30msec |
| 4 | Lower limit | 10msec |
| 5 | Alarm Tolerance Level | Total Time |
| 5 | Alarm Tolerance Time | 360sec |
| 5 | Threshold monitoring Interval | 60min |

Case 2: Online Shopping System of Company B

Material - System Operation Standard and Performance Requirements (Excerpt)

1. Online application service hours: 24 hours a day for 365 days a year.
2. Online application busy hours: Cannot be specified.
3. This system features that the number of accesses gradually increases as the number of member customers increases after start of the production run. It is assumed that the load on storage will also increase gradually. Measures need to be taken when the busy rate of storage resources (CM and disk) comes over 60% to 80%.
4. This system executes credit card transactions every 5 minutes. Therefore, for five minutes immediately before each transaction, product retrieval and order processing must be executed without stress. If the storage resource is kept in busy state (a state in which the busy rate exceeds 60% to 80%) for five minutes, transactions may be affected. Therefore, make settings so that an alarm log will be displayed when such state occurs.
5. Alarm log shall be displayed every time.

Figure 7.2 Illustration of Operational Status of Company B's Online Shopping System (Transition of CM Busy Rate)

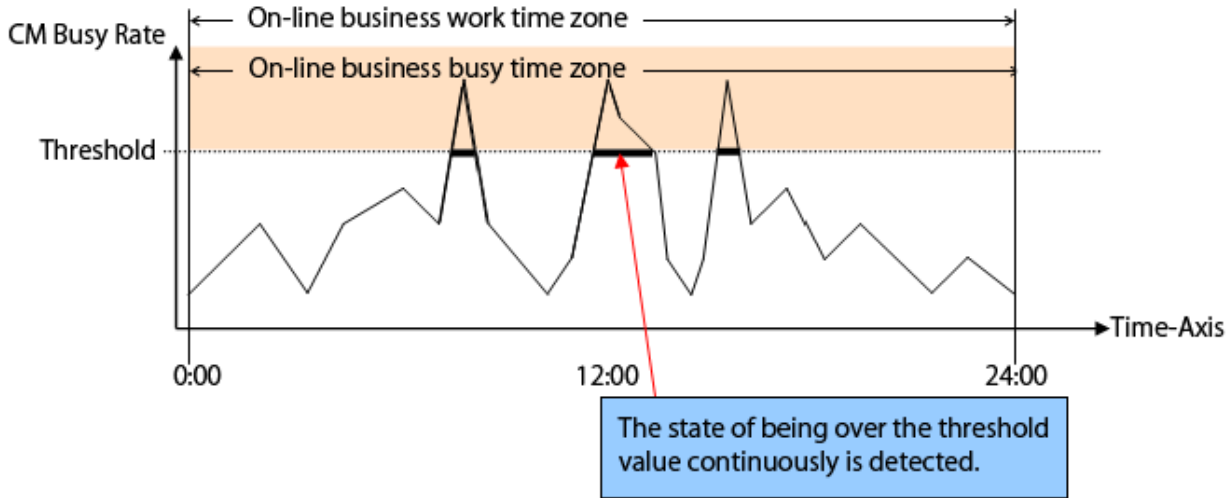

Example of Threshold Monitoring Setting for Company B's Online Shopping System

Table 7.4 "Time Setting" Threshold Monitoring Time

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|---------------|---------|
| 1 | Starting time | 0:00 |
| 1 | Shutdown time | 24:00 |

Table 7.5 "Time Setting" Alarm Display Time

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|---------------|---------|
| 1 | Starting time | 0:00 |
| 1 | Shutdown time | 24:00 |
| 4 | Frequency | All |

Table 7.6 "CM Configuration" Threshold Monitoring Information

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|-----------------------|-----------------|
| 2 | Threshold | 60% |
| 3 | Alarm Tolerance Level | Continuous Time |
| 3 | Alarm Tolerance Time | 300sec |

Table 7.7 "RAID Group Configuration" Threshold Monitoring Information


| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|-----------------------|-----------------|
| 2 | Threshold | 80% |
| 3 | Alarm Tolerance Level | Continuous Time |
| 3 | Alarm Tolerance Time | 300sec |

Case 3: Batch Processing with Multiple Database Servers (Clustered System) of Company C

Material - System Operation Standard and Performance Requirements

1. System service hours: 24 hours a day, 365 days a year.
2. Batch processing hours: 20:00 to 23:00 every night.
3. This clustered system is an Oracle RAC system consisting of three nodes. There is no problem with the batch processing performance because the amount of processed data is currently small. As the amount of data increases in the future, however, we have concerns over bottlenecks in the performance of FC path transfer between the FC switch and storage. If an FC path bottleneck occurs, it must be eliminated quickly.
4. Assume the state in which the port throughput reaches about 80% of the maximum transfer capability as an FC path bottleneck, and make settings so that an alarm log is displayed when such state continues for 30 minutes or more.
5. Alarm log need not be displayed every time but can be displayed only once even in the batch processing hours.

Figure 7.3 Illustration of Batch Processing with Multiple Database Servers (Clustered System) at Company C (Transition of Port Throughputs)

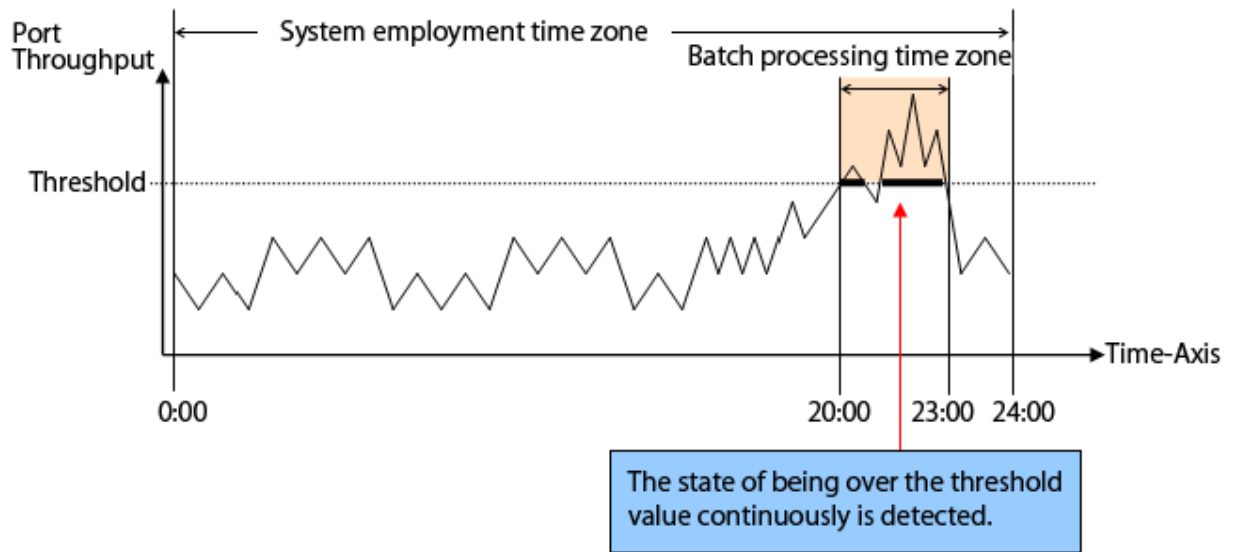

Example of Threshold Monitoring Setting for Business System Backup Operation at Company C

Table 7.8 "Time Setting" Threshold Monitoring Time

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|---------------|---------|
| 1 | Starting time | 0:00 |
| 1 | Shutdown time | 24:00 |

Table 7.9 "Time Setting" Alarm Display Time

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|---------------|---------|
| 1 | Starting time | 20:00 |

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|---------------|---------|
| 1 | Shutdown time | 23:00 |
| 4 | Frequency | All |

Table 7.10 "Port Configuration" Threshold Monitoring Information

| Number Corresponding to Material | Setting Item | Setting |
|----------------------------------|-----------------------|-----------------|
| 2 | Threshold | 80% |
| 3 | Alarm Tolerance Level | Continuous Time |
| 3 | Alarm Tolerance Time | 1800sec |


Chapter 8 Reporting Function

This chapter describes the Reporting function.

8.1 Overview

The Reporting function creates a report containing information required for charging.

The overview of the Reporting function is as follows:

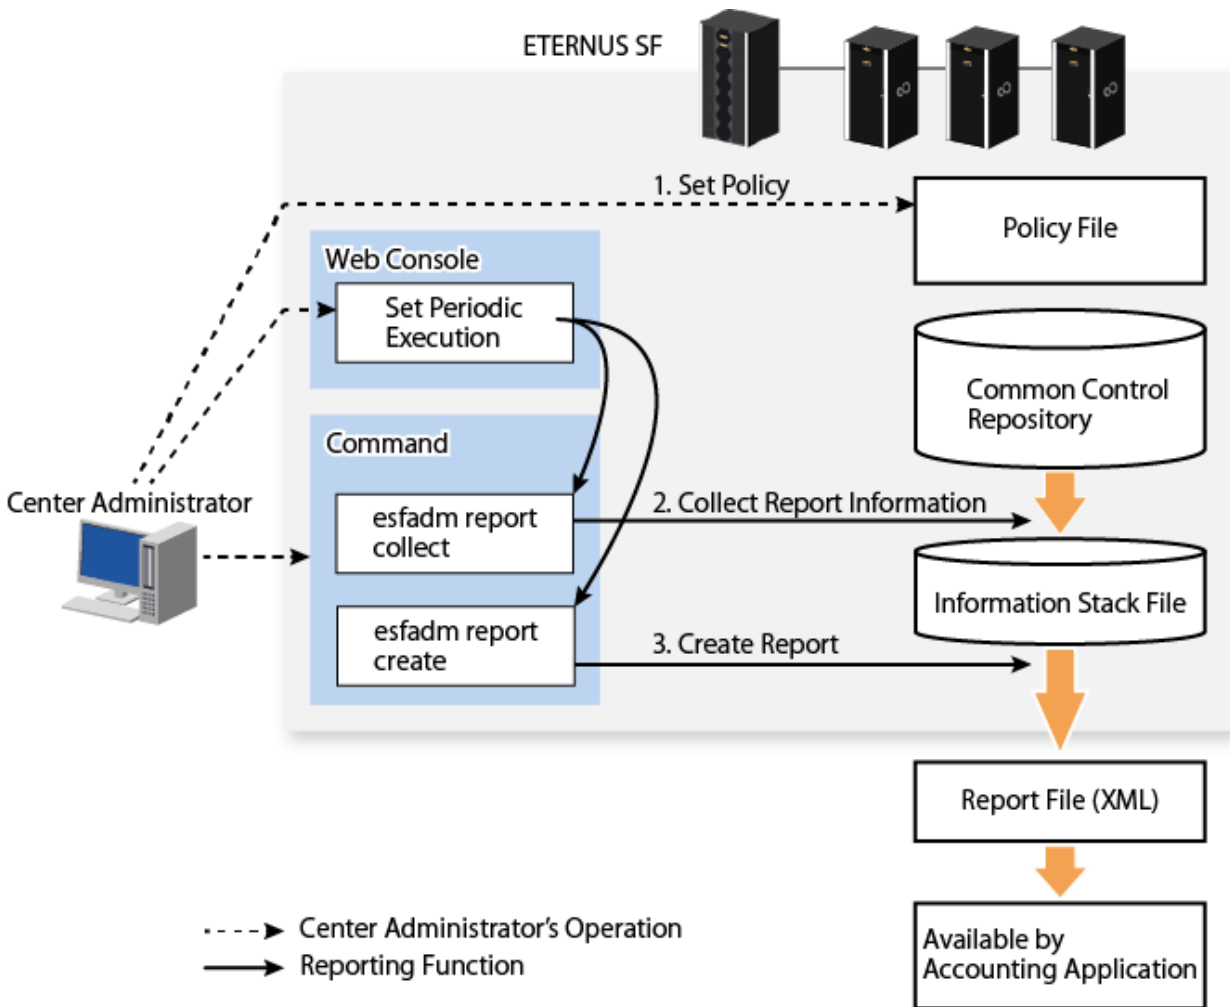

| Item | Description |
|---------------------------|--|
| Common Control Repository | Database that stores device configuration information managed by ETERNUS SF system |
| Report Information | Required information for charging (configuration information related to volumes) |
| Information Stack File | File that accumulates report information |
| Policy File | Configuration file for activities of the Reporting function |
| Report File | File that has output report information |
| Accounting Application | Application to make an invoice from a report file (made by the center administrator) |

1. Set Policy

Set up a policy file for activities of the Reporting function.

2. [Collect Report Information](#)

Use the report information collection command to store report information in the information stack file from the common control repository.

3. [Create Report](#)

Use the report creation command to tally up report information in the information stack file based on the policy file and create a report file.

8.1.1 Set Policy

Overview

Set up requirements for the Reporting function in the file. They are handled as one policy in the system.

Policy File

This is loaded when the report creation command is run. The setting item is as follows:

- Data retention period of report information



Refer to "[8.3.2.2 Setup Policy](#)" for policy setup.

Refer to "[A.11 policy.conf Parameter](#)" for parameters about policy setup.

8.1.2 Collect Report Information

Overview

Running the `esfadm report collect` command to collect report information accumulates in the information stack file the report information stored in the common control repository.



Refer to "[Setup from Web Console](#)" in "[8.3.2.3 Setup Periodic Command Execution](#)" for information on how to activate the Reporting function.

Information to Be Collected

Collect configuration information for volumes connected to servers.

Target for Which to Collect Information

The target for which to collect information is a volume that meets all of the following conditions:

- Volume is on a supported storage device registered to ETERNUS SF system.
(Refer to "[8.2 Supported Device](#)" for details.)
- Volume connected to a server registered to ETERNUS SF system.
("Connected to a server" indicates that access path is set up and server HBA is registered to ETERNUS SF system. Hereafter, this status is described as "connected to server".)
- Volume is on a storage system for which the Reporting function is set to "Activate" from the Web Console.



For a volume connected to sever, note the following points:

- Whether the volume is targeted for reporting is determined by access path definition. For this reason, server usage and connection/disconnection between server and storage are not considered.
 - Virtual server guest is not supported.
-

8.1.3 Create Report

Overview

Running the `esfadm report create` command to create a report obtains the report information within the period specified by the command, from the information stack file and creates a report file.

The report file can be viewed in the Web browser. If it is viewed in the Web browser, diverse information in the report can be viewed in colored tabular form.



Refer to "Setup from Web Console" in "8.3.2.3 Setup Periodic Command Execution" for information on how to activate the Reporting function.

If the `esfadm report create` command is periodically run, the created report files are stored at the location shown below. The storage location cannot be changed:

- Storage directory

Windows environment: `$INS_DIR\Common\var\report\auto`

(\$INS_DIR is an install directory.)

Solaris/Linux environment: `/var/opt/FJSVesfcm/report/auto`

- File name

`esfreport_auto_month_YYYYMMDDhhmmss.xml`

(YYYYMMDDhhmmss is command executed date and time and local time of ETERNUS SF system.)

Up to 12 report files created by running the `esfadm report create` command are save. When 12 files already exist, the oldest file is automatically deleted when the `esfadm report create` command is run.



If you want to save a report file, back it up before the old files are automatically deleted.

Report File Information

Created report files can be viewed by users with administrator privileges on the server operating system.

The output information and the HTML example of an XML file in the Web browser are as follows:

Server: name=194_30 os=Windows2008 IP-Address=

| DiskArray : | | | |
|--------------|------------|-------|----------------------------|
| name | SerialNo | BusID | ec |
| IB4601309022 | 4691908022 | | 1.3.6.1.4.1.201.1.21.1.150 |

| Volume : | | | | | | | | | |
|------------|--------|--------------------------|--------------------------|------|----------|------------|-----------|---------------------|---------------------|
| name | number | Allocation(start) | Allocation(end) | type | capacity | encryption | multiPath | connectServerNumber | concatenationNumber |
| SDV_Volume | 2896 | 2013-09-13T10:53:00+0900 | 2013-09-13T12:03:00+0900 | SDV | 1024 | No | 1 | 1 | - |

| RAIDGroup : | | | | | | | | |
|-------------|--------|------------------|--------|-----------------|------------|----------|-------|--|
| name | number | type | Disk | | | | | |
| | | | number | enclosureNumber | slotNumber | diskType | speed | |
| RAID_GP_0 | 7 | Striping (RAID0) | 12 | 0x00 | 12 | SAS | 10000 | |
| | | | 13 | 0x00 | 13 | SAS | 10000 | |

| Volume : | | | | | | | | | |
|------------|--------|--------------------------|--------------------------|------|----------|------------|-----------|---------------------|---------------------|
| name | number | Allocation(start) | Allocation(end) | type | capacity | encryption | multiPath | connectServerNumber | concatenationNumber |
| TPP_Volume | 1 | 2013-09-13T12:02:35+0900 | 2013-09-13T12:03:00+0900 | TPV | 5120 | No | 1 | 1 | - |

| ThinProvisioningPool : | |
|------------------------|--------|
| name | number |
| TPP_1 | 3 |

| RAIDGroup : | | | | | | | | |
|-------------|--------|-------------------|--------|-----------------|------------|----------|-------|--|
| name | number | type | Disk | | | | | |
| | | | number | enclosureNumber | slotNumber | diskType | speed | |
| RAID_GP_1 | 0 | Mirroring (RAID1) | 1 | 0x00 | 1 | SAS | 10000 | |
| | | | 257 | 0x01 | 1 | SAS | 10000 | |

| Volume : | | | | | | | | | |
|------------|--------|--------------------------|--------------------------|------|----------|------------|-----------|---------------------|---------------------|
| name | number | Allocation(start) | Allocation(end) | type | capacity | encryption | multiPath | connectServerNumber | concatenationNumber |
| FTV_Volume | 150 | 2013-09-13T10:53:00+0900 | 2013-09-13T11:42:00+0900 | FTV | 204800 | No | 1 | 1 | - |

| TierPool : | |
|------------|--------|
| name | number |
| TIER_1 | 0 |

| SubPool : | | |
|-------------|--------|-------|
| name | number | level |
| FTSP_NAME#0 | 0 | Low |

| RAIDGroup : | | | | | | | | |
|---------------|--------|-------------------|--------|-----------------|------------|----------|-------|--|
| name | number | type | Disk | | | | | |
| | | | number | enclosureNumber | slotNumber | diskType | speed | |
| FTSP_NAME#0_0 | 2 | Mirroring (RAID1) | 23 | 0x00 | 23 | SAS | 7200 | |
| | | | 279 | 0x01 | 23 | SAS | 7200 | |

| SubPool : | | |
|-------------|--------|--------|
| name | number | level |
| FTSP_NAME#1 | 1 | Middle |

| RAIDGroup : | | | | | | | | |
|---------------|--------|-------------------|--------|-----------------|------------|----------|-------|--|
| name | number | type | Disk | | | | | |
| | | | number | enclosureNumber | slotNumber | diskType | speed | |
| FTSP_NAME#1_0 | 3 | Mirroring (RAID1) | 0 | 0x00 | 0 | SAS | 10000 | |
| | | | 256 | 0x01 | 0 | SAS | 10000 | |

| SubPool : | | |
|-------------|--------|-------|
| name | number | level |
| FTSP_NAME#2 | 2 | High |

| RAIDGroup : | | | | | | | | |
|---------------|--------|-------------------|--------|-----------------|------------|----------|-------|--|
| name | number | type | Disk | | | | | |
| | | | number | enclosureNumber | slotNumber | diskType | speed | |
| FTSP_NAME#2_0 | 4 | Mirroring (RAID1) | 12 | 0x00 | 12 | SSD | - | |
| | | | 268 | 0x01 | 12 | SSD | - | |

The character encoding of XML files is output in UTF-8 format.
(On Windows, the destination directory privileges are inherited.)

Target

The report creation command creates a report file from the report information in the information stack file. For volumes that meet all of the following conditions, a report is created:

- Data accumulated in the information stack file
- Volume exited within the period specified by the report creation command

The number of volumes connected to the servers registered to ETERNUS SF system is output into the report information. The unit price charged per target is determined by the center administrator.

8.2 Supported Device


The devices for which the Reporting function is supported are as follows:

| Device | Firmware Version |
|---|------------------|
| ETERNUS DX S2 series (DX60 S2 excluded) | V10L40 or later |
| ETERNUS DX S3 series | All versions |
| ETERNUS DX200F | All Versions |

8.3 Operation

Using the Reporting function center users can be charged according to his (her) usage. To use the Reporting function, preparation is required in accordance with the operational environment. This section describes specific uses of the Reporting function including design, setup, operation and maintenance to charge fees.

The flow for creating an invoice is as follows:

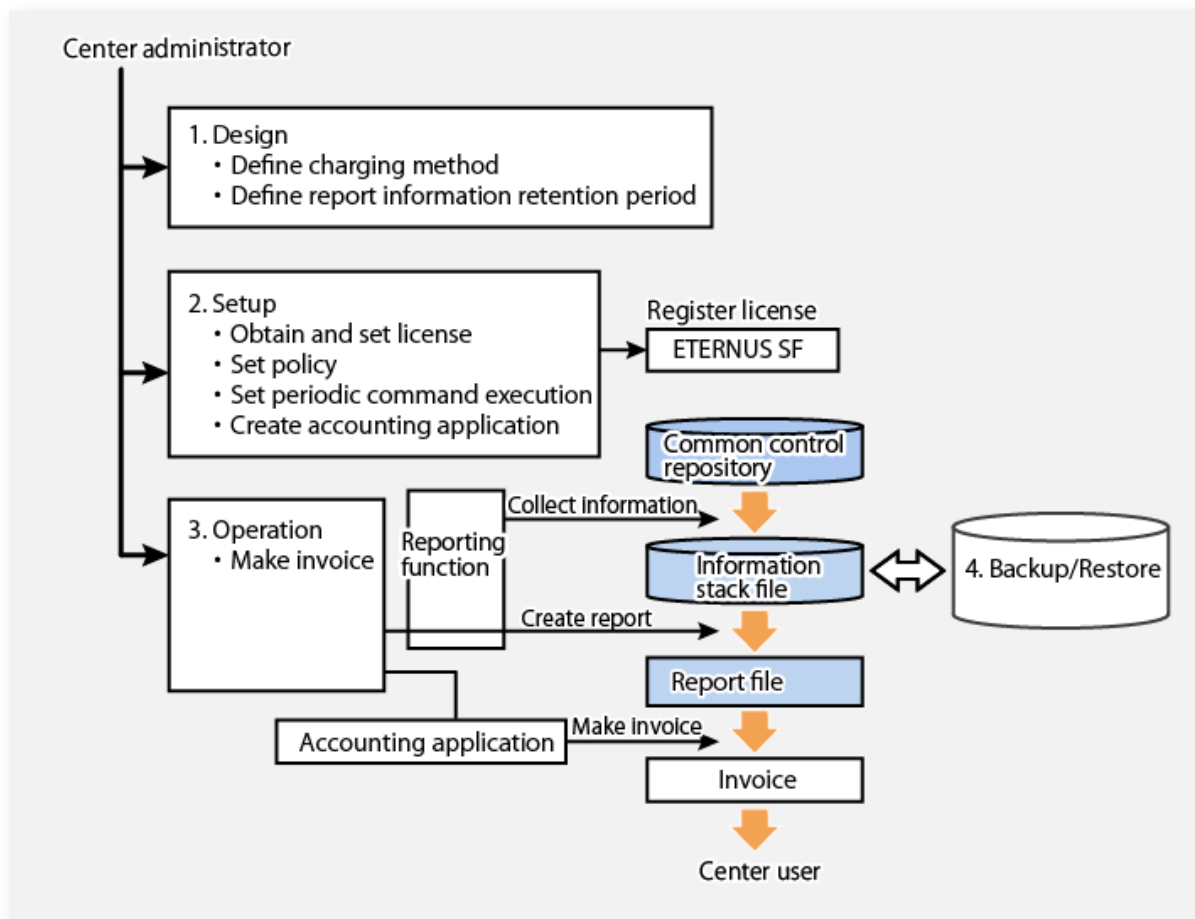

1. Design

Define charging method and report information retention period.

2. Setup

The content of setup is as follows:

- Register the ETERNUS SF Storage Cruiser Standard Edition license.
- Set up a policy file based on the report information retention period.
- Activate periodic command execution in the Web Console so that report information can be collected and a report can be created, periodically.
Refer to "[Setup from Web Console](#)" in "[8.3.2.3 Setup Periodic Command Execution](#)" for information on how to activate the Reporting function.
- Create an accounting application.

3. Operation

Make an invoice using an accounting application based on a monthly created report.

4. Backup/Restore

Back up the information stack file periodically as required.

8.3.1 Design

8.3.1.1 Define Charging Method

For assistance in defining a charging method, the following example cases are provided. Based on the following requirements, do various settings of the Reporting function and create an accounting application:

- Range of charged servers
 - Charge a fee per server and send an invoice.
 - Charge a fee per group of multiple servers and send an invoice.
- Unit of charged time
 - Charge a fee per hour.
 - Charge a fee on a daily basis.
- How to calculate fees
 - Set a unit price per volume capacity to calculate fees based on allocation and usage period.
 - Set extra/reduced fees based on volume additional information.
- When and for which period to make an invoice
 - Charge usage fee for the previous week at 3:00 AM every Monday.
 - Charge usage fee for the previous month on the 10th of each month.
- How to deliver the invoice to the center user
 - Send usage fee to the user by E-mail.
 - Print out the invoice to send to the user by post.
- What to do if collecting charging information or making an invoice fails
 - Sound an alarm using the buzzer.
 - Send a notification E-mail to the center administrator.

8.3.1.2 Concept of Volume Allocation Period


Concept of Volume Allocation Period

Since the Reporting function calculates a volume allocation period from periodically collected information, the actual volume allocation period allocated by the center user is different from that recognized by the Reporting function. Basically, an allocation period for one volume is a period from when volume is connected to server to when volume is disconnected from server. However, if the configuration information for a volume connected to server has been changed, the volume is handled as a new volume. In this case, two volumes are output ("Volume configuration information is changed" indicates that any element other than the Header information written in ["Table 8.2 Attributes Maintained by Elements"](#) has been changed). The output on a per volume configuration basis makes it possible to charge fees in accordance with the volume configuration.

The start/end date and time of using a volume allocation period recognized by the Reporting function is defined as follows:

- Start date and time of use
Date and time when the report information collection command was run after server connection or configuration information for volume connected to server has been changed.
- End date and time of use
Date and time when the report information collection command was run after server disconnection or volume configuration information has been changed.

The following is an example of running the report information collection command per day:

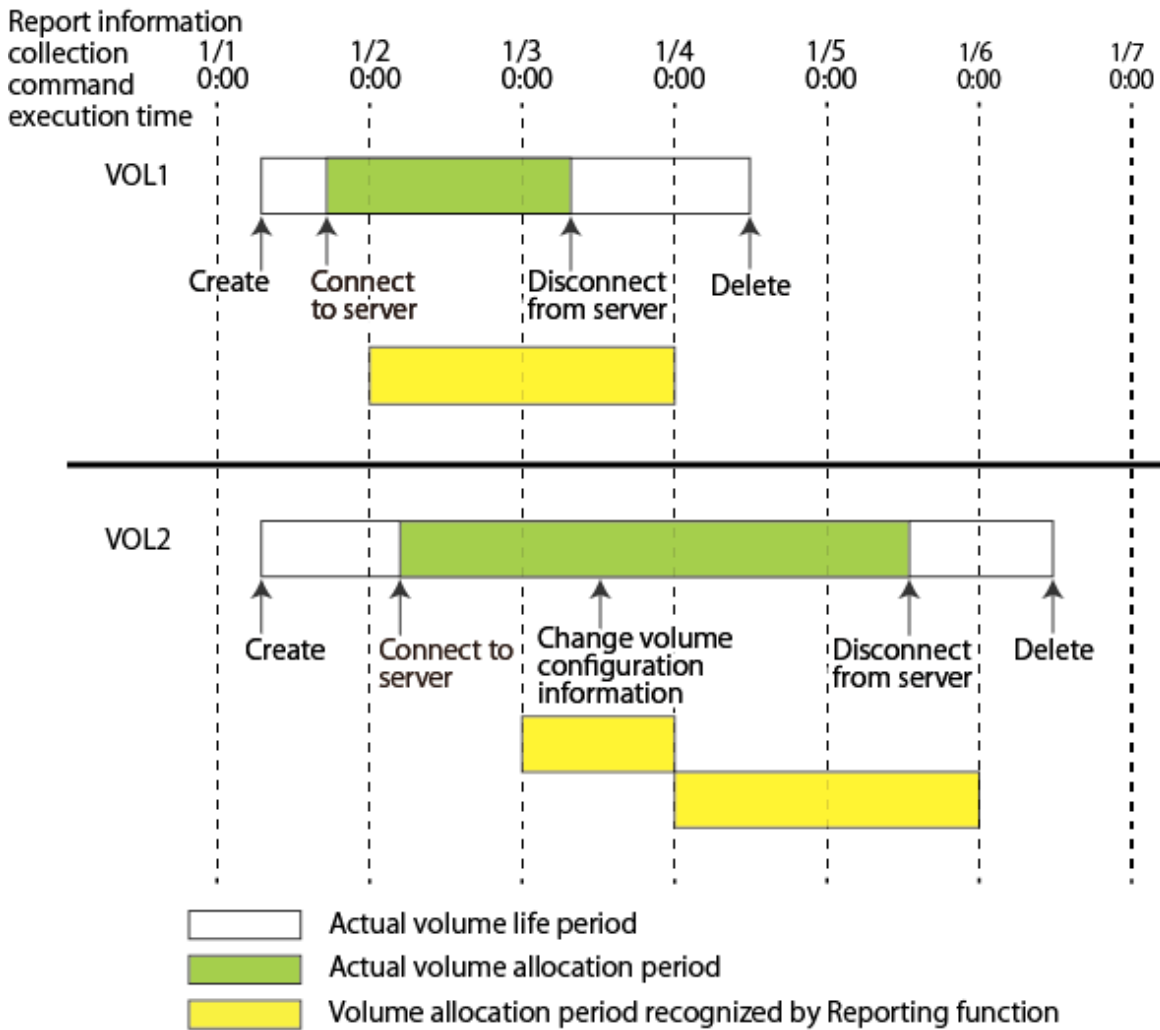

The volume allocation period recognized by the Reporting function is as follows:

- VOL1
0:00 of 1/2 to 0:00 of 1/4 (2 days in all)
- VOL2
0:00 of 1/3 to 0:00 of 1/4, and 0:00 of 1/4 to 0:00 of 1/6 (3 days in all)


Since in this example a collection interval is set to one day, a maximum of 23 hours and 59 minutes of error is caused. The relation between information collection interval and error is as shown in "Table 8.1 Influence Rate by Information Collection Interval and Collected Information Amount".

Table 8.1 Influence Rate by Information Collection Interval and Collected Information Amount

| Information Collection Interval | Accumulated Information Amount | Time Lag Reflected in Report Information |
|---------------------------------|--------------------------------|--|
| Long | Little | Large |
| Short | Large | Small |

Concept of Volume Allocation within Report Output Period

Report information is output in the report file based on the volume allocation period recognized by the Reporting function within a report output period. The point where the report output period specified by the user when creating a report overlaps the volume allocation period recognized by the Reporting function is a volume allocation period output into the report file.

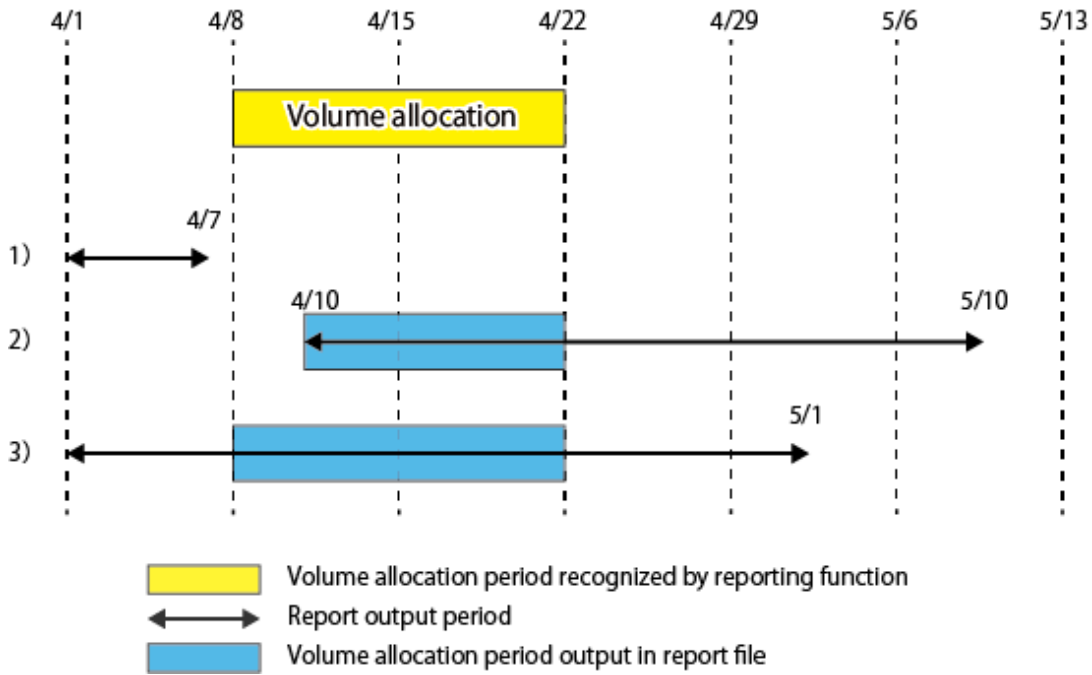

The volume allocation period recognized by the Reporting function is 4/8 to 4/22. In the following report output period, a volume allocation period output in the report file is as follows:

| No. | Report Output Period | Volume Allocation Period Output in Report File | Remark |
|-----|----------------------|--|--|
| 1) | 4/1-4/7 | None | Report output period is out of volume allocation period. |
| 2) | 4/10-5/10 | 4/10-4/22 | - |
| 3) | 4/1-5/1 | 4/8-4/22 | - |

8.3.1.3 Define Report Information Retention Period

The report creation command removes the old information exceeding the period preset by the policy from the information stack file.

First, define how long to retain report information. A report information retention period is defined based on the following factors:

- Possible restrictions from the purpose of use
 - Retention period by internal control
 - Backup interval of information stack file
 - Interval of creating a report
 - Interval of collecting information, etc.
- Quotation of the information stack file capacity based on the configuration of an assumed storage system

Refer to the *ETERNUS SF Installation and Setup Guide* for information on estimating the information stack file capacity.

The defined retention period is enabled by being set in the policy file.



See

Refer to "8.3.2.2 Setup Policy" for information on how to set a retention period.



Note

The report information is deleted based on the retention period set in the policy file when the report creation command is run. For this reason, if the report creation command is not run even though the report information in the information stack file exceeds the retention period, the report information is not deleted.

8.3.2 Setup

8.3.2.1 Obtain and Setup License

To use the Reporting function, the ETERNUS SF Storage Cruiser Standard Edition license is required.

For the ETERNUS Disk storage system to which the above license is not registered, reporting is not available. If the license is not registered for the ETERNUS Disk storage system and reporting is desired, register the license.



Information

The required license for ETERNUS Disk storage system is checked when the report information collection command is run. For this reason, even if the license is deleted while in use, already collected information is output in the report.

8.3.2.2 Setup Policy

Specify the report information retention period in the information stack file by setting up a policy.



See

Refer to "[A.11 policy.conf Parameter](#)" for information on how to set up a policy.

8.3.2.3 Setup Periodic Command Execution

Setup from Web Console

Select Storage from the Web Console to activate the Reporting function.

Periodic command execution of the Reporting function can be started and stopped on a per storage basis. Enabling the Reporting function runs the report information collection command at the 5th minute of every hour and the report creation command at 6:30 AM on the 1st of every month periodically. The period of the report made by periodic command execution is one month from 0:00 of the 1st of the previous month to 0:00 of the 1st of the month.

Set Up Periodic Command Execution by Creating Unique Application

If you want to run the report creation command with more detailed settings than the command execution interval set up from the Web Console, perform the following operations:

- Use the operating system periodic execution function
- Create an application to periodically invoke the report creation command



Note

For report period information specified for option of the report creation command, specify a proper value every time.

8.3.2.4 Create Accounting Application

A general charging method devised by the Reporting function is to charge usage fees for volumes used by servers within a report output period, which is calculated on a per server basis.

Server administrator privileges are required to view the report file.

The calculation formula for fees charged for volumes is as follows:

```
Fees charged for volume = Unit price (a) * Volume allocation (b) * Volume allocation time (c)
```

The following is an example of unit price per RAID level:

| RAID Level | Unit Price per MB and per Hour |
|------------|--------------------------------|
| RAID0 | 1 dollar |
| RAID1 | 2 dollars |
| RAID1+0 | 3 dollars |
| RAID5 | 4 dollars |
| RAID6 | 5 dollars |
| RAID5+0 | 6 dollars |

```
Fees charged for server = Sum of fees charged per volume
```

- The report file configuration output by the Reporting function is as follows:

```
Server information
  ETERNUS Disk storage system information
    Allocated volume information
      Information for volume (disk type, RAID level, etc.)
    Allocated volume information
  ...
  ETERNUS Disk storage system information
  ...
Server information
...
```

To calculate fees charged for volumes allocated per server, for example, create an accounting application to perform the following processing (element name in the brackets):

```
foreach <server information (Servers)> {
  Fee charged for server = 0
  foreach <ETERNUS Disk storage system information (DiskArrays)> {
    foreach <allocated volume information (Volumes)> {
      Obtain type of RAID group from RAID information (RAIDGroup).
      Get unit price from fee sheet according to obtained RAID group type. ... a
      Obtain volume allocation (capacity) from volume information (Volume). ... b
      Obtain volume allocation time (difference between end and start) from volume allocation
      information (Allocation). ... c
      Fee charged for allocated volume = a * b * c
      Fee charged for server += Fee charged for allocated volume }
    }
  }
  Output the fee charged for server
}
```

Example

Calculate fees charged for server (charged for volume 1 and volume 2).

The conditions per volume are as follows:

- Volume1
 - RAID level: RAID0 (unit price: 1 dollar)
 - Volume allocation: 100MB
 - Volume allocation period: 12/1 5:00-12/2 1:30 (20.5 hours in all)
- Volume2
 - RAID level: RAID6 (unit price: 5 dollars)
 - Volume allocation: 500MB
 - Volume allocation period: 12/10 11:00-12/10 14:00 (3.0 hours in all)

Fee charged per volume is as follows:

- Fee charged for Volume1
 $1(\text{dollar}) * 100(\text{MB}) * 21(\text{hour}) = 2,100(\text{dollars})$
- Fee charged for Volume2
 $5(\text{dollars}) * 500(\text{MB}) * 3(\text{hour}) = 7,500(\text{dollars})$

Fee charged for server is as follows:

- Fee charged for server
 $2,100(\text{dollars}) + 7,500(\text{dollars}) = 9,600(\text{dollars})$

8.3.3 Operation

8.3.3.1 Create Invoice

The Reporting function outputs report information as a report. For the operation to charge fees mentioned in the later examples, the center administrator is responsible to do it.

- Input a report file in the accounting application to make an invoice.
 (On completion of output of the report file, the accounting application loads the report file.)
- Send an invoice to the center user.
- Charge usage fee based on the invoice.

Information

The Reporting function calculates charging information based on volume capacity and usage period. Also, ETERNUS system obtains performance information for storage systems and switches as well as configuration information for storage systems.

If you want to calculate charging information using performance information for each system, use the [storageadm perfdata command](#) to obtain the performance information.

8.3.4 Maintain

8.3.4.1 Backup/Restore of Report Related Files

For report related files (report information stack file, policy file, etc.) used in the Reporting function, it is recommended to back them up periodically, and restore them in an emergency so as to continue business.

See

Refer to "11.1.1.2 Backup of Manager" and "11.1.1.3 Restoring Manager" for the backup/restore procedure of report-related files.

8.3.4.2 Error When Running Report Information Collection Command

If an error occurs when running the report information collection command, the report information at that point in time is not stored in the information stack file. For example, if any error occurs on completion of information collection for Disk storage system A, the report information collection command terminates abnormally after the collected information for Disk storage system A has been deleted. If a force-quit is performed by [Ctrl] + [C] on the command side, the processing may be continued. In that case, check the Operation History of ETERNUS SF system.

If any error is found in the report information collection command, correct the cause and then re-execute the command. If any error is found, the report information collection command notifies it in the following ways:

- Command resetting value (The value of 1 or more is returned for abnormal end)
- Command output message
- ETERNUS SF system Operation History

To set the report information collection command so that it is periodically run, it is necessary to read those values and make sure that no error is occurring.

If any error should occur, a return code and message identifying the cause are returned, so that proper corrective action can be taken.

8.3.4.3 Error When Running Report Creation Command

If an error occurs when running the report creation command, no report is created.

If any error is found in the report creation command, correct the cause and then re-execute the command.

If any error is found, the report creation command notifies it in the following ways:

- Command return code (The value of 1 or more is returned for abnormal end)
- Command output message
- ETERNUS SF system Operation History


To set the report creation command so that it is periodically run, it is necessary monitor the results and make sure that no errors are occurring.

If any error should occur, a return code and message identifying the cause are returned, so that proper corrective action can be taken.

8.4 Configuration of Report File

Output Overview

The output configuration of a XML report is as follows:

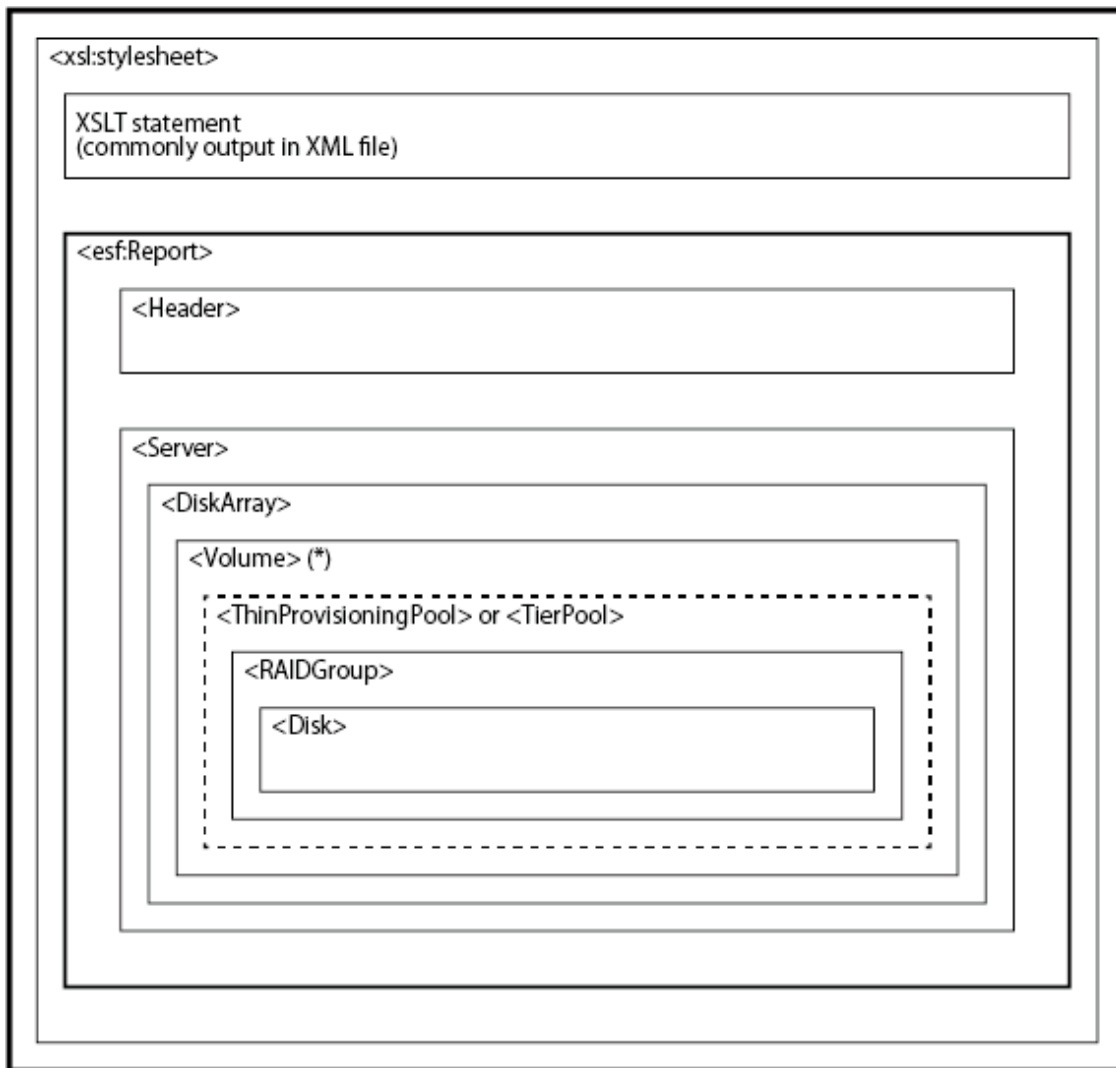

*: The content varies with volume type.

Output Detail

```
<?xml version="1.0" encoding="UTF-8" ?>
<?xml-stylesheet type="text/xsl" href="#esfreportxsl"?>
<!DOCTYPE Report [ <!ATTLIST xsl:stylesheet id ID #REQUIRED > ]>
<xsl:stylesheet id="esfreportxsl" xmlns:esf="localhost" ~ >

  XSLT statement
  (commonly output in XML file)

  <esf:Report>
    <Header created="2013-09-13T12:03:25+0900" reportBegin="2013-09-13T10:53:00+0900"
reportEnd="2013-09-13T12:03:00+0900" version="1.00" />
    <Servers>
      <Server name="Server1" os="Windows2008" ipAddress="192.168.1.10">
        <DiskArrays>
          <DiskArray name="Storage1" serialNo="0000000001"
boxid=" " ec="1.3.6.1.4.1.211.1.21.1.150">
            <Volumes>
              Information per volume

            </Volumes>
          </DiskArray>
        </DiskArrays>
      </Server>
    </Servers>
  </esf:Report>
</xsl:stylesheet>
```

The following is the information on a per volume type basis:

- For Standard Volume, SDV, WSV

```
<Volume name="SDV_Volume" number="2896" type="SDV" capacity="1024" encryption="No" multiPath="1"
connectServerNumber="1" concatenationNumber="-">
  <Allocation start="2013-09-13T10:53:00+0900" end="2013-09-13T12:03:00+0900" />
  <RAIDGroups>
    <RAIDGroup name="RAID_GP_0" number="7" type="Striping (RAID0)">
      <Disks>
        <Disk number="12" enclosureNumber="0x00" slotNumber="12" diskType="SAS" speed="10000" />
        <Disk number="13" enclosureNumber="0x00" slotNumber="13" diskType="SAS" speed="10000" />
      </Disks>
    </RAIDGroup>
  </RAIDGroups>
</Volume>
```

- For TPV

```
<Volume name="TPP_Volume" number="1" type="TPV" capacity="5120" encryption="No" multiPath="1"
connectServerNumber="1" concatenationNumber="-">
  <Allocation start="2013-09-13T12:02:35+0900" end="2013-09-13T12:03:00+0900" />
  <ThinProvisioningPool name="TPP_1" number="3">
    <RAIDGroups>
      <RAIDGroup name="RAID_GP_1" number="0" type="Mirroring (RAID1)">
        <Disks>
          <Disk number="1" enclosureNumber="0x00" slotNumber="1" diskType="SAS" speed="10000" />
          <Disk number="257" enclosureNumber="0x01" slotNumber="1" diskType="SAS" speed="10000" />
        </Disks>
      </RAIDGroup>
    </RAIDGroups>
  </ThinProvisioningPool>
</Volume>
```

- For FTV

```
<Volume name="FTV_Volume" number="158" type="FTV" capacity="204800" encryption="No"
multiPath="1" connectServerNumber="1" concatenationNumber="-">
  <Allocation start="2013-09-13T10:53:00+0900" end="2013-09-13T11:42:02+0900" />
  <TierPool name="TIER_1" number="0">
    <SubPools>
      <SubPool name="FTSP_NAME#0" number="0" level="Low">
        <RAIDGroups>
          <RAIDGroup name="FTSP_NAME#0_0" number="2" type="Mirroring (RAID1)">
            <Disks>
              <Disk number="23" enclosureNumber="0x00" slotNumber="23" diskType="SAS" speed="7200" /
            >
              <Disk number="279" enclosureNumber="0x01" slotNumber="23" diskType="SAS"
speed="7200" />
            </Disks>
          </RAIDGroup>
        </RAIDGroups>
      </SubPool>
      <SubPool name="FTSP_NAME#1" number="1" level="Middle">
        <RAIDGroups>
          <RAIDGroup name="FTSP_NAME#1_0" number="3" type="Mirroring (RAID1)">
            <Disks>
              <Disk number="0" enclosureNumber="0x00" slotNumber="0" diskType="SAS" speed="10000" />
              <Disk number="256" enclosureNumber="0x01" slotNumber="0" diskType="SAS"
speed="10000" />
            </Disks>
          </RAIDGroup>
        </RAIDGroups>
      </SubPool>
      <SubPool name="FTSP_NAME#2" number="2" level="High">
        <RAIDGroups>
          <RAIDGroup name="FTSP_NAME#2_0" number="4" type="Mirroring (RAID1)">
            <Disks>
              <Disk number="12" enclosureNumber="0x00" slotNumber="12" diskType="SSD" speed="-" />
              <Disk number="268" enclosureNumber="0x01" slotNumber="12" diskType="SSD" speed="-" />
            </Disks>
          </RAIDGroup>
        </RAIDGroups>
      </SubPool>
    </SubPools>
  </TierPool>
</Volume>
```

The attributes maintained by elements are as shown in "Table 8.2 Attributes Maintained by Elements".

Table 8.2 Attributes Maintained by Elements

| Element Name | Description (Data Size) | Output Difference per Volume Type | | | Frequen cy |
|--------------|---|--------------------------------------|-----|-------|---------------|
| | | FTV | TPV | Other | |
| Header | Information to differentiate report | A | A | A | 1 |
| created | Date and time when report was created (string, 24 bytes) (*1) | A | A | A | 1 |
| reportBegin | Start date and time of reporting period specified by esfadm report create command (string, 24 bytes) (*1) | A | A | A | 1 |
| reportEnd | End date and time of reporting period specified by esfadm report create command (string, 24 bytes) (*1) | A | A | A | 1 |
| version | Report format version information (string, max 8 bytes) | A | A | A | 1 |

| Element Name | | Description (Data Size) | Output Difference per Volume Type | | | Frequency |
|----------------|---------------------|--|--------------------------------------|-----|-------|-----------|
| Attribute Name | | | FTV | TPV | Other | |
| Servers | | Maintain all Server elements. (All Server elements are sub-elements of this element) | A | A | A | 1 |
| Server | | Number of servers connected to volumes | A | A | A | 1 or more |
| | name | Server name (string, max. 255 bytes) | A | A | A | 1 |
| | os | Operating system type (string, max. 255 bytes) | A | A | A | 1 |
| | ipAddress | IP address (string, max. 64 bytes) | A | A | A | 1 |
| DiskArrays | | Maintain all DiskArray elements related to servers (All DiskArray elements are sub-elements of this element) | A | A | A | 1 |
| DiskArray | | Disk array information including volumes connected to servers | A | A | A | 1 or more |
| | name | Disk array name (string, max. 255 bytes) | A | A | A | 1 |
| | serialNo | Serial number (string, max. 16 bytes) | A | A | A | 1 |
| | boxid | Box ID (string, 40 bytes) | A | A | A | 1 |
| | ec | Enterprise code (string, max. 255 bytes) | A | A | A | 1 |
| Volumes | | Maintain Volume elements related to some DiskArray, connected to server (All Volume elements are sub-elements of this element) | A | A | A | 1 |
| Volume | | Information for volume connected to server | A | A | A | 1 or more |
| | name | Volume name (string, max. 16 bytes) | A | A | A | 1 |
| | number | Volume number (value: decimal, max. 10 bytes) | A | A | A | 1 |
| | type | Volume type (string, max. 16 bytes) Standard, WSV, SDV, TPV or FTV | A | A | A | 1 |
| | capacity | Volume capacity (MB) (value: decimal, max. 10 bytes) The meaning varies with volume type. Standard/WSV: Physical capacity SDV/TPV/FTV: Logical capacity | A | A | A | 1 |
| | encryption | Encryption status (string, max. 255 bytes) Yes: Enable No: Disable | A | A | A | 1 |
| | multiPath | Number of paths between server and volume (value: decimal, max. 10 bytes) | A | A | A | 1 |
| | connectServerNumber | Number of connected servers (value: decimal, max. 10 bytes) | A | A | A | 1 |
| | concatenationNumber | Number of concatenated LUNs in volume (string, max. 255 bytes) If LUN is not concatenated, a hyphen ("-") is displayed. | A | A | A | 1 |
| Allocation | | Information for volume allocation | A | A | A | 1 |
| | start | Start date and time of volume allocation (string, 24 bytes) (*1) | A | A | A | 1 |
| | end | End date and time of volume allocation (string, 24 bytes) (*1) | A | A | A | 1 |

| Element Name | | Description (Data Size) | Output Difference per Volume Type | | | Frequency |
|----------------------|--|--|--------------------------------------|-----|-------|-----------|
| Attribute Name | | | FTV | TPV | Other | |
| TierPool | | Tier pool information | A | N/A | N/A | 1 or more |
| name | | Tier pool name (string, max. 64 bytes) | A | N/A | N/A | 1 |
| number | | Tier pool number (value: decimal, max. 10 bytes) | A | N/A | N/A | 1 |
| SubPools | | Maintain sub-pool elements (All sub-pool elements are sub-elements of this element) | A | N/A | N/A | 1 |
| SubPool | | Sub-pool information | A | N/A | N/A | 1 or more |
| name | | Sub-pool name (string, max. 64 bytes) | A | N/A | N/A | 1 |
| number | | Sub-pool number (value: decimal, max. 10 bytes) | A | N/A | N/A | 1 |
| level | | Layer level (string, max. 32 bytes) Low: Low sub-pool Middle: Middle sub-pool High: High sub-pool For one layer Tier pool, a hyphen ("-") is displayed. | A | N/A | N/A | 1 |
| ThinProvisioningPool | | Thin Provisioning Pool information | N/A | A | N/A | 1 or more |
| name | | Thin Provisioning Pool name (string, max. 16 bytes) | N/A | A | N/A | 1 |
| number | | Thin Provisioning Pool number (value: decimal, max. 10 bytes) | N/A | A | N/A | 1 |
| RAIDGroups | | Maintain RAID Group elements (All RAID Group elements are sub-elements of this element) | A | A | A | 1 or more |
| RAIDGroup | | RAID information | A | A | A | 1 or more |
| name | | RAID Group name (string, max. 16 bytes) | A | A | A | 1 |
| number | | RAID Group number (value: decimal, max. 10 bytes) | A | A | A | 1 |
| type | | RAID Group type (string, max. 64 bytes) - Striping (RAID0) - Mirroring (RAID1) - High Performance (RAID1+0) - High Capacity (RAID5) - High Reliability (RAID6) - High Reliability (RAID6-FR) - Reliability (RAID5+0) - Unknown | A | A | A | 1 |
| Disks | | Maintain Disk elements (All Disk elements are sub-elements of this element) | A | A | A | 1 |
| Disk | | Disk information | A | A | A | 1 or more |
| number | | Disk number (value: decimal, max 10 bytes) | A | A | A | 1 |

| Element Name | | Description (Data Size) | Output Difference per Volume Type | | | Frequency |
|--------------|-----------------|--|--------------------------------------|-----|-------|-----------|
| | Attribute Name | | FTV | TPV | Other | |
| | enclosureNumber | Enclosure number (value: hexadecimal, 4 bytes) For disks contained in Controller Enclosure, "0x00" is displayed. | A | A | A | 1 |
| | slotNumber | Slot number (value: decimal, max. 10 bytes) | A | A | A | 1 |
| | diskType | Disk type (string, max. 255 bytes) SAS, SSD or SED-SAS | A | A | A | 1 |
| | speed | Disk rotation count (rpm) (value: decimal, max. 10 bytes) If there is no rotation count, a hyphen ("-") is displayed. | A | A | A | 1 |

"A" indicates "Applicable", and "N/A" indicates "Not Applicable".

*1: For date and time, the local time of ETERNUS SF system is output in ISO8601 format.

Chapter 9 Storage Cluster Function

This chapter describes the Storage Cluster function.

In this function, storage used as an active system is referred to as "Primary Storage" and storage used as a standby system is referred to as "Secondary Storage".



Note

There are limitations to the operating system and driver of business server to support transparent failover of Storage Cluster. For details, contact Fujitsu Technical Support.

9.1 Overview

Storage Cluster function switches over to the components in a standby system from the components in an active system transparently from external environments.

In the existing operation, data must be kept equivalency maintenance state in an environment in which REC Paths are configured between Primary Storage and Secondary Storage, and if Primary Storage stops, failover to Secondary Storage must be performed in the following steps:


1. Change physical connections to Secondary Storage and zoning configuration.
2. Re-acknowledge volumes by restarting business server.

Using the Storage Cluster function can save the time and steps spent in this work and realize transparent failover.

System Structure

The following is a description of basic system structure required to use the Storage Cluster function. The example of system structure is shown in "[Figure 9.1 Storage Cluster Function: Example of System Structure](#)".

Figure 9.1 Storage Cluster Function: Example of System Structure

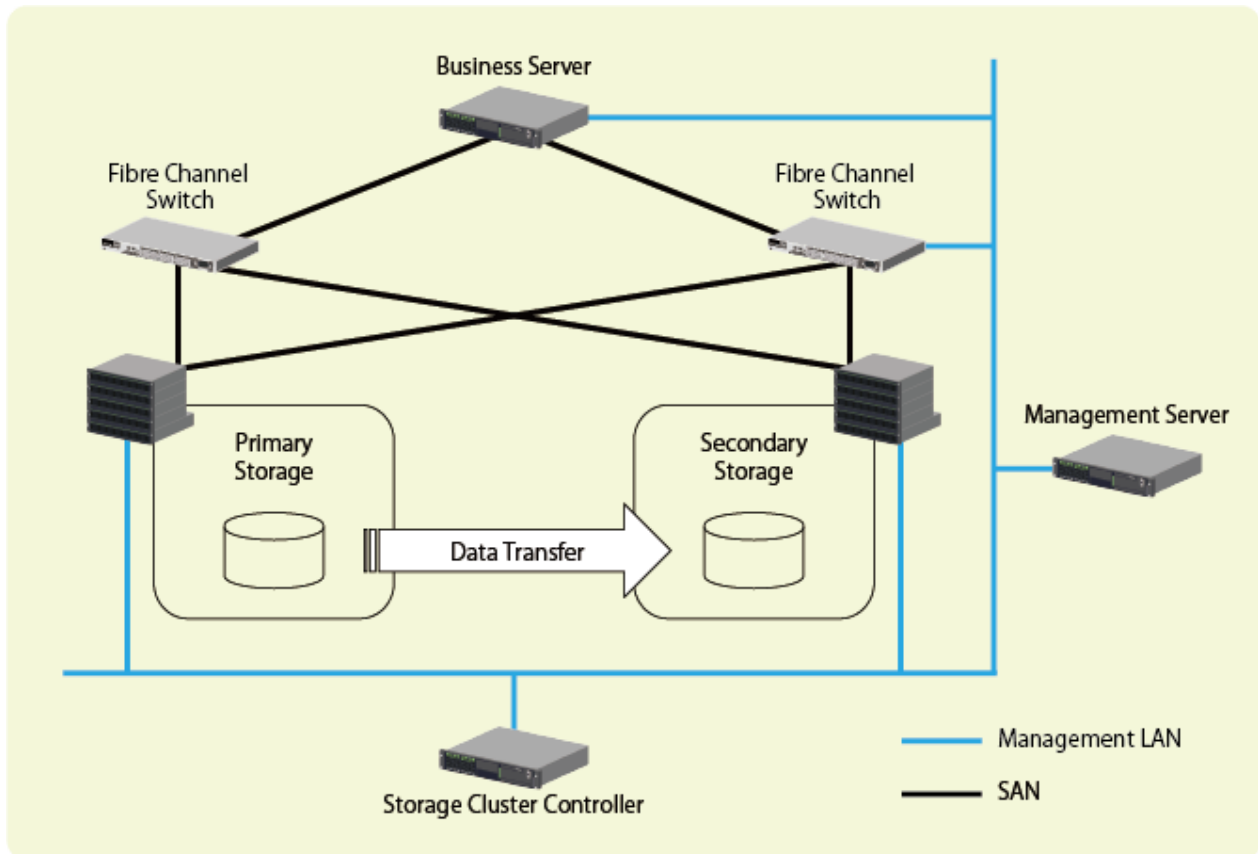

| Item | Description |
|----------------------------|--|
| Primary Storage | Storage used as an active system. |
| Secondary Storage | Storage used as a standby system. |
| Storage Cluster Controller | Server that monitors Primary Storage and Secondary Storage. When using Automatic Failover, Storage Cluster Controller must be required. |

Configure the Storage Cluster function on the Management Server. Connect the Management Server to Primary Storage and Secondary Storage with management LAN.

See

Refer to "Automatic Failover" for details of Automatic Failover.

Point

- If the Automatic Failover function is not used, Storage Cluster Controller is not required.
- Data is copied between Primary Storage and Secondary Storage with REC Path.

9.2 Operation Overview

This section describes the following operations and concepts required for the Storage Cluster function:

- TFOV
- REC Path
- Failover Mode
- Failback Mode
- Split Mode
- TFO Group
- Pairing of CA Ports
- Automatic Failover
- Automatic Failback
- Deconstruction of Storage Cluster Environment
- Control of Link Status of Primary/Secondary Storage CA Ports
- Storage Cluster Controller

TFOV

TFOV is a volume for which failover is enabled.

Among TFOVs created on both Primary Storage and Secondary Storage, those TFOVs that have the same Host Logical Unit (HLU) number and capacity are volumes whose data is synchronized. In addition to data synchronization, the volume information on Secondary Storage is changed as shown in "Table 9.1 Change in Volume Information on Pre- and Post-Data Synchronization Secondary Storage".

Table 9.1 Change in Volume Information on Pre- and Post-Data Synchronization Secondary Storage

| Volume Information to be Changed | Pre-Data Synchronization | Post-Data Synchronization |
|----------------------------------|--|---|
| UID | UID unique to volume on Secondary Storage. | UID of volume on Primary Storage of a pair. |
| Product ID | Product ID unique to Secondary Storage. | Product ID of Primary Storage of a pair. |

Note

Even if a volume on the Secondary Storage is removed from the synchronized volume by the operation of deleting the TFO group after data has been synchronized, post-data synchronization volume information is inherited. For this reason, when continuing to use the volume on the Secondary Storage, use the ETERNUS CLI to return the volume information to pre-data synchronization status.

Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used.

REC Path

TFOV data is transferred in synchronization mode using the REC path.

An ETERNUS Disk storage system manages copy sessions used in the Storage Cluster function and Advanced Copy sessions separately. Since the ETERNUS Disk storage system automatically controls copy sessions used in the Storage Cluster function, it is not required to configure copy sessions and copy groups in this product.

Point

When an REC route temporary fault (communication break) occurs, a differential copy is executed after the REC route recovers, and the data is automatically recovered in the equivalent state. As failover does not occur during the period until the REC route is recovered, we recommend a redundant REC route configuration.

Failover Mode

This mode is related to the failover method from the Primary Storage to the Secondary Storage. Either of the following can be selected:

| Mode | Explanation |
|----------------|---|
| Auto (default) | This is the failover mode that runs automatically when a failure of the Primary Storage is detected. Business can be continued without stopping. A Storage Cluster controller is required when operated in this mode. When this mode is set, failover can be performed manually from the Web Console. |
| Manual | This is the failover mode that runs manually. A Storage Cluster controller is not required when operated in this mode. |



Note

Set this mode to "Manual" when the REC path interface type is "iSCSI".

Failback Mode

This mode is related to the failback method from the Secondary Storage to the Primary Storage. Either of the following can be specified:

| Mode | Explanation |
|------------------|---|
| Auto | This is the failover mode that runs automatically when a failure recovery of the Primary storage is detected. |
| Manual (default) | This is the failback mode that runs manually. Failback can be performed at any time from the Web Console. |

Split Mode

Split Mode specifies for volumes in Primary Storage whose REC Path is disconnected whether to give priority to business continuity and continue Write or to assure the equivalent state of data on Primary Storage and Secondary Storage.


Either of the following is specified:

- "Read/Write"(default)
Give priority to business continuity and continue writing data to volumes in Primary Storage. In this case, data is written only on the volumes in Primary Storage, causing the data to be nonequivalent to data in Secondary Storage.
- "Read"
Give priority to maintenance of data equivalent state and inhibit writing data to the volumes in Primary Storage.

TFO Group

TFO Group is a motion unit of failover on one device and a group for which the connection configuration, policy, status and maintenance required to perform failover is consolidated. TFO Group includes one or more CA ports and volumes allowed to access those CA ports. The example of TFO Group is shown in ["Figure 9.2 Example of TFO Group"](#).

Figure 9.2 Example of TFO Group

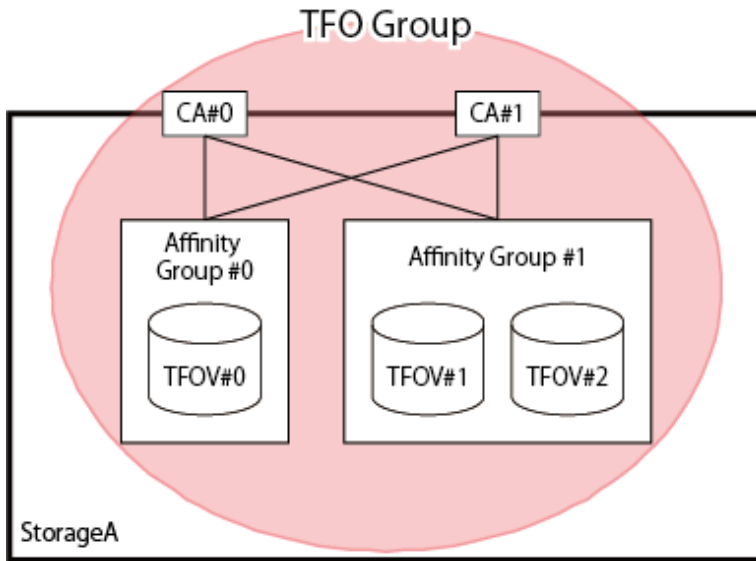

TFO Group has the following status. The TFO status changes with execution of failover or failback:

Point

The input conditions for the TFO Group name are as follows:

- The 1-16 characters which are half-size alphanumeric characters "A-Z, a-z, 0-9" and special characters. However, " ? ' \ * %" cannot be used.

Table 9.2 TFO Status

| TFO Status | Meaning |
|------------|--|
| Active | Indicates an active side. Accessible from Management Server. |
| Standby | Indicates a standby side. Inaccessible from Management Server. |

Also, if default TFO status is Active in creating an environment, the TFO Group is called "Primary TFO Group" and if Standby, "Secondary TFO Group".

Pairing of CA Ports


The Storage Cluster function shares WWPN/WWNN in the CA ports of two ETERNUS Disk storage systems, controls the Link status of each CA port, and achieves the failover.

The CA ports included in one TFO Group shares one WWPN/WWNN with the CA ports included in the other TFO Group between storage systems. This sharing operation is referred to as "Pairing of CA ports". Also, a pair of CA ports sharing WWPN/WWNN is referred to as "CA port pair".

By pairing CA ports, WWPN/WWNN of a CA port for Primary Storage is configured as a logical WWPN/WWNN to a CA port for Secondary Storage and the CA port for Secondary Storage links down.

The image of CA port pair is shown in "Figure 9.3 Example of CA Port Pair".

Figure 9.3 Example of CA Port Pair

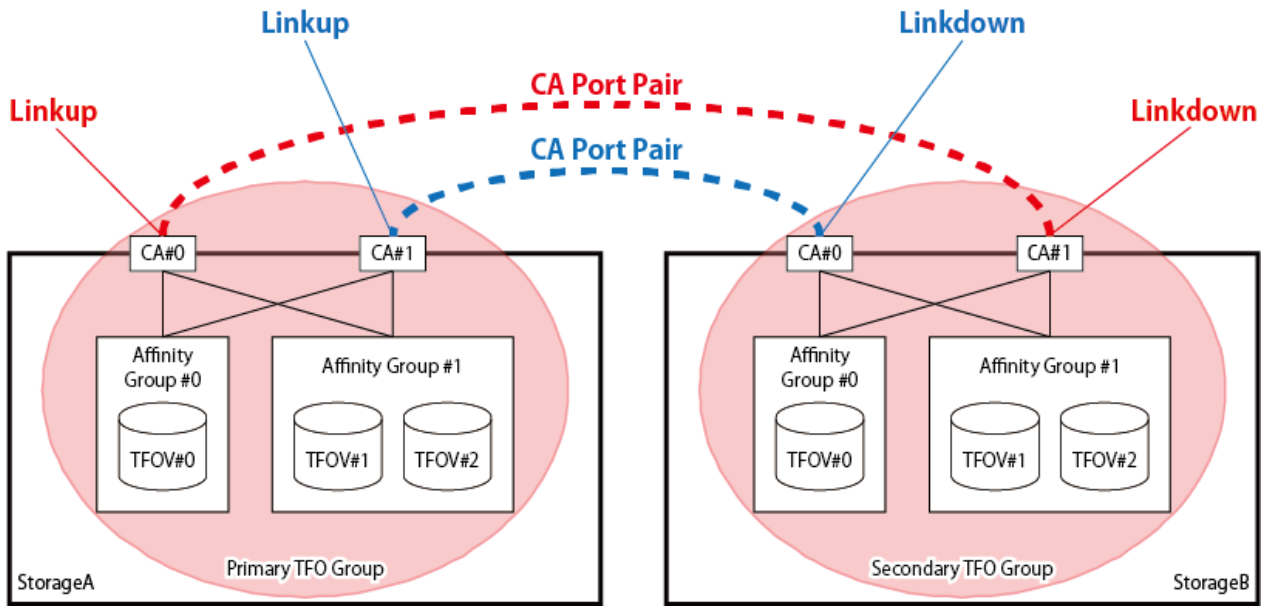


Automatic Failover

Automatic Failover is a function that makes Secondary TFO Group active automatically when any failure is detected in an ETERNUS Disk storage system in which Primary TFO Group exists.

To perform Automatic Failover, Storage Cluster Controller connected with management LAN is required. Moreover, the interface type of REC path should be "FC".

When Storage A (Primary Storage) and Storage B (Secondary Storage) are in use, if Storage A is down, failover to Storage B is performed. The image of this operation is shown in "Figure 9.4 Operation of Automatic Failover".

Figure 9.4 Operation of Automatic Failover

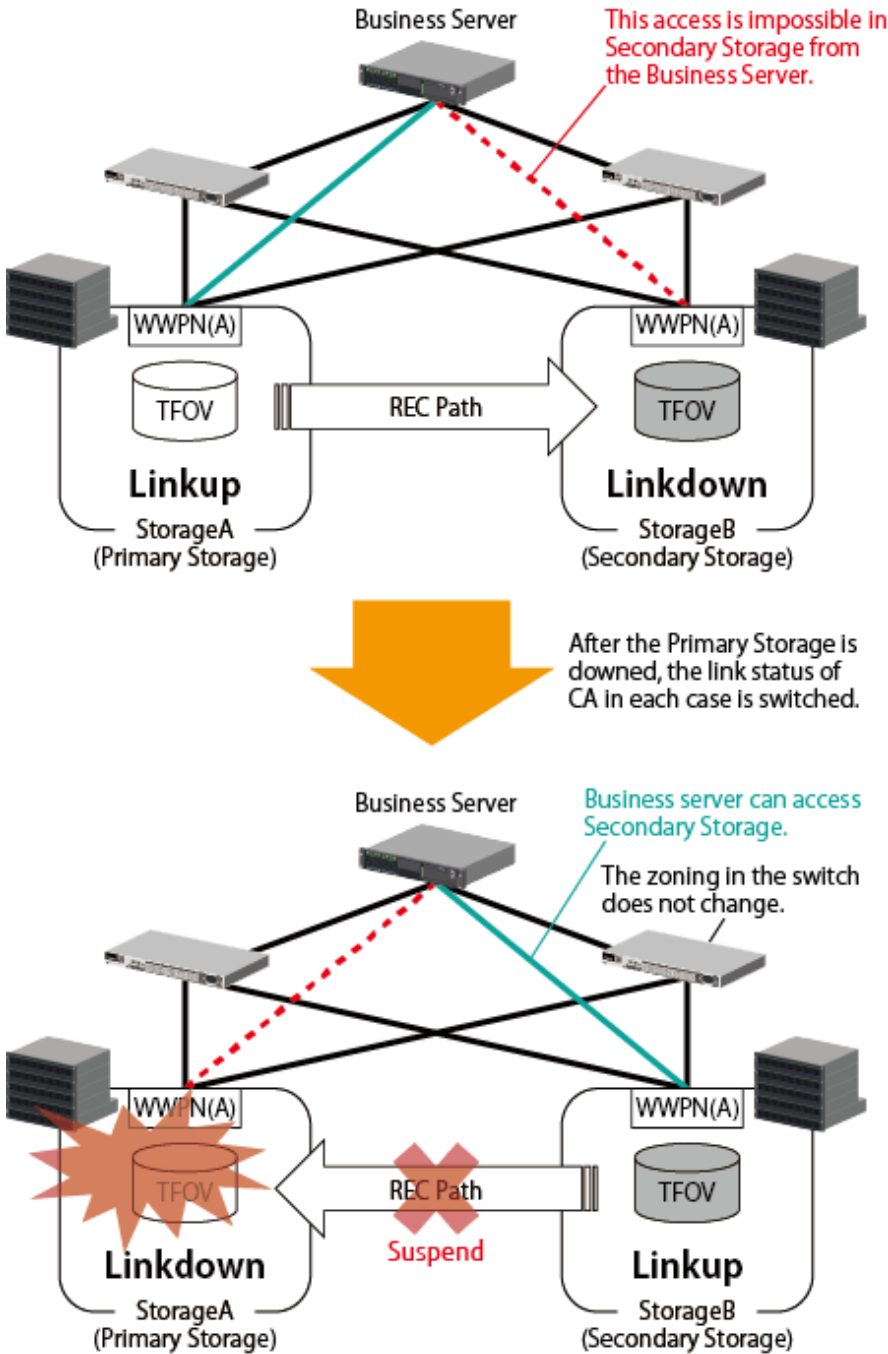

In accordance with link switchover of each CA port, the status of TFO Group is also automatically switched, so that the volumes in Secondary TFO Group become accessible.

Automatic Failback

Automatic Failback is a function in which the Primary TFO Group automatically becomes "Active" when recovering from the failure of ETERNUS Disk storage system with the Primary TFO Group detected.

Deconstruction of Storage Cluster Environment

If such a trouble as requires device replacement occurs and an ETERNUS Disk storage system should be replaced, deconstruct the Storage Cluster environment.

Delete TFO Groups to deconstruct the Storage Cluster environment.

When deleting TFO Groups, select either of the following actions to handle WWPN/WWNN of the CA port for Secondary Storage:

- a. Return Secondary Storage CA port to its original WWPN/WWNN.
- b. Return Secondary Storage CA port not to its original WWPN/WWNN but continue to use the logical WWPN/WWNN.

If Step "a" is selected, it does not compete with the WWPN/WWNN of Primary Storage CA port.

If Step "b" is selected, the device operated as Primary Storage can be replaced while Secondary Storage is accessible from the Management Server.

Note

If both Primary Storage CA port and Secondary Storage CA port get active, their WWPN/WWNN competes with each other, possibly causing data corruption. Therefore, when selecting Step "b", keep the following rules:

- Do not delete the TFO Group before making sure that the Primary Storage CA port is physically disconnected from SAN.
- Do not connect to SAN the ETERNUS Disk storage system that had Primary TFO Group deleted.

Control of Link Status of Primary/Secondary Storage CA Ports

Depending on pairing of CA ports and failover, the WWPN/WWNN and Link status of CA ports are changed. The device whose Link status is Linkup is accessible from the Management Server.

Change in Link status of each CA port with CA port pairing and failover/failback operations are shown in "Table 9.3 Change in Link Status of CA Port".

Table 9.3 Change in Link Status of CA Port

| Primary Storage | | Timing | Secondary Storage | |
|-------------------------------|---------------------------|-----------------------------------|-------------------|---------------------------------|
| WWPN/WWNN | Link Status | | Link Status | WWPN/WWNN |
| WWPN/WWNN for Primary Storage | Linkup | Pre-CA port pairing | Linkup | WWPN/WWNN for Secondary Storage |
| | | Post-CA port pairing | Linkdown | WWPN/WWNN for Primary Storage |
| | Primary Storage stops | | | |
| | Under failover | | | |
| | Failover completed | Linkup | | |
| | Primary Storage recovered | | | |
| | Linkdown | Failback started | Linkdown | |
| | | Under failback | | |
| | | Failback completed | Linkup | |
| | Linkup | Storage Cluster deconstructed (*) | | Linkup |

*: When returning the WWPN/WWNN of Secondary Storage CA port to its original status.

Storage Cluster Controller

To perform Automatic Failover, Storage Cluster Controller connected with management LAN is required.

Two ETERNUS Disk storage systems use a REC Path for checking the living confirmation. If the REC Path is disconnected, even if the two ETERNUS Disk storage systems are running, failover may be performed by false recognition. To prevent this false recognition, install Storage Cluster Controller to communicate with both Primary and Secondary ETERNUS Disk storage systems with management LAN.

The example of structure between Primary and Secondary ETERNUS Disk storage systems and Storage Cluster Controller is shown in "Figure 9.5 Structure Example of Life Check via Storage Cluster Controller". In this structure example, communication status, device status and timing of Automatic Failover are shown in "Table 9.4 Timing of Automatic Failover Operation".

Figure 9.5 Structure Example of Life Check via Storage Cluster Controller

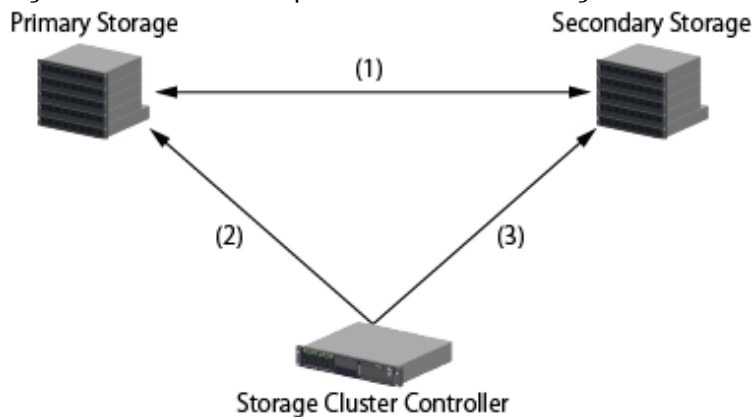


Table 9.4 Timing of Automatic Failover Operation

| No. | Communication Status | | | Device Status | | |
|-----|----------------------|-----|-----|-----------------|-------------------|---|
| | (1) | (2) | (3) | Primary Storage | Secondary Storage | Timing of Automatic Failover Operation and Status Change |
| 1 | Y | Y | Y | Alive | Alive | N/A |
| 2 | N | Y | Y | | | |
| 3 | Y | N | Y | | | |
| 4 | Y | Y | N | | | |
| 5 | N | N | Y | Down | | A Primary Storage: Active -> Standby Secondary Storage: Standby -> Active |
| 6 | N | Y | N | Alive | Down | N/A |
| 7 | Y | N | N | | Alive | |
| 8 | N | N | N | Down | Down | N/A (all blocked) |

Y: Communication enabled status
N: Communication disabled status

Note

Automatic Failover will not operate in the following cases:

- When "route (1) between the Primary Storage and Secondary Storage" failed 10 seconds after "route (2) between the Primary Storage and Storage Cluster controller" had failed.
- When "route (2) between the Primary Storage and Storage Cluster controller" failed 3 seconds after "route (1) between the Primary Storage and Secondary Storage" had failed.

Location of Storage Cluster Controller


Storage Cluster Controller and each monitored ETERNUS Disk storage system monitor each other. Therefore, if the Storage Cluster Controller and the managed ETERNUS Disk storage systems are placed in the same building, the following trouble could occur:

- If the building is exposed to disaster, all the paths are blocked and failover gets disabled.

To prevent the above trouble, it is recommended to place the Storage Cluster Controller and each monitored ETERNUS Disk storage system in separate buildings respectively. The location example is shown in "Figure 9.6 Location Example of Storage Cluster Controller and Monitored ETERNUS Disk Storage Systems".

Also, the Storage Cluster Controller can be located on the same server as Management Server.

Figure 9.6 Location Example of Storage Cluster Controller and Monitored ETERNUS Disk Storage Systems

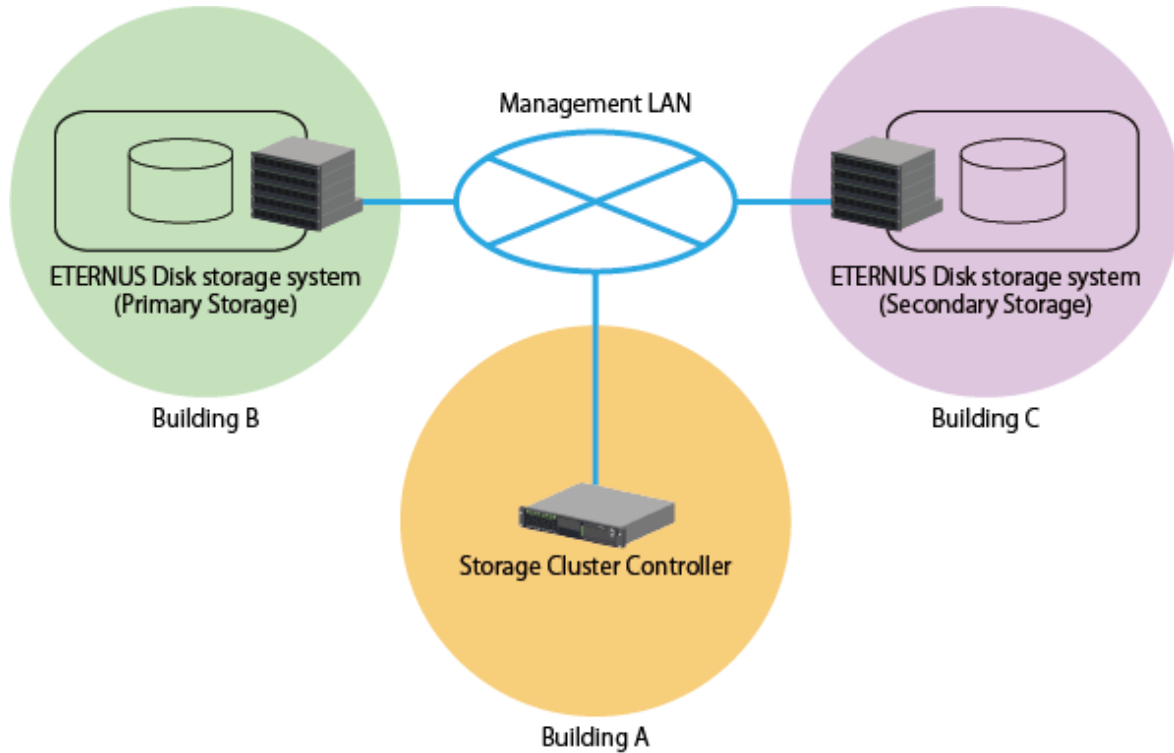

9.3 Work Flow

The following is a description of the procedure to create a Storage Cluster environment.

Refer to "9.4 Operation Method" for details of each procedure.

Figure 9.7 Registering New Primary and Secondary Storage Devices

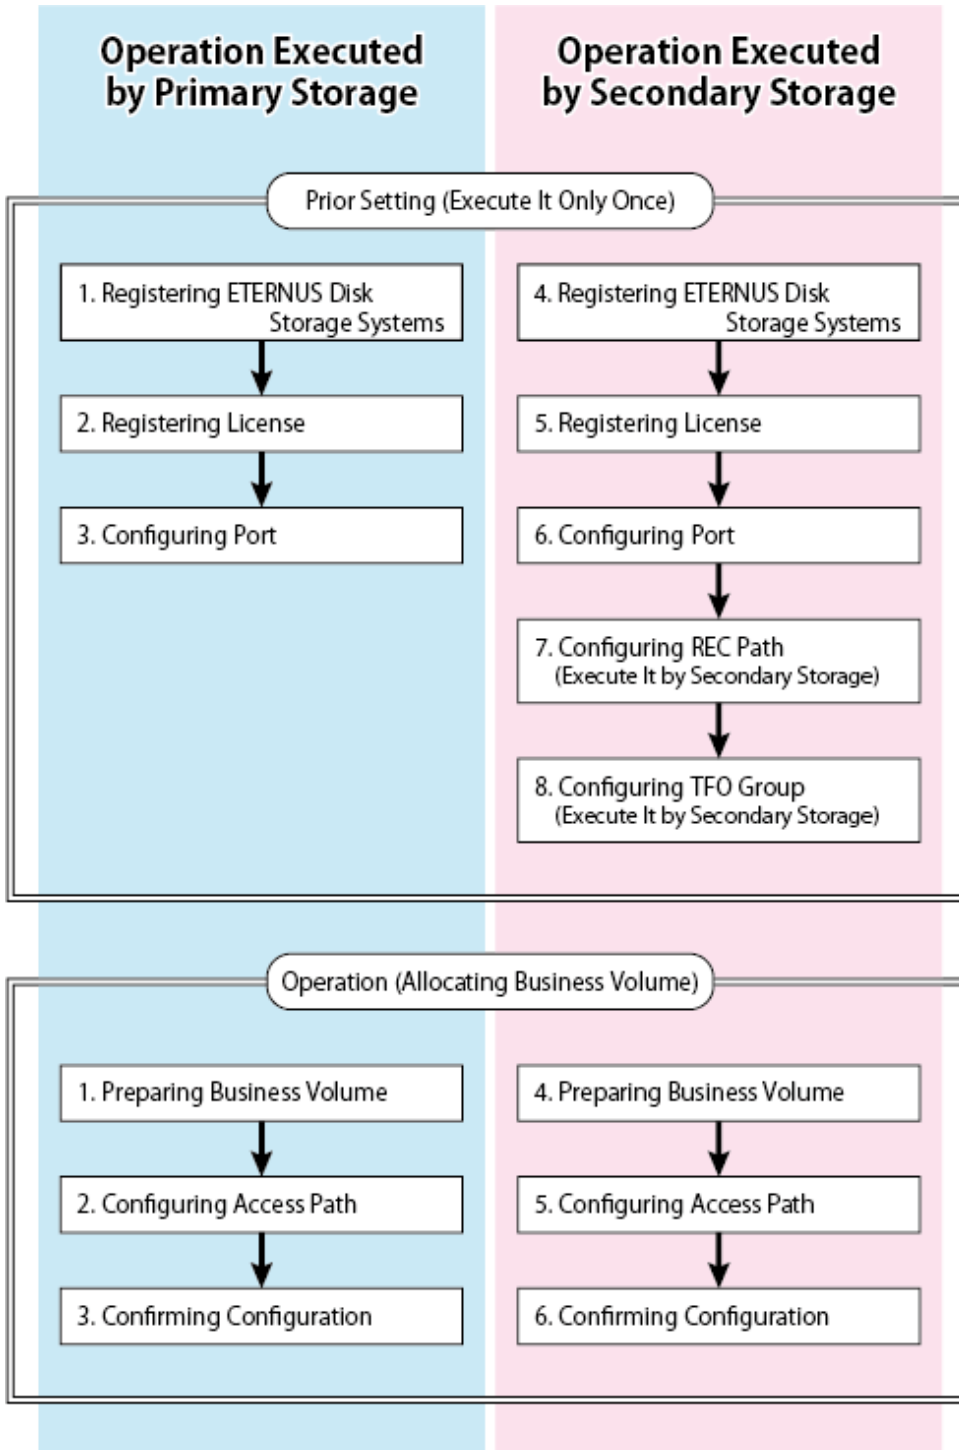


Figure 9.8 Adding Secondary Storage Where Only Primary Storage is used


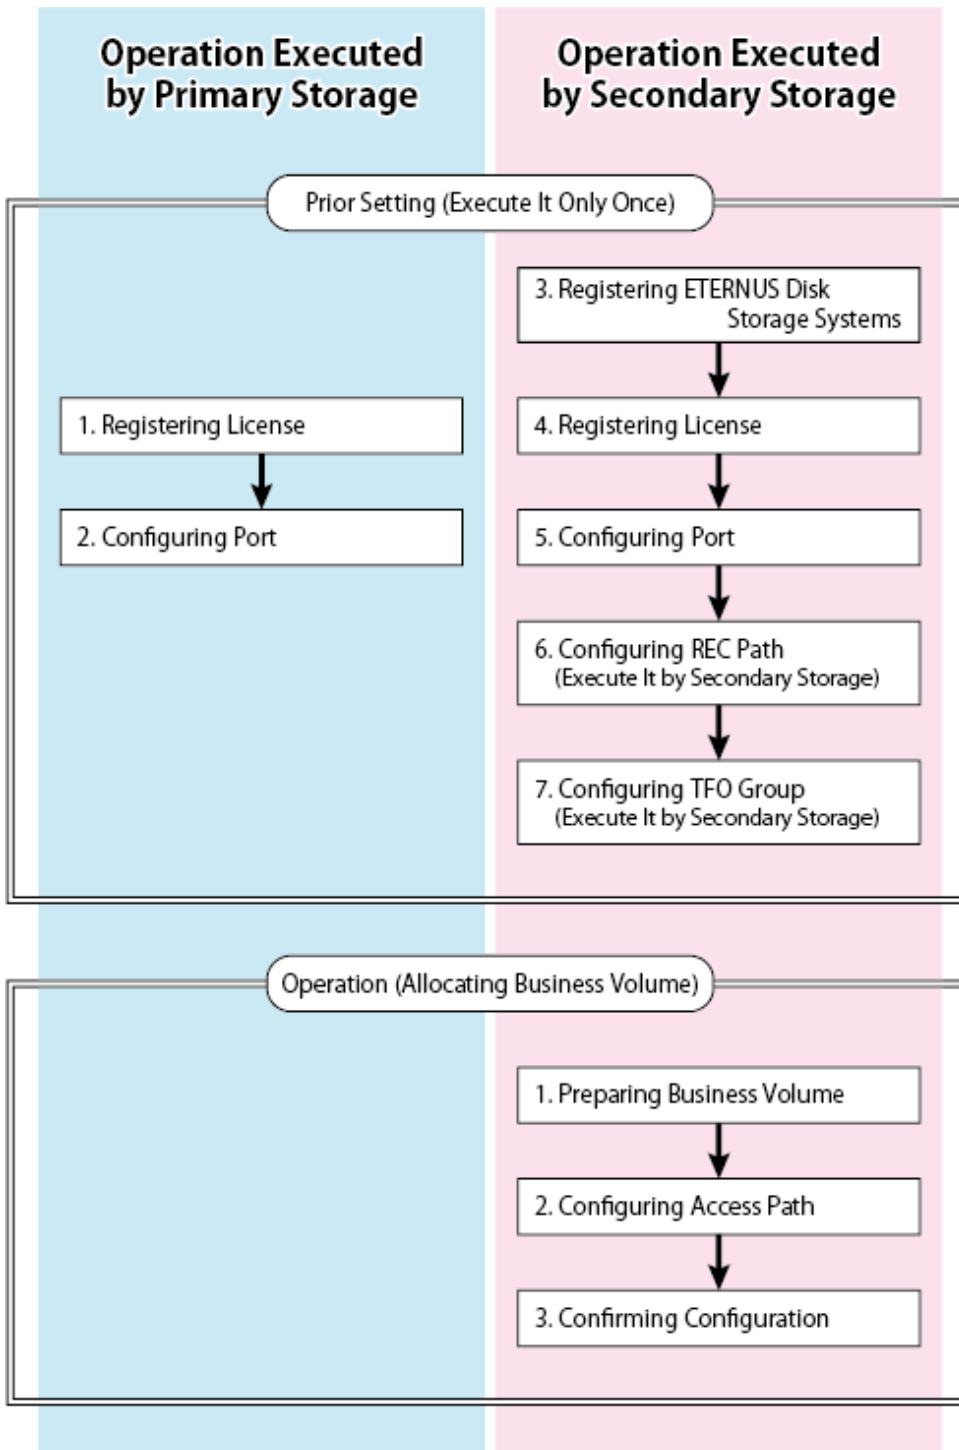


Figure 9.9 Adding Volume

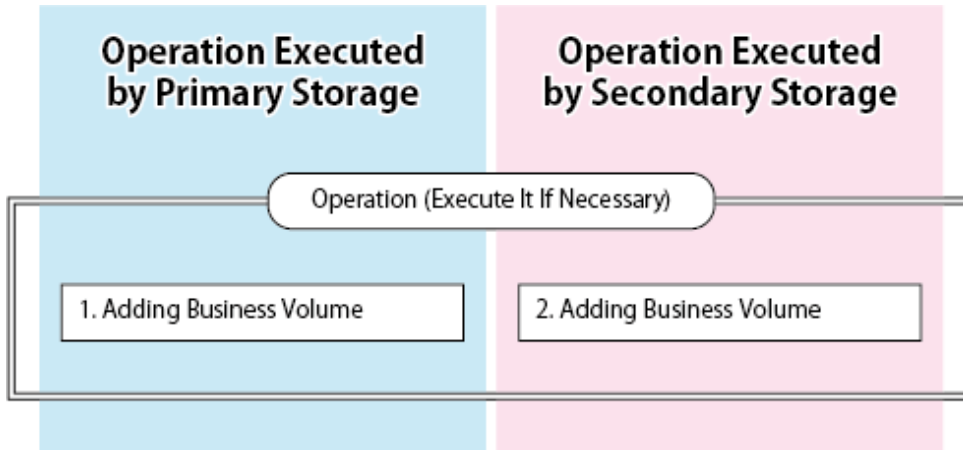

9.4 Operation Method

This chapter describes how to use the Storage Cluster function.

9.4.1 Installation

Preconfigure in the following steps to use the Storage Cluster function:

1. [Registering ETERNUS Disk Storage Systems and License](#)
2. [Registering and Configuring Server and FC Switch](#)
3. [Configuring Storage Cluster Structure](#)

Registering ETERNUS Disk Storage Systems and License

1. Register ETERNUS Disk storage system

Register all the ETERNUS Disk storage systems that use the Storage Cluster function.

 See

.....
Refer to "Register ETERNUS Disk Storage System" in the *ETERNUS SF Web Console Guide* for the procedure to register ETERNUS Disk storage systems.
.....

2. Register license

Register Storage Cluster Option License to the ETERNUS Disk storage systems registered in the above Step 1. This license must be registered to all the ETERNUS Disk storage systems that use the Storage Cluster function.

 Information

.....
To register Storage Cluster Option License, the following licenses must be registered:
.....

- ETERNUS SF Storage Cruiser Standard Edition License
 - ETERNUS SF AdvancedCopy Manager Remote Copy License
-

 See

.....
Refer to "Register License" in the *ETERNUS SF Web Console Guide* for the procedure to register licenses.
.....

Registering and Configuring Server and FC Switch

1. Register FC switch

Register all the FC switches that use the Storage Cluster function to devices.



See

.....
Refer to "Register FC Switch" in the *ETERNUS SF Web Console Guide* for the procedure to register FC switches.
.....

2. Configure Storage Cluster Controller

When using Automatic Failover, Storage Cluster Controller must be configured.

Log in not to the Web Console but to the server to configure the Storage Cluster Controller and check its settings.



See

.....
Refer to "9.5 Storage Cluster Controller" for the procedure to configure the Storage Cluster Controller.
.....

3. Register business server

Register all the business servers used for the Storage Cluster function.




See

.....
Refer to "Register Server" in the *ETERNUS SF Web Console Guide* for the procedure to register business servers.
.....

Configuring Storage Cluster Structure

Configure the structure of ETERNUS Disk storage systems required for the Storage Cluster function. The structure example is shown in "Figure 9.10 Structure Example of Storage Cluster (When Primary ETERNUS Disk Storage System is Active)".

Figure 9.10 Structure Example of Storage Cluster (When Primary ETERNUS Disk Storage System is Active)

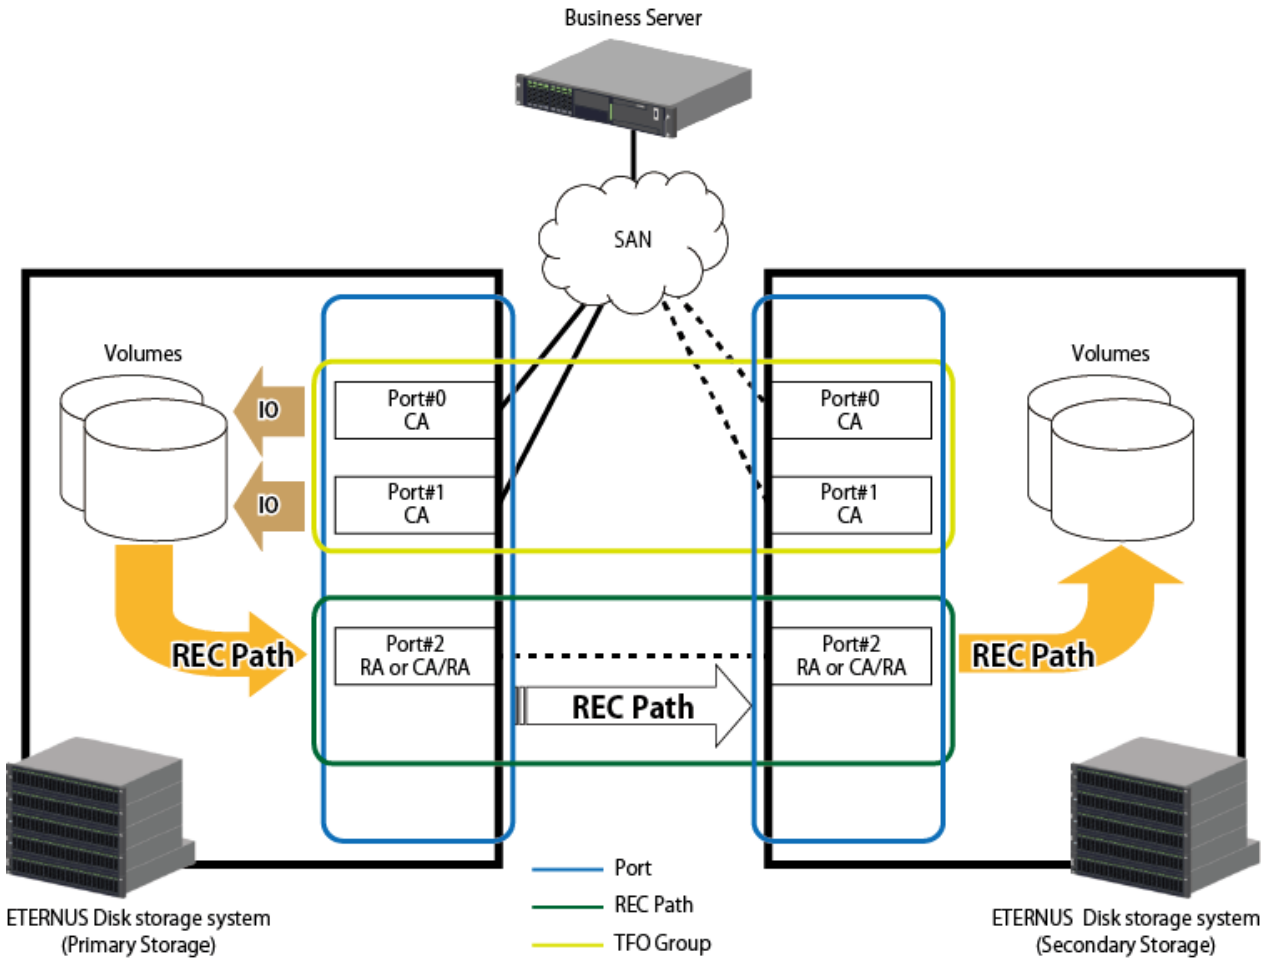

Configure in the following steps:

1. [Configuring Port](#)
2. [Configuring REC Path](#)
3. [Configuring TFO Group](#)

Configuring Port

The Storage Cluster function uses the ports on ETERNUS Disk storage systems for the following two purposes:

- [Port for REC Path](#)
- [Port for Connecting to Business Server](#)

Port for REC Path

The Storage Cluster function uses the synchronous transfer method to keep data equivalent between business volumes on Primary Storage and Secondary Storage. To configure REC Paths that become their copy pathways are required ports on Primary and Secondary ETERNUS Disk storage systems.

There are requirements for ports used to configure REC Paths in the Storage Cluster function as follows:

- Port interface type should be "FC" or "iSCSI", however, "FCoE" is not supported. However, when performing Automatic Failover, the interface type should be "FC".
- Port mode should be "RA" or "CA/RA".

As required, change the port mode for each ETERNUS Disk storage system.



See

Refer to "Change FC/iSCSI/SAS Port Settings" in the *ETERNUS SF Web Console Guide* for the procedure to change Port mode.

Port for Connecting to Business Server

The Storage Cluster function makes a pair of ports through which to access business servers between Primary and Secondary ETERNUS Disk storage systems. Automatically switching a port to be accessed at the time of failover/failback can continue to access business volumes.

There are requirements for ports through which to access business servers as follows:

- Port interface type should be "FC", however "FCoE" is not supported.
- Port mode should be "CA", however "CA/RA" is not supported.
- Port parameters specified for paired ports should be the same.
- When creating multipath connection, the same number of ports should be provided to Primary and Secondary ETERNUS Disk storage systems respectively so as to make a pair of all the associated ports. There should be two or more ports.

As required, change Port mode and Port parameter for respective ETERNUS Disk storage systems.



See

Refer to "Change FC/iSCSI/SAS Port Settings" in the *ETERNUS SF Web Console Guide* for the procedure to change Port mode and Port parameter.

Configuring REC Path

Use the ports configured in "[Port for REC Path](#)" to configure a REC Path between Primary and Secondary ETERNUS Disk storage systems. Once a REC Path is configured from either Primary ETERNUS Disk storage system or Secondary ETERNUS Disk storage system, it is set to both ETERNUS Disk storage systems. Use the following steps on the Web Console to configure a REC Path:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster function.
4. On the Category pane, click **REC Path**.
Created REC Paths are displayed on the Main pane.
5. On the Action pane, click **Remote Copy Setting** under Wizard.
The Remote Advanced Copy Setting Wizard screen is displayed, and click **Next**.
The screen on which to select a remote partner is displayed.
6. Select an ETERNUS Disk storage system to be remote copy destination, and click **Next**.
The screen on which to set a copy table size is displayed.
7. Set copy parameters for both ETERNUS Disk storage systems as copy source and copy destination, and click **Next**.
The screen on which to configure REC Paths is displayed.
8. Select Remote copy path and Connectivity type between ETERNUS Disk storage systems and click **Next**.
The screen on which to configure REC buffer is displayed.
9. Since REC buffer is not needed to use the Storage Cluster function, click **Next**.
The Setting Confirmation screen is displayed.
10. If the information is correct, click **Close**.



Note

The settings of REC Path line speed and compression ratio are valid only when one or more REC Paths are added. If only existing REC Paths are deleted, specified line speed and compression ratio are not set.


Configuring TFO Group

Use the ports configured in "[Port for Connecting to Business Server](#)" to configure TFO Groups between Primary and Secondary ETERNUS Disk storage systems. Once TFO Groups are configured from either Primary ETERNUS Disk storage system or Secondary ETERNUS Disk storage system, they are configured on both ETERNUS Disk storage systems. Use the following steps on the Web Console to configure TFO Groups:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster function.
Created TFO Groups are displayed on the Main pane.
4. On the Action pane, click **Set** under TFO Group.
The TFO Group Configuration Wizard screen is displayed.
5. The Selection screen for ETERNUS Disk storage systems and options is displayed.
 - When creating a new TFO Group:
Select a remote ETERNUS Disk storage system and specify which ETERNUS Disk storage system to be the Primary Storage.
 - When changing an existing TFO Group:
Specified Primary and Secondary Storages cannot be changed.

As for an initial value of the Failover mode, "Auto" has been selected. Select "Manual" when you do the failover by manual operation.
As for an initial value of the Failback mode, "Manual" has been selected. Select "Auto" when you do the failback by automatic operation.
On completion of input, click **Next**.
The TFO Group Configuration screen is displayed.
6. Select from a list of ports for Primary Storage and Secondary Storage, one port for each storage to be paired and click **Add**. When deleting, select an unnecessary pair from the Port Pair List table to click **Delete**.
7. On completion of required configuration, click **Next**.
The Setting Confirmation screen is displayed.
8. If the information is correct, click **Set**.

Figure 9.11 Structure Example of Using Storage Cluster Function Bi-Directionally

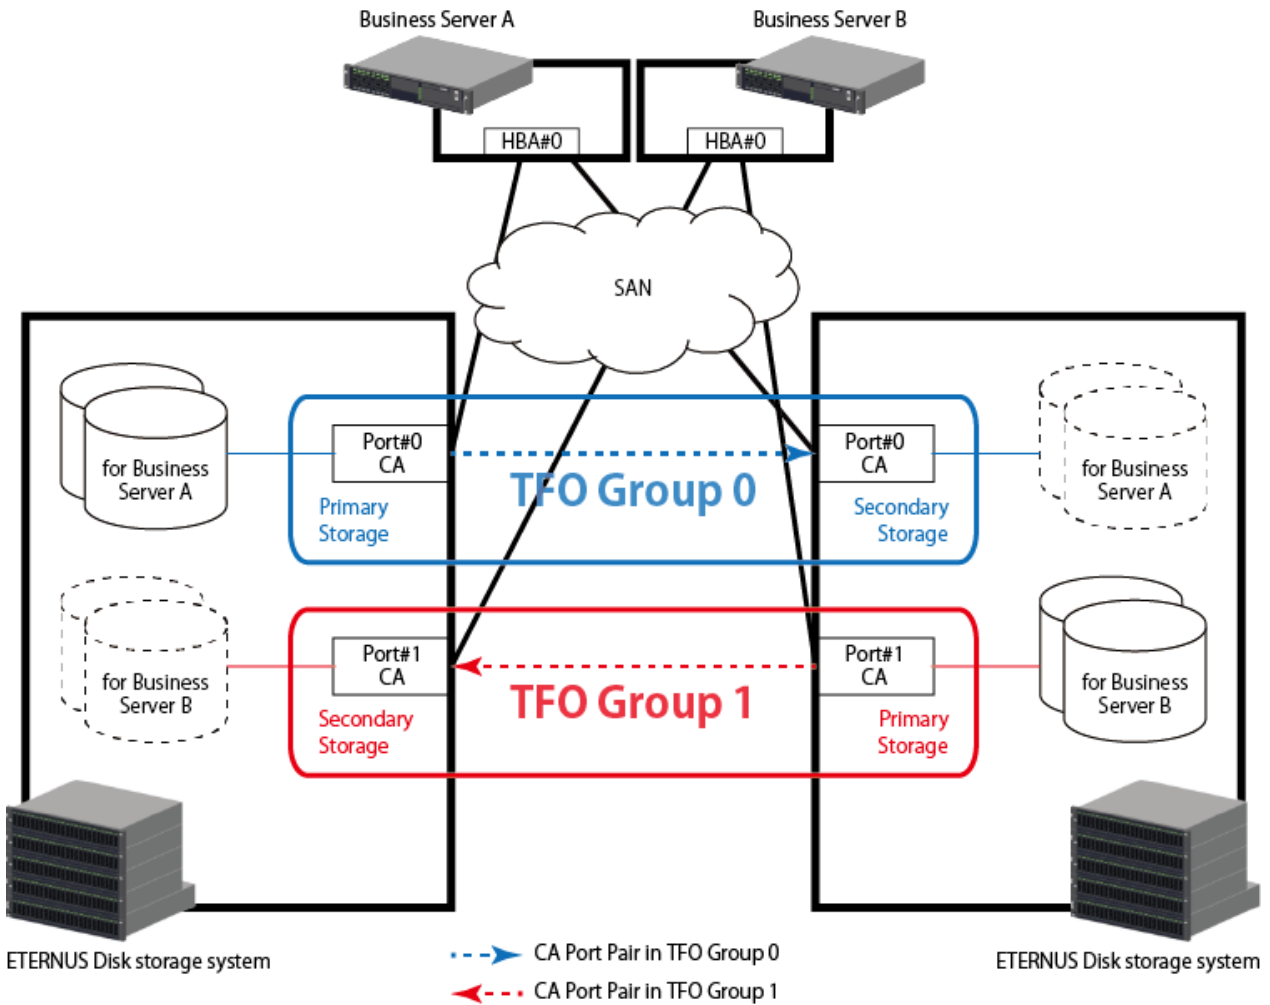

Note

- To use the Automatic Failover mode, Storage Cluster Controller is required. Refer to "9.5 Storage Cluster Controller" for the procedure to configure the Storage Cluster Controller and confirm its settings.
- If a number of TFO Groups are created in a pair of ETERNUS Disk storage systems, one pair of CA ports cannot be specified for multiple TFO Groups.
- The number of TFO Groups that can be created for a pair of ETERNUS Disk storage systems is up to two, one for each storage system in one direction. When operating the bidirectional Storage Cluster function as in "Figure 9.11 Structure Example of Using Storage Cluster Function Bi-Directionally", it is necessary to create two TFO Groups in which a Primary/Secondary Storage can be replaced.
- In multipath connection, a number of access paths (Host Affinity) may be configured for a certain LUN/Affinity group. When specifying the ports included in such access paths (Host Affinity) for a CA port pair in a TFO Group, select all the ports associated with the target LUN/Affinity group at the same time.
- Configure access paths (Host Affinity) for CA ports on Secondary Storage after having configured TFO Groups. If access paths (Host Affinity) are configured for CA ports on Secondary Storage before configuring TFO Groups, at that point the volumes in Secondary Storage are recognized by business server, possibly causing a trouble. For this reason, on the port pair selection screen, a CA port on the Secondary Storage on which the access path (host affinity) has been set cannot be selected.
- When adding a CA port for the TFO Group, it is necessary for the Primary Storage TFO status to be "Active" and the Secondary Storage TFO status to be "Standby".

9.4.2 Operation


9.4.2.1 Allocating Business Volume

Start or change operation of the Storage Cluster function in the following steps:

1. [Preparing Business Volume](#)
2. [Configuring Access Path](#)
3. [Confirming Configuration](#)

The example of structure regarding allocation of business volumes is shown in "Figure 9.12 Storage Cluster Function: Structure Example of Allocating Business Volume".

Figure 9.12 Storage Cluster Function: Structure Example of Allocating Business Volume

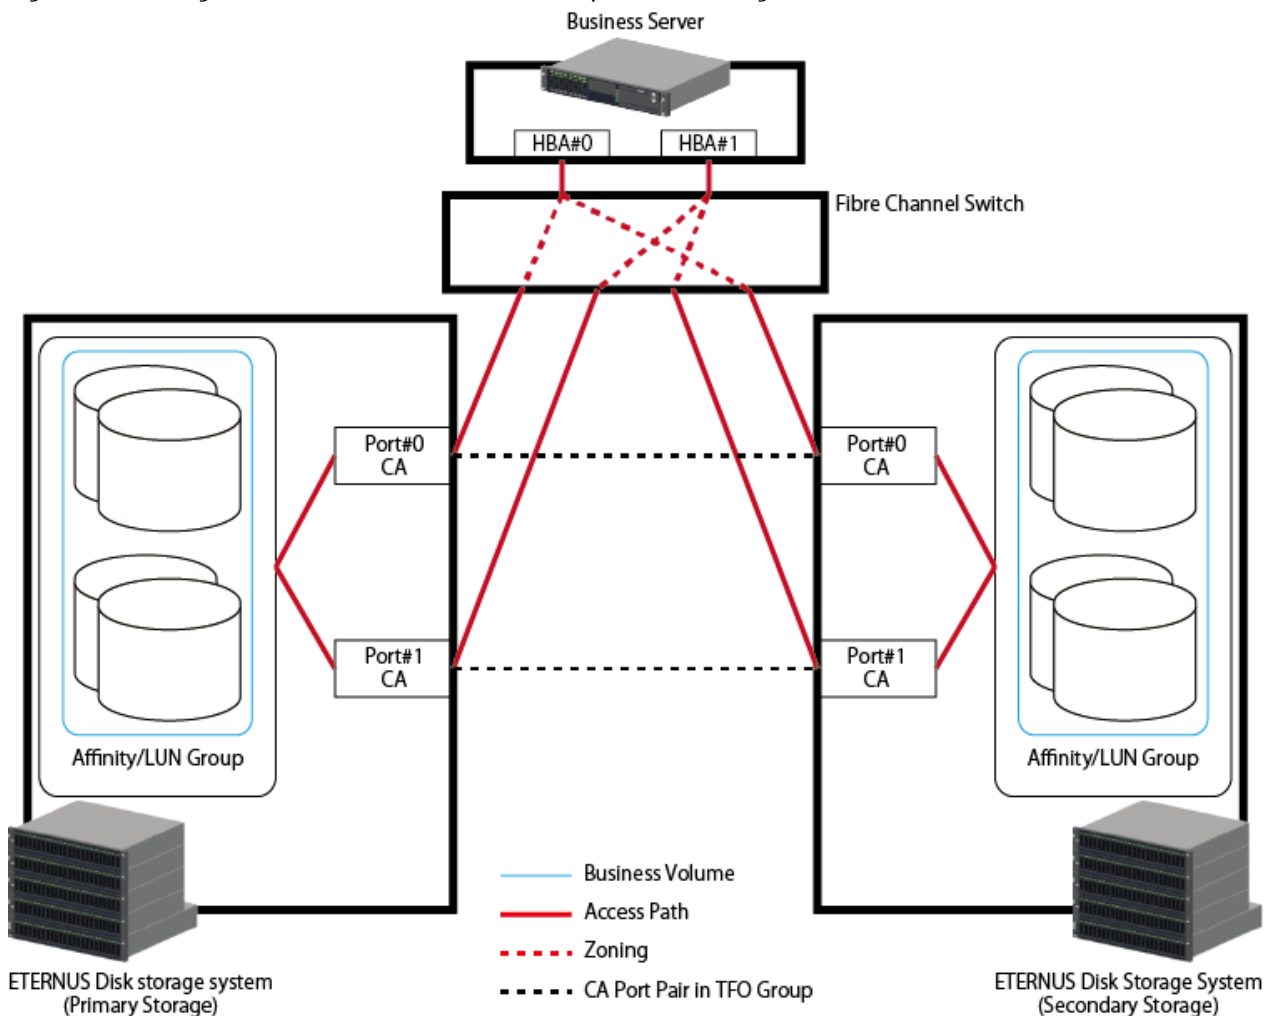

Preparing Business Volume

Prepare volumes to be switched in the Storage Cluster function. Perform this operation on Primary and Secondary ETERNUS Disk storage systems respectively.

The volumes to be switched by Storage Cluster must meet all of the following requirements:

- There should be volumes of the same size in respective Primary and Secondary ETERNUS Disk storage systems.

- Volume type is any of "Standard", "WSV", "TPV" or "FTV".
And the volume type of corresponding volumes on Primary Storage and Secondary Storage should be the same.
"SDV" and "SDPV" are not supported. "FTV" can use the Storage Cluster function. However, to inherit the performance information required to use Automated Storage Tiering and the status of reallocation by Automated Storage Tiering, after failover/failback, access status data should be synchronized.
- Advanced Copy should not be in operation.

Note

The volume that belongs to the pair of CA ports cannot be shared from the unused port by the Storage Cluster function.

See

- Refer to "Create Volume" or "Create FTV" in the *ETERNUS SF Web Console Guide* to create a new volume.
- Refer to "Access Status Data Synchronization" in the *ETERNUS SF Storage Cruiser Operation Guide for Optimization Function* for the method to synchronize access status data.

If there is no space in RAID group, Thin Provisioning pool or Tier pool, refer to "Operations for RAID Group", "Operations for Thin Provisioning" or "Operations for Automated Storage Tiering" in the *ETERNUS SF Web Console Guide* to secure areas.

When using the volumes already allocated to servers for the Storage Cluster function, create volumes in an ETERNUS Disk storage system as Secondary Storage so that the above requirements are met.

In addition, if Advanced Copy is in operation, stop it.

See

To stop Advanced Copy, refer to either of the following sites in accordance with the function in use:

- When the Copy Control Module function of AdvancedCopy Manager is in use:
Refer to "Operations Started from Storage Tab" in the *ETERNUS SF Web Console Guide*.
- When the backup operation or replication operation of AdvancedCopy Manager is in use:
Refer to "Operations Started from Server Tab" - "Operations for Advanced Copy" in the *ETERNUS SF Web Console Guide*.

Configuring Access Path

Connect the volumes to be switched by Storage Cluster function to servers. Perform this operation on Primary and Secondary ETERNUS Disk storage systems respectively.

The following operations are required to configure access paths:

- Create Affinity / LUN group.
- Configure Host Affinity (Associate server HBA, port on disk storage system and Affinity/LUN group)
- Configure FC switch zoning.

It is recommended to use the volume allocation function to configure access paths that can perform the above operations all at one time and configure multiple access paths between a certain server and a certain ETERNUS Disk storage system at the same time.


See

Refer to "Assign ETERNUS Disk Storage System Volumes to Server" in the *ETERNUS SF Web Console Guide* for the procedure to allocate volumes.

Configure access path in the following steps:


- About selection of server HBA and port on ETERNUS Disk storage system
Associate the two ports specified as a pair in TFO Groups with the same HBA.
For example, if HBA and ports are selected as shown in "Figure 9.13 Storage Cluster Function: Example of Correct Access Path Configuration", the Storage Cluster function is available.

Figure 9.13 Storage Cluster Function: Example of Correct Access Path Configuration

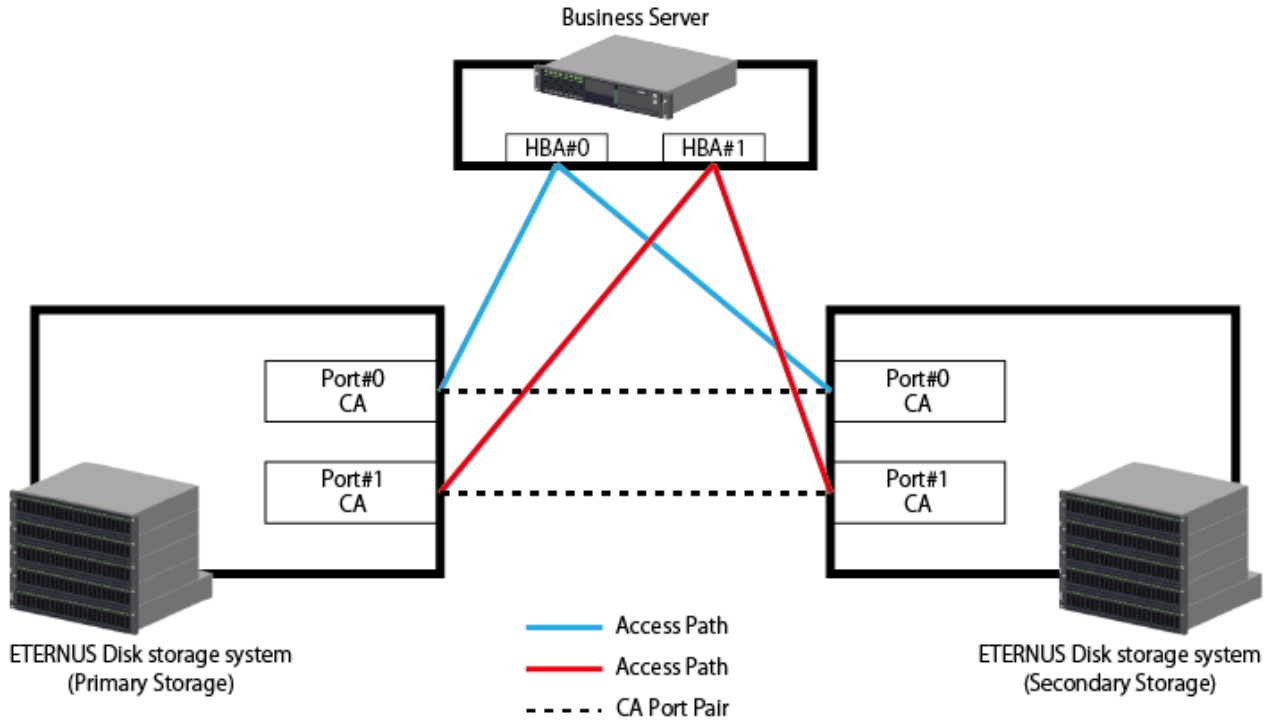

If HBA and ports are selected as shown in "Figure 9.14 Storage Cluster Function: Example of Incorrect Access Path Configuration", the Storage Cluster function is not available.

Figure 9.14 Storage Cluster Function: Example of Incorrect Access Path Configuration

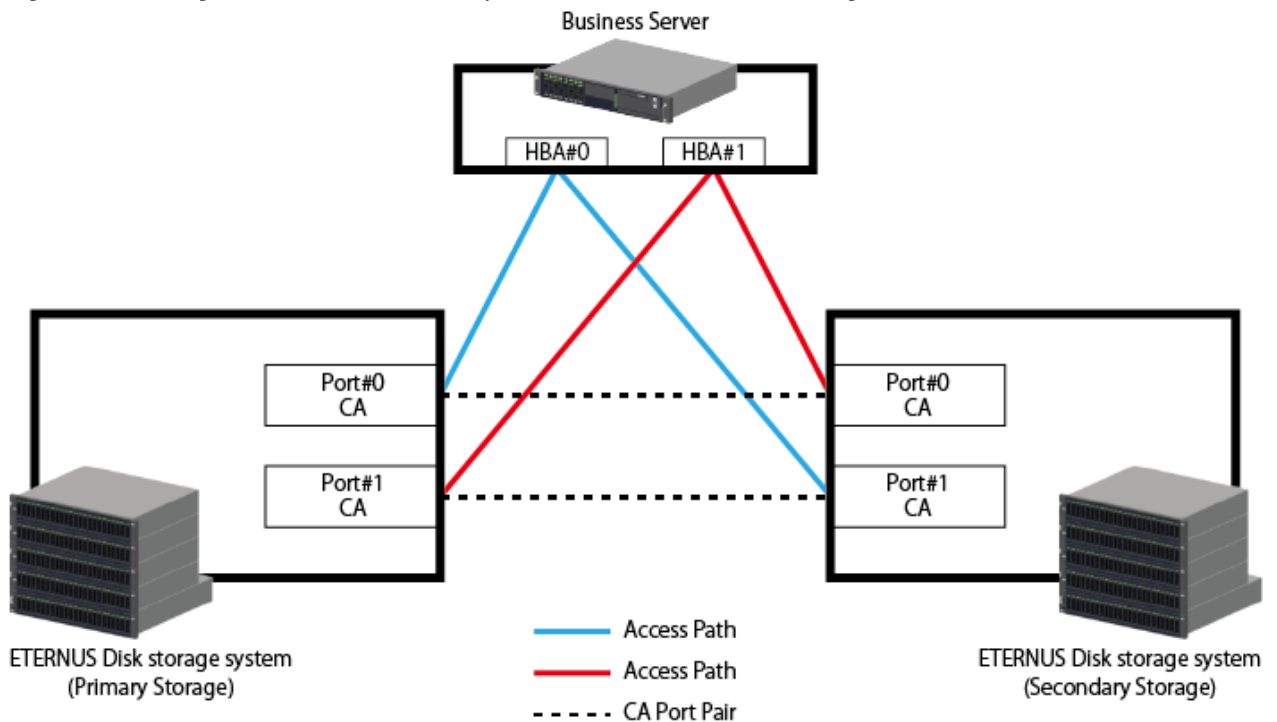

- About creation of Affinity/LUN group
Storage Cluster function enabled volumes must be defined to Affinity/LUN group based on the following rules:
 - The Primary/Secondary Storage hosts LUN No.(HLU) are the same.
 - The volume capacities for the Primary/Secondary Storage are the same.
 - The volume type is either "Standard", "WSV", "TPV" or "FTV". And the volume type for corresponding volumes on the Primary Storage and Secondary Storage is the same.

Note

- If access path configuration does not meet the requirements, error occurs on the device side and the operation log is displayed. Refer to the *ETERNUS SF Message Guide* for corrective actions.
- When setting the Primary/Secondary Storage LUN mapping, set the same number for the host LUN. Of the volumes for which host affinity is set for the two ports of CA port pair, volumes for which host LUN No.(HLU) and volume capacity match are the target for synchronization.

Confirming Configuration

When access paths are configured to Primary and Secondary ETERNUS Disk storage systems, the volumes start to be synchronized by the Storage Cluster function.

Take the following steps to see whether specified volumes are properly configured as Storage Cluster function enabled volumes:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Volume**.
Created volumes are displayed on the Main pane. If a string of "/TFOV" is included in the value displayed in the **Usage** column, the volume is properly configured as a Storage Cluster enabled volume.
It takes a certain period of time for access paths to be configured and volumes to be synchronized so that failover is enabled. Check the progress rate of the synchronization processing from the TFO Group details screen. To see whether synchronization is complete and failover is executable, continue to perform Step 4.
4. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster and created TFO Groups are displayed on the Main pane.
Check the value in the **Phase** column of the TFO Group:
 - "Normal"
Volume synchronization within the TFO Group is all complete, and it is in a state that Failover is made possible. Check the following when using Automatic Failover.
 - **Failover Mode** of TFO Group is to be "Auto", and
 - **Status** of TFO Group is to be "Normal".
 - "Copying"
Volume has been synchronizing from Primary Storage to Secondary Storage. Wait until synchronization will to be completed.
 - In cases other than those listed above
Refer to "[9.4.2.6 Status of TFO Group](#)".

Point

When all the following requirements are met, the access state data between the Primary/Secondary Storage can be synchronized.

- It is configured that the synchronization of the volume by the Storage Cluster function can begin between FTV.
- Automated Storage Tiering control function on ETERNUS Disk storage system is used.

Refer to "Access Status Data Synchronization" in the *ETERNUS SF Storage Cruiser Operation Guide for Optimization Function* for the synchronization procedure of the access state data.


Note

- In host affinity groups under a pair of CA ports, the volumes that have the same HLU number and capacity can be a synchronized pair. Match those volumes with the same HLU number and capacity.
- In volume synchronization, an initial copy is done between paired volumes. The time required for initial copy is affected by line speed of transfer, quality, data compression ratio (depending on data contents), being greatly varied. An indication of time required is as follows:

Table 9.5 Time Required for Initial Copy (Standard Value of 1TB Physical Capacity Volume)

| Requirements for Initial Copy | Time needed |
|--|-------------|
| FC-RA port and IP network: one line (1Gbit/sec) connection, Typical throughput of FC switch: 114MB/sec (=114,000,000byte/sec) (data compression ratio 50%, no delay) | 1.5 hrs |
| FC-RA port and IP network: one line (100Mbit/sec) connection, Typical throughput of FC switch: 12MB/sec(12,000,000byte/sec) (data compression ratio 50%, no delay) | 13 hrs |
| iSCSI-RA port and IP network: one line (1Gbit/sec) connection, Typical throughput of iSCSI-RA port: 26MB/sec (no data compression, 30msec delayed) | 12 hrs |

Figure 9.15 Storage Cluster Function: Example of Synchronized Volumes

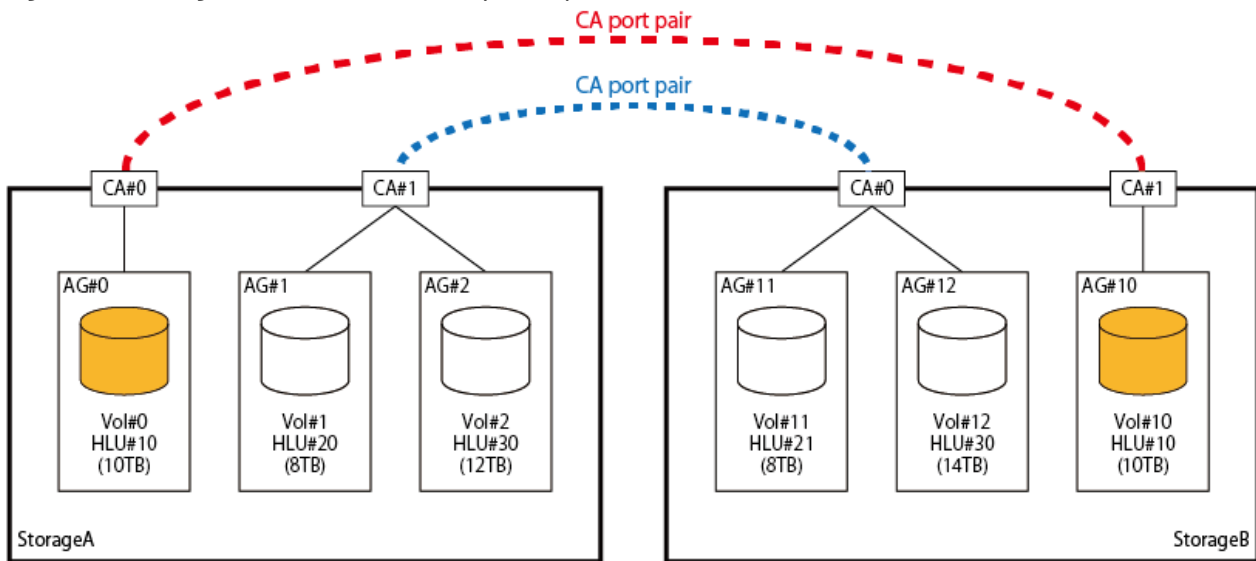

The above figure represents the following matters:

- A pair of Vol#0 of Storage A and Vol#10 of Storage B is the same in HLU number and size, so that they are synchronized (failover enabled) volumes.
- A pair of Vol#1 of Storage A and Vol#11 of Storage B is different in HLU number, so that they cannot be synchronized.
- A pair of Vol#2 of Storage A and Vol#12 of Storage B is different in size, so that they cannot be synchronized.

Trying to make a pair of CA ports correlated to the volumes that are the same in HLU number but different in size terminates the processing abnormally.

- Refer to "9.4.2.6 Status of TFO Group" for the status of TFO Group.

9.4.2.2 Updating TFO Group Status

The TFO Group status is automatically updated.

Perform the following procedure when you need to update it to its most recent state right away.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster and created TFO Groups are displayed on the Main pane.
4. On the Action pane, click **Update** under TFO Group Status.
A dialog box is displayed. Click **Done**.
When this operation is performed, the TFO status of the other device paired with the selected device is also updated.



- If communication is disabled between paired devices, the operation terminates abnormally with error status. Even in this case, the selected device is updated.
- Refer to "[9.4.2.6 Status of TFO Group](#)" for the status of TFO Group.

9.4.2.3 Adding and Deleting Business Volume

When changing any Storage Cluster function enabled volume, delete it or add a volume or do both. Specifically, Affinity/LUN groups must be changed for Primary and Secondary ETERNUS Disk storage systems. The procedure to see which Affinity/LUN group to change is as follows:

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Connectivity**.
The items on the Category pane switch to those associated with Connectivity.
4. On the Category pane, click **Host Affinity**.
A list of host affinities is displayed on the Main pane.
Check in the Port column, host affinity including ports specified as pairs in TFO Groups. The Affinity/LUN group configured to the host affinity must be changed.



Refer to "Change Affinity/LUN Group Settings" in the *ETERNUS SF Web Console Guide* for the procedure to change Affinity/LUN group.

After changing, it takes a certain period of time for volumes to be synchronized and failover to be enabled.

Refer to "[Confirming Configuration](#)" in "[9.4.2.1 Allocating Business Volume](#)" for the procedure to see if synchronization is completed and failover is executable.



- There is an upper limit to the number of volumes that can be defined to one Affinity/LUN group. Refer to the manual for the ETERNUS Disk storage system in use for the upper limit.
- The capacity expansion and format of Storage Cluster function enabled volumes are not supported.
- Advanced Copy should not be in operation.

9.4.2.4 Manual Failover/Failback

If Storage Cluster Controller is placed and Automated Failover is set when configuring TFO Groups, any failure in ETERNUS Disk storage systems are detected and failover is automatically performed. In the case the Storage Cluster Controller is not placed or switchover is needed right now for switching test, failover can be done manually. When performing Failover manually, Normal mode and Forced mode can be selected. Refer to "9.4.2.5 Force-Failover" for Forced mode.

When setting automatic Failback with a TFO Group setting, after the Primary Storage ETERNUS Disk storage system has recovered, failback is performed automatically after detecting that it has moved into a state where failback is possible. When it is recovered from RAID failure and you wish to switchover at an arbitrary time, it is possible to perform manual failback.

The following is the procedure to perform failover/failback manually. Failover/failback can be performed from either Primary/Secondary Storage.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster and created TFO Groups are displayed on the Main pane.
4. On the Main pane, select a TFO Group for which you want to enable failover or failback and click **Failover** or **Failback** on the Action pane.
A warning dialog box is displayed.
5. When enabling failover or failback, click **OK**.



Point

.....
If Primary ETERNUS Disk storage system is down or removed and communication is not enabled with that storage system, Manual Failover is not possible. Make sure that Primary disk storage system is stopped to execute Force-Failover.
.....

9.4.2.5 Force-Failover

Execute Force-Failover only when Primary ETERNUS Disk storage system is down or removed and becomes inaccessible from business servers.

1. Click **Storage** on the global navigation tab.
Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of a target ETERNUS Disk storage system.
Select a Primary ETERNUS Disk storage system.
3. On the Category pane, click **Storage Cluster**.
The items on the Category pane switch to those associated with Storage Cluster and created TFO Groups are displayed on the Main pane.
4. On the Main pane, select a TFO Group for which you want to enable Force-Failover and click **Force-Failover** on the Action pane.
A warning dialog box is displayed.
5. When executing Force-Failover, click **OK**.



Note

.....
If the ETERNUS Disk storage system as Primary Storage is connected to business servers, do not execute this function.
If this function is executed, the ETERNUS Disk storage system as Secondary Storage checks the status of the Primary ETERNUS Disk storage system and tries to do secure failover. However, if the status cannot be checked, the Secondary ETERNUS Disk storage system is forced to be active.

At this stage, if the Primary ETERNUS Disk storage system is connected to servers, both Primary and Secondary Storage systems are caused to be active, possibly leading to data corruption due to overlapped WWP/WWNN.
.....

9.4.2.6 Status of TFO Group

Each status of TFO Group has the following meaning:

Active/Standby

This displays whether the disk storage is connected to the server (active side) or not connected to the server (standby side).

| Status | Meaning |
|--------------|--|
| Active | Indicates that the disk storage is currently connected to a server (active side). |
| Standby | Indicates that the disk storage is not connected to a server (standby side). |
| Unknown (*1) | Trouble with network is causing status update to fail. A disk storage switched due to a failure becomes "Unknown" because status update is sure to fail. Refer to " 9.4.2.2 Updating TFO Group Status " to update the status of TFO Group. |

*1: "Unknown" has a meaning common to all the statuses, so is omitted hereinafter.

Phase

This displays the status of TFO Group. It varies with the configuration of TFO Groups, operation of failover/failback and state of volume synchronization.

| Status | Meaning |
|-------------------|---|
| Initial | Indicates that TFO Group is configured but no volume is allocated. Refer to " 9.4.1 Installation " and " 9.4.2 Operation " to continue configuration. |
| Maintenance | Indicates that copy sessions between TFO port pairs and volumes are forcibly cleared. Refer to " 9.4.1 Installation " and " 9.4.2 Operation " to review the configuration or reconfigure the configurations. Both the Primary/Secondary Storages at this status, failover/failback can be executed. |
| Copying | Indicates that volumes are being synchronized from Primary Storage to Secondary Storage. Wait for synchronization to be completed. |
| Normal | Indicates that volume synchronization is completed and failover is ready to be done. |
| Failovered | Indicates the status immediately after failover is completed. Update after a while. |
| Copying Back | Indicates that after recovery of Primary Storage, volumes are being synchronized from Secondary Storage to Primary Storage. Wait for synchronization to be completed. |
| Failback Ready | Indicates that after recovery of Primary Storage, volume synchronization is completed and failback is ready to be done. |
| Failbacked | Indicates the status immediately after failback is completed. Update after a while. |
| Failed | This state indicates that the ETERNUS Disk storage system is down or the REC route is disconnected. During the failover/failback sequence, if this phase is displayed, wait a while before updating. |
| Inconsistent (*1) | There is a phase inconsistency for the Primary TFO Group and the Secondary TFO Group. After confirming the Phase column value from the TFO Group details screen for both Primary/ Secondary storages, follow each direction on this table. |

*1: This is only displayed on the Storage Cluster overview screen.

Status

This displays whether TFO Group status is normal or error.

| Status | Meaning |
|--------|--|
| Halt | Indicates that there is a fault in TFO Group. Refer to " Halt Factor " to take action. |

| Status | Meaning |
|-------------------|---|
| Normal | Indicates that TFO Group is in normal status. |
| Inconsistent (*1) | There is a phase inconsistency for the Primary TFO Group and the Secondary TFO Group. After confirming the Status column value from the TFO Group details screen for both Primary/Secondary storages, follow each direction on this table. |

*1: This is only displayed on the Storage Cluster overview screen.

Halt Factor

If there is any error in TFO Group, its cause is displayed.

| Status | Meaning |
|--------------------------------|---|
| None | Indicates that TFO Group is in normal status. No action is required. |
| TFO Group Disconnected | Indicates that the path to a destination device is blocked or the device is not started. Remove the factor of path blockage or start the destination device. |
| Version Mismatch | Indicates that a destination device does not support Storage Cluster function or the firmware version does not support Storage Cluster. If the firmware is not up-to-date, update the firmware. |
| TFO Group Setting Missing | TFO Group settings of a destination device are not found. Refer to " 9.4.1 Installation " and " 9.4.2 Operation " to review the settings or reconfigure. |
| TFO Group Setting Mismatch | Indicates that data transfer of Storage Cluster is disabled at all the RA ports of Secondary Storage or there are some inconsistencies in TFO Group settings at a destination device. Take either of the following actions: <ul style="list-style-type: none"> - Review the port parameters for Secondary Storage. - Refer to "9.4.1 Installation" and "9.4.2 Operation" to review the TFO Group settings or reconfigure. |
| Monitoring Server Disconnected | Indicates that the path to Storage Cluster Controller is blocked or Storage Cluster Controller is not started. This status is displayed only when Storage Cluster Controller is set up. Take either of the following actions: <ul style="list-style-type: none"> - Review the communication path between Storage Cluster Controller and ETERNUS Disk storage system. - Refer to "9.5 Storage Cluster Controller" to review the settings or reconfigure. |



Note

When any status other than those above is displayed, perform the following operations:

- After a while, perform "[9.4.2.2 Updating TFO Group Status](#)".
- Refer to "[9.4.1 Installation](#)" and "[9.4.2 Operation](#)" to review the settings or reconfigure.

If the problem is not solved, record the displayed status to contact Fujitsu Technical Support.

9.4.3 Maintenance

This section describes the maintenance procedure for the Storage Cluster environment.

This section, for the purpose of convenience, defines and explains the following names.

| Defined Names Used in Explanation in This Section | Meaning of Defined Names |
|---|--------------------------|
| ETERNUS-A | Primary Storage |

| Defined Names Used in Explanation in This Section | Meaning of Defined Names |
|---|---|
| ETERNUS-B | Secondary Storage |
| ETERNUS-C | ETERNUS Disk storage system prepares to restructure the Storage Cluster environment after the Primary storage or Secondary storage is removed |

Point

- The TFO group status is automatically updated. Re-check it after waiting for a while or manually updating the TFO group status by referring to "9.4.2.2 Updating TFO Group Status" when the status which is different from the procedure is displayed.
- Refer to the ETERNUS Disk storage system manuals for the command name and the format of ETERNUS CLI used in the procedure.
- For the Advanced Copy maintenance contents when operating the AdvancedCopy Manager, refer to "Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function" and "Table 9.7 When Using AdvancedCopy Manager Replication Management Function".
 - When the AdvancedCopy Manager Copy Control Module function is in use, refer to "Command References" in the *ETERNUS SF AdvancedCopy Manager Operation Guide for Copy Control Module* for information on the commands.
 - When the AdvancedCopy Manager replication management function is in use, refer to "Command References" in the *ETERNUS SF AdvancedCopy Manager Operation Guide* for information on the commands.

Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function

| Maintenance Contents | Type of Copy Being Executed | | |
|--|--|--|--|
| | OPC/QuickOPC | SnapOPC+ | EC/REC |
| (a) Stopping the copy session | Confirms the copy session by using the acopc query command and stops the copy session by using the acopc cancel command. | Confirms the copy session by using the acsnap query command and stops the copy session by using the acsnap cancel command. | Confirms the copy session by using the acec query command and stops the copy session by using the acec cancel command. |
| (b) Stopping copy sessions when the TFO status is in "Standby" | By using the accopy query command this execution confirms that the TFO status of the copy session for the ETERNUS Disk storage system is in "Standby", and stops the copy session by using the accopy fcancel command. | | |
| (c) Deleting AdvancedCopy Manager environment settings | Deletes copy pairs by using the acpair remove command. | | |
| (d) Configuring the AdvancedCopy Manager environment | Adds copy pairs by using the acpair add command. | | |
| (e) Starting a copy session | Starts copy sessions by using the acopc start command. | Starts copy sessions by using the acsnap start command. | Starts copy sessions by using the acec start command. <ul style="list-style-type: none"> - When using the Storage Cluster Continuous Copy function and when there are ETERNUS Disk storage system copy sessions with the TFO status in "Active", temporarily suspend EC |

| Maintenance Contents | Type of Copy Being Executed | | |
|---|--|----------|--|
| | OPC/QuickOPC | SnapOPC+ | EC/REC |
| | | | by using the acec suspend command and restart the EC by using the acec resume command. |
| (f) Checking the status of the copy session | Confirms copy session status confirmation and performs recovery, referring to "When Recovering Storage Cluster Continuous Copy Function" in the <i>ETERNUS SF AdvancedCopy Manager Operation Guide for Copy Control Module</i> . | | |
| (g) Stopping management service | Stops the management service with the acservice stop command. | | |

Table 9.7 When Using AdvancedCopy Manager Replication Management Function

| Maintenance Contents | Type of Copy Being Executed | | |
|--|--|---|---|
| | OPC/QuickOPC | SnapOPC+ | EC/REC |
| (a) Stopping the copy session | Confirms the copy session by using the swsrpstat command and stops the copy session by using the swsrpcancel command. | | |
| (b) Stopping copy sessions when the TFO status is in "Standby" | <p>Confirms the copy session with the accopy query command and stops the copy session with the accopy fcancel command on the Management Server.</p> <p>In the case of the replication management function commands, this operation cannot be executed in relation to storage device where the TFO status is in "Standby". For this reason, use the AdvancedCopy Manager Copy Control function commands only when stopping the copy session in the storage device where the TFO status is in "Standby".</p> | | |
| (c) Deleting AdvancedCopy Manager environment settings | <p>Deletes reproduction volume information by using the swsrpdelvol command.</p> <p>When there are copy sessions in the ETERNUS Disk storage system where the TFO status is "Active", delete the reproduction volume information by specifying the -e option for the swsrpdelvol command.</p> | | |
| (d) Configuring the AdvancedCopy Manager environment | Configures the AdvancedCopy Manager environment by using the swsrpsetvol command. | | |
| (e) Starting a copy session | <ul style="list-style-type: none"> - Starts the copy session by using the swsrpmake command in the case of OPC. - Starts the copy session by specifying the -T option for the swsrpmake command in the case of QuickOPC. | Starts the copy session by specifying the -C option or -P option for the swsrpmake command. | <p>Starts the copy session by using the swsrpstartsync command.</p> <ul style="list-style-type: none"> - When using the Storage Cluster Continuous Copy function and when there are ETERNUS Disk storage system copy sessions with the TFO status in "Active", temporarily suspend EC by using the swsrpmake command and restart the EC by using the swsrpstartsync command. |

| Maintenance Contents | Type of Copy Being Executed | | |
|---|---|----------|--------|
| | OPC/QuickOPC | SnapOPC+ | EC/REC |
| (f) Checking the status of the copy session | Confirms copy session status and performs recovery, referring to "When Recovering Storage Cluster Continuous Copy Function" in the <i>ETERNUS SF AdvancedCopy Manager Operation Guide for Copy Control Module</i> . | | |

- When recovering, the initial copy takes place between the pair volumes. For an estimate of the initial copy required time, refer to "Table 9.5 Time Required for Initial Copy (Standard Value of 1TB Physical Capacity Volume)".

9.4.3.1 ETERNUS Disk Storage System Fault

This section describes the procedure for replacing the ETERNUS Disk storage system for each cabinet.

When Replacing Primary Storage

1. When a fault occurs when the ETERNUS-A is operating with the ETERNUS-A TFO status in "Active", if the Failover mode is "Auto", the Automatic Failover is performed. When the Failover mode is "Manual", perform the Manual Failover, referring to "9.4.2.4 Manual Failover/Failback".
2. Remove the fiber channel cable connected to the ETERNUS-A CA port.
3. When ETERNUS-A is being operated using the AdvancedCopy Manager Copy Control Module function, stop the management service of AdvancedCopy Manger CCM. Refer to "(g) Stopping management service" of "Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function" for the stop procedure of the management service.
4. Delete the TFO group, referring to "9.4.3.6 Deleting Storage Cluster Environment". At this time, in order to take over the logical WWPN/WWNN set in the ETERNUS-B, click **WWPN takeover** and delete the TFO group.
5. Remove ETERNUS-A.
6. In ETERNUS-C, create the same business volume as ETERNUS-A that is in the process of being removed. At this time, do not hard wire the business server and ETERNUS-C.
7. Configure the Storage Cluster environment with ETERNUS-B as the Primary Storage and ETERNUS-C as the Secondary Storage.
8. Connect the fiber channel disconnected in step 2 to the CA port of ETERNUS-C and hard wire the connection with the business server.
9. After confirming that the ETERNUS-B TFO group phase is "Normal", perform the Manual Failover, referring to "9.4.2.4 Manual Failover/Failback".
10. Remove the fiber channel cable connected to the ETERNUS-B CA port.
11. Delete the TFO group, referring to "9.4.3.6 Deleting Storage Cluster Environment". At this time, in order to take over the logical WWPN/WWNN set in ETERNUS-C, click **WWPN takeover** and delete the TFO group.
12. Configure the Storage Cluster environment with ETERNUS-B as the Secondary Storage and ETERNUS-C as the Primary Storage.
13. Reconnect the business server to ETERNUS-B which was disconnected in step 10. An initial copy from ETERNUS-C to ETERNUS-B is completed, and it returns to former state of the operation.
14. When operating AdvancedCopy Manager, configure the AdvancedCopy Manager environment. Refer to "(d) Configuring the AdvancedCopy Manager environment" in "Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function" or in "Table 9.7 When Using AdvancedCopy Manager Replication Management Function" for the configuration procedure.



Note

Do not reconnect ETERNUS-A after deleting the TFO group set in ETERNUS-B in step 4. There is a possibility that data corruption may occur due to WWPN/WWNN duplication.

When Replacing Secondary Storage

1. Delete ETERNUS-B from the product and remove it so that it will not be managed.
2. When ETERNUS-B is being operated using the AdvancedCopy Manager Copy Control Module function, stop the management service of AdvancedCopy Manger CCM.
Refer to "(g) Stopping management service" of ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) for the stop procedure of the management service.
3. Delete the TFO group, referring to ["9.4.3.6 Deleting Storage Cluster Environment"](#).
4. Register ETERNUS-C to the product as the new Secondary Storage.
5. Reconstruct the Storage Cluster environment by using ETERNUS-A and ETERNUS-C.
6. When operating AdvancedCopy Manager, configure the AdvancedCopy Manager environment.
Refer to "(d) Configuring the AdvancedCopy Manager environment" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the configuration procedure.



See

Execute steps 4 and 5 in the Secondary Storage, referring to ["Figure 9.8 Adding Secondary Storage Where Only Primary Storage is used"](#) in ["9.3 Work Flow"](#).

9.4.3.2 RAID Failure

Check on the following conditions whether any RAID failure is occurring in the Primary Storage or Secondary Storage:

- On the Web Console, the device status is not "Normal", and
- On the Web Console, the status of RAID group is "Broken".

When RAID's Primary Storage Breaks Down

1. When ETERNUS-A operates it with the TFO status in "Active", the Failover method when the RAID breakdown occurs is different depending on the Failover mode. When the Failover mode is "Auto", the Automatic Failover is performed. When the Failover mode is "Manual", perform the Manual Failover, referring to ["9.4.2.4 Manual Failover/Failback"](#).
This step is not necessary when the ETERNUS-A TFO status is operating in "Standby".
2. When Failback mode is operating in "Auto", as it is necessary to perform Failback after confirming the copy session status, change this to "Manual".
3. When operating the AdvancedCopy Manager, stop the volume copy session belonging to the defect RAID.
Refer to "(a) Stopping the copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session stop procedure.
When using the Storage Cluster Continuous Copy function and when the Automatic Failover has been performed, it is possible to just stop copy sessions on the ETERNUS-A volume. For the procedure for stopping ETERNUS-A copy sessions, refer to "(b) Stopping copy sessions when the TFO status is in "Standby"" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#).
4. In ETERNUS-B, use the ETERNUS CLI command to release the TFO pair.
5. Maintain the ETERNUS-A RAID.
6. For ETERNUS-B, use the ETERNUS CLI command to recover the TFO pair.
7. Wait for the initial copy from ETERNUS-B to ETERNUS-A to complete.
From the Storage Cluster overview screen, check that the TFO group phase is set to "Failback Ready".
8. When operating the AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session start procedure.

9. Check that the copy session status matches between ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.
10. Perform the Manual Failback, referring to "[9.4.2.4 Manual Failover/Failback](#)".
11. When the Failback mode is changed to "Manual" in step 2, change to "Auto".

When RAID's Secondary Storage Breaks Down

1. When an ETERNUS-B RAID failure occurs while operating with the ETERNUS-B TFO status in "Active", perform the Manual Failback, referring to "[9.4.2.4 Manual Failover/Failback](#)".
This step is not necessary when the ETERNUS-B TFO status is operating in "Standby".
2. When operating AdvancedCopy Manager, stop the volume copy session belonging to the defect RAID.
Refer to "(a) Stopping the copy session" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
When using the Storage Cluster Continuous Copy function and when the Manual Failback has not been performed in step 1, it is possible to just stop copy sessions on the ETERNUS-B volume. For the procedure for stopping ETERNUS-B copy sessions, refer to "(b) Stopping copy sessions when the TFO status is in "Standby"" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)".
3. In ETERNUS-B, use the ETERNUS CLI command to release the TFO pair.
4. Maintain the ETERNUS-B RAID.
5. For ETERNUS-B, use the ETERNUS CLI command to recover the TFO pair.
6. Wait for the copy from ETERNUS-A to ETERNUS-B to complete.
From the Storage Cluster overview screen, check that the TFO group phase is "Normal".
7. When operating the AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session start procedure.
8. Check that the copy session status matches between ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.

9.4.3.3 RAID Blocking

Check on the following conditions whether any RAID blocking is occurring in the Primary Storage or Secondary Storage:

- On the Web Console, the device status is not "Normal", and
- On the Web Console, the status of RAID group is "No Disk Path".

When RAID's Primary Storage Is Blocked

1. When ETERNUS-A RAID blocking occurs while the ETERNUS-A TFO status is operating in "Active", perform the Manual Failover, referring to "[9.4.2.4 Manual Failover/Failback](#)".
This step is not necessary when ETERNUS-A TFO status is operating in "Standby".
2. When Failback mode is operating in "Auto", as it is necessary to perform Failback after confirming the copy session status, change this to "Manual".
3. When operating AdvancedCopy Manager, stop the copy sessions on the volume to which the closed RAID belongs.
Refer to "(a) Stopping the copy session" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session stop procedure.
When using the Storage Cluster Continuous Copy function and when the Manual Failover has not been performed in step 1, it is possible to just stop copy sessions on the ETERNUS-A volume. For the procedure for stopping ETERNUS-A copy sessions, refer to "(b) Stopping copy sessions when the TFO status is in "Standby"" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)".

4. In ETERNUS-B, use the ETERNUS CLI command to release the TFO pair.
5. Maintain ETERNUS-A RAID.
6. For ETERNUS-B, use the ETERNUS CLI command to recover the TFO pair.
7. Wait for the copy from ETERNUS-B to ETERNUS-A to complete.
From the Storage Cluster overview screen, check that the TFO group phase is set to "Failback Ready".
8. When operating the AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session start procedure.
9. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session status confirmation procedure.
10. Perform the Manual Failback, referring to ["9.4.2.4 Manual Failover/Failback"](#).
11. When the Failback mode is changed to "Manual" in step 2, change to "Auto".

When RAID's Secondary Storage Is Blocked

1. When ETERNUS-B RAID blocking occurs when the ETERNUS-B TFO status is operating in "Active", perform the Manual Failback, referring to ["9.4.2.4 Manual Failover/Failback"](#).
This step is not necessary when the ETERNUS-B TFO status is operating in "Standby".
2. When AdvancedCopy Manager is operating, stop the copy sessions on the volume to which the closed RAID belongs.
Refer to "(a) Stopping the copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session stop procedure.
When using the Storage Cluster Continuous Copy function and when the Manual Failback has not been performed in step 1, it is possible to just stop copy sessions on the ETERNUS-B volume. For the procedure for stopping ETERNUS-B copy sessions, refer to "(b) Stopping copy sessions when the TFO status is in "Standby"" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#).
3. In ETERNUS-B, use the ETERNUS CLI command to release the TFO pair.
4. Maintain the ETERNUS-B RAID.
5. For ETERNUS-B, use the ETERNUS CLI command to recover the TFO pair.
6. Wait for the copy from ETERNUS-A to ETERNUS-B to complete.
From the Storage Cluster overview screen, check that the TFO operating group is set to "Normal".
7. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session start procedure.
8. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session status confirmation procedure.

9.4.3.4 Bad Sectors

Check on the following conditions whether any bad sectors are occurring in the Primary Storage or Secondary Storage:

- The following message is displayed in Overview of the ETERNUS Web GUI:

Bad Sector has occurred. Please check the details by the volume navigation.

The bad sector areas are recovered from devices for which TFO status is "Active" to the Standby device.

If the **Status** column on **Volume** tab of the TFO group details screen is set to anything other than "Active", contact a Fujitsu customer engineer.

When Bad Sector Occurs in Primary Storage Copy Source

1. When a bad sector occurs when ETERNUS-A is operating with the ETERNUS-A TFO status in "Active", perform the Manual Failover, referring to ["9.4.2.4 Manual Failover/Failback"](#).
This step is not necessary when the ETERNUS-A TFO status is operating in "Standby".
2. When Failback mode is operating in "Auto", as it is necessary to perform Failback after confirming the copy session status, change this to "Manual".
3. When operating AdvancedCopy Manager, stop the copy session on volumes that have bad sectors.
Refer to "(a) Stopping the copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session stop procedure.
When using the Storage Cluster Continuous Copy function, it is possible to just stop copy sessions on the ETERNUS-A volume.
For the procedure for stopping ETERNUS-A copy sessions, refer to "(b) Stopping copy sessions when the TFO status is in "Standby"" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#).
4. In ETERNUS-B, use the ETERNUS CLI command to release the TFO pair.
5. For ETERNUS-B, use the ETERNUS CLI command to recover the TFO pair.
6. Wait for the copy from ETERNUS-B to ETERNUS-A to complete.
From the Storage Cluster overview screen, check that the TFO group phase is "Failback Ready".
7. Delete the bad sector information for the target LUN from the ETERNUS Web GUI.
8. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session start procedure.
9. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session status confirmation procedure.
10. Perform the Manual Failback, referring to ["9.4.2.4 Manual Failover/Failback"](#).
11. When the Failback mode is changed to "Manual" in step 2, change to "Auto".

When Bad Sector Occurs in Secondary Storage Copy Source

1. When ETERNUS-B bad sectors occur while the ETERNUS-B TFO status is operating in "Active", perform the Manual Failover, referring to ["9.4.2.4 Manual Failover/Failback"](#).
This step is not necessary when the ETERNUS-B TFO status is operating in "Standby".
2. When operating AdvancedCopy Manager, stop the copy session on volumes on which there are bad sectors.
Refer to "(a) Stopping the copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session stop procedure.
When using the Storage Cluster Continuous Copy function, it is possible to just stop copy sessions on the ETERNUS-B volume.
For the procedure for stopping ETERNUS-B copy sessions, refer to "(b) Stopping copy sessions when the TFO status is in "Standby"" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#).
3. In ETERNUS-B, use the ETERNUS CLI command to release the TFO pair.
4. For ETERNUS-B, use the ETERNUS CLI command to recover the TFO pair.
5. Wait for the copy from ETERNUS-A to ETERNUS-B to complete.
From the Storage Cluster overview screen, check that the TFO group phase is "Normal".
6. Delete the bad sector information for the target LUN from the ETERNUS Web GUI.
7. When operating AdvancedCopy Manager, start the copy session.
Refer to "(e) Starting a copy session" in ["Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function"](#) or in ["Table 9.7 When Using AdvancedCopy Manager Replication Management Function"](#) for the copy session start procedure.

8. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.

9.4.3.5 Single-system Operation

This section describes the procedure when running temporarily with a single system, such as when updating the firmware version.

When Maintaining Primary Storage

1. Change to "Manual" when operating Failback mode in "Auto".
2. When maintaining ETERNUS-A while the ETERNUS-A TFO status is operating in "Active", perform the Manual Failover, referring to "[9.4.2.4 Manual Failover/Failback](#)".
3. Maintain ETERNUS-A.
When stopping ETERNUS-A and when ETERNUS-A is being operated using the AdvancedCopy Manager Copy Control Module function, stop ETERNUS-A first and then stop the management service of AdvancedCopy Manager CCM.
Refer to "(g) Stopping management service" of "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" for the stop procedure of the management service.
4. Check that the TFO group operating status is "Failback Ready".
5. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.
6. Perform the Manual Failback, referring to "[9.4.2.4 Manual Failover/Failback](#)".
7. When the Failback mode is changed to Manual as in step 1, change to "Auto".

When Maintaining Secondary Storage

1. When maintaining ETERNUS-B while the ETERNUS-B TFO status is operating in "Active", perform the Manual Failover, referring to "[9.4.2.4 Manual Failover/Failback](#)".
2. Maintain ETERNUS-B.
When stopping ETERNUS-B and when ETERNUS-A is being operated using the AdvancedCopy Manager Copy Control Module function, stop ETERNUS-B first and then stop the management service of AdvancedCopy Manager CCM.
Refer to "(g) Stopping management service" of "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" for the stop procedure of the management service.
3. Check that the TFO group operating status is "Normal".
4. Check that the copy session status matches ETERNUS-A and ETERNUS-B.
Refer to "(f) Checking the status of the copy session" in "[Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function](#)" or in "[Table 9.7 When Using AdvancedCopy Manager Replication Management Function](#)" for the copy session status confirmation procedure.

When Updating Firmware Version

1. Change to "Manual" when operating Failback mode in "Auto".
2. Perform the Manual Failover, referring to "[9.4.2.4 Manual Failover/Failback](#)" for the ETERNUS-A Primary TFO group.
3. Restart ETERNUS-A after applying the firmware to ETERNUS-A.
4. Perform the Manual Failback, referring to "[9.4.2.4 Manual Failover/Failback](#)" for the ETERNUS-B Secondary TFO group.
5. Perform the Manual Failover, referring to "[9.4.2.4 Manual Failover/Failback](#)" for the ETERNUS-B Primary TFO group.
6. Restart the ETERNUS-B after applying the firmware to the ETERNUS-B.
7. Perform the Manual Failback, referring to "[9.4.2.4 Manual Failover/Failback](#)" for the ETERNUS-A Secondary TFO group.

8. When the Failback mode is changed to Manual as in step 1, change to "Auto".

9.4.3.6 Deleting Storage Cluster Environment

To delete the Storage Cluster environment, delete TFO Groups.

Deleting TFO Groups clears the Storage Cluster operation, clearing the synchronization of volumes, too.

Also, when removing Primary Storage after failover to Secondary Storage, the Storage Cluster operation must be canceled and the logical WWPN/WWNN set for the ports to Secondary Storage must not be canceled but inherited. At that stage, specify "WWPN Handover".



Note

Do not specify "WWPN takeover" when the Primary storage is in a connected state.

Delete TFO Groups in the following steps:

1. When operating AdvancedCopy Manager, stop the copy session and delete the AdvancedCopy Manager environment. Refer to "(a) Stopping the copy session" and "(c) Deleting AdvancedCopy Manager environment settings" in "Table 9.6 When Using AdvancedCopy Manager Copy Control Module Function" or in "Table 9.7 When Using AdvancedCopy Manager Replication Management Function" for the copy session stop procedure.
2. Click **Storage** on the global navigation tab. Registered ETERNUS Disk storage systems are displayed on the Main pane.
3. On the Main pane, click the Name of a target ETERNUS Disk storage system.
4. On the Category pane, click **Storage Cluster**. The items on the Category pane switch to those associated with Storage Cluster, and created TFO Groups are displayed on the Main pane.
5. Select one TFO Group on the Main pane and click **Delete** under TFO Group on the Action pane. The TFO Group Deletion Wizard screen is displayed.
6. The Option Selection/Confirmation screen is displayed. When WWPN is inherited to Secondary Storage, click **WWPN Handover**.
7. Click **Delete**.

On completion of deletion, make sure on the FC Port List screen that WWPN is inherited. The procedure is as follows:

1. Click **Storage** on the global navigation tab. Registered ETERNUS Disk storage systems are displayed on the Main pane.
2. On the Main pane, click the Name of the ETERNUS Disk storage system specified as Secondary Storage for Storage Cluster.
3. On the Category pane, click **Connectivity**. A list of port types is displayed on the Main pane.
4. On the Main pane, click **No. of Ports** whose type is FC. A list of FC ports is displayed on the Main pane. When a value is displayed in the Logical WWPN column and TFO Status is "-" (hyphen), that port inherited the logical WWPN/WWNN when TFO Group was deleted.

9.5 Storage Cluster Controller

This section describes Storage Cluster Controller.

9.5.1 Provided Function

Storage Cluster Controller performs the following services as parts of Storage Cruiser's agent functions:

- Monitor the life of ETERNUS Disk storage systems.

- Display monitored status.

9.5.2 Installation Steps

The following is a description of the procedure to install Storage Cluster Controller.

Install in the following steps:

1. [Setting up Device to Be Monitored](#)
2. [Enabling Monitoring Function of Storage Cluster Controller](#)
3. [Restarting Agent](#)
4. [Checking Monitored Status](#)

Setting up Device to Be Monitored

Configure in the TFOConfig.ini file the information for a monitored ETERNUS Disk storage system.

Refer to "[A.12 TFOConfig.ini Parameter](#)" for the configuration method.

Enabling Monitoring Function of Storage Cluster Controller

Edit the Correlation.ini file to enable the monitoring function of Storage Cluster Controller.

Refer to "[A.6 Correlation.ini Parameter](#)" for the configuration method.

Restarting Agent

To reflect settings, restart agent.

Checking Monitored Status

Use the [agtpatrol](#) command to check the status of a monitored ETERNUS Disk storage system.

If no entry of a monitored ETERNUS Disk storage system is output in the command execution result, refer to NOTE in [agtpatrol](#) command.

9.5.3 Operation Procedure

The following is a description of the procedure for operations performed when the Storage Cluster Controller is in use.

- Add and delete a monitored device.
- Change the IP address of a monitored device.

9.5.3.1 Add and Delete Monitored Device

Add and delete a monitored device in the following steps:

1. [Editing TFOConfig.ini File](#)
2. [Restarting Agent](#)
3. [Checking Monitored Status](#)

Editing TFOConfig.ini File

Edit the TFOConfig.ini file as follows:

- Add a monitored device
Add the information for a monitored ETERNUS Disk storage system.
- Delete a monitored device
Delete the information for an ETERNUS Disk storage system excluded from monitored targets.

Refer to "[A.12 TFOConfig.ini Parameter](#)" for the editing method.

Restarting Agent

To reflect settings, restart agent.

Checking Monitored Status

Use the [agtpatrol](#) command to check the status of a monitored ETERNUS Disk storage system.

Check the following matters:

- When adding:
The entry of an added ETERNUS Disk storage system is displayed in the command execution result.
- When deleting:
The entry of a deleted ETERNUS Disk storage system is not displayed in the command execution result.

9.5.3.2 Change IP Address of Monitored Device

Change the IP address of a monitored device in the following steps:

1. [Changing IP Address](#)
2. [Editing TFOConfig.ini File](#)
3. [Restarting Agent](#)
4. [Check Monitored Status](#)

Changing IP Address

Change the IP address of monitored devices.

Editing TFOConfig.ini File

Edit the TFOConfig.ini file as follows:

- Delete pre-change ETERNUS Disk storage system information.
- Add post-change ETERNUS Disk storage system information.

Refer to "[A.12 TFOConfig.ini Parameter](#)" for the editing method.

Restarting Agent

To reflect settings, restart agent.

Check Monitored Status

Use the [agtpatrol](#) command to check the status of a monitored ETERNUS Disk storage system.

Check the following matters:

- The entry of pre-IP address changed ETERNUS Disk storage system is not displayed in the command execution result.
- The entry of post-IP address changed ETERNUS Disk storage system is displayed in the command execution result.

Chapter 10 Maintenance of Devices to Be Managed

10.1 Windows Displayed in Event of Fault and Troubleshooting

If a fault occurs on a device, an error description of the fault is output to the event log in the Web Console, the device status is also changed to [Error] or [Warning] if the support level of the device is A or B. The criteria of [Error] and [Warning] depends on the device definition. If this product can identify an access path affected by the fault, the access path status is changed to [Error].

For a device whose support level is I, an error description of a fault on the device is not output to the event log by default. The color of the device status also remains unchanged. However, if all of the following conditions are satisfied, it is possible to output an error description of the fault to the event log to change the color of the device status:

- The device supports SNMP Traps.
- The device IP address is specified during manual embedding.
- The SNMP Trap XML definition file has been created.



See

Refer to "[A.5 SNMP Trap XML Definition File](#)" for information on how to create the SNMP Trap XML definition file.

On the Web Console, check for faults in the order shown below and take corrective actions as required.

For middleware errors not including server node HBA and multipath faults, only events are reported. To troubleshoot middleware errors, refer to the appropriate middleware manuals.

If ETERNUS Disk Storage System Is in [Error] or [Warning] State

1. On the global navigation tab, click **Storage**.
2. On the Main pane in the disk storage system overview screen, click the target name.
3. On the Main pane in the disk storage system details screen, click the target name.
4. The Maintenance screen for the ETERNUS Disk storage system is started. Find the failed component in the ETERNUS Disk storage system.
For replacement of failed components, contact a Fujitsu customer engineer.

To view the status of CE, DE, ports and disks in the ETERNUS Disk storage system, click **Component** in the Category pane of the Web Console. Before checking the latest status of CE, DE, ports and disks, perform the **Reload Conf.** operation for the ETERNUS Disk storage system.

Refer to "[9.4.3 Maintenance](#)" when the Storage Cluster function is in use.

If Tape Library Is in [Error] or [Warning] State

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Tape Library**.
3. On the Main pane in the manually embedded tape library overview screen, click the target name.
4. On the Main pane in the tape library details screen, click the target name.
5. The Maintenance screen for the tape library is started. Find the failed component in the tape library.
For replacement of failed components, contact a Fujitsu customer engineer.

If Manually Embedded Disk Storage System Is in [Error] or [Warning] State

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Disk Array(Manual)**.
3. On the Main pane in the manually embedded disk storage system overview screen, click the target name.

4. On the Main pane in the manually embedded disk storage system details screen, click the target name.
5. The Maintenance screen for the disk storage system is started. Find the failed component in the disk storage system.
For replacement of failed components, contact a Fujitsu customer engineer.

When replacing adapters (CA), refer to "If the adapter (CA) of manually embedded disk storage system and manually embedded tape library is replaced" in "[10.3.3 Replacing Faulty Components of Manually Embedded Device](#)". Moreover, the replacement of failed components, contact a Fujitsu customer engineer as required.

If Manually Embedded Disk Storage System Is in [Unknown] State

- For NetApp FAS Series, FAS Series (with clustered Data ONTAP), V-Series, and V-Series (with clustered Data ONTAP)
Review network environments and SNMP settings.

If the above action does not solve the fault, check the operation mode of the target device registered on the ETERNUS SF system. If the operation mode is wrong, delete the target device from the ETERNUS SF system once, and re-register it in a proper operation mode. To check operation mode, refer to "Display Storage Device" in the *ETERNUS SF Web Console Guide*. For operation mode to be registered on the ETERNUS SF system, refer to "[5.2.6 Registering Manually Embedded Device](#)".

- Devices other than those above
Review network environments and SNMP settings.

If Manually Embedded Tape Library Is in [Error] or [Warning] State

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Tape Library(Manual)**.
3. On the Main pane in the manually embedded tape library overview screen, click the target name.
4. On the Main pane in the manually embedded tape library details screen, click the target name.
5. The Maintenance screen for the tape library is started. Find the failed component in the tape library.
For replacement of failed components, contact a Fujitsu customer engineer.

When replacing adapters (CA), refer to "If the adapter (CA) of manually embedded disk storage system and manually embedded tape library is replaced" in "[10.3.3 Replacing Faulty Components of Manually Embedded Device](#)". Moreover, the replacement of failed components, contact a Fujitsu customer engineer.

If Fibre Channel Switch Is in [Error] or [Warning] State

1. On the global navigation tab, click **Network**.
2. On the Main pane in the switch overview screen, click the target name.
3. On the Main pane in the switch details screen, click the target name.
4. The Maintenance screen for the Fibre Channel switch is started. Find the failed component in the Fibre Channel switch.
For replacement of failed components, contact a Fujitsu customer engineer.

If any port is in Error state due to SFP failure, the status of the affected access path is displayed as [Error].

If an access path is defined in the access path settings of this product, the zoning setting of the Fibre Channel switch is defined as WWPN zoning. Therefore, if a Fibre Channel switch port fails, the Fibre Channel cable connected to it can be reconnected to another Fibre Channel switch port, and operation can be restarted.

Also, refer to "A warning for a device is displayed" in "[4.2.1.3 Problem-handling \(FAQ\)](#)".

If Server Node Is in [Error] or [Warning] State

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. Check the physical pathway of the access path with an [Error] state.
If no Error state device is on the route, check if a Fibre Channel cable along the route is disconnected. If you cannot identify the cause, contact a Fujitsu customer engineer.

On the server node where msdsm (the default Windows multipath driver, from Windows Server 2008 onward) is set, the server node enters the [Warning] state even if the single path (an access path that does not have a redundancy configuration) exists. This depends on the msdsm specification. Because the information for the access path that corresponds to the [Error] state disappears from the OS, this product cannot be distinguished from a single path. If access path is configured with the single path, disable msdsm.

Also, refer to "An Error in an access path is displayed" in "4.2.1.3 Problem-handling (FAQ)".

If Access Path Is in [Error] State

If an access path of multipath disk control, follow the procedure below:

1. Obtaining path statuses
Check the current path configuration and status.
2. I/O stop related to a failed access path
3. Replacement of failed components (if necessary) or action for the Error
To replace a failed component, contact a Fujitsu customer engineer.
4. I/O restart of a stopped access path

For an access path not configured using Multipath Disk Control, a job performed with the target used volume is affected. Stop the job and take the appropriate action to resolve the fault. To replace a failed component, contact a Fujitsu customer engineer.

When replacing an HBA, refer to "10.3.1.1 Host Bus Adapter (HBA) Replacement of Server Node".



Point

.....
In the case of an access path configured with multipath disk control, placing the access path offline causes the access path status to be [Error] and may display "Host Agent reports Access Path Status is degraded." as a message of access path failure.

In that case, put the access path back to online, and it returns to its former status.
.....

Actions to Perform after Component Replacement

Perform the **Reload Conf.** operation for the device whose component has been replaced to refresh the current device state.

When the device state is recovered by performing a replacement, the device state returns to and is displayed as the "Normal" state.

The status of NetApp FAS Series, FAS Series (with clustered Data ONTAP), V-Series, V-Series (with clustered Data ONTAP), and devices registered manually is not automatically recovered. On completion of device recovery, use the following procedure to return the device to the "Normal" state:

1. On the Action pane for the manually embedded device, click **Modify** to open the modify screen of the device.
2. Select "Normal" from the **Status** list on the modify screen and click **Modify**.

10.2 Replacing Supported Device

If any device registered on this product has been replaced, even performing the **Reload Conf.** operation to the replaced device does not update to the new device information. Delete the replaced device once on the Web Console to register it again.

For procedures required by each device, see the description below.

10.2.1 Replacing Server Node

When replacing a server node for each system, do it according to the operating system.

For Solaris OS

Before discovering a new server node on this product, delete all the access paths to the replaced server node to configure new access paths to the new server node.

For Operating Systems Other than Solaris OS

Use the following procedure to setting the access path:

1. Installing the Agent on the new server

For the new server assign a different IP address from that of the replaced server, then install the Agent.

If a new server cannot be configured with a different IP address from that of the replaced server, delete all the access paths to the replaced server before the new server is detected by this product and then specify new access paths for the new server.

2. Registering the new server to this product

1. On the global navigation tab, click **Server**.
2. On the Action pane, click **Register** under **Server**.
3. Register the new server.
Check that the new server is displayed on the server overview screen.

3. Deleting the access path

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Main pane, select the checkbox of the access path set for the HBA on the replaced server.
4. On the Action pane, click **Delete** under **Access Path**.
5. Delete the access path.
On the access path overview screen, check that the access path set for the HBA on the replaced server has been deleted.

4. Adding an access path

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Action pane, click **Add (ETERNUS)** under **Access Path**.
4. Register the access path. For access path definition, select the following:
 - Port: Port assigned to the new server
 - HBA: HBA loaded in the new server
 - Affinity Group: Affinity Group assigned to the replaced server

On the access path overview screen, check that the access path using the HBA installed on the new server has been created.

5. Deleting the replaced server from this product

1. On the global navigation tab, click **Server**.
2. On the Main pane, select the checkbox of the replaced servers.
3. On the Action pane, click **Delete** under **Server**.
4. Delete the replaced server.
On the server overview screen, check that the replaced server has been deleted.

10.2.2 Replacing ETERNUS Disk Storage System

When replacing the ETERNUS Disk storage system, use the following procedure to setting the access path. Refer to "[9.4.3 Maintenance](#)" when the Storage Cluster function is in use.

1. Integrating the configuration information

1. Ensure that the configuration definition of the new device matches that of the replaced device.

2. For the new device assign a different IP address from that of the replaced device.
If the new device cannot be configured with a different IP address from that of the replaced device, delete all the access paths to the replaced device before the new device is detected by this product and then specify new access paths for the new device.
2. Registering the new device to this product
 1. On the global navigation tab, click **Storage**.
 2. On the Action pane, click **Register** under **Storage**.
 3. Register the new device.
On the disk storage system overview screen, check that the new device is displayed.
3. Registering the license to the new device
 1. On the global navigation tab, click **Storage**.
 2. On the Main pane, click the new device name.
 3. On the Category pane, click **System**.
 4. On the Main pane, select the target license checkbox.
 5. On the Action pane, click **Register** under **License**.
 6. Register the license.
On the license overview screen, check the license registration status.
4. Deleting the access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Main pane, select the checkbox of the access path set for the replaced device.
 4. On the Action pane, click **Delete** under **Access Path**.
 5. Delete the access path.
On the access path overview screen, check that the access path set for the replaced device has been deleted.
5. Adding an access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Action pane, click **Add (ETERNUS)** under **Access Path**.
 4. Register the access path. For access path definition, select the following:
 - Port: Port assigned to the new device
 - HBA: HBA logical connection to the replaced device
 - Affinity Group: Affinity Group that matches the replaced device and to be assigned to the new device
 On the access path overview screen, check that the access path using the port assigned to the new device has been created.
6. Deleting the license of the replaced device
 1. On the global navigation tab, click **Storage**.
 2. On the Main pane, check the replaced device name.
 3. On the Category pane, click **System**.
 4. On the Main pane, select the target license checkbox.
 5. On the Action pane, click **Delete** under **License**.

6. Delete the license.
On the license overview screen, check the license registration status.
7. Deleting the replaced device from this product
 1. On the global navigation tab, click **Storage**.
 2. On the Main pane, select the replaced device checkbox.
 3. On the Action pane, click **Delete** under **Storage**.
 4. Delete the replaced device.
On the disk storage system overview screen, check that the replaced device has been deleted.
8. Subsequent operation

The server node must be restarted for server nodes that do not support hot swapping configuration changes after creation of the access path is complete.

On the server nodes that support hot swapping configuration changes, it is necessary to execute commands to perform the hot swapping configuration changes for OS and HBA drivers. For example, when the HBA driver is FUJITSU PCI Fibre Channel, `chgfctl` or `clchgfc` must be executed.

10.2.3 Replacing ETERNUS LT250/LT270

When replacing an entire ETERNUS LT250/LT270, use the following the procedure provided below to resetting the access path.

1. Integrating the configuration information
 1. Ensure that the configuration definition of the new tape library matches that of the replaced tape library.
 2. For the new tape library assign a different IP address from that of the replaced tape library.
2. Registering the new tape library to this product
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Tape Library**.
 3. On the Action pane, click **Discover** under **Tape Library**.
 4. Register the new tape library.
On the tape library overview screen, check that the new tape library is displayed.
3. Deleting zoning
 1. On the global navigation tab, click **Network**.
 2. On the Main pane, check the switch name.
 3. On the Category pane, click **Zoning**.
 4. On the Main pane, select the checkbox of the WWPN zoning of the replaced tape library.
 5. On the Action pane, click **Delete** under **Zoning**.
 6. Delete zoning.
On the zoning overview screen, check that the WWPN zoning of the replaced tape library has been deleted.

Note

If you are not using "one to one" zoning, ensure that other security settings are not affected.

4. Adding an access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Action pane, click **Add (Other)** under **Access Path**.

4. Register the access path. For access path definition, select the following:

- Port: Port assigned to the new tape library
- HBA: HBA logical connection to the replaced tape library

On the zoning overview screen, check that the WWPN zoning of the new tape library has been created.

5. Deleting the replaced tape library from this product

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Tape Library**.
3. On the Main pane, select the replaced tape library checkbox.
4. On the Action pane, click **Delete** under **Tape Library**.
5. Delete the replaced tape library.

On the tape library overview screen, check that the replaced tape library has been deleted.

6. Subsequent operation

The server node must be restarted for server nodes that do not support hot swapping configuration changes after creation of the access path is complete.

On the server nodes that support hot swapping configuration changes, it is necessary to execute commands to perform the hot swapping configuration changes for OS and HBA drivers. For example, when the HBA driver is FUJITSU PCI Fibre Channel, `chgfcctl` or `clchgfc` must be executed.

10.2.4 Replacing Fibre Channel Switch

This section explains the replacement procedure for Fibre Channel switch (hereafter, refer to as switch) registered in this product.

Also, the procedure differs according to pre-replaced and post-replaced switch models and any change in IP address.

- If the pre-replaced and post-replaced switch models and the IP address are the same:

1. Record the settings of threshold monitoring. (if thresholds are monitored)
2. On completion of device replacement, perform the **Reload Conf.** operation on the Web Console.
3. Based on the settings at step 1, start to monitor thresholds. (if thresholds are monitored)

- If the pre-replaced switch model and the post-replaced switch model are different:

1. Stopping the performance monitoring of the switch to be replaced (when it is not a monitored device, this operation is unnecessary).

If threshold monitoring is also set, stop the threshold monitoring first and then stop the performance monitoring.

1. On the global navigation tab, click **Network**.
2. On the Main pane, click the switch to be replaced.
3. On the Category pane, click **Performance**.
4. On the **Performance** pane, click **Configuration**.
5. On the Action pane, click **Stop** under **Performance**.
Check that the monitored status of the switch to be replaced is "Stop".

2. Deleting the replaced switch from this product

1. On the global navigation tab, click **Network**.
2. On the Main pane, select the checkbox of the replaced switches.
3. On the Action pane, click **Delete** under **Switch**.
4. Delete the replaced switch.
On the switch overview screen, check that the replaced switch is not displayed.

3. Physical replacement of old and new switches

For device replacement, contact a Fujitsu customer engineer and perform the replacement according to the maintenance procedure manual for the device.

When replacing a switch that is not connected in cascade, you may have to manually perform zoning settings again if the switch configuration information (configUpload file) has not been stored. After registering the new switch in this product, perform step 6, "Setting of switch zoning" below. Refer to the manual that comes with this device for the switch configuration information (configUpload file).

4. Registering a new switch to this product

1. On the global navigation tab, click **Network**.
2. On the Action pane, click **Discover** under **Switch**.
3. Register the new switch.
On the switch overview screen, check that the new switch is displayed.

5. Refreshing the access path status

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Action pane, click **Refresh** under **Access Path Status**.
On the access path overview screen, check that the access path status has been refreshed.

6. Setting the switch zoning

Since the zoning information specified for newly replaced switches that are managed by this product does not exist, access paths are displayed as definition inconsistency (Changed). Therefore, manually reset the zoning.

If no zoning is set for replaced switches or switches that are connected in a cascade, zoning resetting is not required.

If there is configuration information (the configUpload file), refer to the maintenance manual for the device.

Note

If the switch zoning information is as follows, the zoning access paths are not displayed regardless of pre- or post-switch replacement.

- Zoning other than HBA to CA access pathway managed by this product (HBA to HBA, CA to CA, HBA to UnknownFC, CA to UnknownFC, UnknownFC to UnknownFC)

Therefore, even after switch replacement, no Warning is displayed against the access path definition inconsistency such as between HBA and CA.

If any zoning other than access path between HBA and CA is configured to a switch to be replaced, use Web Tools or CLI for the switch to configure the zoning.

7. Starting the performance monitoring of the new switch (when it is not a monitored device, this operation is unnecessary).

1. On the global navigation tab, click **Network**.
2. On the Main pane, click the target switch name.
3. On the Category pane, click **Performance**.
4. On the **Performance** pane, click **Configuration**.
5. On the Action pane, click **Start** under **Performance**.
Check that the monitored status of the new switch is "Monitoring".

Perform the threshold monitoring setting again once the threshold monitoring setting has been performed.



If the configuration information has been customized, then check the content of the configuration settings file before starting performance monitoring.
Refer to "[A.9 Explanation of Configuration Settings File](#)" for details.

10.2.5 Replacing Manually Embedded Device

When replacing manually embedded device for each device, use the following the procedure provided below to resetting the access path.

1. Registering the new manually embedded device to this product.
 - In the case of manually embedded disk storage system:
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Disk Array(Manual)**.
 3. On the Action pane, click **Register** under **Storage**.
 4. Register the new manually embedded disk storage system.
Check that the new manually embedded disk storage system is displayed on the manually embedded disk storage system overview screen.
 - In the case of manually embedded tape library:
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Tape Library(Manual)**.
 3. On the Action pane, click **Register** under **Tape Library**.
 4. Register the new manually embedded tape library.
Check that the new manually embedded tape library is displayed on the manually embedded tape library overview screen.
2. Registering a post-replaced adapter (CA) of a manually embedded device.
 - For a manually embedded disk storage system:
 1. On the Main pane in the manually embedded disk storage system overview screen, click the target name.
 2. On the **Storage** pane, click **Port**.
 3. On the Action pane, click **Add** under **Port**.
 4. Registration of new port.
Check that the new port is displayed on the port overview screen of the manually embedded disk storage system.
 - For a manually embedded tape library:
 1. On the Main pane in the manually embedded tape library overview screen, click the target name.
 2. On the **Storage** pane, click **Port**.
 3. On the Action pane, click **Add** under **Port**.
 4. Register the new port.
Check that the new port is displayed on the port overview screen of the manually embedded tape library.
3. Deleting zoning
 1. On the global navigation tab, click **Network**.
 2. On the Main pane, click the target switch name.
 3. On the Category pane, click **Zoning**.
 4. On the Main pane, select the checkbox of the WWPN zoning of the replaced device.

5. On the Action pane, click **Delete** under **Zoning**.
6. Delete zoning.
On the zoning overview screen, check that the WWPN zoning of the replaced device has been deleted.



Note

If you are not using "one to one" zoning, ensure that other security settings are not affected.

4. Adding an access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Action pane, click **Add (Other)** under **Access Path**.
 4. Register the access path. For access path definition, select the following:
 - Port: Port assigned to the new manually embedded device
 - HBA: HBA logical connection to the new manually embedded deviceOn the zoning overview screen, check that the WWPN zoning of the new manually embedded device has been created.
5. Deleting the replaced device from this product
 - For a manually embedded disk storage system:
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Disk Array(Manual)**.
 3. On the Main pane, select the checkbox of the manually embedded disk storage system that has been replaced.
 4. On the Action pane, click **Delete** under **Storage**.
 5. Delete the manually embedded disk storage system that has been replaced.
On the manually embedded disk storage system overview screen, check that the manually embedded disk storage system that has been replaced has been deleted.
 - For a manually embedded tape library:
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Tape Library(Manual)**.
 3. On the Main pane, select the checkbox of the replaced manually embedded tape library.
 4. On the Action pane, click **Delete** under **Tape Library**.
 5. Delete the manually embedded tape library that has been replaced.
On the manually embedded tape library overview screen, check that the manually embedded tape library that has been replaced has been deleted.
6. Subsequent operation
After configuration, restart the server node if it does not support active configuration.

10.2.6 Replacing Storage Cluster Controller

When replacing the Storage Cluster Controller, reinstall Storage Cruiser's agent and reconfigure the Storage Cluster Controller. Also, if the server to be replaced is managed server of Storage Cruiser, perform "[10.2.1 Replacing Server Node](#)" together.

10.3 Replacing Supported Device Components

The following explains how to replace the components of a supported device managed by this product.

For procedures required by each device, see the description below.

| Type of Device | Replacing Faulty Components |
|---|--|
| Server node | <ul style="list-style-type: none"> - For HBA replacement: Perform "10.3.1 Replacing Server Node Components". - For other component replacement: Perform the Reload Conf. operation after component replacement. |
| ETERNUS Disk storage system | Perform the Reload Conf. operation after component replacement. Also, refer to " 10.3.2 Replacing Faulty Components of ETERNUS Disk Storage Systems, ETERNUS LT250/LT270 ". |
| ETERNUS LT250/LT270 | |
| Fibre Channel switch | Perform the Reload Conf. operation after component replacement. |
| Manually embedded server node | <ul style="list-style-type: none"> - For HBA replacement: Perform "10.3.3 Replacing Faulty Components of Manually Embedded Device". - For other component replacement: Perform the Reload Conf. operation after component replacement. |
| Manually embedded disk storage system Manually embedded tape library | <ul style="list-style-type: none"> - For Adapter (CA) replacement: Perform "10.3.3 Replacing Faulty Components of Manually Embedded Device". - For other component replacement: Perform the Reload Conf. operation after component replacement. |

10.3.1 Replacing Server Node Components

This section describes the procedure required for HBA replacement on the server nodes registered on this product.



Note

- Before executing access path inheritance, select **Network** from the global navigation tab on the Web Console, and verify that all Fibre Channel switches cascaded to the Fibre Channel switch related to access path setting are correctly recognized in the current status. Once an access path is changed in a state where a Fibre Channel switch is temporarily disconnected from the cascade connection, the old cascade connection cannot easily be recovered. In this event, execute `cfgClear` to delete the zoning information for the Fibre Channel temporarily disconnected from the cascade connection. This enables cascade reconnection.
- The basic conditions under which this product can recognize HBA replacement on a server node are as follows:
 - The agent has been installed in the server nodes.
 - HBA is exchanged on a server node same slot (physical port number).
 - The server node is registered in this product.
 - Access path is set to the pre-replaced HBA.
- When inheriting access path to HBA on this product, notice the following points:
 - Zoning configuration should be one-to-one WWPN zoning.
In the environment using the following zoning configuration, access path inheritance is not allowed:
 - Port zoning
 - World Wide Port Name (WWPN) zone setting not being one-to-one.
 - The zoning configuration of the following devices is not allowed to be inherited:
 - Tape library unit

- Other than ETERNUS Disk storage system
- The host number of host registration information is not allowed to be inherited. Host name is allowed to be inherited.
- If inheritance is done toward the access paths for which no zoning is configured, skip zoning creation and perform only host registration and host affinity configuration.
- For access path inheritance in environments that use the FC routing functionality, the settings for the LSan zone that is required in the FC routing functionality cannot be modified using this product.
Before using access path inheritance, manually modify the required LSan zone settings on the server nodes, Fibre Channel switches, and storage devices.
- For VMware vSphere 4 or later, perform either of the following steps after access path inheritance:
 - Reboot the VM host
 - For the access path inheritance-done HBA, execute Rescan from the VMware Infrastructure Client.

Refer to "Access Path in VMware Environment " in "6.2.1 What Is Access Path?" for the using method of VMware Infrastructure Client.

10.3.1.1 Host Bus Adapter (HBA) Replacement of Server Node

When replacing HBA on a server node, do it according to the operating system.

10.3.1.1.1 [For Solaris OS Server Node] Host Bus Adapter (HBA) Replacement

When replacing HBA on a Solaris server node, take the following procedure.

HBA Replacement with Server Node Shut Down

For a server node that does not support the hot system replacement function, turn off the server node in order to replace the HBA. Do not restart or shut down the server node in reconfigure mode during replacement. (This is because the special file name is changed if the reboot -r command, boot -r command, or other such command is executed.)

1. Shutting down the server node.

Confirm that the /reconfigure file does not exist, and shut down the device.

```
# ls /reconfigure
/reconfigure: No such file or directory
```

If the /reconfigure file exists, take the following procedure:

a. To delete the "reconfigure" file, enter the following command.

```
# rm /reconfigure
```

b. Execute the ls command to re-check the presence of the /reconfigure file.

c. Do not reconfigure but shut down.

```
# /usr/sbin/shutdown -y -i0 -g0
```

Re-create the/reconfigure file after replacement operation. Afterward, restart the server node.

2. Replacing the HBA

To replace a failed component, contact a Fujitsu customer engineer.

3. Activating the server node

Activate the server node.

No access path, however, is recovered here. This is because the zoning is based on old HBA information is defined on the storage system and Fibre Channel switch.

4. Perform the **Reload Conf.** operation for the server node from this product.

5. Inheriting access paths (resetting security)

Follow the process of "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)" from this product, and define the zoning setting so that the method of access based on the new HBA information can be the same as that for the previous access path of the storage system and Fibre Channel switch.

6. Reactivating the server node

Reboot the server node without reconfiguration (reboot -r, boot -r, etc. are prohibited.)

```
# /usr/sbin/shutdown -i6
```

The access paths and the paths of Multipath Disk Control are recovered.

HBA Replacement without Shutting Down Server Node

On the server node that supports the hot system replacement function, HBA replacement is allowed without shutting down the server node. Refer to the appropriate device manuals for information on the hot system replacement.

1. HBA replacement without shutting the server node

Refer to the device manual to replace HBA without shutting the server node.

To replace a failed component, contact a Fujitsu customer engineer.

2. Perform the **Reload Conf.** operation for the server node from this product.

3. Inheriting access paths (resetting security)

Follow the process of "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)" from this product, and define the zoning setting so that the method of access based on the new HBA information can be the same as that for the previous access path of the storage system and Fibre Channel switch.

10.3.1.1.2 [For Operating Systems Other than Solaris OS] Host Bus Adapter (HBA) Replacement

When replacing HBA on a other than Solaris server node, take the following procedure.

HBA Replacement with Server Node Shut Down

For a server node that does not support the hot system replacement function, turn off the server node in order to replace the HBA.

1. Shutting down the server node

2. Replacing the HBA

3. Starting the server node

No access path is recovered here. This is because zoning based on old HBA information is defined on the storage and Fibre Channel switch.

4. Perform the **Reload Conf.** operation for the server node from this product.

5. Inheriting access paths (resetting security)

Follow the process of "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)" from this product, and define the zoning setting so that the method of access based on the new HBA information can be the same as that for the previous access path of the storage system and Fibre Channel switch.

6. Reactivating the server node

HBA Replacement without Shutting Down Server Node

On the server node that supports the hot system replacement function, HBA replacement is allowed without shutting down the server node. Refer to the appropriate device manuals for information on the hot system replacement.

1. Replacing the HBA without shutting down the server node

Refer to the device manual to replace HBA without shutting the server node.

To replace a failed component, contact a Fujitsu customer engineer.

2. Perform the **Reload Conf.** operation for the server node from this product.
3. Inheriting access paths (resetting security)

Follow the process of "[10.3.1.2 Access Path Inheritance after HBA Replacement](#)" from this product, and define the zoning setting so that the method of access based on the new HBA information can be the same as that for the previous access path of the storage system and Fibre Channel switch.

10.3.1.2 Access Path Inheritance after HBA Replacement

Inheriting the HBA access path requires that all steps for the target operating system in "[10.3.1.1 Host Bus Adapter \(HBA\) Replacement of Server Node](#)" through "Perform the **Reload Conf.** operation for the server node from this product" be completed. Make sure that preparatory work has been done, and perform proper operation in accordance with the HBA status.

- When the HBA status becomes "Changed":
Perform the operation mentioned in "[10.3.1.2.1 Post-replaced HBA State Is "Changed"](#)".
- When the HBA status does not become "Changed":
Perform the operation mentioned in "[10.3.1.2.2 Post-replaced HBA State Is "Unknown"](#)".



- Whether the HBA status becomes "Changed" or not cannot be determined before the **Reload Conf.** operation is performed from the Web Console after HBA replacement.

10.3.1.2.1 Post-replaced HBA State Is "Changed"

In this product, after HBA replacement on an agent installed server node, if the **Reload Conf.** operation is performed for the server node, it recognizes the HBA replacement and changes the HBA state displayed on the server detail screen of the Main pane to "Changed". This is detected when an HBA that has a different WWPN is installed in the same slot (physical port number) of the host.

The procedure for access path inheritance at this time is provided below.



Before performing the procedures below, refer to the Notes in "[10.3.1 Replacing Server Node Components](#)".

1. Checking the inherited HBA state
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, check the server.
 3. On the Main pane, confirm that the HBA state is "Changed".
2. Inheriting access path
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, click the target server name.
 3. On the Main pane, select the checkbox of the HBA whose state is "Changed".
 4. On the Action pane, click **Inherit** under **Access Path**.
3. Checking the access path inheritance
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. Using the HBA of replacement destination, check if the access path has been set.

10.3.1.2.2 Post-replaced HBA State Is "Unknown"

This product may not be able to set the "Changed" state for an HBA. According to the following status, execute this procedure.

HBA Replacement on Manually Embedded Server Node

Refer to "[10.3.3 Replacing Faulty Components of Manually Embedded Device](#)".

In Cases Other than Above

Change access path by following procedure provided below.

If the device requires server node-side settings, the settings must be defined manually.



Point

Before performing the procedures below, refer to the Notes in "[10.3.1 Replacing Server Node Components](#)".

1. Detecting the replaced destination HBA

Reload the configuration of the target server to detect the replaced destination HBA.

1. On the global navigation tab, click **Server**.
2. On the Main pane, select the target server checkbox.
3. On the Action pane, click **Reload Conf.** under **Server**.

2. Checking the replaced destination HBA

1. On the global navigation tab, click **Server**.
2. On the Main pane, click the server name.
3. On the Main pane, check that the HBAs of replacement source and replacement destination are displayed.

3. Changing the access path

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Main pane, select the changed target access path checkbox.
4. On the Action pane, click **Modify** under **Access Path**.
5. Change the setting of access path.

4. Checking the access path changing

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. Using the replaced destination HBA, check whether access path has been set.

5. Subsequent operation

After configuration, restart the server node if it does not support active configuration.

10.3.2 Replacing Faulty Components of ETERNUS Disk Storage Systems, ETERNUS LT250/LT270

ETERNUS Disk storage systems, ETERNUS LT250/LT270 do not require the access path inheritance because the WWPN is not changed for the replacement of an adapter (CA) etc.

10.3.3 Replacing Faulty Components of Manually Embedded Device

If WWPN is changed because of a faulty component of a manually embedded device such as an HBA or adapter (CA) is replaced, the replacement device will not be automatically detected by this product. Perform the following procedures to set the access path after components of the device are exchanged.

If HBA of Manually Embedded Server Node Is Replaced

1. Detecting the replaced destination HBA
 - Adding the HBA to the target server.
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, click the target server name.
 3. On the Action pane, click **Add** under **HBA**.
 4. Register the HBA of replacement destination.
2. Checking the HBA of replacement destination
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, click the target server name.
 3. On the Main pane, check that the HBAs of pre-replacement and replacement destination are displayed.
3. Changing the access path
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. On the Main pane, select the target access path checkbox.
 4. On the Action pane, click **Modify** under **Access Path**.
 5. Change the access path settings.
4. Checking the access path changes
 1. On the global navigation tab, click **Server**.
 2. On the **Server** pane, click **Access Path**.
 3. For the replaced destination HBA, check if the access path has been set.
5. Deleting the pre-replacement HBA
 1. On the global navigation tab, click **Server**.
 2. On the Main pane, click the target server name.
 3. On the Main pane, select the checkbox of the pre-replacement HBA.
 4. On the Action pane, click **Delete** under **HBA**.
 5. Delete the pre-replacement HBA.
6. Subsequent operation
 - After configuration change, restart any server node if it does not support the hot system replacement function.

If Adapter (CA) of Manually Embedded Disk Storage System and Manually Embedded Tape Library Is Replaced

1. Registering the post-replaced adapter (CA) of manually embedded device
 - For a manually embedded disk storage system:
 1. On the manually embedded disk storage system overview screen, click the manually embedded disk storage system name.

2. On the **Storage** pane, click **Port**.
 3. On the Action pane, click **Add** under **Port**.
 4. Register the new port.
Check that the new port is displayed on the port overview screen of the manually embedded disk storage system.
- For a manually embedded tape library system:
1. On the manually embedded tape library system overview screen, click the manually embedded tape library system name.
 2. On the **Storage** pane, click **Port**.
 3. On the Action pane, click **Add** under **Port**.
 4. Register the new port.
Check that the new port is displayed on the port overview screen of the manually embedded tape library.

2. Deleting zoning

1. On the global navigation tab, click **Network**.
2. On the Main pane, click the switch name.
3. On the Category pane, click **Zoning**.
4. On the Main pane, select the checkbox of the WWPN zoning of the manually embedded device.
5. On the Action pane, click **Delete** under **Zoning**.
6. Delete zoning.
On the zoning overview screen, check that the WWPN zoning of the manually embedded device has been deleted.

Note

If you are not using "one to one" zoning, ensure that other security settings are not affected.

3. Adding an access path

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Action pane, click **Add (Other)** under **Access Path**.
4. Register the access path. For access path definition, select the following:
 - Port: Port assigned to the new manually embedded device
 - HBA: HBA logical connection to the manually embedded device

On the zoning overview screen, check that the WWPN zoning of the new manually embedded device has been created.

4. Deleting the pre-replacement adapter (CA) of manually embedded device

- For a manually embedded disk storage system:
1. On the manually embedded disk storage system overview screen, click the manually embedded disk storage system name.
 2. On the **Storage** pane, click **Port**.
 3. On the Main pane, select the checkbox of the pre-replacement port.
 4. On the Action pane, click **Delete** under **Port**.
 5. Delete the replaced port.
Check that the new manually embedded tape library is not displayed on the manually embedded tape library overview screen.

- For a manually embedded tape library:
 1. On the manually embedded tape library system overview screen, click the manually embedded tape library system name.
 2. On the **Storage** pane, click **Port**.
 3. On the Main pane, select the checkbox of the pre-replacement port.
 4. On the Action pane, click **Delete** under **Port**.
 5. Delete the replaced port.
Check that the replaced port is not displayed on the port overview screen.
- 5. Subsequent operation
After configuration, restart the server node if it does not support active configuration.

10.4 Adding Supported Device Components

10.4.1 Adding ETERNUS LT270 S2 Extended Cabinet

When adding an extended cabinet for ETERNUS LT270 S2, if a cabinet-through rail is installed, remove the drive in the base cabinet and install it in the extended cabinet. Use the following procedure to change the port of the drive and reconfigure the access path:

1. Deleting zoning
 1. On the global navigation tab, click **Network**.
 2. On the Main pane, click the switch name.
 3. On the Category pane, click **Zoning**.
 4. On the Main pane, select the checkbox of the WWPN zoning of the removed drive.
 5. On the Action pane, click **Delete** under **Zoning**.
 6. Delete zoning.
On the zoning overview screen, check that the WWPN zoning of the removed drive has been deleted.

Note

If you are not using "one to one" zoning, ensure that other security settings are not affected.

2. Deleting the port of the drive
 1. On the global navigation tab, click **Storage**.
 2. On the **Storage** pane, click **Tape Library(Manual)**.
The registered tape libraries are displayed on the Main pane.
 3. On the Main pane, click the target tape library name.
 4. On the Category pane, click **Device**.
The devices registered on the tape library are displayed on the Main pane.
 5. On the Main pane, click the target device name.
The details of the device are displayed on the Main pane.
 6. On the Main pane, select the checkbox of the port of the target device.
 7. On the Action pane, click **Delete** under **Port**.
The information confirmation screen is displayed.
 8. Confirm the information, and then click **Delete**.

3. Adding an extended cabinet

Add an extended cabinet for ETERNUS LT270 S2.

4. Adding a port of the drive

1. On the global navigation tab, click **Storage**.
2. On the **Storage** pane, click **Tape Library(Manual)**.
The registered tape libraries are displayed on the Main pane.
3. On the Main pane, click the target tape library name.
4. On the Category pane, click **Device**.
The devices registered on the tape library are displayed on the Main pane.
5. On the Main pane, click the target device name.
The details of the device are displayed on the Main pane.
6. On the Action pane, click **Add** under **Port**.
7. Enter the necessary information, and then click **Next**.
The information confirmation screen is displayed.
8. Confirm the information, and then click **Add**.

Point

The interface type that allows ports to be added is only FC.

5. Adding an access path

1. On the global navigation tab, click **Server**.
2. On the **Server** pane, click **Access Path**.
3. On the Action pane, click **Add (Other)** under **Access Path**.
4. Register the access path. For access path definition, select the following:
 - HBA: Logically connected to a replaced device.
 - Port: to the drive whose installed position was changed.
5. Confirm the information on the information confirmation screen, and then click **Add**.

6. Subsequent operation

After configuration, restart the server node if it does not support active configuration.

Chapter 11 Maintenance of Administrative Environment

This chapter explains how to maintain databases, and it describes the appropriate action to take for troubleshooting.

11.1 Maintenance of Manager

11.1.1 Maintenance of Manager

11.1.1.1 Collecting Data for Troubleshooting

If any problem occurs in a system that uses this software, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.1.1.2 Backup of Manager

Back up (save) the environment for the Storage Cruiser's manager if an error has occurred in the Management Server.

All of the tasks for backup of Manager are performed in the Management Server.

11.1.1.2.1 Backup of Solaris OS/Linux Manager

Follow the procedure below to save the environment for the Storage Cruiser's manager.



Information

Notation in Procedure:

- "\$BAK_DIR" signifies the backup destination directory.

1. Stop the ETERNUS SF Manager Tomcat Service.

Execute the following shell script to stop the service.

```
/opt/FJSVesfcm/bin/stop-webservice.sh
```

2. Create the backup data.

Create the directory for the backup data.

```
mkdir -p $BAK_DIR/Common
```

Execute the following command to create the backup data. Specify the default value 15432 to *<port-number>*, however, if you have changed the port number, specify the changed port number to *<port-number>*. The backup data is then created using the file name designated in *<filename>*.

```
/opt/FJSVesfcm/postgres/bin/pg_dump -U esfpostgres -C --attribute-inserts  
-p <port-number> -f $BAK_DIR/Common/<filename> esfdb
```

A prompt is displayed with the server awaiting input. Input the following keyword.

```
master01!
```

3. Execute the following shell script to stop ETERNUS SF Manager services.

```
/opt/FJSVesfcm/bin/stopesf.sh
```

Note

Upon executing the shell script, multiple messages stating that the ETERNUS SF Manager Tomcat has already been stopped will be displayed. These messages do not pose a problem and can be ignored.

4. Back up the files related to the performance management function.

This step can be skipped if you are not using the performance management function. Backup is not required if there are no subdirectories or files.

Note

If a pile of files related to the performance management function exists, calculate the backup time according to the amount of files.

Create the directories for the backup data.

```
mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current
mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/perfconf
mkdir -p $BAK_DIR/var/opt/FJSVssmgr/current/perf
```

Copy the subdirectories and files to the backup locations.

```
cp -p /etc/opt/FJSVssmgr/current/perf.conf $BAK_DIR/etc/opt/FJSVssmgr/current/
cp -Rp /etc/opt/FJSVssmgr/current/perfconf/* $BAK_DIR/etc/opt/FJSVssmgr/current/perfconf/
cp -Rp /var/opt/FJSVssmgr/current/perf/* $BAK_DIR/var/opt/FJSVssmgr/current/perf/
```

5. Back up the other files which can be customized.

It is unnecessary to back up the files or the directories which are not existed.

Create the directories for the backup data.

```
mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current
mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/eventmail
```

Copy the subdirectories and files to the backup locations.

```
# cp -p /etc/opt/FJSVssmgr/current/sanma.conf $BAK_DIR/etc/opt/FJSVssmgr/current/
# cp -p /etc/opt/FJSVssmgr/current/ssmgr.conf $BAK_DIR/etc/opt/FJSVssmgr/current/
# cp -p /etc/opt/FJSVssmgr/current/trapop.sh $BAK_DIR/etc/opt/FJSVssmgr/current/
# cp -p /etc/opt/FJSVssmgr/current/traprm.sh $BAK_DIR/etc/opt/FJSVssmgr/current/
# cp -Rp /etc/opt/FJSVssmgr/current/eventmail/* $BAK_DIR/etc/opt/FJSVssmgr/current/eventmail/
```

6. Back up the SNMP Trap XML definition files.

This step can be skipped if you are not customizing the SNMP Trap XML definition files.

Below is an example for if the SNMP Trap XML definition file 1_3_6_1_1588_2_1_1_1.xml has been customized. As shown in this example, back up each customized file one at a time.

Create the directory for the backup data.

```
mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/snmpth
```

Copy the file to the backup location.

```
# cp -p /etc/opt/FJSVssmgr/current/snmpth/1_3_6_1_1588_2_1_1_1.xml $BAK_DIR/etc/opt/FJSVssmgr/current/snmpth/
```

7. Back up the device polling setting files.

This step can be skipped if you are not customizing the device polling setting files.

Below is an example for if the device polling setting file, DP_config.xml, has been customized. As shown in this example, back up each customized file one at a time.

Create the directory for the backup data.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/devicepolling
```

Copy the file to the backup location.

```
# cp -p /etc/opt/FJSVssmgr/current/devicepolling/DP_config.xml $BAK_DIR/etc/opt/FJSVssmgr/current/devicepolling/
```

8. Back up the polling service setting file.

This step can be skipped if you are not customizing the polling service setting file.

If you have customized the polling service setting file pollingService.xml, back up this file using the step shown below.

Create the directory for the backup data.

```
# mkdir -p $BAK_DIR/etc/opt/FJSVssmgr/current/polling
```

Copy the file to the backup location.

```
# cp -p /etc/opt/FJSVssmgr/current/polling/pollingService.xml $BAK_DIR/etc/opt/FJSVssmgr/current/polling/
```

9. Save the files related to copy group and copy pair definitions.

Perform this step only if you are using the Advanced Copy function.

Create the directories for the backup data.

```
mkdir -p $BAK_DIR/CCM/etc
mkdir -p $BAK_DIR/CCM/etc/db
mkdir -p $BAK_DIR/CCM/etc/db/cg
mkdir -p $BAK_DIR/CCM/etc/prop
mkdir -p $BAK_DIR/CCM/var/micc/database
```

Copy the subdirectories and files to the backup locations.

```
cp -p /etc/opt/FJSVccm/db/eternus.xml $BAK_DIR/CCM/etc/db
cp -p /var/opt/FJSVccm/micc/database/DeviceRegList.xml $BAK_DIR/CCM/var/micc/database
cp -p /etc/opt/FJSVccm/prop/user.properties $BAK_DIR/CCM/etc/prop
cp -p /etc/opt/FJSVccm/acc/etc/stxc.alias $BAK_DIR/CCM/etc
cp -p /etc/opt/FJSVccm/acc/etc/stxc_ext.alias $BAK_DIR/CCM/etc
cp -p /etc/opt/FJSVccm/acc/etc/stxcvolinf $BAK_DIR/CCM/etc
cp -Rp /etc/opt/FJSVccm/db/cg/* $BAK_DIR/CCM/etc/db/cg
```

10. Back up the license management database.

Create the directory for the backup data.

```
mkdir -p $BAK_DIR/LM
```

Execute the following command. The backup data is created using the file name specified in <filename>.

```
/opt/FJSVesflm/bin/esflm backup $BAK_DIR/LM/<filename>
```

11. Back up the files associated with the Reporting function. (For Reporting Function only)

Create the directories for the backup data.

```
mkdir -p $BAK_DIR/etc/opt/FJSVesfcm/conf/report
mkdir -p $BAK_DIR/etc/opt/FJSVesfcm/conf/scheduler
mkdir -p $BAK_DIR/var/opt/FJSVesfcm/report
```

Copy the subdirectories and files to the backup locations.

```
cp -p /etc/opt/FJSVesfcm/conf/report/* $BAK_DIR/etc/opt/FJSVesfcm/conf/report/
cp -p /etc/opt/FJSVesfcm/conf/scheduler/* $BAK_DIR/etc/opt/FJSVesfcm/conf/scheduler/
cp -Rp /var/opt/FJSVesfcm/report/* $BAK_DIR/var/opt/FJSVesfcm/report/
```

12. Back up the files related to the Automated Storage Tiering function.

Backup is not required if there are no subdirectories or files.

Create the directories for the backup data.

```
mkdir -p $BAK_DIR/etc/opt/FJSVssast/data
mkdir -p $BAK_DIR/var/opt/FJSVssast/data
```

Copy the subdirectories and files to the backup locations.

```
cp -Rp /etc/opt/FJSVssast/data/* $BAK_DIR/etc/opt/FJSVssast/data/
cp -Rp /var/opt/FJSVssast/data/* $BAK_DIR/var/opt/FJSVssast/data/
```

13. Back up the Quality of Service Management Option environment. (For Quality of Service Management Option only)

Create the directories for the backup data.

```
mkdir -p $BAK_DIR/etc/opt/FJSVesfcm/conf/qos
```

Copy the subdirectories and files to the backup locations.

```
cp -p /etc/opt/FJSVesfcm/conf/qos/* $BAK_DIR/etc/opt/FJSVesfcm/conf/qos/
```

14. Execute the following shell script to start the ETERNUS SF Manager services.

```
/opt/FJSVesfcm/bin/startesf.sh
```

11.1.1.2.2 Backup of Solaris OS/Linux Manager (Cluster Environment)

For cluster environment, follow the procedure below to save the environment for the Storage Cruiser's manager.

1. Stop all cluster services which the Manager belongs to.

Refer to "Cluster Transaction and Local Transaction" in the *ETERNUS SF Cluster Environment Setup Guide* for details of cluster transaction.

2. Mount the shared disk on the primary node.

3. Start the ETERNUS SF Manager Postgres service.

Execute the following command to start the ETERNUS SF Manager Postgres service:

- For the Solaris/RHEL5/RHEL6 environment

```
/etc/init.d/startSFmanager start-postgres
```

- For the RHEL7 environment

```
/opt/FJSVesfcm/bin/startSFmanager start-postgres
```

4. Perform step 2 and step 4 to 13 of "[11.1.1.2.1 Backup of Solaris OS/Linux Manager](#)" on the primary node.

5. Stop the ETERNUS SF Manager Postgres service.

Execute the following command to stop the ETERNUS SF Manager Postgres service:

- For the Solaris/RHEL5/RHEL6 environment

```
/etc/init.d/startSFmanager stop-postgres
```

- For the RHEL7 environment

```
/opt/FJSVesfcm/bin/startSFmanager stop-postgres
```

6. Unmount the shared disk mounted in step 2.
7. Start all cluster transactions which the Manager belongs to.

11.1.1.2.3 Backup of Windows Manager

Follow the procedure below to save the environment for the Storage Cruiser's manager.

Information

Notation in Procedure:

- \$BAK_DIR means the backup destination directory.
- \$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.
- \$ENV_DIR means "Environment Directory" specified at the ETERNUS SF Manager installation.
- \$TMP_DIR means "Work Directory" specified at the ETERNUS SF Manager installation.

1. Stop the ETERNUS SF Manager Tomcat Service.

Open Service Control Manager and stop the following service.

- ETERNUS SF Manager Tomcat Service

2. Create the backup data.

Create the following directory for the backup data in Explorer or a similar program.

- \$BAK_DIR\Common

Execute the following command to create the backup data. Specify the default value 15432 to *<port-number>*, however, if you have changed the port number, specify the changed port number to *<port-number>*. The backup data will be created with the name specified in *<filename>*.

```
$INS_DIR\Common\sys\postgres\bin\pg_dump -U esfpostgres -C --attribute-inserts
-p <port-number> -f $BAK_DIR\Common\<filename> esfdb
```

A prompt is displayed, with the server awaiting input. Input the following keyword.

```
master01!
```

3. Execute the following batch to stop the ETERNUS SF Manager services.

```
$INS_DIR\Common\bin\Stop_ESFservice.bat
```

Note

Upon executing the batch, multiple messages stating that the ETERNUS SF Manager Tomcat Service has already been stopped will be displayed. These messages do not pose a problem and can be ignored.

4. Back up the files related to the performance management function.

This step can be skipped if you are not using the performance management function.

This backup is also not required if there are no subdirectories or files.

Note

If a pile of files related to the performance management function exists, calculate the backup time according to the amount of files.

Create the following directories for the backup data in Explorer or a similar program.

- \$BAK_DIR\ES\Manager\etc\opt\FJSVssmgr\current
- \$BAK_DIR\ES\Manager\etc\opt\FJSVssmgr\current\perfconf
- \$BAK_DIR\ES\Manager\var\opt\FJSVssmgr\current\perf

Using Explorer or a similar program, copy the following file to the backup location.

| Copy Source File | Copy Destination Directory |
|--|--|
| \$ENV_DIR\ES\Manager\etc\opt\FJSVssmgr\current\perf.conf | \$BAK_DIR\ES\Manager\etc\opt\FJSVssmgr\current |

Using Explorer or a similar program, copy the subdirectories and files belonging to the following directories to their backup locations.

| Copy Source Directory | Copy Destination Directory |
|---|---|
| \$TMP_DIR\ES\Manager\etc\opt\FJSVssmgr\current\perfconf | \$BAK_DIR\ES\Manager\etc\opt\FJSVssmgr\current\perfconf |
| \$TMP_DIR\ES\Manager\var\opt\FJSVssmgr\current\perf | \$BAK_DIR\ES\Manager\var\opt\FJSVssmgr\current\perf |

5. Back up the other files which can be customized.

It is unnecessary to back up the files or the directories which are not existed.

Create the following backup directories in Explorer or a similar program.

- \$BAK_DIR\ES\Manager\opt\FJSVssmgr\bin
- \$BAK_DIR\ES\Manager\etc\opt\FJSVssmgr\current
- \$BAK_DIR\ES\Manager\etc\opt\FJSVssmgr\current\eventmail

Using Explorer or a similar program, copy the following files to their backup locations.

| Copy Source File | Copy Destination Directory |
|---|--|
| \$ENV_DIR\ES\Manager\etc\opt\FJSVssmgr\current\sanma.conf | \$BAK_DIR\ES\Manager\etc\opt\FJSVssmgr\current |
| \$ENV_DIR\ES\Manager\etc\opt\FJSVssmgr\current\ssmgr.conf | |
| \$ENV_DIR\ES\Manager\etc\opt\FJSVssmgr\current\trapop.bat | |
| \$ENV_DIR\ES\Manager\etc\opt\FJSVssmgr\current\traprm.bat | |

Using Explorer or a similar program, copy the subdirectories and files belonging to the following directory to their backup location.

| Copy Source Directory | Copy Destination Directory |
|--|--|
| \$ENV_DIR\ES\Manager\etc\opt\FJSVssmgr\current\eventmail | \$BAK_DIR\ES\Manager\etc\opt\FJSVssmgr\current\eventmail |

6. Back up the SNMP Trap XML definition files.

This step can be skipped if you are not customizing the SNMP Trap XML definition files.

Below is an example for if the SNMP Trap XML definition file 1_3_6_1_1588_2_1_1.xml is being customized. As in this example, back up each file one at a time.

Create the following backup directory in Explorer or a similar program.

- \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\snmpth

Using Explorer or a similar program, copy the following file to its backup location.

| Copy Source File | Copy Destination Directory |
|--|---|
| \$ENV_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\snmpth\1_3_6_1_1588_2_1_1_1.xml | \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\snmpth |

7. Back up the device polling setting files.

This step can be skipped if you are not customizing the device polling setting files.

Below is an example for if the device polling setting file DP_config.xml is being customized. As in this example, back up each file one at a time.

Create the following backup directory in Explorer or a similar program.

- \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\devicepolling

Using Explorer or a similar program, copy the following file to its backup location.

| Copy Source File | Copy Destination Directory |
|--|--|
| \$ENV_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\devicepolling\DP_config.xml | \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\devicepolling |

8. Back up the polling service setting file.

This step can be skipped if you are not customizing the polling service setting file.

If customizing the polling service setting file pollingService.xml, follow the step below to back it up.

Create the following backup directory in Explorer or a similar program.

- \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\polling

Using Explorer or a similar program, copy the following file to its backup location.

| Copy Source File | Copy Destination Directory |
|---|--|
| \$ENV_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\polling\pollingService.xml | \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\polling |

9. Back up the registry.

Create the following backup directory in Explorer or a similar program.

- \$BAK_DIR\ACM\etc

Using Explorer or a similar program, copy the following files to the backup location.

| Copy Source File | Copy Destination Directory |
|------------------------------|----------------------------|
| \$ENV_DIR\ACM\etc\swnode.ini | \$BAK_DIR\ACM\etc |
| \$ENV_DIR\ACM\etc\device.ini | |

10. Save the files related to copy group and copy pair definitions.

Perform this step only if you are using the Advanced Copy function.

Create the following directories for the backup data in Explorer or a similar program.

- \$BAK_DIR\CCM\etc
- \$BAK_DIR\CCM\etc\db
- \$BAK_DIR\CCM\etc\db\cg
- \$BAK_DIR\CCM\etc\prop

- \$BAK_DIR\CCM\var\micc\database

Using Explorer or a similar program, copy the following files to their backup locations.

| Copy Source File | Copy Destination Directory |
|---|---------------------------------|
| \$ENV_DIR\CCM\etc\ldb\eternus.xml | \$BAK_DIR\CCM\etc\ldb |
| \$TMP_DIR\CCM\var\micc\database\DeviceRegList.xml | \$BAK_DIR\CCM\var\micc\database |

If copy source files exist, copy the following files to their backup locations using Explorer or a similar program.

| Copy Source File | Copy Destination Directory |
|--|----------------------------|
| \$ENV_DIR\CCM\etc\prop\user.properties | \$BAK_DIR\CCM\etc\prop |
| \$ENV_DIR\CCM\etc\stxc.alias | \$BAK_DIR\CCM\etc |
| \$ENV_DIR\CCM\etc\stxc_ext.alias | |
| \$ENV_DIR\CCM\etc\stxcvolinf | |

Using Explorer or a similar program, copy the files belonging to the following directory to their backup location.

| Copy Source Directory | Copy Destination Directory |
|---------------------------|----------------------------|
| \$ENV_DIR\CCM\etc\ldb\crg | \$BAK_DIR\CCM\etc\ldb\crg |

11. Back up the license management database.

Create the following backup directory in Explorer or a similar program.

- \$BAK_DIR\LM

Execute the following command. The backup data will be created with the file name specified in <filename>.

```
$INS_DIR\LM\bin\esflm backup $BAK_DIR\LM\<filename>
```

12. Back up the files associated with the Reporting function. (For Reporting Function only)

Create the following backup directories using Explorer or the like:

- \$BAK_DIR\Common\etc\report
- \$BAK_DIR\Common\etc\scheduler
- \$BAK_DIR\Common\var\report

Copy the files under the following directories to the backup location using Explorer or the like:

| Copy Source Directory | Copy Destination Directory |
|--------------------------------|--------------------------------|
| \$ENV_DIR\Common\etc\report | \$BAK_DIR\Common\etc\report |
| \$ENV_DIR\Common\etc\scheduler | \$BAK_DIR\Common\etc\scheduler |

Copy the files under the following directories to the backup location using Explorer or the like:

| Copy Source Directory | Copy Destination Directory |
|-----------------------------|-----------------------------|
| \$TMP_DIR\Common\var\report | \$BAK_DIR\Common\var\report |

13. Back up the files related to the Automated Storage Tiering function.

Backup is not required if there are no subdirectories or files.

Create the following directories for the backup data in Explorer or a similar program.

- \$BAK_DIR\AST\Manager\etc\opt\FJSVssast\data

- \$BAK_DIR\ASTManager\var\opt\FJSVssast\data

Using Explorer or a similar program, copy the subdirectories and files belonging to the following directory to their backup location.

| Copy Source Directory | Copy Destination Directory |
|---|---|
| \$ENV_DIR\ASTManager\etc\opt\FJSVssast\data | \$BAK_DIR\ASTManager\etc\opt\FJSVssast\data |
| \$TMP_DIR\ASTManager\var\opt\FJSVssast\data | \$BAK_DIR\ASTManager\var\opt\FJSVssast\data |

14. Back up the Quality of Service Management Option environment. (For Quality of Service Management Option only)

Create the following backup directory using Explorer or the like:

- \$BAK_DIR\Common\etc\qos

Copy the files under the following directory to the backup location using Explorer or the like:

| Copy Source Directory | Copy Destination Directory |
|--------------------------|----------------------------|
| \$ENV_DIR\Common\etc\qos | \$BAK_DIR\Common\etc\qos |

15. Execute the following batch to start ETERNUS SF Manager services.

```
$INS_DIR\Common\bin\Start_ESFservice.bat
```

11.1.1.2.4 Backup of Windows Manager (Cluster Environment)

For cluster environment, follow the procedure below to save the environment for the Storage Cruiser's manager.

1. Stop all cluster services which the Manager belongs to.

Refer to "Cluster Transaction and Local Transaction" in the *ETERNUS SF Cluster Environment Setup Guide* for details of cluster transaction.

2. Mount the shared disk on the primary node.

3. Start the ETERNUS SF Manager Postgres service.

Open Service Control Manager to start the following service:

- ETERNUS SF Manager Postgres Service

4. Perform steps 2 and step 4 to 14 of "11.1.1.2.3 Backup of Windows Manager" on the primary node.

Directory description in "11.1.1.2.3 Backup of Windows Manager" are replaced to the following directories.

- \$BAK_DIR means the backup destination directory.
- \$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.
- \$ENV_DIR means "Environment Directory" specified at the ETERNUS SF Manager installation.
- \$TMP_DIR means "Work Directory" as specified during installation.

5. Stop the ETERNUS SF Manager Postgres service.

Open Service Control Manager to stop the following service:

- ETERNUS SF Manager Postgres Service

6. Unmount the shared disk mounted in step 2.

7. Start all cluster transactions which the Manager belongs to.

11.1.1.3 Restoring Manager

Restore the environment for the Storage Cruiser's manager if an error has occurred in the Management Server.

All of the tasks for restoring Manager are performed in the Management Server.

11.1.1.3.1 Restoring Solaris OS/Linux Manager

Follow the procedure below to restore the environment for the Storage Cruiser's manager.

For restoration after reinstalling Manager, be sure to complete installation and setup before restoration. Refer to "Installation of ETERNUS SF Manager" and "Setup of ETERNUS SF Manager" in the *ETERNUS SF Installation and Setup Guide* for installation and setup.

Information

Notation in Procedure:

- "\$BAK_DIR" signifies the backup destination directory.

1. Re-setup Storage Cruiser's manager.

Install ETERNUS SF Manager and set it up as Storage Cruiser's manager.

Refer to "Installation of ETERNUS SF Manager" and "Setup of ETERNUS SF Manager" in the *ETERNUS SF Installation and Setup Guide* for installation and setup.

2. Stop the ETERNUS SF Manager Tomcat Service.

Execute the following shell script to stop the service.

```
/opt/FJSVesfcm/bin/stop-webservice.sh
```

3. Restore the backup data.

Execute the following command. Specify the default value 15432 to *<port-number>*, however, if you have changed the port number, specify the changed port number to *<port-number>*.

```
/opt/FJSVesfcm/postgres/bin/psql -U esfpostgres -p <port-number> postgres
```

A prompt is displayed, with the server awaiting input. Input the following keywords in the sequence shown below.

```
master01!  
drop database esfdb;  
\q
```

Execute the following command to restore the backup data. Specify the default value 15432 to *<port-number>*, however, if you have changed the port number, specify the changed port number to *<port-number>*. For *<filename>*, input the file name specified when the backup data was created.

```
/opt/FJSVesfcm/postgres/bin/psql -U esfpostgres -p <port-number>  
-f $BAK_DIR/Common/<filename> postgres
```

A prompt is displayed, with the server awaiting input. Input the following keyword.

```
master01!
```

4. Execute the following shell script to stop the ETERNUS SF Manager services.

```
/opt/FJSVesfcm/bin/stopesf.sh
```

Note

Upon executing the shell script, multiple messages stating that the ETERNUS SF Manager Tomcat Service has already been stopped will be displayed. These messages do not pose a problem and can be ignored.

5. Restore the files related to the performance management function.

This step can be skipped if you are not using the performance management function or the files related to the performance management function are not backed up.

Delete the subdirectories and files belonging to the restore destination directory.

However, be sure not to delete the restore destination directory itself. If the restore destination directory itself does not exist, create one.

```
rm -f /etc/opt/FJSVssmgr/current/perf.conf
rm -rf /etc/opt/FJSVssmgr/current/perfconf/*
rm -rf /var/opt/FJSVssmgr/current/perf/*
```

Copy the subdirectories and files from the backup location.

```
cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/perf.conf /etc/opt/FJSVssmgr/current/
cp -Rp $BAK_DIR/etc/opt/FJSVssmgr/current/perfconf/* /etc/opt/FJSVssmgr/current/perfconf/
cp -Rp $BAK_DIR/var/opt/FJSVssmgr/current/perf/* /var/opt/FJSVssmgr/current/perf/
```

6. Restore the other files which can be customized.

This restoration is unnecessary for the files or the directories which have not been backed up.

Copy the subdirectories and files from the backup location.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/sanma.conf /etc/opt/FJSVssmgr/current/
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/ssmgr.conf /etc/opt/FJSVssmgr/current/
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/trapop.sh /etc/opt/FJSVssmgr/current/
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/traprm.sh /etc/opt/FJSVssmgr/current/
# cp -Rp $BAK_DIR/etc/opt/FJSVssmgr/current/eventmail/* /etc/opt/FJSVssmgr/current/eventmail/
```

7. Restore the SNMP Trap XML definition files.

This restoration is unnecessary for the files which have not been backed up.

Copy the SNMP Trap XML definition files from the backup location.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/snmpth/*.xml /etc/opt/FJSVssmgr/current/snmpth/
```

8. Restore the device polling setting files.

This restoration is unnecessary for the files which have not been backed up.

Copy the files from the backup location.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/devicepolling/*.xml /etc/opt/FJSVssmgr/current/devicepolling/
```

9. Restore the polling service setting file.

This restoration is unnecessary for the files which have not been backed up.

Copy the file from the backup location.

```
# cp -p $BAK_DIR/etc/opt/FJSVssmgr/current/polling/*.xml /etc/opt/FJSVssmgr/current/polling/
```

10. Restore the files related to copy group and copy pair definitions.

Perform this step only if you are using the Advanced Copy function.

Delete the subdirectories and files belonging to the restore destination directory.

```
rm -rf /etc/opt/FJSVccm/db/cg/*
rm -f /etc/opt/FJSVccm/prop/user.properties
rm -f /etc/opt/FJSVccm/acc/etc/stxc.alias
rm -f /etc/opt/FJSVccm/acc/etc/stxc_ext.alias
rm -f /etc/opt/FJSVccm/acc/etc/stxcvolinf
```

Copy the subdirectories and files from the backup location.

```
cp -p $BAK_DIR/CCM/etc/db/eternus.xml /etc/opt/FJSVccm/db
cp -p $BAK_DIR/CCM/var/micc/database/DeviceRegList.xml /var/opt/FJSVccm/micc/database
cp -p $BAK_DIR/CCM/etc/prop/user.properties /etc/opt/FJSVccm/prop
```

```
cp -p $BAK_DIR/CCM/etc/stxc.alias /etc/opt/FJSVccm/accc/etc
cp -p $BAK_DIR/CCM/etc/stxc_ext.alias /etc/opt/FJSVccm/accc/etc
cp -p $BAK_DIR/CCM/etc/stxcvolinf /etc/opt/FJSVccm/accc/etc
cp -Rp $BAK_DIR/CCM/etc/db/cg/* /etc/opt/FJSVccm/db/cg
```

11. Restore the license management database.

Execute the following command. For *<filename>*, input the file name which was specified when the backup data was created.

```
/opt/FJSVesflm/bin/esflm restore $BAK_DIR/LM/<filename>
```

12. Restore the files associated with the Reporting function. (For Reporting Function only)

If the files associated with the Reporting function are not backed up, this procedure is not needed.

Delete the subdirectories and files belonging to the restore destination directory.

However, be sure not to delete the restore destination directory itself. If the restore destination directory itself does not exist, create one.

```
rm -f /etc/opt/FJSVesfcm/conf/report/*
rm -f /etc/opt/FJSVesfcm/conf/scheduler/*
rm -rf /var/opt/FJSVesfcm/report/*
```

Copy the subdirectories and files from the backup location.

```
cp -p $BAK_DIR/etc/opt/FJSVesfcm/conf/report/* /etc/opt/FJSVesfcm/conf/report/
cp -p $BAK_DIR/etc/opt/FJSVesfcm/conf/scheduler/* /etc/opt/FJSVesfcm/conf/scheduler/
cp -Rp $BAK_DIR/var/opt/FJSVesfcm/report/* /var/opt/FJSVesfcm/report/
```

13. Restore the files related to the Automated Storage Tiering function.

Restore is not required if there are no subdirectories or files.

Delete the subdirectories and files belonging to the restore destination directory.

However, be sure not to delete the restore destination directory itself. If the restore destination directory itself does not exist, create one.

```
rm -rf /etc/opt/FJSVssast/data/*
rm -rf /var/opt/FJSVssast/data/*
```

Copy the subdirectories and files from the backup location.

```
cp -Rp $BAK_DIR/etc/opt/FJSVssast/data/* /etc/opt/FJSVssast/data/
cp -Rp $BAK_DIR/var/opt/FJSVssast/data/* /var/opt/FJSVssast/data/
```

14. Restore the Quality of Service Management Option environment. (For Quality of Service Management Option only)

Delete the subdirectories and files belonging to the restore destination directory.

However, be sure not to delete the restore destination directory itself. If the restore destination directory itself does not exist, create one.

```
rm -f /etc/opt/FJSVesfcm/conf/qos/*
```

Copy the subdirectories and files from the backup location.

```
cp -p $BAK_DIR/etc/opt/FJSVesfcm/conf/qos/* /etc/opt/FJSVesfcm/conf/qos/
```

15. Execute the following shell script to start ETERNUS SF Manager services.

```
/opt/FJSVesfcm/bin/startesf.sh
```

11.1.1.3.2 Restoring Solaris OS/Linux Manager (Cluster Environment)

For cluster environment, follow the procedure below to restore the environment for the Storage Cruiser's manager.

For restoration after reinstalling Manager, be sure to complete installation and setup before restoration. Refer to "Customization for Management Server Transaction" in the *ETERNUS SF Cluster Environment Setup Guide* for installation and setup.

1. Stop all cluster transaction which the Manager belongs to.

Refer to "Cluster Transaction and Local Transaction" in the *ETERNUS SF Cluster Environment Setup Guide* for details of cluster transaction.

2. Mount the shared disk on the primary node.

3. Start the ETERNUS SF Manager Postgres service.

Execute the following command to start the ETERNUS SF Manager Postgres service:

- For the Solaris/RHEL5/RHEL6 environment

```
/etc/init.d/startSFmanager start-postgres
```

- For the RHEL7 environment

```
/opt/FJSVesfcm/bin/startSFmanager start-postgres
```

4. Perform steps 3 and step 5 to 14 of "[11.1.1.3.1 Restoring Solaris OS/Linux Manager](#)" on the primary node.

5. Stop the ETERNUS SF Manager Postgres service.

Execute the following command to stop the ETERNUS SF Manager Postgres service:

- For the Solaris/RHEL5/RHEL6 environment

```
/etc/init.d/startSFmanager stop-postgres
```

- For the RHEL7 environment

```
/opt/FJSVesfcm/bin/startSFmanager stop-postgres
```

6. Unmount the shared disk mounted in step 2.

7. Start all cluster transactions which the Manager belongs to.

11.1.1.3.3 Restoring Windows Manager

Follow the procedure below to restore the environment for Storage Cruiser's manager.

For restoration after reinstalling Manager, be sure to complete installation and setup before restoration. Refer to "Installation of ETERNUS SF Manager" and "Setup of ETERNUS SF Manager" in the *ETERNUS SF Installation and Setup Guide* for the installation and setup procedures.



Information

Notation in Procedure:

- \$BAK_DIR means the backup destination directory.
- \$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.
- \$ENV_DIR means "Environment Directory" specified at the ETERNUS SF Manager installation.
- \$TMP_DIR means "Work Directory" specified at the ETERNUS SF Manager installation.

1. Re-setup Storage Cruiser's manager.

Install ETERNUS SF Manager and set it up as Storage Cruiser's manager.

Refer to "Installation of ETERNUS SF Manager" and "Setup of ETERNUS SF Manager" in the *ETERNUS SF Installation and Setup Guide* for installation and setup procedures.

2. Stop the ETERNUS SF Manager Tomcat Service.

Open the Service Control Manager and stop the following service.

- ETERNUS SF Manager Tomcat Service

3. Stop the ETERNUS VASA Provider.

If using the ETERNUS VASA Provider, open the Service Control Manager and stop the following service.

- ETERNUS Information Provider

4. Restore the backup data.

Execute the following command. Specify the default value 15432 to <port-number>, however, if you have changed the port number, specify the changed port number to <port-number>.

```
$INS_DIR\Common\sys\postgres\bin\psql -U esfpostgres -p <port-number> postgres
```

A prompt is displayed, with the server awaiting input. Input the following keywords in the sequence shown below.

```
master01!
drop database esfdb;
\q
```

Execute the following command to restore the backup data. Specify the default value 15432 to <port-number>, however, if you have changed the port number, specify the changed port number to <port-number>. For <filename>, input the file name which was specified when the backup data was created.

```
$INS_DIR\Common\sys\postgres\bin\psql -U esfpostgres -p <port-number>
-f $BAK_DIR\Common\<filename> postgres
```

A prompt is displayed, with the server awaiting input. Input the following keyword.

```
master01!
```

5. Execute the following batch to stop the ETERNUS SF Manager services.

```
$INS_DIR\Common\bin\Stop_ESFservice.bat
```

 Note

Upon executing the batch, multiple messages stating that the ETERNUS SF Manager Tomcat Service has already been stopped will be displayed. These messages do not pose a problem and can be ignored.

6. Restore the files related to the performance management function.

This step can be skipped if you are not using the performance management function or the files related to the performance management function are not backed up.

Using Explorer or a similar program, delete the subdirectories and files belonging to the following restore destination directory.

However, be sure not to delete the restore destination directory itself. If the restore destination directory itself does not exist, create it.

- \$TMP_DIR\ESCManager\etc\opt\FJSVssmgr\current\perf.conf
- \$TMP_DIR\ESCManager\var\opt\FJSVssmgr\current\perf

Using Explorer or a similar program, copy the following file from its backup location.

| Copy Source File | Copy Destination Directory |
|--|---|
| \$BAK_DIR\ESCManager\etc\opt\FJSVssmgr\current\perf.conf | \$ENV_DIR\ESCManager\etc\opt\FJSVssmgr\current |
| \$BAK_DIR\ESCManager\etc\opt\FJSVssmgr\current\perfconf | \$TMP_DIR\ESCManager\etc\opt\FJSVssmgr\current\perfconf |

Using Explorer or a similar program, copy the subdirectories and files belonging to the following directory from their backup location.

| Copy Source Directory | Copy Destination Directory |
|---|---|
| \$BAK_DIR\ESCM\Manager\var\opt\FJSVssmgr\current\perf | \$TMP_DIR\ESCM\Manager\var\opt\FJSVssmgr\current\perf |

7. Restore the other files which can be customized.

This restoration is unnecessary for the files or the directories which have not been backed up.

Using Explorer or a similar program, copy the following files from the backup locations.

| Copy Source File | Copy Destination Directory |
|---|--|
| \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\sanma.conf | \$ENV_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current |
| \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\ssmgr.conf | |
| \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\trapop.bat | |
| \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\traprm.bat | |

Using Explorer or a similar program, copy the subdirectories and files belonging to the following directory from their backup location.

| Copy Source Directory | Copy Destination Directory |
|--|--|
| \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\eventmail | \$ENV_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\eventmail |

8. Restore the SNMP Trap XML definition files.

This restoration is unnecessary for the files which have not been backed up.

Using Explorer or a similar program, copy the SNMP Trap XML definition files from their backup location.

| Copy Source File | Copy Destination Directory |
|---|---|
| \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\snmpth*.xml | \$ENV_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\snmpth |

9. Restore the device polling setting files.

This restoration is unnecessary for the files which have not been backed up.

Using Explorer or a similar program, copy the device polling setting file from its backup location.

| Copy Source File | Copy Destination Directory |
|--|--|
| \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\devicepolling\DP_config.xml | \$ENV_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\devicepolling |

10. Restore the polling service setting file.

This restoration is unnecessary for the files which have not been backed up.

Using Explorer or a similar program, copy the polling service setting file from its backup location.

| Copy Source File | Copy Destination Directory |
|---|--|
| \$BAK_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\polling\pollingService.xml | \$ENV_DIR\ESCM\Manager\etc\opt\FJSVssmgr\current\polling |

11. Restore the registry.

Using Explorer or a similar program, copy the following files from their backup location.

| Copy Source File | Copy Destination Directory |
|------------------------------|----------------------------|
| \$BAK_DIR\ACM\etc\swnode.ini | \$ENV_DIR\ACM\etc |
| \$BAK_DIR\ACM\etc\device.ini | |

12. Restore the files related to copy group and copy pair definitions.

Perform this step only if you are using the Advanced Copy function.

Using Explorer or a similar program, delete the files belonging to the following restore destination directory.

- \$ENV_DIR\CCM\etc\db\cg

Delete the following files if they exist.

- \$ENV_DIR\CCM\etc\prop\user.properties
- \$ENV_DIR\CCM\etc\stxc.alias
- \$ENV_DIR\CCM\etc\stxc_ext.alias
- \$ENV_DIR\CCM\etc\stxcvolinf

Using Explorer or a similar program, copy the following files from their backup locations.

| Copy Source File | Copy Destination Directory |
|---|---------------------------------|
| \$BAK_DIR\CCM\etc\db\eternus.xml | \$ENV_DIR\CCM\etc\db |
| \$BAK_DIR\CCM\var\micc\database\DeviceRegList.xml | \$TMP_DIR\CCM\var\micc\database |

If copy source files exist, copy the following files from the backup location using Explorer or a similar program.

| Copy Source File | Copy Destination Directory |
|--|----------------------------|
| \$BAK_DIR\CCM\etc\prop\user.properties | \$ENV_DIR\CCM\etc\prop |
| \$BAK_DIR\CCM\etc\stxc.alias | |
| \$BAK_DIR\CCM\etc\stxc_ext.alias | |
| \$BAK_DIR\CCM\etc\stxcvolinf | |

Using Explorer or a similar program, copy the files belonging to the following directory from their backup location.

| Copy Source Directory | Copy Destination Directory |
|-------------------------|----------------------------|
| \$BAK_DIR\CCM\etc\db\cg | \$ENV_DIR\CCM\etc\db\cg |

13. Restore the license management database.

Execute the following command. For <filename>, input the file name which was specified when the backup data was created.

```
$INS_DIR\LM\bin\esflm restore $BAK_DIR\LM\<filename>
```

14. Restore the files associated with the Reporting function. (For Reporting Function only)

If the files associated with the Reporting function are not backed up, this procedure is not needed.

Delete the subdirectories and files belonging to the restore destination directory.

However, be sure not to delete the restore destination directory itself. If the restore destination directory itself does not exist, create one.

- \$TMP_DIR\Common\var\report

Copy the files under the following directories from the backup location using Explorer or the like:

| Copy Source Directory | Copy Destination Directory |
|--------------------------------|--------------------------------|
| \$BAK_DIR\Common\etc\report | \$ENV_DIR\Common\etc\report |
| \$BAK_DIR\Common\etc\scheduler | \$ENV_DIR\Common\etc\scheduler |

Copy the files under the following directory from the backup location using Explorer or the like:

| Copy Source Directory | Copy Destination Directory |
|-----------------------------|-----------------------------|
| \$BAK_DIR\Common\var\report | \$TMP_DIR\Common\var\report |

15. Restore the files related to the Automated Storage Tiering function.

Restore is not required if there are no subdirectories or files.

Delete the subdirectories and files belonging to the restore destination directory.

However, be sure not to delete the restore destination directory itself. If the restore destination directory itself does not exist, create one.

- \$ENV_DIR\AST\Manager\etc\opt\FJSVssast\data
- \$TMP_DIR\AST\Manager\var\opt\FJSVssast\data

Using Explorer or a similar program, copy the subdirectories and files belonging to the following directory from their backup location.

| Copy Source Directory | Copy Destination Directory |
|--|--|
| \$BAK_DIR\AST\Manager\etc\opt\FJSVssast\data | \$ENV_DIR\AST\Manager\etc\opt\FJSVssast\data |
| \$BAK_DIR\AST\Manager\var\opt\FJSVssast\data | \$TMP_DIR\AST\Manager\var\opt\FJSVssast\data |

16. Restore the Quality of Service Management Option environment. (For Quality of Service Management Option only)

Copy the files under the following directories from the backup location using Explorer or the like:

| Copy Source Directory | Copy Destination Directory |
|--------------------------|----------------------------|
| \$BAK_DIR\Common\etc\qos | \$ENV_DIR\Common\etc\qos |

17. Execute the following batch to start ETERNUS SF Manager services.

```
$INS_DIR\Common\bin\Start_ESFservice.bat
```

18. Start the ETERNUS VASA Provider.

To use the ETERNUS VASA Provider, open the Service Control Manager and start the following service.

- ETERNUS Information Provider

19. Restore the VMware vSphere Virtual Volumes environment.

Perform the following procedure only when using the VMware vSphere Virtual Volumes function.

- a. Reloading the configuration of ETERNUS Disk Storage system
Perform the **Reload Conf.** operation for all of the ETERNUS Disk storage systems using the VMware vSphere Virtual Volumes function from the Web Console.
- b. Retrieving the ETERNUS Disk storage system configuration Information
Execute the following command to retrieve the configuration information related to the VMware vSphere Virtual Volumes function from the ETERNUS Disk storage system.

```
$INS_DIR\Common\bin\esfadm esfdata restore -all
```

This command may take some time to complete.

11.1.1.3.4 Restoring Windows Manager (Cluster Environment)

For cluster environment, follow the procedure below to restore the environment for the Storage Cruiser's manager.

For restoration after reinstalling Manager, be sure to complete installation and setup before restoration. Refer to "Installation of ETERNUS SF Manager" and "Customization for Management Server Transaction" in the *ETERNUS SF Cluster Environment Setup Guide* for installation and setup.

1. Stop all cluster transactions which the Manager belongs to.
Refer to "Cluster Transaction and Local Transaction" in the *ETERNUS SF Cluster Environment Setup Guide* for details of cluster transaction.
2. Mount the shared disk on the primary node.
3. Start the ETERNUS SF Manager Postgres service.
Open Service Control Manager to start the following service:
 - ETERNUS SF Manager Postgres Service
4. Perform steps 4 and step 6 to 16 of "[11.1.1.3.3 Restoring Windows Manager](#)" on the primary node.
Directory description in "[11.1.1.3.3 Restoring Windows Manager](#)" are replaced to the following directories.
 - \$BAK_DIR means the backup destination directory.
 - \$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.
 - \$ENV_DIR means "Environment Directory" specified at the ETERNUS SF Manager installation.
 - \$TMP_DIR means "Work Directory" specified at the ETERNUS SF Manager installation.
5. Stop the ETERNUS SF Manager Postgres service.
Open Service Control Manager to stop the following service:
 - ETERNUS SF Manager Postgres Service
6. Unmount the shared disk mounted in step 2.
7. Start all cluster transactions which the Manager belongs to.
8. Perform steps 19 of "[11.1.1.3.3 Restoring Windows Manager](#)".
Execute the `esadm esfdata` command on the primary node.

11.1.2 Changing Operating Environment

11.1.2.1 Changing IP Address of Management Server

Refer to "Changing IP Address of Management Server" in the *ETERNUS SF AdvancedCopy Manager Operation Guide*.

11.1.2.2 Changing IP Address of Server Node

Follow the procedure given below to change the IP address of a server node.

- Changing the IP address of a server node for which Agent is installed
 1. Change the system IP address on the server node.
 2. Stop the server node Agent on the server node.
 3. Execute the `setagtip` command on the server node to change the start IP of the server node Agent.
 4. Restart the server node Agent on the server node.
 5. Change the IP address of the server node from the Web Console.
- Changing the IP address of a VM host for which Agent is not installed
 1. Change the IP address of the VM host.
 2. Change the IP address information of the VM host from the Web Console.

- Changing the IP address of a guest OS for which Agent is not installed
 1. Change the IP address of the guest OS.
 2. Change the IP address information of the VM guest from the Web Console.

 **Point**

.....

Refer to "Changing IP Address of Managed Server" in the *ETERNUS SF AdvancedCopy Manager Operation Guide* when you install the AdvancedCopy Manager's agent in a server node.

.....

11.1.2.3 Changing Server Name of Management Server

Refer to "Changing Server Name of Management Server Transaction or Managed Server Transaction" in the *ETERNUS SF AdvancedCopy Manager Operation Guide*.

11.1.2.4 Changing Name of Server Node

Follow the procedure given below to change the name of a server node.

- Changing the name of a server node on which the Agent is installed
 1. Change the server node name on the server node.
 2. Stop the server node Agent on the server node.
 3. Execute the [setagtip](#) command on the server node to change the setting of the server node Agent.
 4. Restart the server node Agent on the server node.
 5. Using the Web Console, perform the **Reload Conf.** operation on the server node.
- Changing the host name of a VM host on which an Agent is not installed
 1. Change the host name of the VM host.
 2. Using the Web Console, perform [Reload of setting] for the VM host.
- Changing the virtual machine name of a VM guest or the host name of a guest OS, on which an Agent is not installed
 1. Change the virtual machine name of the VM guest or the host name of a guest OS.
 2. Using the Web Console, perform the **Reload Conf.** operation for the VM host that has the target VM guest.

 **Point**

.....

Refer to "Changing Server Name of Management Server Transaction or Managed Server Transaction" in the *ETERNUS SF AdvancedCopy Manager Operation Guide* when you install the AdvancedCopy Manager's agent in a server node.

.....

11.1.2.5 Changing Port Numbers of Management Server

Changing The Port Number of Scruisera

scruisera uses port number 4917 as standard.

Change the port number in the following steps:

1. Open the following files by a text editor or the like:
 - For Manager in a Windows environment:
%SystemRoot%\system32\drivers\etc\services
 - For Manager in Solaris/Linux environments:
/etc/services

2. Change the port number.

Enter a port number between 1024 and 65535. When changing a port number, a number between 5001 and 32768 is recommended.

```
# <service name> <port number>/<protocol> [aliases...] [#<comment>]
#
sscruisera      4917/tcp
```

3. Save the file opened at Step 1 and close it.
4. Restart Manager.

Changing Port Numbers Other Than Those Above

For Manager in a Windows environment, refer to "Changing Port Numbers (Windows)" in the *ETERNUS SF Express Operation Guide*, and for Manager in Solaris/Linux environments, refer to "Changing Port Numbers (Linux)" in the *ETERNUS SF Express Operation Guide*.

In addition, Read "Express" as "Storage Cruiser".

11.1.2.6 Changing IP Address or SNMP Community Name of Supported Device

To change the IP address of a device with support level A or B registered with this software or to change the SNMP Community name (for reading), follow the procedure below:

1. Change the IP address or the SNMP Community name of each target device.
2. Record the settings of threshold monitoring. (if thresholds are monitored)
3. Change the IP address or the SNMP Community name of the target device using the Web Console.
4. Based on the settings at step 2, start to monitor thresholds. (if thresholds are monitored)



See

Refer to "[Chapter 4 Environment Configuration](#)" for the SNMP Community name of each target device.



Note

To change the SNMP Trap community name at a Linux Manager, refer to "[A.10 snmptrapd.conf Configuration File](#)" and also change the snmptrapd.conf settings.

11.1.2.7 Changing Operation Management of Clustered System (Node Name Takeover)

Refer to "Changing IP Address of Management Server" in the *ETERNUS SF AdvancedCopy Manager Operation Guide*.

11.1.2.8 Changing Configuration of Supported Devices

For Changing Device Configuration

If the following change, the update of the set up information is needed in the support device:

- Upgrade of firmware with support device
- Configuration change by increase/decrease of hardware (in case of storage device, its CM, port, etc.)
- Addition/deletion/change in composition (in the case of a disk storage system, its RAID Group, LogicalVolume, etc.) in device

Method of updating set up information is as follows:

- Perform the **Reload Conf.** operation for the relevant device to update the information for the target device.

- Update the configuration information of the performance management function by referring to "[7.2.9 Updating Configuration Information](#)". (Only when you are using the performance management function)

For Applying Model Upgrade Options for ETERNUS Disk Storage System

The device configuration is changed when applying Model upgrade options for ETERNUS Disk storage system. Perform the following operation after applying Model upgrade options for ETERNUS Disk storage system.

| Before Applying Model Upgrade Options | After Applying Model Upgrade Options | Operation |
|---------------------------------------|--------------------------------------|---|
| ETERNUS DX60 | ETERNUS DX80 | Perform the procedure of "Operation on Model Upgrade for ETERNUS DX60 to DX80, for ETERNUS DX80 S2 to DX90 S2, for ETERNUS DX410 S2 to DX440 S2" in the <i>ETERNUS SF Web Console Guide</i> . When using the performance management function, update the configuration information of the performance management function in reference to " 7.2.9 Updating Configuration Information " after performing the procedure above. |
| ETERNUS DX80 S2 | ETERNUS DX90 S2 | |
| ETERNUS DX410 S2 | ETERNUS DX440 S2 | |
| ETERNUS DX80 S2/DX90 S2 | ETERNUS DX410 S2/DX440 S2 | Perform the procedure of "Operation on Model Upgrade for ETERNUS DX80 S2/DX90 S2 to DX410 S2/DX440 S2" in the <i>ETERNUS SF Web Console Guide</i> . |
| ETERNUS DX100 S3 | ETERNUS DX200 S3 | Perform the procedure of "Operation on Model Upgrade for ETERNUS DX100 S3 to DX200 S3, for ETERNUS DX500 S3 to DX600 S3" in the <i>ETERNUS SF Web Console Guide</i> . When using the performance management function, update the configuration information of the performance management function in reference to " 7.2.9 Updating Configuration Information " after performing the procedure above. |
| ETERNUS DX500 S3 | ETERNUS DX600 S3 | |

11.1.2.9 Changing Password of Supported Devices

Change the passwords for the following devices registered to this product to take the following conduction:

| Objected Device | Conduction |
|--|---|
| ETERNUS SN200 series (Brocade) Fibre Channel switch PRIMERGY fibre channel switch blade | Change the account information for management of the device in the Web Console. |
| Brocade VDX series PRIMERGY BX Ethernet Fabric Switch | |
| VMware vSphere 4 or later | |
| ETERNUS DX series ETERNUS DX200F | |

Except for the devices described above, there is no necessary to do any deal with this software when change the device's password.

11.2 [Solaris OS Version] Maintenance of Agent

11.2.1 Action to Take for Troubleshooting

Provided are the main examples for problems and their troubleshooting methods.

- If a new HBA has been added and the agent detected an environment error (during a time besides replacement of the HBA) It is possible the server node has not started up in re-configuration mode after the HBA was added. In this sort of situation, restart the node in re-configuration mode.
- If a new HBA driver has been installed and the agent has detected an environment error It is possible the server node was not started up in re-configuration mode after the installation of the driver. In this sort of situation, restart the node in re-configuration mode.

11.2.2 Collecting Data for Troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.2.3 Changing Administrative Environment

11.2.3.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)" for detail.

11.2.3.2 Changing Port Numbers of Server Node

When Storage Cruiser's Agent is Installed

Change the port number in the following steps:

1. Change the port number.

Refer to "Port Number Setting" in "Setup of Storage Cruiser's Agent" in the *ETERNUS SF Installation and Setup Guide* to change port numbers.

2. Restart the Storage Cruiser's agent.

Manually Registering

A manually registered server node does not use any port, so that change of port number is not required.

11.3 [Windows Version] Maintenance of Agent

11.3.1 Action to Take for Troubleshooting

Major errors related to Agent running on a Windows Server 2003 server node and the corrective action to be taken are explained below. In the Event viewer or the GUI window, confirm the occurrence of the errors described below.

Manager Cannot Detect Agent.

- If all access paths under multipath control have been deleted by mistake, follow the recovery procedure given below.
 - Restart the Windows server node.
After an access path is deleted, multipath control no longer controls the path, and the related device is not recognized.
 - For the respective devices deleted by mistake on the access path, perform the **Reload Conf.** operation.
 - Set the access path that was deleted by mistake.
- Too many devices are connected to the Windows server node.
If too many devices are recognized by the Windows server node, Agent cannot perform processing within the response time, leading to a communication failure. In this event, check the connection configuration, and reduce the number of devices recognized by the Windows server node.
Access paths can be set for approximately 100 devices per one Windows server node, but the number of devices varies depending on the server node environment.

GUI Window Contents Differ from Physical Configuration.

- An access path from an Emulex HBA cannot be drawn.
The Topology value in a driver parameter in the registry may be incorrect.
This caused by values in the registry being reset to default values, which occurs at either of the times: when a driver is re-installed; and when a driver is automatically re-installed because of the installation a new HBA having a different model number from that of a HBA already installed in a Windows Server 2003 machine (e.g., LP9802 and LP1050).
Using the registry editor, check the driver parameters of the HBA, correct any incorrect value that you find, and then select **Reload Conf.**
Refer to "[4.1.2 Windows Server Node](#)" for information about driver parameters.

11.3.2 Collecting Data for Troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.3.3 Changing Administrative Environment

11.3.3.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)" for detail.

11.3.3.2 Changing Port Numbers of Server Node

Refer to "[11.2.3.2 Changing Port Numbers of Server Node](#)" for detail.

11.4 [Linux Version] Maintenance of Agent

11.4.1 Collecting Data for Troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.4.2 Changing Administrative Environment

11.4.2.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)" for detail.

11.4.2.2 Changing Port Numbers of Server Node

Refer to "[11.2.3.2 Changing Port Numbers of Server Node](#)" for detail.

11.5 [HP-UX Version] Maintenance of Agent

11.5.1 Collecting data for troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.5.2 Changing Administrative Environment

11.5.2.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)" for detail.

11.5.2.2 Changing Port Numbers of Server Node

Refer to "[11.2.3.2 Changing Port Numbers of Server Node](#)" for detail.

11.6 [AIX Version] Maintenance of Agent

11.6.1 Collecting Data for Troubleshooting

If any problem occurs in Agent, collect troubleshooting information according to "[B.1 Collecting Troubleshooting Information](#)".

11.6.2 Changing Administrative Environment

11.6.2.1 Changing IP Address of Server Node

Refer to "[11.1.2.2 Changing IP Address of Server Node](#)" for detail.

11.6.2.2 Changing Port Numbers of Server Node


Refer to "[11.2.3.2 Changing Port Numbers of Server Node](#)" for detail.

Chapter 12 Linkage to Other Software

This chapter describes the operating methods conducting centralized administration in Systemwalker Centric Manager and other administrative software.

12.1 Linkage with Systemwalker Centric Manager

Linkage with Systemwalker Centric Manager enables it to be used for centralized monitoring of storage devices. In addition, linkage through window operations enables smooth troubleshooting of storage devices.

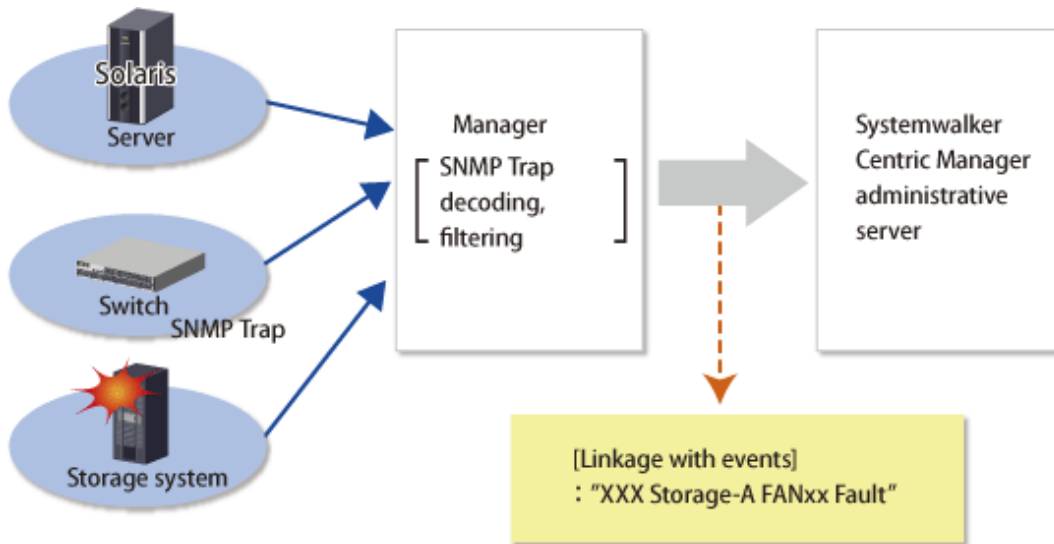

Note

Event Linkage is done not through the system log or event log on the operating system.

12.1.1 Linkage Function with Systemwalker Centric Manager

Centralized Event Monitoring

Icons of the devices managed by this software are displayed in the monitoring window of the Systemwalker Centric Manager administrative client.

When an SNMP Trap is received from a monitored device, this software obtains only an event related to a fault and decodes it appropriately. This event is sent to Systemwalker Centric Manager to display the event. As a result, Systemwalker Centric Manager can be used to integrate existing server node management and storage device monitoring of this software. Moreover, functions such as Systemwalker Centric Manager e-Mail and pager can then be used for fault monitoring of the server node and storage devices.

By directly managing the storage equipment from Systemwalker Centric Manager, easier setup is achieved and more comprehensible troubleshooting reports are produced.

The icon for a device where a fault has occurred is indicated by "X" in Systemwalker Centric Manager, and information about the fault is displayed as event contents. When the event content is checked and action is taken for the fault, "Action" will be marked for the event. This operation clears the "X" state. The "X" state is not restored automatically by recovery from the fault.

"SSC" is indicated in the message for an event linked by this function to Systemwalker Centric Manager.

Linkage Through Window Operations

On the Systemwalker Centric Manager monitoring window, select a menu item that was added to this software from the pop-up menu of a node of the faulty storage device, and then start it. This facilitates troubleshooting of the faulty storage device.

12.1.2 Required Versions

Linkage of Systemwalker Centric Manager with this software requires one of the following versions of Systemwalker Centric Manager:

- Solaris OS , Linux
SystemWalker Centric Manager GEE V11 or later
SystemWalker Centric Manager-M EE/SE V11 or later
- Windows
SystemWalker Centric Manager-M EE/SE V11 or later

12.1.3 Preparations

Preparations for linkage of Systemwalker Centric Manager with this software are described below.


- Register the storage devices to be managed with this software before setting up a link with Systemwalker Centric Manager.
- So that the names of the devices registered in this software can be resolved, either register the IP address and host name information for each device in the DNS server that is referenced by the Management Server, or define them in the /etc/hosts file on the Management Server.
- To detect node names and achieve software linkage, the Systemwalker Centric Manager administrative server and the Management Server of this software should both be managed by the DNS server, and have the same /etc/hosts definition. Confirm the settings.
- The Systemwalker Centric Manager administrative server must be the same server, or Systemwalker Centric Manager Agent must be installed on the Management Server of this software.
Also, the Systemwalker Centric Manager administrative server or Systemwalker Centric Manager Agent on the same server must be operating during the linkage operation.

12.1.4 Setup Procedure

Follow the procedure below on the Systemwalker Centric Manager operation management client.

Log in to the administrative client with a user name belonging to the Administrators group of the local group.

12.1.4.1 Setup on Systemwalker Centric Manager Administrative Client

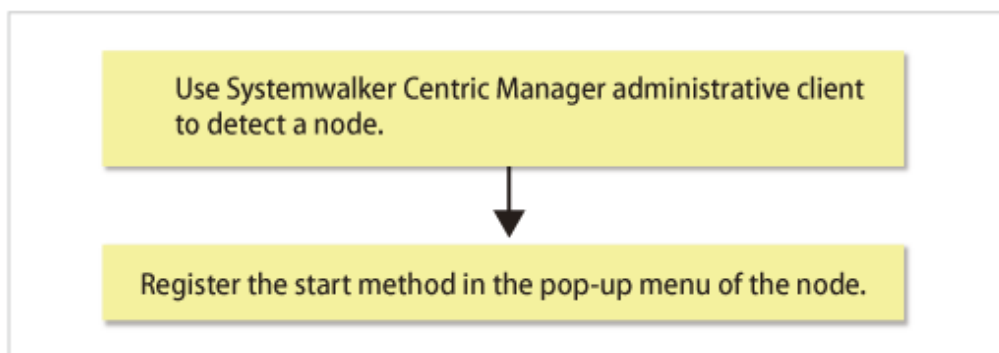

1. On the Systemwalker Centric Manager administrative client, perform the procedure to detect a node in a subnet that contains storage devices.
2. Register the window start method in the pop-up menu of the node.

Register the start method of this software in the pop-up menu of the node of the storage device, using the Systemwalker Centric Manager mpaplreg command.

The example below uses "ESC" as the menu name and "server1" as the server node name. Change these names according to the environment if necessary.

```
mpaplreg -a -m ESC -p server1 -c "\"<Web browser execution path>\\" \"https://<IP-address>:<port_number>/\""
```

- For <Web browser execution path>
 - If using Internet Explorer:
Specify the absolute path of iexplore.exe.
 - If using Firefox:
Specify the absolute path of firefox.exe.
- For <IP-address>
Specify the IP address or Fully Qualified Domain Name (FQDN) of the Management Server.
- For <port_number>
Specify the port number of "Web Console service (ETERNUS SF Manager Apache service)" specified when installing this software. Default is 9855.

Enclose the entire start command (-c option value) specified with the mpapreg command within double quotation marks ("), and enclose the start command (C:\Program Files\...rcxclient.exe) with ["] and ["].

Note

- The operating environment must be set up in such a way that the Management Server recognizes the association between "Name" and "IP" in case that Systemwalker Centric Manager detects the server node by "Name", but not "IP". Please confirm that the name is registered in /etc/hosts or on the DNS server. Software linkage from this software to Systemwalker Centric Manager will fail if the Management Server does not recognize the association between an IP number and a node name.
- Perform this operation each time a new storage device is added.
- When the event that is displayed as Info in the status item of the event log window is reported to Systemwalker Centric Manager, it is regarded as "Display Mode: general" and is not displayed on the monitoring window. If you want to display it, execute [Display Mode in the Monitored Viewer] from **Action > Action Setting > Message** on the Systemwalker Centric Manager menu. Refer to the Systemwalker Centric Manager manual for details about [Display Mode in the Monitored Viewer].
- If the starting method of this software's Management Server is changed, execute the following command to delete the registered menu, and register it again. (In the example below, the menu name is "ESC.")

```
mpapreg -d -m ESC
```

- Confirm the content of registration by the following commands when the icon of this software is not displayed in the pop-up menu of the node though the menu addition by the mpapreg command has normally. (In the example below, the menu name is "ESC.")

```
mpapreg -v -m ESC
```

- After completing the procedure, restart the Systemwalker Centric Manager server of an administrative client, and execute "node detection" in the monitoring area. Updating of registered icons is enabled in the display.
- A parameter error (swsag5101) occurs if the mpapreg command contains an invalid parameter when starts from the batch file.

12.1.4.2 Action to Be Taken If Systemwalker Centric Manager Administrative Server and This Software Management Server Are Same Server

If the Systemwalker Centric Manager administrative server and the Management Server of this software are the same server, both Systemwalker Centric Manager and this software receive and display SNMP Traps from devices. Perform the following task to prevent Systemwalker Centric Manager from directly receiving and displaying SNMP Traps from devices:

Suppressing Systemwalker Centric Manager Reception of SNMP Traps from Devices Managed by This Software

If one server node has the Systemwalker Centric Manager administrative server and Management Server of this software, the following steps prevent Systemwalker Centric Manager from direct reception of SNMP Traps of devices managed by this software. As a result, SNMP Traps would be received and decoded by this software and only SNMP Traps necessary for fault monitoring would be posted to


Systemwalker Centric Manager. Consequently, when the SNMP Trap display function supported by Systemwalker Centric Manager is used, multiple traps appear for a single event or unnecessary SNMP Traps are displayed.

Information

These settings are not required if the Systemwalker Centric Manager-supported SNMP Trap display function is enabled.

1. From a Systemwalker Centric Manager administrative client, select [Event] - [Action Definition] in "System Monitoring."


The Monitored Event Table dialog appears.

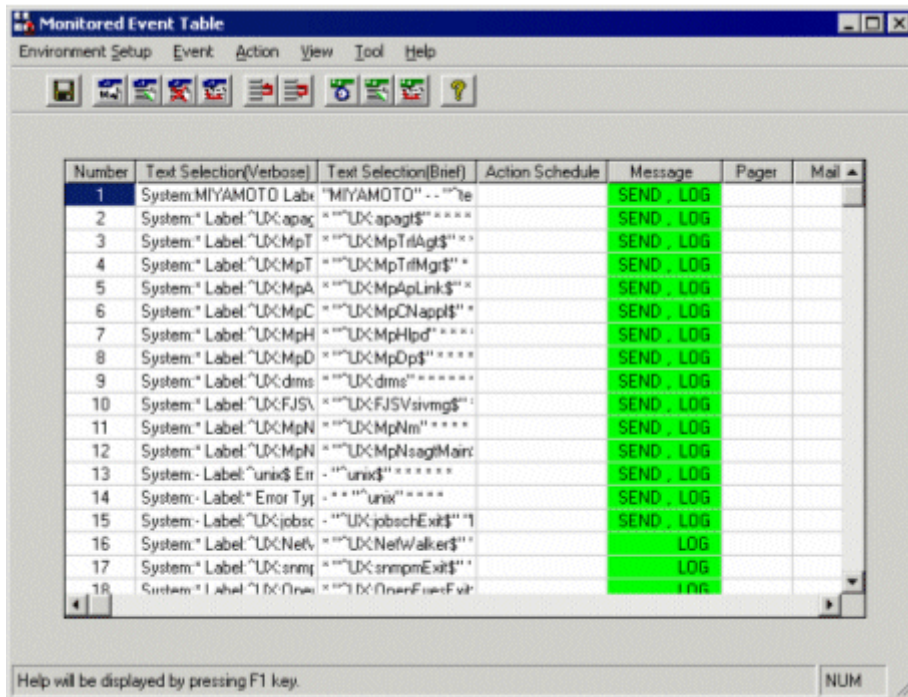

| Number | Text Selection(Verbose) | Text Selection(Brief) | Action Schedule | Message | Pager | Mail |
|--------|----------------------------|----------------------------|-----------------|----------|-------|------|
| 1 | System:MIYAMOTO Labr | "MIYAMOTO" - - ""te | | SEND LOG | | |
| 2 | System: Label: ^UX: apag | "^UX: apagt\$"" * * * | | SEND LOG | | |
| 3 | System: Label: ^UX: MpT | "^UX: MpTrAgt\$"" * * * | | SEND LOG | | |
| 4 | System: Label: ^UX: MpT | "^UX: MpTrMgt\$"" * * * | | SEND LOG | | |
| 5 | System: Label: ^UX: MpA | "^UX: MpApLink\$"" * * * | | SEND LOG | | |
| 6 | System: Label: ^UX: MpC | "^UX: MpCNappt\$"" * * * | | SEND LOG | | |
| 7 | System: Label: ^UX: MpH | "^UX: MpHpd\$"" * * * | | SEND LOG | | |
| 8 | System: Label: ^UX: MpD | "^UX: MpDp\$"" * * * | | SEND LOG | | |
| 9 | System: Label: ^UX: dims | "^UX: dims\$"" * * * | | SEND LOG | | |
| 10 | System: Label: ^UX: FJS\ | "^UX: FJSVsvimg\$"" * * * | | SEND LOG | | |
| 11 | System: Label: ^UX: MpN | "^UX: MpNm\$"" * * * | | SEND LOG | | |
| 12 | System: Label: ^UX: MpN | "^UX: MpNsgtMain\$"" * * * | | SEND LOG | | |
| 13 | System: Label: ^unix\$ Err | "^unix\$"" * * * | | SEND LOG | | |
| 14 | System: Label: Error Typ | "^unix\$"" * * * | | SEND LOG | | |
| 15 | System: Label: ^UX: jobsc | "^UX: jobscExit\$"" * * * | | SEND LOG | | |
| 16 | System: Label: ^UX: NetV | "^UX: NetWalker\$"" * * * | | LOG | | |
| 17 | System: Label: ^UX: snmp | "^UX: snmpExit\$"" * * * | | LOG | | |
| 18 | System: Label: ^UX: Onse | "^UX: OnseExit\$"" * * * | | LOG | | |

2. Select [Event] - [Event Addition] in the Monitored Event Table dialog.

The Event Definition dialog appears.

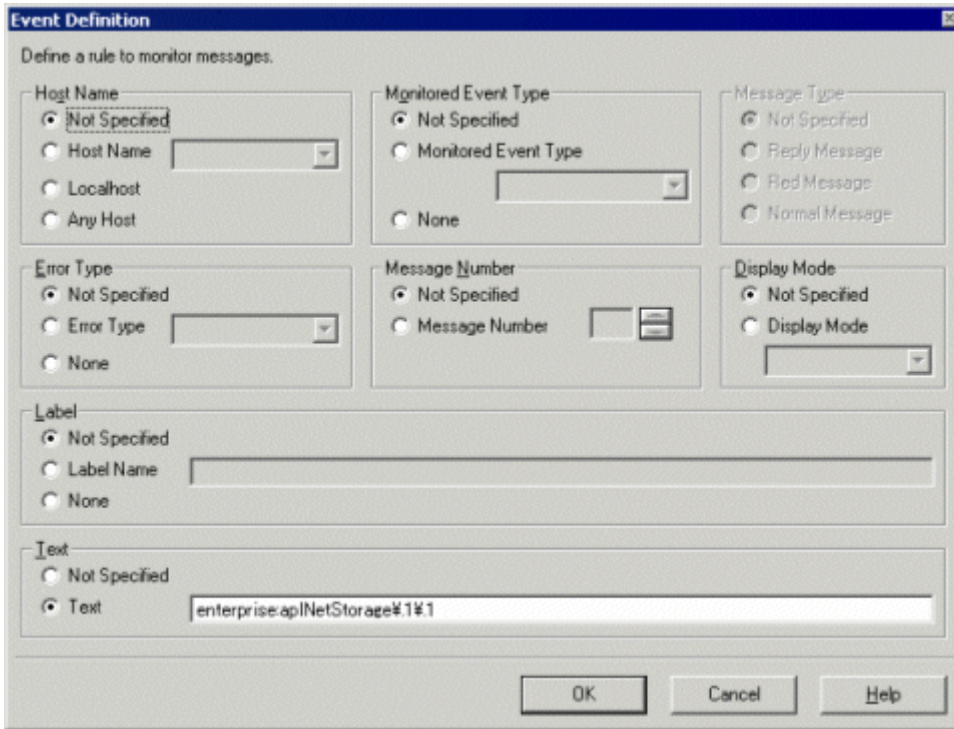

Define the following items:

Host Name

Check "Not specified".

Monitored Event Type

Check "Not specified".

Error Type

Check "Not specified".

Message Number

Check "Not specified".

Display Mode (Only for Systemwalker Centric Manager 5.1 or Later)

Check "Not specified".

Label

Check "Not specified".

Text

Specify one of the values shown below for an event definition.

Be sure to define this item only when individual devices are being managed. Otherwise, the item need not be defined.

Table 12.1 Lists of Text

| Device | Value |
|---|---|
| ETERNUS DX series ETERNUS DX200F | enterprise:aplNetStorage\1 or enterprise:enterprises\211\4\1\1\126\1 (*1) |
| ETERNUS LT20 (SCSI) | enterprise:enterprises\11\2\36\1 |
| ETERNUS LT20/LT20 S2/LT40/LT40 S2/LT60/LT60 S2 (SAS/FC) | enterprise:enterprises\20884\10893\2\101\3 |


| Device | Value |
|--|--|
| HP Surestore | enterprise:enterprises\11\2\3\9\7\1 enterprise:enterprises\11\2\3\9\7\2 |
| ETERNUS LT200 | enterprise:enterprises\119\1\83\1\21 |
| ETERNUS LT210/LT220/LT230 | enterprise:enterprises\119\1\83\1\1 enterprise:enterprises\119\1\83\1\2 |
| ETERNUS LT250 | enterprise:aplNetStorage\3\5 or enterprise:enterprises\211\4\1\1\126\3\5 (*1) |
| ETERNUS LT260 | enterprise:enterprises\20884\3 |
| ETERNUS LT270 | enterprise:aplNetStorage\3\2 or enterprise:enterprises\211\4\1\1\126\3\2 (*1) |
| ETERNUS LT270 S2 | enterprise:aplNetStorage\3\6 or enterprise:enterprises\211\4\1\1\126\3\6 (*1) |
| NetApp FAS Series, FAS Series (with clustered Data ONTAP), V-Series, and V-Series (with clustered Data ONTAP) | enterprise:enterprises\789 |
| Brocade Fibre Channel switch ETERNUS SN200 series Fibre Channel switch PRIMERGY Fibre Channel switch blade Brocade VDX series PRIMERGY BX Ethernet Fabric Switch | enterprise:enterprises\1588\2\1\1 |
| Performance Agent trap Device polling | enterprise:aplSANMgr or enterprise:enterprises\211\4\1\1\3\21 (*1) |
| Brocade Fibre Channel switch, ETERNUS SN200 series Fibre Channel switch, PRIMERGY Fibre Channel switch blade common | enterprise:experimental\94 (*2) |
| ETERNUS VS850 | enterprise:enterprises\2\6\190 |
| ETERNUS CS2000 | enterprise:enterprises\231\2\48\2\0 |

*1: Specify it when Systemwalker Centric Manager cannot recognize "aplNetStorage" or "aplSANMgr".

*2: The device not supported with Storage Cruiser includes the device which reports on SNMP Trap of this experimental \94 and the event of those devices is controlled.

3. Select [Action] - [Action Setting] for the event set in step 2.

The Action Definition dialog appears.

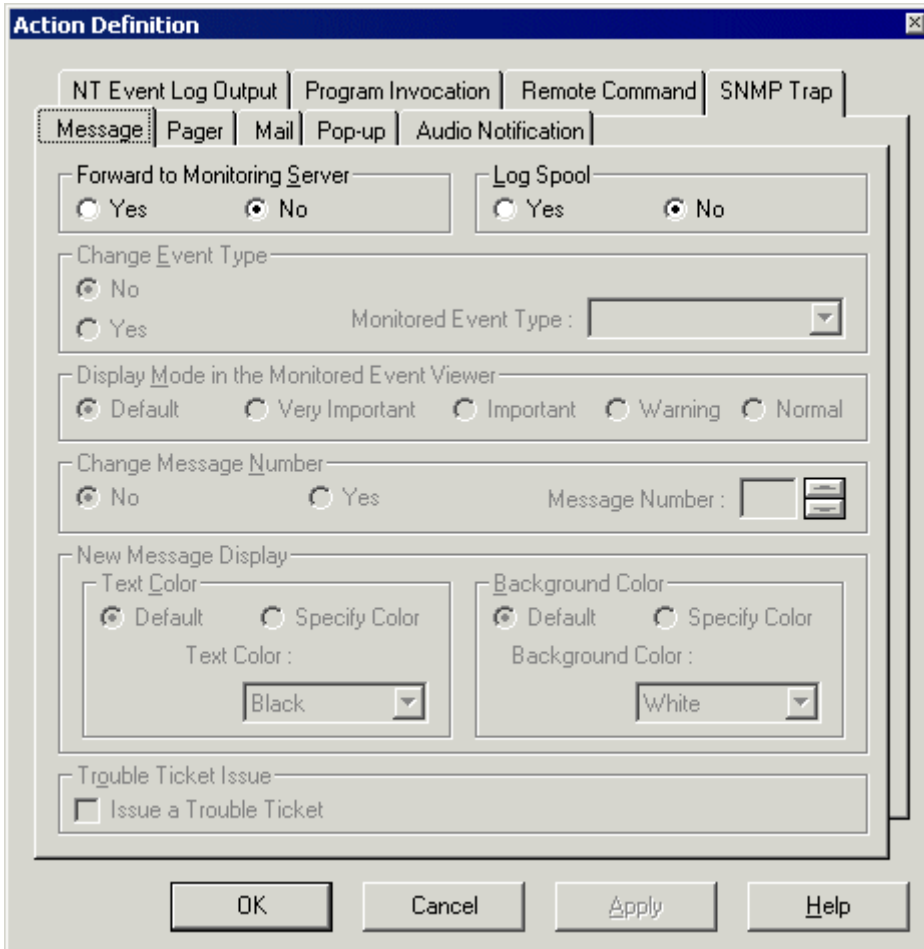

Select the [Message] tab, and define the following items:

Forward to Monitoring Server

Check "No"

Log Spool


Check "No"

4. Repeat steps 1 to 3 for each of the text messages in the "Table 12.1 Lists of Text".
If the SNMP standard trap is reported as an event from a storage device, refer to the above description, and suppress transmission of the SNMP standard trap according to your operation mode.

12.1.4.3 Setting Confirmation Test

If the management device is an ETERNUS DX series, ETERNUS DX200F or Fibre Channel switch device, a procedure and command are provided which allow you to check if the Systemwalker Centric Manager linkage is correctly set. Execute the "5.3 Checking Management Status" to check if it is properly running.

The figure below shows an example of the Systemwalker Centric Manager window displayed during event linkage with Systemwalker Centric Manager.

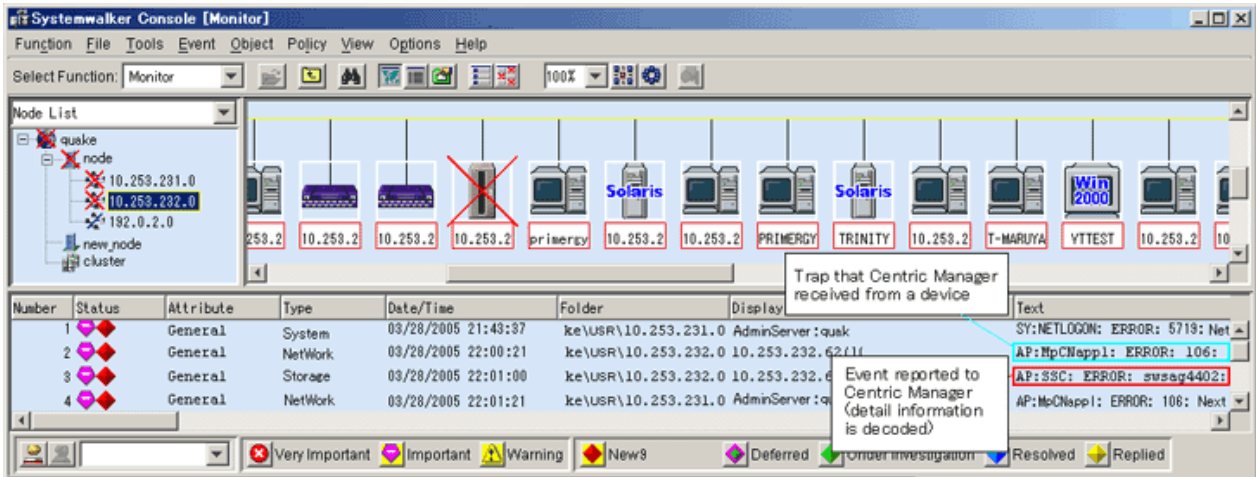

12.2 Linking with Systemwalker Service Quality Coordinator

Linkage with Systemwalker Service Quality Coordinator, Systemwalker Service Quality Coordinator can make use of performance information of storage devices and Fibre Channel switches.

Refer to the *Systemwalker Service Quality Coordinator User's Guide* or the *Systemwalker Service Quality Coordinator User's Guide* for the procedure for linkage.

Items That Can Be Linked to Systemwalker Service Quality Coordinator

Fibre Channel Switch

| | Performance Information (Unit) |
|------|--|
| Port | Transfer rates of send/receive data (MB/S) |
| | Number of CRC errors |

ETERNUS Disk Storage Systems

| | Performance Information (Unit) |
|-----------------------------------|---|
| LUN LogicalVolume RAIDGroup | Read/Write count (IOPS) |
| | Read/Write data transfer rate (MB/S) |
| | Read/Write response time (msec) |
| | Read/Pre-fetch/Write cache hit rate (%) |
| Disk drive | Disk busy rate (%) |
| CM | Load (CPU usage) rate (%) |

Note

- The performance information that can be managed depends on the version of Systemwalker Service Quality Coordinator.
- The CM load (CPU usage) rate for ETERNUS DX400/DX400 S2 series and DX8000/DX8000 S2 series includes the ROE load (CPU usage) rate.

Method to Identify CM or CM CPU of ETERNUS Disk Storage System from Performance Information Collected by Systemwalker Service Quality Coordinator

Based on the string "0x300mm" included in the resource ID of the performance information collected by Systemwalker Service Quality Coordinator, identify the CM or CM CPU of the target ETERNUS Disk storage system from the following correspondence table.

| Storage Device Name | String Indicating CM or CM CPU Included in Resource ID | CM or CM CPU |
|--|--|--------------|
| ETERNUS DX60/DX60 S2 ETERNUS DX80/DX80 S2 ETERNUS DX90/DX90 S2 ETERNUS DX100 S3/DX200 S3 ETERNUS DX500 S3/DX600 S3 ETERNUS DX200F | 0x30010 | CM#0 |
| | 0x30011 | CM#1 |
| | 0x30012 | CM#2 |
| | 0x30013 | CM#3 |
| | 0x30014 | CM#4 |
| | 0x30015 | CM#5 |
| | 0x30016 | CM#6 |
| | 0x30017 | CM#7 |
| ETERNUS DX400 series ETERNUS DX400 S2 series ETERNUS DX8000 series ETERNUS DX8000 S2 series | 0x30010 | CM#0 CPU#0 |
| | 0x30011 | CM#1 CPU#0 |
| | 0x30012 | CM#2 CPU#0 |
| | 0x30013 | CM#3 CPU#0 |
| | 0x30014 | CM#4 CPU#0 |
| | 0x30015 | CM#5 CPU#0 |
| | 0x30016 | CM#6 CPU#0 |
| | 0x30017 | CM#7 CPU#0 |
| | 0x30018 | CM#0 CPU#1 |
| | 0x30019 | CM#1 CPU#1 |
| | 0x3001a | CM#2 CPU#1 |
| | 0x3001b | CM#3 CPU#1 |
| | 0x3001c | CM#4 CPU#1 |
| | 0x3001d | CM#5 CPU#1 |
| | 0x3001e | CM#6 CPU#1 |
| | 0x3001f | CM#7 CPU#1 |
| ETERNUS DX8000 S3 series | 0x30010 | CE#0 CM#0 |
| | 0x30011 | CE#1 CM#0 |
| | 0x30012 | CE#2 CM#0 |
| | 0x30013 | CE#3 CM#0 |
| | 0x30020 | CE#0 CM#1 |
| | 0x30021 | CE#1 CM#1 |
| | 0x30022 | CE#2 CM#1 |
| | 0x30023 | CE#3 CM#1 |

12.3 Linkage with Other Administrative Software

Events can be sent to other administrative software.

The Shell/bat linkage function is used for such linkage. Refer to "6.3 Event Display and Linkage" for details.

Chapter 13 Command References

This chapter explains how to use commands.

For the values that the commands in this chapter output, if the "0x" is added to the beginning of the numeric value, it is a hexadecimal number. If the "0x" is not added, the numeric value is a decimal number.

13.1 Manager Commands

This section explains command operations on the Management Server for Solaris OS.

13.1.1 Commands for Operating Environment Management

The following sub sections explain the commands for managing the operating environment.

13.1.1.1 sanadmsh chtraprcvip (SNMP Trap Transmission Place IP Address Change Command)

NAME

sanadmsh chtraprcvip - changes SNMP Trap transmission place IP address

SYNOPSIS

Windows Environment

```
sanadm chtraprcvip -h  
sanadm chtraprcvip -all -oldip oldipaddr [-newip newipaddr]  
sanadm chtraprcvip DeviceID -oldip oldipaddr [-newip newipaddr]
```

Solaris or Linux Environment

```
sanadmsh chtraprcvip -h  
sanadmsh chtraprcvip -all -oldip oldipaddr [-newip newipaddr]  
sanadmsh chtraprcvip DeviceID -oldip oldipaddr [-newip newipaddr]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\bin\sanadm chtraprcvip  
($INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)
```

Solaris or Linux Environment

```
/opt/FJSVssmgr/bin/sanadmsh chtraprcvip
```

DESCRIPTION

After the IP address of the Management Server is changed, delete the old IP address of the Management Server that is the SNMP Trap transmission place from the devices registered with this software, and add the new IP address.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

Although the SNMP Trap transmission place setting for a device may be changed with the Management Software on the device, this software provides this command to facilitate changing.

OPERANDS

DeviceID

Applies SNMP Trap transmission place setting to the limited devices. Specify the device type according to the following tables. Afterwards, specify how to recognize the device.

| Device Type | Device Recognition Method |
|--|---|
| -host -storage -library -switch | One of which must be specified. - ip:IP address of a device - sysname:SysName name of a device SNMP setting |

OPTIONS

-h

Displays help about the argument format of this command.

-all

Applies SNMP Trap transmission place setting to all devices managed by this software. Executing the command specified with this argument outputs device names and execution results in execution order to the standard output. If the Management Server has more than one IP address, for example, the Management Server is connected to multiple subnets, a device may not be set with the correct SNMP Trap transmission place. After this setting is performed, check whether the correct Management Server address is set as the SNMP Trap transmission place setting on the device side.

-oldip *oldipaddr*

Specify the old IP address of the Management Server for *oldipaddr*. Delete this IP address from the SNMP transmission place address of managed devices.

-newip *newipaddr*

Specify the new IP address of the Management Server for *newipaddr*. Add this IP address to the SNMP transmission place address. If this option is omitted, the new IP address of the new Management Server is automatically specified. It is recommended to specify this option considering the Management Server that has multiple IP addresses.

USAGE

Execute the command after changing the IP address of Manager. The command may be executed for all devices managed by this software by the one command or for a specific device.

Devices that can be targets of the command are devices for which SNMP Trap transmission place settings can be defined automatically from this software.

The status of every target device must be Normal.

EXAMPLES

The following are the examples of executed commands in Solairs/Linux environments:

- Execute the SNMP Trap transmission place change on all managed devices that can automatically execute SNMP Trap transmission place setting.

```
> sanadmsh chtraprcvip -all -oldip 10.10.10.10 -newip 20.20.20.20
```

- Execute the SNMP Trap transmission place change on server nodes that sysname is defined in "host1".

```
> sanadmsh chtraprcvip -host sysname:host1 -oldip 10.10.10.10 -newip 20.20.20.20
```

13.1.1.2 swtraptest (SNMP Trap Test for Fibre Channel Switch)

NAME

swtraptest - tests of SNMP Trap

SYNOPSIS

```
swtraptest ipaddr
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\bin\swtraptest
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/bin/swtraptest
```

DESCRIPTION

This command checks whether this software can receive a SNMP Trap correctly, display an event, and cooperate with Systemwalker Centric Manager and Shell/Bat.

A simulated Fibre Channel switch SNMP Trap (FC Port fault) is created and issued to the Management Server.

OPERANDS

ipaddr

Specify the IPv4 address of the Fibre Channel switch which is to check the SNMP Trap setting by this command. IPv6 address cannot be specified.

The Fibre Channel switch must be a device managed by this software.

OPTIONS

None.

EXAMPLES

- Executing this command for the Fibre Channel switch whose IP address is 11.11.11.11

```
> swtraptest 11.11.11.11
```

NOTES

- Even the input IP address is not for a Fibre Channel switch device, this command can be executed. In this case, it executes as the event of device which IP address is input.
- Following Fibre Channel switch can be tested by using this command:
SN200 (Brocade), PRIMERGY switch blade, Brocade VDX series, PRIMERGY BX Ethernet Fabric Switch
- The SNMP Trap community name that is issued using this command, is fixed to "public".

13.1.1.3 grtraptest (SNMP Trap Test for ETERNUS Disk Storage System)

NAME

grtraptest - tests of SNMP Trap

SYNOPSIS

```
grtraptest ipaddr
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\bin\grtraptest
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/bin/grtraptest
```

DESCRIPTION

This command checks whether this software can receive a SNMP Trap correctly, display an event, and cooperate with Systemwalker Centric Manager and Shell/Bat.

A simulated SNMP Trap (FAN fault) for the ETERNUS Disk storage system is created within the Management Server and is issued to the Management Server itself.

OPERANDS

ipaddr

Specify the IPv4 address of the ETERNUS Disk storage system which is to check the SNMP Trap settings. IPv6 address cannot be specified.

The ETERNUS Disk storage system must be a device managed by this software.

OPTIONS

None.

EXAMPLES

- Executing this command for the ETERNUS Disk storage system whose IP address is 12.12.12.12.

```
> grtraptest 12.12.12.12
```

NOTES

- This command can be executed even if you have input the IP address for a device other than an ETERNUS Disk storage system. In that case, the command is executed as an event of the device corresponding to the designated IP address.
- The SNMP Trap community name that is issued using this command, is fixed to "public".

13.1.1.4 storageadm zone (Host Affinity and Zoning Operation Command)

NAME

storageadm zone - operates the host affinity and zoning

SYNOPSIS

```
storageadm zone add -storage cawwpn,affinitygroup -hba hbawwpn [-ipaddr ipaddr[,ipaddr]] [-hostrsp hostresponse] [-update all] [-f [-s]]
```

```
storageadm zone delete -storage cawwpn,affinitygroup -hba hbawwpn [-ipaddr ipaddr[,ipaddr]] [-update all] [-s]
```

```
storageadm zone info [-ipaddr ipaddr[,ipaddr,...]] [-check]] [-fast] [-csv] [-hex] [-hostrsp] [-tfo]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm zone
```


(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

`/opt/FJVSsmgr/sbin/storageadm zone`

DESCRIPTION

This command is used to set/delete/display the storage device host affinity and Fibre Channel switch zoning.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

Specify the storage device CA WWPN, affinity group, and WWPN of the set HBA in the command parameter to set/delete the storage device host affinity and Fibre Channel switch zoning. The set host affinity and zoning is also displayed.

The target storage device and Fibre Channel switch must be devices managed by this software.

If Storage Cluster is configured for CA of the storage device, no zoning is set or deleted for WWPN whose TFO status is "Standby".

OPERANDS

add

This sets the host affinity and zoning.

delete

This deletes the host affinity and zoning.

info

This displays the host affinity and zoning.

OPTIONS

Options of "add" Operand

`-storage cawwppn,affinitygroup`

Designate the WWPN and affinity group number for the CA of the storage device for which host affinity is being set.

The CA WWPN is specified with a 16-character long hexadecimal number or a 23-character long hexadecimal number with each two digits separated by a colon (":"). For example, if separating the characters with colons, the WWPN is written in a manner such as "11:11:11:11:11:11:11:11".

The affinity group number is specified by a decimal or hexadecimal number. For example, specify affinity group number 16 as either `-storage 1111111111111111,16` in decimal notation or `-storage 1111111111111111,0x10` in hexadecimal notation. If Storage Cluster is configured, specify CA_WWPN displayed by the storageadm zone info command for *cawwppn*.

`-hba hbawwppn`

Specify the WWPN for the HBA to be set to the host affinity and zoning.

The WWPN for the HBA is written with a 16-character long hexadecimal number or a 23-character long hexadecimal number with each two digits separated by a colon (":"). For example, if separating the characters with colons, the WWPN is written in a manner such as "22:22:22:22:22:22:22:22".

`-ipaddr ipaddr[,ipaddr]`

Set the IP address of a storage device and/or Fibre Channel switch. To specify the IP addresses of both devices, separate the two IP addresses with a comma (","). The two IP addresses can be specified in either order.

| Specified Device | Command Action |
|------------------|---|
| Storage device | The command checks that the status allows for setting the host affinity to the affinity group of the CA for the storage device designated with the <code>-storage</code> option. The command sets the host affinity to the storage device only if the status allows the setting. If the status does not allow for the setting to be made, the command will terminate with an error. |

| Specified Device | Command Action |
|--|---|
| Fibre Channel switch | The command checks that the status allows for setting the WWPN and zoning for the HBA specified with the <code>-hba</code> option within the fabric which includes the Fibre Channel switches connected to the CA of the storage device specified with the <code>-storage</code> option (i.e. all Fibre Channel switches connected in a cascade connection). The command sets the zoning to the Fibre Channel switch only if the status allows the setting. If the status does not allow the setting, the command will terminate with an error. |
| Both storage device and Fibre Channel switch | The command checks that the status allows you to set the host affinity or zoning to the respective devices. The command sets the host affinity and zoning only if the status allows for the settings to be made for both devices. If the status is such that the setting cannot be made to either of the devices, the command will terminate with an error. |

`-hostrsp hostresponse`

Specify the host response being used by the HBA.

If this option is omitted, the storage device's default host response will be set.

`-update all`

Specify this option to update the information this software is managing to the latest information after the completion of the setup.

If this option is omitted, the information managed by this software will not be updated. To update the information, be sure to execute the "info" operand without specifying the `-fast` option.

This option is effective for when there are few settings needing to be updated. The "info" operand is effective for updating information after performing multiple settings at one time.

`-f`

Specify this option if forcibly setting WWPN zoning to a Fibre Channel switch in a status of not having zoning set up.

Check the security settings for the Fibre Channel switch when specifying this option. Specify this option only if setting WWPN zoning.

Moreover, if you specify this option under the conditions described below, the operand will be executed the same as if this option was omitted.

- If only a storage device is specified for the `-ipaddr` option
- If zoning is already set for the Fibre Channel switch to which you intend to set the zoning

`-s`

Continues the processing without a confirmation message being output.

This option can be specified only when the `-f` option is specified.

Options of "delete" Operand

`-storage cawwpn,affinitygroup`

Designate the WWPN and affinity group number for the CA of the storage device for which host affinity is being deleted.

The CA WWPN is specified with a 16-character long hexadecimal number or a 23-character long hexadecimal number with each two digits separated by a colon (":"). For example, if separating the characters with colons, the WWPN is written in a manner such as "11:11:11:11:11:11:11:11".

The affinity group number is specified by a decimal or hexadecimal number. For example, specify affinity group number 16 as either "`-storage 1111111111111111,16`" in decimal notation or "`-storage 1111111111111111,0x10`" in hexadecimal notation. If Storage Cluster is configured, specify CA_WWPN displayed by the `storageadm zone info` command for *cawwpn*.

`-hba hbawwpn`

Specify the WWPN for the HBA from which the host affinity and zoning to be deleted.

The WWPN for the HBA is written with a 16-character long hexadecimal number or a 23-character long hexadecimal number with each two digits separated by a colon (":"). For example, if separating the characters with colons, the WWPN is written in a manner such as "22:22:22:22:22:22:22:22".

`-ipaddr ipaddr [, ipaddr]`

Set the IP address of a storage device and/or Fibre Channel switch. To specify the IP addresses of both devices, separate the two IP addresses with a comma (","). The two IP addresses can be specified in either order.

| Specified Device | Command Action |
|--|---|
| Storage device | The command checks that the status allows for deleting the host affinity from the affinity group of the CA for the storage device designated with the <code>-storage</code> option. The command deletes the host affinity from the storage device only if the status allows the deletion. If the status does not allow the deletion, the command will terminate with an error. |
| Fibre Channel switch | The command checks that the status allows for deleting the WWPN and zoning for the HBA specified with the <code>-hba</code> option within the fabric which includes the Fibre Channel switches connected to the CA of the storage device specified with the <code>-storage</code> option (i.e. all Fibre Channel switches connected in a cascade connection). The command deletes the zoning to the Fibre Channel switch only if the status allows the deletion. If the status does not allow the deletion, the command will terminate with an error. |
| Both storage device and Fibre Channel switch | The command checks that the status allows for deleting the host affinity or zoning from the respective devices. The command deletes the host affinity and zoning only if the status allows for the deletion for both devices. If the status is such that the deletion cannot be made to either of the devices, the command will terminate with an error. |

`-update all`

Specify this option to update the information this software is managing to the latest information after the completion of the setup.

If this option is omitted, the information managed by this software will not be updated. To update the information, be sure to execute the "info" operand without specifying the `-fast` option specified.

This option is effective for when there are few deletion. The "info" operand is effective for updating information after performing multiple deletions at one time.

`-s`

Processing continues without output of a confirmation message.

Options of "info" Operand

`-ipaddr ipaddr [, ipaddr, ...]`

Displays the zoning information for the Fibre Channel switches corresponding to the specified IP addresses or host affinity information for the host affinities set to the CA of the storage devices. To display information for multiple storage devices and Fibre Channel switches, specify the IP addresses separated by comma (",").

If this option is omitted, the operand will display the information for all storage devices and Fibre Channel switches registered with this software.

`-check`

Checks that the devices specified with the `-ipaddr` option are storage devices or Fibre Channel switches which are registered to this software.

Checks that the status allows for display of the information. The information for the designated devices is displayed only if the status allows for it. If the status does not allow for information to be displayed or if the devices are not devices applicable to this display, the command will terminate with an error.

This option can be specified when the `-ipaddr` option is specified.

-fast

Specify this to display storage device and Fibre Channel switch information from the existing information managed by this software.

If this option is omitted, the storage device and Fibre Channel switch information will be displayed after the information managed by this software has been updated to the latest information.

This option is effective for displaying information after you have executed the "add" operand or the "delete" operand with the -update all option specified.

-csv

Displays the storage device and Fibre Channel switch information in CSV format.

If this option is omitted, the information is displayed in a table format.

-hex

Specify this to display the storage device and Fibre Channel switch information in hexadecimal format. If this option is specified, the affinity group numbers for storage devices will be displayed in hexadecimal format.

-hostrsp

If this option is specified, the host response number used by the HBA and the host response's alias name will be displayed.

If this option is omitted, the host response number and host response alias name, including the table border and column names will not be displayed.

-tfo

The following items concerning Storage Cluster are output by the addition.

- Response WWPN

- TFO status

If this option is specified together with -hostrsp option at the same time, this item is displayed after host response information.

If not specified together with -hostrsp option at the same time, this item is displayed after HBA_WWPN.

EXAMPLES

- Adding the host affinity and zoning

```
> storageadm zone add -storage 1111111111111111,3 -hba 2222222222222222
```

- Deleting the host affinity and zoning

```
> storageadm zone delete -storage 1111111111111111,3 -hba 2222222222222222
```

- Displaying the host affinity and zoning

```
> storageadm zone info
<<< FC Switch Zone Information >>>
DEVICE_NAME(IP_ADDRESS)      ZONE_NAME      ZONE_WWPN
-----
Switch1(10.10.10.10)         SNM_0001       1111111111111111;2222222222222222
                               SNM_0002       3333333333333333;4444444444444444
-----
```

```
<<< FC CA Zone Information >>>
DEVICE_NAME(IP_ADDRESS)      CA_WWPN        AFFINITY_GROUP  HBA_WWPN
-----
E4000M300(10.10.10.11)       1111111111111111 3                2222222222222222
-----
```

- Displaying the host affinity and zoning in CSV format and in hexadecimal format.

```
> storageadm zone info -csv -hex
DEVICE_NAME(IP_ADDRESS),ZONE_NAME,ZONE_WWPN
Switch1(10.10.10.10),SNM_0001,1111111111111111;2222222222222222
,SNM_0002,3333333333333333;4444444444444444
```

```
DEVICE_NAME(IP_ADDRESS),CA_WWPN,AFFINITY_GROUP,HBA_WWPN
E4000M300(10.10.10.11),1111111111111111,0x0003,2222222222222222
```

- Host affinity and zoning including Storage Cluster information are displayed in table format.

```
> storageadm zone info -tfo
<<< FC Switch Zone Information >>>
DEVICE_NAME(IP_ADDRESS)      ZONE_NAME      ZONE_WWPN
-----
Switch1(10.10.10.10)         SNM_0001       1111111111111111;2222222222222222
                               SNM_0002       3333333333333333;4444444444444444
-----

<<< FC CA Zone Information >>>
DEVICE_NAME(IP_ADDRESS)      CA_WWPN        AFFINITY_GROUP  HBA_WWPN        TFO_WWPN
TFO_STATUS
-----
E4000M300(10.10.10.11)      1111111111111111 3                2222222222222222 1111111111111111
Active
-----
```

- Host affinity and zoning including Storage Cluster information are displayed in CSV format and hexadecimal notation.

```
> storageadm zone info -csv -hex -tfo
DEVICE_NAME(IP_ADDRESS),ZONE_NAME,ZONE_WWPN
Switch1(10.10.10.10),SNM_0001,1111111111111111;2222222222222222
,SNM_0002,3333333333333333;4444444444444444

DEVICE_NAME(IP_ADDRESS),CA_WWPN,AFFINITY_GROUP,HBA_WWPN,TFO_WWPN,TFO_STATUS
E4000M300(10.10.10.11),1111111111111111,0x0003,2222222222222222,1111111111111111,Active
```

NOTES

- This command cannot be used to register Fibre Channel switches if zoning has not been set. Create a temporary zone and then register the Fibre Channel switch with this software. Refer to "Zoning setting" in "Setting" of the target device of "[4.2 Fibre Channel Switch](#)" for details on creating a temporary zone. By specifying the -f option, you can forcibly set zoning even to those Fibre Channel switches for which zoning has not been set. However, if you have created a temporary zone or performed a forcible setting using the -f option, all access except to the zoning specified with the -f option will be blocked. Therefore, be sure not to perform this task while the environment for the target Fibre Channel switch is operating. Perform this task either before starting the operation of the environment after the installation of the Fibre Channel switch environment or while the operation of the environment is stopped.
- The zoning for the Fibre Channel switch is set within the fabric which includes the Fibre Channel switches connected to the CA of the specified storage device (i.e. all Fibre Channel switches connected in a cascade connection) to the fibre switches equipped with the latest firmware.
- The Fibre Channel switch and storage device must be connected using a Fibre Channel cable. If the Fibre Channel cable is not connected, Fibre Channel switch zoning is not set. Connect the Fibre Channel cable, and then re-execute the command.
- Zone settings (AffinityGroup creation) must be configured in the ETERNUS Disk storage system in advance, using ETERNUS Web GUI.
- Only the ETERNUS SN200 (except model 250M) and Brocade (except AP7420) Fibre Channel switch, PRIMERGY Fibre Channel switch blades, Brocade VDX series and PRIMERGY BX Ethernet Fabric Switch are supported.
- A confirmation message will be output in the situation below. Enter "y" to continue or "n" to cancel. The confirmation message can be surpass by specifying the -s option.
 - If the -f option is specified with the "add" operand but -s option is not specified.
 - If the -s option is not specified with the "delete" operand.

A confirmation message is as follows:

```
Are you sure? [y/n]:
```

- Host affinity cannot be operated for the Virtual Volume.
- Only a usual host affinity is deleted when both a usual host affinity and the host affinity for Virtual Volume for the specified HBA and CA are set, and neither the host affinity for Virtual Volume nor the zoning of the fiber channel switch are deleted.

13.1.1.5 storageadm iscsizone (Host Affinity Operation Command)

NAME

storageadm iscsizone - operates iSCSI host affinity

SYNOPSIS

```
storageadm iscsizone add -ipaddr ipaddr -storage {port_ipaddr,port_iscsi_name,affinitygroup /  
portID,affinitygroup} -server {server_port_ipaddr,server_port_iscsi_name | server_port_iscsi_name} [-  
svalias server_alias] [-svname server_name] [-svhostrsp server_hostresponse] [-check]
```

```
storageadm iscsizone delete -ipaddr ipaddr -storage {port_ipaddr,port_iscsi_name,affinitygroup /  
portID,affinitygroup} -server {server_port_ipaddr,server_port_iscsi_name | server_port_iscsi_name} [-  
check] [-s]
```

```
storageadm iscsizone info [-ipaddr ipaddr[,ipaddr,...] [-check]] [-csv] [-hex] [-expand]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm iscsizone
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm iscsizone
```

DESCRIPTION

This command is used to set, delete, and display the host affinity of the storage device iSCSI.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

In the command operands, specify the IP address and iSCSI name of the storage device iSCSI port, the affinity group, and the IP address and iSCSI name of the server being set. Use these operands to set and delete the host affinity of the storage device and to display the host affinity that is set.

The targeted storage device must be a device managed by this software.

OPERANDS

add

This sets the host affinity.

delete

This deletes the host affinity.

info

This displays the host affinity.

OPTIONS

Options of "add" Operand

`-ipaddr ipaddr`

Specify the IP address of the storage device.

`-storage {port_ipaddr,port_iscsi_name,affinitygroup | portID,affinitygroup}`

Specify the iSCSI port IP address and iSCSI name of the storage device for which the host affinity is set and the affinity group number, or specify the port ID and the affinity group number.

Specify the affinity group number as a decimal or hexadecimal number. Specification example is as follows:

```
[Decimal specification]
-storage 172.16.4.38,iqn.2000-09.com.fujitsu:storage-system.e2000:000000029,3
[Hexadecimal specification]
-storage 172.16.4.38,iqn.2000-09.com.fujitsu:storage-system.e2000:000000029,0x3
```

For ETERNUS DX60/DX60 S2/DX80/DX90, the port ID is the CM number and the port number entered.

For ETERNUS DX400 series, DX8000 series, DX S2 series (DX60 S2 excluded), DX S3 series (DX8000 S3 series excluded), ETERNUS DX200F, the port ID is the CM number, the CA number and the port number entered.

For ETERNUS DX8000 S3 series, the port ID is the CE number (hexadecimal), the CM number, the CA number and the port number entered. Specification example is as follows:

```
[To specify CM number 1, CA number 2, port number 1, and affinity group number 6]
-storage 121,6
[To specify CE number 3, CM number 1, CA number 2, Port number 1, and affinity group number 6]
-storage 3121,6
```

`-server {server_port_ipaddr,server_port_iscsi_name | server_port_iscsi_name}`

Specify the iSCSI port IP address and the iSCSI name of the server for which the host affinity is set.

If the device supports non-setting of the iSCSI host IP address, the server can be specified with the iSCSI host IP address omitted.

`-svalias server_alias`

This specifies the iSCSI alias of the server being set for the host affinity.

If this option is omitted, an alias is not set.

`-svname server_name`

This specifies the host alias of the server being set for the host affinity.

If this option is omitted, the specification is as follows:

| Storage Device | Specification when this option is omitted |
|--|---|
| ETERNUS DX60/DX80/DX90 ETERNUS DX S2 series ETERNUS DX S3 series ETERNUS DX200F | An alias is set automatically. |
| ETERNUS DX400 series ETERNUS DX8000 series | An alias is not set. |

`-svhostrsp server_hostresponse`

This specifies the host response number of the server being set for the host affinity.

If this option is omitted, then host response number #0 is set.

`-check`

This checks whether the server specified in the `-server` option is already set as the host affinity setting for the device at the IP address specified in the `-ipaddr` option. If it is not already set as the host affinity, processing continues and the host affinity is set. If it is already set as the host affinity, an error occurs.

If this option is omitted, processing continues without checking.

Options of "delete" Operand

`-ipaddr ipaddr`

Specify the IP address of the storage device.

`-storage {port_ipaddr,port_iscsi_name,affinitygroup | portID,affinitygroup}`

Specify the iSCSI port IP address and iSCSI name of the storage device for which the host affinity is being deleted and the affinity group number, or specify the port ID and the affinity group number.

Specify the affinity group number as a decimal or hexadecimal number. Specification example is as follows:

```
[Decimal specification]
-storage 172.16.4.38,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,3
[Hexadecimal specification]
-storage 172.16.4.38,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,0x3
```

For ETERNUS DX60/DX60 S2/DX80/DX90, the port ID is the CM number and the port number entered.

For ETERNUS DX400 series, DX8000 series, DX S2 series (DX60 S2 excluded), DX S3 series (DX8000 S3 series excluded), ETERNUS DX200F, the port ID is the CM number, the CA number and the port number entered.

For ETERNUS DX8000 S3 series the port ID is the CE number (hexadecimal), the CM number, the CA number and the port number entered. Specification example is as follows:

```
[To specify CM number 1, CA number 2, port number 1, and affinity group number 6]
-storage 121,6
[To specify CE number 3,CM number 1, CA number 2, Port number 1, and affinity group number 6]
-storage 3121,6
```

`-server {server_port_ipaddr,server_port_iscsi_name | server_port_iscsi_name}`

Specify the iSCSI port IP address and the iSCSI name of the server for which the host affinity is being deleted.

If the device supports non-setting of the iSCSI host IP address, the server can be specified with the iSCSI host IP address omitted.

`-check`

This checks whether the server specified in the `-server` option is already set as the host affinity setting for the device at the IP address specified in the `-ipaddr` option. If it is not already set as the host affinity, an error occurs. If it is already set as the host affinity, processing continues and the setting is deleted.

If this option is omitted, processing continues without checking.

`-s`

Processing continues without output of a confirmation message.

Options of "info" Operand

`-ipaddr ipaddr`

This displays the host affinity information of the storage device at the specified IP address. To display information of multiple storage devices, specify the IP addresses successively, separated by commas (",").

If this option is omitted, information is displayed for all the storage devices registered with this software.

`-check`

This checks whether the devices at the IP address specified in the `-ipaddr` option are storage devices registered with this software. If all devices at the specified IP address are registered with this software, processing continues and the setting information is displayed. If at least one device at the specified IP address is not registered with this software, and error occurs.

If this option is omitted, processing continues without checking.

This option can be specified only when the `-ipaddr` option is specified.

`-csv`

Output is in CSV format.

`-hex`

The affinity group number is displayed as a hexadecimal number.

-expand

This adds the following to the host affinity information to display:

- IPv6 link local address
- IPv6 connection IP address

Added information depends on the version of the ETERNUS SF system. Upgrading the version of the ETERNUS SF system may increase displayed information.

When this option is omitted, a list of host affinities is displayed.

EXAMPLES

- Add a host affinity.

```
> storageadm iscsizone add -ipaddr 1.2.3.4 -storage 172.16.4.38,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,3 -server 172.16.4.198,eui.2222222222222222 -svalias alias2222 -svname
name2222 -svhostrsp 2
INFO:swsag0001:Command terminated normally.
```

- Delete a host affinity.

```
> storageadm iscsizone delete -ipaddr 1.2.3.4 -storage 172.16.4.38,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,3 -server 172.16.4.198,eui.2222222222222222
INFO:swsag0001:Command terminated normally.
```

- Display the host affinity in table format.

```
> storageadm iscsizone info -ipaddr 1.2.3.4
<<< iSCSI CA Zone Information >>>
DEVICE NAME(IP ADDRESS)          PORT ID  ISCSI CA IP ADDRESS  ISCSI CA ISCSI NAME  AFFINITY GROUP  SERVER IP ADDRESS  SERVER ISCSI NAME
-----
DX60(1.2.3.4)                    00     172.16.4.38  iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 6 172.16.4.198 eui.2222222222222222
                                01     172.16.4.39  iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 6 172.16.4.198 eui.2222222222222222
                                01     172.16.4.39  iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 6 172.16.4.199 eui.3333333333333333
                                10     172.16.4.40  iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 - - -
                                11     172.16.4.41  iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 - - -
E4000(1.2.3.5)                   000    172.16.4.38  iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001 3 172.16.4.198 eui.2222222222222222
                                120    172.16.4.40  iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001 3 172.16.4.158 eui.4444444444444444
-----
INFO:swsag0001:Command terminated normally.
```

- Display the host affinity in CSV format.

```
> storageadm iscsizone info -ipaddr 1.2.3.4 -csv
DEVICE NAME(IP ADDRESS),PORT ID,ISCSI CA IP ADDRESS,ISCSI CA ISCSI NAME,AFFINITY GROUP,SERVER IP
ADDRESS,SERVER ISCSI NAME
DX60(1.2.3.4),00,172.16.4.38,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,6,172.16.4.198,eui.2222222222222222
,01,172.16.4.39,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,6,172.16.4.198,eui.
2222222222222222
,01,172.16.4.39,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,6,172.16.4.199,eui.
3333333333333333
,10,172.16.4.40,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,-,-,
,11,172.16.4.41,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,-,-,
```

```
E4000(1.2.3.5),000,172.16.4.38,iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001,3,172.16.4.198,eui.2222222222222222
,120,172.16.4.38,iqn.2000-09.com.fujitsu:storage-system.e4000:0000000001,3,172.16.4.158,eui.
4444444444444444
```

- Display the host affinity in table format including additional information.

```
> storageadm iscsizone info -ipaddr 1.2.3.4 -expand
<<< iSCSI CA Zone Information >>>
DEVICE NAME(IP ADDRESS)      PORT ISCSI CA      ISCSI CA      AFFINITY SERVER
SERVER          ISCSI CA LINK LOCAL IP ADDRESS      ISCSI CA CONNECT IP ADDRESS
                        ID   IP ADDRESS      ISCSI NAME      GROUP   IP ADDRESS      ISCSI NAME
-----
DX60(1.2.3.4)                00  172.16.4.38     iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 6 172.16.4.198 eui.2222222222222222 fe80::128c:24d8:3016:250a:
56ff:fe67:a524 2001:100a:ab13:cd24:ef3f:db72:fe11:cd21
                        01  172.16.4.39     iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 6 172.16.4.198 eui.2222222222222222 fe80::128c:24d8:3016:250a:
56ff:fe67:a525 2001:100a:ab13:cd24:ef3f:db72:fe11:cd22
                        01  172.16.4.39     iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 6 172.16.4.199 eui.3333333333333333 fe80::128c:24d8:3016:250a:
56ff:fe67:a525 2001:100a:ab13:cd24:ef3f:db72:fe11:cd22
                        10  172.16.4.40     iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 - - - -
                        11  172.16.4.41     iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029 - - - -
E4000(1.2.3.5)                000 172.16.4.38     iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001 3 172.16.4.198 eui.2222222222222222 fe80::254b:781a:4b35:c531:1a3d:198e:
30c6 2001:100a:451f:fd32:230b:12ac:dd2a:a2e5
                        120 172.16.4.40     iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001 3 172.16.4.158 eui.4444444444444444 fe80::254b:781a:4b35:c531:1a3d:198e:
30d5 2001:100a:451f:fd32:230b:12ac:dd2a:a289
-----
INFO:swsag0001:Command terminated normally.
```

- Display the host affinity in CSV format including additional information.

```
> storageadm iscsizone info -ipaddr 1.2.3.4 -expand -csv
DEVICE NAME(IP ADDRESS),PORT ID,ISCSI CA IP ADDRESS,ISCSI CA ISCSI NAME,AFFINITY GROUP,SERVER IP
ADDRESS,SERVER ISCSI NAME, ISCSI CA LINK LOCAL IP ADDRESS,ISCSI CA CONNECT IP ADDRESS
DX60(1.2.3.4),00,172.16.4.38,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,6,172.16.4.198,eui.2222222222222222,fe80::128c:24d8:3016:250a:
56ff:fe67:a524,2001:100a:ab13:cd24:ef3f:db72:fe11:cd21
DX60(1.2.3.4),01,172.16.4.39,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,6,172.16.4.198,eui.2222222222222222,fe80::128c:24d8:3016:250a:
56ff:fe67:a525,2001:100a:ab13:cd24:ef3f:db72:fe11:cd22
DX60(1.2.3.4),01,172.16.4.39,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,6,172.16.4.199,eui.3333333333333333,fe80::128c:24d8:3016:250a:
56ff:fe67:a525,2001:100a:ab13:cd24:ef3f:db72:fe11:cd22
DX60(1.2.3.4),10,172.16.4.40,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,-,-,-,-,
DX60(1.2.3.4),11,172.16.4.41,iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029,-,-,-,-,
E4000(1.2.3.5),000,172.16.4.38,iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001,3,172.16.4.198,eui.2222222222222222,fe80::254b:781a:4b35:c531:1a3d:198e:
30c6,2001:100a:451f:fd32:230b:12ac:dd2a:a2e5
E4000(1.2.3.5),120,172.16.4.38,iqn.2000-09.com.fujitsu:storage-
system.e4000:0000000001,3,172.16.4.158,eui.4444444444444444,fe80::254b:781a:4b35:c531:1a3d:198e:
30d5,2001:100a:451f:fd32:230b:12ac:dd2a:a289
```

NOTES

- Storage devices must be registered with this software in order to add, delete, and display settings.

- Zone settings (Affinity group creation) must be configured in the ETERNUS Disk storage system in advance, using ETERNUS Web GUI.
- The message below is displayed when the "delete" operand is specified. Enter "y" to continue, or "n" to cancel. Note that this message is not displayed if the -s option is specified.

```
Are you sure? [y/n]:
```

- Host affinity cannot be operated for the Virtual Volume.
- Only a usual host affinity is deleted when both a usual host affinity and the host affinity for Virtual Volume for the specified HBA and CA are set, and the host affinity for Virtual Volume is not deleted.

13.1.1.6 storageadm perfdata (Performance Information Operation Command)

NAME

storageadm perfdata - operates the performance information

SYNOPSIS

```
storageadm perfdata export outDirName -ipaddr ipaddr [-date start_time[-end_time]]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm perfdata
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm perfdata
```

DESCRIPTION

This command outputs the performance information of the storage devices and Fibre Channel switches.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

By specifying the IP address of the device that outputs the performance information and the date in the command operand, the storage device and Fibre Channel switch performance information is output in CSV format.

The target storage device and Fibre Channel switch must be devices managed by this software when performance monitoring is either still running or already completed.

The supported devices are as follows:

- ETERNUS DX series, ETERNUS DX200F
- The Fibre Channel switches and Fibre Channel switch blades which support the performance monitoring.

The details of CSV files are as follows:

Port Information of Fibre Channel Switch

| Items | Explanation |
|-------------|---|
| File name | PORT.csv |
| Header line | Date,PortX - Tx Throughput, PortX - Rx Throughput, PortX - CRC Error, ... |
| Data line | <i>date,port0s,port0r,port0e, ... ,portNs,portNr,portNe</i> The following information is output for each field. After <i>date</i> , the information is repeated for the actual number of ports. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) |

| Items | Explanation |
|-------|--|
| | <i>port0s</i> : Port0 Transfer rates of send data at <i>date</i> (Decimal notation. The unit is MB/S.) <i>port0r</i> : Port0 Transfer rates of receive data at <i>date</i> (Decimal notation. The unit is MB/S.) <i>port0e</i> : Port0 Number of CRC errors at <i>date</i> (Decimal notation. The unit is Count.) <i>portNs</i> : PortN Transfer rates of send data at <i>date</i> (Decimal notation. The unit is MB/S.) <i>portNr</i> : PortN Transfer rates of receive data at <i>date</i> (Decimal notation. The unit is MB/S.) <i>portNe</i> : PortN Number of CRC errors at <i>date</i> (Decimal notation. The unit is Count.) |

CM Performance Information of Storage Device

ETERNUS DX60/DX60 S2/DX80/DX80 S2/DX90/DX90 S2, DX S3 series(DX8000 S3 series excluded), ETERNUS DX200F

| Items | Explanation |
|-------------|---|
| File name | CM.csv |
| Header line | Date, CM0xXX - CPU Use Rate, CM0xXX - Copy Remain, ... |
| Data line | <i>date,CM00u,CM00r, ... ,CMNNu,CMNNr</i> The following information is output for each field. After <i>date</i> , the information is repeated for the actual number of CMs. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>CM00u</i> : CM0x00 CPU Load at <i>date</i> (Decimal notation. The unit is %.) <i>CM00r</i> : CM0x00 CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.) <i>CMNNu</i> : CM0xNN CPU Load at <i>date</i> (Decimal notation. The unit is %.) <i>CMNNr</i> : CM0xNN CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.) |

ETERNUS DX400/DX400 S2 series and DX8000/DX8000 S2 series

| Items | Explanation |
|-------------|---|
| File name | <i>CM/nnnn.csv</i> (<i>nnnn</i> indicates the CM number by hexadecimal notation. CM numbers are assigned in ascending order, starting with 0000 for the lowest CM CPU number in the device. CM0x0 CPU0 is 0000, CM0x0 CPU1 is 0001, CM0x1 CPU0 is 0002, CM0x1 CPU1 is 0003, : CM0x7 CPU0 is 000E, CM0x7 CPU1 is 000F.) |
| Header line | Date, CM0xXX:CPUX - CPU Use Rate, CM0xXX:CPUX(ROE) - CPU Use Rate, CM0xXX:CPUX - Copy Remain |
| Data line | <i>date,cpu,roe,remain</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>cpu</i> : CM0xXX:CPUX CPU Load at <i>date</i> (Decimal notation. The unit is %.) <i>roe</i> : CM0xXX:CPUX ROE Load at <i>date</i> (Decimal notation. The unit is %.) <i>remain</i> : CM0xXX:CPUX CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.) |

ETERNUS DX8000 S3 series

| Items | Explanation |
|-------------|--|
| File name | CM.csv |
| Header line | Data, CE0xXXCM0xXX - CPU Use Rate, CE0xXXCM0xXX - Copy Remain, ... |
| Data line | <i>date,CE00CM00u,CE00CM00r, ... ,CENNCMNNu,CENNCMNNr</i> |

| Items | Explanation |
|-------|---|
| | <p>The following information is output for each field. After <i>date</i>, the information is repeated for the actual number of CMs.</p> <p><i>date</i>: Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format)</p> <p><i>CE00CM00u</i>: CE0x00CM0x00 CPU Load at <i>date</i> (Decimal notation. The unit is %.)</p> <p><i>CE00CM00r</i>: CE0x00CM0x00 CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.)</p> <p><i>CE00CMNNu</i>: CE0xNNCM0xNN CPU Load at <i>date</i> (Decimal notation. The unit is %.)</p> <p><i>CE00CMNNr</i>: CE0xNNCM0xNN CM Copy remaining amount at <i>date</i> (Decimal notation. The unit is GB.)</p> |

Logical Volume Performance Information of Storage Device

| Items | Explanation |
|-------------|---|
| File name | LogicalVolume/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the LogicalVolume number by hexadecimal notation.) |
| Header line | <p>Date, LogicalVolume0xXXXX - Read IOPS, LogicalVolume0xXXXX - Write IOPS, LogicalVolume0xXXXX - Read Throughput, LogicalVolume0xXXXX - Write Throughput, LogicalVolume0xXXXX - Read Response Time, LogicalVolume0xXXXX - Write Response Time, LogicalVolume0xXXXX - Read Cache Hit Rate, LogicalVolume0xXXXX - Write Cache Hit Rate, LogicalVolume0xXXXX - Prefetch Cache Hit Rate, LogicalVolume0xXXXX - Read Cache Hit Rate(Extreme Cache), LogicalVolume0xXXXX - Read Cache Hit Rate(DRAM + Extreme Cache), LogicalVolume0xXXXX - Read QoS Delay Time, LogicalVolume0xXXXX - Write QoS Delay Time</p> |
| Data line | <p><i>date,read,write,through-r,through-w,resp-r,resp-w,hit-r,hit-w,fetch, hit-r-extreme-cache,hit-r-dram-extreme-cache,delay-r-qos,delay-w-qos</i></p> <p>The following information is output for each field.</p> <p><i>date</i>: Performance Information Acquisition Time. (YYYY/MM/DD hh:mm:ss format)</p> <p><i>read</i>: Read Count at <i>date</i>. (Decimal notation. The unit is IOPS.)</p> <p><i>write</i>: Write Count at <i>date</i>. (Decimal notation. The unit is IOPS.)</p> <p><i>through-r</i>: Read data transfer rate at <i>date</i>. (Decimal notation. The unit is MB/S.)</p> <p><i>through-w</i>: Write data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.)</p> <p><i>resp-r</i>: Read Response Time at <i>date</i>. (Decimal notation. The unit is msec.)</p> <p><i>resp-w</i>: Write Response Time at <i>date</i>. (Decimal notation. The unit is msec.)</p> <p><i>hit-r</i>: Read Cache Hit Rate at <i>date</i>. (Decimal notation. The unit is %.)</p> <p><i>hit-w</i>: Write Cache Hit Rate at <i>date</i>. (Decimal notation. The unit is %.)</p> <p><i>fetch</i>: Read Pre-fetch Cache Hit Rate at <i>date</i>. (Decimal notation. The unit is %.)</p> <p><i>hit-r-extreme-cache</i>: Read Cache Hit Rate at <i>date</i>. (Extreme Cache) (Decimal notation. The unit is %.) (*1, *2)</p> <p><i>hit-r-dram-extreme-cache</i>: Read Cache Hit Rate at <i>date</i>. (DRAM + Extreme Cache) (Decimal notation. The unit is %.) (*1, *2)</p> <p><i>delay-r-qos</i>: Read QoS Delay Time at <i>date</i>. (Decimal notation. The unit is msec.) (*3, *4)</p> <p><i>delay-w-qos</i>: Write QoS Delay Time at <i>date</i>. (Decimal notation. The unit is msec.) (*3, *4)</p> |

*1: When this function is disabled for a device that supports Extreme Cache performance information, "0" will be output.

```
Example: For a device that supports Extreme Cache performance information (function disabled)
... ,hit-r-extreme-cache, hit-r-dram-extreme-cache
... ,0,0
```

*2: For a device that does not support Extreme Cache performance information, a value will not be output and instead a series of commas will be output.

```
Example: For a device that does not support Extreme Cache performance information
...,hit-r-extreme-cache,hit-r-dram-extreme-cache
.....
```

*3: When this function is disabled for a device that supports Host-LU QoS performance information (QoS Delay Time), "0" will be output.

```
Example: For a device that supports Host-LU QoS performance information (function disabled)
...,delay-r-qos,delay-w-qos
...,0,0
```

*4: For a device that does not support Host-LU QoS performance information (QoS Delay Time), a value will not be output and instead a series of commas will be output.

```
Example: For a device that does not support Host-LU QoS performance information
...,delay-r-qos,delay-w-qos
.....
```

RAID Group Performance Information of Storage Device

| Items | Explanation |
|-------------|---|
| File name | RAIDGroup/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the RAID group number by hexadecimal notation.) |
| Header line | Date, RAIDGroup0xXXXX- Read IOPS, RAIDGroup0xXXXX- Write IOPS, RAIDGroup0xXXXX- Read Throughput, RAIDGroup0xXXXX- Write Throughput, RAIDGroup0xXXXX- Read Response Time, RAIDGroup0xXXXX- Write Response Time, RAIDGroup0xXXXX- Read Cache Hit Rate, RAIDGroup0xXXXX- Write Cache Hit Rate, RAIDGroup0xXXXX- Prefetch Cache Hit Rate, RAIDGroup0xXXXX- Read Cache Hit Rate(Extreme Cache), RAIDGroup0xXXXX- Read Cache Hit Rate(DRAM + Extreme Cache), RAIDGroup0xXXXX- Read QoS Delay Time, RAIDGroup0xXXXX- Write QoS Delay Time |
| Data line | <i>date,read,write,through-r,through-w,resp-r,resp-w,hit-r,hit-w,fetch, hit-r-extreme-cache,hit-r-dram-extreme-cache,delay-r-qos,delay-w-qos</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time. (YYYY/MM/DD hh:mm:ss format) <i>read</i> : Read Count at <i>date</i> . (Decimal notation. The unit is IOPS.) <i>write</i> : Write Count at <i>date</i> . (Decimal notation. The unit is IOPS.) <i>through-r</i> : Read data transfer rate at <i>date</i> . (Decimal notation. The unit is MB/S.) <i>through-w</i> : Write data transfer rate at <i>date</i> . (Decimal notation. The unit is MB/S.) <i>resp-r</i> : Read Response Time at <i>date</i> . (Decimal notation. The unit is msec.) <i>resp-w</i> : Write Response Time at <i>date</i> . (Decimal notation. The unit is msec.) <i>hit-r</i> : Read Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>hit-w</i> : Write Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>fetch</i> : Read Pre-fetch Cache Hit Rate at <i>date</i> . (Decimal notation. The unit is %.) <i>hit-r-extreme-cache</i> : Read Cache Hit Rate at <i>date</i> . (Extreme Cache) (Decimal notation. The unit is %.) (*1, *2) <i>hit-r-dram-extreme-cache</i> : Read Cache Hit Rate at <i>date</i> . (DRAM + Extreme Cache) (Decimal notation. The unit is %.) (*1, *2) <i>delay-r-qos</i> : Read QoS Delay Time at <i>date</i> . (Decimal notation. The unit is msec.) (*3, *4) <i>delay-w-qos</i> : Write QoS Delay Time at <i>date</i> . (Decimal notation. The unit is msec.) (*3, *4) |

*1: When this function is disabled for a device that supports Extreme Cache performance information, "0" will be output.

```
Example: For a device that supports Extreme Cache performance information (function disabled)
...,hit-r-extreme-cache,hit-r-dram-extreme-cache
...,0,0
```

*2: For a device that does not support Extreme Cache performance information, a value will not be output and instead a series of commas will be output.

```
Example: For a device that does not support Extreme Cache performance information
...,hit-r-extreme-cache,hit-r-dram-extreme-cache
,,,,,
```

*3: When this function is disabled for a device that supports Host-LU QoS performance information (QoS Delay Time), "0" will be output.

```
Example: For a device that supports Host-LU QoS performance information (function disabled)
...,delay-r-qos,delay-w-qos
...,0,0
```

*4: For a device that does not support Host-LU QoS performance information (QoS Delay Time), a value will not be output and instead a series of commas will be output.

```
Example: For a device that does not support Host-LU QoS performance information
...,delay-r-qos,delay-w-qos
,,,,,
```

Disk Performance Information of Storage Device

| Items | Explanation |
|-------------|---|
| File name | Disk/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the DE number by hexadecimal notation.) |
| Header line | - For disk mounted on CE: Date, CE(DE0x00):DiskX - busy time, ... - For disk mounted on DE: Date, DE0xXX:DiskX - busy time, ... |
| Data line | <i>date</i> , <i>Disk0</i> , ... , <i>DiskN</i> The following information is output for each field. After <i>date</i> , the information is repeated for the actual number of Disks. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>Disk0</i> : Disk0 Disk busy rate at <i>date</i> (Decimal notation. The unit is %.) <i>DiskN</i> : DiskN Disk busy rate at <i>date</i> (Decimal notation. The unit is %.) |

CA/CM Port Performance Information of Storage Device

ETERNUS DX series(DX8000 S3 series excluded), ETERNUS DX200F

| Items | Explanation |
|-----------|---|
| File name | Port/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the CA/CM Port number by hexadecimal notation. CA/CM port numbers are assigned in ascending order, starting with 0000 for the lowest CA/CM port number in the device. CM0x0 CA0x0 Port0 is 0000, CM0x0 CA0x0 Port1 is 0001, : CM0x7 CA0x3 Port2 is 007E, CM0x7 CA0x3 Port3 is 007F.) |

| Items | Explanation |
|-------------|---|
| Header line | <ul style="list-style-type: none"> - Case of CA Port Date, CM0xX:CA0xX:PortX - Read IOPS, CM0xX:CA0xX:PortX - Write IOPS, CM0xX:CA0xX:PortX - Read Throughput, CM0xX:CA0xX:PortX - Write Throughput - Case of CM Port Date, CM0xX:PortX - Read IOPS, CM0xX:PortX - Write IOPS, CM0xX:PortX - Read Throughput, CM0xX:PortX - Write Throughput |
| Data line | <p><i>date,read,write,through-r,through-w</i></p> <p>The following information is output for each field.</p> <p><i>date</i>: Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format)</p> <p><i>read</i>: Read Count at <i>date</i> (Decimal notation. The unit is IOPS.)</p> <p><i>write</i>: Write Count at <i>date</i> (Decimal notation. The unit is IOPS.)</p> <p><i>through-r</i>: Read data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.)</p> <p><i>through-w</i>: Write data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.)</p> |

ETERNUS DX8000 S3 series

| Items | Explanation |
|-------------|---|
| File name | <p>Port/<i>nnnn</i>.csv (<i>nnnn</i> indicates the CA Port number by hexadecimal notation. CA Port numbers are assigned in ascending order, starting with 0000 for the lowest CA Port number in the device.)</p> <p>CE0x0 CM0x0 CA0x0 Port0 is 0000, CE0x0 CM0x0 CA0x0 Port1 is 0001, : CE0x3 CM0x1 CA0x3 Port2 is 007E, CE0x3 CM0x1 CA0x3 Port3 is 007F)</p> |
| Header line | Date, CE0xX:CM0xX:CA0xX:PortX - Read IOPS, CE0xX:CM0xX:CA0xX:PortX - Write IOPS, CE0xX:CM0xX:CA0xX:PortX - Read Throughput, CE0xX:CM0xX:CA0xX:PortX - Write Throughput |
| Data line | <p><i>date,read,write,through-r,through-w</i></p> <p>The following information is output for each field.</p> <p><i>date</i>: Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format)</p> <p><i>read</i>: Read Count at <i>date</i> (Decimal notation. The unit is IOPS.)</p> <p><i>write</i>: Write Count at <i>date</i> (Decimal notation. The unit is IOPS.)</p> <p><i>through-r</i>: Read data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.)</p> <p><i>through-w</i>: Write data transfer rate at <i>date</i> (Decimal notation. The unit is MB/S.)</p> |

Note: According to the port mode of the target CA/CM Port, the following is added at the end of each port name in the header line.

| Port Mode | FC | iSCSI |
|-----------|------------|---------------|
| CA | - | (iSCSI-CA) |
| RA | (FC-RA) | (iSCSI-RA) |
| CA/RA | (FC-CA/RA) | (iSCSI-CA/RA) |

Number of Active Disks Performance Information of Storage Device

| Items | Explanation |
|-------------|---------------------------------|
| File name | ACTIVE_DISK.csv |
| Header line | Date, Total Disks, Active Disks |
| Data line | <i>date,total,active</i> |

| Items | Explanation |
|-------|---|
| | The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>total</i> : Overall number of loaded disk devices at <i>date</i> (Decimal notation. The unit is Disk.) <i>active</i> : Overall number of active disk devices at <i>date</i> (Decimal notation. The unit is Disk.) |

Power Consumption Performance Information of Storage Device (ETERNUS DX60/DX80/DX90, DX S2 series, DX S3 series, ETERNUS DX200F Only)

| Items | Explanation |
|-------------|---|
| File name | SYSTEM_POWER_CONSUMPTION.csv |
| Header line | Date, System Power Consumption |
| Data line | <i>date, power</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>power</i> : Power used by the device as a whole at <i>date</i> (Decimal notation. The unit is Watt.) |

Temperature Performance Information of Storage Device (ETERNUS DX60/DX80/DX90, DX S2 series, DX S3 series, ETERNUS DX200F Only)

| Items | Explanation |
|-------------|--|
| File name | SYSTEM_TEMPERATURE.csv |
| Header line | Date, System Temperature |
| Data line | <i>date, temperature</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>temperature</i> : Air intake temperature at device at <i>date</i> (Decimal notation. The unit is degrees Centigrade.) |

Storage Device NAS System Performance Information

| Items | Explanation |
|-------------|--|
| File name | NAS/System/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the CM number by hexadecimal notation.) |
| Header line | Date, CM0xXX - CPU Use Rate, CM0xXX - CIFS Operations, CM0xXX - NFS Operations |
| Data line | <i>date, CMuse, CMcifs, CMnfs</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) <i>CMuse</i> : CPU usage rate within the CM at <i>date</i> (Decimal notation. The unit is %.) <i>CMcifs</i> : Number of CIFS processes within CM at <i>date</i> (Decimal notation. The unit is ops/s.) <i>CMnfs</i> : Number of NFS processes within CM at <i>date</i> (Decimal notation. The unit is ops/s.) |

Storage Device NAS Volume Performance Information

| Items | Explanation |
|-------------|---|
| File name | NAS/LogicalVolume/ <i>nnnn</i> .csv (<i>nnnn</i> indicates the LogicalVolume number by hexadecimal notation.) |
| Header line | Date, LogicalVolume0xXXXX - Read Throughput, LogicalVolume0xXXXX - Write Throughput |
| Data line | <i>date, through-r, through-w</i> The following information is output for each field. <i>date</i> : Performance Information Acquisition Time (YYYY/MM/DD hh:mm:ss format) |

| Items | Explanation |
|-------|--|
| | <i>through-r</i> : Read data transfer rate at <i>date</i> (Decimal notation. The unit is MB/s.) |
| | <i>through-w</i> : Write data transfer rate at <i>date</i> (Decimal notation. The unit is MB/s.) |


OPERANDS

export

Outputs performance information for the specified date in the CSV format.

outDirName

Specify the directory that outputs performance information. The full path of an existing directory must be specified in *outDirName*. Performance information is output to the *outDirName* directory based on the following configuration.

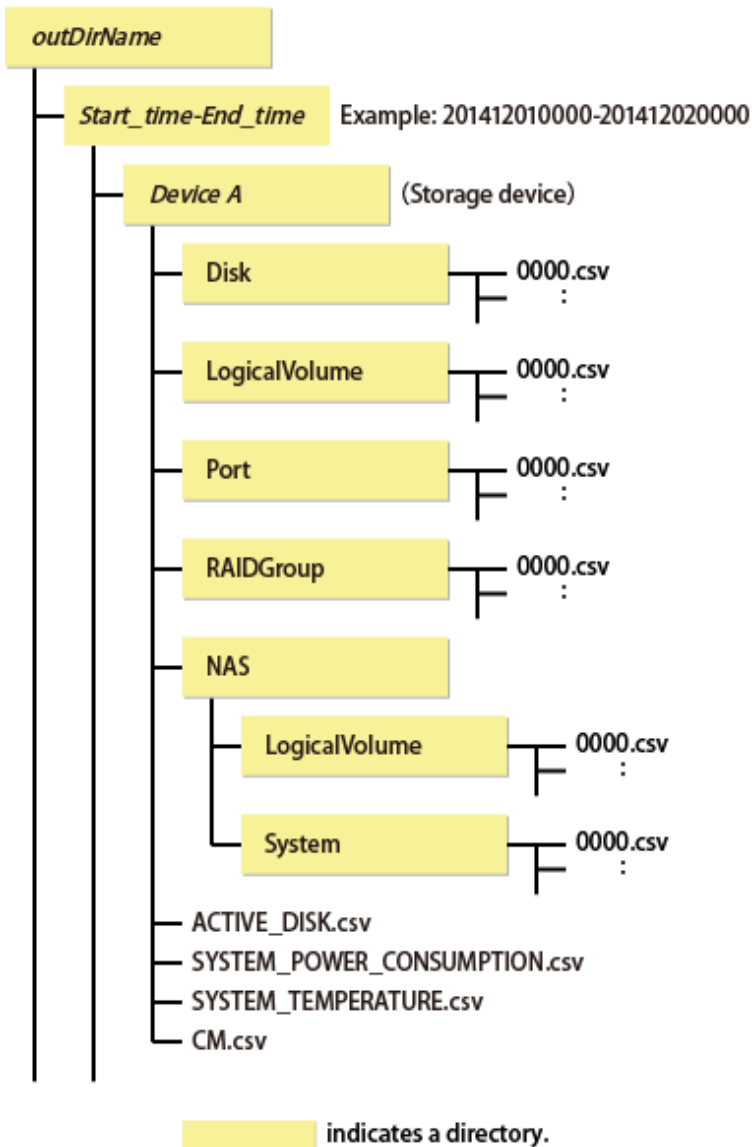

OPTIONS

-ipaddr *ipaddr*

Specify the IP address of the device that outputs performance information.

The output target device must satisfy the following conditions:

- The device is registered with this software, and it is one of the following performance monitoring targets:
 - ETERNUS DX series, ETERNUS DX200F
 - The Fibre Channel switches and Fibre Channel switch blades which support the performance monitoring.

Refer to "7.2.2 Instruction for Performance Management" for the settings of performance monitoring.

`-date start_time[-end_time]`

Specify the start and end times for the output of performance information in YYYYMMDDhhmm format. The start and end times must be concatenated using a hyphen ("-"), as follows:

```
YYYYMMDDhhmm-YYYYMMDDhhmm
```

If the hyphen ("-") and end time are omitted, the command execution time will be the end time.

The time that is specified for the `-date` option start time must be earlier than the end time. Additionally, the time that is specified for the start and end times must be later than 00:00 on 01/08/2001, and earlier than the command execution time.

If this option is omitted, a time 30 minutes before the command execution time will be the start time, and the command execution time will be the end time.

EXAMPLES

Windows Environment

- Output of performance information from 00:00 on 01/01/2012 to 23:59 on 01/01/2012 for a device with IP address 10.101.12.13 to the `c:\work` directory:


```
> storageadm perfdata export "C:\work" -ipaddr 10.101.12.13 -date 201201010000-201201012359
```
- Output of performance information from 00:00 on 01/01/2012 to now for a device with IP address 10.101.12.13 to the `c:\work` directory:


```
> storageadm perfdata export "C:\work" -ipaddr 10.101.12.13 -date 201201010000
```

Solaris or Linux Environment

- Output of performance information from 00:00 on 01/01/2012 to 23:59 on 01/01/2012 for a device with IP address 10.101.12.13 to the `/var/tmp/work` directory:


```
> storageadm perfdata export /var/tmp/work -ipaddr 10.101.12.13 -date 201201010000-201201012359
```
- Output of performance information from 00:00 on 01/01/2012 to now for a device with IP address 10.101.12.13 to the `/var/tmp/work` directory:


```
> storageadm perfdata export /var/tmp/work -ipaddr 10.101.12.13 -date 201201010000
```

13.1.1.7 storageadm spindle (Disk Control command)

NAME

`storageadm spindle` - controls disk drives

SYNOPSIS

```
storageadm spindle start -ipaddr ipaddr {-raid RAIDgroup_number[,RAIDgroup_number,...] | -server} [-sync [-time timeout]]
```

```
storageadm spindle stop -ipaddr ipaddr {-raid RAIDgroup_number[,RAIDgroup_number,...] | -server} [-sync [-time timeout]] [-s] [-f]
```

```
storageadm spindle info -ipaddr ipaddr [{-raid RAIDgroup_number[,RAIDgroup_number,...] | -server}]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm spindle
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm spindle
```

DESCRIPTION

The spindle rotation of disk drives making up RAID of the storage device and the power of disk drives are controlled.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

If the storage device is specified when status is displayed, the spindle rotation status of disk drives making up RAID and the power status of disk drives are displayed.

If a server was specified, the storage device RAID group number and volume number used by the server are displayed.

The rotation of configured disk drives and the power of disk drives are controlled.

Specifying the server IP address controls the rotation of disk drives of the storage device used by the server and the power of those disk drives.

The target storage device and server must be devices managed by this software.

OPERANDS

start

Starts the disk drive that is used to configure the storage device RAID group.

stop

Stops the disk drive that is used to configure the storage device RAID group.

info

Displays the storage device RAID group Eco-mode information, or the storage device information used by the server.

OPTIONS

Options of "start" Operand

-ipaddr *ipaddr*

Specify the storage device or server IP address.

-raid *RAIDgroup_number[,RAIDgroup_number,...]*

Specify the start target RAID group number using hexadecimal notation.

If more than one RAID group number is specified, separate each number using a comma (",").

Specify this option when the storage device IP address has been specified in the **-ipaddr** option.

-server

The disk drive of the storage device used by the specified server is started.

Specify this option when the server IP address has been specified in the **-ipaddr** option.

-sync

There is no return until processing is complete, or the time specified in the **-time** option has elapsed.

-time *timeout*

Specify the timeout value (unit: seconds) if the **-sync** option has been specified. Specify a number from 1 to 86400.

If this option is omitted, the timeout value will be 600 seconds.

Options of "stop" Operand

`-ipaddr ipaddr`

Specify the storage device or server IP address.

`-raid RAIDgroup_number[,RAIDgroup_number,...]`

Specify the stop target RAID group number using hexadecimal notation.

If more than one RAID group number is specified, separate each number using a comma (",").

Specify this option when the storage device IP address has been specified in the `-ipaddr` option.

`-server`

The disk drive of the storage device used by the specified server is stopped.

Specify this option when the server IP address has been specified in the `-ipaddr` option.

`-sync`

There is no return until processing is complete, or the time specified in the `-time` option has elapsed.

`-time timeout`

Specify the timeout value (unit: seconds) if the `-sync` option has been specified. Specify a number from 1 to 86400.

If this option is omitted, the timeout value will be 600 seconds.

`-s`

Processing continues without the output of a confirmation message.

`-f`

Related RAID group disk drives are forcibly stopped.

Options of "info" Operand

`-ipaddr ipaddr`

Specify the storage device or server IP address.

`-raid RAIDgroup_number[,RAIDgroup_number,...]`

Specify the status display target RAID group number using hexadecimal notation.

If more than one RAID group number is specified, separate each number using a comma (",").

Specify this option when the storage device IP address has been specified in the `-ipaddr` option.

If this option is omitted, the information for all RAID groups in the specified storage device is displayed.

`-server`

The storage device RAID group Eco-mode information and volume number used by the specified server are displayed.

Specify this option when the server IP address has been specified in the `-ipaddr` option.

EXAMPLES

- Starting the disk drive that is used to configure the RAID group by specifying the storage device IP address and RAID group number:

```
> storageadm spindle start -ipaddr 10.10.10.10 -raid 0x0000,0x0001
```

- Stopping the disk drive that is used to configure the RAID group by specifying the storage device IP address and RAID group number:

```
> storageadm spindle stop -ipaddr 10.10.10.10 -raid 0x0001
```

- Stopping the disk drive that is used by the server by specifying the server:

```
> storageadm spindle stop -ipaddr 10.10.10.20 -server
```

- Displaying the Eco-mode status of all RAID groups in a storage device:

```
> storageadm spindle info -ipaddr 10.10.10.10
<<< ECO Mode RAID Group Information >>>
RAIDGROUP_NUMBER(NAME)    MODE DISK_STATUS          CONTROL SCHEDULE
```

```

-----
0x0000(data1)      ON   Idle           OFF   External
0x0001(data2)      ON   in the boot process ON    01-NAME0001
0x0002             OFF  Active          -
0x0003             -   Active          -
-----

```

The explanation of the information displayed in each field is as follows:

| Field Title | Explanation |
|------------------------|--|
| RAIDGROUP_NUMBER(NAME) | Displays the RAID group number by the hexadecimal number of four digits. When the name is set on the RAID group, its name is displayed by enclosing in (). |
| MODE | Displays the Eco-mode status that is set on the RAID group. <ul style="list-style-type: none"> - "ON": Eco-mode is enabled. (Spindle rotation is stopped.) - "ON(power off)": Eco-mode is enabled. (Disk drives are powered off.) - "OFF": Eco-mode is disabled. - "-"(hyphen): Eco-mode cannot be set. |
| DISK_STATUS | Displays the status of disk drives that compose the RAID group. <ul style="list-style-type: none"> - "Active": Spindle is rotating. - "Idle": Spindle rotation is stopped. - "Power off": Disk drive power is OFF. - "In the boot process": Disks start in progress. (*1) - "In the stop process": Disks stop in progress. (*2) |
| CONTROL | Displays the disk drive control status set on the RAID group. <ul style="list-style-type: none"> - "ON": Disk starting is requested. - "OFF": Disk stopping is requested. - "-"(hyphen): Uncontrollable. |
| SCHEDULE | Displays the Eco-mode schedule set on RAID group by the following format. The schedule name of External is displayed as "External". number-name The "number" is displayed in decimal number, and "name" is displayed in eight characters or less. |

*1: Spindle rotation of disk drives or the power of disk drives is started.

*2: Spindle rotation of disk drives or the power of disk drives is stopped.

- Displaying the storage device RAID group number and volume number that are used by the server:

```

> storageadm spindle info -ipaddr 10.10.10.20 -server
<<< ECO Mode RAID GROUP information for Server >>>
IP_ADDRESS      RAID   MODE  DISK_STATUS      CONTROL  STOP
-----
10.10.10.10     0x0000 ON   Idle             OFF
                  0x0001 ON   Active          ON      *
-----

```

```

<<< Disk use information on Server >>>
IP_ADDRESS      RAID   VOLUME
-----

```

```

10.10.10.10      0x0000 0x0000,0x0001,0x0002,0x0003,0x0004,0x0005,0x0006,0x0007,
                  0x0008,0x0009,0x000A,0x000B,0x000C,0x000D,0x000E,0x000F
                  0x0001 0x0010,0x0011,0x0012,0x0013,0x0014,0x0015,0x0016,0x0017,
                  0x0018,0x0019,0x001A,0x001B,0x001C,0x001D,0x001E,0x001F

```

The explanation of the information displayed in each field is as follows:

- <<< ECO Mode RAID GROUP information for Server >>> information

| Field Title | Explanation |
|-------------|---|
| IP_ADDRESS | Displays the IP address of the storage device connected with the specified server. |
| RAID | Displays the RAID group number by the hexadecimal number of four digits. The RAID group including the volume used from the specified server is displayed. |
| MODE | Displays the Eco-mode status that is set on the RAID group. <ul style="list-style-type: none"> - "ON": Eco-mode is enabled. (Spindle rotation is stopped.) - "ON(power off)": Eco-mode is enabled.(Disk drives are powered off.) - "OFF": Eco-mode is disabled. - "-"(hyphen): Eco-mode cannot be set. |
| DISK_STATUS | Displays the status of disk drives that compose the RAID group. <ul style="list-style-type: none"> - "Active": Spindle is rotating. - "Idle": Spindle rotation is stopped. - "Power off": Disk drive power is OFF. - "In the boot process": Disks start in progress. (*1) - "In the stop process": Disks stop in progress. (*2) |
| CONTROL | Displays the disk drive control status set on the RAID group. <ul style="list-style-type: none"> - "ON": Disk starting is requested. - "OFF": Disk stopping is requested. - "-"(hyphen): Uncontrollable. |
| STOP | Although the stopping the disk drives used from the specified server is directed, when any disk drives in this RAID group are used from other server or this RAID group cannot be stopped because of any following states, displays "*". <ul style="list-style-type: none"> - The RAID group for which the system disk is included - The RAID group for which it is set in the NAS area - The RAID group for which the mainframe volumes, MVV volumes, or MVV Concatenation volumes are registered |

*1: Spindle rotation of disk drives or the power of disk drives is started.

*2: Spindle rotation of disk drives or the power of disk drives is stopped.

- <<< Disk use information on Server >>> information

| Field Title | Explanation |
|-------------|---|
| IP_ADDRESS | Displays the IP address of the storage device connected with the specified server. |
| RAID | Displays the RAID group number by the hexadecimal number of four digits. The RAID group including the volume used from the specified server is displayed. |

| Field Title | Explanation |
|-------------|--|
| VOLUME | Displays the volume number by the hexadecimal number of four digits. The volumes used from the specified server are displayed. |

NOTES

- Storage devices that control the spindle rotation and power of disk drives and display statuses must be registered to this product.
- There are RAID groups that cannot do the Eco-mode operation. Refer to "[Uncontrollable RAID Groups](#)" in "[1.2.5 Energy-saving Operation for Storage Device](#)".
- To start or stop RAID group, set Eco-mode of RAID group to ON or ON(power off). For the procedure, refer to "[6.1.6 How to Control Eco-mode](#)".
- When specifying the server IP address to control the rotation and power of disk drives, do not change the connection with the storage system.
- In the following cases, the rotation and power of disk drives cannot be discontinued by specifying the server IP address:
 - If one or more share disks are contained on the stopped disk drives.
Check the status of all servers that use their share disks, and judge whether share disks can be stopped or not. If share disks can be stopped, specify the -f option.
 - If the disk drives used from other server are included in the RAID group that stop target disk drive exists.
Specify the server IP address for all the servers that use the disk drives of the target RAID group or specify -f option. When specifying -f option, check the status of all the associated servers to judge whether or not to stop disk drives. One to one configuration of server and RAID group is recommended.
 - If the RAID group including unused disk drives.
Re-execute either specify the -f option or specify the RAID group.
 - If the RAID group including the stop target disk drive is any of "[Uncontrollable RAID Groups](#)".
- If the volume that belongs to the specified stop target RAID group is concatenated with a different RAID group using the LUN Concatenation functionality, the disk drive is not stopped even if the "stop" operand is specified. To stop all related RAID group disk drives, either specify all of the related RAID groups, or specify the -f option. However, if the related RAID group is any of "[Uncontrollable RAID Groups](#)", the disk control cannot be executed.
- The message below is output when the "stop" operand is specified. To continue, enter "y". To cancel, enter "n". This message is not output when the -s option is specified.

```
Are you sure? [y/n]:
```

- The information of storage device that can control disks is displayed on the storage device information used by the server. The information of storage device that cannot control disks is not displayed. When both the disk controllable storage device and the disk uncontrollable storage device are connected with the server, the information of disk controllable storage device is only displayed.
- The disk drive does not stop when the RAID group status is as follows:
 - Part of the storage device controller module and the module for the disk drive access route contain a fault.
 - The disk drive that was used to configure the RAID group is faulty.
 - There is a copy data of Advanced Copy.
 - There is an EC/REC session (including when there is no copy data. However, the disk will stop when the EC/REC status is Suspend.
 - There is a QuickOPC/SnapOPC session (including when there is no copy data).

13.1.1.8 storageadm remcs (REMCS Notification Command)

NAME

storageadm remcs - REMCS notification (Windows environment only)

SYNOPSIS

```
storageadm remcs send -ipaddr ipaddr -type type
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm remcs
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

DESCRIPTION

This command is used to send REMCS notification of Fibre Channel switch which is registered with this software.

OPERANDS

send

As for REMCS notification of the Fibre Channel switch whose IP address is specified, sends a test mail.

OPTIONS

Options of "send" Operand

-ipaddr *ipaddr*

Specify the IP address of Fibre Channel switch.

-type *type*

Specify the type of the sending mail.

Make sure to specify "test".

EXAMPLES

- Send a test mail.

```
> storageadm remcs send -ipaddr 10.10.10.10 -type test
```

NOTES

- The Fibre Channel switch to be specified must be registered with this software.
- The settings for REMCS notification must be done in advance.

13.1.1.9 esfsnap (Troubleshooting Information Collection of Manager)

NAME

esfsnap - Collects the troubleshooting information of Manager

SYNOPSIS

```
esfsnap -dir dirname [-all]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\Common\bin\esfsnap
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJTSVesfcm/bin/esfsnap
```

DESCRIPTION

Collect information of the Manager on the Management Server.
Only OS administrator user can execute this command.

The esfsnap is the command used to collect information on the Management Server when a problem occurs. Submit the information to Fujitsu technical staff.

OPTIONS

-dir *dirname*

Specify the directory that stores the troubleshooting information for *dirname*.

In the Windows environment, specify the full path name that starts from the drive letter for *dirname*. The maximum length that can be specified for *dirname* is 70 bytes.

In the Solaris or Linux environment, specify the full path name for *dirname*.

In the Windows environment, the collected information is stored in the directory that its name starts with "esfsnap_". In the Solaris or Linux environment, the collected information is gathered in the file that its name starts by "esfsnap_". Before executing this command, confirm that *dirname* directory has the following free space.

| Collected Information | Required Free Space |
|-----------------------------------|--|
| Initial investigation information | more than 40MB |
| All troubleshooting information | more than "80 + (2 * Number_of_registered_devices)" MB |

-all

Collects all troubleshooting information on servers. Data includes lots of information, which will increase the size of the data. This option is not necessary for initial investigation.

EXAMPLES

Windows Environment

- Collecting the troubleshooting information for initial investigation on D:\temp directory.

```
> esfsnap -dir D:\temp
```

Solaris or Linux Environment

- Collecting the troubleshooting information for initial investigation on /var/tmp directory.

```
> esfsnap -dir /var/tmp
```

13.1.1.10 esfadm esfdata (Configuration Information Operation Command)

NAME

esfadm esfdata - Operates the configuration information

SYNOPSIS

```
esfadm esfdata backup -ipaddr ipaddr [-s]
```

```
esfadm esfdata restore -all [-s]
```

```
esfadm esfdata delete -all
```

COMMAND PATH

Windows Environment

```
$INS_DIR\Common\bin\esfadm esfdata
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVesfcm/bin/esfadm esfdata
```

DESCRIPTION

This command backs up the various configuration information stored by this product to the ETERNUS Disk storage system and restores from the ETERNUS Disk storage system to the repository of this product. Further, this command delete the configuration information related to the ETERNUS Disk storage system that has been deleted from the repository.

OPERANDS

backup

Backs up the configuration information to the ETERNUS Disk storage system.

restore

Restores the configuration information from the ETERNUS Disk storage system to the repository of this product.

delete

Deletes the configuration information related to the ETERNUS Disk storage system that has been deleted.

OPTIONS

Options of "backup" Operand

`-ipaddr ipaddr`

Specify the IP address of the storage device.

`-s`

Processing continues without output of a confirmation message.

Options of "restore" Operand

`-all`

Restores from all registered ETERNUS Disk storage systems.

`-s`

Processing continues without output of a confirmation message.

Options of "delete" Operand

`-all`

Deletes all configuration information related to the ETERNUS Disk storage system that has been deleted.

EXAMPLES

- Backs up the configuration information.

```
> esfadm esfdata backup -ipaddr 10.10.10.10
Are you sure? [y/n]: y
esfadm00000 The command ended normally.
```

- Restores the configuration information.

```
> esfadm esfdata restore -all
Are you sure? [y/n]: y
esfadm00000 The command ended normally.
```

- Deletes the configuration information.

```
> esfadm esfdata delete -all
Are you sure? [y/n]: y
esfadm00000 The command ended normally.
```

NOTES

- Use the `esfadm esfdata restore` command when the repository of this product has been corrupted or when restoring using the backup.
- Use the `esfadm esfdata backup` command only when the configuration information saved on the ETERNUS Disk storage system has been corrupted due to an ETERNUS Disk storage system failure. After Fujitsu Technical Support completes saving the ETERNUS Disk storage system, use this command after following the instructions set by Fujitsu Technical Support.
- Use the `esfadm esfdata delete` command only when deleting the ETERNUS Disk storage system and when there is nothing to reuse. Do not use this when temporarily deleting, such as for maintenance purposes.
- This command relates to VVOL metadata and VVOL datastore configuration information.
- In the VMware vSphere Virtual Volumes environment, the processing time depends on the number of created Virtual Volumes.

13.1.2 Commands for Storage Management

The following sub sections explain the commands for managing the storage device.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

The following table shows the relationship between commands and the storage devices where they can be used. The storage device must be registered with this software.

| Command Name | ETERNUS DX S2 series (DX60 S2 excluded) ETERNUS DX S3 series ETERNUS DX 200F | ETERNUS DX60/DX60 S2 ETERNUS DX80 ETERNUS DX90 ETERNUS DX400 series ETERNUS DX8000 series |
|--------------------------------------|--|---|
| storageadm disk | Available | Available |
| storageadm raid | Available (*2) | Available |
| storageadm volume | Available | Available |
| storageadm affinity | Available | Available |
| storageadm ecomode | Available (*3) | Available |
| storageadm port | Available | Available |
| storageadm iscsiport | Available | Available (*1) |
| storageadm progress | Available | Available |

*1: For ETERNUS DX60/DX60 S2/DX80, only iSCSI model device is supported.

*2: ecomode operand does not support ETERNUS DX200F.

*3: This command does not support ETERNUS DX200F.

13.1.2.1 storageadm disk (Disk Management Command)

NAME

storageadm disk - Manages disks

SYNOPSIS

```
storageadm disk info -ipaddr ipaddr [-csv]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm disk
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm disk
```

DESCRIPTION

This command displays information of disks in the ETERNUS Disk storage system that is registered with this software.

OPERANDS

info

Displays detail information of disks in the ETERNUS Disk storage system that is registered with this software.

OPTIONS

Options of "info" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-csv

Displays the disk information in the CSV format.

If this option is omitted, it is displayed in the table format.

EXAMPLES

- Displaying the disk information in the table format.

```
> storageadm disk info -ipaddr 192.168.0.1
<<< Disk Information >>>
NUMBER DE  SLOT USAGE          STATUS  RGNO  SIZE  DISKTYPE  MOTOR
-----
0      0x00 0   System Disk  Available 0x0002 300GB SAS    Active
1      0x00 1   System Disk  Available 0x0001 300GB SAS    Idle
2      0x00 2   System Disk  Available 0x0002 300GB SAS    In the boot process
3      0x00 3   System Disk  Available 0x0003 300GB SAS    In the stop process
4      0x00 4   Data Disk    Available 0x0003 300GB SAS    Active
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the disk information in the CSV format.

```
> storageadm disk info -ipaddr 192.168.0.1 -csv
NUMBER,DE,SLOT,USAGE,STATUS,RGNO,SIZE,DISKTYPE,MOTOR
0,0x00,0,System Disk,Available,0x0002,300GB,SAS,Active
1,0x00,1,System Disk,Available,0x0001,300GB,SAS,Idle
```

```
2,0x00,2,System Disk,Available,0x0002,300GB,SAS,In the boot process
3,0x00,3,System Disk,Available,0x0003,300GB,SAS,In the stop process
4,0x00,4,Data Disk,Available,0x0003,300GB,SAS,Active
```

13.1.2.2 storageadm raid (RAID Management Command)

NAME

storageadm raid - Manages RAID groups

SYNOPSIS

```
storageadm raid add -ipaddr ipaddr -disk
DE_number:slot_number,DE_number:slot_number[,DE_number:slot_number,...] -level RAIDlevel [-name
alias_name] [-cm assigned_CM | -assignedcm assigned_CM] [-fr-consist diskConfiguration] [-csv]

storageadm raid delete -ipaddr ipaddr -raidgroup RAIDgroup_number [-f] [-s]

storageadm raid info -ipaddr ipaddr [-raidgroup RAIDgroup_number | -expand] [-remote BOX-ID] [-csv]

storageadm raid ecomode -ipaddr ipaddr -raidgroup RAIDgroup_number[,RAIDgroup_number,...] -on [-type
eco-mode setting]|-off [-s]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm raid
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm raid
```

DESCRIPTION

This command is used to create/delete/display and sets the Eco-mode for a RAID group in the ETERNUS Disk storage system that is registered with this software.

OPERANDS

add

Creates a RAID group

delete

Deletes a RAID group

info

Displays a RAID group information

ecomode

Sets the Eco-mode for the RAID group

OPTIONS

Options of "add" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-disk *DE_number.slot_number,DE_number.slot_number[,DE_number.slot_number,...]*

Specify DE numbers and slot numbers for the storage device using either decimal or hexadecimal notation, placing a colon (":") in the middle of each DE number and slot number pair, and using commas (",") to separate pairs. For example, two pairs can be specified as "-disk 1:1,1:2" in decimal notation or "-disk 0x1:0x1,0x1:0x2" in hexadecimal notation.

Be sure to specify at least two DE number/slot number pairs.

-level *RAID/level*

Specify the RAID level by the minuscule as follows:

| Characters That Can Be Specified | Created RAID Level |
|----------------------------------|--------------------|
| raid0 | RAID0 |
| raid1 | RAID1 |
| raid1+0 | RAID1+0 |
| raid5 | RAID5 |
| raid5+0 | RAID5+0 |
| raid6 | RAID6 |
| raid6-fr | RAID6-FR |

-fr-consist *diskConfiguration*

Specify RAID6-FR disk configuration. If "raid6-fr" is specified by -level option, this option must be specified.

| Specifiable String | No. of Disks | RAID6-FR Disk Configuration |
|--------------------|--------------|-----------------------------|
| (3D+2P)*2+1HS | 11 | RAID6(3+2)*2, HS*1 |
| (6D+2P)*2+1HS | 17 | RAID6(6+2)*2, HS*1 |
| (9D+2P)*2+1HS | 23 | RAID6(9+2)*2, HS*1 |
| (12D+2P)*2+1HS | 29 | RAID6(12+2)*2, HS*1 |
| (5D+2P)*4+1HS | 29 | RAID6(5+2)*4, HS*1 |
| (13D+2P)*2+1HS | 31 | RAID6(13+2)*2, HS*1 |
| (3D+2P)*6+1HS | 31 | RAID6(3+2)*6, HS*1 |
| (4D+2P)*2+1HS | 13 | RAID6(4+2)*2, HS*1 |
| (4D+2P)*5+1HS | 31 | RAID6(4+2)*5, HS*1 |
| (8D+2P)*3+1HS | 31 | RAID6(8+2)*3, HS*1 |

-name *alias_name*

Specify an alias for the RAID group to be created.

Only alphanumeric characters (a to z, A to Z and 0 to 9) and the following symbols can be used for aliases: !@#%&*()-= ` _ +|~[]{};:~./<>?. However, "?" is not supported for ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F. If the alias contains a space, enclose the entire alias in double quotes (e.g., -name "123 567").

If this option is omitted, the specification is as follows:

| Storage Device | Specification When This Option Is Omitted |
|--|---|
| ETERNUS DX60/DX80/DX90 ETERNUS DX S2 series ETERNUS DX S3 series ETERNUS DX200F | An alias name is set automatically. |

| Storage Device | Specification When This Option Is Omitted |
|---|---|
| ETERNUS DX400 series ETERNUS DX8000 series | An alias name is not set. |

-cm *assigned_CM*

Specify the assigned CM number for the RAID group using two digits, as in the following table. When the target storage device is ETERNUS DX8000 S3 series, this option cannot be specified.

If this option is omitted, the assigned CM number will be set up automatically ("auto" will be specified).

| Storage Device | Assigned CM | Characters to Be Specified | Remarks |
|--|-------------|----------------------------|--|
| ETERNUS DX60/DX60 S2 ETERNUS DX80/DX80 S2 ETERNUS DX90/DX90 S2 ETERNUS DX S3 series (DX8000 S3 series excluded) ETERNUS DX200F | CM#0 | 00 | For the first digit, enter the assigned CM number. For the second character, always enter "0". |
| | CM#1 | 10 | |
| ETERNUS DX400 series ETERNUS DX400 S2 series ETERNUS DX8000 series ETERNUS DX8000 S2 series | CM#0 CPU#0 | 00 | For the first digit, enter the assigned CM number. For the second digit, enter the number of the CPU within the CM entered for the first digit. |
| | CM#0 CPU#1 | 01 | |
| | CM#1 CPU#0 | 10 | |
| | CM#1 CPU#1 | 11 | |
| | : | : | |
| | CM#7 CPU#0 | 70 | |
| | CM#7 CPU#1 | 71 | |

-assignedcm *assigned_CM*

Specify the CM number in charge of a RAID group in the form of "ce" + CE number (hexadecimal) + "cm" + CM number. It is case-insensitive.

When the target storage device is only ETERNUS DX8000 S3 series, this option can be specified.

If this option is omitted, the assigned CM number will be set up automatically ("auto" will be specified). Specification example is as follows:

```
[To specify CE number 0, CM number 0]
-assignedcm ce0cm0
[To specify CE number 1, CM number 1]
-assignedcm ce1cm1
[To specify CE number 2, CM number 0]
-assignedcm ce2cm0
[To specify CE number 3, CM number 1]
-assignedcm ce3cm1
```

-CSV

Displays the RAID group number in the CSV format.

If this option is omitted, it is displayed in the table format.

Options of "delete" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-raidgroup *RAIDgroup_number*

Specify the RAID group number to be deleted, using either decimal or hexadecimal notation. For example, RAID group number 16 can be specified as "-raidgroup 16" in decimal notation or "-raidgroup 0x10" in hexadecimal notation.

-s

Processing continues without the output of a confirmation message.

-f

If there are volumes within the RAID group, the volumes will be deleted before the RAID group is deleted. However, the command will terminate with an error without deleting the volumes if any of the following conditions apply to the RAID group:

- The volumes in the RAID group have been mapped
- There are volumes other than open volumes
- There are LUN concatenated volumes
- There are ODX Buffer Volumes

Options of "info" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-raidgroup *RAIDgroup_number*

Specify the RAID group number for which detailed information is to be displayed, using either decimal or hexadecimal notation. For example, RAID group number 16 can be specified as "-raidgroup 16" in decimal notation or "-raidgroup 0x10" in hexadecimal notation.

-expand

Add and display the following matters to RAID group information:

| Item | Explanation |
|-----------------------------|---|
| STRIPE_SIZE | Displays the stripe size of RAID group. |
| STRIPE_DEPTH | Displays the stipe depth of RAID group. |
| FAST_RECOVERY_CONFIGURATION | Displays RAID6-FR disk configuration. |

Displayed information depends on the version of ETERNUS SF system. If the version of ETERNUS SF system is upgraded, displayed information may be increased.

If this option is specified, -raidgroup option cannot be specified.

-remote *BOX-ID*

Specify a Box ID for the remote site ETERNUS Disk storage system. Specify it when you display the RAID group information of the remote site ETERNUS Disk storage system.

-csv

Displays the RAID group information in the CSV format.

If this option is omitted, it is displayed in the table format.

Options of "ecomode" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-raidgroup *RAIDgroup_number[,RAIDgroup_number,...]*

Specify the RAID group number for which detailed information is to be displayed, using decimal and/or hexadecimal notations. For example, RAID group number 16 can be specified as "-raidgroup 16" in decimal notation or "-raidgroup 0x10" in hexadecimal notation.

The more than one RAID group number can be specified.

-on

Set the Eco-mode to ON for the specified RAID group.
This option cannot be specified at the same time as the -off option.
This option cannot be set if the Eco-mode cannot be set for any one of the specified RAID groups.

-type *eco-mode setting*

If -on option is specified, this option can be specified.
If -on option is specified and -type option is omitted, set Eco-mode that stops spindle rotation of disk drives to ON.
Enter Eco-mode in lower-case letters as shown below:

| Specifiable String | Explanation |
|--------------------|---|
| motoroff | Sets Eco-mode that stops spindle rotation of disk drives to ON. |
| poweroff | Sets Eco-mode that powers off disk drives to ON. |

-off

Set the Eco-mode to OFF for the specified RAID group.
This option cannot be specified at the same time as the -on option.

-s

Continues processing without asking for confirmation.

EXAMPLES

- Creating a RAID group and displaying the created RAID group in the table format.

```
# /opt/FJSVssmgr/sbin/storageadm raid add -ipaddr 1.2.3.4 -disk 1:10,1:11,1:12,1:13,1:14,1:15 -
level raid5
<<< RAID ADD >>>
RGNO
-----
0x0000
-----
INFO:swsag0001:Command terminated normally.
```

- Creating a RAID group and displaying the created RAID group in the CSV format.

```
# /opt/FJSVssmgr/sbin/storageadm raid add -ipaddr 1.2.3.4 -disk 1:10,1:11,1:12,1:13,1:14,1:15 -
level raid5 -csv
RGNO
0x0000
```

- Deleting a RAID group.

```
# /opt/FJSVssmgr/sbin/storageadm raid delete -ipaddr 1.2.3.4 -raidgroup 16
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

- Displaying the RAID group information in the table format.

```
# /opt/FJSVssmgr/sbin/storageadm raid info -ipaddr 1.2.3.4
<<< RAID Information >>>
RGNO  NAME  USAGE      LEVEL  STATUS  CM      TOTAL_CAPACITY  FREE_CAPACITY
-----
0x0000  Open, System RAID5  Available  CM0CPU0  407775  0
0x0001  Open, SDV   RAID5  Available  CM1CPU0  410880  285440
0x0002  Open       RAID1  Available  CM0CPU1  136960  345367
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the RAID group information in the CSV format.

```
# /opt/FJSVssmgr/sbin/storageadm raid info -ipaddr 1.2.3.4 -csv
RGNO,NAME,USAGE,LEVEL,STATUS,CM,TOTAL_CAPACITY,FREE_CAPACITY
0x0000,, "Open,System",RAID5,Available,CM0CPU0,407775,0
0x0001,, "Open,SDV",RAID5,Available,CM1CPU0,410880,285440
0x0002,, "Open,RAID1",Available,CM0CPU1,136960,345367
```

- Displaying the RAID group detail information in the table format.

```
# /opt/FJSVssmgr/sbin/storageadm raid info -ipaddr 1.2.3.4 -raidgroup 0x0000
<<< RAID Information >>>
RGNO  NAME  USAGE      LEVEL   STATUS    CM      TOTAL_CAPACITY  FREE_CAPACITY
-----
0x0000  Open, System RAID5  Available CM0CPU0  407775      0

NO      CONCATENATION  NAME      TOTAL_CAPACITY  ALLOCATED      STATUS  TYPE
-----
0x0001  1/3           sample    102400          102400         Available Open
0x0001  2/3           sample    1024            1024           Available Open
Free    -             -         2048            2048           -
0x0004  -             -         1536            1536           Available Open
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the RAID group detail information in the CSV format.

```
# /opt/FJSVssmgr/sbin/storageadm raid info -ipaddr 1.2.3.4 -raidgroup 0x0000 -csv
RGNO,NAME,USAGE,LEVEL,STATUS,CM,TOTAL_CAPACITY,FREE_CAPACITY,NO,CONCATENATION,NAME,TOTAL_CAPACITY,
,ALLOCATED_CAPACITY,STATUS,TYPE
0x0000,"Open,System",RAID5,Available,CM0CPU0,407775,0,0x0001,1/3,sample,
102400,102400,Available,Open
0x0000,"Open,System",RAID5,Available,CM0CPU0,407775,0,0x0001,2/3,sample,1024,1024,Available,Open
0x0000,"Open,System",RAID5,Available,CM0CPU0,407775,0,Free,-,,2048,2048,,
0x0000,"Open,System",RAID5,Available,CM0CPU0,407775,0,0x0004,-,,1536,1536,Available,Open
```

- Setting Eco-mode that stops spindle rotation of disk drives of RAID group to ON.

```
# /opt/FJSVssmgr/sbin/storageadm raid ecomode -ipaddr 1.2.3.4 -raidgroup 0x0000 -on
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

- Setting Eco-mode that powers off disk drives of RAID group to ON.

```
> storageadm raid ecomode -ipaddr 1.2.3.4 -raidgroup 0x0000 -on -type poweroff
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

- RAID group Eco-mode set to OFF.

```
# /opt/FJSVssmgr/sbin/storageadm raid ecomode -ipaddr 1.2.3.4 -raidgroup 0x0000 -off
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

NOTES

- The message below will be output if the -s option is not specified with the "delete" operand. Enter "y" to continue or "n" to cancel. This message can be suppressed by specifying the -s option.

```
Are you sure? [y/n]:
```

- Setting the Eco-mode for a RAID group with an Eco-mode schedule already set results in the following:

- RAID group Eco-mode set to ON -> Eco-mode ON overwrites the RAID group eco-mode schedule.

- RAID group Eco-mode set to OFF -> An error occurs (unless the Eco-mode schedule is software-controlled).
- If the Eco-mode operation is not possible for the specified RAID group, then the command terminates with an error. Refer to "[Uncontrollable RAID Groups](#)" in "[1.2.5 Energy-saving Operation for Storage Device](#)" for details of RAID groups for which the Eco-mode operation is not possible.
- You can use the -remote option only when using the Dynamic LUN Mirroring function of ServerView Resource Orchestrator.
- Temporary volumes are displayed as unknown volumes.
- You cannot create a new volume from RAID group with temporary volumes.
- ODX Buffer Volumes are not displayed.

13.1.2.3 storageadm volume (Volume Management Command)

NAME

storageadm volume - Manages volumes

SYNOPSIS

```
storageadm volume add -ipaddr ipaddr -size capacity -raidgroup RAIDgroup_number [-name alias_name] [-csv]
```

```
storageadm volume delete -ipaddr ipaddr [-volume volume_number[,volume_number,...]] [-remote BOX-ID -remote-volume volume_number [-remote-force]] [-s]
```

```
storageadm volume format -ipaddr ipaddr -volume volume_number[,volume_number,...] [-s]
```

```
storageadm volume info -ipaddr ipaddr [-volume volume_number,...] [-remote BOX-ID] [-csv]
```

```
storageadm volume nomapping -ipaddr ipaddr [-volume volume_number,...] [-remote BOX-ID] [-csv]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm volume
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm volume
```

DESCRIPTION

This command is used to create/delete/format/display volumes in the ETERNUS Disk storage system that is registered with this software.

OPERANDS

add

Creates a volume.

delete

Deletes volumes.

format

Formats volumes.

info

Displays volume information.

nomapping

Displays the information of volumes that are not mapped to affinity group.

OPTIONS

Options of "add" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-size *capacity*

Specify the size of the volume to be created in MB or GB. 1 GB is equivalent to 1024 MB. For example, 1024 MB is specified as "-size 1024MB" or "-size 1GB".

-raidgroup *RAIDgroup_number*

Specify the RAID group number for which a volume is to be created, using either decimal or hexadecimal notation. For example, RAID group number 16 can be specified as "-raidgroup 16" in decimal notation or "-raidgroup 0x10" in hexadecimal notation.

-name *alias_name*

Specify an alias for the volume to be created.

Only alphanumeric characters (a to z, A to Z and 0 to 9) and the following symbols can be used for aliases: !@#\$%^&*()-= ` _ +|~[]{};:~"./;<>?. However, "?" is not supported for ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F. If the alias contains a space, enclose the entire alias in double quotes (e.g., -name "123 567").

If this option is omitted, the specification is as follows:

| Storage Device | Specification When This Option Is Omitted |
|--|---|
| ETERNUS DX60/DX80/DX90 ETERNUS DX S2 series ETERNUS DX S3 series ETERNUS DX200F | An alias name is set automatically. |
| ETERNUS DX400 series ETERNUS DX8000 series | An alias name is not set. |

-csv

Displays the created volume number in the CSV format.
if this option is omitted, it is displayed in the table format.

Options of "delete" or "format" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-volume *volume_number*[,*volume_number*,...]

Specify the numbers for the volumes to be deleted or formatted, using either decimal or hexadecimal notation.

If multiple volume numbers are specified, use commas (",") to separate volume numbers. For example, specify volumes 10 and 16 as either "-volume 10,16" in decimal notation or "-volume 0xa,0x10" in hexadecimal notation.

-remote *BOX-ID*

Specify a Box ID for the remote site ETERNUS Disk storage system. Specify it when you display the RAID group information of the remote site ETERNUS Disk storage system.

-remote-volume *volume_number*

Specify the number for the volume to be deleted from the remote site ETERNUS Disk storage system using either a decimal or hexadecimal number. Multiple volume numbers cannot be specified. If multiple volume numbers are specified, only the first one will be used.

Volumes which may be currently used cannot be deleted.

-remote-force

Specify this option to forcibly delete volumes, which may be currently used, from the remote site ETERNUS Disk storage system.

-s

Processing continues without the output of a confirmation message.

Options of "info" or "nomapping" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-volume *volume_number*[,*volume_number*,...]

Specify the numbers for the volumes to be output for which information is to be output, using either decimal or hexadecimal notation.

If multiple volume numbers are specified, use commas (",") to separate volume numbers. For example, specify volumes 10 and 16 as either "-volume 10,16" in decimal notation or "-volume 0xa,0x10" in hexadecimal notation.

If this option is omitted, information will be displayed for all target volumes.

-remote *BOX-ID*

Specify a Box ID for the remote site ETERNUS Disk storage system. Specify it when you display the RAID group information of the remote site ETERNUS Disk storage system.

-CSV

Displays the volume information in the CSV format.

If this option is omitted, it is displayed in the table format.

EXAMPLES

- Creating a volume and displaying the created volume in the table format.

```
> storageadm volume add -ipaddr 1.2.3.4 -size 1024MB -raidgroup 16
<<< Volume ADD >>>
NUMBER
-----
0x0001
-----
INFO:swsag0001:Command terminated normally.
```

- Creating a volume and displaying the created volume in the CSV format.

```
> storageadm volume add -ipaddr 1.2.3.4 -size 1024MB -raidgroup 16 -csv
NUMBER
0x0001
```

- Deleting a volume.

```
> storageadm volume delete -ipaddr 1.2.3.4 -volume 16
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Formatting a volume.

```
> storageadm volume format -ipaddr 1.2.3.4 -volume 16
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Displaying the volume information in the table format.

```
> storageadm volume info -ipaddr 1.2.3.4
<<< Volume Information >>>
NUMBER  NAME      TOTAL_CAPACITY STATUS    TYPE    CONCATENATION  RGNO  ENCRYPT
-----  -
Unknown  0          Available F6427G -          0x0001 -
```

```

0x0001      100      Available SDV      -      0x0000 -
0x0002      425      Available Open    -      0x0002 -
Unknown     1166      Available MVV(G) -      0x0001 -
Unknown     2332      Available MVV(G) 2      0x0001 -
0x0005      150      Available Open    -      0x0002 -
0x0006      4700      Available Open    3      0x0000,0x0002 -
-----

```

INFO:swsag0001:Command terminated normally.

- Displaying the volume information in the CSV format.

```

> storageadm volume info -ipaddr 1.2.3.4 -csv
NUMBER,NAME,TOTAL_CAPACITY,STATUS,TYPE,CONCATENATION,RGNO,ENCRYPT
Unknown,,0,Available,F6427G,-,0x0001,-
0x0001,,100,Available,SDV,-,0x0000,-
0x0002,,425,Available,Open,-,0x0002,-
Unknown,,1166,Available,MVV(G),-,0x0001,-
Unknown,,2332,Available,MVV(G),2,0x0001,-
0x0005,,150,Available,Open,-,0x0002,-
0x0006,,4700,Available,Open,3,"0x0000,0x0002",-
-----

```

- Displaying the unused volume information in the table format.

```

> storageadm volume nomapping -ipaddr 1.2.3.4
<<< Volume Information >>>
NUMBER  NAME      TOTAL_CAPACITY STATUS    TYPE    CONCATENATION  RGNO    ENCRYPT
-----
Unknown      0          Available F6427G -      0x0001 -
0x0001      100        Available SDV      -      0x0000 -
0x0002      425        Available Open    -      0x0002 -
Unknown     1166       Available MVV(G) -      0x0001 -
Unknown     2332       Available MVV(G) 2      0x0001 -
0x0005      150        Available Open    -      0x0002 -
0x0006      4700       Available Open    3      0x0000,0x0002 -
-----

```

INFO:swsag0001:Command terminated normally.

- Displaying the unused volume information in the CSV format.

```

> storageadm volume nomapping -ipaddr 1.2.3.4 -csv
NUMBER,NAME,TOTAL_CAPACITY,STATUS,TYPE,CONCATENATION,RGNO,ENCRYPT
Unknown,,0,Available,F6427G,-,0x0001,-
0x0001,,100,Available,SDV,-,0x0000,-
0x0002,,425,Available,Open,-,0x0002,-
Unknown,,1166,Available,MVV(G),-,0x0001,-
Unknown,,2332,Available,MVV(G),2,0x0001,-
0x0005,,150,Available,Open,-,0x0002,-
0x0006,,4700,Available,Open,3,"0x0000,0x0002",-
-----

```

NOTES

- Only open volumes can be created.
- The volumes that are created are formatted automatically.
- The message below will be output if the -s option is not specified when either the "delete" operand or the "format" operand is specified. Enter "y" to continue or "n" to cancel.
This message can be suppressed by specifying the -s option.

```
Are you sure? [y/n]:
```

- Volumes cannot be deleted by specifying the volume numbers for volumes that are not open volumes.
- Volumes cannot be deleted by specifying the volume numbers for LUN concatenated volumes.

- Volumes that have been mapped to an affinity group cannot be deleted.
- The Thin Provisioning Volume is not able to create. However, it possible to remove.
- You can use the `-remote`, the `-remote-volume` and the `-remote-force` options only when using the Dynamic LUN Mirroring function of ServerView Resource Orchestrator.
- Temporary volumes are displayed as unknown volumes.
- You cannot create a new volume from RAID group with temporary volumes.
- You cannot delete temporary volumes.
- You cannot create, delete, or format Wide Striping Volumes.
- You cannot create, delete, format, or display ODX Buffer Volumes.
- NAS Volumes will be displayed but will not be distinguished from other volumes. Confirm the NAS volumes by using the Web Console.
- A NAS volume on which a shared folder exists cannot be deleted.
- A NAS backup volume that is mounted cannot be deleted.
- Although NAS volumes and NAS backup volumes can be formatted, do not perform this process other than for the purpose of recovery when a volume malfunctions.
- A NAS system volume cannot be deleted or formatted.
- Extreme Cache Pool volumes cannot be created, deleted or formatted.
- System volumes used with Deduplication cannot be deleted.
- You cannot operate Virtual Volumes. However, as an exception, Virtual Volumes with an "Unknown" WVOL type can be deleted. When deleting multiple Virtual Volumes, each one must be deleted individually since a batch delete is not possible.

13.1.2.4 storageadm affinity (AffinityGroup Management Command)

NAME

storageadm affinity - Manages affinity groups

SYNOPSIS

```
storageadm affinity add -ipaddr ipaddr -volume volume_number[,volume_number,...] [-lun LUN_number] [-affinitygroup affinitygroup_number] [-name alias_name] [-csv]
```

```
storageadm affinity delete -ipaddr ipaddr -affinitygroup affinitygroup_number [-s]
```

```
storageadm affinity update -ipaddr ipaddr -affinitygroup affinitygroup_number {-add -volume volume_number[,volume_number,...] [-lun LUN_number[,LUN_number,...]] | -delete [-volume volume_number[,volume_number,...] | -lun LUN_number[,LUN_number,...]]} [-s]
```

```
storageadm affinity info -ipaddr ipaddr [-affinitygroup affinitygroup_number] [-csv]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm affinity
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm affinity
```


DESCRIPTION

This command is used to create/delete/modify/display affinity groups in the ETERNUS Disk storage system that is registered with this software.

OPERANDS

add

Creates an affinity group.

delete

Deletes an affinity group.

update

Updates the configuration of an affinity group.

info

Displays the affinity group information.

OPTIONS

Options of "add" Operand

`-ipaddr ipaddr`

Specify the IP address of the storage device.

`-volume volume_number[,volume_number,...]`

Specify the numbers of the volumes to be set to an affinity group, using either decimal or hexadecimal notation.

If multiple volume numbers are specified, use commas (",") to separate volume numbers. For example, specify volumes 16, 17 and 18 as either "-volume 16,17,18" in decimal notation or "-volume 0x10,0x11,0x12" in hexadecimal notation.

`-lun LUN_number,...`

Specify the LUN number to be allocated to the volume, using either decimal or hexadecimal notation. The number of LUN numbers specified must be the same as the number of volumes specified using the `-volume` option, and the LUN numbers must also be listed in the same order as their corresponding volume numbers.

If multiple LUN numbers are specified, use commas (",") to separate LUN numbers. For example, specify LUN numbers 16, 17 and 18 as either "-lun 16,17,18" in decimal notation or "-lun 0x10,0x11,0x12" in hexadecimal notation.

If this option is omitted, LUN numbers will be allocated in order, starting from 0.

`-affinitygroup affinitygroup_number`

Specify the affinity group number to be created, using either decimal or hexadecimal notation. For example, specify affinity group number 16 as either "-affinitygroup 16" in decimal or "-affinitygroup 0x10" in hexadecimal.

If this option is omitted, the affinity group numbers that can be created within the target storage device will be allocated automatically.

`-name alias_name`

Specify an alias for the AffinityGroup to be created.

Only alphanumeric characters (a to z, A to Z and 0 to 9) and the following symbols can be used for aliases: !@#\$%^&*()-= ` _ +|~[]{}:;"./<>?. However, "?" is not supported for ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F. If the alias contains a space, enclose the entire alias in double quotes (e.g., `-name "123 567"`).

This option must be specified for ETERNUS DX60/DX60 S2/DX80/DX90.

This option can be omitted for ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F.

If this option is omitted for ETERNUS DX400 series and DX8000 series, alias names are not set.

If this option is omitted for ETERNUS DX S2 series (DX60 S2 excluded), DX S3 series, ETERNUS DX200F, alias names are set automatically.

-csv

Displays the created affinity group number in the CSV format.
If this option is omitted, it is displayed in the table format.

Options of "delete" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-affinitygroup *affinitygroup_number*

Specify the number of the affinity group to be deleted, using either decimal or hexadecimal notation. For example, specify affinity group number 16 as either "-affinitygroup 16" in decimal or "-affinitygroup 0x10" in hexadecimal.

-s

Processing continues without the output of a confirmation message.

Options of "update" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-affinitygroup *affinitygroup_number*

Specify the number of the affinity group whose configuration is to be changed, using either decimal or hexadecimal notation. For example, specify affinity group number 16 as either "-affinitygroup 16" in decimal or "-affinitygroup 0x10" in hexadecimal.

-add

Adds volumes in the affinity group.

When the number for the allocated volume/LUN is specified, this command terminates abnormally.

-delete

Deletes volumes from an affinity group.

The command will terminate abnormally if a volume number or LUN number of a volume that has not been mapped is specified, or if deleting the specified mapping will mean that there are no more mappings.

-volume *volume_number*[,*volume_number*,...]

Specify the volume number of the volume to be added to or deleted from an affinity group, using either decimal or hexadecimal notation.

If multiple volume numbers are specified, use commas (",") to separate volume numbers. For example, specify volumes 16, 17 and 18 as either "-volume 16,17,18" in decimal notation or "-volume 0x10,0x11,0x12" in hexadecimal notation.

This option cannot be specified together with the -lun option when deleting volumes from an affinity group. Delete volumes by specifying either this option or the -lun option, not both together.

-lun *LUN_number*[,*LUN_number*,...]

Specify the LUN number to be allocated to a volume or released from a volume, using either decimal or hexadecimal notation. The number of LUN numbers specified must be the same as the number of volumes specified using the -volume option, and the LUN numbers must also be listed in the same order as their corresponding volume numbers.

If multiple LUN numbers are specified, use commas (",") to separate LUN numbers. For example, specify LUN numbers 16, 17 and 18 as either "-lun 16,17,18" in decimal notation or "-lun 0x10,0x11,0x12" in hexadecimal notation.

If this option is omitted when LUN numbers are being allocated, LUN numbers will be automatically allocated, starting with the smallest free LUN number.

When LUN numbers are being released from volumes, this option cannot be specified together with the -volume option. Release LUN numbers by specifying either this option or the -volume option, but not both together.

-s

Processing continues without the output of a confirmation message.

Options of "info" Operand

`-ipaddr ipaddr`

Specify the IP address of the storage device.

`-affinitygroup affinitygroup_number`

Specify the number of the affinity group for which detailed information is to be displayed, using either decimal or hexadecimal notation. For example, specify affinity group number 16 as either "-affinitygroup 16" in decimal or "-affinitygroup 0x10" in hexadecimal.

If this option is omitted, a list of affinity groups will be displayed.

`-CSV`

Displays the affinity group information in the CSV format.

If this option is omitted, it is displayed in the table format.

EXAMPLES

- Creating an affinity group and displaying the created affinity group in the table format.

```
> storageadm affinity add -ipaddr 1.2.3.4 -volume 16,17,18 -lun 0,1,2 -affinitygroup 16
<<< AffinityGroup ADD >>>
NUMBER
-----
0x0010
-----
INFO:swsag0001:Command terminated normally.
```

- Creating an affinity group and displaying the created affinity group in the CSV format.

```
> storageadm affinity add -ipaddr 1.2.3.4 -volume 16,17,18 -lun 0,1,2 -affinitygroup 16 -csv
NUMBER
0x0010
```

- Deleting an affinity group.

```
> storageadm affinity delete -ipaddr 1.2.3.4 -affinitygroup 16
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Adding a LUN in the affinity group.

```
> storageadm affinity update -ipaddr 1.2.3.4 -affinitygroup 16 -add -volume 19 -lun 3
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Deleting a LUN from the affinity group.

```
> storageadm affinity update -ipaddr 1.2.3.4 -affinitygroup 16 -delete -volume 19
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Displaying the affinity group lists in the table format.

```
> storageadm affinity info -ipaddr 1.2.3.4
<<< AffinityGroup Information >>>
NUMBER NAME
-----
0x0000 AG00
0x0001 AG01
0x0002 AG02
0x0003 AG03
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the affinity group lists in the CSV format.

```
> storageadm affinity info -ipaddr 1.2.3.4 -csv
NUMBER,NAME
0x0000,AG00
0x0001,AG01
0x0002,AG02
0x0003,AG03
```

- Displaying the affinity group detail information (mapping) in the table format.

```
> storageadm affinity info -ipaddr 1.2.3.4 -affinitygroup 16
<<< AffinityGroup Information >>>
NUMBER NAME          LUN    VOLUME  VOLUME NAME
-----
0x0010 abcd           0x0000 0x0001  sample
                        0x0002 0x0004
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the affinity group detail information (mapping) in the CSV format.

```
> storageadm affinity info -ipaddr 1.2.3.4 -affinitygroup 16 -csv
NUMBER,NAME,LUN,VOLUME,VOLUME NAME
0x0010,abcd,0x0000,0x0001,sample
0x0010,abcd,0x0002,0x0004,
```

- Displaying the linked affinity group detail information (mapping) in the table format.

```
> storageadm affinity info -ipaddr 1.2.3.4 -affinitygroup 16
<<< AffinityGroup Information >>>
NUMBER NAME          LUN    VOLUME  VOLUME NAME
-----
0x0010,0x011 abcd    0x0000 0x0001  sample
                        0x0002 0x0004
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the linked affinity group detail information (mapping) in the CSV format.

```
> storageadm affinity info -ipaddr 1.2.3.4 -affinitygroup 16 -csv
NUMBER,NAME,LUN,VOLUME,VOLUME NAME
"0x0010,0x011",abcd,0x0000,0x0001,sample
"0x0010,0x011",abcd,0x0002,0x0004,
```

NOTES

- The message below will be output if the -s option is not specified when either the "delete" operand or the "update" operand is specified. Enter "y" to continue or "n" to cancel. This message can be suppressed by specifying the -s option.

```
Are you sure? [y/n]:
```

- The command will terminate abnormally if the -delete option is specified with the "update" operand in such a way that there are no items of mapping information for the affinity group.
- The command will terminate abnormally if the "add" operand or the "update" operand contains the number of a volume that cannot be set to an affinity group, such as:
 - Volume Numbers that does not exist in the storage device
 - Volume Numbers that is not open
 - Volume Numbers of LUN concatenated volume
 - Volume Numbers of ODX Buffer Volume

- Volume Numbers of NAS volumes
- Volume Numbers of Extreme Cache Pool Volumes
- Volume Numbers for System Volumes used with Deduplication
- To display a concatenated affinity group when the "info" operand is specified, specify the concatenated source affinity group in the -affinitygroup option.

13.1.2.5 storageadm ecomode (Eco-mode Management Command)

NAME

storageadm ecomode - Operates the Eco-mode

SYNOPSIS

```
storageadm ecomode on -ipaddr ipaddr
storageadm ecomode off -ipaddr ipaddr [-s]
storageadm ecomode info -ipaddr ipaddr [-csv]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm ecomode
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm ecomode
```

DESCRIPTION

This command toggles and displays Eco-mode information for ETERNUS Disk storage systems registered with this product.

OPERANDS

on

Sets the Eco-mode to ON.

off

Sets the Eco-mode to OFF.

info

Displays the Eco-mode status.

OPTIONS

Options of "on" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

Options of "off" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-s

Continues processing without asking for confirmation.

Options of "info" Operand

`-ipaddr ipaddr`

Specify the IP address of the storage device.

`-csv`

Displays the Eco-mode status of the ETERNUS Disk storage system in the CSV format. if this option is omitted, it is displayed in the table format.

EXAMPLES

- Setting the Eco-mode to ON:

```
> storageadm ecomode on -ipaddr 1.2.3.4
INFO:swsag0001:Command terminated normally.
```

- Setting the Eco-mode to OFF:

```
> storageadm ecomode off -ipaddr 1.2.3.4
Are you sure? [y/n]:y
INFO:swsag0001:Command terminated normally.
```

- Displaying the Eco-mode information:

```
> storageadm ecomode info -ipaddr 1.2.3.4

<<< EcoMode Information>>
STATUS
-----
ON
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the Eco-mode information in CSV format:

```
> storageadm ecomode info -ipaddr 1.2.3.4 -csv
STATUS
ON
```

NOTES

- If the "off" operand is specified without the `-s` option, then the following message is displayed:
Enter "y" to continue or "n" to cancel.
This message can be suppressed by specifying the `-s` option.

```
Are you sure? [y/n]:
```

- If the device Eco-mode settings are as follows, the command terminates with an error:
 - The processing to switch Eco-mode on is executed when the Eco-mode is already on.

13.1.2.6 storageadm port (Port Management Command)

NAME

`storageadm port` - Collects a list of port information

SYNOPSIS

```
storageadm port info -ipaddr ipaddr [-tfo] [-csv]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm port
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm port
```

DESCRIPTION

This command displays the port information of the ETERNUS Disk storage systems registered with this software.

OPERANDS

info

Displays a list of port information.

OPTIONS

Options of "info" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-tfo

Additionally output the following items regarding Storage Cluster:

- Response address

- TFO status

-csv

Displays the port information in the CSV format.

If this option is omitted, it is displayed in the table format.

EXAMPLES

- Displaying port information in table format.

```
# /opt/FJSVssmgr/sbin/storageadm port info -ipaddr 1.2.3.4
<<< port Information >>>
PORT PORT NAME      STATUS    TYPE      AFFINITY  PORT ADDRESS  SUPPLEMENT
ID                                             INFORMATION
-----
000  CM0CA0Port0  Online   FC-CA    On        1234567890ABCDEE -
001  CM0CA0Port1  Online   FC-CA    On        1234567890ABCDEF -
100  CM1CA0Port0  Online   iSCSI-CA On        192.168.1.1   iqn.iscsi.name
101  CM1CA0Port1  Online   iSCSI-CA On        192.168.1.2   iqn.iscsi.name
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying port information in CSV format.

```
# /opt/FJSVssmgr/sbin/storageadm port info -ipaddr 1.2.3.4 -csv
PORT ID,PORT NAME,STATUS,TYPE,AFFINITY,PORT ADDRESS,SUPPLEMENT INFORMATION
000,CM0CA0Port0,Online,FC-CA,On,1234567890ABCDEE,-
001,CM0CA0Port1,Online,FC-CA,On,1234567890ABCDEF,-
100,CM1CA0Port0,Online,iSCSI-CA,On,192.168.1.1,iqn.iscsi.name
101,CM1CA0Port1,Online,iSCSI-CA,On,192.168.1.2,iqn.iscsi.name
```

- Displaying port information including Storage Cluster information in table format:

```
> storageadm port info -ipaddr 1.2.3.4 -tfo
<<< port Information >>>
PORT PORT NAME STATUS TYPE AFFINITY PORT ADDRESS SUPPLEMENT TFO ADDRESS
TFO STATUS
ID INFORMATION
-----
000 CM0CA0Port0 Online FC-CA On 1234567890ABCDEE - 1234567890ABCDEE
Active
001 CM0CA0Port1 Online FC-CA On 1234567890ABCDEF - -
100 CM1CA0Port0 Online iSCSI-CA On 192.168.1.1 iqn.iscsi.name - -
101 CM1CA0Port1 Online iSCSI-CA On 192.168.1.2 iqn.iscsi.name - -
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying port information including Storage Cluster information in CSV format.

```
> storageadm port info -ipaddr 1.2.3.4 -tfo -csv
PORT ID,PORT NAME,STATUS,TYPE,AFFINITY,PORT ADDRESS,SUPPLEMENT INFORMATION,TFO ADDRESS,TFO STATUS
000,CM0CA0Port0,Online,FC-CA,On,1234567890ABCDEE,-,1234567890ABCDEE,Active
001,CM0CA0Port1,Online,FC-CA,On,1234567890ABCDEF,-,-,-
100,CM1CA0Port0,Online,iSCSI-CA,On,192.168.1.1,iqn.iscsi.name,-,-,-
101,CM1CA0Port1,Online,iSCSI-CA,On,192.168.1.2,iqn.iscsi.name,-,-,-
```

NOTES

- SAS port information is not displayed.
- For SAS model devices of an ETERNUS DX60/DX60 S2/DX80, the command will end in an error.

13.1.2.7 storageadm iscsiport (iSCSI Port Management Command)

NAME

storageadm iscsiport - Operates iSCSI ports

SYNOPSIS

```
storageadm iscsiport set -ipaddr ipaddr -port portID {[-portipaddr port_ipaddr] [-netmask
port_netmask] [-gateway gateway_ipaddr] [-isns iSNS_server_ipaddr] [-iscsi iSCSI name] [-alias alias]
[-affinity {on | off}] [-ipv4 {on | off}] [-ipv6localip local_ipaddr] [-ipv6connip connect_ipaddr] [-
ipv6gateway v6gateway_ipaddr] [-ipv6 {on | off}]} [-s]

storageadm iscsiport info -ipaddr ipaddr [-port portID [-expand]] [-csv]

storageadm iscsiport ping -ipaddr ipaddr -port portID -target target_ipaddr [-count ping_count] [-csv]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm iscsiport
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm iscsiport
```


DESCRIPTION

This command displays the iSCSI port settings and information of the ETERNUS Disk storage systems registered with this software.

Specify the storage device IP address and the iSCSI port setting information in the command parameters in order to set the iSCSI port settings and to display the set iSCSI port information and the IP reachability status of the iSCSI network to which the storage device is connected.

OPERANDS

set

Sets iSCSI port information.

info

Displays a list of iSCSI port information.

If -port is specified, detailed information concerning the specified iSCSI port is displayed.

If both -port option and -expand option are specified at the same time, the extended information for iSCSI port is displayed.

ping

Issues a ping to check the IP reachability status of the iSCSI network to which the storage device is connected and displays the result.

OPTIONS

Options of "set" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-port *portID*

Specify the port ID of the iSCSI port.

For ETERNUS DX60/DX60 S2/DX80/DX90, the port ID is the CM number and the port number entered, and for ETERNUS DX400 series, DX8000 series, DX S2 series (DX60 S2 excluded), DX S3 series (DX8000 S3 series excluded), ETERNUS DX200F, the port ID is the CM number, the CA number and the port number entered. For ETERNUS DX8000 S3 series, the port ID is the CE number (uppercase hexadecimal), the CM number, the CA number and the port number entered.

-portipaddr *port_ipaddr*

Specify the IP address of the iSCSI port.

-netmask *port_netmask*

Specify the subnet mask of the iSCSI port.

-gateway *gateway_ipaddr*

Specify the IP address of the gateway server for the iSCSI port.

Specify the following if delete the gateway server setting.

```
-gateway " "
```

-isns *iSNS_server_ipaddr*

Specify the IP address of the iSNS server for the iSCSI port.

Specify the following if delete the iSNS server settings.

```
-isns " "
```

If IPv4 configuration for the iSCSI port is invalid, IPv4 address cannot be specified.

If IPv6 configuration for the iSCSI port is invalid, IPv6 address cannot be specified.

-iscsi *iSCSI_name*

Specify the iSCSI name of the iSCSI port.

Specify the following if you want to set default iSCSI name.

```
-iscsi ""
```

-alias *alias_name*

Specify the alias of the iSCSI port.

-affinity {on | off}

Specify the security setting for the iSCSI port. If set to ON, specify as "-affinity on". If set to OFF, specify as "-affinity off".

-ipv4 {on | off}

Specify IPv4 setting for the iSCSI port. To enable IPv4 setting, specify "-ipv4 on" and to disable it, specify "-ipv4 off". If "-ipv4 off" is specified, IP address, subnet mask and gateway server settings are all deleted from the iSCSI port.

"-ipv4 off" cannot be specified together with the following options and their values:

- -portipaddr
- -netmask
- -gateway
- -ipv6 off

-ipv6localip *local_ipaddr*

Set the IPv6 link local address of the iSCSI port.

-ipv6connip *connect_ipaddr*

Specify the IPv6 connection IP address of the iSCSI port.

When deleting the IPv6 connection IP address setting, specify as below:

```
-ipv6connip ""
```

-ipv6gateway *v6gateway_ipaddr*

Specify the IPv6 gateway address of the iSCSI port.

When deleting the IPv6 gateway address setting, specify as below:

```
-ipv6gateway ""
```

-ipv6 {on | off}

Specify IPv6 settings of the iSCSI port. To enable IPv6 settings, specify "-ipv6 on" and to disable it, specify "-ipv6 off". If "-ipv6 off" is specified, IPv6 link local address, IPv6 connected IP address and IPv6 gateway address settings are all deleted from the iSCSI port.

"-ipv6 off" cannot be specified together with the following options and their values:

- -ipv6localip
- -ipv6connip
- -ipv6gateway
- -ipv4 off

-s

Causes processing to continue without output of a confirmation message.

Options of "info" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-port *port ID*

Displays detailed information concerning the iSCSI ports. If this option is omitted, a list of iSCSI ports is displayed.

For ETERNUS DX60/DX60 S2/DX80/DX90, the port ID is the CM number and the port number entered, and for ETERNUS DX400 series, DX8000 series, DX S2 series (DX60 S2 excluded), DX S3 series (DX8000 S3 series excluded), ETERNUS DX200F, the port ID is the CM number, the CA number and the port number entered. For ETERNUS DX8000 S3 series, the port ID is the CE number (uppercase hexadecimal), the CM number, the CA number and the port number entered.

-csv

Displays the port information in the CSV format.

If this option is omitted, it is displayed in the table format.

-expand

Add the following to iSCSI port information to display:

- IPv6 link local address
- IPv6 connection IP address
- IPv6 gateway

Added information depends on the version of the ETERNUS SF system. Upgrading the version of the ETERNUS SF system may increase displayed information.

This option can be specified only when the -port option is specified.

Options of "ping" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-port *port ID*

Specify the port ID of the iSCSI port.

For ETERNUS DX60/DX60 S2/DX80/DX90, the port ID is the CM number and the port number entered, and for ETERNUS DX400 series, DX8000 series, DX S2 series (DX60 S2 excluded), DX S3 series (DX8000 S3 series excluded), ETERNUS DX200F, the port ID is the CM number, the CA number and the port number entered. For ETERNUS DX8000 S3 series, the port ID is the CE number (uppercase hexadecimal), the CM number, the CA number and the port number entered.

-target *target_ipaddr*

Specify the IP address of the server that checks the IP reachability status.

-count *ping_count*

Specify a value between 1 and 10 for the number of pings issued to check the IP reachability status. A failure will be displayed if an error response is returned at least once. A success will be displayed if normal responses are returned for all pings.

If this option is omitted, the ping execution count is 1.

-csv

Displays the port information in the CSV format.

If this option is omitted, it is displayed in the table format.

EXAMPLES

- Setting iSCSI port information.

```
> storageadm iscsiport set -ipaddr 1.2.3.4 -port 000 -portipaddr 172.16.4.1
Are you sure? [y/n]: y
INFO:swsag0001:Command terminated normally.
```

- Displaying a list of iSCSI port information in table format.

```
> storageadm iscsiport info -ipaddr 1.2.3.4
<<< iSCSI Port Information >>>
PORT NAME          STATUS TYPE      AFFINITY ISCSI NAME          IP ADDRESS
```

```

ID
-----
00  CM0Port0    Online iSCSI-CA On      iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029
172.16.4.38
01  CM0Port1    Online iSCSI-CA Off      iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029
172.16.4.39
10  CM1Port0    Online iSCSI-CA On      iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029
172.16.4.40
11  CM1Port1    Online iSCSI-CA On      iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029
172.16.4.41
-----

```

INFO:swsag0001:Command terminated normally.

- Displaying a list of iSCSI port information in CSV format.

```

> storageadm iscsiport info -ipaddr 1.2.3.4 -csv
PORT ID,NAME,STATUS,TYPE,AFFINITY,ISCSI NAME,IP ADDRESS
00,CM0Port0,Online,iSCSI-CA,On,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,172.16.4.38
01,CM0Port1,Online,iSCSI-CA,Off,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,172.16.4.39
10,CM1Port0,Online,iSCSI-CA,On,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,172.16.4.40
11,CM1Port1,Online,iSCSI-CA,On,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,172.16.4.41

```

- Displaying detailed iSCSI port information in table format.

```

> storageadm iscsiport info -ipaddr 1.2.3.4 -port 00
<<< iSCSI Port Information >>>
PORT NAME          TYPE      IP ADDRESS      SUBNET          GATEWAY          ISNS   ISNS SERVER
ISCSI NAME ALIAS NAME TRANSFER BANDWIDTH MTU  AFFINITY HOST      HOST      HOST      RESET RESERVE
ID                                     MASK
ADDRESS                                     RATE      LIMIT      SIZE MODE      RESPONSE  RESPONSE  SPECIFIC
SCOPE CANCEL AT

                                     NUMBER      NAME      MODE      CHIP RESET
-----
-----
00  CM0Port0    iSCSI-CA 172.16.4.38    255.255.255.0  172.16.4.1     Off    -
iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029 cm0port0 Auto - - Off 0x000F hresp00F
Normal Mode I_T_L Off
-----
-----

```

INFO:swsag0001:Command terminated normally.

- Displaying detailed iSCSI port information in CSV format.

```

> storageadm iscsiport info -ipaddr 1.2.3.4 -port 00 -csv
PORT ID,NAME,TYPE,IP ADDRESS,SUBNET MASK,GATEWAY,ISNS SERVER,ISNS SERVER IP ADDRESS,ISCSI
NAME,ALIAS NAME,TRANSFER RATE,BANDWIDTH LIMIT,MTU SIZE,AFFINITY MODE,HOST RESPONSE NUMBER,HOST
RESPONSE NAME,HOST SPECIFIC MODE,RESET SCOPE,RESERVE CANCEL AT CHIP RESET
00,CM0Port0,iSCSI-CA,172.16.4.38,255.255.255.0,172.16.4.1,Off,-,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,cm0port0,Auto,-,-,Off,0x000F,hresp00F,Normal Mode,I_T_L,Off

```

- Displaying detailed iSCSI port information in table format including additional information.

```

> storageadm iscsiport info -ipaddr 1.2.3.4 -port 00 -expand
<<< iSCSI Port Information >>>
PORT NAME          TYPE      IP ADDRESS      SUBNET          GATEWAY          ISNS   ISNS SERVER
ISCSI NAME ALIAS NAME TRANSFER BANDWIDTH MTU  AFFINITY HOST      HOST      HOST      RESET RESERVE

```

```

LINK LOCAL IP ADDRESS          CONNECT IP ADDRESS          IPV6 GATEWAY
ADDRESS

ID                               MASK                          SERVER IP
ADDRESS                          RATE        LIMIT        SIZE MODE    RESPONSE    RESPONSE    SPECIFIC
SCOPE CANCEL AT

                                NUMBER        NAME          MODE          CHIP RESET
-----
00  CM0Port0    iSCSI-CA 172.16.4.38      255.255.255.0    172.16.4.1      Off      -
iqn.2000-09.com.fujitsu:storage-system.e2000:0000000029 cm0port0 Auto - - Off 0x000F hresp00F
Normal Mode I_T_L Off fe80::128c:24d8:3016:250a:56ff:fe67:a524
2001:100a:ab13:cd24:ef3f:db72:fe11:cd21 2001:1101:cfcl:b4d2:ef73:3f9c:2d11:ca34
-----
INFO:swsag0001:Command terminated normally.

```

- Displaying detailed iSCSI port information in CSV format including additional information.

```

> storageadm iscsiport info -ipaddr 1.2.3.4 -port 00 -expand -csv
PORT ID,NAME,TYPE,IP ADDRESS,SUBNET MASK,GATEWAY,ISNS SERVER,ISNS SERVER IP ADDRESS,ISCSI
NAME,ALIAS NAME,TRANSFER RATE,BANDWIDTH LIMIT,MTU SIZE,AFFINITY MODE,HOST RESPONSE NUMBER,HOST
RESPONSE NAME,HOST SPECIFIC MODE,RESET SCOPE,RESERVE CANCEL AT CHIP RESET,LINK LOCAL IP
ADDRESS,CONNECT IP ADDRESS,IPV6 GATEWAY ADDRESS
00,CM0Port0,iSCSI-CA,172.16.4.38,255.255.255.0,172.16.4.1,Off,-,iqn.2000-09.com.fujitsu:storage-
system.e2000:0000000029,cm0port0,Auto,-,-,Off,0x000F,hresp00F,Normal Mode,I_T_L,Off,fe80::128c:
24d8:3016:250a:
56ff:fe67:a524,2001:100a:ab13:cd24:ef3f:db72:fe11:cd21,2001:1101:cfcl:b4d2:ef73:3f9c:2d11:ca34

```

- Displaying the IP reachability status of the iSCSI network in table format.

```

> storageadm iscsiport ping -ipaddr 1.2.3.4 -port 00 -target 172.16.4.1
<<iSCSI Port Ping Status>>
PORT NAME          TARGET IP          RESULT
ID                ADDRESS
-----
000  CM0CA0Port0 172.16.4.38      Success
-----
INFO:swsag0001:Command terminated normally.

```

- Displaying the IP reachability status of the iSCSI network in CSV format.

```

> storageadm iscsiport ping -ipaddr 1.2.3.4 -port 00 -target 172.16.4.1 -csv
PORT ID,NAME,TARGET IP ADDRESS,RESULT
000,CM0CA0Port0,172.16.4.38,Success

```

NOTES

- The message below is displayed when the "set" operand is specified. Enter "y" to continue, or "n" to cancel. Note that this message is not displayed if the -s option is specified.

```
Are you sure? [y/n]:
```

- If you set BS2000 Mode to Host Specific Mode of Host Response when the iSCSI port is displayed in detail, it is displayed as "Normal Mode" to HOST SPECIFIC MODE.
- The IP address, link local IP address, connection IP address, iSCSI name, and iSCSI alias name of the iSCSI port might not be able to be registered by duplicating with other iSCSI port settings. Refer to [Note] in "[6.1.5 Connectivity Management](#)" for details.

13.1.2.8 storageadm progress (Progress Display Command)

NAME

storageadm progress - Displays progress information

SYNOPSIS

```
storageadm progress volumeformat -ipaddr ipaddr { [-volume volume_number[,volume_number...]] | [-all] } [-csv]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm progress
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm progress
```

DESCRIPTION

This command displays progress information concerning the formatting of volumes on ETERNUS Disk storage systems registered with this software.

Specify the storage device IP address and the volume number in the command parameters in order to display volume formatting progress information.

OPERANDS

volumeformat

Displays the formatting progress.

OPTIONS

Options of "volumeformat" Operand

-ipaddr *ipaddr*

Specify the storage device IP address.

-volume *volume number*[,*volume number*,...]

Specify the numbers for the volumes to be output, using either decimal or hexadecimal notation.

If multiple volume numbers are specified, use commas (",") to separate volume numbers. For example, specify volumes 10 and 16 as either "-volume 10,16" in decimal notation or "-volume 0xa,0x10" in hexadecimal notation.

This displays formatting progress information (including format completion and formatting not yet being implemented) concerning the specified volume.

An error does not occur if the specified volume does not exist, but information is not displayed for that volume.

If this is omitted, progress information is displayed for all volumes for which formatting is in progress. However, if the **-all** option is specified, the progress information will include volumes not currently being formatted (formatting completed or not yet implemented).

This option cannot be specified at the same time as the **-all** option.

-all

Includes information concerning volumes not currently being formatted (formatting completed or not yet implemented) in the display.

If this option is omitted, progress information is displayed only for volumes for which formatting is in progress.

This option cannot be specified at the same time as the **-volume** option.

-CSV

This option displays the formatting progress information in the CSV format.
If this option is omitted, it is displayed in the table format.

The table below shows the contents displayed when different combinations of -volume and -all options are specified.

| -volume Option | -all Option | |
|----------------|---|--|
| | Specified | Not Specified |
| Specified | (Cannot be specified.) | The display target is the specified volume, and volumes for which formatting is completed or not yet executed are included in the display. |
| Not specified | The display target is all volumes on the device, and volumes for which formatting is completed or not yet executed are included in the display. | The display target is all volumes on the device, but the display includes only the volumes for which formatting is in progress. |

EXAMPLES

- Displaying the formatting progress information for all volumes in table format.

```
> storageadm progress volumeformat -ipaddr 1.2.3.4 -all
<<< Volume Format Progress Information >>>
NUMBER  NAME           TYPE  STATUS          PROGRESS
-----
0x0000  Volume0x0000   Open  Available       100
0x0001                Open  Available       70
0x0002                Open  Readyng         0
0x0003                Open  Available       -
0x0004                SDV   Available      100
0x0005                SDPV  Available      100
-----
INFO:swsag0001:Command terminated normally.
```

- Displaying the formatting progress information for all volumes in CSV format.

```
> storageadm progress volumeformat -ipaddr 1.2.3.4 -all -csv
NUMBER,NAME,TYPE,STATUS,PROGRESS
0x0000,Volume0x0000,Open,Available,100
0x0001,,Open,Available,70
0x0002,,Open,Readyng,0
0x0003,,Open,Available,-
0x0004,,SDV,Available,100
0x0005,,SDPV,Available,100
```

NOTES

- Formatting progress information is displayed for open volumes, SDV volumes, and SDPV volumes, but is not displayed for other volumes.
- If volume formatting fails, the "STATUS" field is as shown below, and 0 to 100 is displayed as the "PROGRESS" field.
 - Broken
 - Data Lost
 - Not Ready
- ODX Buffer Volumes are not displayed.

13.1.2.9 storageadm perfctl (Performance Monitoring Command)

NAME

storageadm perfctl - Performs monitoring operations

SYNOPSIS

```
storageadm perfctl start -ipaddr ipaddr [-interval time]
```

```
storageadm perfctl stop -ipaddr ipaddr
```

```
storageadm perfctl status -ipaddr ipaddr
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm perfctl
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm perfctl
```

DESCRIPTION

This command starts and stops performance monitoring for the NetApp FAS Series and displays the performance monitoring status.

OPERANDS

start

Starts performance monitoring.

stop

Stops performance monitoring.

status

Displays the performance monitoring status.

OPTIONS

Options of "start" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-interval *time*

Specify either 10, 30, 60, or 300 (seconds unit) as the performance monitoring interval.

If a value other than 10, 30, 60, or 300 is set, the actual interval is set according to the table below (an error will occur if it is set to a negative value or a value greater than or equal to 2147483648):

| Specified Value | Monitoring Interval (in secs) |
|------------------------|-------------------------------|
| <i>time</i> = 0 | 30 |
| 0 < <i>time</i> <= 10 | 10 |
| 10 < <i>time</i> <= 30 | 30 |
| 30 < <i>time</i> <= 60 | 60 |
| 60 < <i>time</i> | 300 |

If this option is omitted, monitoring is performed at 30 second intervals.

Options of "stop" Operand

`-ipaddr ipaddr`

Specify the IP address of the storage device.

Options of "status" Operand

`-ipaddr ipaddr`

Specify the IP address of the storage device.

EXAMPLES

- Starting performance monitoring at 60-second intervals.

```
> storageadm perfctl start -ipaddr 1.2.3.4 -interval 60
```

- Stopping performance monitoring.

```
> storageadm perfctl stop -ipaddr 1.2.3.4
```

- Displaying the performance monitoring status.

```
> storageadm perfctl status -ipaddr 1.2.3.4
```

```
<<< Performance Monitor Status>>
```

```
DEVICE_NAME(IP_ADDRESS)          STATUS          INTERVAL[SEC]
-----
NR1000F(1.2.3.4)                 Monitoring      60
-----
```

```
INFO:swsag0001:Command terminated normally.
```

The explanation of the information displayed in each field is as follows:

| Title | Explanation |
|-------------------------|--|
| DEVICE_NAME(IP_ADDRESS) | Displays the device name and its IP address. |
| STATUS | Displays the monitoring status. <ul style="list-style-type: none">- "Monitoring": Normal monitoring is in progress.- "Stop": Performance monitoring is stopped.- "Recovering": Retry is in progress, after communication was interrupted or an attempt failed.- "Error": Stopped with an error, after an unsuccessful retry. Collect the information required for troubleshooting and contact Fujitsu Technical Support. Refer to "B.1 Collecting Troubleshooting Information" for details. |
| INTERVAL[sec] | Displays the performance monitoring interval (seconds). |

NOTES

- The NetApp FAS Series must be registered with this product.
- This command does not support NetApp FAS Series (with clustered Data ONTAP).

13.1.2.10 storageadm device (Device Management Command)

NAME

storageadm device - Operation of devices

SYNOPSIS

```
storageadm device unlock -ipaddr ipaddr [-s]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Manager\opt\FJSVssmgr\sbin\storageadm device
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVssmgr/sbin/storageadm device
```

DESCRIPTION

This command unlocks the storage device.

OPERANDS

unlock

Unlocks the storage device.

OPTIONS

Options of "unlock" Operand

-ipaddr *ipaddr*

Specify the IP address of the storage device.

-s

Continues the processing without a confirmation message being output.

EXAMPLES

- Unlock the storage device.

```
> storageadm device unlock -ipaddr 1.2.3.4  
Are you sure? [y/n]: y
```

NOTES

- You can release only locks which are locked by using this software.
- If you release the lock, do not perform other operations by using this software.

13.2 Agent Commands

This section explains command operations on the Managed Server.

13.2.1 setagtip (Agent Information Change Command)

NAME

setagtip - Changes the Storage Cruiser's agent information

SYNOPSIS

```
setagtip [-i ipaddr]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Agent\bin\setagtip
```

(\$INS_DIR means "Program Directory" specified at the Storage Cruiser's agent installation.)

Solaris, Linux, HP-UX, or AIX Environment

```
/opt/FJSVssage/bin/setagtip
```

DESCRIPTION

This command sets Storage Cruiser's agent information.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris, Linux, HP-UX, or AIX environment, only OS administrator (root) user can execute this command.

When you want to change the start IP address of Storage Cruiser's agent or when you want to change the host name, specify the IP address to set information.

OPTIONS

-i ipaddr

Specify the IP address of the server node that can communicate from the Management Server. The start IP address of the Storage Cruiser's agent is set to the specified IP address. Also, a host name corresponding to the specified IP address is set as a host name recognized by Storage Cruiser's agent.

If this option is omitted, the current setting information is displayed.

When specifying IPv6 address, specify a global address.

As for IPv6 address display format, the Web Console displays IP addresses with reference to RFC5952. For this reason, they may be different from those specified by this command.

EXAMPLES

- Displaying the Storage Cruiser's agent information

```
> setagtip
```

- Setting the Storage Cruiser's agent IP address to 10.12.13.14

```
> setagtip -i 10.12.13.14
```

NOTES

If the host name cannot be resolved from the specified IP address, the messages shown below is displayed. Check for an error in the specified IP address or network definition (hosts, DNS, etc.), and re-execute the command.

```
IP Address = IP_address : Host's Name is not found.
```

13.2.2 traptest (SNMP Trap Test for Server Node Agent)

NAME

traptest - tests of SNMP Trap

SYNOPSIS

```
traptest [ipaddr]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Agent\bin\traptest
```

(\$INS_DIR means "Program Directory" specified at the Storage Cruiser's agent installation.)

Solaris, Linux, HP-UX, or AIX Environment

```
/opt/FJSVssage/bin/traptest
```

DESCRIPTION

This command checks whether SNMP Trap is correctly transmitted to the Management Server from a server node agent, display an event, and check the linkage with Shell/Bat. The Centric Manager linkage is not operated by this command.

If the action on SNMP Trap as a test is supposed to be changed, change the SNMP Trap XML definition file (1_3_6_1_4_1_211_4_1_3_21_2_2.xml) for the agent. In SNMP Trap as a test, 1 is used for Specific Trap Type number and the action can be changed by changing the definition of the Specific Trap Type number 1 defined in the SNMP Trap XML definition file. Refer to "[A.5 SNMP Trap XML Definition File](#)" for the SNMP Trap XML definition file.

OPERANDS

ipaddr

Only in the environment where the host holds two or more IP addresses (including loopback IP address, IPv4/IPv6 dual stack), specify a server node's IP address (start IP address of the Storage Cruiser's agent) which the Storage Cruiser's manager recognizes.

When specifying IPv6 address, specify a global address.

As for IPv6 address display format, the Web Console displays IP addresses with reference to RFC5952. For this reason, they may be different from those specified by this command.

OPTIONS

None.

EXAMPLES

- SNMP Trap is transmitted from the server node agent of IP address 11.11.11.11.

```
> traptest 11.11.11.11
```

NOTES

- If the SNMP Trap send destination address is not set to the server node when execute the command, the following results are output.

```
Target Host Nothing
SNMPTrap error
```

- If the server node that input in the command is not registered, re-execute the command after registering the server node.
- Execute the same action in case where the server node is not registered after deletion of the server node.
- The SNMP Trap community name that is issued using this command, is fixed to "public".
- If there is any error in the specified IP address format, the following result is output. Specify a valid IP address to re-execute the action.

```
Invalid parameter: specifiedIpAddress
SNMPTrap error
```

13.2.3 agentsnap (Troubleshooting Information Collection of Agent)

NAME

agentsnap - Collects the troubleshooting information of Agent

SYNOPSIS

Windows Environment

```
agentsnap -dir dirname [-all]
```

Solaris or Linux Environment

```
agentsnap [-dir dirname] [-all]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\Agent\sbin\agentsnap
```

(\$INS_DIR means "Program Directory" specified at the Storage Cruiser's agent installation.)

Solaris or Linux Environment

```
/opt/FJSVssage/sys/agentsnap
```

DESCRIPTION

This command collects the troubleshooting information of the Storage Cruiser's agent.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

Execute this command to collect the troubleshooting information when a problem occurs on the Storage Cruiser's agent, and submit its information to Fujitsu Technical Support.

OPTIONS

-dir *dirname*

Collects the troubleshooting information on *dirname* directory.

In the Windows environment, specify the full path name that starts from the drive letter for *dirname*. The maximum length that can be specified for *dirname* is 100 bytes.

In the Solaris environment, specify the full path name for *dirname*. If this option is omitted, the troubleshooting information is stored on /var/tmp directory.

In the Linux environment, specify the full path name for *dirname*. If this option is omitted, the troubleshooting information is stored on /tmp directory.

The collected information is gathered in the file that its name starts by "agentsnap_". Before executing this command, confirm that *dirname* directory has the following free space.

| Collected Information | Required Free Space |
|-----------------------------------|---------------------|
| Initial investigation information | more than 10MB |
| All troubleshooting information | more than 30MB |

-all

Collects all troubleshooting information on servers. Data includes lots of information, which will increase the size of the data. This option is not necessary for initial investigation.

EXAMPLES

Windows Environment

- Collecting the troubleshooting information for initial investigation on D:\temp directory.

```
> agentsnap -dir D:\temp
```

Solaris or Linux Environment

- Collecting the troubleshooting information for initial investigation.

```
> agentsnap
```

13.2.4 agtpatrol (Monitored Status Display Command)

NAME

agtpatrol - Displays the monitored status of storage devices monitored by Storage Cruiser's agent.

SYNOPSIS

```
agtpatrol
```

COMMAND PATH

Windows Environment

```
$INS_DIR\ESC\Agent\bin\agtpatrol
```

(\$INS_DIR means "Program Directory" specified at the Storage Cruiser's agent installation.)

DESCRIPTION

This command displays the monitored status of storage devices monitored by Storage Cruiser's agent.

In this command, the following can be confirmed while operating the Storage Cluster Controller.

- Whether information on the device specified for the monitoring target is correct or not?
- State of communication between monitored devices and Storage Cluster Controller
- Monitoring interval of monitored devices

OPERANDS

None

OPTIONS

None

Output Information

The information output by this command is as follows:

Table 13.1 Output Information of agtpatrol Command

| Title | Displayed Content |
|------------------|---|
| INTERVAL | Monitoring interval (millisecond) of monitored devices is displayed. |
| TARGET IP | IP address of monitored storage device is displayed. IP address is output in the format described in the definition file (TFOConfig.ini). |
| TARGET TFO GROUP | Information of a monitored TFO Group is output. For details of output information, refer to " Table 13.2 Output Information of TARGET TFO GROUP ". |

The information output in TARGET TFO GROUP is as follows:

Table 13.2 Output Information of TARGET TFO GROUP

| Title | Displayed Content |
|-----------------|--|
| IP ADDRESS | IP address of monitored storage device is displayed. IP address is output in the format described in the definition file (TFOConfig.ini). |
| GROUP NAME | Name of TFO Group is displayed. |
| TYPE | Type of TFO Group is displayed. Primary: Primary TFO Group Secondary: Secondary TFO Group |
| PAIR IP ADDRESS | IP address of the storage device that becomes a pair is displayed. IP address is output in the format described in the definition file (TFOConfig.ini). |
| PAIR GROUP NAME | The name of TFO Group that becomes a pair is displayed. |
| STATUS | Monitored status of TFO Group is displayed. Normal: Monitored status is normal. Unknown: Device information cannot be collected due to disconnected communication pathway. |
| INTERVAL | Monitoring interval (millisecond) set to TFO Group is displayed. Minimum value of this item is a monitoring interval of monitored device. |
| UPDATE TIME | Date and time is displayed when Storage Cluster Controller communicated to storage device last. |

EXAMPLES

Check monitored status.

```
> agtpatrol
```

NOTES

- If no entry of monitored ETERNUS Disk storage systems is output in the command execution result, take the following actions:
 - Check whether Storage Cruiser's agent is started.
If it is stopped, start it.
 - Check whether the monitoring function of Storage Cluster Controller is enabled.
If it is disabled, enable the monitoring function.
 - Check whether the IP address of the ETERNUS Disk storage system listed in the TFOConfig.ini file is correct.
If any error in writing, enter a correct IP address. Restart Storage Cruiser's agent.
 - Check that communication can be done with the ETERNUS Disk storage system listed in the TFOConfig.ini file.
Subsequently, restart Storage Cruiser's agent.
Refer to "[3.1.1 Network Requirements](#)" for network requirements.

13.3 Starting and Stopping Manager

This section explains how to start and stop the Storage Cruiser's manager.

13.3.1 Starting and Stopping Services (Windows Environment)

This sub section explains how to start and stop the Storage Cruiser's manager in the Windows environment.

13.3.1.1 Starting and Stopping SNMP Trap Monitoring Service

- Starting the SNMP Trap monitoring service
 1. Open the **Services** window.
 - For Windows Server 2012
Click **Control Panel > System and Security > Administrative Tools > Services.**
 - For Windows environment other than above
Click **Control Panel > Administrative Tools > Services.**
 2. Select the SNMP Trap monitoring service, and click **Start.**
- Stopping the SNMP Trap monitoring service
 1. Open the **Services** window.
 - For Windows Server 2012
Click **Control Panel > System and Security > Administrative Tools > Services.**
 - For Windows environment other than above
Click **Control Panel > Administrative Tools > Services.**
 2. Select the SNMP Trap monitoring service, and click **Stop.**
- Checking the SNMP Trap monitoring service
 1. Open the **Services** window.
 - For Windows Server 2012
Click **Control Panel > System and Security > Administrative Tools > Services.**
 - For Windows environment other than above
Click **Control Panel > Administrative Tools > Services.**
 2. Check that the **Status** column of the SNMP Trap monitoring service status is "Started".



Note

The SNMP Trap monitoring service is an OS standard service. Do not stop the SNMP Trap monitoring service unless there is a special reason, because it will affect other products such as ServerView AlarmService and ServerView Resource Coordinator VE, etc.

13.3.1.2 Starting and Stopping Service

- Starting the service
 1. Open the **Services** window.
 - For Windows Server 2012
Click **Control Panel > System and Security > Administrative Tools > Services.**
 - For Windows environment other than above
Click **Control Panel > Administrative Tools > Services.**
 2. Select the service "ETERNUS SF Manager Tomcat Service", and click **Start.**
- Stopping the service
 1. Open the **Services** window.
 - For Windows Server 2012
Click **Control Panel > System and Security > Administrative Tools > Services.**

- For Windows environment other than above

Click **Control Panel > Administrative Tools > Services**.

2. Select the service "ETERNUS SF Manager Tomcat Service", and click **Stop**.

13.3.2 Starting and Stopping Daemons (Solaris Environment)

This sub section explains how to start and stop the Storage Cruiser's manager in the Solaris environment.

13.3.2.1 Starting and Stopping SNMP Trap Monitoring Daemon

Only OS administrator (root) user can execute following commands.

- Starting the SNMP Trap monitoring daemon

Execute the following command.

```
# /opt/FJSVswstt/bin/mpnm-trapd start
```

- Stopping the SNMP Trap monitoring daemon

Execute the following command.

```
# /opt/FJSVswstt/bin/mpnm-trapd stop
```

- Checking the SNMP Trap monitoring daemon

Execute the following command.

```
# /bin/ps -ef | grep nwsnmp-trapd | grep -v grep
```

13.3.2.2 Starting and Stopping Daemons at Specific Times

Start or stop the following daemons in a batch operation:

- Management Server daemon
- SNMP Trap monitoring daemon

Only OS administrator (root) user can execute following commands.

- Starting daemons

Execute the following command.

```
# /opt/FJSVesfcm/bin/startesf.sh
```

- Stopping daemons

Execute the following command.

```
# /opt/FJSVesfcm/bin/stopesf.sh
```

Information

.....

In an environment in which the SAN administration manager in SystemWalker/StorageMGR-M V5.1/V10 or Softek SANView4.1 CD-ROM sub-directory is installed, the SNMP Trap monitoring daemon is controlled by SystemWalker/StorageMGR-M (SAN administration manager in Softek SANView4.1 CD-ROM sub-directory), so only the Management Server daemon is started and stopped by the above commands.

.....

Note

.....

When the batch stop is done, AdvancedCopy Manager cannot be operated from the Web Console.

.....

13.3.3 Starting and Stopping Daemons (Linux Environment)

This sub section explains how to start and stop the Storage Cruiser's manager in the Linux environment.

13.3.3.1 Starting and Stopping SNMP Trap Monitoring Daemon

The procedure to start and stop the SNMP Trap daemon on the Management Server is different between when monitoring only IPv4 address assigned devices and when monitoring both IPv4 and IPv6 addresses assigned devices.

When Monitoring Only IPv4 Address Assigned Devices

Only OS administrator (root) user can execute following commands.

- Starting the SNMP Trap monitoring daemon

Execute the following command:

- In the case of RHEL5 or RHEL6

```
# /etc/init.d/snmptrapd start
```

- In the case of RHEL7

```
# systemctl start snmptrapd.service
```



Restart the snmptrapd daemon and trpsrvd daemon for environments using the ServerView trap transfer program.

- Stopping the SNMP Trap monitoring daemon

Execute the following command:

- In the case of RHEL5 or RHEL6

```
# /etc/init.d/snmptrapd stop
```

- In the case of RHEL7

```
# systemctl stop snmptrapd.service
```



Do not stop the daemon unless there is a special reason, because it affects other software using snmptrapd.

- Checking the SNMP Trap monitoring daemon

- In the case of RHEL5 or RHEL6

Execute the following command to see whether the process exists:

```
# /bin/ps -ef | grep snmptrapd | grep -v grep
```

- In the case of RHEL7

Execute the following command to see whether the service is running:

```
# systemctl status snmptrapd.service
```

When Monitoring Both IPv4 and IPv6 Addresses Assigned Devices

If the settings are done in order to monitor IPv6 address assigned devices in the following sections in the *ETERNUS SF Installation and Setup Guide*, use the following procedure to start/stop the SNMP Trap daemon:

- "SNMP Trap Setting (for Linux)" in "Setup of Storage Cruiser's Manager"

Only OS administrator (root) user can execute following commands.

- Starting the SNMP Trap monitoring daemon

Execute the following command:

- In the case of RHEL5 or RHEL6

```
# /opt/FJSVswstt/bin/mpnm-trapd start
```

- In the case of RHEL7

```
# systemctl start startsc-snmpttrapd.service
```

- Stopping the SNMP Trap monitoring daemon

Execute the following command:

- In the case of RHEL5 or RHEL6

```
# /opt/FJSVswstt/bin/mpnm-trapd stop
```

- In the case of RHEL7

```
# systemctl stop startsc-snmpttrapd.service
```

- Checking the SNMP Trap monitoring daemon

- In the case of RHEL5 or RHEL6

Execute the following command to see whether the process exists:

```
# /bin/ps -ef | grep nwsnmp-trapd | grep -v grep
```

- In the case of RHEL7

Execute the following command to see whether the service is running:

```
# systemctl status startsc-snmpttrapd.service
```

13.3.3.2 Starting and Stopping Daemon

Only OS administrator (root) user can execute following commands.

- Starting daemons

Execute the following command.

```
# /opt/FJSVesfcm/bin/startesf.sh
```

- Stopping daemons

Execute the following command.

```
# /opt/FJSVesfcm/bin/stopesf.sh
```



Information

.....
If the settings are done in order to monitor IPv6 address assigned devices in the following sections in the *ETERNUS SF Installation and Setup Guide*, the SNMP Trap daemon is also started / stopped at the same time:

- "SNMP Trap Setting (for Linux)" in "Setup of Storage Cruiser's Manager"
-



Note

When the batch stop is done, AdvancedCopy Manager cannot be operated from the Web Console.

13.4 Starting and Stopping Agent

This section explains how to start and stop the service/daemon of the Storage Cruiser's agent.

13.4.1 Starting and Stopping Services (Windows Environment)

Start or stop the service of the Storage Cruiser's agent.

- Starting the service
 1. Open the **Services** window.
 - For Windows Server 2012
Click **Control Panel > System and Security > Administrative Tools > Services**.
 - For Windows environment other than above
Click **Control Panel > Administrative Tools > Services**.
 2. Select the service "ETERNUS SF Storage Cruiser Agent", and click **Start**.
- Stopping the service
 1. Open the **Services** window.
 - For Windows Server 2012
Click **Control Panel > System and Security > Administrative Tools > Services**.
 - For Windows environment other than above
Click **Control Panel > Administrative Tools > Services**.
 2. Select the service "ETERNUS SF Storage Cruiser Agent", and click **Stop**.

13.4.2 Starting and Stopping Daemons (Solaris, Linux, HP-UX, or AIX Environment)

Only OS administrator (root) user can execute following commands.

- Starting the daemon
Execute the following command.

```
# /opt/FJSVssage/bin/sstorageagt
```
- Stopping the daemon
Execute the following command.

```
# /opt/FJSVssage/bin/pstorageagt
```

13.5 Commands for Reporting Function

The commands for Reporting function are as follows:

| Command Name | Explanation |
|---------------------------------------|---|
| esfadm report collect | Information for the report will be collected. |
| esfadm report create | A report will be created. |

The exclusive relationship of these commands is as follows:

| | While Executing esfadm report collect Command | While Executing esfadm report create Command |
|---|---|---|
| When the esfadm report collect command has been executed | Not Available (Error. The same command cannot be executed at the same time, recover error.) | Available (Standby. Execute the esfadm report collect command after completing the esfadm report create command) |
| When the esfadm report create command has been executed | Available (Standby. Execute the esfadm report create command after completing the esfadm report collect command) | Not Available (Error. The same command cannot be executed at the same time, recover error.) |

13.5.1 esfadm report collect (Report Information Collection Command)

NAME

esfadm report collect - Collect the report information

SYNOPSIS

```
esfadm report collect -all [-test]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\Common\bin\esfadm report collect
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVesfcm/bin/esfadm report collect
```

DESCRIPTION

Collect the report information for the storage device for which the Reporting function is enabled on the Web Console to store in the information stack file.

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

OPTIONS

-all

This option is required.

-test

In relation to the volume of which the report information will be collected, confirm whether the information collection command ends without errors. For this reason, the report information will not be accumulated in the information accumulation file.

Specify this option when confirming the storage of which information will be collected, or when confirming whether the process can be completed without error after dealing with an error that has occurred.

OUTPUT INFORMATION

- Accumulate the collected report information in the information stack file

The information regarding the volume will be output to the information stack file.

- Output the message to the command execution screen

The message including the name of the storage of which the report information was collected will be output.

- Operation History of ETERNUS SF

The following information in regard to operation will be output.

| Output Items | Output Contents |
|--------------|---|
| Date | Date and time when the operation was executed |
| User ID | User name that performed the operation |
| Action | Collect Report Information (CLI) |
| State | Submit, Start, or Complete |
| Result | Success, Failed, or Warning |
| Target | - |
| Detail | Detailed information |
| Message | Error message |

EXIT STATUS

=0: Completed successfully

>0: Terminated abnormally

EXAMPLES

- When the storages subject to collection are Storage1 and Storage2

```
> esfadm report collect -all
esrpt00002 The storage information was collected. Storage=Storage1,Storage2
```

- When the -test option is specified and the storages subject to collection are Storage1 and Storage2

```
> esfadm report collect -all -test
esrpt00005 The report data does not collect for test command.
esrpt00002 The storage information was collected. Storage=Storage1,Storage2
```

NOTES

- When this command is executed while the [esfadm report create](#) command is being executed, this command will be put in standby state. When the [esfadm report create](#) command executed earlier is completed, processing of this command will continue.
- This command cannot be executed again while the command is already executing. The command executed later will end in an error.
- In any of the following cases, this command collects only information-gathering time and ends normally:
 - There is no license existing on every storage device.
 - There is no storage device connected to server (host affinity is enabled).
 - There is no storage device for which the Reporting function is activated on the Web Console.
- When this command ends with an error, the report information that was partly collected is discarded. (The information accumulation file is returned to its state prior to execution of the command.)

13.5.2 esfadm report create (Report Creation Command)

NAME

esfadm report create - Create the Report

SYNOPSIS

```
esfadm report create -start YYYYMMDDhhmm -end YYYYMMDDhhmm [-outputfile fileName]
```

COMMAND PATH

Windows Environment

```
$INS_DIR\Common\bin\esfadm report create
```

(\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.)

Solaris or Linux Environment

```
/opt/FJSVesfcm/bin/esfadm report create
```

DESCRIPTION

The report information of the period specified in the options will be output to the report file.

In addition, based on the save period configured with the policies, old report information that has exceeded the save period of the information accumulation file will be deleted.

(If there is report information in the information accumulation file, a report file will be output.)

In the Windows environment, only a user of the Administrators group can execute this command.

In the Solaris or Linux environment, only OS administrator (root) user can execute this command.

OPTIONS

-start YYYYMMDDhhmm -end YYYYMMDDhhmm

Specify the period of the report to be created in the form of YYYYMMDDhhmm (local time). The maximum period from start to end is 1 year (365 days, or 366 days when including a leap year). The number of seconds is counted as 0 second.

In addition, in a time period switching from summer time to winter time, there are winter local time and summer local time. This command considers that local time as winter local time.

- *YYYY* indicates the year and a value of 0000~9999 can be specified.
- *MM* indicates the month and a value of 01~12 can be specified.
- *DD* indicates the day and a value of 01~31 can be specified.
- *hh* indicates the hour, and a value of 00~23 can be specified.
- *mm* indicates the minute, and a value of 00~59 can be specified.

In the following cases, errors will occur:

- In the case the date and time later than the command executed date and time is specified at start or end.
- In the case the date and time earlier than the starting date and time is specified at end.
- In the case the date and time that does not exist is specified.

-outputfile fileName

Specify the file name for the report output. When a directory path is not included, the report will be stored in the current directory. The supported directory paths are an absolute path and a relative path.

When this option is omitted, the report will be created with the following file name under the current directory.

```
esfreport_manual_specified_YYYYMMDDhhmmss.xml  
YYYYMMDDhhmmss is the command execution date and time.
```

Use the local time for the execution time to output to the file name.

When a file or directory with the same name already exists on the output directory, an error will be displayed.

Only ASCII letters are supported for the output directory name and the output directory.

The date and time information is included in the file name to prevent file names from being identical.

OUTPUT INFORMATION

- Store the report information of the specified range in the report file
Refer to "8.4 Configuration of Report File" for details on the report file.
- Output the message to the command execution screen
- Operation History of ETERNUS SF System
The following information will be output as operation history.

| Output Items | Output Contents |
|--------------|---|
| Date | Date and time when the operation was executed |
| User ID | User name that performed the operation |
| Action | Create Report (CLI) |
| State | Submit, Start, or Complete |
| Result | Success, Failed, or Warning |
| Target | - |
| Detail | Detailed information |
| Message | Error message |

EXIT STATUS

- =0: Completed successfully
- >0: Terminated abnormally

EXAMPLES


- A report from 8:30 on February 1, 2012 up to 17:30 of February 1, 2012 will be created.
(Report information up to 17:30:00 of February 1, 2012 will be subject to the report.)

```
> esfadm report create -start 201202010830 -end 201202011730 -outputfile C:\report\201202011730.xml  
esrpt00003 The report file was output. File=C:\report\201202011730.xml
```

NOTES

- When this command is executed while the `esfadm report collect` command is being executed, this command will be put in a stand-by state. When the `esfadm report collect` command executed earlier is completed, processing of this command will continue.
- This command cannot be executed again while the command is already executing. The command executed later will end in an error.
- When there is no report information within the period specified for the report, a report file with only header information will be output, and the process will end without displaying an error.
- When an error occurs while the report is being created, a report file is not be created.
- When a server error occurs while the report is being created, a report file will not be created and this command will end in an error.
- When configuration information has been changed during the period of the report being created, the report information will change from information before the configuration information was changed to information after the change.
- The date and time that is output to the report time is the local time of the ETERNUS SF system.
- The times that are specified for the `-start` option and the `-end` option will be handled as follows:
 - The time that is specified for the `-start` option (hhmm) will be handled at 0 seconds.
 - The time that is specified for the `-end` option (hhmm) will be handled at 0 seconds.

As shown in the following example, although the first end time of the period for the report specified with this command overlaps with 17:30:00 of February 1 specified as the second start time, the period of the start time subtracted from the end time is 9 hours and 15 hours respectively.

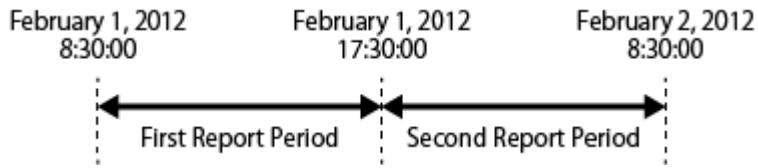

First Report Period (total 9 hours): From 8:30:00 of February 1, 2012 through to 17:30:00 of February 1, 2012
Second Report Period (total 15 hours): From 17:30:00 of February 1, 2012 through to 8:30:00 of February 2, 2012

Appendix A Customization

In this chapter, if the "0x" is added to the beginning of the numeric value, it is a hexadecimal number. If the "0x" is not added, the numeric value is a decimal number.

A.1 Overview

This software Manager and Agent control setting can be made by editing the appropriate definition files. Edit the files according to requirements. However, be sure not to edit values of parameters not discussed in this chapter.

sanma.conf (Definition File)

Indicates a detailed setting file of the storage management.

ssmgr.conf (Correlation Management Definition File)

Indicates a detailed setting file of the storage management for the correlation management.

perf.conf (Performance Management Definition File)

Indicates a detailed setting file of the storage performance management

SNMP Trap XML Definition File (Fault Management Definition File)

Creating this file enables detailed definitions of targets of fault monitoring using SNMP Traps and processing for the environment.

Correlation.ini (Agent Definition File)

Indicates a detailed setting file of Agent.

policy.conf (Reporting Function Definition File)

Indicates a detailed setting file of the reporting function.

TFOConfig.ini (Storage Cluster Controller Definition File)

Indicates a setting file of Storage Cluster Controller, which exists only in Agent.

A.2 sanma.conf Parameter

This file is saved at the following location as a detailed setting file of the storage management:

| Platform of Manager | Location |
|----------------------|---|
| Windows | \$ENV_DIR\ESCManager\etc\opt\FJSVssmgr\current\sanma.conf (\$ENV_DIR means "Environment Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /etc/opt/FJSVssmgr/current/sanma.conf |

Reflecting Contents of Setting File

If the setting file is changed, execute re-read definition file by using the Web Console, or reactivate the Manager. This reflects the settings on this software.

Customization

LOGICAL_MANAGER_IP

If the Management Server is clustered system which has physical IPs and logical IP, logical IP address must be specified in this parameter. For this parameter, specify only IPv4 format IP address.

```
Example:  
LOGICAL_MANAGER_IP="10.12.13.14";
```

This parameter is used to automatically configure a SNMP Trap send destination address for a fault monitoring device when registering devices. Refer to "5.2.5 SNMP Trap Transmission Place Automatic Setting Function" for more information.

LOGICAL_MANAGER_V6IP

If the Management Server is clustered system which has physical IPs and logical IP, logical IP address must be specified in this parameter. For this parameter, specify only IPv6 format IP address.

```
Example:
LOGICAL_MANAGER_V6IP="2001:db8::2:1";
```

This parameter is used to automatically configure a SNMP Trap send destination address for a fault monitoring device when registering devices. Refer to "5.2.5 SNMP Trap Transmission Place Automatic Setting Function" for more information.

MANAGER_LAN_CARD_IP

This is specified if device detection and registration fail due to the environment having the Management Server which holds multiple IP addresses.

If specifying this parameter in a cluster environment, be sure to specify a logical IP address at the beginning.

For this parameter, specify only IPv4 format IP address.

```
Example:
MANAGER_LAN_CARD_IP="10.12.13.14,100.101.102.103";
```

MANAGER_LAN_CARD_V6IP

This is specified if device detection and registration fail due to the environment having the Management Server which holds multiple IP addresses.

If specifying this parameter in a cluster environment, be sure to specify a logical IP address at the beginning.

For this parameter, specify only IPv6 format IP address.

```
Example:
MANAGER_LAN_CARD_V6IP="2001:db8::2:1,2001:db8::2:2";
```

SET_SW_ZONING_ALWAYS

When an access path is set, if the zoning setting for the Fibre Channel switch need not be added because port zoning is set, this software does not generally set zoning for Fibre Channel. Specifying 1 in this parameter sets one-to-one WWPN zoning even in the above case (excluding cases in the No Security state):

```
Example:
SET_SW_ZONING_ALWAYS=1; (Default: 0)
```

DISPLAY_SNMP_STANDARD_EVENT

Specify whether the SNMP Trap (Cold Start Trap etc.) common to devices from a device is indicated in the event log. Setting 1 for this parameter indicates the SNMP Trap common to devices. Setting 0 for this parameter does not indicate it. Default is 1 (indicate).

```
Example:
DISPLAY_SNMP_STANDARD_EVENT = 0;
```

A.3 ssmgr.conf Parameter

This file is saved at the following location as a detailed setting file of the storage management for the correlation management:

| Platform of Manager | Location |
|----------------------|--|
| Windows | \$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\ssmgr.conf (\$ENV_DIR means "Environment Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /etc/opt/FJSVssmgr/current/ssmgr.conf |

Reflecting Contents of Setting File

If the setting file is changed, execute re-read definition file by using the Web Console, or reactivate the Manager. This reflects the settings on this software.

Customization



Note

Note that the memory or the disk capacity may become insufficient when the number of generations or the maximum capacity of each log file is increased. Operation may stop when the memory or the disk capacity becomes insufficient.

Note when changing the number of generations or maximum capacity, secure the memory capacity and the disk capacity.

LOG_COUNT

The number of generations of log files (log.*) which is common to system is specified by an arbitrary decimal number.

Default is 4.

It circulates in the fourth generation (log.0, log.1, log.2 and log.3), when 4 is set.

Example for circulating in the fifth generation:

```
LOG_COUNT = 5;
```

Location of the log file

| Platform of Manager | Location |
|----------------------|--|
| Windows | \$TMP_DIR\ESC\Manager\var\opt\FJSVssmgr\current (\$TMP_DIR means "Work Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /var/opt/FJSVssmgr/current |

LOG_LIMIT

The maximum capacity of log file (log.*) which is common to system is specified within the range of 0-2147483647 (KB).

Default capacity is 512 (KB).

When 0 or a minus value is specified, the log is not output. Moreover, when the value larger than the maximum value is specified, it becomes a default value.

Example for setting the maximum capacity to 2MB:

```
LOG_LIMIT = 2048;
```

Refer to "[LOG_COUNT](#)" for location of the log files.

SYSTEMLOG_FACILITY (Valid only for Solaris OS Manager and Linux Manager)

Specify a facility name which has system log output destination information if a facility name is changed from the default ("daemon"). The facility name that is specified here must be defined by /etc/syslog.conf. Users can optionally change the system log output destination according to the specified facility name and the level.

Refer to online manuals of each operating system for syslog.conf definition.

A.4 perf.conf Parameter

This file is saved at the following location as a detailed setting file of the storage performance management:

| Platform of Manager | Location |
|---------------------|---|
| Windows | \$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perf.conf (\$ENV_DIR means "Environment Directory" specified at the Manager installation.) |

| Platform of Manager | Location |
|----------------------|--------------------------------------|
| Solaris OS, Linux | /etc/opt/FJSVssmgr/current/perf.conf |

Reflecting Contents of Setting File

If the setting file is changed, execute re-read definition file by using the Web Console, or reactivate the Manager. This reflects the settings on this software.

Information

- In performance management, the setting file is referenced once every 4 hours so that changes are reflected even if the above procedure has not been performed.
- If the number of days to retain performance data is reduced, data retained that is older than the new number of days will be deleted. When you execute re-read definition file by using the Web Console, it may take a time to delete the performance data.

Customization

Note

- After starting operation, the program in this product may add/update/delete parameters that are not explained in this document for the perf.conf file. For this reason, do not edit/delete parameters that are not explained in this document.
- If the number of days performance data is kept is increased, the application may stop because of insufficient memory or disk space; therefore care must be taken to ensure space is sufficient. In particular, if 0 is set for PERF_DATA_KEEP_DAYS, processing to delete performance information stops, so check the memory or disk space regularly.
- If the number of generations of log files is increased, the application may stop because of insufficient memory or disk space, therefore care must be taken to ensure space is sufficient.
- When the performance management for number of active disks is performed, it may not be possible to obtain performance information inside the performance monitoring interval. Change the performance monitoring interval where necessary.

PERF_DATA_KEEP_DAYS

Specify the number of days during which performance management keeps performance data. The data is automatically deleted after the specified number of days elapse.

If 0 is specified, the data is not deleted. However, the number of days does not include the current day.

The default value is seven days and is defined as shown below. Change this value if necessary.

```
PERF_DATA_KEEP_DAYS = 7;
```

LOG_ROTATION

The number of generations of log files (perflog.*) related to performance is specified by an arbitrary decimal number. Default is 2. It circulates in the second generation of perflog.0 and perflog.1 when 2 is set.

```
Example for circulating in the fifth generation:  
LOG_ROTATION = 5;
```

Location of the log file

| Platform of Manager | Location |
|---------------------|---|
| Windows | \$TMP_DIR\ESCManager\var\opt\FJSVssmgr\log (\$TMP_DIR means "Work Directory" specified at the Manager installation.) |

| Platform of Manager | Location |
|----------------------|------------------------|
| Solaris OS, Linux | /var/opt/FJSVssmgr/log |

ENABLED_ECO_MODE

Specify whether to use the performance management for the active disks, power consumption, and temperature. To use the performance management for them, specify "true". If you do not want to use it, specify "false". The default is "true".

Example: When the performance management for the number of active disks, power consumption, and temperature is used:

```
ENABLED_ECO_MODE = true;
```

ENABLED_PORT_ISCSI

Specify whether to use the performance management for iSCSI port on ETERNUS Disk storage system. To use the performance management for iSCSI port, specify "true". If you do not want to use it, specify "false". The default is "true".

Example: When the performance management for iSCSI port is used:

```
ENABLED_PORT_ISCSI = true;
```

A.5 SNMP Trap XML Definition File

Use of this file enables customization of the fault monitoring method. Define the file on the Manager and Agent sides.

SNMP Trap XML Definition File on Manager Side

Event log messages and operations using linkage with Systemwalker Centric Manager, linkage with Shell/Bat and linkage with External Script can be defined for SNMP Traps received from individual device (including server node). Customize the contents of this file to change default values of this software on the Manager side according to the operating environment of the storage system used.

Creating this definition file enables a function equivalent to the fault monitoring function for support levels A and B to be implemented for a device of support level I.

SNMP Trap XML Definition File on Agent Side

It defines a fault monitoring method of an Agent server node. Customize its contents to change the monitoring method from default.

Reflecting Contents of Setting File

The setting file on the Manager side is dynamically read into this software and therefore no special reflection method is provided.

The setting file on the Agent side is read into this software statically and therefore the Agent needs to be restarted to reflect the contents of the setting file on this software.

Customization

Note

- If an error is detected in an XML definition file, a message in the format shown below is output to the event log. The fault level of notification is the information level. Linkage with Systemwalker Centric Manager and linkage with Shell/Bat are not used.

```
Message format: "XML parse error (detected trap: (SNMP Trap data character string))"
```

- Except for some devices, all swsag codes that are reported to Systemwalker Centric Manager are 4821.
- When customizing SNMP Trap processing, do not edit the definition file in the installation directory but edit the one in the customization directory.

Definition File Names and Storage Location on Manager Side

The SNMP Trap XML definition file is created for each device. It is then stored in the following directory when Manager is installed or upgraded.

| Platform of Manager | Location |
|----------------------|---|
| Windows | \$INS_DIR\ESC\Manager\opt\FJSVsmgr\lib\snmpth (\$INS_DIR means "Program Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /opt/FJSVsmgr/lib/snmpth |

When customizing SNMP Trap processing of Manager, copy the SNMP Trap XML definition file in the above directory to the customization directory shown below, and edit the copy of the file.

| Platform of Manager | Customization Directory |
|----------------------|---|
| Windows | \$ENV_DIR\ESC\Manager\etc\opt\FJSVsmgr\current\snmpth (\$ENV_DIR means "Environment Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /etc/opt/FJSVsmgr/current/snmpth |

Manager operates as follows:

- When the SNMP Trap XML definition file exists in the customization directory
Manager operates in accordance with its file.
- When the SNMP Trap XML definition file does not exist in the customization directory
Manager operates in accordance with the definition file in the installation directory. (default)

In a trap of a device, the file name is enterprise code in which "." is replaced with "_".

Table A.1 Default SNMP Trap XML Definition Files on System Where This Software Is Implemented with Manager

| Device Type | File Name |
|---|--|
| ETERNUS SN200, Brocade, PRIMERGY Fibre Channel switch blade, Brocade VDX series, PRIMERGY BX Ethernet Fabric Switch | 1_3_6_1_4_1_1588_2_1_1_1.xml |
| ETERNUS DX60/DX80/DX90 | 1_3_6_1_4_1_211_4_1_1_126_1_60.xml |
| ETERNUS DX80 S2/DX90 S2 | 1_3_6_1_4_1_211_4_1_1_126_1_100.xml |
| ETERNUS DX60 S3/DX100 S3/DX200 S3 ETERNUS DX200F | 1_3_6_1_4_1_211_4_1_1_126_1_150.xml |
| ETERNUS DX60 S2 | 1_3_6_1_4_1_211_4_1_1_126_1_101.xml |
| ETERNUS DX400 series ETERNUS DX8000 series | 1_3_6_1_4_1_211_4_1_1_126_1_50.xml |
| ETERNUS DX400 S2 series | 1_3_6_1_4_1_211_4_1_1_126_1_100.xml |
| ETERNUS DX500 S3/DX600 S3 | 1_3_6_1_4_1_211_4_1_1_126_1_150.xml |
| ETERNUS DX8000 S2 series | 1_3_6_1_4_1_211_4_1_1_126_1_102.xml |
| ETERNUS DX8000 S3 series | 1_3_6_1_4_1_211_4_1_1_126_1_152.xml |
| ETERNUS LT20(SCSI) | 1_3_6_1_4_1_11_2_36_1.xml |
| ETERNUS LT200 | 1_3_6_1_4_1_119_1_83_1_21.xml |
| ETERNUS LT210, LT220, LT230 | 1_3_6_1_4_1_119_1_83_1_1.xml 1_3_6_1_4_1_119_1_83_1_2.xml |

| Device Type | File Name |
|---|--|
| ETERNUS LT250 | 1_3_6_1_4_1_211_4_1_1_126_3_5.xml |
| ETERNUS LT260 | 1_3_6_1_4_1_20884_3.xml |
| ETERNUS LT270 | 1_3_6_1_4_1_211_4_1_1_126_3_2.xml |
| ETERNUS LT270 S2 | 1_3_6_1_4_1_211_4_1_1_126_3_6.xml |
| Tape encryption device | 1_3_6_1_4_1_2021_250_10.xml |
| Fibre Alliance MIB support device | 1_3_6_1_3_94.xml |
| NetApp FAS Series, FAS Series (with clustered Data ONTAP), V-Series, and V-Series (with clustered Data ONTAP) | 1_3_6_1_4_1_789.xml |
| ETERNUS VS850 | 1_3_6_1_4_1_2_6_190.xml |
| ETERNUS LT20/LT20 S2/LT40/LT40 S2/LT60/LT60 S2 (SAS/FC model) | 1_3_6_1_4_1_20884_10893_2_101_3.xml |
| ETERNUS CS2000 | 1_3_6_1_4_1_231_2_48_2_0.xml |
| Event from performance management | 1_3_6_1_4_1_211_4_1_3_21_3.xml |
| Multipath-related event from Solaris OS Agent or Windows Agent | 1_3_6_1_4_1_211_4_1_3_21_2.xml (*1) |
| Safe/PRIMECLUSTER GDS or GFS series event from Solaris OS Agent | 1_3_6_1_4_1_211_4_1_3_21_2_2.xml (*1)(*2) |
| Multipath-related event from Solaris OS Agent | 1_3_6_1_4_1_211_4_1_3_21_2_21.xml (*1)(*2) |
| Multipath-related event from Windows Agent | 1_3_6_1_4_1_211_4_1_3_21_2_5.xml (*1)(*2) |
| MPIO event from Windows Agent | 1_3_6_1_4_1_211_4_1_3_21_2_51.xml (*1)(*2) |
| ETERNUS multipath driver event from Linux Agent | 1_3_6_1_4_1_211_4_1_3_21_2_3.xml (*1)(*2) |
| PRIMECLUSTER GDS or GFS series event from Linux Agent | 1_3_6_1_4_1_211_4_1_3_21_2_31.xml (*1)(*2) |
| LVM(PV-Links) event from HP-UX Agent | 1_3_6_1_4_1_211_4_1_3_21_2_4.xml (*1)(*2) |
| HBA driver event from HP-UX Agent | 1_3_6_1_4_1_211_4_1_3_21_2_41.xml (*1)(*2) |
| Multipath-related event from AIX Agent | 1_3_6_1_4_1_211_4_1_3_21_2_6.xml (*1)(*2) |

*1: This file can be changed only concerning the on/off setting of "linkage with Systemwalker Centric Manager" (only Shell/Bat linkage control can be done and Systemwalker Centric Manager linkage cannot be.) and "external script linkage 1" and "external script linkage 2" in "Operation definition" (the flag attributes) in ["Definition Contents"](#) of ["Definition File Format"](#). For "Fault level" and "Message," this file cannot be changed.

*2: When this file is updated, the file with the same name on the Agent side must also be updated so that their contents are the same.

For devices excluding the above ones, SNMP Trap processing for each device is enabled by creating XML files according to the enterprise code of the device.

Definition File Name and Storage Location on Agent Side

The XML definition file for customizing the fault monitoring method of an Agent server node is saved at the following location:

| Platform of Agent | Location |
|--|---|
| Windows | \$ENV_DIR\ESCAgent\etc\snmpth (\$ENV_DIR means "Environment Directory" specified at the Agent installation.) |
| Solaris OS, Linux, HP-UX, AIX | /etc/opt/FJVSsage/snmpth |

The file is read and used when Agent starts. Therefore, the restart of Agent is needed to operate according to the modified contents when the file is modified.

The file name is the enterprise code in a trap issued from Agent to Manager and in which "." is replaced with "_".

Table A.2 Default SNMP Trap XML Definition Files on System Where This Software Is Implemented with Agent

| Server Node | File Name (*1) | Monitoring Target |
|-------------|-----------------------------------|--|
| Solaris OS | 1_3_6_1_4_1_211_4_1_3_21_2_2.xml | Safe/PRIMECLUSTER GDS, GFS series |
| | 1_3_6_1_4_1_211_4_1_3_21_2_21.xml | ETERNUS multipath driver |
| | 1_3_6_1_4_1_211_4_1_3_21_2_22.xml | EMC PowerPath |
| | 1_3_6_1_4_1_211_4_1_3_21_2_23.xml | HITACHI JP1/HiCommand Dynamic Link Manager |
| | 1_3_6_1_4_1_211_4_1_3_21_2_24.xml | Sun MPxIO |
| Windows | 1_3_6_1_4_1_211_4_1_3_21_2_5.xml | ETERNUS multipath driver |
| Linux | 1_3_6_1_4_1_211_4_1_3_21_2_3.xml | ETERNUS multipath driver |
| | 1_3_6_1_4_1_211_4_1_3_21_2_31.xml | PRIMECLUSTER GDS, GFS series |
| HP-UX | 1_3_6_1_4_1_211_4_1_3_21_2_4.xml | PV-LINK (LVM function) |
| | 1_3_6_1_4_1_211_4_1_3_21_2_41.xml | HBA driver |
| AIX | 1_3_6_1_4_1_211_4_1_3_21_2_6.xml | MPIO |

*1: When this file is updated, the file with the same name on the Manager side must also be updated so that their contents are the same.

Definition File Format


Definition Contents

Operations are defined by the following items for the Specific Trap Type in the definition file:

| Item | Description |
|----------------------|---|
| Operation definition | Whether to post a status change to a window Whether to output the event log Whether to implement linkage with Systemwalker Centric Manager and linkage with Shell/Bat Whether to enable external script linkage 1 Whether to enable external script linkage 2 |
| Fault level | Notification levels of individual events and linkage with Systemwalker Centric Manager (Information/Warning/Error) |
| Message | Message output for event and linkage with Systemwalker Centric Manager |

Node Hierarchy

The following figure shows the hierarchy of tag nodes:

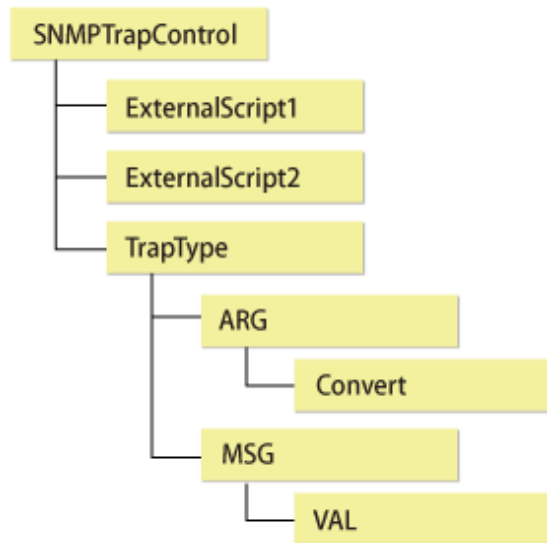

Tags and Attributes

SNMPTrapControl Tag

| Attribute Name | Description |
|----------------|---------------------------------|
| name | Device name |
| ver | Version of this definition file |

ExternalScript1, ExternalScript2 Tag (Option)

This tag defines the script name when using external script linkage. ExternalScript1 indicates external script linkage 1 and ExternalScript2 indicates external script linkage 2. A script defined here is executed when the corresponding linkage bit is set on in the flag attribute of the TrapType tag or the Convert tag.

ExternalScript1 and ExternalScript2 tag must be defined in a line above the TrapType tag definition.

| Attribute Name | Description |
|----------------|---|
| name | Executed script name (using full path name) |

TrapType Tag

This tag defines trap analysis operations for each Specific Trap Type. Traps of types not defined by the TrapType tag are not analyzed and discarded.

| Attribute Name | Description |
|----------------|--|
| type | "ST" + Specific Trap Type number (decimal) |
| flag | Control of event, linkage with Systemwalker Centric Manager, linkage with Script, and E-mail notification (in 7-bits binary) The "0" is interpreted as "off", the "1" is "on". bit6 ... E-mail notification of a information event (*1) bit5 ... external script linkage2 bit4 ... external script linkage1 bit3 ... Linkage with Systemwalker Centric Manager, Linkage with Shell/Bat (*2) bit2 ... Event log output |

| Attribute Name | Description |
|----------------|---|
| | <p>bit1 ... (Cannot be changed) bit0 ... Status change notification</p> <p>For example, only linkage with Systemwalker Centric Manager is set to on flag="0001000".</p> <p>If you specify it only 4 bit length, the values of bit4, bit5, and bit6 are interpreted as "0". For example, flag="1111" is interpreted as flag="0001111".</p> |
| level | <p>Specify events and the levels that are posted to Systemwalker Centric Manager.</p> <p>(I: Information / W: Warning / E: Error)</p> |
| msg | <p>Messages displayed for events and linkage with Systemwalker Centric Manager, sending and linkage with Script.</p> <p>The following parameters can be included in messages:</p> <p>%d: Decimal number %x: Hexadecimal number %s: Character string</p> <p>As many ARG tags as the number of parameters included in a message must be defined as described in (4) below.</p> <p>If any character other than 'd', 'x', and 's' follows %, the % is handled as a character and displayed as is.</p> |

*1: Set it to on if you want to enable the E-mail notification of an information event or disable the E-mail notification of a warning event and an error event.

*2: Since events of the Agent are not reported to Systemwalker Centric Manager, only Shell/Bat linkage control can be done in the definition file of the Agent.

ARG Tag

The ARG tag defines correspondence between a parameter specified in the msg attributes of the TrapType tag and a Variable Binding index in trap data. There are as many ARG tags as the number of parameters specified in the msg attributes must be defined.

| Attribute Name | Description |
|----------------|--|
| index | Index number (0 or larger) of a parameter included in the msg attributes of the TrapType tag described in (3). |
| VBIndex | Index number (0 or larger) of Variable Binding in Trap data |

Convert Tag (Option)

The Convert tag specifies how to express a character string for an INTEGER-type data value of a trap. Definition of this tag is optional. For example, to use Trap data value 0 to indicate the status of OK, specify <Convert val="0" name="OK"/> so that character string "OK" can be displayed instead of "0".

By specifying the flag attribute and level attribute (options), a fault level specified in the level attribute of the TrapType tag can be changed and posted. (If the msg attribute includes multiple ARGs and the flag or level attribute is specified in individual Convert tags, the values specified in the Convert tag of the last ARG are used.)

| Attribute Name | Description |
|----------------|---|
| val | Numeric data value (decimal) of the INTEGER type in a Trap |
| flag (option) | Control of events, linkage with Systemwalker Centric Manager, linkage with Script, and E-mail notification (in 7-bit binary) Refer to " TrapType Tag ". for values |
| level (option) | Fault level "I", "W", or "E" This tag is given a higher priority than the TrapType tag. |
| name | Character string corresponding to val |

If an undefined value is received, the value is displayed as a numeric value as is.

MSG Tag

The MSG tag defines a monitoring keyword for Server Node Agent monitoring. It is valid only for Server Node Agent.

Windows Agent: Monitors with the id, src, and type attributes (ignores the key attribute).

Another Agent: Monitors with the key attribute (ignores the id, src, and type attributes).

| Attribute Name | Description |
|----------------|--|
| key | Monitoring keyword for monitoring (required for a non-Windows Agent) |
| id | Event ID of the event to be monitored (required for a Window Agent) |
| src | Source name of the event to be monitored (required for a Windows Agent) |
| line | When a VAL tag is used (a substring of a monitored event is added to notification information), specify the number of monitored event lines for the line attribute. The line attribute can be omitted for a single line or when a Windows Agent is used. |
| type | Specify the type of event logs to be monitored. (Valid only for windows Agent) System: Monitor the system log. (Default) Application: Monitor the application log. |

To change the monitoring keyword, change this keyword.

A normal expression can be specified to the monitoring keyword.

To add a monitoring keyword for monitoring, add the TrapType tag and later shown below. Be sure not to specify a Specific Trap Type number that is already specified.

VAL Tag (Option)

The VAL tag is used to define the method of retrieving a character string from the monitored event and adding it to notification information. The VAL tag is valid only for Server Node Agent.

| Attribute Name | Description |
|----------------|--|
| ref | Specify the value to be added to notification information. Specify the value in parentheses () in normal expression. |

ID Attribute Specification by DTD

During SNMP Trap control, the type attribute of the TrapType tag is used as the ID attribute for searches, so DTD must be described as follows in the XML definition file:

```
<!DOCTYPE SNMPTrapControl[
<!ATTLIST TrapType type ID #REQUIRED>
]>
```

Sample Definition File

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE SNMPTrapControl
<!ATTLIST TrapType type ID #REQUIRED>
]>
<SNMPTrapControl name="SW3800" ver="1.0">
  <TrapType type="ST1" flag="111111" level="E" msg="Faulty reason: %d">
    <ARG index="0" VBIndex="0">
      <Convert val="0" flag="000110" level="I" name="sw-ok"/>
      <Convert val="1" name="sw-faulty"/>
    </ARG>
  </TrapType>
  <TrapType type="ST2" flag="000111" level="E" msg="%s: is currently in state %d">
    <ARG index="0" VBIndex="4"/>
    <ARG index="1" VBIndex="0">
      <Convert val="1" name="unknown"/>
      <Convert val="2" name="faulty"/>
      <Convert val="3" name="below-min"/>
      <Convert val="4" flag="000110" level="I" name="nominal"/>
      <Convert val="5" name="above-max"/>
      <Convert val="6" name="absent"/>
    </ARG>
  </TrapType>
</SNMPTrapControl>
```



Example

Method of Suppressing ETERNUS SN200 series, Brocade series FC Port Online/Offline Traps:

To suppress ETERNUS SN200 series, Brocade series FC port Online/Offline traps, change the following locations in the corresponding XML definition file.

The flag attribute is changed to "000000" in val="1" and val="2" of the Convert tag in <ARG index="1" VBIndex="0"> for which "ST3" is specified as the type attribute.

```
<Convert val="1" flag="000000" level="I" swsag="4203" name="Online"/>
<Convert val="2" flag="000000" level="I" swsag="4203" name="Offline"/>
```

A.6 Correlation.ini Parameter

This file is saved at the following location of the Server Node as a detailed setting file of Agent:

| Platform of Agent | Location |
|--|--|
| Windows | \$ENV_DIR\ESCAgent\etc\Correlation.ini (\$ENV_DIR means "Environment Directory" specified at the Agent installation.) |
| Solaris OS, Linux, HP-UX, AIX | /etc/opt/FJSvssage/Correlation.ini |

Reflecting Contents of Setting File

The file is read and used when Agent starts.

To operate according to the contents of the file the restart of Agent is needed.

Customization

PollingTime

Specify a period of time in seconds during which system messages are monitored. The default value is 10.

0 (not monitored) to 3600 (one hour)

```
PollingTime=time
```

HBASStatus (HP-UX Agent Does Not Support This Parameter)

Specify this parameter to collect HBA's status. The default value is ON.

```
HBASStatus= ON or OFF
```

- ON (status of HBA is collected.)
- OFF (status of HBA is suppressed.)

To unite states of HBA in the environment where the Storage Cruiser's agent of Solaris OS and Windows exist together with SSC agent, turn HBASStatus to OFF.

HBAMask (HP-UX Agent Does Not Support This Parameter)

Use this parameter to make HBA port be non-displayed. Specify World Wide Port Name (WWPN) of HBA port non-displayed is specified. If multiple HBA ports are specified, specify as many parameters as the number of HBA ports.

```
HBAMask=WWPN-of-HBA-port
```

The Warning status is displayed for HBA port when FC cable is not connected with it. To suppress the status of HBA because of unused or similar reason, use this parameter.

If HBA displayed in the Web Console is specified, delete the relevant HBA in the Web Console. If not delete, the relevant HBA remains displayed in the Web Console.

StorageClusterController

Specify this parameter to enable the monitoring function of Storage Cluster Controller. The default value is OFF.

```
StorageClusterController=ON or OFF
```

- ON: Enables the monitoring function.
- OFF: Disables the monitoring function.

A.7 Device Polling Setting File

Editing these setting files can customize the default behavior of the device polling function. Two setting files are provided: one file is for defining the polling function behavior and the other file is for defining event linkage control. These files are described in XML.

Reflecting Contents of Setting File

Changed contents are automatically reflected at the next polling operation. (Manager checks the file contents every 30 seconds even while polling is stopped.) Even if executing "Definition File Re-read" using the Web Console, be careful that the file may not be reflected.

Customization (Polling Function Behavior Setting File)

Note

- If an error is detected in an XML file, the event message shown below is output for each polling operation. In this event, the polling function operates with the default settings.

Message: "[Polling] XML File Format Error(XML file name)"

- Be sure not to delete the file itself even if no items are set. If the file is deleted, re-create the file according to the above sample.
- When customizing the polling function behavior setting file, do not edit the setting file in the installation directory but edit the one in the customization directory.

Setting File Name and Storage Location

The polling function behavior setting file is stored in the following location during Manager installation or upgrading:

| Platform of Manager | Location |
|----------------------|--|
| Windows | \$INS_DIR\ESCManager\opt\FJSVssmgr\lib\devicepolling\DP_config.xml (\$INS_DIR means "Program Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /opt/FJSVssmgr/lib/devicepolling/DP_config.xml |

When customizing the polling function behavior, copy the polling function behavior setting file in the above location to the customization location shown below, and edit the copy of the file.

| Platform of Manager | Customization Location |
|----------------------|--|
| Windows | \$ENV_DIR\ESCManager\etc\opt\FJSVssmgr\current\devicepolling\DP_config.xml (\$ENV_DIR means "Environment Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /etc/opt/FJSVssmgr/current/devicepolling/DP_config.xml |

If the polling function behavior setting file exists in the customization location, Manager operates in accordance with the setting file. If not, it operates in accordance with the default setting file in the installation directory.


Setting File Format

Setting Contents

| Item | Description |
|-------------------------------|--|
| Polling interval | Polling operation interval (including during stoppage) |
| Device not subject to polling | Specify a device to exclude it from polling. |

Node Hierarchy

The tag node hierarchy is shown below.

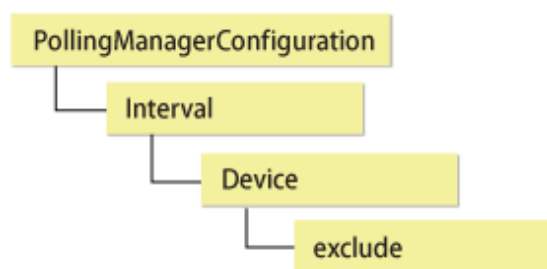

Tags and Attributes

Interval Tag

| Attribute Name | Description |
|----------------|---|
| value | A polling operation interval is set in seconds (decimal). The minimum interval is 30 seconds. If a value less than 30 is specified, 30 seconds is used for polling. Specifying 0 stops polling. |

Device/Exclude Tag

No attributes can be set in the Device tag. As many exclude tags as required can be set.

exclude Tag

| Attribute Name | Description |
|----------------|--|
| address | Specify the IP address of a device to exclude it from polling operations. For IP address, IPv4 or IPv6 format can be specified. |

Default Value

The default values of the parameters are as follows:

Polling interval: 60 seconds

Device not subject to polling: None

Sample Setting File

```
<?xml version="1.0" encoding="UTF-8" ?>
<PollingManagerConfiguration>
  <Interval value="60"/>
  <Device>
    <exclude address="10.20.30.40"/>
    <exclude address="10.20.30.50"/>
  </Device>
</PollingManagerConfiguration>
```

Customization (Control Event Linkage Setting File)



Note

- The portions that can be changed are the name attribute values of the ExternalScript1 and ExternalScript2 tags and the flag attribute value of the Convert tag only. The other portions may not be modified since the changes can possibly cause an abnormal behavior of the polling function.
- Events involving the server node agent are not posted to Systemwalker Centric Manager. Use the monitoring function of Systemwalker Centric Manager to monitor operating status.

Setting File Name and Storage Location

The setting file is stored in the following directory:

| Platform of Manager | Location |
|----------------------|---|
| Windows | \$INS_DIR\ESC\Manager\opt\FJSVssmgr\lib\snmpth\1_3_6_1_4_1_211_4_1_3_21_1.xml (\$INS_DIR means "Program Directory" specified at the Manager installation.) |
| Solaris OS, Linux | /opt/FJSVssmgr/lib/snmpth/1_3_6_1_4_1_211_4_1_3_21_1.xml |

Setting File Format

Setting Contents

| Item | Description |
|---------------------------------|---|
| External script name definition | Define the script name when using external script linkage. |
| Operation definition | Whether to display a posted status change Whether to output the event log Whether to implement linkage with Systemwalker Centric Manager and linkage with Shell/Bat Whether to implement external script linkage 1 Whether to implement external script linkage 2 |

Setting Method

- External Script name definition

When using external script linkage, define the script name in the name attribute of following definition lines (in full path specification).

| Item | Definition Line |
|---------------------------|---|
| external script linkage 1 | <ExternalScript1 name="c:\somedir\script1.bat" /> |
| external script linkage 2 | <ExternalScript2 name="c:\somedir\script2.bat" /> |

- Event linkage behavior definition

In the configuration file, there are following definition lines according to the events. To define Event linkage behavior, set in the flag attribute of each definition line.

| Event | Definition Line |
|---------------------------------------|---|
| When the status becomes normal | <Convert val="0" name="" level="I" flag="001111" /> |
| When the status becomes warning | <Convert val="1" name="" level="W" flag="001111" /> |
| When the status becomes error | <Convert val="2" name="" level="E" flag="001111" /> |
| When the status becomes timeout | <Convert val="3" name="" level="WT" flag="001111" /> |
| When communication has been recovered | <Convert val="10" name="" level="IR" flag="001111" /> |

Flag Attribute is shown below.

| Attribute Name | Description |
|----------------|---|
| flag | Control of event, linkage with Systemwalker Centric Manager, and linkage with Script (in 6-bits in binary) The "0" is interpreted as "off", the "1" is "on". bit5 ... External script linkage 2 bit4 ... External script linkage 1 bit3 ... Linkage with Systemwalker Centric Manager, Linkage |

| Attribute Name | Description |
|----------------|---|
| | with Shell/Bat bit2 ... Event log output bit1 ... (Cannot be changed) bit0 ... Status change notification For example, only linkage with Systemwalker Centric Manager is set to on "001000". |

A.8 Polling Service Setting File

Editing this setting file can customize the following operations controlled by polling service:

- Thin Provisioning Pool threshold monitoring
Monitoring interval of Thin Provisioning Pool threshold can be changed.
Default: 1 hour (3600 seconds)
- Thin Provisioning Pool capacity management
Time of collecting Thin Provisioning Pool capacity information can be changed.
Default: 1:00 A.M.
- Tier pool capacity management
Time of collecting Tier pool capacity information can be changed.
Default: 1:30 A.M.

This setting file is described in XML.

Reflecting File

If the setting file is changed, execute re-read definition file by using the Web Console, or reactivate the Manager. This reflects the settings on this software.

Customization



Note

- Do not delete the file, even if no items are specified.
- To customize the polling service, edit the file in the customization directory (not the one in the installation directory).

File Path and Name

When the Manager is installed or upgraded, the configuration file is stored in the directory below:

| Manager OS | Absolute Path Name |
|-------------------|--|
| Windows | \$INS_DIR\ESC\Manager\opt\FJSVssmgr\lib\polling\pollingService.xml, where \$INS_DIR is the "executable directory" specified during Manager installation. |
| Solaris OS, Linux | /opt/FJSVssmgr/lib/polling/pollingService.xml |

To customize the polling service, copy the configuration file in the directory above to the customization directory below, then edit it:

| Manager OS | Absolute Path Name (for Customization) |
|-------------------|---|
| Windows | \$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\polling\pollingService.xml, where \$ENV_DIR is the "environment directory" specified during Manager installation. |
| Solaris OS, Linux | /etc/opt/FJSVssmgr/current/polling/pollingService.xml |

If there is a configuration file in the customization directory, then the Manager uses it, otherwise it uses the default configuration file in the installation directory.


File Format

Contents

| Item | Content |
|--------------------------------------|--|
| Polling interval | Specify the following operation interval: <ul style="list-style-type: none"> - Monitoring interval of Thin Provisioning Pool threshold The following operations also can be stopped: <ul style="list-style-type: none"> - Thin Provisioning Pool threshold monitoring - Thin Provisioning Pool capacity management - Tier pool capacity management |
| Polling execution time specification | Specify the following execution time: <ul style="list-style-type: none"> - Time of collecting Thin Provisioning Pool capacity information - Time of collecting Tier pool capacity information |

Node Hierarchy

The tag node hierarchy for is displayed below:

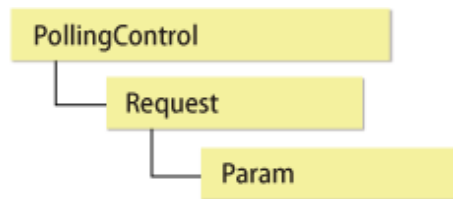

Tags and Attribute Types

Request Tag

| Attribute Name | Content |
|----------------|--|
| interval | <p>Polling interval in seconds (in decimal format).</p> <p>The minimum value is 30 - specifying shorter values will result in this value being used.</p> <p>The maximum value is 9223372036854775 - specifying larger values will result in this value being used.</p> <p>Note that values larger than 9223372036854775807 will cause an error.</p> <p>Specifying 0 will cause the polling to not be executed.</p> <p>If the "exectime" attribute is specified at the same time, polling is executed by default.</p> |
| exectime | <p>Polling execution time (in hh:mm:ss format - example: 21:15:00)</p> <p>hh has a valid range of 0 to 23, and mm and ss have a valid range of 0 to 59.</p> <p>If the "interval" attribute is specified at the same time, polling is executed by default.</p> |

Param Tag

None.

Sample Configuration File

```
<?xml version="1.0" encoding="UTF-8" ?>
<PollingControl name="Default" ver="1.0">
  <Request name="WatchAlarm"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolAlarm" interval="3600" />
  <param key="Warning" value="pool status changed: Warning" />
  <param key="Caution" value="pool status changed: Caution" />
  <param key="Normal" value="pool status changed: Normal" />
  <Request name="WatchCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolCapacity"
exectime="01:00:00" />
  <Request name="WatchTierPoolCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchTierPoolCapacity"
exectime="01:30:00" />
</PollingControl>
```

Example

Modification Method at Intervals That Observes Threshold of Thin Provisioning Pool:

Change the following part when you change the threshold watch interval of Thin Provisioning Pool.

The name attribute changes the interval attribute of the Request tag of "WatchAlarm". It specifies it at the second. Interval attribute is changed to "1800" when changing every 30 minutes.

```
<Request name="WatchAlarm"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolAlarm" interval="1800" />
```

To stop monitoring Thin Provisioning Pool threshold, change the interval attribute to "0".

```
<Request name="WatchAlarm"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolAlarm" interval="0" />
```

Example

Modification Method at Acquisition Time of Capacity Information on Thin Provisioning Pool:

Change the following part when you change acquisition time of capacity information on Thin Provisioning Pool.

The name attribute changes the exectime attribute of the Request tag of "WatchCapacity". The value is time (hh): (mm): It specifies it by second (ss). The exectime attribute is changed to "12:00:00" when changing at 12:00.

```
<Request name="WatchCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolCapacity" exectime="12:00:00" />
```

To stop collecting Thin Provisioning Pool capacity information, delete the exectime attribute and add the interval attribute as "0".

```
<Request name="WatchCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchPoolCapacity" interval="0" />
```

Example

How to change the time of collecting Tier pool capacity information

When changing the time of collecting Tier pool capacity information, change the following locations:

For the Request tag whose name attribute is "WatchTierPoolCapacity", change the exectime attribute. Specify the value in hour (hh): minute (mm): second (ss). When changing to 23:00, change the exectime attribute to 23:00:00.

```
<Request name="WatchTierPoolCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchTierPoolCapacity"
exectime="23:00:00" />
```

To stop collecting Tier pool capacity information, delete the exectime attribute and add the interval attribute as "0".

```
<Request name="WatchTierPoolCapacity"
className="com.fujitsu.storagesoft.services.polling.method.WatchTierPoolCapacity" interval="0" />
```

A.9 Explanation of Configuration Settings File

The configuration file of devices targeted by the performance management function can be configured by editing the configuration settings file.

The following devices can be customized:

- Fibre Channel switches and Fibre Channel switch blades that support performance monitoring

Reflecting File

If the file has been changed, then either start performance monitoring of targeted devices, or reactivate the Manager. This will reflect the contents of the file to this product.

Customization



Note

To restore the contents, the configuration file must be updated. Refer to ["7.2.9 Updating Configuration Information"](#) for details.

File Path and Name

A separate configuration settings file must be created for each device for which you want to change the configuration file.

| Manager OS | Absolute Path Name |
|---------------------|--|
| Windows | \$ENV_DIR\ESC\Manager\etc\opt\FJSVssmgr\current\perfconf\IP address.xml where \$ENV_DIR is the "environment directory" specified during Manager installation. |
| Solaris OS Linux | /etc/opt/FJSVssmgr/current/perfconf/IP address.xml |

Specify the following for file name:

| IP Address Set to Device | File Name |
|--------------------------|--|
| IPv4 address | ":" in the IP address set to device is replaced with "_". |
| IPv6 address | ":" in the IP address displayed in FC switch list is replaced with "_". Refer to "Display FC Switch List" in the <i>ETERNUS SF Web Console Guide</i> for the procedure to display FC switch list. |



Example

If IPv4 Address Is 10.20.30.40:

```
10_20_30_40.xml
```

If IPv6 Address Displayed in FC Switch List Is 2001:0:0:1::1:

```
2001_0_0_1__1.xml
```

port-baud-rate-X

Specify the port number in the X part of the property name (port-baud-rate-X).

Specify a port transfer rate value between 0 and 25 (Unit: Gbps).

Note

- Performance monitoring and threshold value monitoring cannot be used if 0 is set as the transfer rate of the port.
- The graph display function cannot be used if 0 is set as the transfer rate of the port.
- When the performance values are displayed as a graph, 0 is displayed as the performance value for intervals in which 0 is set as the transfer rate.
- If the specified transfer rate is invalid range, then the following values are displayed:

| Transfer Rate | Explanation |
|-----------------|----------------|
| Less than 0 | 0Gbps is set. |
| Greater than 25 | 25Gbps is set. |

Example

Setting 8Gbps as Transfer Rate for Ports 1 and 2:

```
port-baud-rate-1=8  
port-baud-rate-2=8
```

Point

The maximum transfer rate for the VE port of the Fibre Channel switch is set to the default of 1Gbps.

If the FCIP trunking function or the FCIP data compression function are enabled and a transfer quantity of 1Gbps or more occurs for the VE port, then you must change the VE port transfer rate.

Use the formula below to calculate the transfer rate:

```
Transfer rate = Compression ratio set for the VE port * Total bandwidth set for the VE port
```

Example

Method for Calculating Transfer Rate of VE Ports:

For the environment below:

- Compression ratio (4:1)
- Four FCIP circuits each with a bandwidth of 0.5Gbps set for the VE port

```
Transfer rate = Compression ratio (4:1) * Total bandwidth (0.5Gbps * 4 circuits)  
              = 4 * (0.5 * 4)  
              = 8(Gbps)
```

A.10 snmptrapd.conf Configuration File

In order for the Linux Manager to use SNMP Traps for fault monitoring, customize snmptrapd.conf (the configuration file included in the OS standard net-snmp package).

| Manager OS | Location |
|------------|--------------------------------|
| Linux | /etc/snmp/snmptrapd.conf |
| | /usr/share/snmp/snmptrapd.conf |

Reflecting File

If the file has been changed, then restart snmptrapd:

- In the case of RHEL5 or RHEL6

```
# /etc/init.d/snmptrapd stop
# /etc/init.d/snmptrapd start
```

- In the case of RHEL7

```
# systemctl stop snmptrapd.service
# systemctl start snmptrapd.service
```



Note

Restart the snmptrapd daemon and trpsrvd daemon for environments using the ServerView trap transfer program.

Customization

disableAuthorization

Set as shown below if you want to disable access control.

If not set, access control is enabled.

```
disableAuthorization yes
```



Note

- Check both /etc/snmp/snmptrapd.conf and /usr/share/snmp/snmptrapd.conf.
- If there are no requests from other products, then disable access control by setting this parameter to "yes".

authCommunity

This parameter can be customized if access control is enabled.

The format is displayed below:

```
authCommunity TYPES COMMUNITY [SOURCE [OID | -v VIEW ] ]

TYPES: log, execute, net
COMMUNITY: Community name of monitoring target SNMP trap
```

TYPES can be set to log, execute, or net. COMMUNITY must be set to the SNMP Trap community name of the monitoring target device. Do not set SOURCE, OID, or VIEW.

Set as shown below.

```
Example:
authCommunity net public
authCommunity net SANMA
```

If a device with an SNMP Trap community name other than "public" or "SANMA" is to be monitored, add an authCommunity entry. For example, if the device to be monitored has the community name "common", set this parameter as below. Note that the "public" and "SANMA" entries are mandatory.

```
Example:
authCommunity net public
authCommunity net SANMA
authCommunity net common
```

If authCommunity log or authCommunity execute has already been set by another product, in the TYPES field, then add "net", preceded by a comma. For example, set as shown below if authCommunity execute public is already set:

```
Example:
authCommunity execute,net public
```

Note

Check /etc/snmp and /usr/share/snmp, and edit snmptrapd.conf in the file that already has authCommunity set by another product. If there is no setting in either file, then edit /etc/snmp/snmptrapd.conf.

forward

Make sure that the following is set in /etc/snmp/snmptrapd.conf:

```
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

Examples

If Access Control Is Disabled

```
disableAuthorization yes
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

If Access Control Is Enabled

```
authCommunity net public
authCommunity net SANMA
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

Monitoring Device That Has SNMP Trap Community Name "common"

```
authCommunity net public
authCommunity net SANMA
authCommunity net common
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

If authCommunity Execute Public Has Already Been Set

```
authCommunity execute,net public
authCommunity net SANMA
forward default unix:/var/opt/FJSVssmgr/trap_socket
```

Note

After snmptrapd.conf is customized, if an application (such as ServerView AlarmService) that uses snmptrapd is installed or uninstalled, or if settings are changed, then make sure that the customized contents of snmptrapd.conf have not been changed.

A.11 policy.conf Parameter

It is a detailed configuration file of the Reporting function, and is stored in the following location.

| Platform of Manager | Absolute Path Name |
|---------------------|--|
| Windows | \$INS_DIR\Common\etc\report (\$INS_DIR means "Program Directory" specified at the ETERNUS SF Manager installation.) |
| Solaris OS, Linux | /etc/opt/FJSVesfcm/conf/report |

Reflecting Contents of Setting File

There is no special reflection method because of being read when the `esfadm report create` command is executed.

Customization

Format of Set Item

The preservation period of collected report information is specified.

Initialization is three months (`retention_period =0000-03-00`).

The date when the `esfadm report create` command was executed is the starting point, and the preservation period is specified in the form of "YYYY-MM-DD". Only one of YYYY, MM, and DD can be specified.

- YYYY: The preservation period is specified in number of years. Years that can be specified are from 0000 to 0010.
- MM: The preservation period is specified in number of months. Months that can be specified are from 00 to 12.
- DD: The preservation period is specified in number of days. Days that can be specified are from 00 to 31.

The message `esrpt00221` is output when two or more are specified, and the command terminates abnormally.

Examples

Preservation periods

- Policy setting

Example 1: `retention_period =0001-00-00`

Example 2: `retention_period =0000-01-00`

Example 3: `retention_period =0000-00-01`

- Execution date and time of command

8:00 on March 31, 2012

- Handling at preservation period

Example 1: The preservation period is one year from 8:00 on March 31, 2011 to 8:00 on March 31, 2012.

Example 2: The preservation period is one month from 8:00 on February 29, 2012 to 8:00 on March 31, 2012.

Example 3: The preservation period is one day from 8:00 on March 30, 2012 to 8:00 on March 31, 2012.

A.12 TFOConfig.ini Parameter

This file is saved at the following location of the Server Node as a setting file of Storage Cluster Controller:

| Platform of Agent | Location |
|-------------------|--|
| Windows | \$ENV_DIR\ESCAgent\etc\TFOConfig.ini (\$ENV_DIR means "Environment Directory" specified at the Agent installation.) |

Reflecting Contents of Setting File

The file is read and used when Agent starts.

To operate according to the contents of the file the restart of Agent is needed.

Customization

IP

Specify the IP address of a monitored storage device.

In IP address, IPv4 or IPv6 address can be entered.

Specify the IP address of one device in one row. If there are a number of monitored devices, enter their IP addresses in as many rows as monitored devices.

```
IP=IP address of monitored ETERNUS
```



- IPv6 address supports global addresses alone.
- If the specified IP address format is not correct, ignore the specification and continue the operation.
- If the same IP address is specified, do not regard it as error but monitor the specified IP address.
- The Storage Cluster Controller works only on Windows. On operating systems other than Windows, ignore the definition of this parameter.

Examples

When monitoring storage devices whose IP address is 1.1.1.1 and 1.1.1.10:

```
IP=1.1.1.1  
IP=1.1.1.10
```

Appendix B Troubleshooting

This appendix explains the most common problems that might be encountered during ETERNUS SF Storage Cruiser operation. Further, it explains basic troubleshooting and also provides information on where to find further help.

B.1 Collecting Troubleshooting Information

If a failure occurs in this software, the following troubleshooting information will be required:

Information for Initial Investigation

It is the information required for the initial analysis of problems.

The size of data should be small so that it can easily be sent by email.

Collect troubleshooting information immediately when a problem occurs. Sometimes, important information is lost over time.

Information for Further Investigation

The information for initial investigation can sometimes determine the cause of problems. However, some problems might require further, detailed troubleshooting information. Therefore, in case the cause of a problem cannot be determined from an initial investigation alone, it is required to collect more detailed information.

Collect information for further investigation and submit it to Fujitsu Technical Support if requested.



Note

- Sometimes, important information is lost over time. Collect troubleshooting information immediately when a problem occurs.
- When using the following to store the collected information, check if there is enough space in the filesystem to ensure system resources are not depleted or any effect is had on system operation.

| Platform | File system Which Attention is Necessary for Use |
|--|--|
| Windows | filesystem configured in the environment variable TEMP |
| Solaris OS, Linux, HP-UX, AIX | "/", "/var", and "/tmp" |

Also, be careful about space when a different directory is specified with the command option. Ensure there is sufficient space in the directory.

- As a material for investigation, the information will reach 200KB - 5 MB (the maximum size is 30MB with "-all" option). Also, it is necessary to reserve 5 - 30MB (30 - 80 MB with the "-all" option) for a temporary directory to store the information. The space required varies depending on operating environment, and the data described above is for reference.
- In a clustered system, execute the command to collect troubleshooting information on all the nodes making up the clustered system.

B.2 Information for Initial Investigation

When a system failure occurs, determine and analyze the cause of the problem as soon as possible.

This section explains information required for initial investigation.

Advantage

The information used for initial problem analysis can be acquired immediately, and is small enough to be sent by email.

B.2.1 Collecting Information from Management Server (Solaris OS)

Export the initial investigation information by using the Web Console.

If the export fails or the Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

Point

In cluster configurations, collect information on both the primary and secondary nodes of the Management Server.

1. Make a note of the error code (swsagXXXX), if an error dialog box is displayed.
2. Login to the server where you perform the operation.
Perform the operation with OS administrator permissions (root) after login.
3. Execute the esfsnap command.

```
# /opt/FJSVesfcm/bin/esfsnap -dir directory
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.2.2 Collecting Information from Management Server (Linux)

Export the initial investigation information by using the Web Console.

If the export fails or the Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

Point

In cluster configurations, collect information on both the primary and secondary nodes of the Management Server.

1. Make a note of the error code (swsagXXXX), if an error dialog box is displayed.
2. Login to the Management Server with OS administrator permissions (root).
OS administrator permissions are required to collect the information.
3. Execute the esfsnap command.

```
# /opt/FJSVesfcm/bin/esfsnap -dir directory
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.2.3 Collecting Information from Management Server (Windows)

Export the initial investigation information by using the Web Console.

If the export fails or the Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

1. Make a note of the error code (swsagXXXX), if an error dialog box is displayed.
2. Login to the Management Server with the user of an Administrators group.
OS administrator permissions are required to collect the information.
3. Execute the esfsnap command. The \$INS_DIR means "Program Directory" specified at the Manager installation.

```
C:\> $INS_DIR\Common\bin\esfsnap -dir directory
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.2.4 Collecting Information on Managed Server Node (Solaris OS)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server where you perform the operation.
Perform the operation with OS administrator permissions (root) after login.
2. Execute the agentsnap command.

```
# /opt/FJSVssage/sys/agentsnap [-dir directory]
```

It is possible to change a directory to save the information by specifying -dir option. If the option is omitted, information will be saved in /var/tmp.

B.2.5 Collecting Information on Managed Server Node (Windows)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node with the user of an Administrators group.
OS administrator permissions are required to collect the information.
2. Execute the agentsnap command. The \$INS_DIR means "Program Directory" specified at the Agent installation.

```
C:\> $INS_DIR\ESC\Agent\sbin\agentsnap -dir directory
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

3. Collect event log of Windows by Event Viewer which is a standard application of Windows.
Run "Event Viewer", select [Action] - [Save Log File As], and save the following event log files.
 - System files
 - Application files

B.2.6 Collecting Information on Managed Server Node (Linux)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node with OS administrator permissions (root).
OS administrator permissions are required to collect the information.
2. Execute the agentsnap command.

```
# /opt/FJSVssage/sys/agentsnap [-dir directory]
```

It is possible to change a directory to save the information by specifying -dir option. If the option is omitted, information will be saved in /tmp.

B.2.7 Collecting Information on Managed Server Node (HP-UX)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

Collect information directly by cp command.

1. Collect system log files.
Collect all files from the directory below.
 - /var/adm/syslog/syslog.log
 - /var/adm/syslog/OLDSyslog.log (If exists)
2. Collect trace log files.
Collect all files from /var/opt/FJSVssage directory. (including sub-directories)

3. Collecting setting files.
Collect all files from /etc/opt/FJSVssage directory. (including sub-directories)
4. Collect core file, if it exists on the root directory "/".

B.2.8 Collecting Information on Managed Server Node (AIX)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

Collect information directly by cp command.

1. Collect trace log files.
Collect all files from /var/opt/FJSVssage directory. (including sub-directories)
2. Collecting setting files.
Collect all files from /etc/opt/FJSVssage directory. (including sub-directories)
3. Collect core file, if it exists on the root directory "/".
4. Collect the files specified as a error log file.
Example: /var/adm/ras/errlog
5. Collect syslog files when you make settings so that syslog messages are displayed.

B.3 Information for Further Investigation

If it is not possible to determine the cause of the problem in the initial investigation, further detailed information may be needed.

This section explains how to collect required information to resolve the problem.

Data Feature

As there is various information required in order to determine the cause of the problem, the size of the data will be greater than that used for the initial investigation.

B.3.1 Collecting Information from Management Server (Solaris OS)

Export the initial investigation information by using the Web Console.

If the export fails or the Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.



Point

.....
In cluster configurations, collect information on both the primary and secondary nodes of the Management Server.
.....

1. Login to the server where you perform the operation.
Perform the operation with OS administrator permissions (root) after login.
2. Execute the fjsnap command or esfsnap command.
Usually, use the fjsnap command. If fjsnap command cannot be executed for some reason, use the esfsnap command.
 - fjsnap command
/opt/FJSVsnap/bin/fjsnap -a *output*
Replace the variable *output* with the name of the output medium or specific file name to save the collected information.
 - esfsnap command
/opt/FJSVesfcm/bin/esfsnap -dir *directory* -all

Specify the directory to save the information with `-dir` option (The `-dir` option cannot be omitted).

B.3.2 Collecting Information from Management Server (Linux)

Export the initial investigation information by using the Web Console.

If the export fails or the Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

Point

.....
In cluster configurations, collect information on both the primary and secondary nodes of the Management Server.
.....

1. Login to the Management Server with OS administrator permissions (root).

OS administrator permissions are required to collect the information.

2. Execute the `fjsnap` command and `esfsnap` command.

Execute both commands. If the `fjsnap` command cannot be executed for some reason, use only the `esfsnap` command.

- `fjsnap` command

```
# /opt/FJSVsnap/bin/fjsnap -a output
```

Replace the variable `output` with the name of the output medium or specific file name to save the collected information.

- `esfsnap` command

```
# /opt/FJSVesfcm/bin/esfsnap -dir directory -all
```

Specify the directory to save the information with `-dir` option (The `-dir` option cannot be omitted).

B.3.3 Collecting Information from Management Server (Windows)

Export the initial investigation information by using the Web Console.

If the export fails or the Web Console cannot be used, collect the information as follows. Submit the information to Fujitsu Technical Support.

1. Login to the Management Server with the user of an Administrators group.

OS administrator permissions are required to collect the information.

2. Execute the `esfsnap` command. The `$INS_DIR` means "Program Directory" specified at the Manager installation.

```
C:\> $INS_DIR\Common\bin\esfsnap -dir directory -all
```

Specify the directory to save the information with `-dir` option (The `-dir` option cannot be omitted).

B.3.4 Collecting Information on Managed Server Node (Solaris OS)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server where you perform the operation.

Perform the operation with OS administrator permissions (root) after login.

2. Execute the `agentsnap` command.

```
# /opt/FJSVssage/sys/agentsnap [-dir directory] -all
```

It is possible to change a directory to save the information by specifying `-dir` option. If the option is omitted, information will be saved in `/var/tmp`.

B.3.5 Collecting Information on Managed Server Node (Windows)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node with the user of an Administrators group.
OS administrator permissions are required to collect the information.
2. Execute the agentsnap command. The \$INS_DIR means "Program Directory" specified at the Agent installation.

```
C:\> $INS_DIR\ESC\Agent\sbin\agentsnap -dir directory -all
```

Specify the directory to save the information with -dir option (The -dir option cannot be omitted).

B.3.6 Collecting Information on Managed Server Node (Linux)

The method for collecting information is as follows. Submit the information to Fujitsu Technical Support.

1. Login to the server node with OS administrator permissions (root).
OS administrator permissions are required to collect the information.
2. Execute the agentsnap command.

```
# /opt/FJSVssage/sys/agentsnap [-dir directory] -all
```

It is possible to change a directory to save the information by specifying -dir option. If the option is omitted, information will be saved in /tmp.

B.3.7 Collecting Information on Managed Server Node (HP-UX)

Collect the information which is required by Fujitsu Technical Support, and submit the file to them.

B.3.8 Collecting Information on Managed Server Node (AIX)

Collect the information which is required by Fujitsu Technical Support, and submit the file to them.

Appendix C How to Check Product Version

This appendix describes how to check version of installed ETERNUS SF Storage Cruiser.

Point

- ETERNUS SF Storage Cruiser can be operated even if a different version of the agent and manager. Therefore, ETERNUS SF Storage Cruiser to determine the exact use of the environment, you must determine the version of each component.
- How to check version is different for each platform. ETERNUS SF Storage Cruiser check from the platform of the system components are installed, read how to determine the appropriate platform.
- Although the ETERNUS SF Storage Cruiser manager is compatible with some lower version agents, not all ETERNUS SF Storage Cruiser features maybe available.

C.1 Checking Product Version in Windows Operating System

Check the product version according to the procedure shown below.

1. Logon to Windows operating system, ETERNUS SF Storage Cruiser component is installed.
2. Open the window that can add or remove programs.
 - For Windows Server 2003
From the Control Panel, open the [Add or Remove Programs] screen.
 - For Windows Server 2008 or later
From the Control Panel, open the [Programs and Features] screen.
3. Select ETERNUS SF Storage Cruiser component on "Add or Remove Programs" window.
The following is ETERNUS SF Storage Cruiser component and program name.

| Component Name | Program Name |
|----------------|----------------------------------|
| Manager | ETERNUS SF Manager |
| Agent | ETERNUS SF Storage Cruiser Agent |

4. A screen is displayed to confirm the version information.
 - For Windows Server 2003
Click "Click here for support information." in step 3.
 - For Windows Server 2008 or later
Continue with step 5.
5. Confirm the version information.
 - For Windows Server 2003
Confirm the version information in "Support information" dialog.
 - For Windows Server 2008 or later
Confirm the version information, displayed in the [Programs and Features] screen.

C.2 Checking Product Version in Solaris OS

Check the product version according to the procedure shown below.

1. Logon to Solaris OS, ETERNUS SF Storage Cruiser component is installed.
The root(superuser) privileges are not required.

2. Perform the check version according to the command shown below.

- To check Manager version

```
# pkginfo -l FJSVssmge
```

- To check agent version

```
# pkginfo -l FJSVssage
```

3. pkginfo command output that results from, VERSION verify information.

ETERNUS SF Storage Cruiser VERSION component information, xx.y.z format (x, y and z are numbers) will be output. Of these, xx.y is part of the specified components and versions.

For example, it is output as 16.2.0.

C.3 Checking Product Version in Linux

Check the product version according to the procedure shown below.

1. Logon to Linux, ETERNUS SF Storage Cruiser component is installed.

The root(superuser) privileges are not required.

2. Perform the check version according to the command shown below.

- To check Manager version

```
# rpm -qi FJSVssmge
```

- To check agent version

```
# rpm -qi FJSVssage
```

3. rpm command output that results from, VERSION verify information.

ETERNUS SF Storage Cruiser VERSION component information, xx.y.z format (x, y and z are numbers) will be output. Of these, xx.y is part of the specified components and versions.

For example, it is output as 16.2.0.



Information

Depending on your version of the product, Version 14.0.0_40I32 may be output and so on. However, if you please 14.x version is part of the decision.

C.4 Checking Product Version in HP-UX

Check the product version according to the procedure shown below.

In addition, HP-UX running on ETERNUS SF Storage Cruiser is the only component of the agent and explained to the agent.

1. Logon to HP-UX, ETERNUS SF Storage Cruiser component is installed.

The root(superuser) privileges are not required.

2. Perform the check version according to the command shown below.

```
# /usr/sbin/swlist | grep FJSVssage
```

3. The result of command execution, output is as follows:

```
# /usr/sbin/swlist | grep FJSVssage
FJSVssage      13.4.0      ETERNUS SF Storage Cruiser Agent
#
```

Version information is output in the second column. If the value in the second column is 13.4.n (n is an arbitrary number), it is the most up-to-date version.

C.5 Checking Product Version in AIX

Check the product version according to the procedure shown below.

In addition, AIX running on ETERNUS SF Storage Cruiser is the only component of the agent and explained to the agent.

1. Logon to AIX, ETERNUS SF Storage Cruiser component is installed.
The root(superuser) privileges are not required.
2. Perform the check version according to the command shown below.

```
# /usr/bin/cat /etc/opt/FJSVssage/version.dat
```

3. The result of command execution, output is as follows:

```
# /usr/bin/cat /etc/opt/FJSVssage/version.dat
version=15.1.0
#
```

Version information is output in the form of "x.y.z" (x, y, and z are digit).

Appendix D Operations Other Than Operations on Switches within System Managed on Storage Cruiser

This section explains the operation points in cases when managing the system configuration storage devices and servers including switches not supported by Storage Cruiser.

- Register all devices that are supported by Storage Cruiser in Storage Cruiser.
- There are limits to the capabilities that can be used with access path management. Refer to the following for details.

Access Path Management

Access Path Setting/Deletion/Inheritance

Login to the switch on the access path route and perform the setting/deletion/inheritance operation on the access path after setting or deleting the zoning information.

Access Path Status

The access path status cannot be managed on Storage Cruiser. Manage other management software.
When checking the access path status with the Web Console, the access path status will always be "Warning".

