

PRIMECLUSTER

Global Link Services

Configuration and Administration Guide 4.3 Redundant Line Control Function for Virtual NIC Mode

Oracle Solaris

J2S2-1623-02ENZ0(04)
October 2017

Preface

This document describes the functions, installation, and operation procedure of Redundant Line Control Function for Virtual NIC Mode that is a function of Global Link Services (hereinafter GLS).

Who should use this document

This document is intended for system administrators responsible for the installation and administration of Redundant Line Control Function by using the virtual NIC mode. It is premised that they understand the network services of Oracle Solaris and the PRIMECLUSTER which is a basic function of the cluster control, and the description of some terms may be omitted to avoid lengthy expression.

Abstract

The document consists of the following chapters, appendices, and a glossary:

[Chapter 1 Overview](#)

This chapter describes the concept of the redundant line control function using the virtual NIC mode.

[Chapter 2 Functions](#)

This chapter describes the functions provided in the virtual NIC mode.

[Chapter 3 Environment configuration](#)

This chapter describes how to set up and configure the virtual NIC mode.

[Chapter 4 Operation](#)

This chapter describes how to operate the virtual NIC mode.

[Chapter 5 Maintenance](#)

This chapter describes how to collect troubleshooting information and take corrective action in the event of a virtual NIC mode failure.

[Chapter 6 DR \(Dynamic Reconfiguration\) function/PHP \(PCI Hot Plug\) function](#)

This chapter describes how to replace a system board or PCI card using DR or PHP function.

[Appendix A Command Reference](#)

This chapter describes how to use commands provided in the virtual NIC mode.

[Appendix B Messages and corrective actions](#)

This appendix describes messages of the virtual NIC mode.

[Glossary](#)

This section explains terms used in this manual.

Related Documentation

Refer to the following manuals if necessary:

- PRIMECLUSTER Global Link Services Configuration and Administration Guide: Redundant Line Control Function
- PRIMECLUSTER Concepts Guide
- Fujitsu M10/SPARC M10 Systems XSCF Reference Manual
- Fujitsu M10/SPARC M10 Systems Domain Configuration Guide
- Fujitsu M10-1/SPARC M10-1 Service Manual
- Fujitsu M10-4/Fujitsu M10-4S/SPARC M10-4/SPARC M10-4S Service Manual
- PCI Expansion Unit for Fujitsu M10/SPARC M10 Systems Service Manual
- SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User's Guide
- SPARC Enterprise M4000/M5000/M8000/M9000 Servers Dynamic Reconfiguration (DR) User's Guide

- SPARC Enterprise M4000/M5000 Servers Service Manual
- SPARC Enterprise M8000/M9000 Servers Service Manual

Notational conventions

Symbols

Material of particular interest is preceded by the following symbols in this manual:



.....
Describe the contents of an important point.
.....



.....
Describes the points the users should pay close attention to.
.....



.....
Describes the content by using an example.
.....



.....
Provides useful information related to the topic.
.....



.....
Provides manuals for users' reference.
.....

Abbreviated name

- Oracle Solaris might be described as Solaris or Solaris Operating System.
- Oracle Solaris 10 is abbreviated as Solaris 10.
- Oracle Solaris 11 is abbreviated as Solaris 11.
- Oracle VM Server for SPARC is abbreviated as Oracle VM.
- Oracle Solaris Zones is abbreviated as Solaris Zones.

Export Controls

Exportation/release of this document may require necessary procedures in accordance with the regulations of your resident country and/or US export control laws.

Trademarks

- UNIX is a registered trademark of The Open Group in the United States and other countries.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.
- Ethernet is a trademark of Fuji Xerox Corporation.
- PRIMECLUSTER is a registered trademark of Fujitsu Ltd.

- Other product names are product names, trademarks, or registered trademarks of these companies.

Date of publication and edition

December 2012, First edition
February 2013, Second edition
June 2013, 2.1 edition
July 2014, 2.2 edition
May 2016, 2.3 edition
October 2017, 2.4 edition

High Risk Activity

This Product is designed, developed and manufactured as contemplated for general use, including without limitation, general office use, personal use, household use, and ordinary industrial use, but is not designed, developed and manufactured as contemplated for use accompanying fatal risks or dangers that, unless extremely high safety is secured, could lead directly to death, personal injury, severe physical damage or other loss (hereinafter "High Safety Required Use"), including without limitation, nuclear reaction control in nuclear facility, aircraft flight control, air traffic control, mass transport control, medical life support system, missile launch control in weapon system. You shall not use this Product without securing the sufficient safety required for the High Safety Required Use. If you wish to use this Product for High Safety Required Use, please consult with our sales representatives before such use.

Requests

- No part of this document may be reproduced or copied without permission of FUJITSU LIMITED.
- The contents of this document may be revised without prior notice.

All Rights Reserved, Copyright (C) FUJITSU LIMITED 2012-2017.

Revision History

Revision	Location	Edition
Added the notes for virtual interfaces.	3.3 Notes on setting a configuration	2.1
Added the note for deleting a virtual NIC in -n fjvnet-link option of (1) create command.	A.1 rvnetadm command	
Added information for the message priorities and facilities.	B.2 Output message	
Added the virtual network device used for the SR-IOV function and in an Oracle VM environment as an interface that cannot be configured under the virtual NIC.	3.3 Notes on setting a configuration	2.2
Added SPARC M10-4S as DR compatible model of the virtual NIC mode.	Chapter 6 DR (Dynamic Reconfiguration) function/PHP (PCI Hot Plug) function	
Added reference manuals for SPARC M10-4S.	Chapter 6 DR (Dynamic Reconfiguration) function/PHP (PCI Hot Plug) function 6.1.2 Replacing the system board	
Added the example for SPARC M10-4S.	6.1.2 Replacing the system board	
Added Note when disconnecting the system board.	6.1.2 Replacing the system board	
Added Note when connecting the system board.	6.1.2 Replacing the system board	
Added the notes on 903 and 904 messages.	2.1.1 Link status monitoring function	

Revision	Location	Edition
Added the notes when changing MAC address of the virtual NIC.	3.3 Notes on setting a configuration	
Added additional notes.	4.4 Notes on the Operation	
Added the description of manuals referred to when using the PHP function.	Chapter 6 DR (Dynamic Reconfiguration) function/PHP (PCI Hot Plug) function	
Changed the procedures to disconnect and connect the PCI card.	6.2.2 Replacing the PCI card	
Changed the descriptions of - a option and -m off option described in (7) set-prop command.	A.1 rvnetadm command	
Added "3.1 Checking system resources."	3.1 Checking system resources	2.4
Changed the description of set-param command.	A.1 rvnetadm command	
Changed the description of show-param command.	A.1 rvnetadm command	

Contents

Chapter 1 Overview.....	1
1.1 What is redundant line control?.....	1
1.2 Conditions.....	1
1.3 Redundant line control effects.....	2
1.4 System Configuration.....	2
Chapter 2 Functions.....	5
2.1 Fault monitoring function.....	5
2.1.1 Link status monitoring function.....	5
2.1.2 Network monitoring function.....	6
2.2 Switching function.....	6
2.3 Other functions.....	14
2.3.1 Communication method.....	14
2.3.2 Direct communication between zones.....	15
Chapter 3 Environment configuration.....	16
3.1 Checking system resources.....	16
3.2 Additional virtual NIC setup.....	16
3.2.1 Setting up a virtual NIC in a physical server environment.....	16
3.2.2 Setting up a virtual NIC in a Solaris Zones environment.....	17
3.2.3 Setting up a virtual NIC in an Oracle VM environment.....	19
3.3 Deleting a virtual NIC.....	20
3.3.1 Deleting a virtual NIC in a physical server environment.....	20
3.3.2 Deleting a virtual NIC in a Solaris Zones environment.....	21
3.3.3 Deleting a virtual NIC in an Oracle VM environment.....	22
3.4 Notes on setting a configuration.....	23
Chapter 4 Operation.....	26
4.1 Starting and Stopping virtual NICs.....	26
4.1.1 Starting virtual NICs.....	26
4.1.2 Stopping virtual NICs.....	26
4.2 Displaying Operation Status.....	26
4.2.1 When an error is detected by the link status monitoring function.....	26
4.2.2 When an error is detected by the network monitoring function.....	28
4.3 Recovery from Failure.....	29
4.4 Notes on the Operation.....	29
Chapter 5 Maintenance.....	30
5.1 Collecting data when an error occurred.....	30
5.2 Backing up and restoring the environment configuration information.....	30
5.2.1 Backing up the environment configuration information.....	30
5.2.2 Restoring the environment configuration information.....	30
Chapter 6 DR (Dynamic Reconfiguration) function/PHP (PCI Hot Plug) function.....	31
6.1 When using the DR function.....	31
6.1.1 Recommended configuration.....	31
6.1.2 Replacing the system board.....	32
6.2 When using the PHP function.....	34
6.2.1 Recommended configuration.....	34
6.2.2 Replacing the PCI card.....	34
Appendix A Command Reference.....	37
A.1 rvnetadm command.....	37
A.2 rvnetstat command.....	47
A.3 rvnet_snap command.....	51
Appendix B Messages and corrective actions.....	54

B.1 Message format.....	54
B.2 Output message.....	54
Glossary.....	60

Chapter 1 Overview

This chapter describes the concept of the redundant line control function using the virtual NIC mode.

1.1 What is redundant line control?

The redundant line control function of Global Link Services (hereinafter GLS) provides a high-reliability communication infrastructure that supports continuous transmission in the event of a network path or card failure by making transmission routes redundant with multiple NIC (Network Interface Cards). GLS enables the following four network control methods:

- Fast switching mode
- NIC switching mode
- GS/SURE linkage mode
- Virtual NIC mode


This section describes the virtual NIC mode. For other modes, see "PRIMECLUSTER Global Link Services Configuration and Administration Guide 4.3 Redundant Line Control Function."

Virtual NIC mode

Virtual NIC mode provides a high-reliability communication by grouping multiple network interfaces on the same network as one virtual interface. If one transmission route fails, ongoing communications will be switched to the other transmission route. There are no restrictions on remote systems to communicate with. When comparing the virtual NIC mode to the NIC switching mode which makes network interfaces on the same network redundant, there are the following features:

- Specifying IP addresses to be monitored is unnecessary by the fault monitoring function
- In Solaris Zones environments, the virtual NIC is available from not only a global zone but also a non-global zone
- In Oracle VM environments, the configuration where virtual interfaces connect to virtual switches is available

Figure 1.1 Virtual NIC mode

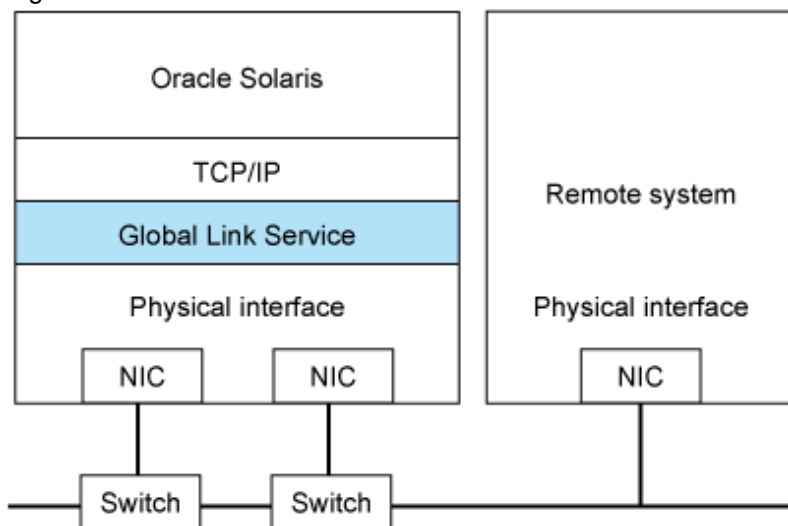

1.2 Conditions

The following describes conditions of the virtual NIC mode.

Description	Condition
Available upper protocol	IPv4 and IPv6 protocol

Description	Condition
Available application	Application for TCP/IP communication
Connectable remote device	Optional
Available NIC	Up to two physical interfaces (net0, net1, and etc.) corresponding to GLDv3 and link aggregation interfaces (aggr0, aggr1, and etc.) can be specified.
Sharing NIC	Multiple virtual NICs are created on the grouped one interface and NICs are shared between virtual NICs.
Setting up MAC address	For each virtual NIC, a unique MAC address is automatically set. Moreover, an optional MAC address can also be set.
Setting up IP address	IP addresses can be set with the management command of the operating system such as ipadm(1M) or ifconfig(1M) by the same procedure as the NIC.

1.3 Redundant line control effects

Virtual interfaces of virtual NIC mode enables the efficient use of network resources such as a NIC and builds a high-reliability network easily. Also, it performs the optimum switching control according to the location of failures in the event of a network failure to continue the communication.

Virtual NIC mode can be used in virtual environments (exclusive IP zones in a Solaris Zones and guest domain in Oracle VM) in addition to the configuration of the existing physical server.


1.4 System Configuration

The following describes the system configuration of the virtual NIC mode.

System configuration of a physical server

Bundle physical interfaces "net0" and "net1" to configure the virtual NIC "fjvnet0."


Figure 1.2 System configuration of a physical server

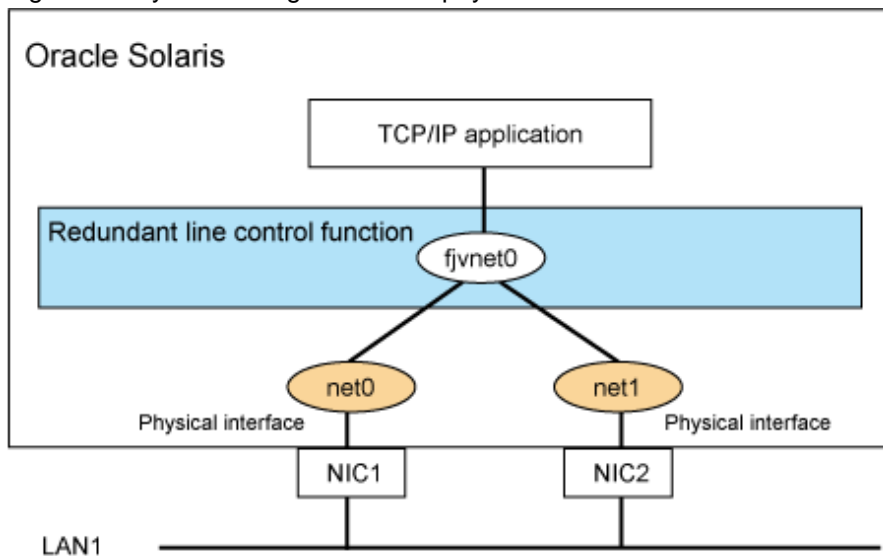

System configuration of Solaris Zones

Bundle physical interfaces "net0" and "net1" to configure the virtual NICs "fjvnet0" and "fjvnet1." Then, allocate them to non-global zones.


Figure 1.3 System configuration of Solaris Zones

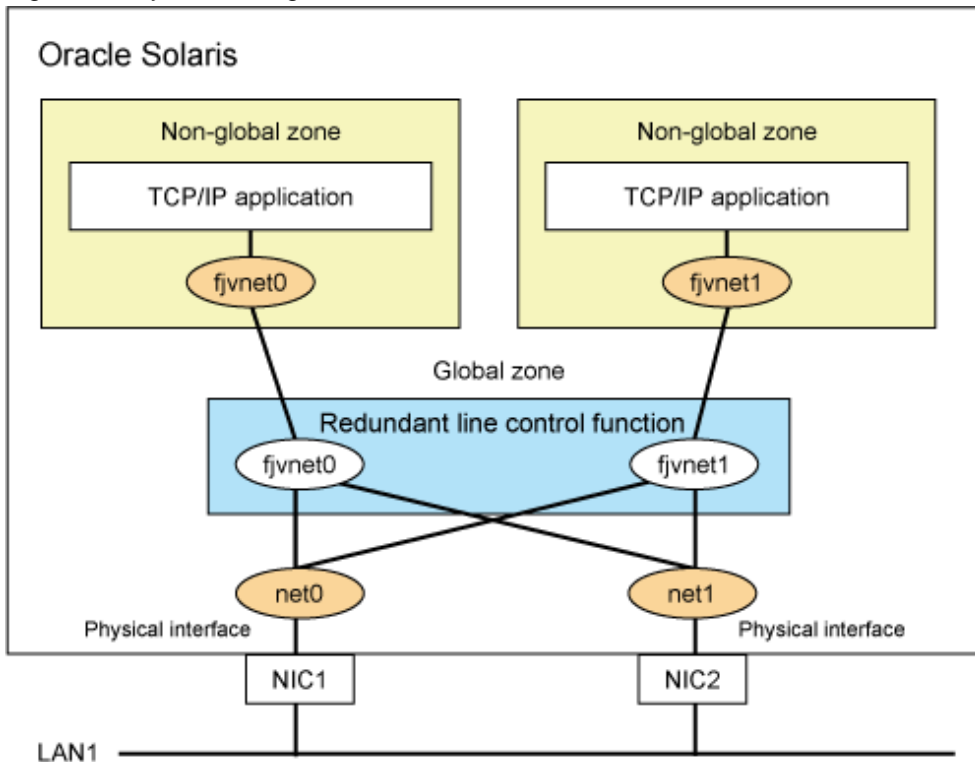

System configuration of Oracle VM

Bundle physical interfaces "net0" and "net1" to configure the virtual NIC "fjvnet0." The virtual NIC "fjvnet0" is connected to a virtual switch and communicate with a guest domain.

Figure 1.4 System configuration of Oracle VM

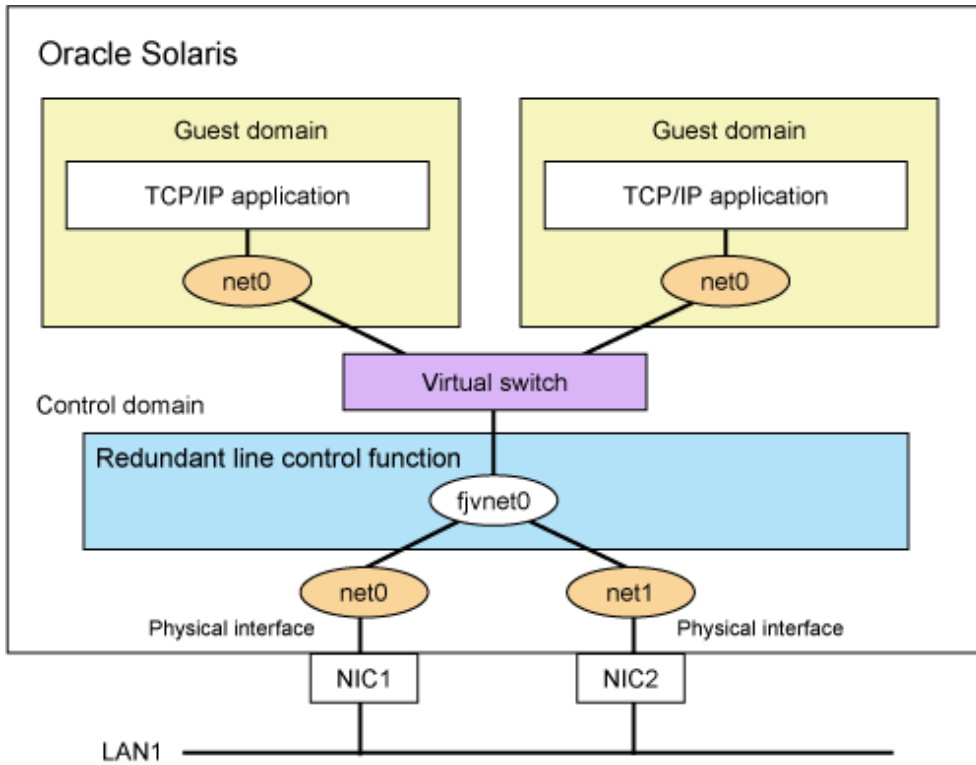

Chapter 2 Functions

This chapter describes functions provided by the virtual NIC mode.

- Fault monitoring function
- Switching function
- Other functions

2.1 Fault monitoring function

In the virtual NIC mode, failures are detected by the following monitoring functions. The fault monitoring function is started automatically by activating virtual NICs.


- Link status monitoring function
- Network monitoring function

2.1.1 Link status monitoring function

Link status monitoring function monitors the link status of interfaces regularly and detects link down and link up failures.

When the link status monitoring function detects link down of an interface at the operation side, if the interface at the standby side is available, the communication path is immediately switched.

Figure 2.1 Link status monitoring function

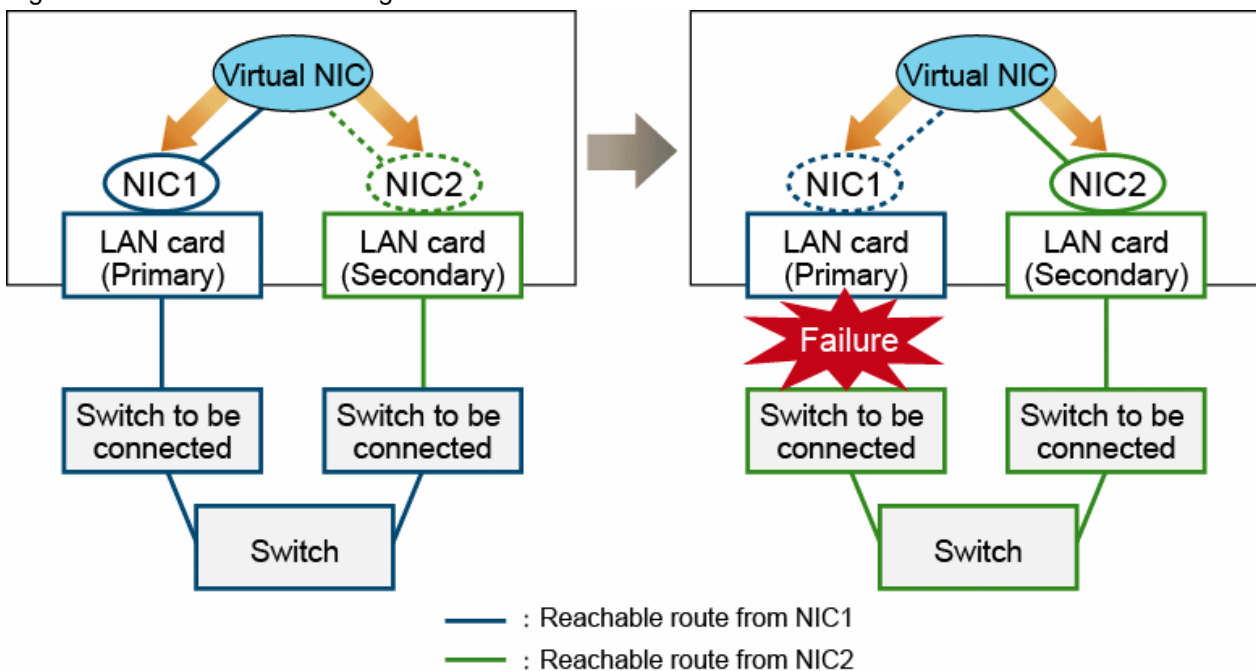

Note

When the virtual NIC is generated at OS startup, the physical NICs are connected to the virtual interface. At this time, if the physical NICs are not ready to link up, the error message number 904 is output to the syslog. After that, if the message number 903 is output, no action is required. If the message 903 is not output, check the link status of the physical NICs bundled by the virtual NIC.

The error message number 904 is output both when Link Status Propagation of the virtual NIC is enabled or disabled.

```
ERROR: 90400: link down detected: the virtual interface link is down.(virtual-interface)
```

```
INFO: 90300: link up detected: the virtual interface link is up.(virtual-interface)
```


2.1.2 Network monitoring function

Network monitoring function detects switch hangs and communication path failures between switches.

Monitoring daemons periodically exchange heartbeat messages between redundant NICs so that the network monitoring function can monitor the network status. If no heartbeat messages are exchanged, the virtual NICs select optimum NICs for each communication targets among the grouped multiple NICs and this enables the reliable communication.

By default, it takes about 10 seconds to detect heartbeat failures.

Figure 2.2 Network monitoring function

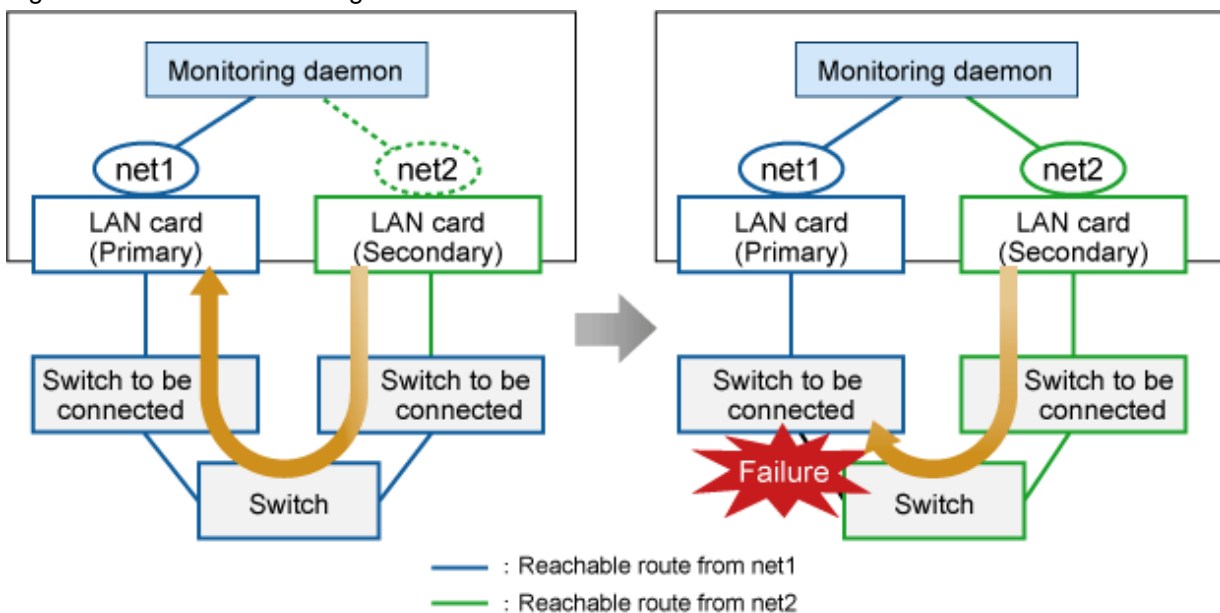

Information

- The monitoring is shared in the virtual interface which bundles the same physical NIC in the same order.
- When the virtual interface state is "inactive", startup of the monitoring is suspended. After the virtual interface is activated, the monitoring is started.

2.2 Switching function

Switching function switches a path used for communication depending on network topology changes due to network failures and recovery.

If an error is detected by the link status monitoring, the communication is continued by switching the system to the standby NIC.

If an error is detected by the network monitoring, the communication is continued in all NICs. However, once the communication path is recovered, the only one NIC can carry out the operation.

Here, describes examples in the following states:

- During normal operation


- In the event of NIC failures
- In the event of link failures between switches
- In the event of switch failures
- At a switch failure recovery

During normal operation

When all NICs and switches are operated normally, a virtual NIC uses redundant NIC exclusively (NIC1: Active, NIC2: Standby) to carry out the communication.

In this case, the communication for all the remote systems is carried out in NIC1 and the status of NIC2 will be "Standby."


Figure 2.3 Communication type during normal operation

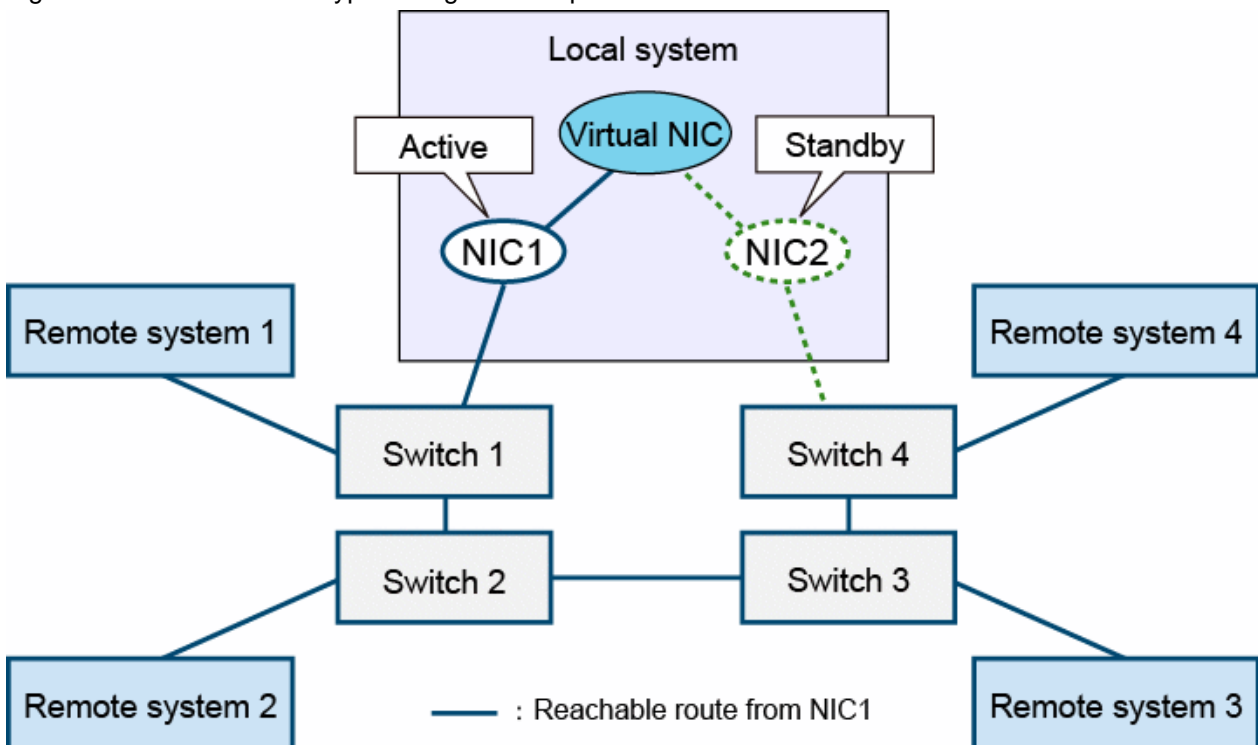

In the event of NIC failures

When an error occurred in NIC1 or Switch 1 of the connection target and NIC1 is in the link down state, the communication can be continued by switching NIC1 to NIC2. In this case, the communication for all the remote systems is carried out with NIC2.


Figure 2.4 Communication type in the event of NIC failures

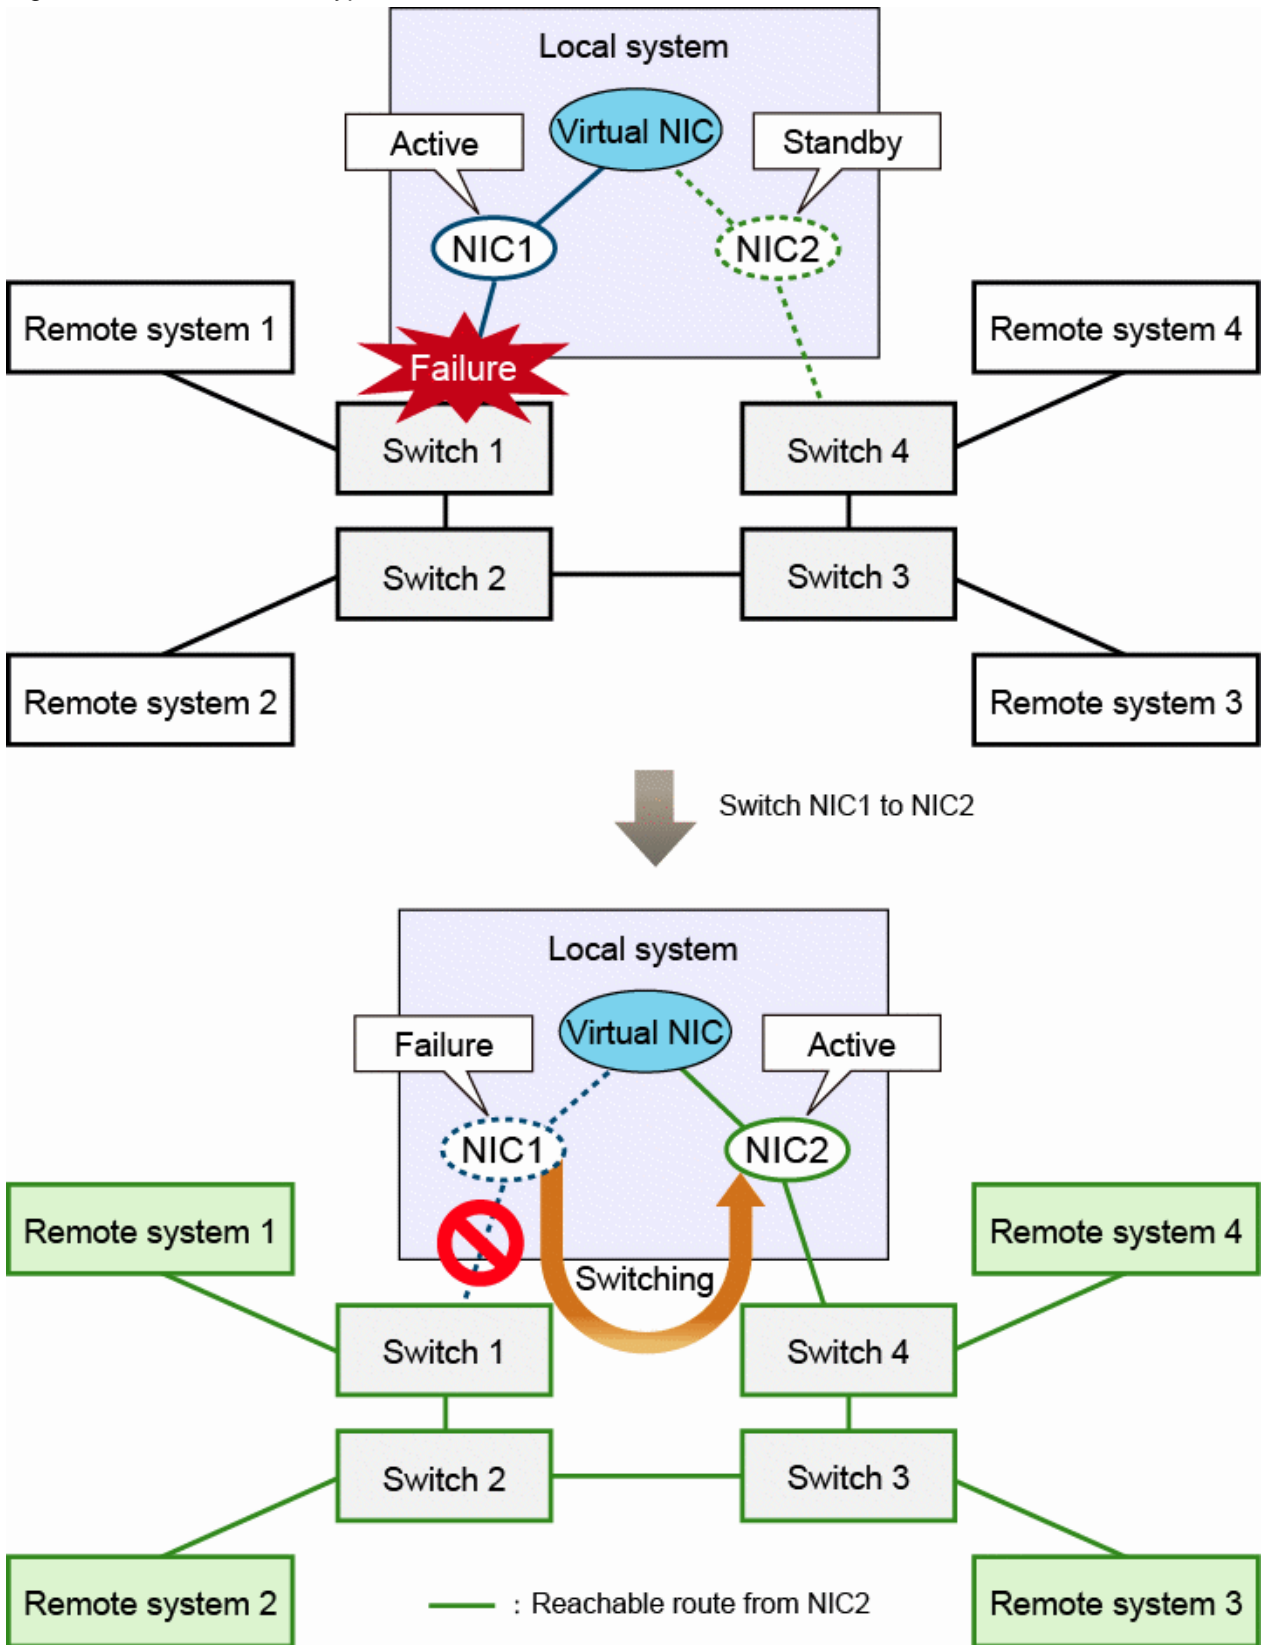

In the event of link failures between switches

If a link error occurred between Switch 2 and Switch 3, since the network is divided into two parts, the communication for the remote systems 1 and 2 can be continued. However, the ones for 3 and 4 will be disabled. In this case, make NIC2 "Active" state in addition to NIC1 so that the communication for the remote systems 3 and 4 will be continued.


Figure 2.5 Communication type in the event of link failures between Switch 2 and 3

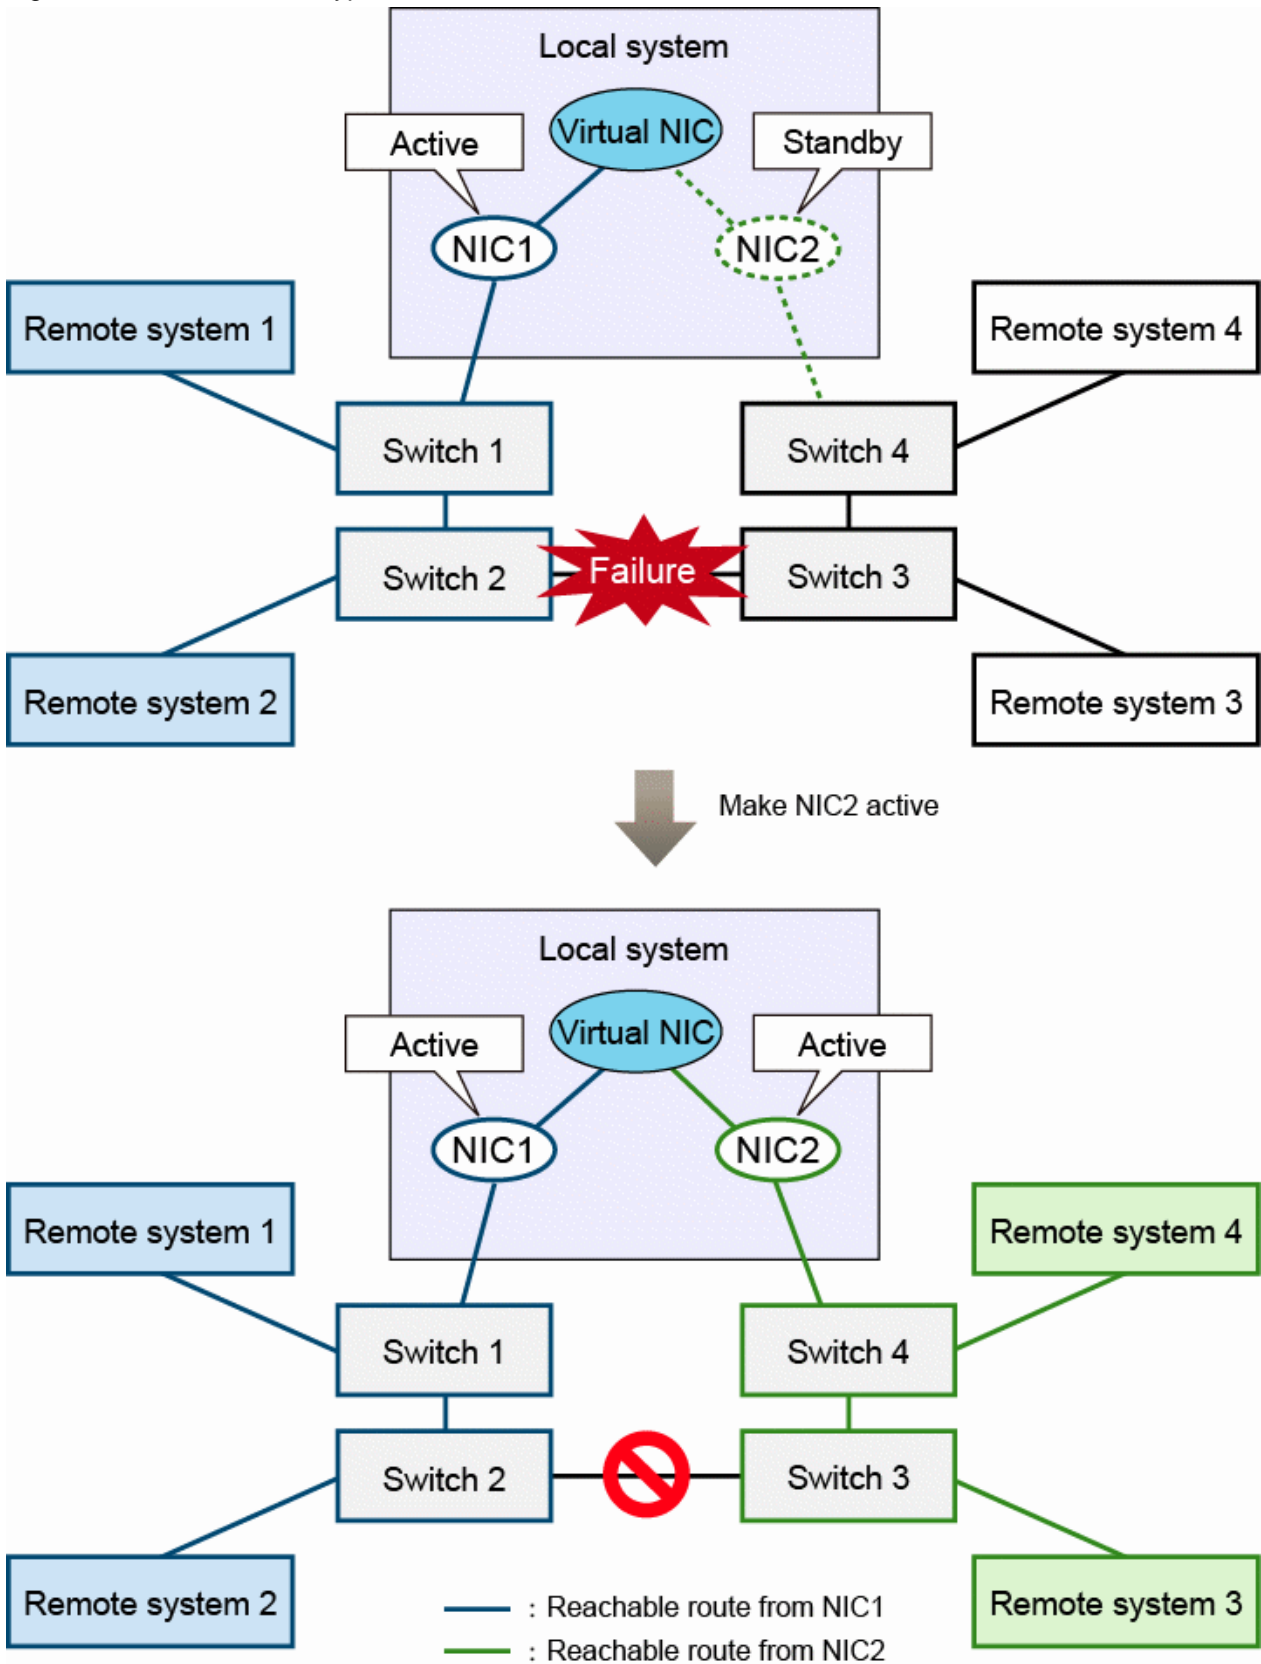

In the event of switch failures

In the event of Switch 3 failures, make NIC2 "Active" state so that the communication for the remote system 4 will be continued. For the communication for the remote system 3, since there is no physical reachable path, the communication is disabled.


Figure 2.6 Communication type in the event of Switch 3 failures

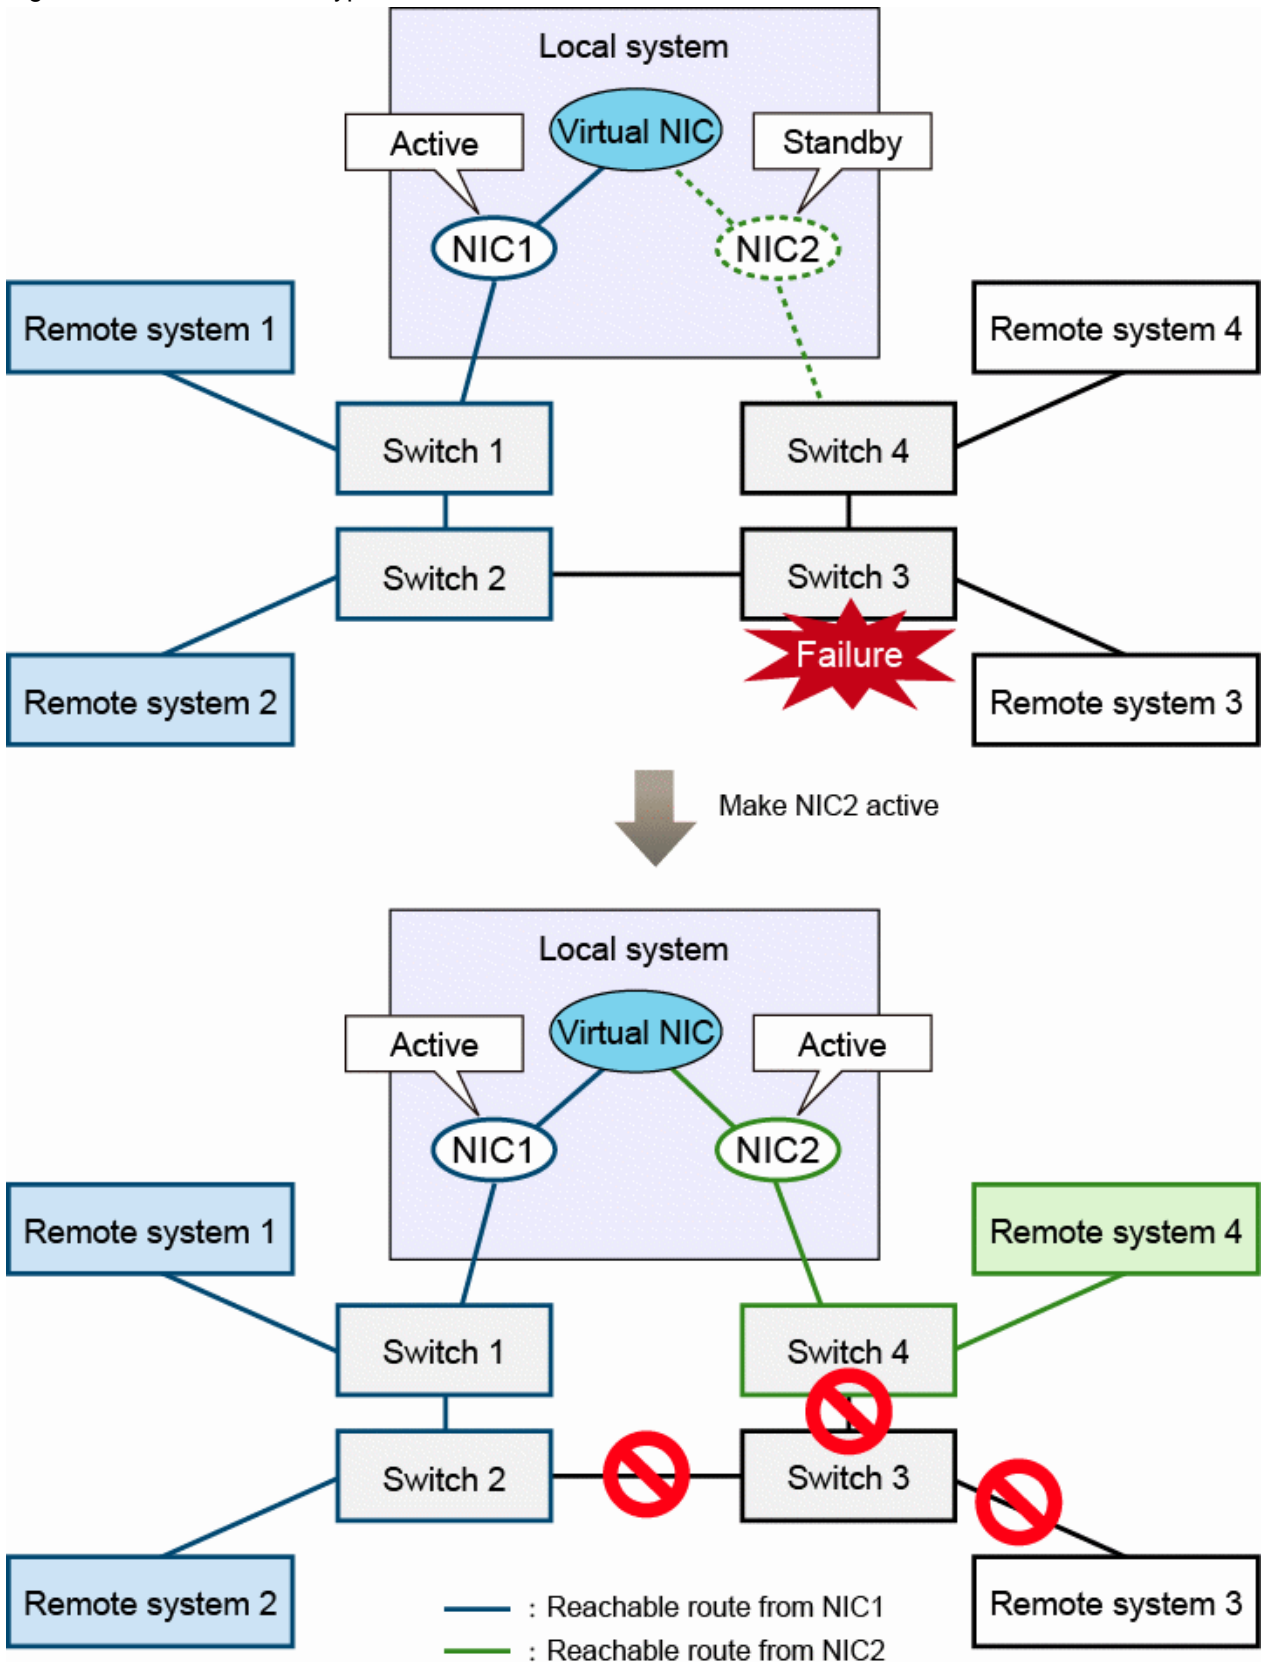

At a switch failure recovery

When the network disconnection is recovered by the maintenance such as replacing failed switches, return the status of NIC2 to "Standby" and the communication with all the remote systems will be carried out only in NIC1 again.

Figure 2.7 Communication type at a switch recovery

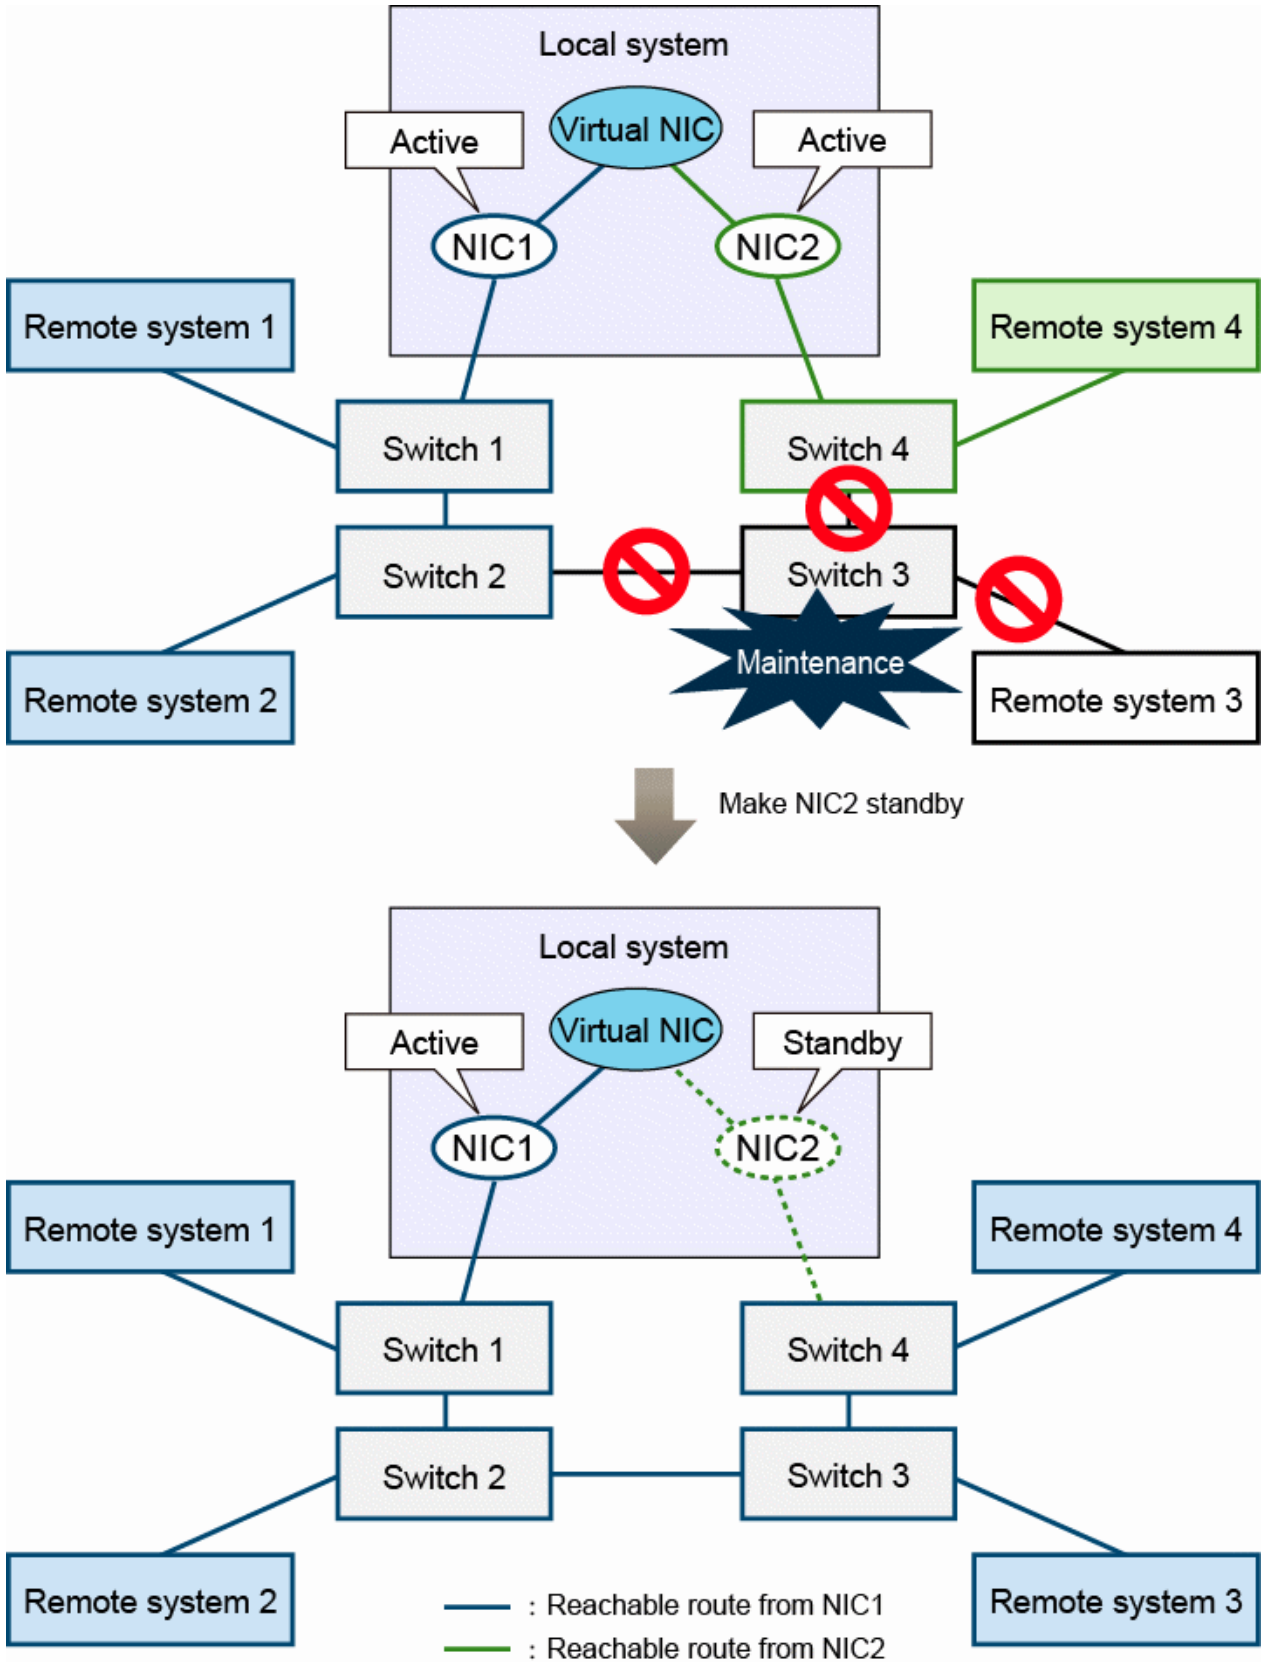

2.3 Other functions

This section describes other functions provided by the virtual NIC mode.

- Communication method
- Direct communication between zones

2.3.1 Communication method

There are two communication methods used for the virtual NIC mode: "Active-Standby" mode and "MAC Tracking" mode.

"Active-Standby" mode

One of the grouped NICs is used exclusively to carry out the communication.

"MAC Tracking" mode


When an error is detected by the network monitoring, use all NICs at the same time to carry out the communication. In MAC Tracking, source MAC addresses and NICs which received packets learn when receiving packets from the remote system. When sending packets to the remote system, select an appropriate NIC based on the learning result.

Moreover, when the application sends packets to a destination of a broadcast or multicast address, use all NICs to send packets.

Destination MAC address	Selection of sending NICs
MAC address corresponding to the destination have not learned or the destination address is broadcast/ multicast	Send packets by using all NICs. The following two modes can be selected as MAC Tracking: <ul style="list-style-type: none">- Broadcast Duplicate packets and send them from all NICs simultaneously.- Round-robin Distribute NICs evenly and send packets. For details, see " A.1 rvnetadm command. "
MAC address corresponding to the destination has already learned	Based on the learning result, select the sending NICs and send packets.

The following shows the example of sending procedure when a connection between switches fails and the network is disconnected. Right after the network failure, the communication used for the virtual NIC is sent from both NIC1 and NIC2. Then, after receiving the response from the remote system, it learns the MAC address of the remote system and packets are transmitted via only reachable paths.

Figure 2.8 "MAC Tracking" mode

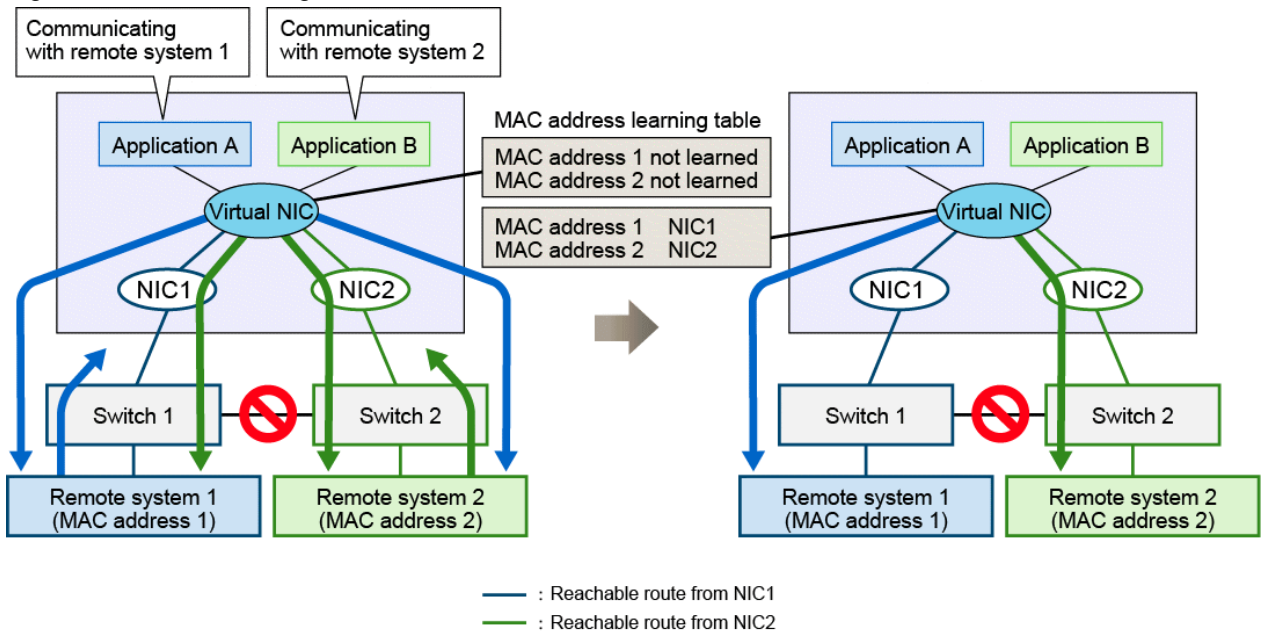


2.3.2 Direct communication between zones

When creating multiple virtual NICs which shares the grouped physical NICs and allocating them to multiple exclusive IP zones, use one of the NIC among the grouped NICs for each zone to carry out the communication with the external remote system.

In the communication between zones, since packets are directly transferred between virtual NICs, the band of the physical NIC is not consumed. Also, if the physical NIC fails, the communication between zones is continued through the virtual NIC.

Figure 2.9 Direct communication between zones (when physical NICs are distributed)

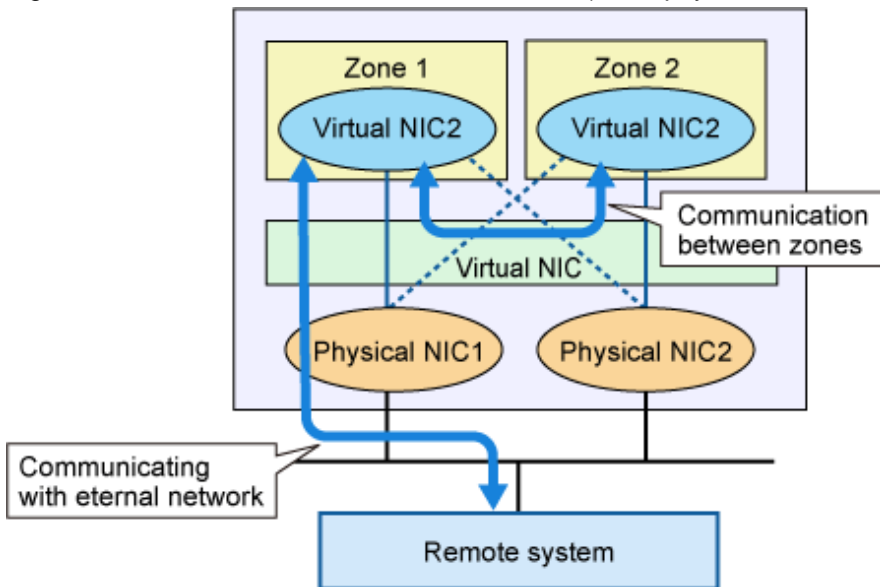

Chapter 3 Environment configuration

This chapter describes how to set up and configure the virtual NIC mode.

3.1 Checking system resources

In Redundant Line Control function for Virtual NIC mode, the required capacity for the shared memory is shown below. If these parameters are insufficient in the whole system, extend these values. For modifying the parameter, refer to the Solaris manual.

Table 3.1 Required capacity for system resources

Resource parameter name	Required capacity	Reference (Meaning of parameter)
project.max-shm-memory	28672	Number of total bytes of shared memory.
project.max-shm-ids	1	Maximum number of shared memory ID.

3.2 Additional virtual NIC setup


This section describes how to add a virtual NIC in the following environments:

- Physical server environment
- Solaris Zones environment
- Oracle VM environment

3.2.1 Setting up a virtual NIC in a physical server environment

The following is an example of configuration for adding a virtual NIC in the physical server environment:

Figure 3.1 Example of configuration in the physical server environment

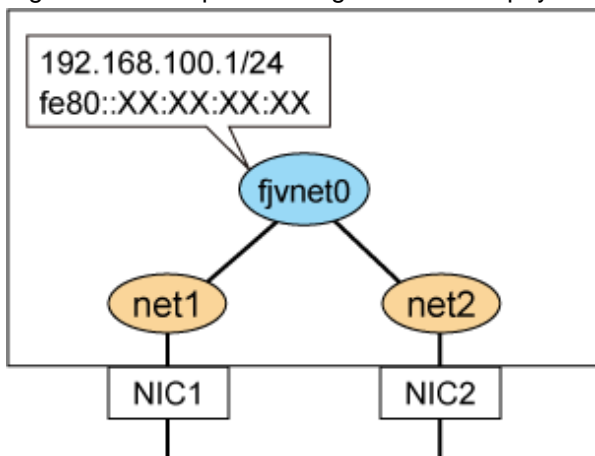

The procedure below shows how to configure IPv4 and IPv6 addresses automatically by bundling "net1" and "net2" to create the virtual NIC "fjvnet0":

1. Creating a virtual NIC

Create a virtual NIC with the rvnetadm create command.

```
# /opt/FJSVrvnet/bin/rvnetadm create -n fjvnet0 -i net1,net2
```



See

For details on the `rvnetadm` command, see "A.1 `rvnetadm` command."

2. Enabling a monitoring function

Enable a monitoring function with the `rvnetadm start-observ` command.

```
# /opt/FJSSVrvnet/bin/rvnetadm start-observ
```



Note

When a monitoring function is enabled, disable it with the `rvnetadm stop-observ` command, and then enable it again.



See

For details on the `rvnetadm` command, see "A.1 `rvnetadm` command."

3. Setting up an IP address

Define the virtual NIC as an IP interface with the `ipadm create-ip` command. Configure the IP address with the `ipadm create-addr` command.

```
# ipadm create-ip fjvnet0
# ipadm create-addr -T static -a 192.168.100.1/24 fjvnet0/v4static
# ipadm create-addr -T addrconf fjvnet0/v6addrconf
```




See

For details on the `ipadm(1M)` command, see the Solaris manual.

3.2.2 Setting up a virtual NIC in a Solaris Zones environment

The following is an example of configuration for adding a virtual NIC in the Solaris Zones environment:

Figure 3.2 Example of configuration in the Solaris Zones environment

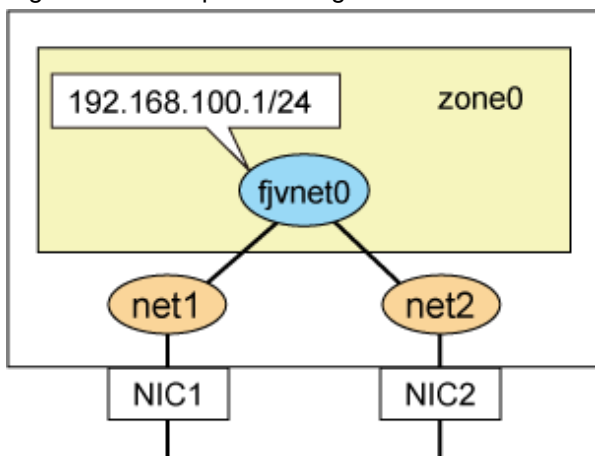

Create a virtual NIC "fjvnet0" on the global zone by bundling "net1" and "net2." Set an IP address to the virtual NIC "fjvnet0" after assigning it to the exclusive-IP zone "zone0." This procedure is shown below:

1. Creating a virtual NIC

Create a virtual NIC on the global zone with the `rvnetadm create` command.

```
# /opt/FJSVrvnet/bin/rvnetadm create -n fjvnet0 -i net1,net2
```



For details on the `rvnetadm` command, see "[A.1 rvnetadm command](#)."

2. Enabling a monitoring function

Enable a monitoring function with the `rvnetadm start-observ` command.

```
# /opt/FJSVrvnet/bin/rvnetadm start-observ
```



When a monitoring function is enabled, disable it with the `rvnetadm stop-observ` command, and then enable it again.



For details on the `rvnetadm` command, see "[A.1 rvnetadm command](#)."

3. Setting up an exclusive-IP zone

Start up the zone with the `zoneadm` command after allocating a virtual NIC to the exclusive-IP zone with the `zonecfg` command.

```
# zonecfg -z zone0
zonecfg:zone0> add net    <- Add a network interface setting.
zonecfg:zone0:net> set physical=fjvnet0 <- Specify a virtual NIC interface.
zonecfg:zone0:net> end
zonecfg:zone0> verify    <- Check setup consistency.
zonecfg:zone0> commit    <- Register the setting.
zonecfg:zone0> exit      <- Complete the zone setting.
# zoneadm -z zone0 boot  <- Start up zone0.
```



Use virtual NICs in a network interface (`net`) registered in the resource. Virtual NICs cannot be used in an automatic network interface (`anet`).



For details on the `zonecfg(1M)` and `zoneadm(1M)` commands, see the Solaris manual.

4. Setting up an IP address in the exclusive-IP zone

Define the virtual NIC as an IP interface with the `ipadm create-ip` command after logging in to the exclusive-IP zone with the `zlogin` command. Then, assign an IP address to the IP interface with the `ipadm create-addr` command.

```
# zlogin zone0
# ipadm create-ip fjvnet0
# ipadm create-addr -T static -a 192.168.100.1/24 fjvnet0/v4
```




See

For details on the `ipadm(1M)` command, see the Solaris manual.

3.2.3 Setting up a virtual NIC in an Oracle VM environment

The following is an example of configuration for adding a virtual NIC in the Oracle VM environment.

Figure 3.3 Example of configuration in the Oracle VM environment

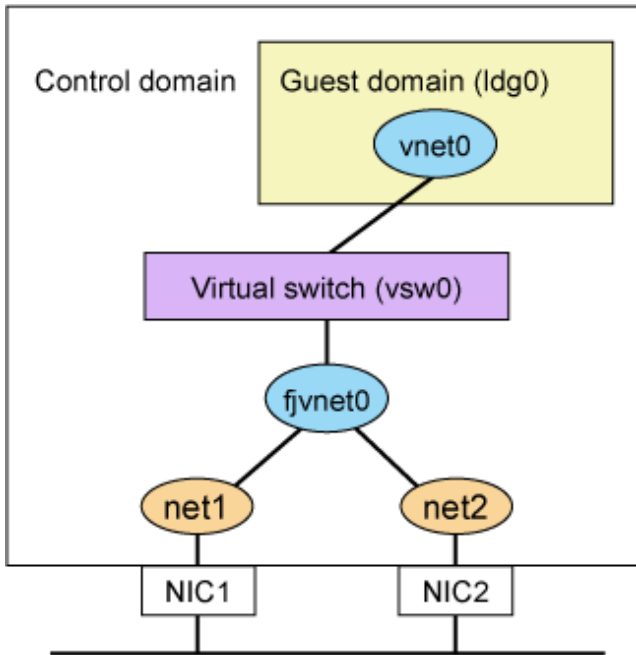

The procedure below shows how to create the virtual NIC "fjvnet0" by bundling "net1" and "net2" on the host domain for connecting it to the virtual switch "vsw0" of the Oracle VM.

1. Creating a virtual NIC

Create a virtual NIC on the control domain with the `rvnetadm create` command.

```
# /opt/FJJSVrvnet/bin/rvnetadm create -n fjvnet0 -i net1,net2
```



See

For details on the `rvnetadm` command, see "A.1 `rvnetadm` command."

2. Enabling a monitoring function

Enable a monitoring function with the `rvnetadm start-observ` command.

```
# /opt/FJJSVrvnet/bin/rvnetadm start-observ
```



Note

When a monitoring function is enabled, disable it with the `rvnetadm stop-observ` command, and then enable it again.



See

For details on the `rvnetadm` command, see "A.1 `rvnetadm` command."

3. Creating a virtual switch

Specify the virtual NIC as a network adapter to be used with the `ldm add-vsw` command. Create the virtual switch running on the control domain.

```
# ldm add-vsw net-dev=fjvnet0 vsw0 primary
```



See

For details on the `ldm(1M)` command, see the Solaris manual.

4. Connecting a guest domain

Connect a guest domain "ldg0" to the virtual switch with the `ldm add-vnet` command.

```
# ldm add-vnet vnet0 vsw0 ldg0
```



See

For details on the `ldm(1M)` command, see the Solaris manual.

3.3 Deleting a virtual NIC

This section describes how to delete a virtual NIC in the following environments:

- Physical server environment
- Solaris Zones environment
- Oracle VM environment

3.3.1 Deleting a virtual NIC in a physical server environment

The following is an example of configuration for deleting a virtual NIC in the physical server environment:

1. Deleting an IP interface

Delete an IP interface on the virtual NIC with the `ipadm delete-ip` command beforehand. If the IP interface remains, the virtual NIC cannot be deleted with the `rvnetadm` command.

```
# ipadm delete-ip fjvnet0
```



See

For details on the `ipadm(1M)` command, see the Solaris manual.

2. Disabling a monitoring function

Disable a monitoring function with the `rvnetadm stop-observ` command.

```
# /opt/FJSVrvnet/bin/rvnetadm stop-observ
```



See

For details on the `rvnetadm` command, see "A.1 `rvnetadm` command."

3. Deleting a virtual NIC

Delete a virtual NIC with the `rvnetadm delete` command.

```
# /opt/FJJSVrvnet/bin/rvnetadm delete -n fjvnet0
```



See

For details on the `rvnetadm` command, see "A.1 `rvnetadm` command."

3.3.2 Deleting a virtual NIC in a Solaris Zones environment

The following is an example of configuration for deleting a virtual NIC in the Solaris Zones environment:

1. Deleting an IP address in an exclusive-IP zone

Delete the IP interface on the virtual NIC with the `ipadm delete-ip` command after logging in to the exclusive-IP zone with the `zlogin` command.

Example: When logging in to the exclusive-IP zone "zone0" and delete the IP interface generated in the virtual NIC "fjvnet0"

```
# zlogin zone0                <- Login to zone0
# ipadm delete-ip fjvnet0     <- Delete the IP interface on fjvnet0
```

Note that if the IP interface remains, the virtual NIC cannot be deleted with the `rvnetadm` command.



See

For details on the `ipadm(1M)` command, see the Solaris manual.

2. Deleting the network setting in the exclusive-IP zone

Remove the assignment of the virtual NIC to the exclusive-IP zone with the `zonecfg` command after stopping the zone with the `zoneadm` command.

Example: When removing the assignment of the virtual NIC "fjvnet0" for the exclusive-IP zone "zone0."

```
# zoneadm -z zone0 halt        <- Halt zone0.
# zonecfg -z zone0             <- Begin configuring zone0.
zonecfg:zone0> remove net physical=fjvnet0 <- Specify a virtual NIC interface.
zonecfg:zone0> verify          <- Check setup consistency.
zonecfg:zone0> commit          <- Register the setting.
zonecfg:zone0> exit            <- Complete the zone setting.
```



See

For details on the `zoneadm(1M)` and `zonecfg(1M)` commands, see the Solaris manual.

3. Disabling a monitoring function

Disable a monitoring function with the `rvnetadm stop-observ` command.

```
# /opt/FJJSVrvnet/bin/rvnetadm stop-observ
```



See

For details on the rvnetadm command, see "[A.1 rvnetadm command.](#)"

4. Deleting a virtual NIC

Delete a virtual NIC on the global zone with the rvnetadm delete command.

Example: When deleting the virtual NIC "fjvnet0"

```
# /opt/FJSSVrvnet/bin/rvnetadm delete -n fjvnet0
```



See

For details on the rvnetadm command, see "[A.1 rvnetadm command.](#)"

3.3.3 Deleting a virtual NIC in an Oracle VM environment

The following is an example of configuration for deleting a virtual NIC in the Oracle VM environment.

1. Disconnecting a guest domain

Disconnect the guest domain "ldg0" from the virtual switch with the ldm remove-vnet command.

```
# ldm remove-vnet vnet0 ldg0
```



See

For details on the ldm(1M) command, see the Solaris manual.

2. Deleting a virtual switch

Delete a virtual switch with the ldm remove-vsw command.

```
# ldm remove-vsw vsw0
```



See

For details on the ldm(1M) command, see the Solaris manual.

3. Disabling a monitoring function

Disable a monitoring function with the rvnetadm stop-observ command.

```
# /opt/FJSSVrvnet/bin/rvnetadm stop-observ
```



See

For details on the rvnetadm command, see "[A.1 rvnetadm command.](#)"

4. Deleting a virtual NIC

Delete a virtual NIC with the rvnetadm delete command.

```
# /opt/FJSSVrvnet/bin/rvnetadm delete -n fjvnet0
```



Note

Deleting the connected virtual switch beforehand is necessary when you delete a virtual NIC.



See

For details on the `rvnetadm` command, see "A.1 `rvnetadm` command."

3.4 Notes on setting a configuration

Note the following points when creating an environment.

- A physical NIC used in the virtual NIC mode cannot be shared with a Solaris standard virtual NIC (vnetX) or a link aggregation (aggrX).
- Do not change the name of a virtual NIC in the virtual NIC mode or the name of a NIC used in the virtual NIC with the `rename-link` subcommand of `dladm(1M)`.
- The following interfaces cannot be configured under the virtual NIC:
 - Tagged VLAN interfaces (net2001, net4001002, etc.)
 - The interfaces created by the SR-IOV
 - The interface of the virtual network device used in the Oracle VM environment
- Do not use the following commands for a virtual NIC because if you use these commands, the operation will not work correctly.
 - `dladm set-linkprop`
 - `dladm reset-linkprop`
 - `dladm delete-vnic`
 - `ipadm create-ipmp`
 - `ipadm add-ipmp`
 - `ifconfig group`
 - `ifconfig standby | -standby`
 - `ifconfig failover | -failover`
- When specifying the alternative MAC address (`alt-mac-addr`s) with the `ldm add-vnet` command and the `ldm set-vnet` command, if the interface used for communication by GLS is switched, communication from outside may be interrupted temporarily and it may take time to resume the communication again. This is because GLS cannot notify the MAC address to the adjacent switch.
- Before changing MAC address of the virtual NIC, make sure to inactivate the virtual NIC.

According to your environment, take the appropriate procedure to change the settings. See the procedures below to inactivate the virtual NIC and then change the settings. After that, restore the virtual NIC.

Replace the interface name, the virtual switch name, and the zone name depending on your environment.

[Physical server environment and Oracle VM environment]

Take this procedure on the control domain.

1. Delete IP interfaces on the virtual NIC.

Check if IP interfaces exist on the virtual NIC. If they exist, delete them by using the `ipadm(1M)` command.

```
# /usr/sbin/ipadm show-if fjvnet0
# /usr/sbin/ipadm show-addr fjvnet0
# /usr/sbin/ipadm delete-ip fjvnet0
```

2. Disconnect the virtual switch and the virtual NIC.

If the virtual switch exists on the virtual NIC, disconnect the virtual NIC and the virtual switch.

```
# /usr/sbin/ldm set-vsw net-dev= primary-vsw0
```

3. Check the inactive status of the virtual NIC.

Check if the virtual NIC is "inactive".

```
# /opt/FJSVrvnet/bin/rvnetstat

VNET          STATE      MODE          ACTIVE-LINK
+-----+-----+-----+-----+
fjvnet0       inactive  ACT-STANDBY
```

4. Change the settings of the virtual NIC.

Change the settings of the virtual NIC, for example, MAC address.

```
# /opt/FJSVrvnet/bin/rvnetadm set-prop -n fjvnet0 -a MACaddress
```

5. Reconnect the virtual switch and the virtual NIC.

If the virtual NIC and the virtual switch are disconnected in step 2, reconnect them.

```
# /usr/sbin/ldm set-vsw net-dev=fjvnet0 primary-vsw0
```

6. Re-create the IP interfaces on the virtual NIC.

If the IP interfaces are deleted in step 1, re-create the IP interfaces.

```
# /usr/sbin/ipadm create-ip fjvnet0
# /usr/sbin/ipadm delete-addr -T static -a ipaddress/netmask fjvnet0
```

[Solaris Zone environment]

Take this procedure on the global zone.

1. Stop the Solaris Zone that uses the virtual NIC.

Stop the active Solaris Zone if it uses the virtual NIC.

```
# /usr/sbin/zoneadm -z zone0 shutdown
```

2. Check the inactive status of the virtual NIC.

Check if the virtual NIC is "inactive".

```
# /opt/FJSVrvnet/bin/rvnetstat

VNET          STATE      MODE          ACTIVE-LINK
+-----+-----+-----+-----+
fjvnet0       inactive  ACT-STANDBY
```

3. Change the settings of the virtual NIC.

Change the settings of the virtual NIC, for example, MAC address.

```
# /opt/FJSVrvnet/bin/rvnetadm set-prop -n fjvnet0 -a MACaddress
```

4. Activate the Solaris Zone that uses the virtual NIC.

Activate the Solaris Zone again if it is stopped in step 1.

```
# /usr/sbin/zoneadm -z zone0 boot
```


Chapter 4 Operation

This chapter describes how to operate the virtual NIC mode.

4.1 Starting and Stopping virtual NICs

This section describes how to start and stop the virtual NICs.

4.1.1 Starting virtual NICs

All the virtual NICs start automatically when the operating system starts up.

4.1.2 Stopping virtual NICs

All the virtual NICs stop automatically when the operating system is shut down.

4.2 Displaying Operation Status

When an error is detected by the fault monitoring, execute the `rvnetstat` command and check the difference between the current state and the normal operation state. For the virtual NICs and interfaces under the virtual NIC, a status of link and network monitoring can be checked with the `rvnetstat` command.



See


For details on this command, see "[A.2 rvnetstat command](#)."

4.2.1 When an error is detected by the link status monitoring function

When link down of a NIC is detected by the link status monitoring function, switch the NIC to continue the communication.

The following shows the operation status when a link down is detected:

Figure 4.1 Link down state is detected

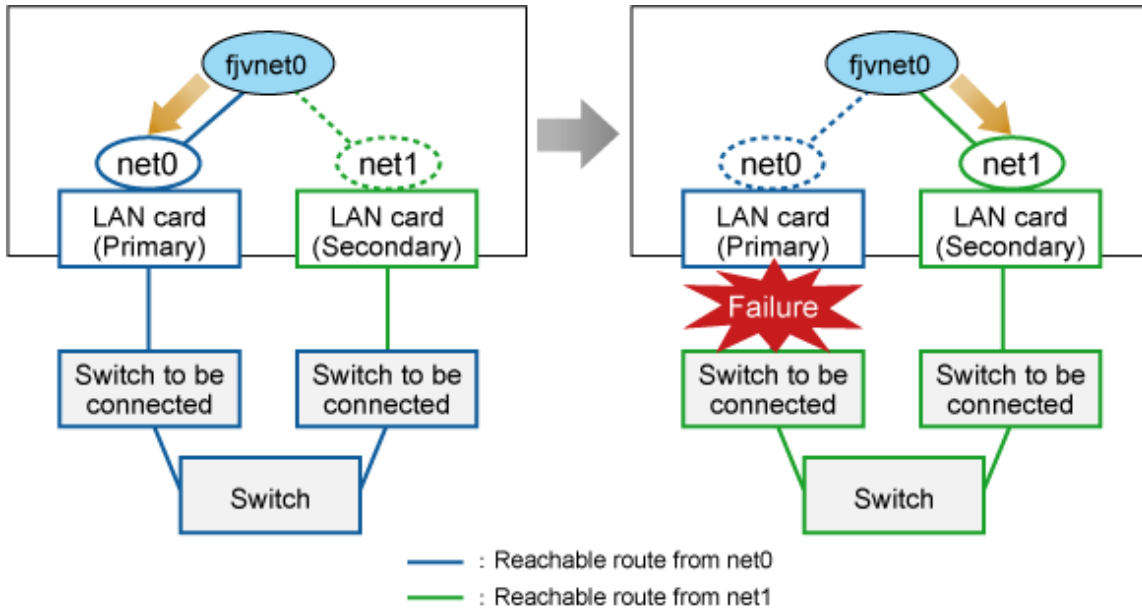

The following shows the link status of the virtual NIC for this case:

Before detecting link down

```
# /opt/FJSVrvnet/bin/rvnetstat
VNET      STATE      MODE          ACTIVE-LINK
-----+-----+-----+-----+
fjvnet0   active    ACT-STANDBY  net0
```

After detecting link down

```
# /opt/FJSVrvnet/bin/rvnetstat
VNET      STATE      MODE          ACTIVE-LINK
-----+-----+-----+-----+
fjvnet0   active    ACT-STANDBY  net1
```

Also, the following shows the link status of interfaces under the virtual NIC and the monitoring status:

Before detecting link down

```
# /opt/FJSVrvnet/bin/rvnetstat -s -v

Monitoring Function : enable

[fjvnet0]
Monitoring Status  : active
Reachability       : {net0, net1}

LINK      STATUS      IF-LINK
-----+-----+-----+
net0      active     up
net1      standby   up
```

After detecting link down

```
# /opt/FJSVrvnet/bin/rvnetstat -s -v

Monitoring Function : enable
```

```

[fjvnet0]
Monitoring Status : fail
Reachability      : {net1}

LINK              STATUS      IF-LINK
+-----+-----+-----+
net0              fail       down
net1              active      up


```

4.2.2 When an error is detected by the network monitoring function

When heartbeat errors are detected between NICs by the network monitoring function, change the communication type to "MAC tracking" to continue the communication by multiple NICs.

The following shows the operation status when an error is detected by network topology changes:

Figure 4.2 Error detection status by network topology changes

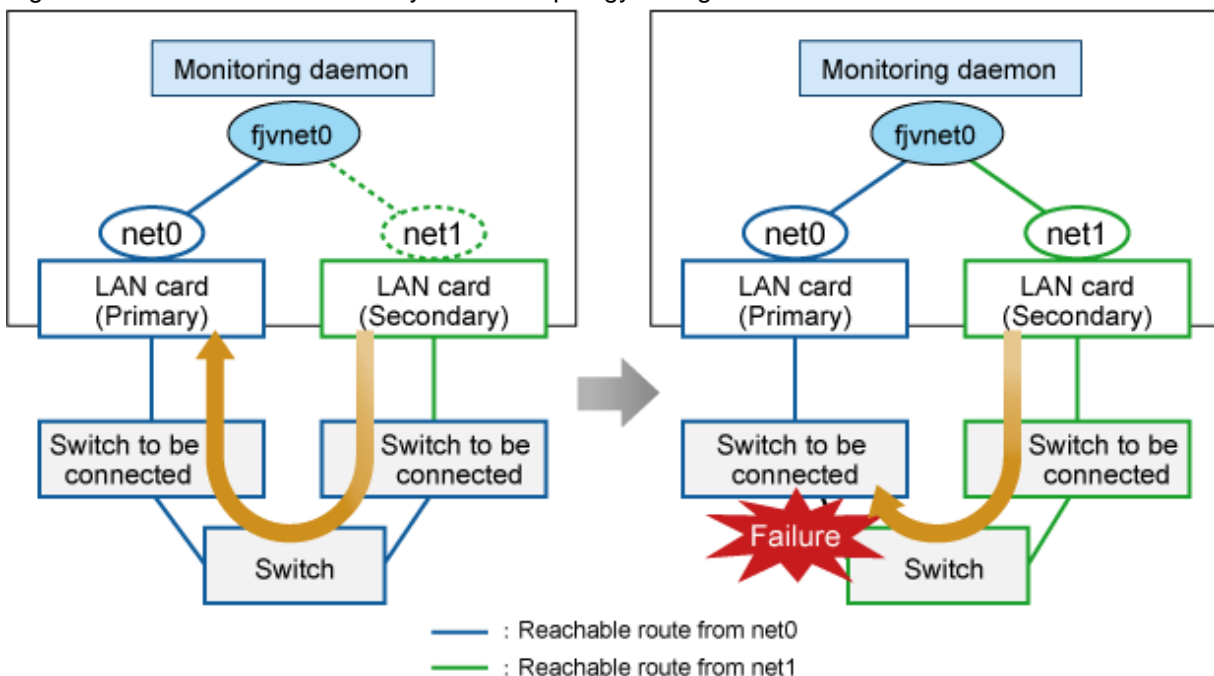

The following shows the link status of the virtual NIC for this case:

Before detecting errors by the network monitoring

```

# /opt/FJSVrvnet/bin/rvnetstat
VNET          STATE      MODE          ACTIVE-LINK
+-----+-----+-----+-----+
fjvnet0       active    ACT-STANDBY net0

```

After detecting errors by the network monitoring

```

# /opt/FJSVrvnet/bin/rvnetstat
VNET          STATE      MODE          ACTIVE-LINK
+-----+-----+-----+-----+
fjvnet0       active    MAC-TRACK   net0,net1

```

Also, the following shows the link status of interfaces under the virtual NIC and the monitoring status:

Before detecting errors by the network monitoring

```
# /opt/FJSVrvnet/bin/rvnetstat -s -v

Monitoring Function : enable

[fjvnet0]
Monitoring Status  : active
Reachability       : {net0, net1}

LINK              STATUS      IF-LINK
+-----+-----+-----+
net0              active     up
net1              standby  up
```

After detecting errors by the network monitoring

```
# /opt/FJSVrvnet/bin/rvnetstat -s -v

Monitoring Function : enable

[fjvnet0]
Monitoring Status  : fail
Reachability       : {net0},{net1}

LINK              STATUS      IF-LINK
+-----+-----+-----+
net0              active     up
net1              active    up
```

4.3 Recovery from Failure

No special operation is required because the communication is continued by switching a path automatically.

However, some applications may need to be restarted.

4.4 Notes on the Operation

Note the following points when operating in the virtual NIC mode.

- In the network monitoring function, failures may be detected when the delay and the lost of the packet occur frequently due to the increase of the communication load, etc.
If a temporary failure of monitoring occurs frequently, adjust the detection time with the `vnetadm set-param` command.

Chapter 5 Maintenance

This chapter describes how to respond to problems of the virtual NIC mode.

5.1 Collecting data when an error occurred

In the event of a problem in the operation of the virtual NIC mode, collect necessary materials with the `rvnet_snap` command. For details on the command, see "[A.3 rvnet_snap command](#)."

The following shows the example:

When collecting all examination materials under `/tmp`

```
/opt/FJSVrvnet/bin/rvnet_snap
```

When collecting the minimum examination materials under `/tmp`

```
/opt/FJSVrvnet/bin/rvnet_snap -s
```

When collecting the minimum examination materials under `/export/home/user1`

```
/opt/FJSVrvnet/bin/rvnet_snap -s /export/home/user1
```

5.2 Backing up and restoring the environment configuration information

This section describes how to back up and restore the environment definition files used by the virtual NIC mode.

5.2.1 Backing up the environment configuration information

Copy the environment definition files (`fjsrvnet.xml`) under `/etc/opt/FJSVrvnet/config/` to any directory.

5.2.2 Restoring the environment configuration information

Copy the environment definition files (`fjsrvnet.xml`) backed up "[5.2.1 Backing up the environment configuration information](#)" to `/etc/opt/FJSVrvnet/config/`. After the copying is completed, restart the operating system and allocate IP addresses if necessary.

Chapter 6 DR (Dynamic Reconfiguration) function/PHP (PCI Hot Plug) function

This section describes the concept and maintenance for building an environment when using the Dynamic Reconfiguration function (hereafter, DR function) or the PCI Hot Plug function (hereafter, PHP function).

In the virtual NIC mode, both DR and PHP functions provided by the following products are available:

- The DR function provided by the eXtended System Control Facility (hereafter, XSCF) of SPARC M10-4S and SPARC Enterprise M4000/M5000/M8000/M9000
- The PHP function provided by the Solaris standard `cfgadm(1M)` command



See

.....

- When using the DR function, be sure to see the following manuals:

- For SPARC M10-4S
 - "Fujitsu M10/SPARC M10 Systems XSCF Reference Manual"
 - "Fujitsu M10/SPARC M10 Systems Domain Configuration Guide"

In this document, these manuals are indicated as "XSCF Reference Manual" or "Domain Configuration Guide," respectively

- For SPARC Enterprise M4000/M5000/M8000/M9000
 - "SPARC Enterprise M3000/M4000/M5000/M8000/M9000 Servers XSCF User's Guide"
 - "SPARC Enterprise M4000/M5000/M8000/M9000 Servers Dynamic Reconfiguration (DR) User's Guide"

In this document, these manuals are indicated as "XSCF User's Guide" or "DR User's Guide," respectively.

- When using the PHP function, be sure to see the following manuals:

- For SPARC M10
 - "Fujitsu M10-1/SPARC M10-1 Service Manual"
 - "Fujitsu M10-4/Fujitsu M10-4S/SPARC M10-4/SPARC M10-4S Service Manual"
 - "PCI Expansion Unit for Fujitsu M10/SPARC M10 Systems Service Manual"

In this document, these manuals are indicated as "service manual."

- For SPARC Enterprise M4000/M5000/M8000/M9000
 - "SPARC Enterprise M4000/M5000 Servers Service Manual"
 - "SPARC Enterprise M8000/M9000 Servers Service Manual"

In this document, these manuals are indicated as "service manual."

.....


6.1 When using the DR function

This section describes the recommended configuration and how to replace the system board when using the DR function.

6.1.1 Recommended configuration

The following configuration is recommended when using the DR function of XSCF.

Figure 6.1 The recommended configuration in the available environment for DR function

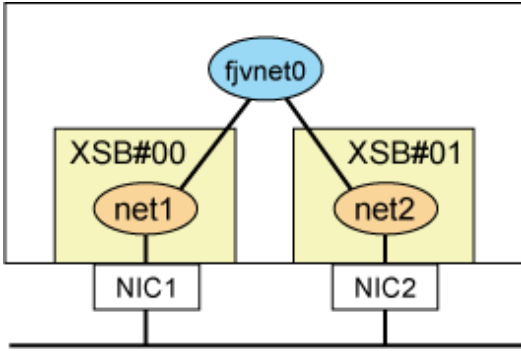

The DR function is performed per XSB (the system board for DR-compatible machine of XSCF). Make NICs (which are built into each system board) redundant to continue the communication with a virtual NIC even when disconnecting the system board with the DR command.


6.1.2 Replacing the system board

The system board is replaced by using the DR function of XSCF with the `rvnetadm disconnect` command and the `rvnetadm connect` command. These commands are used when disconnecting or reconnecting a physical NIC assigned under the virtual NIC.

Procedure when disconnecting a NIC

This section describes the procedure for disconnecting a NIC built into the target system board temporarily from the virtual NIC when replacing a system board due to a failure or other reason.

Figure 6.2 Disconnecting procedure

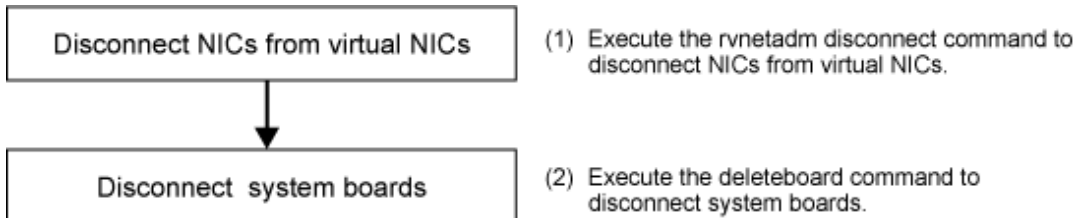

1. Disconnect a NIC from the virtual NIC

Disconnect all the NICs built into the system board that is to be replaced from the virtual NIC with the `rvnetadm disconnect` command.

```
# /opt/FJSVrvnet/bin/rvnetadm disconnect -n fjvnet0 -i net1
# /opt/FJSVrvnet/bin/rvnetadm disconnect -n fjvnet1 -i net3
```



See

For details on the `rvnetadm` command, see "[A.1 rvnetadm command.](#)"

2. Disconnect a system board

Disconnect the system board with the `deleteboard` command of XSCF.

```
# XSCF> deleteboard -c disconnect 01-0
```

Note

See the following manuals in advance to check the board number of the system board to be disconnected:

- For SPARC M10-4S
"Domain Configuration Guide"
- For SPARC Enterprise M4000/M5000/M8000/M9000
"DR User's Guide"

See


For details on the deleteboard command, see the following manuals:

- For SPARC M10-4S
"XSCF Reference Manual"
- For SPARC Enterprise M4000/M5000/M8000/M9000
"XSCF User's Guide"

Procedure when connecting a NIC

This section describes the procedure for embedding a NIC built into the target system board to the virtual NIC again when replacing a system board due to a failure or other reason.

Figure 6.3 Connecting procedure

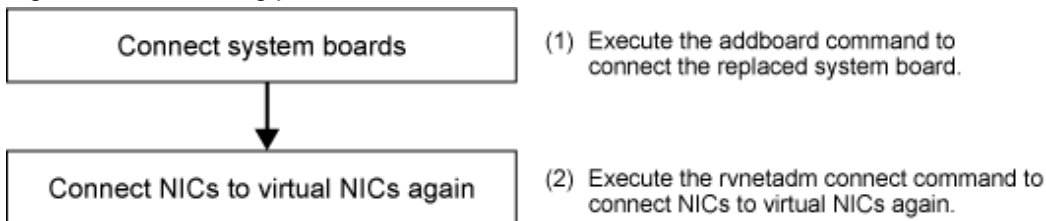

1. Reconstructing a system board

Connect the system board with the addboard command of XSCF.

- For SPARC M10-4S

```
# XSCF> addboard -c configure -p 0 01-0
```

- For SPARC Enterprise M4000/M5000/M8000/M9000

```
# XSCF> addboard -c configure -d 0 01-0
```

Note

See the following manuals in advance to check the board number of the system board to be connected:

- For SPARC M10-4S
"Domain Configuration Guide"
- For SPARC Enterprise M4000/M5000/M8000/M9000
"DR User's Guide"



See

For details on the addboard command, see the following manuals:

- For SPARC M10-4S
"XSCF Reference Manual"
- For SPARC Enterprise M4000/M5000/M8000/M9000
"XSCF User's Guide"

2. Reconnecting a NIC to the virtual NIC

Reconnect all NICs built into the replaced system board to the virtual NIC with the `rvnetadm connect` command. If changing the active path through the hot swap, fail back the active path as necessary.

```
# /opt/FJJSVrvnet/bin/rvnetadm connect -n fjvnet0 -i net1
# /opt/FJJSVrvnet/bin/rvnetadm connect -n fjvnet1 -i net3
```



See

For details on the `rvnetadm` command, see "[A.1 rvnetadm command](#)."

6.2 When using the PHP function

This section describes the recommended configuration and how to replace PCI cards when using the PHP function.

6.2.1 Recommended configuration

The following configuration is recommended in the available environment for the PHP function.

When using a NIC in which contains two or more interfaces built into a PCI card, make interfaces on the respective PCI cards redundant. In this way, if one interface fails, the other one continues the communication.

6.2.2 Replacing the PCI card

The PCI card using the PHP function is replaced with the `rvnetadm disconnect` command and the `rvnetadm connect` command. These commands are used when disconnecting or reconnecting a physical NIC assigned under the virtual NIC.



Note

In Solaris 11 or later, Solaris 10 9/10 or later releases, or in the environment where 142909-17 or later patch is applied in Solaris 10


When using PHP, execute the following command to enable the hotplug service. For details, refer to the service manuals.

```
# svcadm enable hotplug
```

Procedure when disconnecting a NIC

This section describes the procedure for disconnecting a PCI card built into the target system board temporarily from the virtual NIC when replacing a system board due to a failure or other reason.

Figure 6.4 Disconnecting procedure

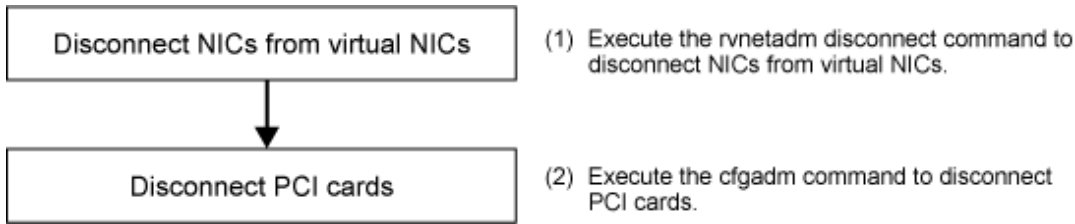

1. Disconnect a NIC from a virtual NIC

Disconnect a NIC that is to be replaced from the virtual NIC with the `rvmnetadm` disconnect command.

```
# /opt/FJSVrvnet/bin/rvmnetadm disconnect -n fjvnet0 -i net1
```



For details on the `rvmnetadm` command, see "A.1 `rvmnetadm` command."

2. Disconnecting the PCI card

Confirm that the slot status of the PCI slot "slot03" to be disconnected is "connected configured."

```
# cfgadm BB#0-PCI#0
Ap_Id          Type          Receptacle  Occupant    Condition
BB#0-PCI#0    etherne/hp    connected   configured  ok
```

Execute the `uncfgadm(1M)` command with specifying `unconfigure` to cancel the configuration of the PCI card at `Ap_Id`.

After that, execute the `cfgadm(1M)` command to check if the slot status is changed to "connected unconfigured".

```
# cfgadm -c unconfigure BB#0-PCI#0 <Return>
# cfgadm BB#0-PCI#0 <Return>
Ap_Id          Type          Receptacle  Occupant    Condition
BB#0-PCI#0    unknown      connected   unconfigured unknown
```

Execute the `cfgadm(1M)` command with specifying `disconnect` to disconnect the PCI card from `Ap_Id`.

After that, execute the `cfgadm(1M)` command to check if the slot status is changed to "disconnected unconfigured".

```
# cfgadm -c disconnect BB#0-PCI#0 <Return>
# cfgadm BB#0-PCI#0 <Return>
Ap_Id          Type          Receptacle  Occupant    Condition
BB#0-PCI#0    unknown      disconnected unconfigured unknown
```

To indicate the slot position for replacement, specify the obtained "Ap_Id" to "cfgadm" command and blink the ATTENTION LED.

```
# cfgadm -x led=attn,mode=blink BB#0-PCI#0 <Return>
```




- For details on the `cfgadm(1M)` command, see the Solaris manual.
- For details on disconnecting the PCI card, see the service guide.

Procedure when connecting a NIC

This section describes the procedure for embedding the NIC built into the target system board to the virtual NIC again when replacing a system board due to a failure or other reason.

Figure 6.5 Connecting procedure

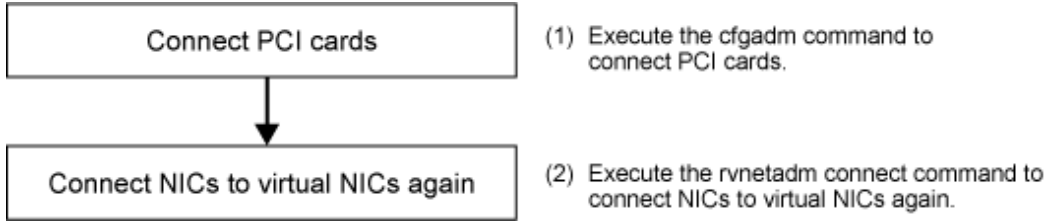

1. Reconnecting the PCI card

Execute the uncfgadm(1M) command with specifying connect to connect the new PCI card to Ap_Id.

After that, execute the cfgadm(1M) command to check if the slot status is changed to "connected unconfigured".

```
# cfgadm -c connect BB#0-PCI#0 <Return>
# cfgadm BB#0-PCI#0 <Return>
```

Ap_Id	Type	Receptacle	Occupant	Condition
BB#0-PCI#0	unknown	<u>connected</u>	<u>unconfigured</u>	unknown

Specify the target Ap_Id and execute the cfgadm(1M) command with specifying configure to install the new PCI card.

After that, execute the cfgadm(1M) command to check if the slot status is changed to "connected configure".

```
# cfgadm -c configure BB#0-PCI#0 <Return>
# cfgadm BB#0-PCI#0 <Return>
```

Ap_Id	Type	Receptacle	Occupant	Condition
BB#0-PCI#0	etherne/hp	<u>connected</u>	<u>configured</u>	ok

See

- For details on the cfgadm(1M) command, see the Solaris manual.
- For details on reconnecting the PCI card, see the service guide.

2. Reconnecting a NIC to the virtual NIC

Reconnect all NICs built into the replaced system board to the virtual NIC with the rvnetadm connect command. If changing the active path through the hot swap, fail back the active path as necessary.

```
# /opt/FJSVrvnet/bin/rvnetadm connect -n fjvnet0 -i net1
```

See

For details on the rvnetadm command, see "A.1 rvnetadm command."

Appendix A Command Reference

This appendix describes how to use commands provided by the virtual NIC mode.

A.1 rvnetadm command

[Name]

rvnetadm - Manages virtual NICs

[Synopsis]

/opt/FJSVrvnet/bin/rvnetadm command [args]

[Feature description]

The rvnetadm command creates and deletes virtual NICs used in the virtual NIC mode. This command also adds and deletes links.

command	Process outline	Authority	
		Super user	General user
create	Creates a virtual NIC	Y	-
delete	Deletes a virtual NIC	Y	-
add-if	Adds a NIC that configure a virtual NIC	Y	-
remove-if	Deletes a NIC that configure a virtual NIC	Y	-
set-if	Configures the actual NIC assigned under the virtual NIC for operation	Y	-
print	Displays the configuration definition of the virtual NIC	Y	Y
set-prop	Sets the properties of the virtual NIC	Y	-
show-prop	Displays the properties of the virtual NIC	Y	Y
set-param	Sets common parameters of the virtual NIC	Y	-
show-param	Displays common parameters of the virtual NIC	Y	Y
connect	Reconnects a NIC to configure the virtual NIC	Y	-
disconnect	Temporal disconnection of a NIC to configure the virtual NIC	Y	-
start-observ	Enables the monitoring function of the virtual NIC	Y	-
stop-observ	Disables the monitoring function of the virtual NIC	Y	-
version	Displays version information	Y	Y

Note

Tagged VLAN interfaces (net2001, net4001002, etc.) cannot be configured under the virtual NIC.

Information

NICs that are possible to configure under the virtual NIC must correspond to GLDv3. The following shows the applicable types of interface:

- Physical interfaces (net0, net1, etc.)
- Link aggregation interfaces (aggr0, aggr1, etc.)

(1) create command

The create command creates a virtual NIC used in the virtual NIC mode. The configuration information is created after creating the virtual NIC. The following is the format of the create command:

```
/opt/FJSVrvnet/bin/rvnetadm create -n fjvnet-link [-i interface1[,interface2]] [-a MAC-address]
```

-n fjvnet-link

Specify the name of a new virtual NIC to be created. Specify the name of a virtual NIC begins with a string of arbitrary characters and is followed by a value (0 to 255) (such as fjvnet0,fjvnet10, etc.).

Note

- Do not use "sha" for the name of the interfaces.
- Specify a name different from that of the other interfaces.
- Do not change a name with the dladm rename-link command after setting the name.
- Use the rvnetadm delete command for deleting a virtual NIC. Do not use the dladm delete-vnic command.

-i interface1[,interface2]

Specify the interfaces to be bundled by a virtual NIC. Specify more than one interface, by listing them delimited with a comma (,).

-a MAC-address

Specify a MAC address to be allocated to the virtual NIC. Specify a MAC address used in the virtual NIC to MAC-address directly. Since the MAC addresses of the virtual NIC are automatically generated, normally specifying them to MAC-address is not necessary. However, if necessary, set the address which does not overlap with the assigned MAC address as follows:

- Other virtual NICs
- Physical NICs
- Other nodes on the same segment

Possible format of MAC address is as follows:

```
XX:XX:XX:XX:XX:XX
```

Specify XX in a hexadecimal code and separated by colons (:).

Note

Multicast and broadcast addresses cannot be specified as a MAC address.

Note

When a monitoring function is enabled, disable it with the rvnetadm stop-observ command, and then enable it again with the rvnetadm start-observ command.

(2) delete command

The delete command deletes a virtual NIC used in the virtual NIC mode. The configuration information is deleted after deleting the virtual NIC.

The following is the format of the delete command:

```
/opt/FJSVrvnet/bin/rvnetadm delete -n fjvnet-link
```

Note

Perform the following setting before executing this command:

- a. When an IP interface which links to the virtual NIC exists.
Delete the IP interface with the ipadm delete-ip command.
- b. When a monitoring function is enabled.
Disable the monitoring function with the rvnetadm stop-observ command.
After executing this command, enable the monitoring function with the rvnetadm start-observ command.

If the case is both a. and b., perform a. first.

-n fjvnet-link

Specify the virtual NIC to be deleted.

(3) add-if command

The add-if command adds an interface to the virtual NIC. The configuration information is updated after adding the interface.

The following is the format of the add-if command:

```
/opt/FJSVrvnet/bin/rvnetadm add-if -n fjvnet-link -i interface
```

Note

When a monitoring function is enabled, disable it with the rvnetadm stop-observ command, and then execute this command.

After executing this command, enable the monitoring function with the rvnetadm start-observ command.

-n fjvnet-link

Specify the name of the virtual NIC.

-i interface

Specify an interface to be added to the virtual NIC.

(4) remove-if command

The remove-if command deletes an interface from the virtual NIC. The configuration information is updated after deleting the interface.

The following is the format of the remove-if command:

```
/opt/FJSVrvnet/bin/rvnetadm remove-if -n fjvnet-link -i interface
```

Note

When a monitoring function is enabled, disable it with the `rvnetadm stop-observ` command, and then execute this command.

After executing this command, enable the monitoring function with the `rvnetadm start-observ` command.

`-n fjvnet-link`

Specify the name of the virtual NIC.

`-i interface`

Specify an interface to be deleted from the virtual NIC.

(5) set-if command

The `set-if` command converts the status of a NIC assigned under the virtual NIC, from "Standby" to "Active." This enables the interface for communication. When the communication mode is in "Active-Standby", specifying the "Standby" state interface converts to that of "Active" state. Otherwise, the interface currently in the "Active" state converts to the "Standby" state.

When the communication mode is "MAC Tracking," the setting above cannot be performed.

The following is the format of the `set-if` command:

```
/opt/FJSVrvnet/bin/rvnetadm set-if -n fjvnet-link -i interface
```

`-n fjvnet-link`

Specify the name of the virtual NIC.

`-i interface`

Specify an interface used for communication when the communication mode is in "Active-Standby."

Note

Check the status of the NIC assigned under virtual NIC and the virtual NIC by using the `rvnetstat` command before executing the command. For details, see "[A.2 rvnetstat command](#)."

(6) print command

The `print` command displays the current configuration information. The following is the format of the `print` command:

```
/opt/FJSVrvnet/bin/rvnetadm print [-n fjvnet-link] [-o field[,...]] [-p]]
```

`-n fjvnet-link`

Specify the name of the virtual NIC. If this option is omitted, the `print` command displays all the virtual NICs.

`-o field[,...]`

Specify the output field by listing delimited with a comma (,). If this option is omitted, the `print` command displays all the fields.

-p

Output the field order specified with the -o option for each output line. Use a space () as the delimiter between values.

Field	Description
VNET	The name of the virtual NIC.
MAC-ADDR	MAC address of the virtual NIC When the MAC address is allocated automatically, "auto" is specified.
LINK	The interfaces bundled by a virtual NIC.

The following shows an example of the configuration information.

```
# /opt/FJSVrvnet/bin/rvnetadm print
VNET          MAC-ADDR      LINK
+-----+-----+
fjvnet0       auto          net0,net1
fjvnet1       02:34:56:78:90:12 net2,net3
```

The following shows an example of the virtual NIC name when "fjvnet1" is specified.

```
# /opt/FJSVrvnet/bin/rvnetadm print -n fjvnet1
VNET          MAC-ADDR      LINK
+-----+-----+
fjvnet1       02:34:56:78:90:12 net2,net3
```

The following shows an example of the configuration information when the -o option is specified.

```
# /opt/FJSVrvnet/bin/rvnetadm print -o VNET,LINK
VNET          LINK
+-----+-----+
fjvnet0       net0,net1
fjvnet1       net2,net3
```

The following shows an example of the configuration information when the -o option and -p option are specified.

```
# /opt/FJSVrvnet/bin/rvnetadm print -o VNET,LINK -p
fjvnet0 net0,net1
fjvnet1 net2,net3
```

(7) set-prop command

The set-prop command changes the properties of the virtual NIC. The configuration information is changed after changing the properties of the virtual NIC.

The following is the format of the set-prop command.

```
/opt/FJSVrvnet/bin/rvnetadm set-prop -n fjvnet-link [-a MAC-address] [-m on|off] [-l yes|no] [-p b|r]
[-u bytes]
```

-n fjvnet-link

Specify the virtual NIC name which the properties are to be changed.

-a MAC-address

Specify a MAC address to be allocated to the virtual NIC. Specify a MAC address used in the virtual NIC to MAC-address directly. Since the MAC addresses of the virtual NIC are automatically generated, normally specifying them to MAC-address is not necessary. However, if necessary, set the address which does not overlap with the assigned MAC address as follows:

- Other virtual NICs
- Physical NICs
- Other nodes on the same segment

Possible format of MAC address is as follows:

```
XX:XX:XX:XX:XX:XX
```

Specify XX in a hexadecimal code and separated by colons (:).

Note

- Multicast and broadcast addresses cannot be specified as a MAC address.
- Before executing the set-prop command, make sure the virtual NIC is inactive. For the procedure to inactivate the virtual NIC, see ["3.4 Notes on setting a configuration."](#)

-m on | off

Set the operation for "MAC Tracking." Initial value is set to "MAC Tracking" enabled (on).

Note

When a monitoring function is enabled, disable it with the `rvnetadm stop-observ` command, and then execute this command.

After executing this command, enable the monitoring function with the `rvnetadm start-observ` command.

on: "MAC Tracking" enabled

This enables the communication that tracks a destination MAC address automatically according to the result of the network monitoring. Normally, the communication is carried out in "Active-Standby". When the network monitoring function detects a failure, the communication is carried out in "MAC Tracking."

off: "MAC Tracking" disabled

"Active-Standby" is used all the time. Network monitoring of the specified virtual NIC is stopped.

-l yes|no

Configure enable/disable Link Status Propagation of the virtual NIC. Initial value is set to Link Status Propagation disabled (no).

yes: Link Status Propagation enabled

The change of the link status for interfaces bundled by a virtual NIC propagates to the link status of the virtual NIC. Enabling this setting will bring the virtual NIC's link status to fail when all the bundled interfaces are linked down.

no: Link Status Propagation disabled

The change of the link status for interfaces bundled by a virtual NIC does not propagate to the link status of the virtual NIC. To maintain the communication between zones in case of a link down occurred in a physical NIC, set Link Status Propagation to "no."

-p b|r

When performing communication via "MAC Tracking," the method for sending packets is according to the following cases: the MAC address that coincides with a destination MAC address has not learned, or the destination MAC address is a broadcast or multicast address. Initial value is set to the round robin system (r).

b: Broadcast mode

Copy the packets and simultaneously send from all the NICs.

In broadcast system, received packets may overlap because the same packet is sent from two or more interfaces. (*) The waiting time to send packet is faster than that of round robin mode. If the application cannot allow any overlapped receiving, use the round robin mode.

(*) It occurs when there are two or more servers adopted the virtual NIC mode exist and send UDP-based packets to the broadcast or multicast destination.

r: Round robin mode

Send packets evenly-divided between NICs.

Though round robin mode takes time to send packets, use this mode if the application cannot allow overlapped receiving.

-u bytes

Changed the MTU value of a virtual interface. The default of the MTU value is 1500.

The MTU value of a virtual interface should be specified not to exceed the MTU value of the interfaces bundled by the virtual interface.

- When the MTU value is different between the interfaces bundled by the virtual interface.
The maximum value of the MTU is the minimum value of the MTU among the interfaces bundled by the virtual interface.
- When creating only for the virtual interface instead of specifying the interfaces bundled by the virtual interface.
The MTU value should be specified in the range of 64 to 65535.
- When the bundled interfaces are shared by multiple virtual interfaces.
Specify the MTU value for each virtual NIC.

Point

Set the MTU value of the interfaces bundled by a virtual interface with the set-linkprop subcommand of dladm(1M). At the time, the MTU value of the interfaces should not be bundled by a virtual interface.

Note

Do not change the MTU value of the virtual interface with the set-linkprop subcommand of dladm(1M).

The following shows the example of changing the MTU value during the virtual NIC creation:

```
# /usr/sbin/dladm set-linkprop -p mtu=9000 net1
# /usr/sbin/dladm set-linkprop -p mtu=9000 net2
# /opt/FJSSrvnet/bin/rvnetadm create -n fjvnet0 -i net1,net2
# /opt/FJSSrvnet/bin/rvnetadm set-prop -n fjvnet0 -u 9000
```

The following shows the example of changing the MTU value after the virtual NIC creation:

```
# /opt/FJSVrvnet/bin/rvnetadm disconnect -i net1
# /usr/sbin/dladm set-linkprop -p mtu=9000 net1
# /opt/FJSVrvnet/bin/rvnetadm connect -i net1
# /opt/FJSVrvnet/bin/rvnetadm disconnect -i net2
# /usr/sbin/dladm set-linkprop -p mtu=9000 net2
# /opt/FJSVrvnet/bin/rvnetadm connect -i net2
# /opt/FJSVrvnet/bin/rvnetadm set-prop -n fjvnet0 -u 9000
```

Information

You can change the MTU value when the urgent patch T007832SP-01 or later is applied.

(8) show-prop

The show-prop command displays the properties of a specified virtual NIC.

The following is the format of the show-prop command.

```
/opt/FJSVrvnet/bin/rvnetadm show-prop -n fjvnet-link
```

-n fjvnet-link

Specify the virtual NIC name which the properties are to be displayed.

Field		Description
VNET		The name of the virtual NIC.
MAC-ADDR		MAC address of the virtual NIC. When the MAC address is allocated automatically, "auto" is specified.
PROPAGATE-LINK	yes	Link Status Propagation is enabled.
	no	Link Status Propagation is disabled.
MAC-TRACKING	on	"MAC Tracking" is enabled.
	off	"MAC Tracking" is disabled.
PROBE-MODE	broadcast	Broadcast mode
	round-robin	Round robin mode
MTU		MTU value

The flowing shows an example of the properties of a virtual NIC.

```
# /opt/FJSVrvnet/bin/rvnetadm show-prop -n fjvnet0
VNET          : fjvnet0
MAC-ADDRESS   : auto
PROPAGATE-LINK : no
MAC-TRACKING  : on
PROBE-MODE    : round-robin
MTU           : 1500
```

(9) set-param command

The set-param command sets the common parameter of the virtual NIC.

The following is the format of the set-param command.

```
/opt/FJSVrvnet/bin/rvnetadm set-param [-i sec] [-c times] [-r times] [-d sec]
```

-i sec

Specify the monitoring interval of the network monitoring function in seconds. A value from 1 to 100 can be specified (note that the product of sec and times must be 100 or less). Initially, 3 (seconds) is specified.

-c times

Specify the monitoring count of the network monitoring function. A value from 1 to 100 can be specified (note that the product of sec and times must be 100 or less). Initially, 3 (times) is specified.

-r times

Specify the count for recovery of the network monitoring function to be detected. A value from 1 to 100 can be specified. Initially, 1 (time) is specified.

-d delay

Specify the time for error detection delay time of the network monitoring function. A value from 1 to 100 can be specified. Initially, 45 (seconds) is specified. In addition, if the value of the -d delay is less than the product of -i option and -c option, this option is ignored.

(10) show-param command

The show-param command displays the current common parameter of the virtual NIC.

The following is the format of the show-param command.

```
/opt/FJSVrvnet/bin/rvnetadm show-param
```

Field	Description
INTERVAL(sec)	Monitoring interval of the network monitoring function. Value is in seconds (sec).
FAIL-DETECTION(times)	Frequency of error monitoring in the network monitoring function.
REPAIR-DETECTION(times)	Frequency of recovery monitoring in the network monitoring function.
DELAY-TIME(sec)	Error detection delay time of the network monitoring function. Value is in seconds (sec).

The following shows an example of the common parameter.

```
# /opt/FJSVrvnet/bin/rvnetadm show-param
INTERVAL(sec)      : 3
FAIL-DETECTION(times) : 3
REPAIR-DETECTION(times) : 1
DELAY-TIME(sec)    : 45
```

(11) connect command

The connect command reconnects a disconnected interface. This does not reflect the configuration information.

The following is the format of the connect command.

```
/opt/FJSVrvnet/bin/rvnetadm connect [-n fjvnet-link] -i interface
```

-n fjvnet-link

Specify the name of the virtual NIC. If this option is omitted, the entire virtual interfaces will be selected.

-i interface

Specify an interface to be reconnected.



Note

By using the rvnetstat command, check that the interface to be dealt with is "disconnect" before executing the connect command. For details, see "[A.2 rvnetstat command](#)."

(12) disconnect command

The disconnect command disconnects an interface temporarily, and then set its state to unused. This action is not reflected in the configuration information.

The following is the format of the disconnect command.

```
/opt/FJSVrvnet/bin/rvnetadm disconnect [-n fjvnet-link] -i interface
```

-n fjvnet-link

Specify the name of the virtual NIC. If this option is omitted, the entire virtual interfaces will be selected.

-i interface

Specify an interface to be disconnected.

(13) start-observ command

The start-observ command enables the monitoring function of the virtual NIC.

The following is the format of the start-observ command.

```
/opt/FJSVrvnet/bin/rvnetadm start-observ
```

(14) stop-observ command

The stop-observ command disables the monitoring function of the virtual NIC.

The following is the format of the stop-observ command.

```
/opt/FJSVrvnet/bin/rvnetadm stop-observ
```

(15) version command

The version command displays the version of this product.

The following is the format of the version command.

```
/opt/FJSVrvnet/bin/rvnetadm version
```

The following shows an example of the version information:

```
# /opt/FJSVrvnet/bin/rvnetadm version
FJSVrvnet version 1.0
```

A.2 rvnetstat command

[Name]

rvnetstat - Displays the state of virtual NICs of the virtual NIC mode

[Synopsis]

```
/opt/FJSVrvnet/bin/rvnetstat [-s] [-n fjvnet-link] [-o field[,...]] [-p]] [-v]
```

[Feature description]

The rvnetstat command displays the current status of virtual NICs used in the virtual NIC mode: operation status, interface status, and monitoring status.

[Options]

The following options can be specified.

-s

The -s option displays the status of the interface bundled by a virtual NIC and its monitoring status.



Information

- The monitoring is shared in the virtual interface which bundles the same physical NIC in the same order.
 - The status of the representative virtual interface is displayed when there are multiple virtual interfaces which bundle the same physical NIC in the same order, and also the virtual interfaces are not specified with the -n option.
-

-n fjvnet-link

Specify a virtual NIC to deal with. If this option is omitted, the entire virtual interfaces will be selected.

-o field[,...]

Specify the output field by listing delimited with a comma (.). If this option is omitted, the print command displays all the fields. This option cannot be used with the -s option at the same time.

-p

Output the field order specified with the -o option for each output line. Use a space () as the delimiter between values.

-v

Output the detailed information.

[Without -s option specified (operation status)]

Field	Description
VNET	The name of the virtual NIC.

Field		Description
STATE	active	The virtual NIC is active. (The virtual interface is in use.)
	inactive	The virtual NIC is inactive. (The virtual interface is not in use.)
MODE	MAC-TRACK	Communicating with "MAC Tracking."
	ACT-STANDBY	Communicating with "Active-Standby."
ACTIVE-LINK		The active interfaces bundled by a virtual NIC.
MAC-ADDR (Displays only when the -v option is specified.)		MAC address of a virtual NIC.

[With -s option specified (interface status)]

Field		Description
Monitoring Function	enable	The monitoring function is enabled.
	disable	The monitoring function is disabled.
Monitoring Status	active	The monitoring function operates normally.
	fail	The monitoring function detects a failure.
	inactive	The monitoring function is inactive.
Reachability	{LINK1,LINK2,...}	Displays the reachability of a heartbeat message between interfaces. Displays the reachable interface groups of heartbeat messages. Interfaces with link down are not displayed.
	----	Displays interfaces when the monitoring function is disabled.
LINK		The interfaces bundled by a virtual NIC.
STATUS	active	Activated state Displays the status if the interface is in operation mode.
	standby	Standby state Displays the status if the interface is in standby mode.
	disconnect	Disconnected state Displays the status if the interface is disconnected temporarily by the rvnetadm disconnect command.
	fail	Failure detection state Displays the status if a failure is detected in the interface by the link down monitoring function.
	unknown	Unknown state Displays the status if the interface is unable to obtain its link status or there is no IP interface on the virtual NIC right after starting the operating system.
IF-LINK (Displays only when the -v option is specified)	up	Link up state Displays the status if the link state of the interface is in the up state.
	down	Link down state Displays the status if the link state of the interface is in the down state.

Field		Description
	unknown	Link state is unknown Displays the status if the link state of the interface is in the unknown state.

The following shows the display format used when no option is specified.

```
# /opt/FJSVrvnet/bin/rvnetstat
VNET          STATE      MODE          ACTIVE-LINK
+-----+-----+-----+-----+
fjvnet0       active    ACT-STANDBY  net0
fjvnet1       active    MAC-TRACK    net0,net1
```

The following shows the display format when the -v option and fjvnet0 are specified.

```
# /opt/FJSVrvnet/bin/rvnetstat -n fjvnet0 -v
VNET          STATE      MODE          MAC-ADDR          ACTIVE-LINK
+-----+-----+-----+-----+-----+
fjvnet0       active    ACT-STANDBY  02:11:22:33:44:55 net0
```

The following shows an example of the configuration status of the virtual interface.

Example) Configuration status of the virtual interface

Virtual NIC	Physical NIC	Network monitoring status	Link status
fjvnet0	net0, net1	Normal	Link up state
fjvnet1	net1, net2	Failure	Link down state
fjvnet2	net1, net2	Failure	Link down state
fjvnet3	net3, net4	Failure	Link up state
fjvnet4	net5, net6	Stop	A disconnected NIC exists.
fjvnet5	net6	Stop	Link up state

[Example when the -s option is specified]

```
# /opt/FJSVrvnet/bin/rvnetstat -s

Monitoring Function : enable

[fjvnet0]
Monitoring Status  : active
Reachability       : {net0, net1}

LINK              STATUS
+-----+-----+
net0              active
net1              standby

[fjvnet1, fjvnet2]
Monitoring Status  : fail
Reachability       : {net1}

LINK              STATUS
+-----+-----+
net1              active
net2              fail

[fjvnet3]
```



```
Monitoring Status : fail
Reachability      : {net3},{net4}
```

LINK	STATUS
net3	active
net4	active

```
[fjvnet4]
Monitoring Status : inactive
Reachability      : ----
```

LINK	STATUS
net5	disconnect
net6	active

```
[fjvnet5]
Monitoring Status : inactive
Reachability      : ----
```

LINK	STATUS
net6	active

[Example when the -s option and -v option are specified]

```
# /opt/FJSVrvnet/bin/rvnetstat -s -v
```

```
Monitoring Function : enable
```

```
[fjvnet0]
Monitoring Status : active
Reachability      : {net0, net1}
```

LINK	STATUS	IF-LINK
net0	active	up
net1	standby	up

```
[fjvnet1, fjvnet2]
Monitoring Status : fail
Reachability      : {net1}
```

LINK	STATUS	IF-LINK
net1	active	up
net2	fail	down

```
[fjvnet3]
Monitoring Status : fail
Reachability      : {net3},{net4}
```

LINK	STATUS	IF-LINK
net3	active	up
net4	active	up

```
[fjvnet4]
Monitoring Status : inactive
Reachability      : ----
```

```

LINK                STATUS      IF-LINK
+-----+-----+-----+
net5                disconnect unknown
net6                active      up

[fjvnet5]
Monitoring Status  : inactive
Reachability       : ----

LINK                STATUS      IF-LINK
+-----+-----+-----+
net6                active      up

```

A.3 rvnet_snap command

[Name]

rvnet_snap - Collect troubleshooting information for maintaining the virtual NIC mode

[Synopsis]

```
/opt/FJSVrvnet/bin/rvnet_snap [-s] [save-directory]
```

[Feature description]

Collect troubleshooting information for maintaining the virtual NIC mode. This command is available only in the case of super-user authority.

[Options]

The following options can be specified.

-s

Specify the -s option when collecting troubleshooting information to the minimum necessary. If this option is omitted, the entire troubleshooting information will be collected.

save-directory

The save-directory specifies the storage destination that stores troubleshooting information. If this parameter is omitted, the information is stored in "/tmp."

A list of collected information is as follows:

[Meaning of the symbols] Y: Collect -: Not collect

Type	File name when collected	Collected information	Minimum examination materials
System information: OSInfo/	etc/	/etc/hosts	Y
		/etc/netmasks	Y
		/etc/nsswitch.conf	Y
		/etc/gateways	Y
		/etc/defaultrouter	Y
	etc/inet	/etc/inet/*	Y

Type	File name when collected	Collected information	Minimum examination materials
	etc/ipf/	/etc/ipf/*	Y
	adm/	/var/adm/messages*	-
	var/svc/loetc/	/var/svc/log/network-loopback:default.log	-
		/var/svc/log/network-physical:default.log	-
		/var/svc/log/network-initial:default.log	-
		/var/svc/log/network-service:default.log	-
		/var/svc/log/system-zones:default.log	-
		/var/svc/log/network-inetd:default.log	-
		/var/svc/log/network-fjsrvnet:default.log	-
	uname_a	uname -a	Y
	ifconfig_a	ifconfig -a	Y
	dladm_info	dladm show-link dladm show-linkprop dladm show-phys dladm show-bridge dladm show-vlan dladm show-ether dladm show-secobj dladm show-vnic dladm show-iptun dladm show-part dladm show-ib	Y
	ipadm_info	ipadm show-if ipadm show-ifprop ipadm show-addr ipadm show-addrprop ipadm show-prop	Y
	netstat	netstat -na netstat -ni netstat -np netstat -nr	Y
	ip_forward	/usr/sbin/ndd -get /dev/ip ip_forwarding	Y
	ipcs_a	ipcs -a	Y
	ipaddrsel	ipaddrsel	Y
	ipfstat	ipfstat -io	Y
	ps_ef	ps -ef	-
	pstack	pstack pid	-
svcs	/bin/svcs -apv	Y	
Information of the virtual NIC mode: rvnetinfo/	config/	/etc/opt/FJSVrvnet/config/*	Y
	log/	/var/opt/FJSVrvnet/log/*	Y
	version	rvnetadm version	Y
	filelist_tmp	ls -la /var/opt/FJSVrvnet/tmp/*	Y

Type	File name when collected	Collected information	Minimum examination materials
	rvnetadm_print	rvnetadm print	Y
	rvnetadm_show-prop	rvnetadm show-prop	Y
	rvnetadm_show-param	rvnetadm show-param	Y
	rvnetstat_v	rvnetstat -v	Y
	rvnetstat_s_v	rvnetstat -s -v	Y

[Output file name]

The collected materials are compressed and stored by the tar and compress commands. A stored file name is "rvnet_" + "machine name" + "Date collected (YYMMDDhhmmss)".tar.Z.

Example: rvnet_hostname031030084916.tar.Z

[Examples]

- When collecting all examination materials under /tmp.

```
/opt/FJSVrvnet/bin/rvnet_snap
```

- When collecting the minimum examination materials under /tmp.

```
/opt/FJSVrvnet/bin/rvnet_snap -s
```

- When collecting the minimum examination materials under /export/home/user1.

```
/opt/FJSVrvnet/bin/rvnet_snap -s /export/home/user1
```

Appendix B Messages and corrective actions

This appendix describes messages output by the virtual NIC mode.

B.1 Message format

This section describes message formats of the virtual NIC mode.

[Output message]

1. A format for information messages and error output messages:

```
rvnet: AAAAA: BBBCC: DDDDD EEEE  
(1) (2) (3) (4) (5)
```

2. A format for console output messages and internal information output messages:

```
rvnet: BBBCC AAAAA: DDDDD EEEE  
(1) (3) (2) (4) (5)
```

(1) Component name

Always begins with "rvnet."

(2) Error type

AAAAA provides the following information:

ERROR:

Error message

WARNING:

Warning message

INFO:

Information message

TRACE:

Internal information

(3) Message number (Displayed in total five digits.)

Outputs an output message with a unique number. The message number is not displayed when an internal message is output.

The first three digits (BBB) indicate the message number.

The last two digits (CC) indicate the internal code.

(4) Error details

DDDDD indicates the details of the error.

(5) Others

The complementary information (EEEE) is occasionally output if necessary.

B.2 Output message

The meaning of and response to each message output by the virtual NIC mode is listed below.

The following table shows facilities and priorities for the message numbers output to the syslog file.

Facility	Priority	Message number
user	error	121, 501, 503, 505, 800s
kern	notice	502, 900s

Table B.1 Error output message

Message number	Message	Meaning	Action
101	command can be executed only with super-user.	Only a super-user can execute this command.	Execute with a super user authority.
102	invalid parameter.	An invalid parameter is specified.	Read the appropriate command reference, and execute the command again.
103	virtual interface is inactive.	Specified virtual interface is inactivated.	Check the status of the specified virtual interface with the rvnetstat command.
104	virtual interface is active.	Specified virtual interface is activated.	<ul style="list-style-type: none"> - Check the status of the specified virtual interface with the rvnetstat command. - Check whether the specified virtual interface is not used in the virtual switch and the non-global zone.
105	invalid interface name.	An invalid interface name is specified.	Specify a correct interface name, and execute the command again.
106	invalid virtual interface name.	An invalid virtual interface name is specified.	Specify a valid virtual interface name, and execute the command again.
107	invalid MAC address.	An invalid MAC address is specified.	Specify a correct MAC address, and execute the command again. Note that a multicast address or broadcast address cannot be specified as a MAC address.
108	MAC address is duplicated.(interface)	Duplicated MAC addresses are used. interface: Interface name in which the same MAC address is used	Specify a different MAC address, and execute the command again.
109	interface name is already defined.	The specified interface name has already been selected.	Specify a different interface name, and execute the command again.
110	virtual interface name is already defined.	The specified virtual interface name has already been selected.	Specify a different virtual interface name, and execute the command again.
111	virtual interface name is not defined.	The specified virtual interface name is not set in the configuration information.	Review the setting of the Redundant Line Control function.
112	specified interface is not bundled by a virtual interface.	The specified interface is not defined as one that configures a virtual interface.	Check the interface that configures a virtual interface with the rvnetadm print command.
113	failed to create a directory.	The specified directory cannot be created.	Check the specified directory.
114	number of interface is already maximum.	Unable to add an interface because the number of interfaces that configures the	Review the number of interfaces that configures a virtual interface, and

Message number	Message	Meaning	Action
		specified virtual interface has reached a maximum bundle number.	change the definition with the rvnetadm command if necessary.
115	number of virtual interface is already maximum.	The number of virtual interfaces exceeded the maximum number. The maximum number is 256.	Delete unnecessary definitions, and execute the command again.
116	interface is inactive.	The specified interface has been inactivated.	Check the status of the specified interface with the rvnetstat command.
117	specified interface is already connected.	The specified interface has already been connected.	Check the status of the specified interface with the rvnetstat command.
118	specified interface is already disconnected.	The specified interface has already been disconnected.	Check the status of the specified interface with the rvnetstat command.
119	directory not found.	The specified directory was not found.	Specify a directory name that already exists, and execute the command again.
120	virtual interface is not Active-Standby mode.	The specified virtual interface is not Active-Standby status.	Check the status of the specified interface with the rvnetstat command.
121	network monitoring could not start. (virtual-interface)(detail)	It is not possible to execute the network monitoring. virtual-interface: Virtual interface name detail: Detail	Check that the MAC address of the physical interface bundled by the virtual interface is not overlapping and the system has already recognized, and then execute again.
122	network monitoring is already started. (virtual-interface)	The network monitoring has already been started. virtual-interface: Virtual interface name	Check the monitoring status with the rvnetstat -s command. When the network is stopped, collect troubleshooting information of the Redundant Line Control function, and then contact field engineers to report the error message.
123	network monitoring is already stopped. (virtual-interface)	The network monitoring has already been stopped. virtual-interface: Virtual interface name	Check the monitoring status with the rvnetstat -s command. When the network is stopped, collect troubleshooting information of the Redundant Line Control function, and then contact field engineers to report the error message.
124	network monitoring is running.	The network monitoring is running.	Check the monitoring status with the rvnetstat -s command. When the monitoring is running, stop the monitoring once because the configuration cannot be changed.
125	specified MTU is out of range. (min-max)	The value specified as the MTU value of a virtual interface exceeded the range which can be specified. min: the minimum value of MTU which can be specified	Specify the MTU value of a virtual interface not to exceed the MTU value of the interfaces bundled by the virtual interface, and execute the command again.

Message number	Message	Meaning	Action
		max: the maximum value of MTU which can be specified	
126	MTU of the virtual interface and bundled interface is inconsistent.	The MTU value of the interfaces bundled by a virtual interface is smaller than the MTU value of the virtual interface which bundles the interfaces.	The MTU value of the bundled interfaces must be the same as or larger than the MTU value of the virtual interface which bundles the interfaces. Specify the correct MTU value to a virtual interface and the interfaces bundled by the virtual interface, and execute the command again.
301	could not open configuration file. (errno=XXX)	Failed to open the configuration information file.	Check whether the creation of configuration information has been completed.
302	could not write configuration file. (errno=XXX)	Failed to write to the configuration information.	Collect troubleshooting information of the Redundant Line Control function, and then contact field engineers to report the error message.
303	invalid interface name. (interface)	An invalid interface name is specified in the configuration information. interface: Interface name that a virtual NIC bundles	Check the status of the interface.
501	system call fail. (func=YYY, errno=XXX)	An error was found in the internal system call.	Check that there is no problem in the setting of the Redundant Line Control function. After verifying that everything is correct, execute the command again. If the same symptom still remains the same, collect troubleshooting information of the Redundant Line Control function, and then contact field engineers to report the error message.
502	unexpected error.(code)	An unexpected error occurred. code: Detail code	Check that there is no problem in the setting of the Redundant Line Control function. After verifying that everything is correct, execute the command again. If the same symptom still remains the same, collect troubleshooting information of the Redundant Line Control function, and then contact field engineers to report the error message.
503	ioctl() fail. (cmd=ZZZ, errno=XXX)	An error was found in the internal system call.	Check that there is no problem in the setting of the Redundant Line Control function. After verifying that everything is correct, execute the command again. If the same symptom still remains the same, collect troubleshooting information

Message number	Message	Meaning	Action
			of the Redundant Line Control function, and then contact field engineers to report the error message.
504	failed to delete virtual interface. (errno=XXX)	Failed to delete a virtual interface.	Execute the command again. If the same symptom still remains the same, collect troubleshooting information of the Redundant Line Control function, and then contact field engineers to report the error message.
505	failed to allocate memory.(code)	Memory allocation failed. code: Detail code	Execute the command again. If the same symptom still remains the same, collect troubleshooting information of the Redundant Line Control function, and then contact field engineers to report the error message.
506	daemon process does not exist.	There is no daemon process.	Collect materials for examination of a Redundant Line Control function, and contact field engineers.
507	failed to restart daemon.	Stop of the daemon was detected and restart was tried, but failed.	Collect materials for examination of a Redundant Line Control function, and contact field engineers.
508	semaphore is broken. (errno).	Creates a semaphore again because it is deleted.	No action is required.
509	shared memory is broken. (errno)	Creates a shared memory again because it is deleted.	No action is required.
801	network monitoring is established. (virtual-interface)	The network monitoring started normally. virtual-interface: Virtual interface name	No action is required.
802	monitoring detected a recovery. (virtual-interface)	The network monitoring detected a recovery. virtual-interface: Virtual interface name	No action is required.
803	monitoring detects a failure. (virtual-interface)	The network monitoring detects a failure. virtual-interface: Virtual interface name	Check that the connection between switches is correct. When a higher load is imposed on the network, occasionally a recovery message is output immediately after this message is output. In this case, a transfer route of the standby side is normal. Therefore, not necessary to deal with.
901	link up detected: the interface link is up. (virtual-interface: interface)	An interface is linked up. virtual-interface: Virtual interface name	No action is required.

Message number	Message	Meaning	Action
		interface: Interface name that a virtual NIC bundles	
902	link down detected: the interface link is down. (virtual-interface: interface)	An interface is linked down. virtual-interface: Virtual interface name interface: Interface name that a virtual NIC bundles	Check the link status of the interface from the result of executing the <code>dladm show-link</code> command (displayed in <i>STATE</i>). When the interface link down is detected, check whether a failure has occurred in the adjacent switch. Also, check that the correct speed for the switch and server has been selected (such as Auto-negotiation and full-duplex).
903	link up detected: the virtual interface link is up. (virtual-interface)	A virtual interface is linked up. virtual-interface: Virtual interface name	No action is required.
904	link down detected: the virtual interface link is down. (virtual-interface)	A virtual interface is linked down. virtual-interface: Virtual interface name	Check the link status of the interface that a virtual NIC bundles.
905	the interface of the virtual interface was switched. (virtual-interface: from=interface1 to=interface2)	The virtual interface switched the interface used for communication. virtual-interface: Virtual interface name interface1: Interface before switching interface2: Interface after switching	Check the link status of the interface that a virtual NIC bundles. When executing the <code>rvnetadm set-if</code> command, no action is required.
906	failed to allocate memory for kernel. (code)	Kernel memory allocation failed. code: Detail code	No action is required. If this message is output at frequent intervals, collect troubleshooting information of the Redundant Line Control function, and then contact field engineers to report the error message.
907	changed to MAC tracking mode. (virtual-interface)	Changed the mode to MAC tracking. virtual-interface: Virtual interface name	No action is required.
908	changed to Active-Standby mode. (virtual-interface)	Changed the mode to Active-Standby. virtual-interface: Virtual interface name	No action is required.

Glossary

DR

Dynamic Reconfiguration

Fast switching mode

Fast switching mode keeps the communication alive during transfer route failure and increases the total throughput by multiplexing transfer routes between servers on the same network.

Global zone

A global zone is the global view of the Solaris operating environment. There is always one global zone per Solaris instance. Each software partition that is created within the Solaris instance can be managed and controlled in the global zone.

[Related article] [Solaris Zones, Non-global zone \(Zone\)](#)

GS/SURE linkage mode

GS/SURE linkage mode multiplexes transfer routes between global server/SURE SYSTEM and ExINCA lies on the same network. This mode provides functionality of transfer route failover during transfer route failure in which implements high availability.

LAN card

The same meaning as that of NIC.

NIC

Stands for Network Interface Card. Also called a LAN card.

NIC switching mode

A mode to realize high reliability by exclusively using a redundant NIC and switching when an error occurred. It is necessary to connect a redundant NIC in the same network in this mode.

Non-global zone (Zone)

Each non-global zone has a security boundary around it. The security boundary is maintained by allowing zones to only communicate between themselves using networking APIs.

[Related article] [Solaris Zones, Global zone](#)

PHP

PCI Hot Plug

Physical interface

An interface created for the NIC equipped with in a system.

Redundant Line Control function

A function to realize high reliability of communication by making a network line redundant.

Solaris Zones

Solaris Zones isolates software applications and services using flexible, software-defined boundaries. This software partitioning enables administrators to easily create many private execution environments in a single instance of the Solaris Operating System. It also enables dynamic control of applications and resource priorities. For details, see the "Solaris manual."

Virtual interface

An interface created for a Redundant Line Control Function to deal with a redundant NIC as one virtual NIC. The virtual interface name is described as fjvnetX (X is 0, 1, 2...).

Virtual NIC mode

This mode enables the highly reliable communication by exclusively using a pair of the physical NICs which were grouped on the same network as a single virtual interface.

XSCF

eXtended System Control Facility